


Toyota Urban Cruiser 2008 – 2015 fuse box diagrams

Year of production: 2008, 2009, 2010, 2011, 2012, 2013, 2014, 2015

Fuse box in engine compartment (type A)

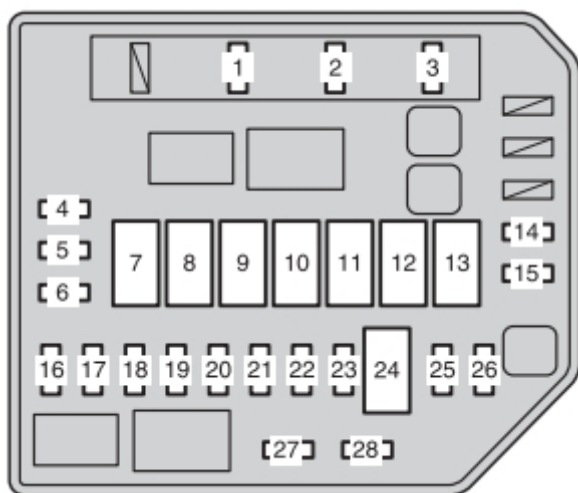

Toyota Urban Cruiser – fuse box – engine

compartment (type A)

Fuse	Ampere	Circuit
1 AM2	15	Starting system, multi-port fuel injection system/sequential multiport fuel injection system, Stop & Start system, smart entry & start system
2 HORN	10	Horn
3 EFI*1, 2, 3, 4	20	Multi-port fuel injection system/ sequential multi-port fuel injection ECD* system
ECD*5,6,7,8	30	
4 SPARE	30	Spare fuse
5 SPARE	15	Spare fuse
6 SPARE	10	Spare fuse
7 HTR SUB2*3	40	Air conditioning system
HTR SUB1*7	50	
8 EPS	50	Electric power steering
9 ABS1/VSC1	50	ABS, VSC
10 HTR	40	Air conditioning system
11 RDI	30	Electric cooling fan
12 HTR SUB1*3	30	Air conditioning system

	HTR SUB2*7		
13	H-LP CLN/PWR HTR*5 HTR SUB3*7	30	Air conditioning system
14	FR DEF	20	No circuit
15	ABS2/VSC2	30	ABS, VSC
16	H-LP MAIN	30	"H-LP HI LH", "H-LP HI RH", "H-LP RH/H-LP LO RH", "H-LP LH/H-LP LO LH" fuses
17	ST	30	Starting system
18	S-LOCK	20	Smart entry & start system
19	DOME	15	Interior light, personal lights, luggage compartment light, smart entry & start system, wireless remote control, audio system
20	ECU-B	7,5	Daytime running light system, power windows, power door lock system, smart entry & start system, gauges and meters, air conditioning system, VSC, Active Torque Control 4WD system, Stop & Start system
21	ALT-S*1, 2, 3, 4	7,5	Charging system, fuel system
	F/PMP*5, 6, 7, 8	30	
22	ETCS	10	Electronic throttle control system
23	HAZ	10	Turn signal lights, emergency flashers
24	BBC*1	40	Stop & Start system
	AMT*5, 6, 7, 8	50	No circuit
25	H-LP RH/H-LP LO RH	10	Right-hand headlight
26	H-LP LH/H-LP LO LH	10	Left-hand headlight
27	EFI2*1, 2, 3, 4	10	Multi-port fuel injection system/ sequential multi-port fuel injection system
	ECD2*5, 6, 7, 8		
28	ECD3*5, 6, 7, 8	7,5	Multi-port fuel injection system/ sequential multi-port fuel injection system

*1: Gasoline engine (vehicles with a Stop & Start system)

*2: Gasoline engine (vehicles without a Stop & Start system)

*3: Gasoline engine (vehicles with PTC heater)

*4: Gasoline engine (vehicles without PTC heater)


*5: Diesel engine (vehicles with power heater)

*6: Diesel engine (vehicles without power heater)

*7: Diesel engine (vehicles with PTC heater)

*8: Diesel engine (vehicles without PTC heater)


Fuse box in engine compartment (type B)

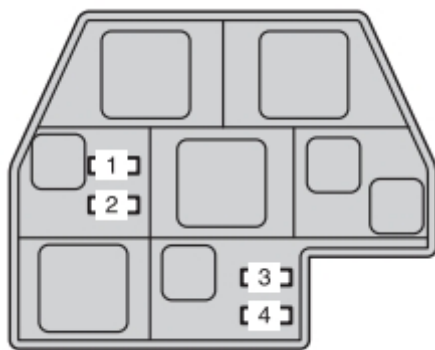

Toyota Urban Cruiser – fuse box – engine compartment (type B)

Fuse		Ampere	Circuit
1	AFT PMP	10	No circuit
2	HTR W/P	10	No circuit
3	H-LP HI RH	10	Right-hand headlight
4	H-LP HI LH	10	Left-hand headlight

Fuse box under the instrument panel (type A)

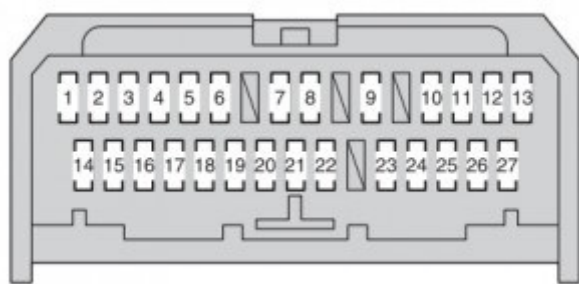

Toyota Urban Cruiser – fuse box – instrument panel

(type A)

Fuse	Ampere	Circuit
1 TAIL* ¹	10	Front position lights, tail lights, license plate lights, manual headlight leveling dial, multi-port fuel injection system/sequential multiport fuel injection system, instrument cluster lights
PANEL2* ²	7,5	
2 PANEL1* ²	7,5	Switch illuminations, instrument cluster lights, steering switches, Stop & Start system, gauges and meters
3 A/C	7,5	Air conditioning system, rear window defogger, power heater
4 D DOOR	20	Power windows
5 RL DOOR	20	Power windows (rear left)
6 RR DOOR	20	Power windows (rear right)
7 CIG	15	Cigarette lighter
8 ACC	7,5	Power door lock system, outside rear view mirrors, audio system
9 ID/UP / MIR HTR	10	Outside rear view mirror defoggers
10 AM1 NO2* ³	7,5	No circuit
11 RR FOG	7,5	Rear fog light
12 IGN	7,5	Multi-port fuel injection system/ sequential multi-port fuel injection system, SRS airbag system, smart entry & start system, Stop & Start system
13 MET	7,5	Gauges and meters
14 P S-HTR	15	Seat heater
15 D S-HTR	15	Seat heater
16 WIP	20	Windshield wipers
17 RR WIP	15	Rear window wiper


18	WSH	15	Windshield washers, rear window washer
19	ECU-IG	10	Daytime running light system, ABS, electric power steering, power windows, power door lock system, VSC, Active Torque Control 4WD system, smart entry & start system, Stop & Start system, electric cooling fan
20	GAUGE	10	Charging system, turn signal lights, emergency flashers, back-up lights, air conditioning system, rear window defogger, gauges and meters
21	OBD2	7,5	On-board diagnosis system
22	STOP	10	Stop lights, high mounted stoplight, multi-port fuel injection system/sequential multi-port fuel injection system, ABS, VSC
23	D/L	25	Power door lock system, double locking system
24	FR FOG	15	Front fog lights
25	4WD	7,5	Active Torque Control 4WD system
26	TAIL*2	10	Front position lights, tail lights, license plate lights, manual headlight leveling dial, multi-port fuel injection system/sequential multiport fuel injection system, instrument cluster lights
27	AM1	25	Multi-port fuel injection system/ sequential multi-port fuel injection system, "ACC", "CIG" fuses

*1: Vehicles with daytime running light system

*2: Vehicles without daytime running light system

*3: Vehicles with smart entry & start system

Fuse box under the instrument panel (type B)

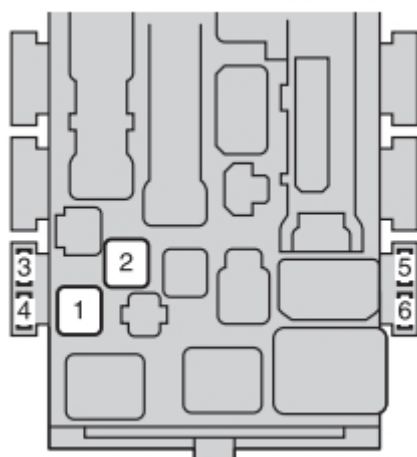

Toyota Urban Cruiser – fuse box – instrument panel (type B)

	Fuse	Ampere	Circuit
1	POWER	30	Power windows
2	DEF	30	Rear window defogger
3	WIP-S ^{*1}	7,5	Power management
4	ACC2 ^{*1, 3}	7,5	No circuit
5	WIP-S ^{*2}	7,5	Power management
6	ACC2 ^{*2, 3}	7,5	No circuit

*1: Left-hand drive vehicles

*2: Right-hand drive vehicles

*3: Vehicles without smart entry & start system

WARNING: Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market.