


COMPONENTS

ILLUSTRATION


w/ Power Outlet Socket:

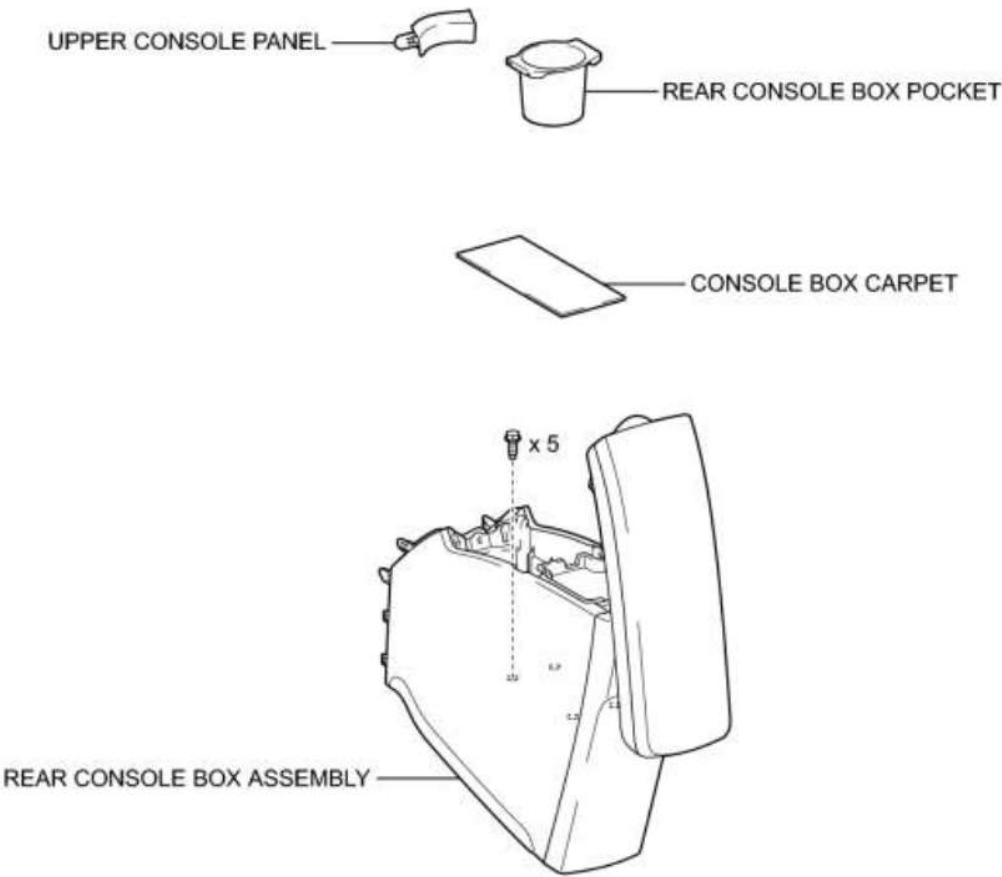

P

ILLUSTRATION


w/o Power Outlet Socket:

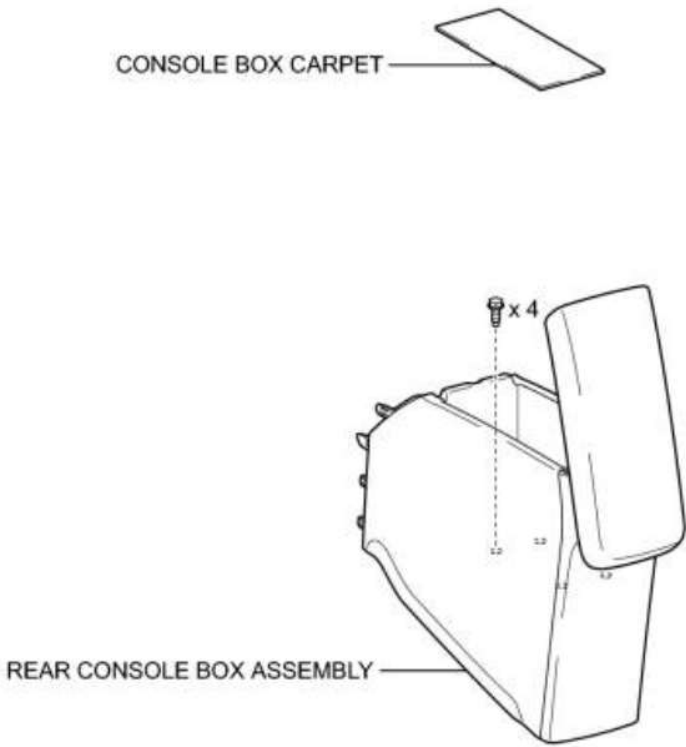

P

ILLUSTRATION

w/ Power Outlet Socket:

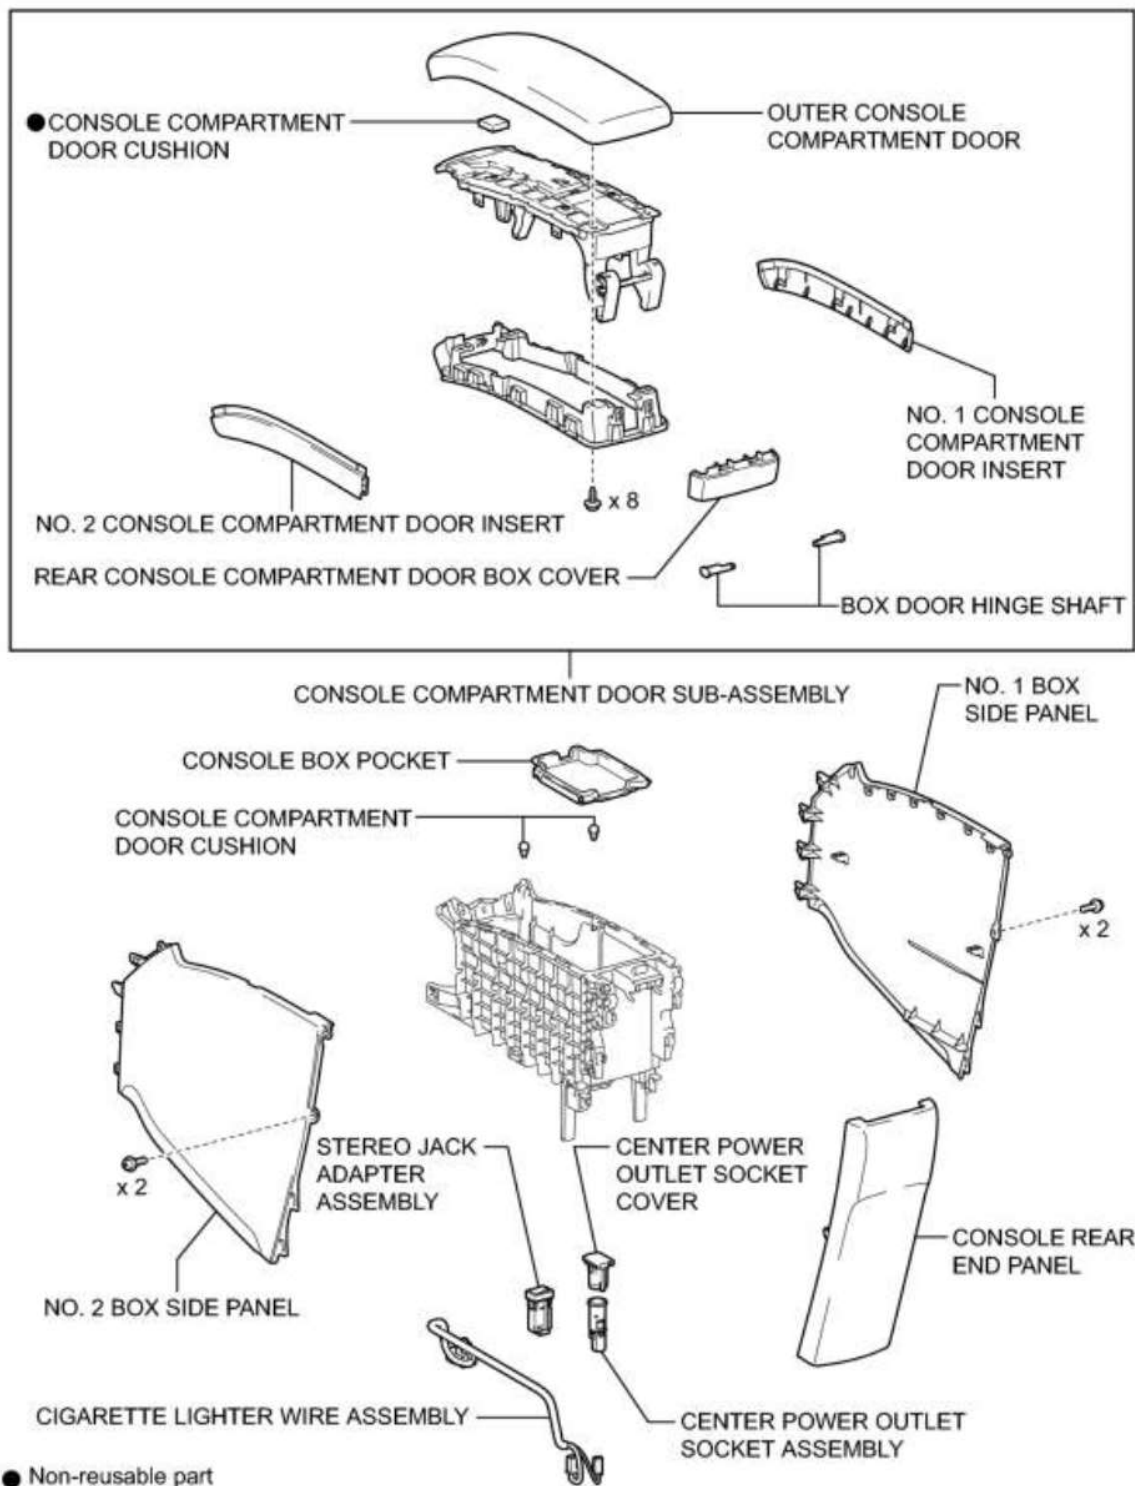



P

ILLUSTRATION

2010 Toyota Prius

Repair Manual


w/o Power Outlet Socket:

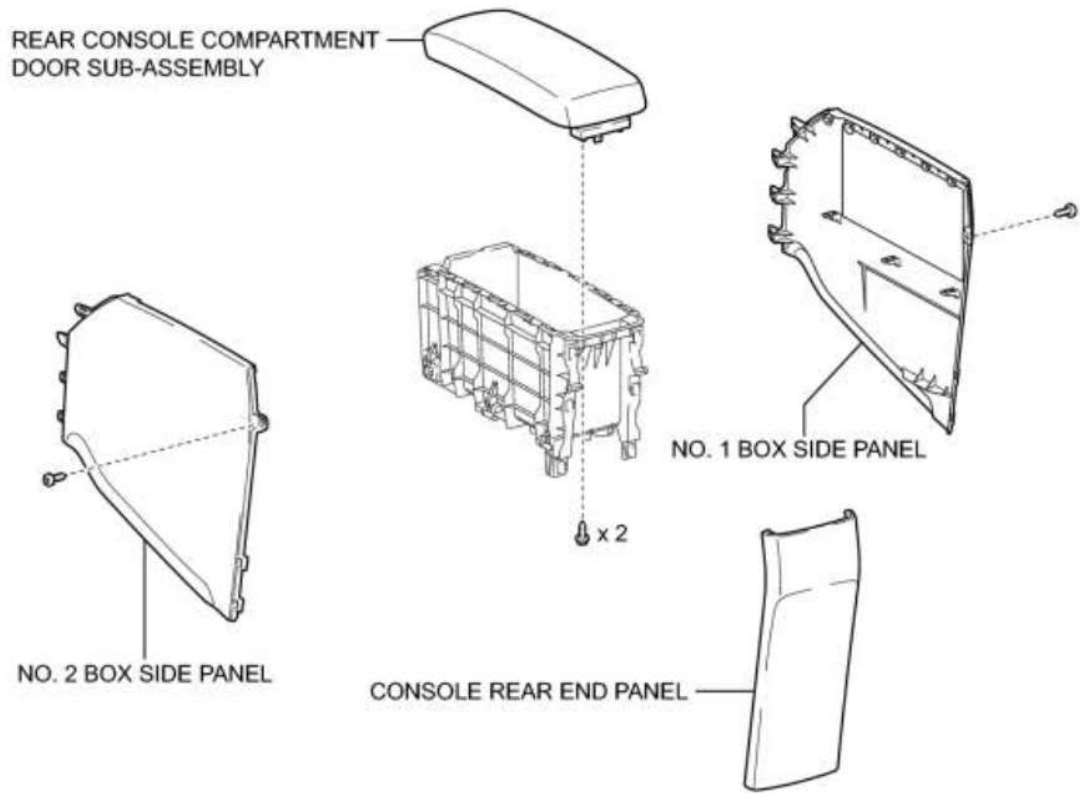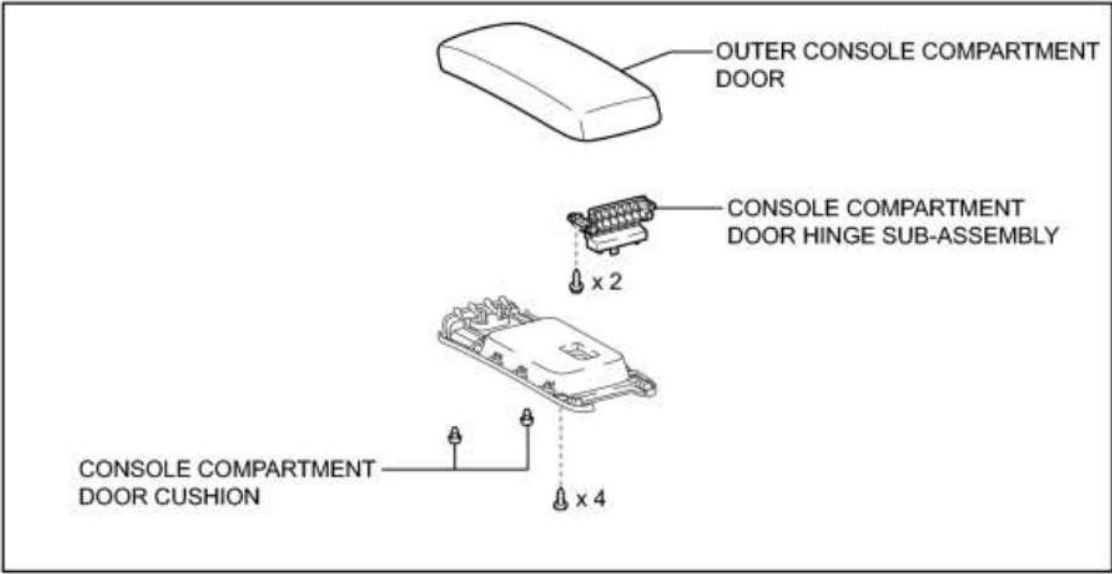

P


REMOVAL

1. REMOVE REAR CONSOLE BOX POCKET (w/ Power Outlet Socket)

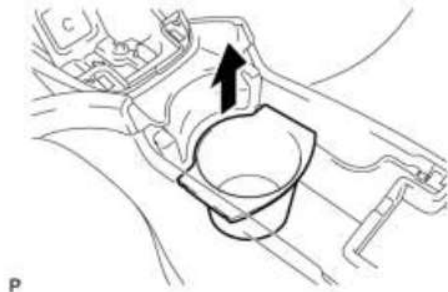


(a) Remove the rear console box pocket.

2. REMOVE UPPER CONSOLE PANEL (w/ Power Outlet Socket)

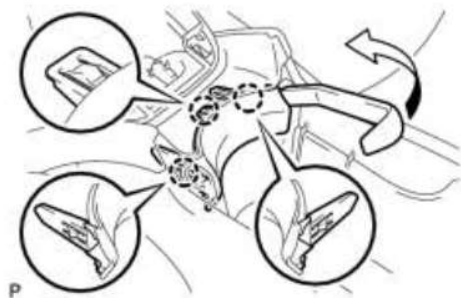

(a) Using a moulding remover, disengage the 3 claws to remove the upper console panel as shown in the illustration.

3. REMOVE CONSOLE BOX CARPET

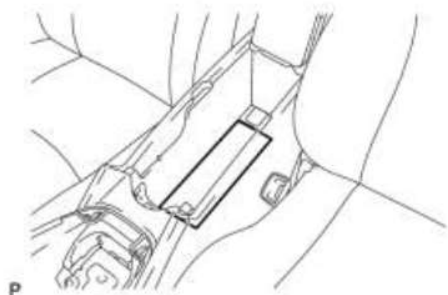

(a) Remove the console box carpet.

4. REMOVE REAR CONSOLE BOX ASSEMBLY (w/ Power Outlet Socket)


(a) Remove the 5 bolts.



(b) Pull the rear console box assembly in the direction indicated by the arrow to disengage the 8 claws.


(c) Disconnect the connector and remove the rear console box assembly.

5. REMOVE REAR CONSOLE BOX ASSEMBLY (w/o Power Outlet Socket)

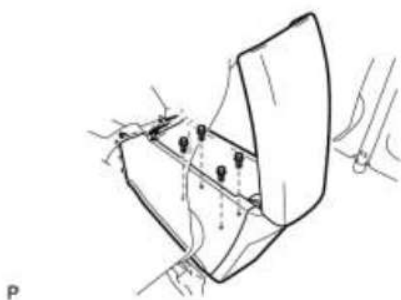

(a) Remove the 4 bolts.


(b) Pull the rear console box assembly in the direction indicated by the arrow to disengage the 8 claws and guide.

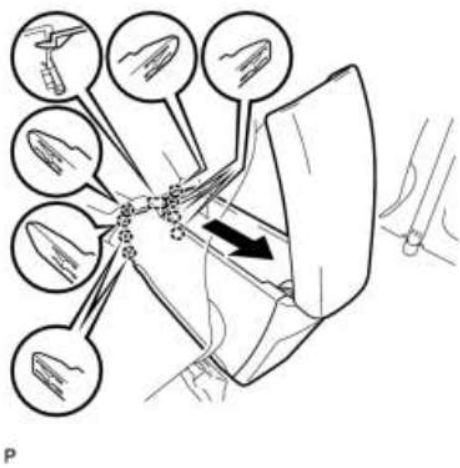

cardiagn.com


DISASSEMBLY

1. REMOVE CONSOLE BOX POCKET (w/ Power Outlet Socket)

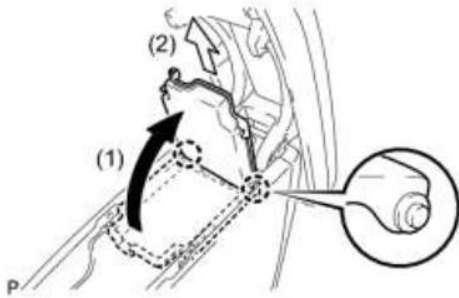


(a) Disengage the 2 claws and remove the console box pocket as shown in the illustration.

2. REMOVE CONSOLE REAR END PANEL (w/ Power Outlet Socket)

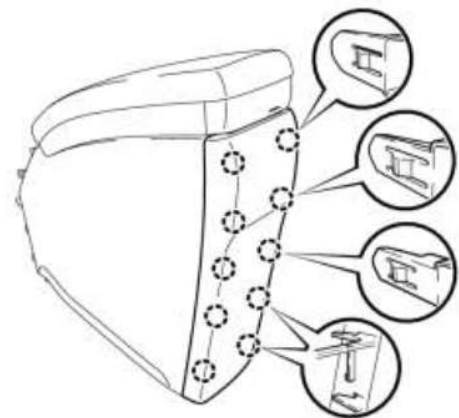

(a) Disengage the 10 claws to remove the console rear end panel.

3. REMOVE CONSOLE COMPARTMENT DOOR SUB-ASSEMBLY (w/ Power Outlet Socket)

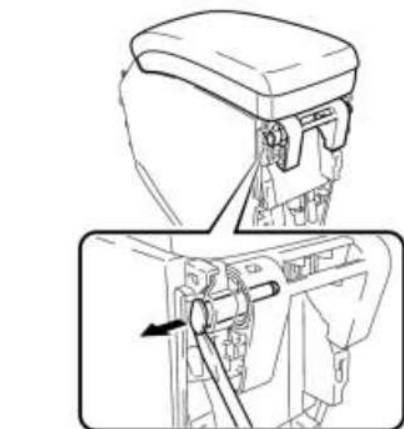


(a) Using a screwdriver, pull out the box door hinge shafts.

- The illustration is for the LH side.
- Use the same procedure for the RH side and LH side.

(b) Remove the console compartment door sub-assembly.

4. REMOVE REAR CONSOLE COMPARTMENT DOOR BOX COVER (w/ Power Outlet Socket)

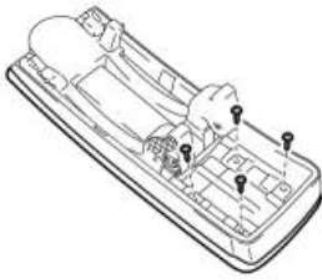


(a) Remove the 4 screws.

P



(b) Remove the 4 screws and the outer console compartment door.


P

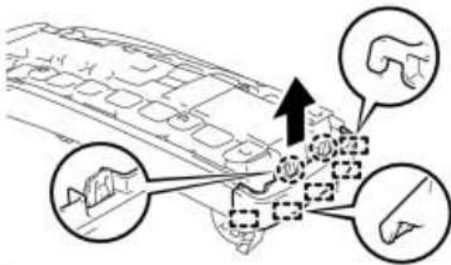

(c) Pull the rear console compartment door box cover in the direction indicated by the arrow to disengage the 2 claws and 5 guides, and remove the rear console compartment door box cover.

P

5. REMOVE NO. 2 CONSOLE COMPARTMENT DOOR INSERT (w/ Power Outlet Socket)

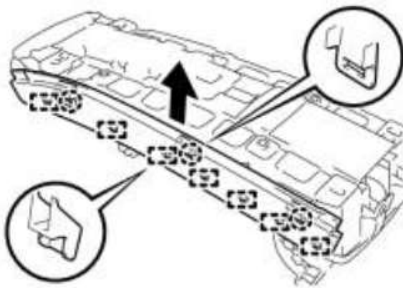

(a) Pull the No. 2 console compartment door insert in the direction indicated by the arrow to disengage the 3 claws and 7 guides, and remove the No. 2 console compartment door insert.

P

6. REMOVE NO. 1 CONSOLE COMPARTMENT DOOR INSERT (w/ Power Outlet Socket)


HINT:

Use the same procedure for the RH side and LH side.


7. REMOVE CONSOLE COMPARTMENT DOOR CUSHION (w/ Power Outlet Socket)

2010 Toyota Prius

Repair Manual

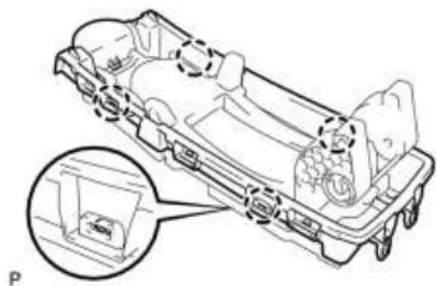


(a) Disengage the 4 claws and remove the inner console compartment door.

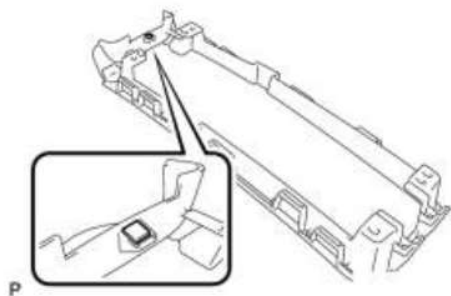


(b) Remove the console compartment door cushion.

8. REMOVE NO. 2 BOX SIDE PANEL (w/ Power Outlet Socket)

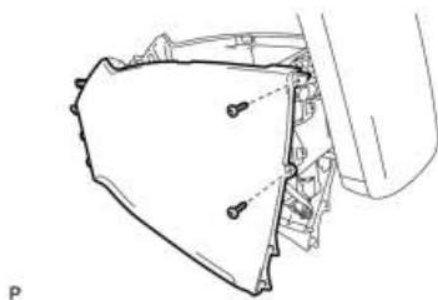

(a) Remove the 2 screws.

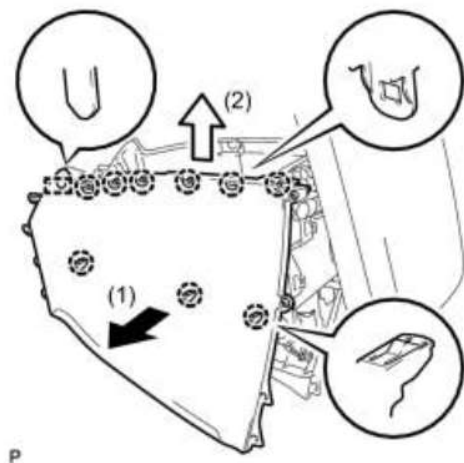

(b) Pull the No. 2 box side panel in the direction indicated by the arrow to disengage the 9 claws and guide, and remove the No. 2 box side panel.

9. REMOVE NO. 1 BOX SIDE PANEL (w/ Power Outlet Socket)


HINT:

Use the same procedure for the RH side and LH side.

10. REMOVE CONSOLE COMPARTMENT DOOR CUSHION (w/ Power Outlet Socket)

(a) Remove the 2 console compartment door cushions.

11. REMOVE CIGARETTE LIGHTER WIRE ASSEMBLY (w/ Power Outlet Socket)

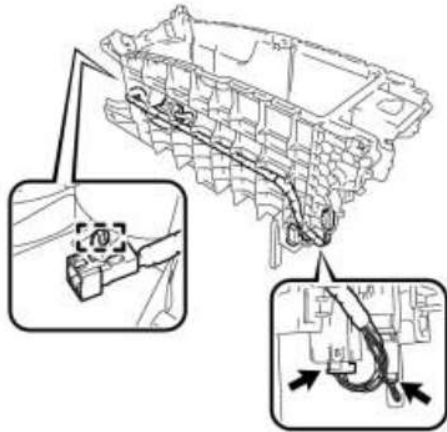

(a) Disconnect the 2 connectors.

P


(b) Disengage the clamp and remove the cigarette lighter wire assembly.

12. REMOVE STEREO JACK ADAPTER ASSEMBLY (w/ Power Outlet Socket) INFO

13. REMOVE CENTER POWER OUTLET SOCKET ASSEMBLY (w/ Power Outlet Socket) INFO

14. REMOVE CENTER POWER OUTLET SOCKET COVER (w/ Power Outlet Socket) INFO

15. REMOVE CONSOLE REAR END PANEL (w/o Power Outlet Socket)

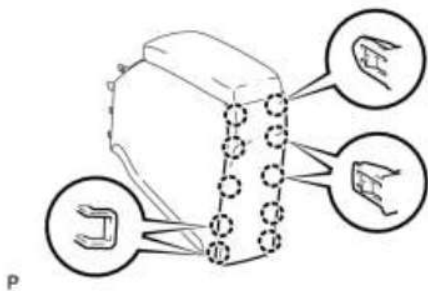

P

(a) Disengage the 10 claws to remove the console rear end panel.

16. REMOVE REAR CONSOLE COMPARTMENT DOOR SUB-ASSEMBLY (w/o Power Outlet Socket)

(a) Remove the 2 screws and remove the rear console compartment door sub-assembly.



P


17. REMOVE CONSOLE COMPARTMENT DOOR HINGE SUB-ASSEMBLY (w/o Power Outlet Socket)



P

(a) Remove the 2 screws and the console compartment door hinge sub-assembly.

18. REMOVE OUTER CONSOLE COMPARTMENT DOOR (w/o Power Outlet Socket)

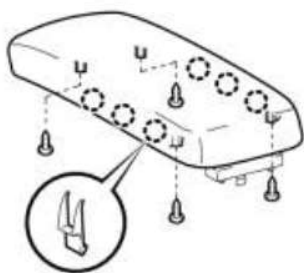


P

(a) Remove the 4 screws.

(b) Disengage the 6 claws and remove the outer console compartment door.

19. REMOVE CONSOLE COMPARTMENT DOOR CUSHION (w/o Power Outlet Socket)

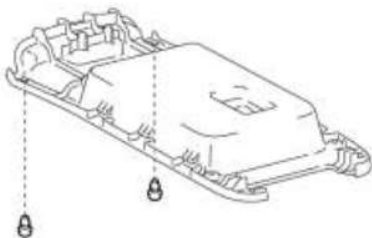

P


(a) Remove the 2 console compartment door cushions.

20. REMOVE NO. 2 BOX SIDE PANEL (w/o Power Outlet Socket)



(a) Remove the screw.

P

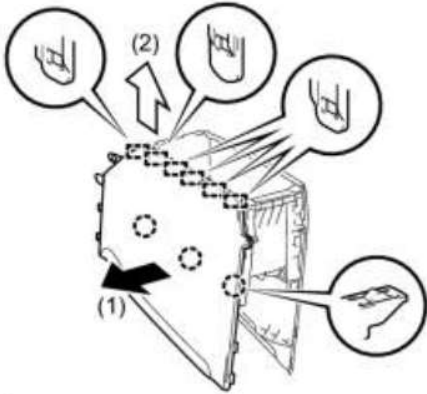

(b) Disengage the 3 claws and 6 guides and remove the No. 2 box side panel.

P


21. REMOVE NO. 1 BOX SIDE PANEL (w/o Power Outlet Socket)

HINT:

Use the same procedure for the RH side and LH side.


REASSEMBLY

1. INSTALL NO. 2 BOX SIDE PANEL (w/o Power Outlet Socket)

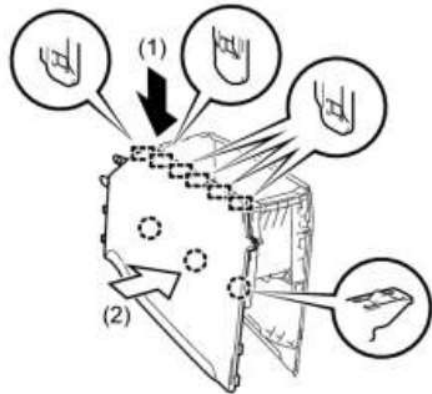

(a) Engage the 6 guides and 3 claws as shown in the illustration.

P

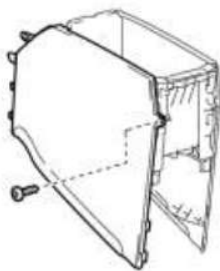

(b) Install the No. 2 box side panel with the screw.


P

2. INSTALL NO. 1 BOX SIDE PANEL (w/o Power Outlet Socket)

HINT:

Use the same procedure for the RH side and LH side.

3. INSTALL CONSOLE COMPARTMENT DOOR CUSHION (w/o Power Outlet Socket)

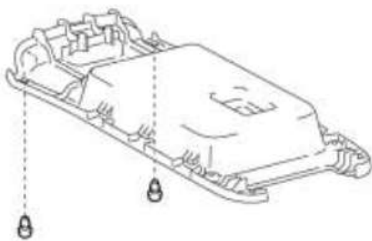


(a) Install the 2 console compartment door cushions.

P

4. INSTALL OUTER CONSOLE COMPARTMENT DOOR (w/o Power Outlet Socket)

(a) Engage the 6 claws.

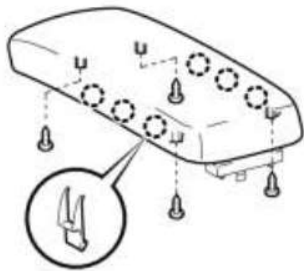

P

(b) Install the outer console compartment door with the 4 screws.

5. INSTALL CONSOLE COMPARTMENT DOOR HINGE SUB-ASSEMBLY (w/o Power Outlet Socket)



P

(a) Install the console compartment door hinge sub-assembly with the 2 screws.


6. INSTALL REAR CONSOLE COMPARTMENT DOOR SUB-ASSEMBLY (w/o Power Outlet Socket)



P

(a) Install the rear console compartment door sub-assembly with the 2 screws.

7. INSTALL CONSOLE REAR END PANEL (w/o Power Outlet Socket)

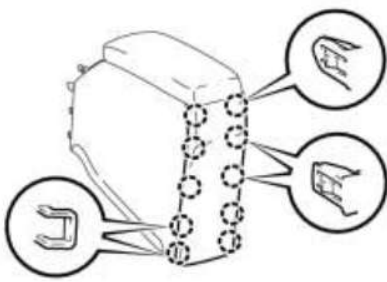

P


(a) Engage the 10 claws to install the console rear end panel.

8. INSTALL CENTER POWER OUTLET SOCKET COVER (w/ Power Outlet Socket) INFO

9. INSTALL CENTER POWER OUTLET SOCKET ASSEMBLY (w/ Power Outlet Socket) INFO

10. INSTALL STEREO JACK ADAPTER ASSEMBLY (w/ Power Outlet Socket) INFO

11. INSTALL CIGARETTE LIGHTER WIRE ASSEMBLY (w/ Power Outlet Socket)

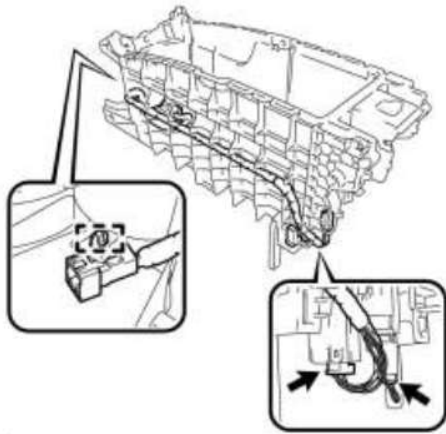

(a) Engage the clamp.


P

(b) Connect the 2 connectors to install the cigarette lighter wire assembly.

12. INSTALL CONSOLE COMPARTMENT DOOR CUSHION (w/ Power Outlet Socket)

(a) Install the 2 console compartment door cushions.


13. INSTALL NO. 2 BOX SIDE PANEL (w/ Power Outlet Socket)

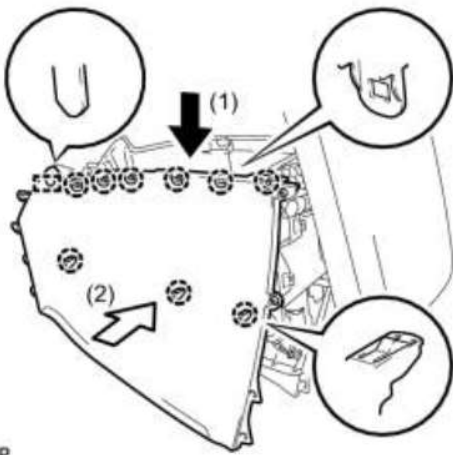

(a) Engage the 9 claws and guide as shown in the illustration.

P

(b) Install the No. 2 box side panel with the 2 screws.

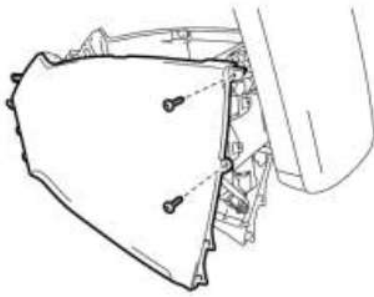


P

14. INSTALL NO. 1 BOX SIDE PANEL (w/ Power Outlet Socket)

HINT:


Use the same procedure for the RH side and LH side.

15. INSTALL CONSOLE COMPARTMENT DOOR CUSHION (w/ Power Outlet Socket)

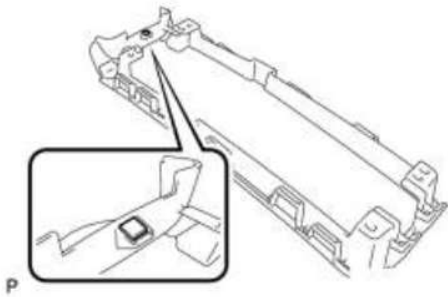

P


(a) Install a new console compartment door cushion.

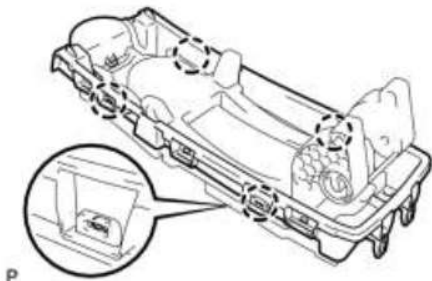

P

(b) Engage the 4 claws to install the inner console compartment door.

16. INSTALL NO. 2 CONSOLE COMPARTMENT DOOR INSERT (w/ Power Outlet Socket)

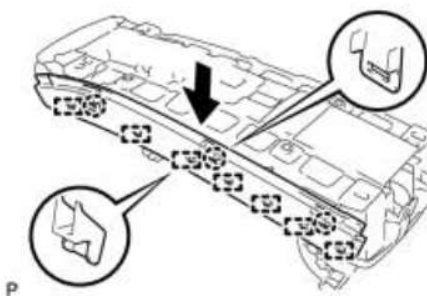

P

(a) Engage the 3 claws and 7 guides to install the No. 2 console compartment door insert as shown in the illustration.


17. INSTALL NO. 1 CONSOLE COMPARTMENT DOOR INSERT (w/ Power Outlet Socket)

2010 Toyota Prius

Repair Manual

HINT:

Use the same procedure for the RH side and LH side.

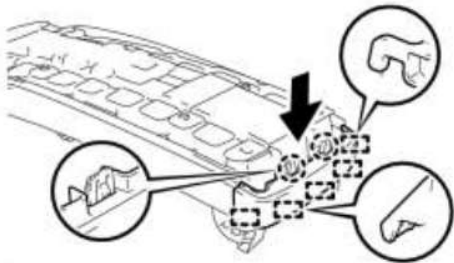18. INSTALL REAR CONSOLE COMPARTMENT DOOR BOX COVER (w/ Power Outlet Socket)


(a) Engage the 2 claws and 5 guides to install the rear console compartment door box cover as shown in the illustration.

P



(b) Temporarily install the outer console compartment door with the 4 screws.

P

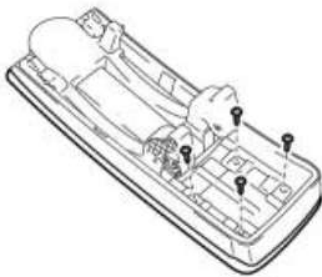

(c) Install the outer console compartment door with the 4 screws.


P

19. INSTALL CONSOLE COMPARTMENT DOOR SUB-ASSEMBLY (w/ Power Outlet Socket)


(a) Temporarily install the console compartment door sub-assembly.

(b) Push in the box door hinge shafts by hand as far as possible.

- The illustration is for the LH side.
- Use the same procedure for the RH side and LH side.

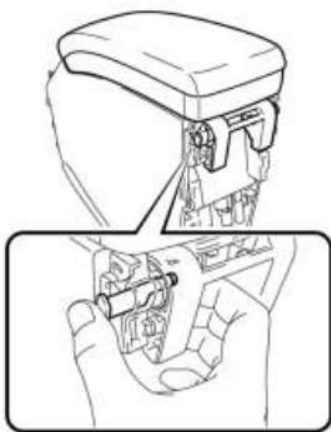

P

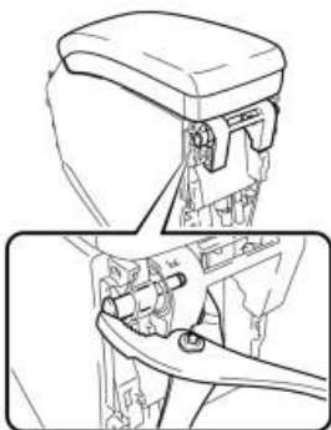


P

(c) Using pliers, push in the box door hinge shafts completely and install the console compartment door sub-assembly.

- The illustration is for the LH side.
- Use the same procedure for the RH side and LH side.

20. INSTALL CONSOLE REAR END PANEL (w/ Power Outlet Socket)

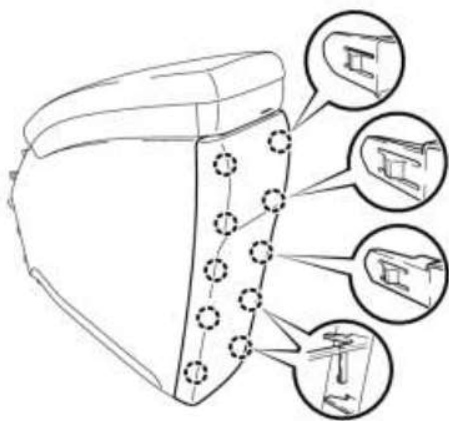

P

(a) Engage the 10 claws to install the console rear end panel.

21. INSTALL CONSOLE BOX POCKET (w/ Power Outlet Socket)

(a) Engage the 2 claws and install the console box pocket as shown in the illustration.




cardiagn.com

INSTALLATION

1. INSTALL REAR CONSOLE BOX ASSEMBLY (w/ Power Outlet Socket)

(a) Connect the connector.

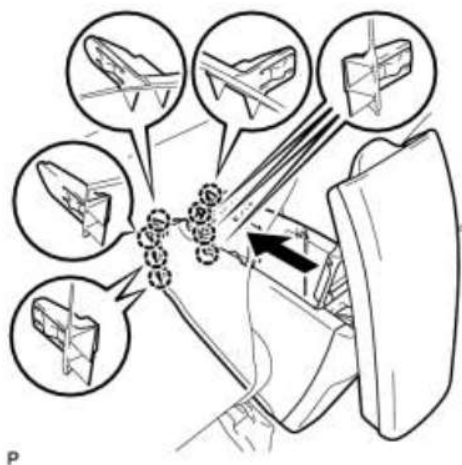


(b) Engage the 8 claws as shown in the illustration.




(c) Install the rear console box assembly with the 5 bolts.

2. INSTALL REAR CONSOLE BOX ASSEMBLY (w/o Power Outlet Socket)

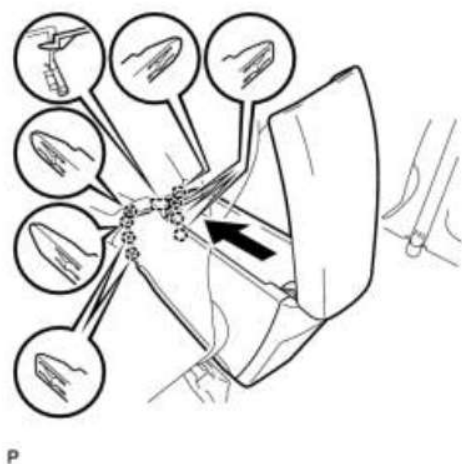


(a) Engage the 8 claws and guide as shown in the illustration.

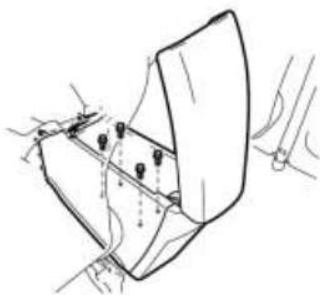


(b) Install the rear console box assembly with the 4 bolts.

3. INSTALL CONSOLE BOX CARPET

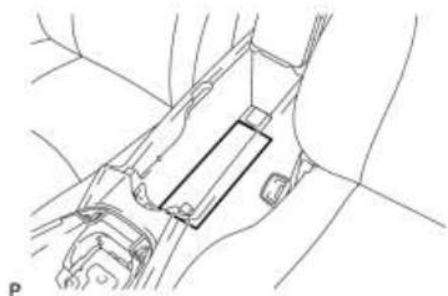


(a) Install the console box carpet.

4. INSTALL UPPER CONSOLE PANEL (w/ Power Outlet Socket)

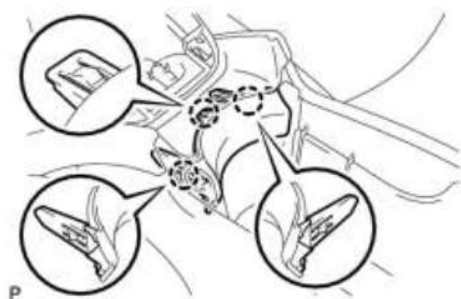

(a) Engage the 3 claws to install the upper console panel.

5. INSTALL REAR CONSOLE BOX POCKET (w/ Power Outlet Socket)

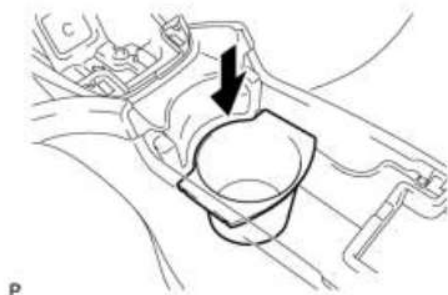

(a) Install the rear console box pocket as shown in the illustration.

cardiagn.com

PRECAUTION

 
 
 
 
1. PRECAUTION FOR VEHICLE WITH SRS AIRBAG AND SEAT BELT PRETENSIONER

(a) Some operations in this section may affect the SRS airbags. Prior to performing the corresponding operations, read the precautions regarding the SRS airbags INFO.

2. TABLE OF BOLT, SCREW AND NUT


HINT:

All bolts, screws and nuts relevant to installing and removing the instrument panel are shown along with their alphabet codes in the table below.

Code	Shape	Size	Code	Shape	Size
<A>		$\varnothing=8\text{ mm}$ (0.314 in.) Length=21 mm (0.827 in.)			$\varnothing=6\text{ mm}$ (0.236 in.) Length=20 mm (0.787 in.)
<C>		$\varnothing=6\text{ mm}$ (0.236 in.) Length=20 mm (0.787 in.)	<D>		$\varnothing=5\text{ mm}$ (0.197 in.) Length=14 mm (0.551 in.)

COMPONENTS


ILLUSTRATION

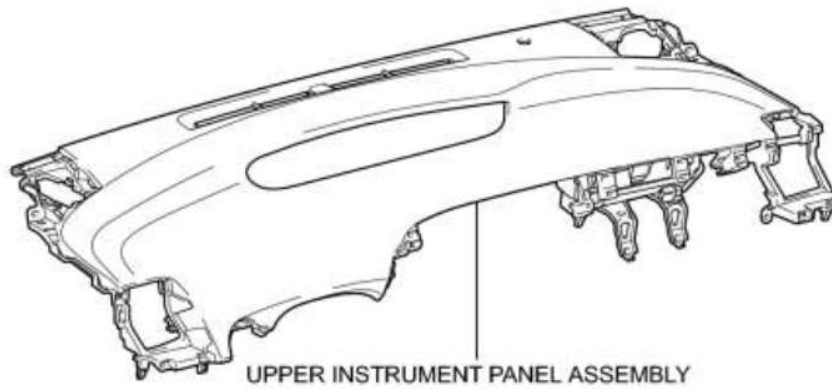

P

ILLUSTRATION


w/ Power Outlet Socket:

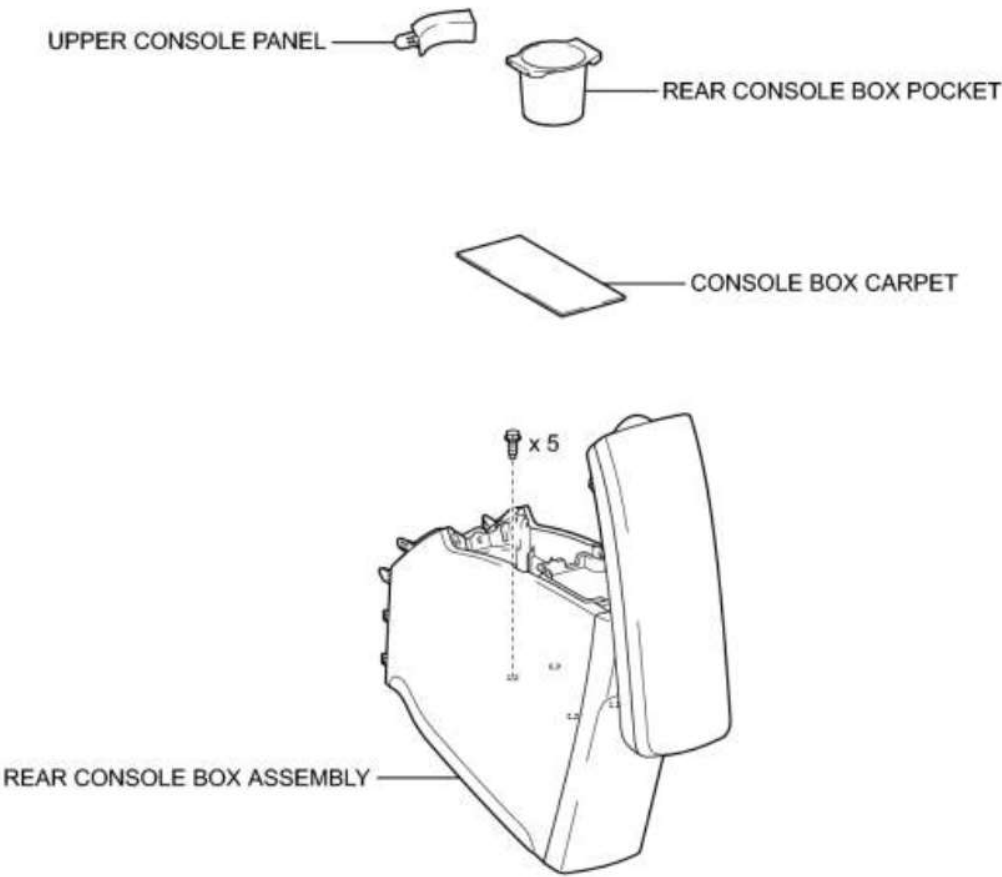

P


ILLUSTRATION

w/o Power Outlet Socket:

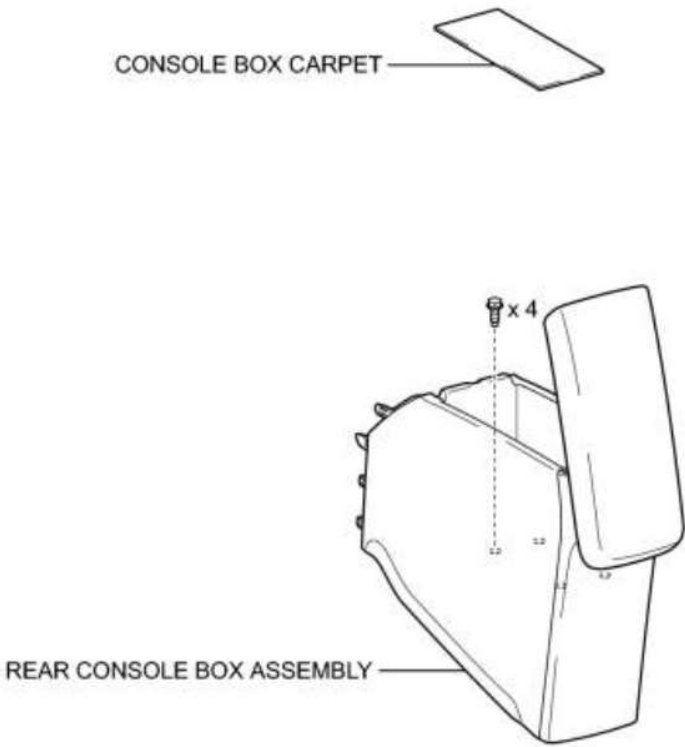

P

ILLUSTRATION

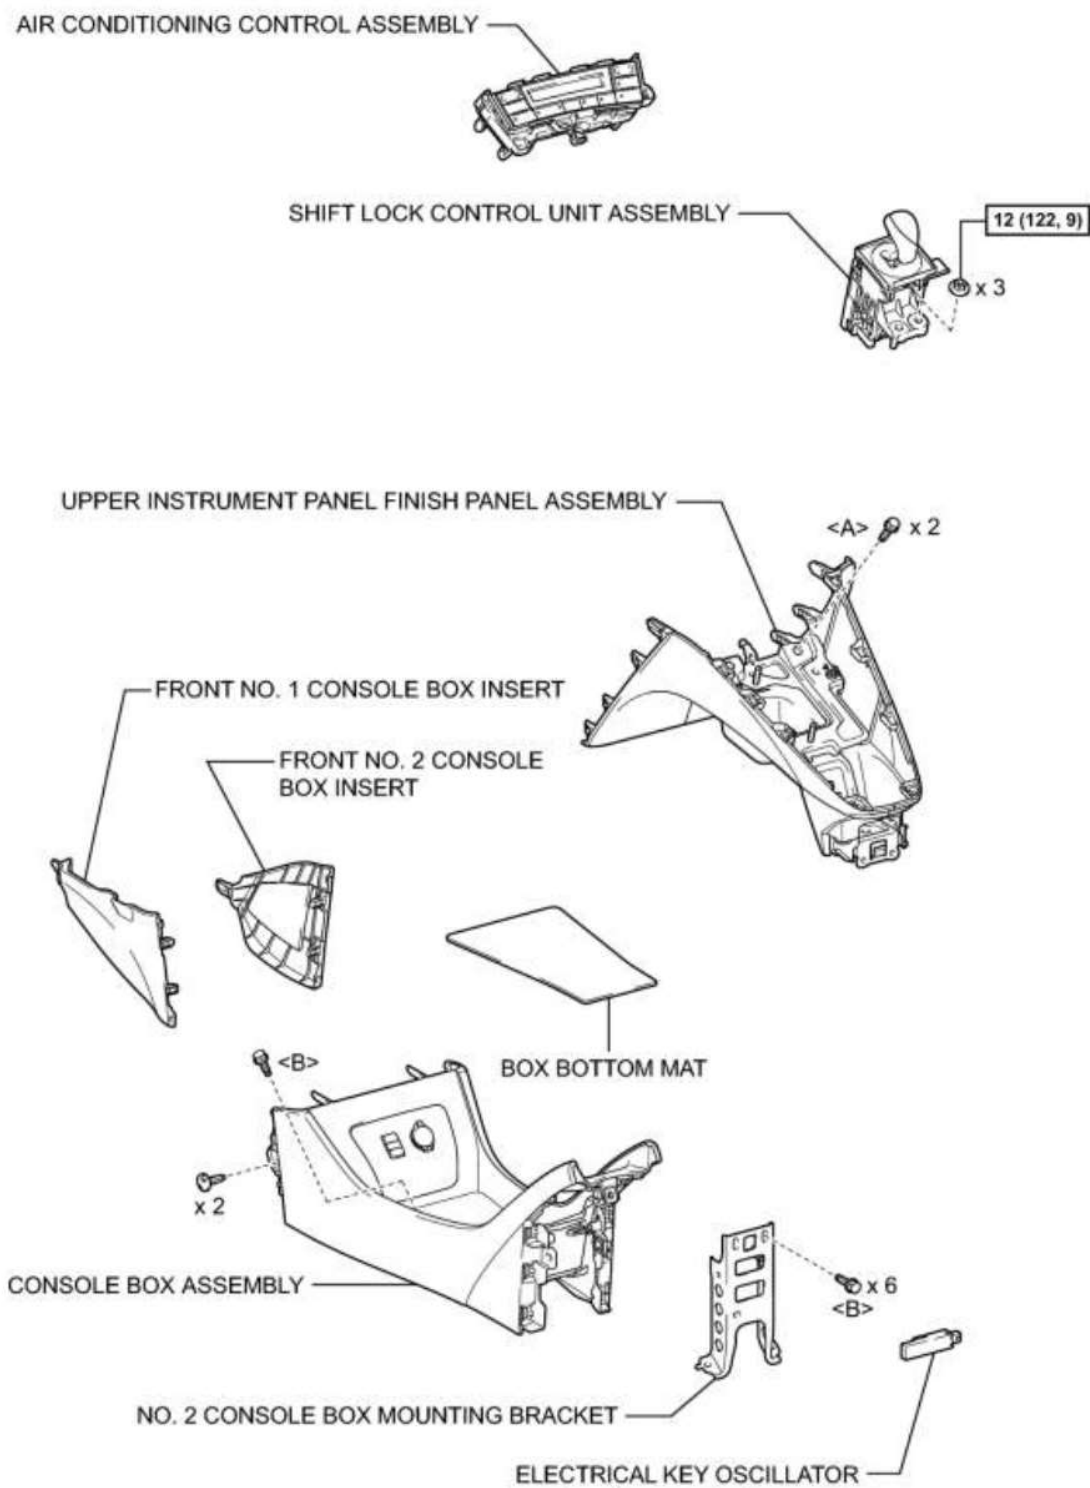


[N*m (kgf*cm, ft.*lbf)]: Specified torque

P

ILLUSTRATION

2010 Toyota Prius



Repair Manual

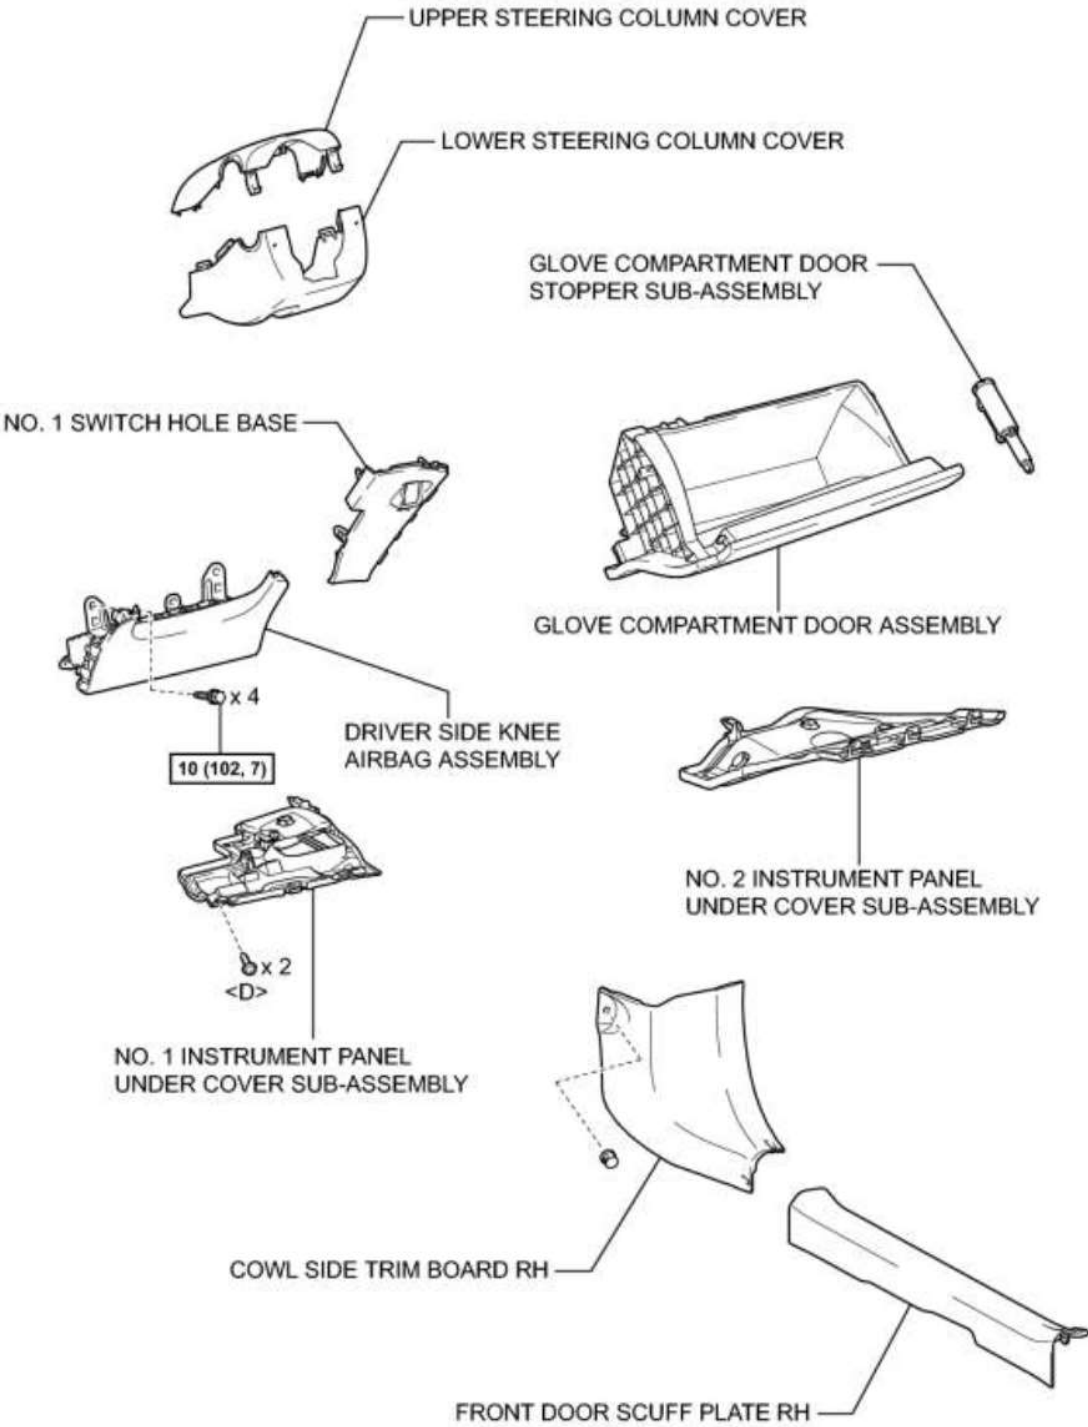

10 (102, 7) : Specified torque

P


ILLUSTRATION

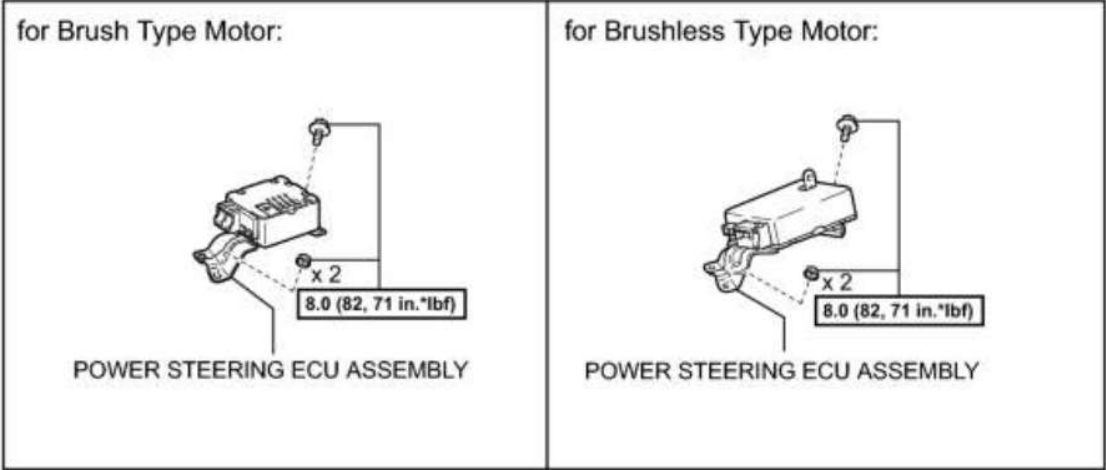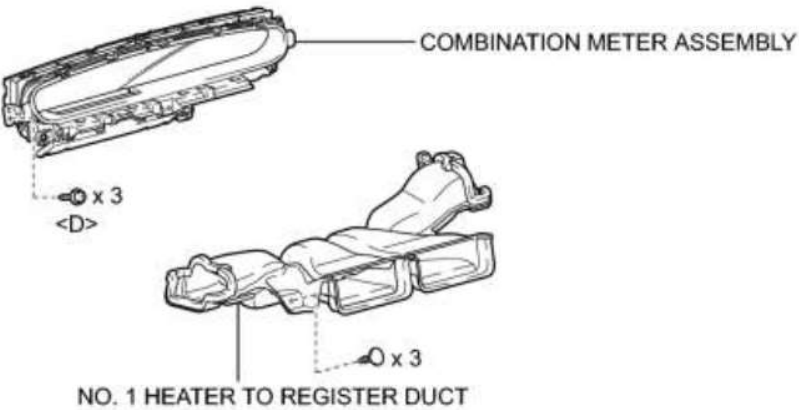

N*m (kgf*cm, ft.*lbf) : Specified torque


P

ILLUSTRATION

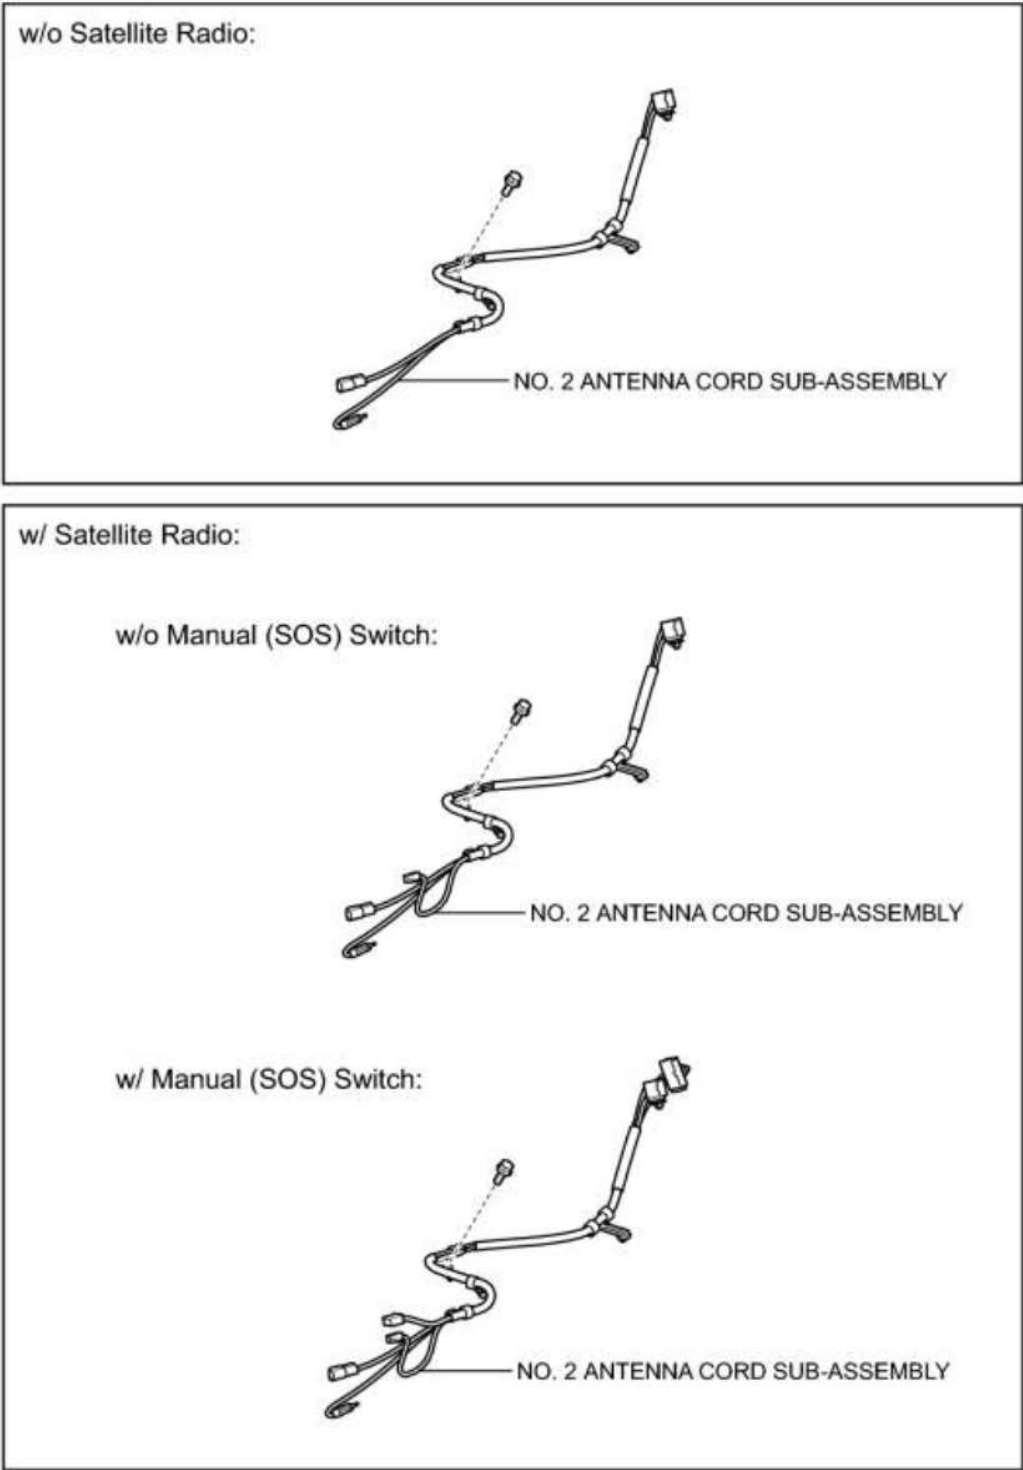

P

ILLUSTRATION

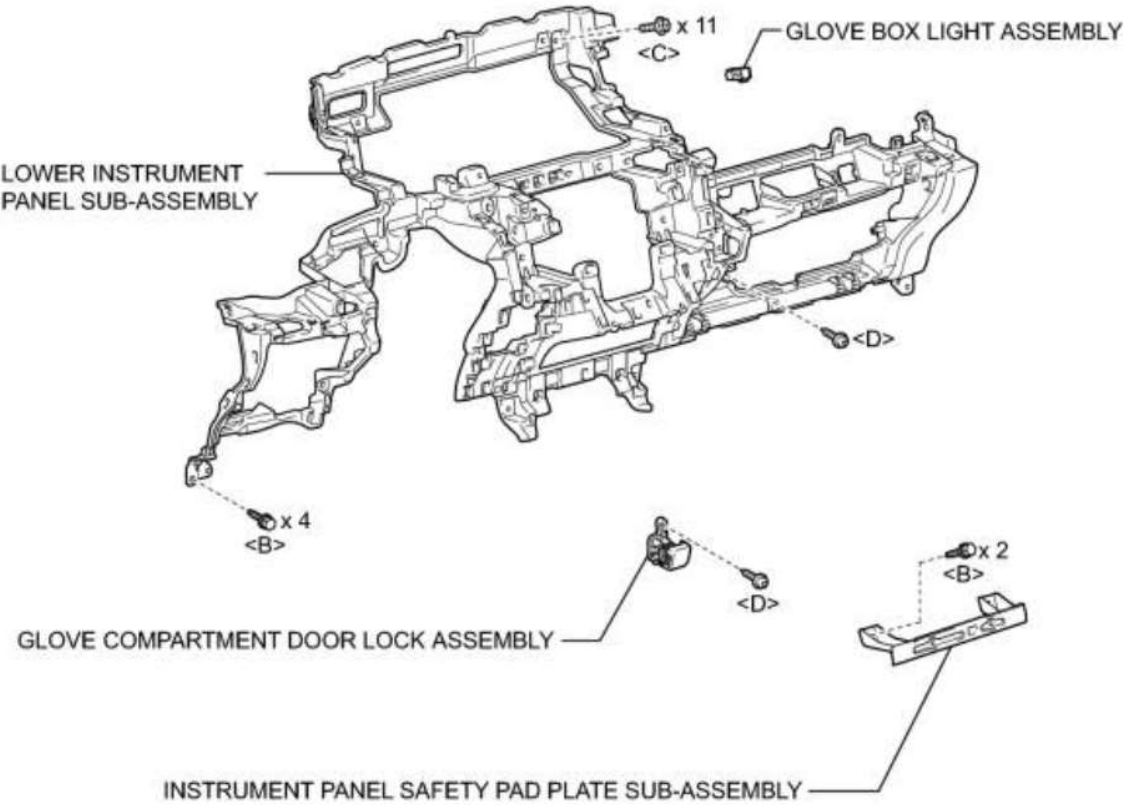

P

cardiagn.com

REMOVAL

1. PRECAUTION

INFO

2. REMOVE UPPER INSTRUMENT PANEL ASSEMBLY

(a) Remove the upper instrument panel assembly INFO.

3. REMOVE REAR CONSOLE BOX POCKET (w/ Power Outlet Socket) INFO

4. REMOVE UPPER CONSOLE PANEL (w/ Power Outlet Socket) INFO


5. REMOVE CONSOLE BOX CARPET INFO

6. REMOVE REAR CONSOLE BOX ASSEMBLY (w/ Power Outlet Socket) INFO

7. REMOVE REAR CONSOLE BOX ASSEMBLY (w/o Power Outlet Socket) INFO

8. REMOVE ELECTRICAL KEY OSCILLATOR INFO


9. REMOVE NO. 2 CONSOLE BOX MOUNTING BRACKET

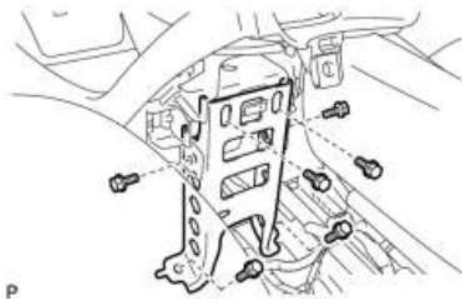

(a) Remove the 6 bolts and No. 2 console box mounting bracket.


10. REMOVE FRONT NO. 1 CONSOLE BOX INSERT

(a) Pull the front No. 1 console box insert in the direction indicated by the arrow to disengage the 4 claws and guide, and remove the front No. 1 console box insert.

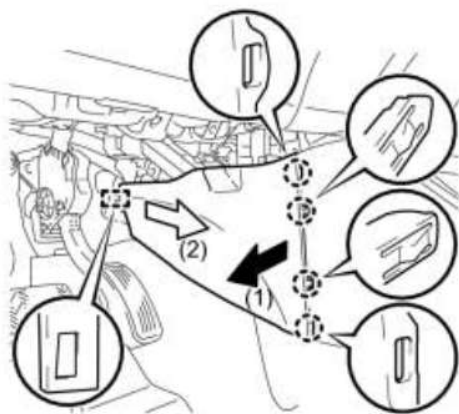

P


11. REMOVE FRONT NO. 2 CONSOLE BOX INSERT

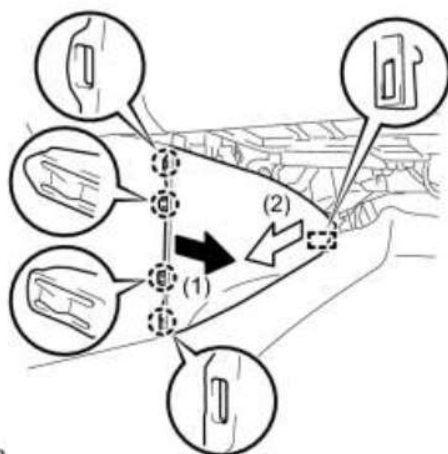

P

(a) Pull the front No. 2 console box insert in the direction indicated by the arrow to disengage the 4 claws and guide, and remove the front No. 2 console box insert.

12. REMOVE BOX BOTTOM MAT


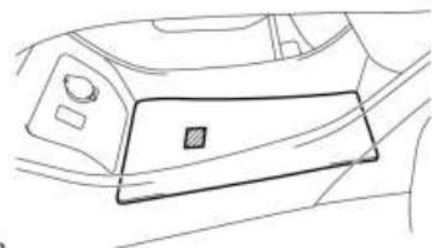


P

(a) Disengage the fastener and remove the box bottom mat.

13. SEPARATE CONSOLE BOX ASSEMBLY

(a) Remove the bolt and 2 clips.

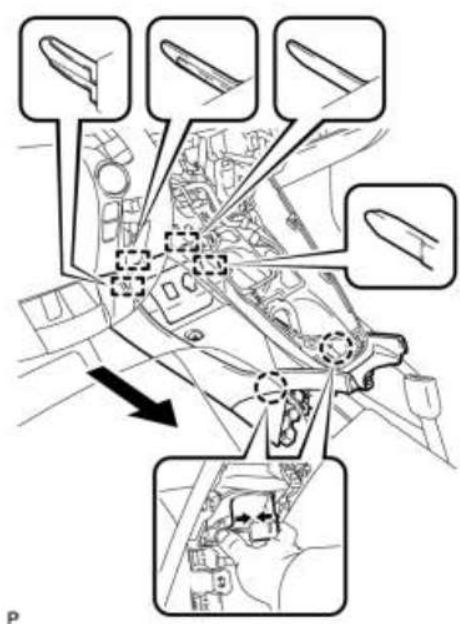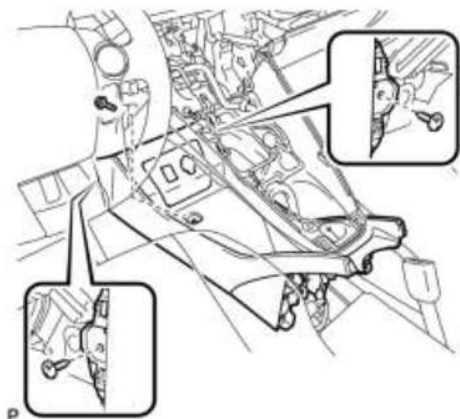

(b) While pushing the parts shown in the illustration inward, pull the console box assembly in the direction indicated by the arrow to disengage the 2 claws and 4 guides.


(c) Disconnect the connector and separate the console box assembly.

14. REMOVE AIR CONDITIONING CONTROL ASSEMBLY_ [INFO](#)


15. REMOVE SHIFT LOCK CONTROL UNIT ASSEMBLY_ [INFO](#)

16. REMOVE UPPER INSTRUMENT PANEL FINISH PANEL ASSEMBLY

(a) Disengage the clamp.

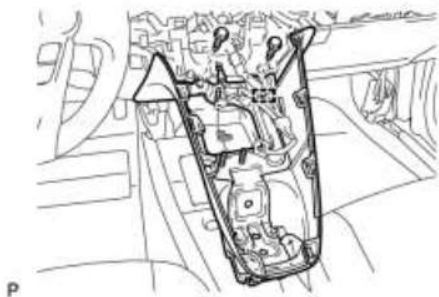


(b) Remove the 2 bolts <A>.

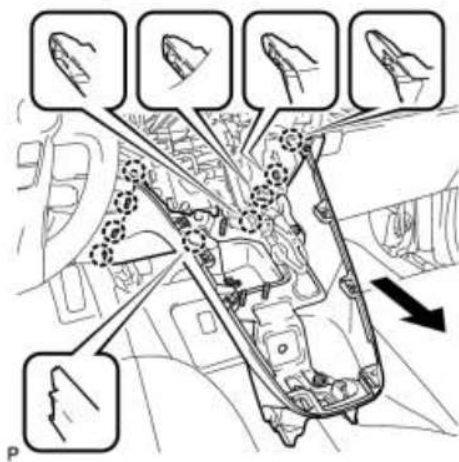

(c) Pull the upper instrument panel finish panel assembly in the direction indicated by the arrow to disengage the 9 claws and remove the upper instrument panel finish panel assembly.


17. REMOVE CONSOLE BOX ASSEMBLY

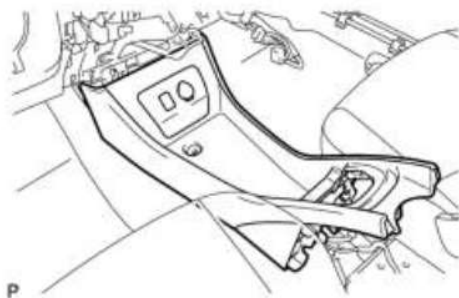

(a) Remove the console box assembly.

18. REMOVE NO. 1 SWITCH HOLE BASE

(a) Disengage the 5 claws.

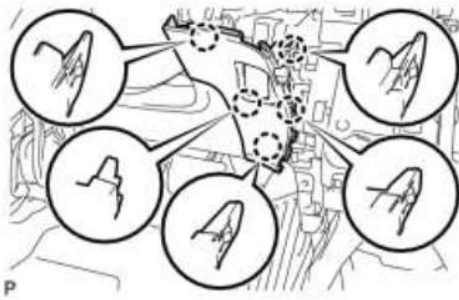


(b) Disconnect the connector to remove the No. 1 switch hole base.

19. REMOVE LOWER STEERING COLUMN COVER_ INFO

20. REMOVE UPPER STEERING COLUMN COVER_ INFO

21. REMOVE NO. 1 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY

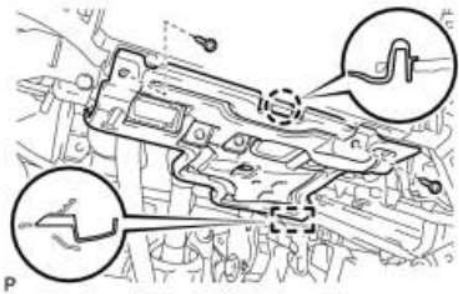


(a) Remove the 2 screws <D>.

(b) Disengage the claw and guide.

(c) Disconnect each connector and remove the No. 1 instrument panel under cover sub-assembly.

22. REMOVE DRIVER SIDE KNEE AIRBAG ASSEMBLY_ INFO


23. REMOVE NO. 2 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY

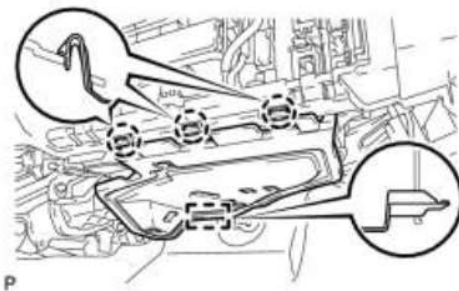

(a) Disengage the 3 claws and guide.

(b) Disconnect each connector and remove the No. 2 instrument panel under cover sub-assembly.

24. REMOVE GLOVE COMPARTMENT DOOR ASSEMBLY

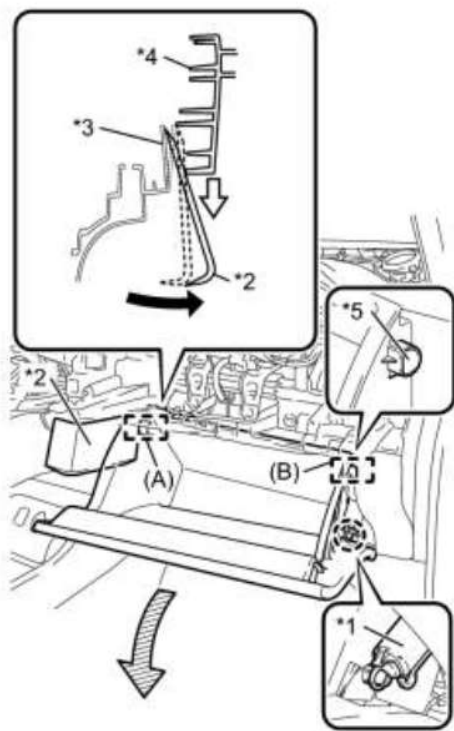

(a) Disengage the claw and release the glove compartment door stopper.


Text in Illustration

*1	Glove Compartment Door Stopper Sub-assembly
*2	Moulding Remover
*3	Lower Instrument Panel Sub-assembly
*4	Glove Compartment Door Assembly
*5	Stopper

- (b) Insert the moulding remover into the location shown in the illustration.
- (c) Move the moulding remover in the direction indicated by the arrow to bend the lower instrument panel sub-assembly and release the stopper (A).

HINT:

Use the same procedure to release the stopper (B).

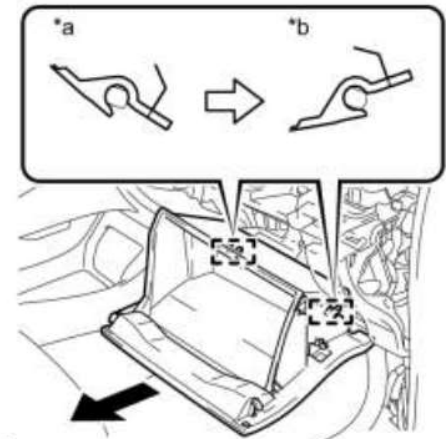

(d) Open the glove compartment door assembly to approximately 55° from its closed position. Pull it horizontally in the direction indicated by the arrow to disengage the 2 hinges and remove the glove compartment door assembly.

Text in Illustration


*a	Close
*b	Open Approximately

NOTICE:

Pulling the glove compartment door assembly upward to remove it causes

the hinges to deform. Be sure to pull out the glove compartment door assembly horizontally.

25. REMOVE GLOVE COMPARTMENT DOOR STOPPER SUB-ASSEMBLY

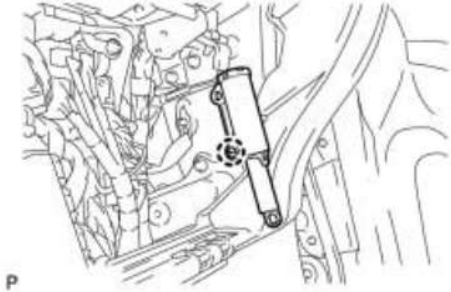

(a) Disengage the claw to remove the glove compartment door stopper sub-assembly.

26. REMOVE FRONT DOOR SCUFF PLATE RH

HINT:


Use the same procedure for the RH side and LH side [INFO](#).

27. REMOVE COWL SIDE TRIM BOARD RH

HINT:

Use the same procedure for the RH side and LH side [INFO](#).

28. REMOVE NO. 1 HEATER TO REGISTER DUCT

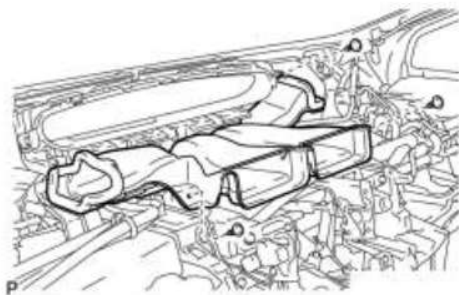


(a) Remove the 3 clips and the No. 1 heater to register duct.

29. REMOVE COMBINATION METER ASSEMBLY_ [INFO](#)

30. REMOVE POWER STEERING ECU ASSEMBLY (for Brush Type Motor)_ [INFO](#)


31. REMOVE POWER STEERING ECU ASSEMBLY (for Brushless Type Motor)_ [INFO](#)

32. REMOVE INSTRUMENT PANEL SAFETY PAD PLATE SUB-ASSEMBLY

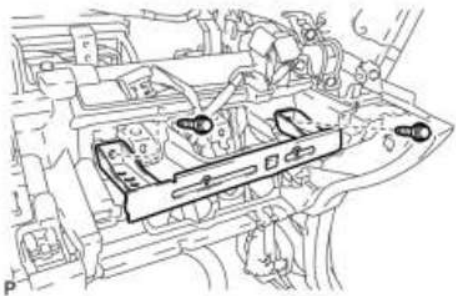

(a) Remove the 2 bolts and instrument panel safety pad plate sub-assembly.

33. REMOVE GLOVE COMPARTMENT DOOR LOCK ASSEMBLY

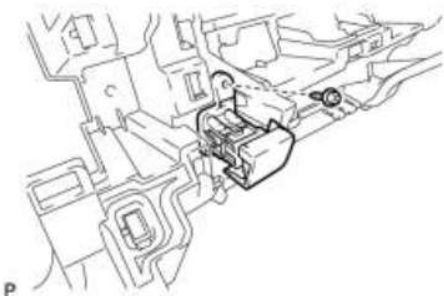

(a) Remove the screw <D> and glove compartment door lock assembly.


34. REMOVE GLOVE BOX LIGHT ASSEMBLY INFO

35. REMOVE NO. 2 ANTENNA CORD SUB-ASSEMBLY (w/o Satellite Radio) INFO

36. REMOVE NO. 2 ANTENNA CORD SUB-ASSEMBLY (w/ Satellite Radio) INFO


37. REMOVE LOWER INSTRUMENT PANEL SUB-ASSEMBLY

(a) Disengage each clamp.

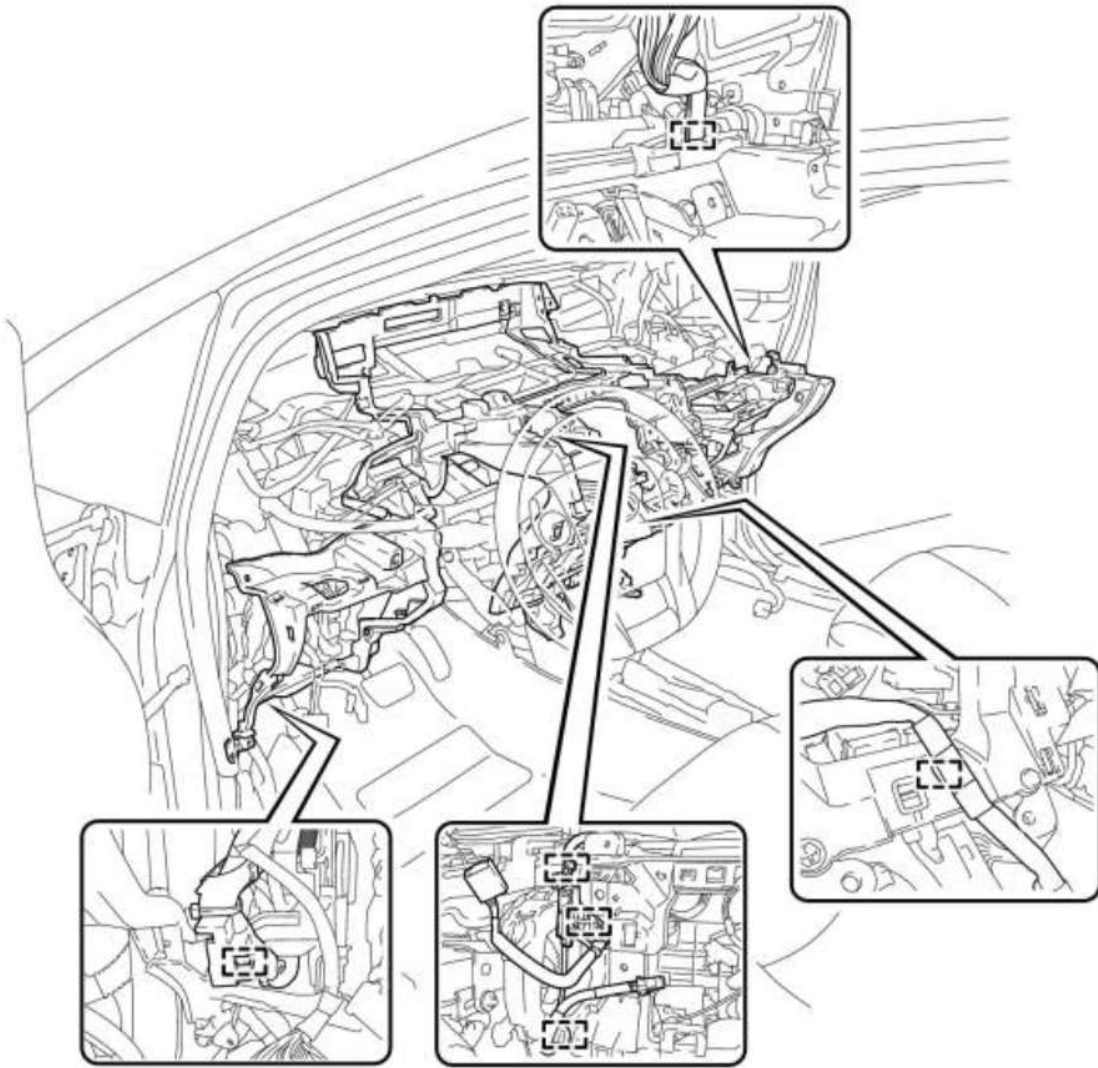

P

(b) Remove the 4 bolts , 11 bolts <C>, screw <D> and lower instrument panel sub-assembly.

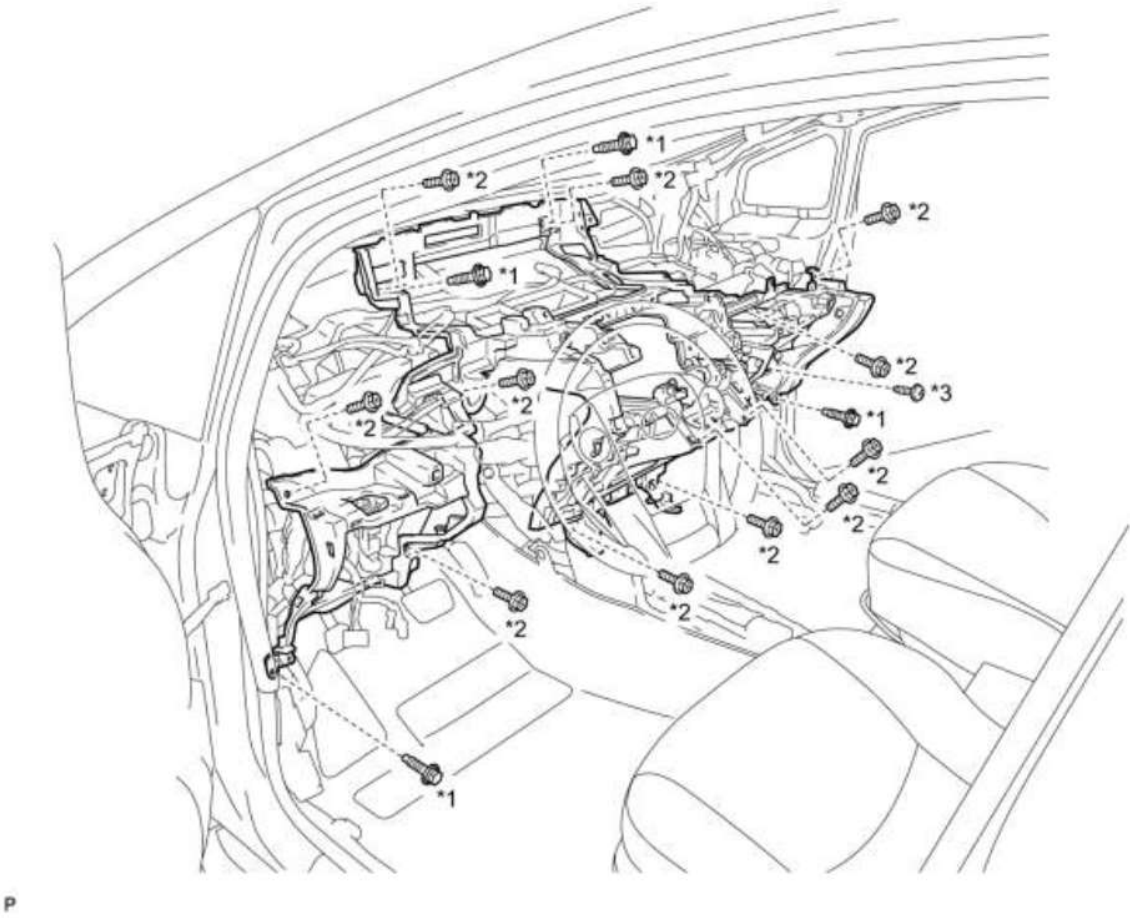

Text in Illustration

*1	Bolt 	*2	Bolt <C>
*3	Screw <D>	-	-


cardiagn.com

INSTALLATION

1. INSTALL LOWER INSTRUMENT PANEL SUB-ASSEMBLY


(a) When using a new lower instrument panel sub-assembly:

(1) Immediately before installing the lower instrument panel sub-assembly, twist and cut off the portions shown in the illustration.

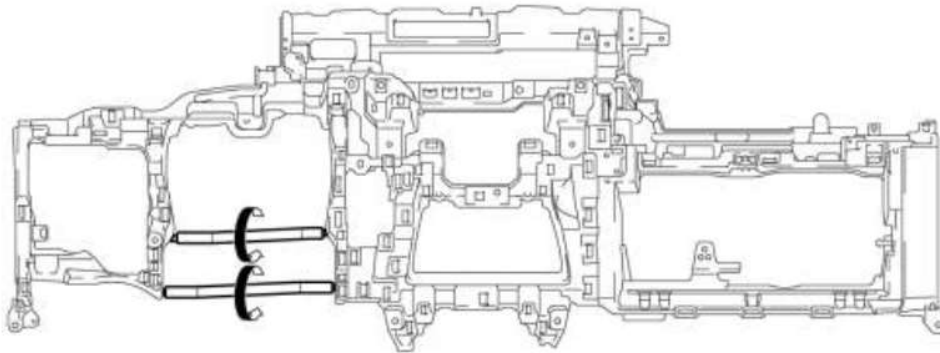

P


(b) Install the lower instrument panel sub-assembly with the 4 bolts , 11 bolts <C> and screw <D>.

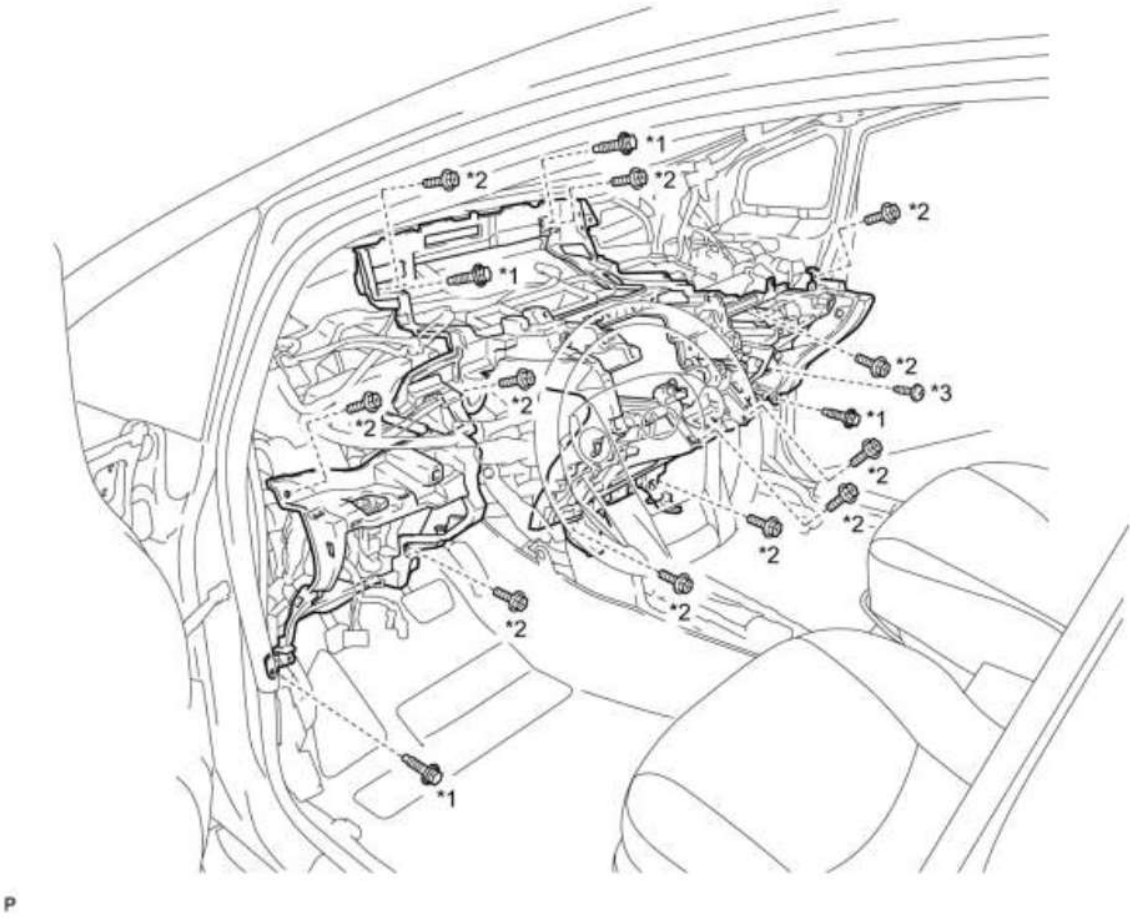

Text in Illustration

*1	Bolt 	*2	Bolt <C>
*3	Screw <D>	-	-

(c) Engage each clamp.

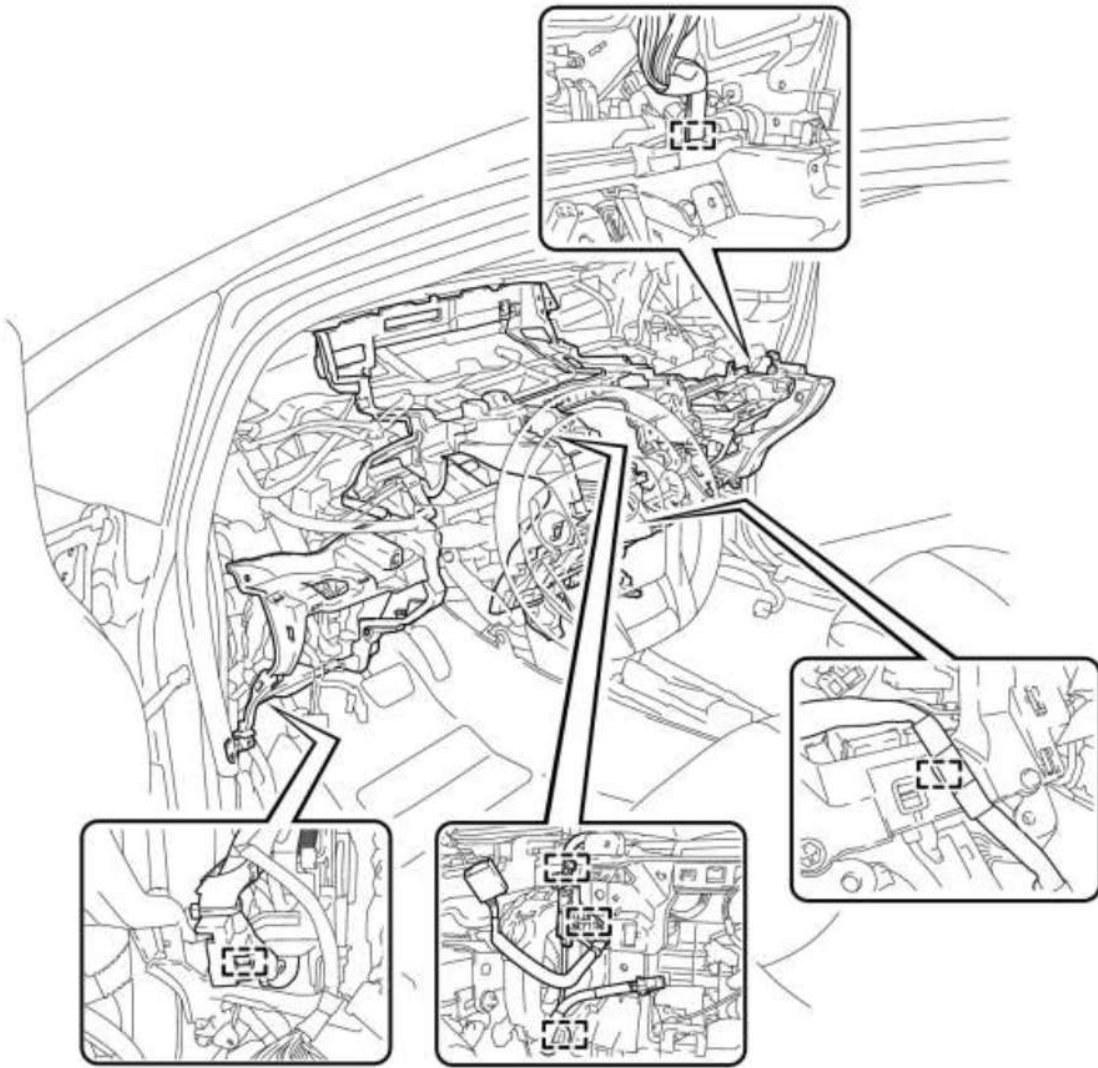

P


2. INSTALL NO. 2 ANTENNA CORD SUB-ASSEMBLY (w/o Satellite Radio) [INFO](#)

3. INSTALL NO. 2 ANTENNA CORD SUB-ASSEMBLY (w/ Satellite Radio) [INFO](#)


4. INSTALL GLOVE BOX LIGHT ASSEMBLY [INFO](#)

5. INSTALL GLOVE COMPARTMENT DOOR LOCK ASSEMBLY

(a) Install the glove compartment door lock assembly with the screw <D>.

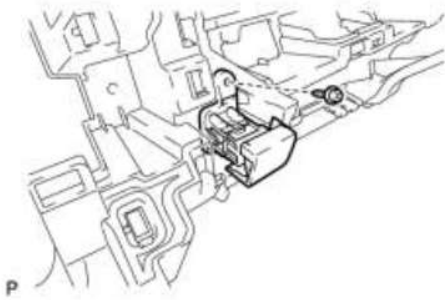

6. INSTALL INSTRUMENT PANEL SAFETY PAD PLATE SUB-ASSEMBLY

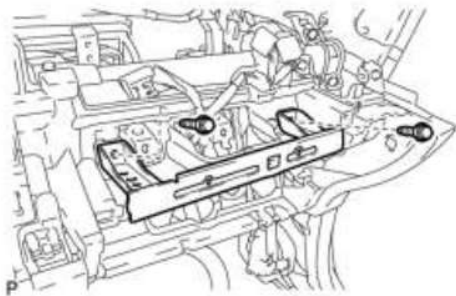


(a) Install the instrument panel safety pad plate sub-assembly with the 2 bolts .

7. INSTALL POWER STEERING ECU ASSEMBLY (for Brush Type Motor) INFO

8. INSTALL POWER STEERING ECU ASSEMBLY (for Brushless Type Motor) INFO

9. INSTALL COMBINATION METER ASSEMBLY INFO

10. INSTALL NO. 1 HEATER TO REGISTER DUCT

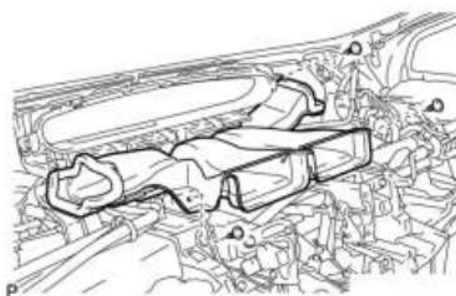

(a) Install the No. 1 heater to register duct with the 3 clips.

11. INSTALL COWL SIDE TRIM BOARD RH

HINT:

Use the same procedure for the RH side and LH side INFO.

12. INSTALL FRONT DOOR SCUFF PLATE RH


2010 Toyota Prius

Repair Manual

HINT:


Use the same procedure for the RH side and LH side INFO.

13. INSTALL GLOVE COMPARTMENT DOOR STOPPER SUB-ASSEMBLY

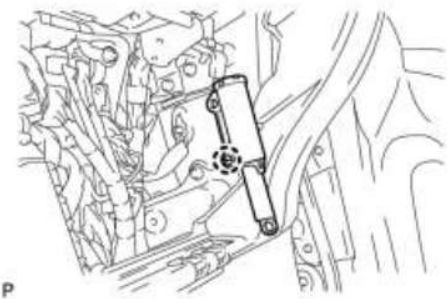

(a) Engage the claw to install the glove compartment door stopper sub-assembly.

14. INSTALL GLOVE COMPARTMENT DOOR ASSEMBLY

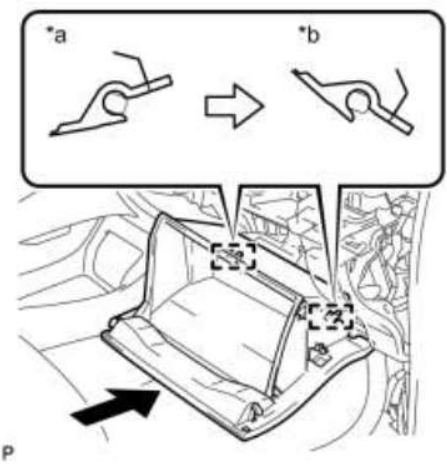


(a) With the glove compartment door assembly opened approximately 55° from its closed position, engage the 2 hinges horizontally.

Text in Illustration

*a	Opened Approximately 55°
*b	Closed

NOTICE:

Engaging the hinges from the top will deform the hinges. Be sure to install the glove compartment door assembly horizontally.

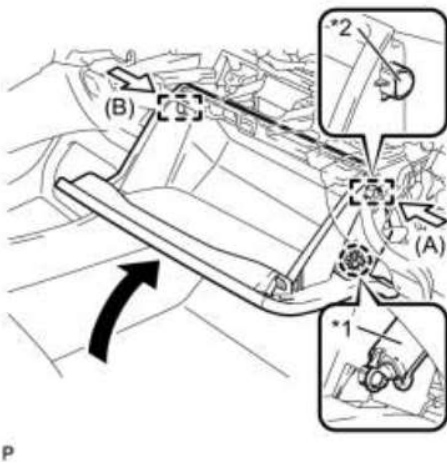

(b) Slightly bend the stoppers (A) and (B) in the directions indicated by the arrows in the illustration and engage the stoppers to install the glove compartment door assembly.


Text in Illustration

*1	Glove Compartment Door Stopper Sub-assembly
*2	Stopper

(c) Engage the claw and connect the glove compartment door stopper sub-assembly.

15. INSTALL NO. 2 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY

(a) Connect each connector.

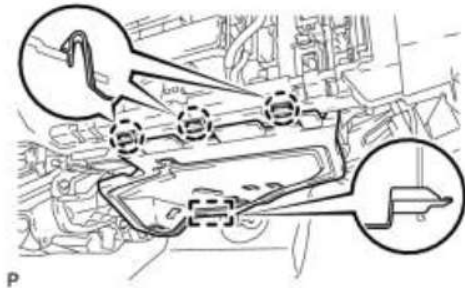


(b) Engage the guide and 3 claws to install the No. 2 instrument panel under cover sub-assembly.

16. INSTALL DRIVER SIDE KNEE AIRBAG ASSEMBLY_ INFO

17. INSTALL NO. 1 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY

(a) Connect each connector.

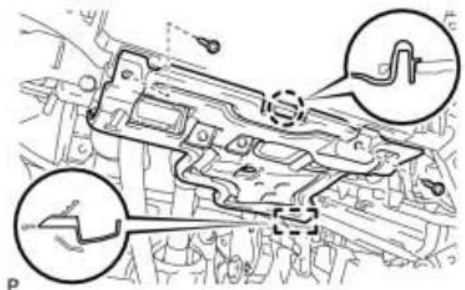

(b) Engage the guide and claw.

(c) Install the No. 1 instrument panel under cover sub-assembly with the 2 screws <D>.


18. INSTALL UPPER STEERING COLUMN COVER_ INFO

19. INSTALL LOWER STEERING COLUMN COVER_ INFO


20. INSTALL NO. 1 SWITCH HOLE BASE

(a) Connect the connector.


(b) Engage the 5 claws to install the No. 1 switch hole base.

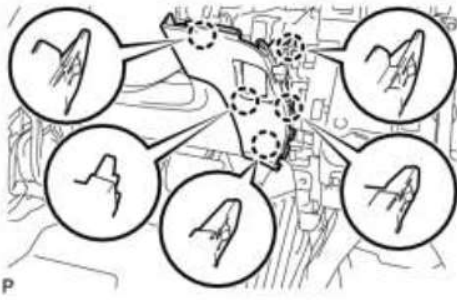


21. INSTALL UPPER INSTRUMENT PANEL FINISH PANEL ASSEMBLY

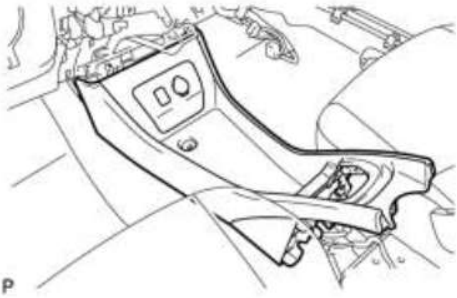

(a) Temporarily install the console box assembly.

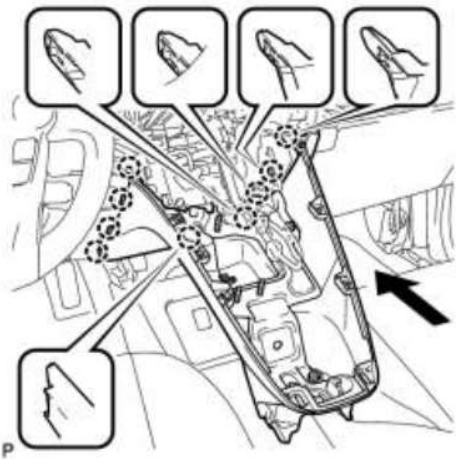

(b) Engage the 9 claws as shown in the illustration.

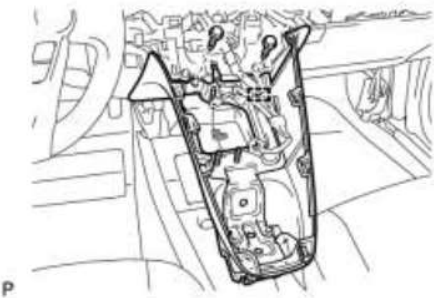


(c) Install the upper instrument panel finish panel assembly with the 2 bolts <A>.

(d) Engage the clamp.


22. INSTALL SHIFT LOCK CONTROL UNIT ASSEMBLY_ INFO23. INSTALL AIR CONDITIONING CONTROL ASSEMBLY_ INFO

24. INSTALL CONSOLE BOX ASSEMBLY

(a) Connect the connector.

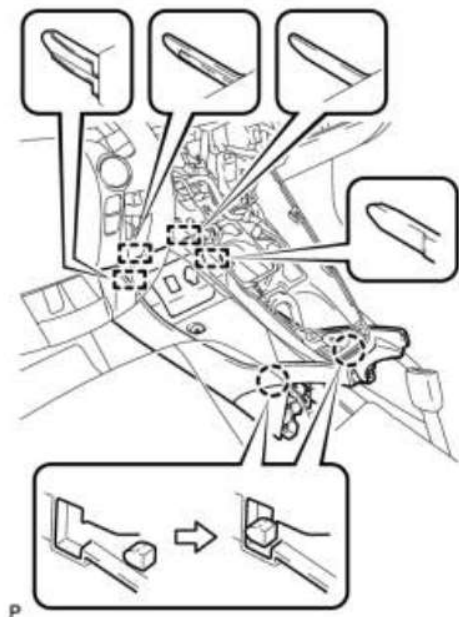


(b) Engage the 4 guides and 2 claws as shown in the illustration.

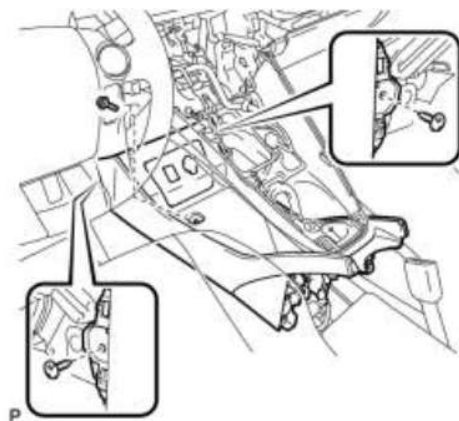


(c) Install the console box assembly with the bolt and 2 clips.

25. INSTALL BOX BOTTOM MAT

(a) Engage the fastener to install the box bottom mat.

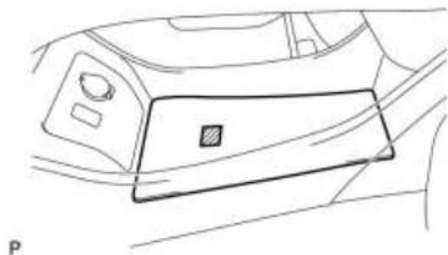


26. INSTALL FRONT NO. 2 CONSOLE BOX INSERT

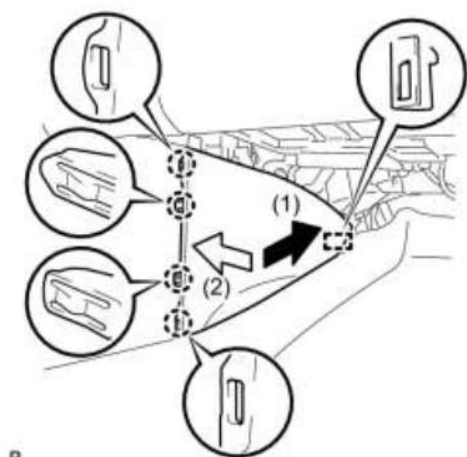

(a) Engage the guide and 4 claws to install the front No. 2 console box insert as shown in the illustration.


27. INSTALL FRONT NO. 1 CONSOLE BOX INSERT

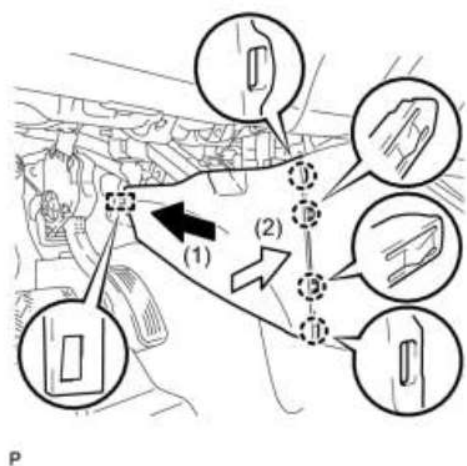

(a) Engage the guide and 4 claws to install the front No. 1 console box insert as shown in the illustration.

28. INSTALL NO. 2 CONSOLE BOX MOUNTING BRACKET

(a) Install the No. 2 console box mounting bracket with the 6 bolts .

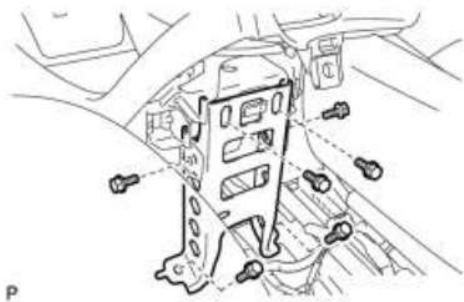

29. INSTALL ELECTRICAL KEY OSCILLATOR_ [INFO](#)

30. INSTALL REAR CONSOLE BOX ASSEMBLY (w/ Power Outlet Socket)_ [INFO](#)

31. INSTALL REAR CONSOLE BOX ASSEMBLY (w/o Power Outlet Socket)_ [INFO](#)

32. INSTALL CONSOLE BOX CARPET_ [INFO](#)

33. INSTALL UPPER CONSOLE PANEL (w/ Power Outlet Socket)_ [INFO](#)

34. INSTALL REAR CONSOLE BOX POCKET (w/ Power Outlet Socket)_ [INFO](#)



35. INSTALL UPPER INSTRUMENT PANEL ASSEMBLY

(a) Install the upper instrument panel assembly_ [INFO](#).

36. INSPECT SHIFT LEVER_ [INFO](#)


COMPONENTS

ILLUSTRATION

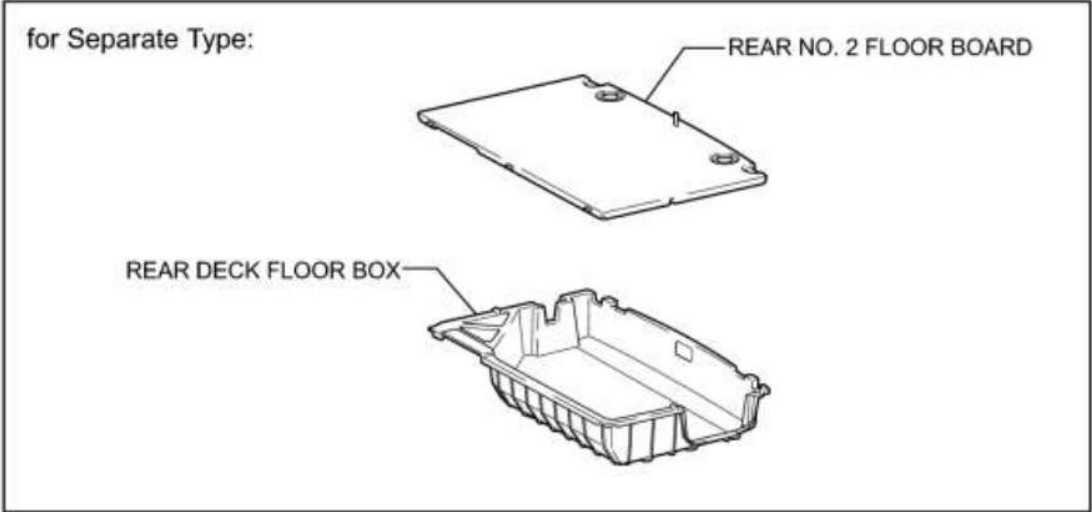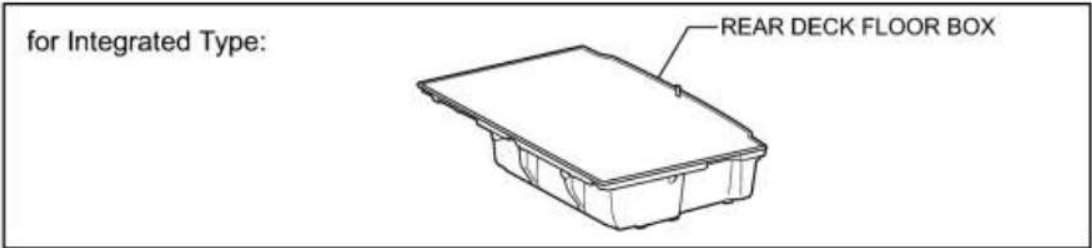

P


ILLUSTRATION

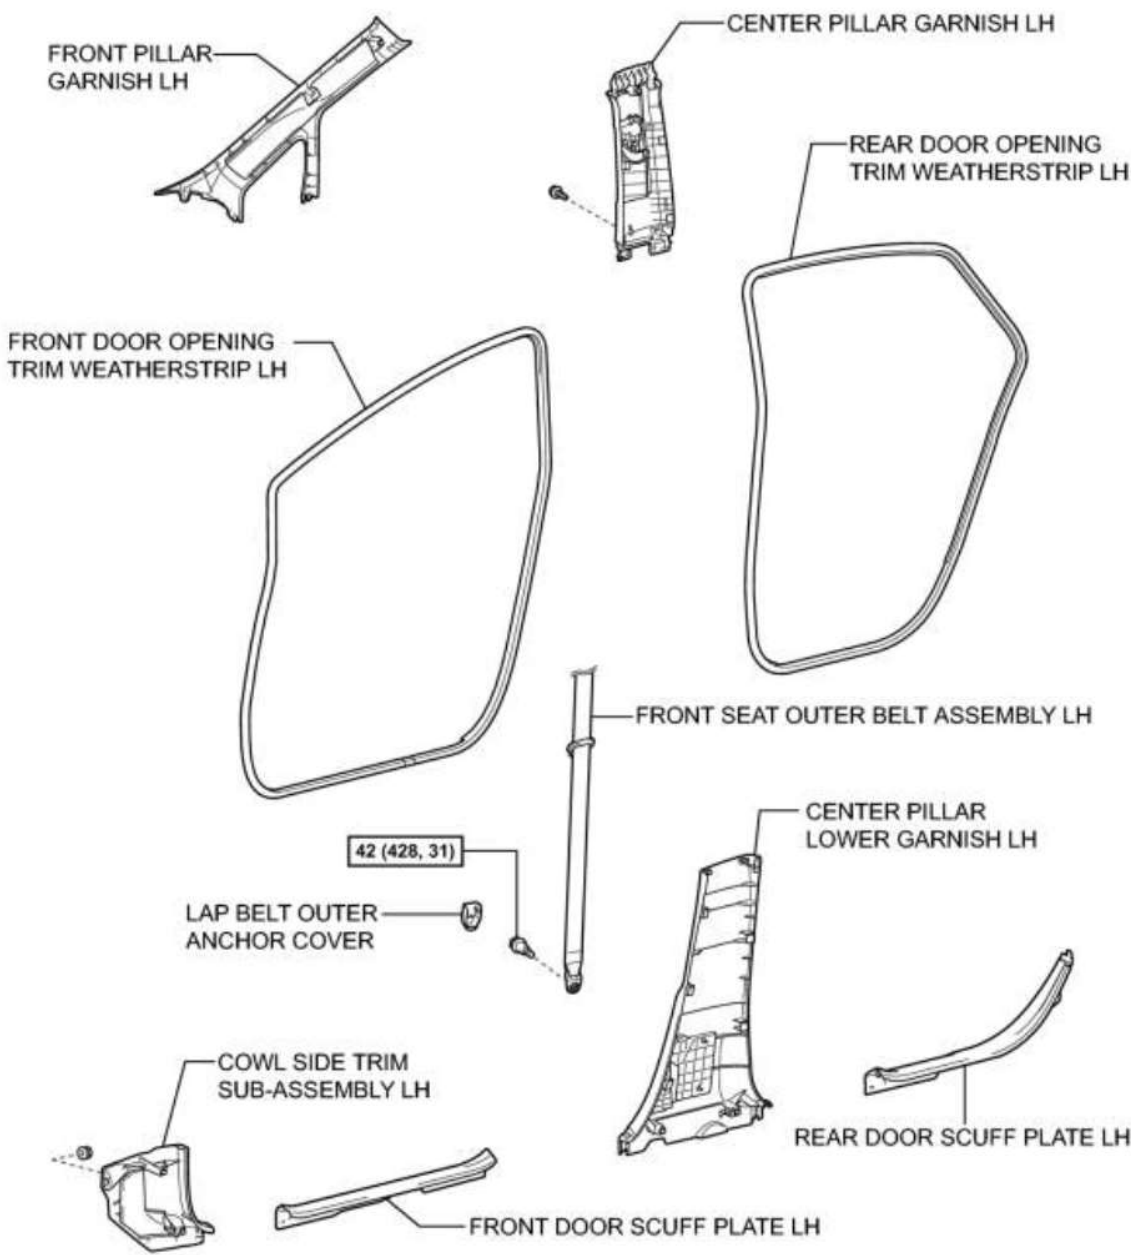

[N*m (kgf*cm, ft.*lbf)]: Specified torque

P


ILLUSTRATION

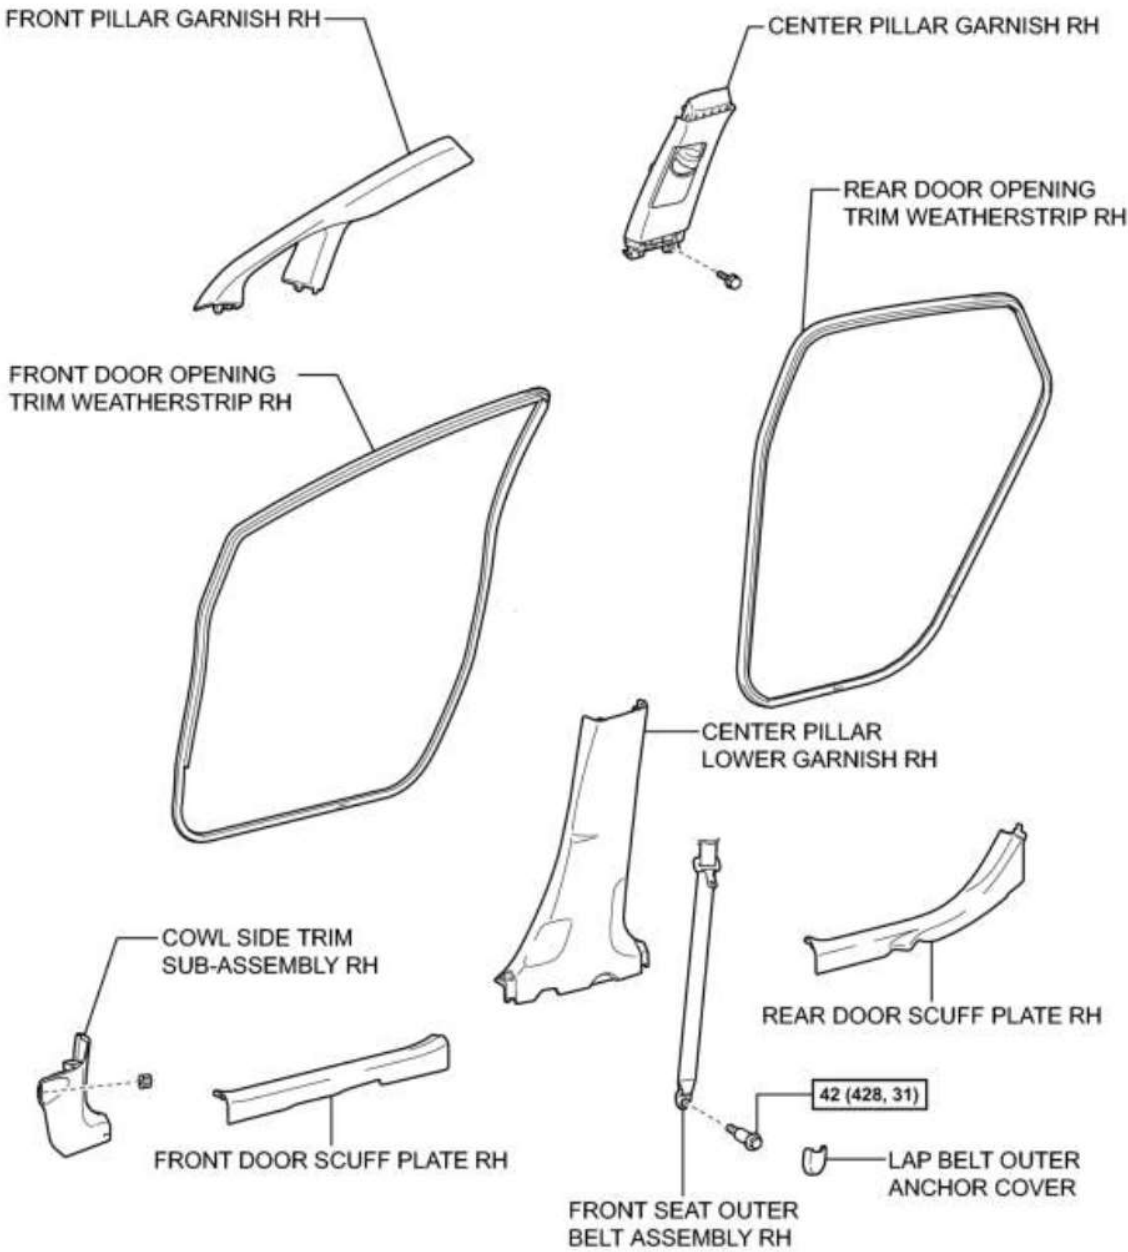

[N*m (kgf*cm, ft.*lbf)]: Specified torque

P


ILLUSTRATION

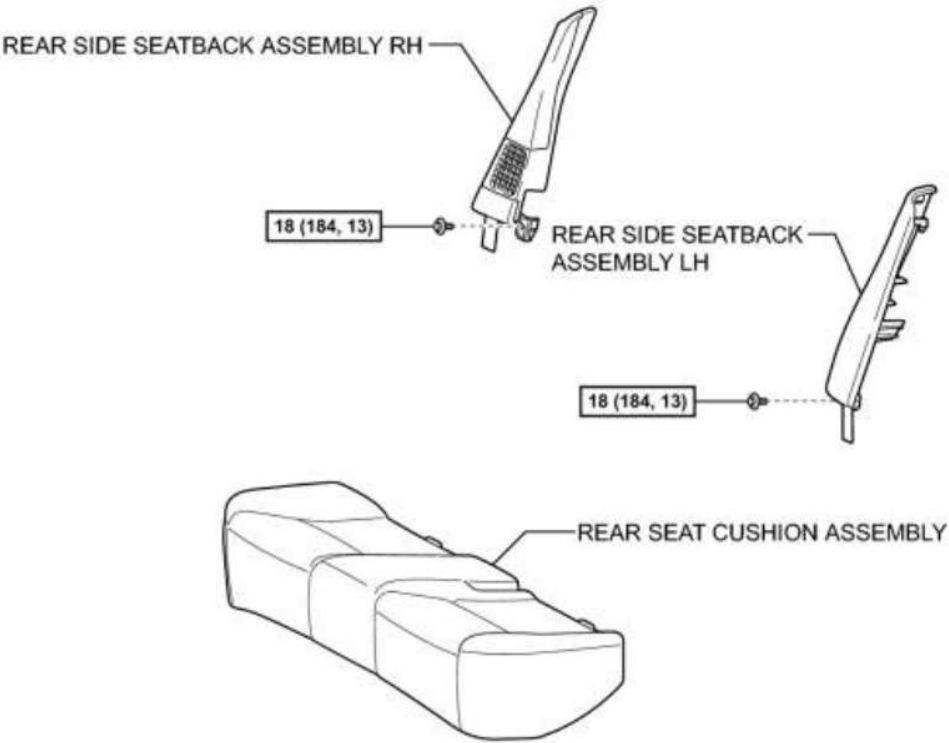

N*m (kgf*cm, ft.*lbf): Specified torque

P


ILLUSTRATION

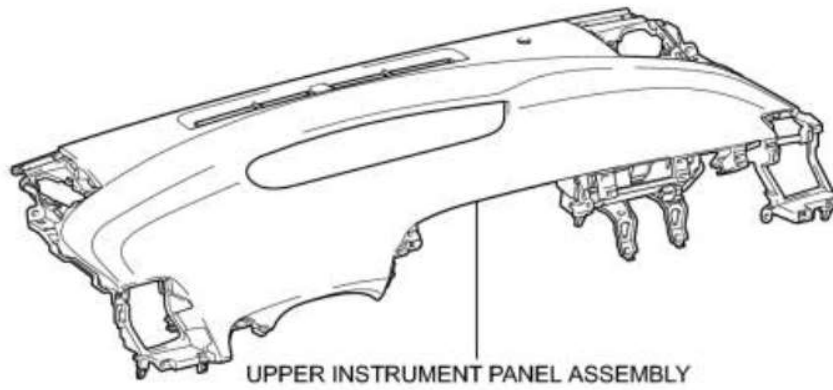

P


ILLUSTRATION

cardiagn.com

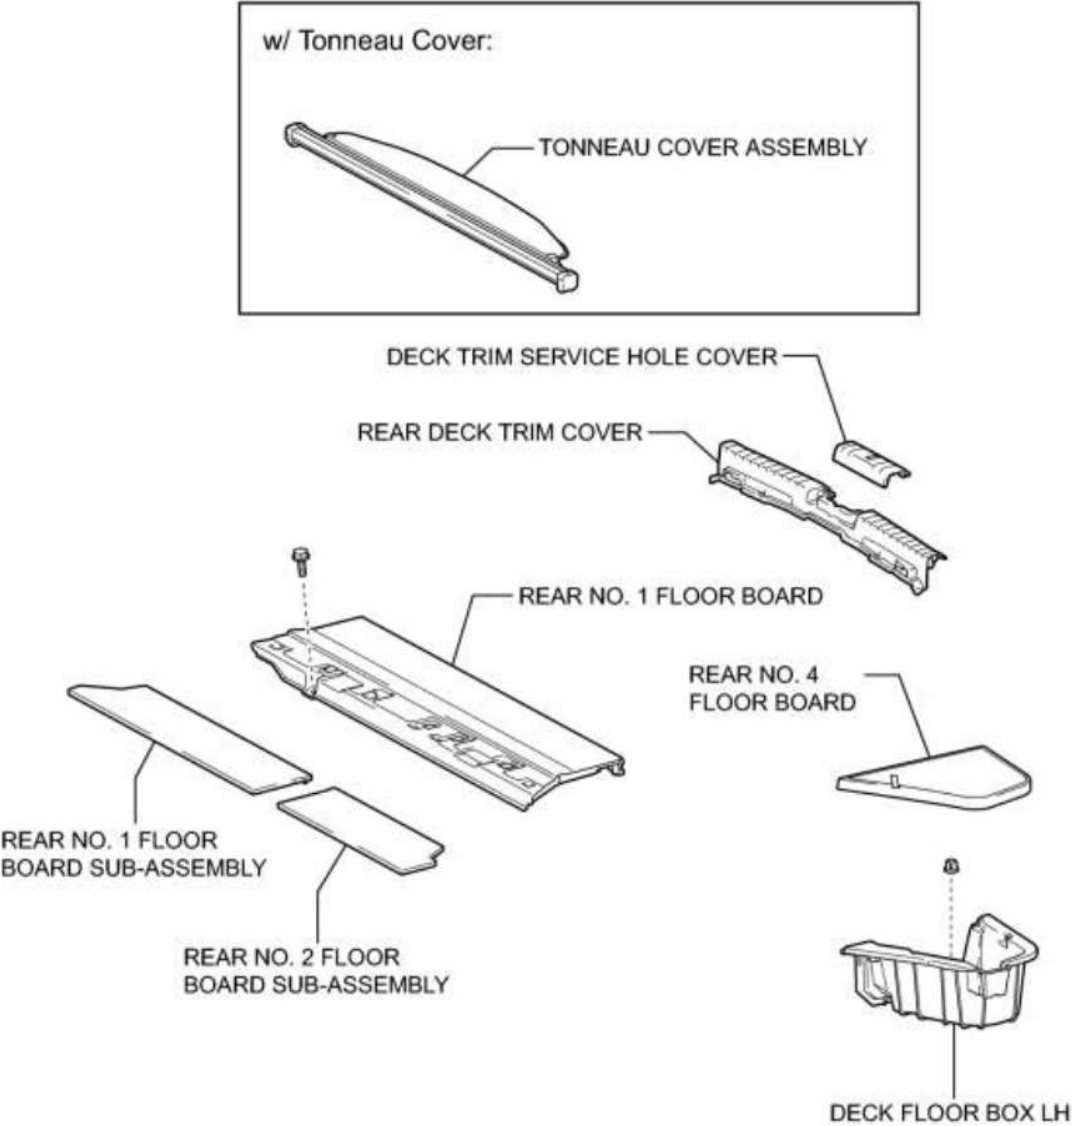

P

ILLUSTRATION

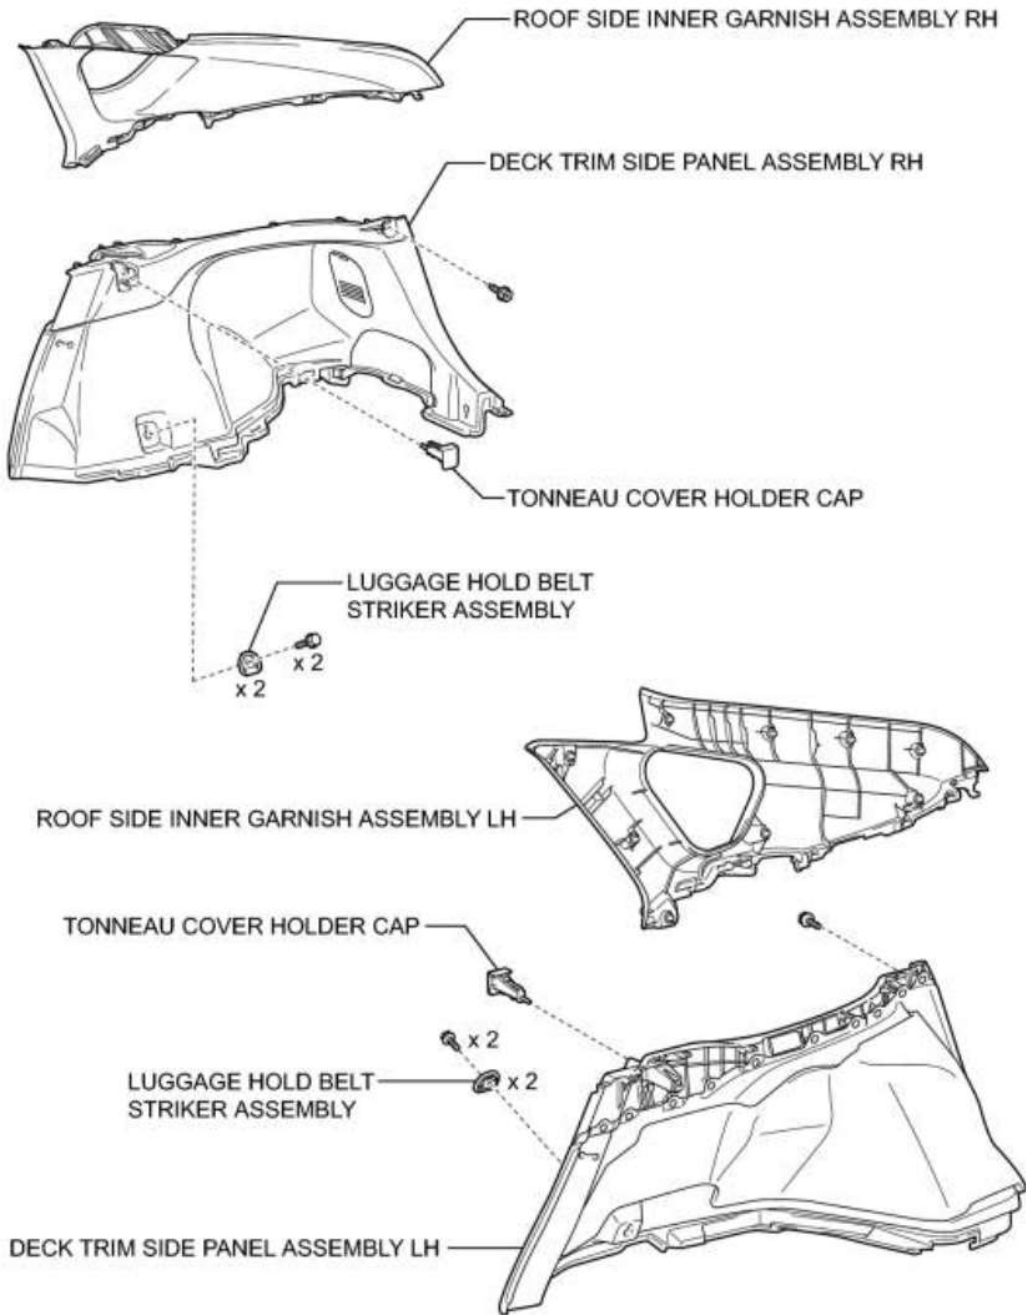

P

ILLUSTRATION

w/o Sliding Roof:




w/o Lane Keeping Assist System:



w/ Sliding Roof:



w/ Lane Keeping Assist System:

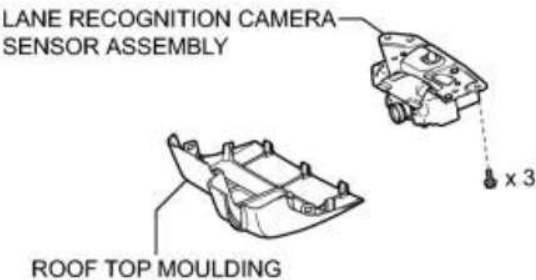

w/ EC Mirror:

w/o Rear View Monitor System:




w/ Rear View Monitor System:



P


ILLUSTRATION

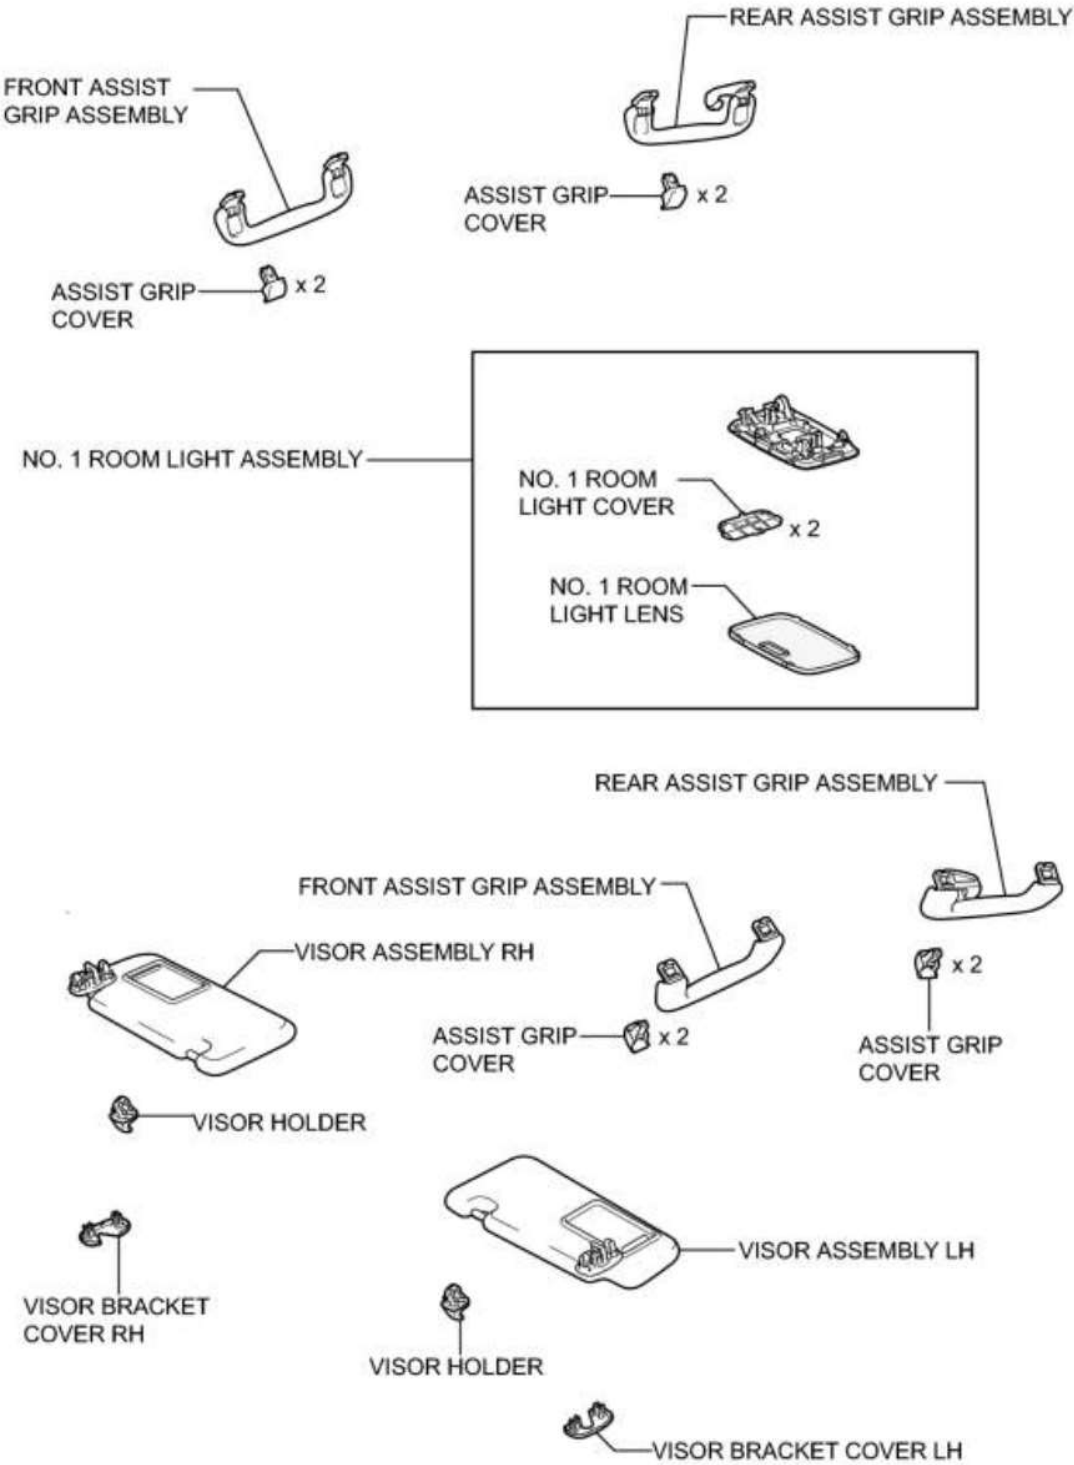


P

ILLUSTRATION

w/o Sliding Roof:


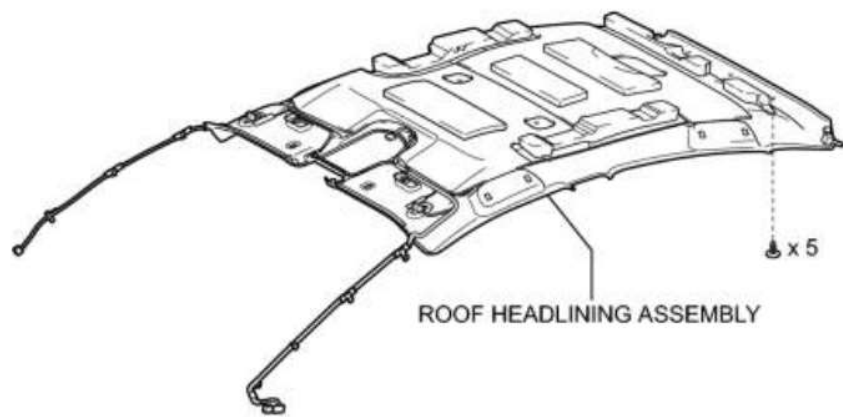


w/ Sliding Roof:

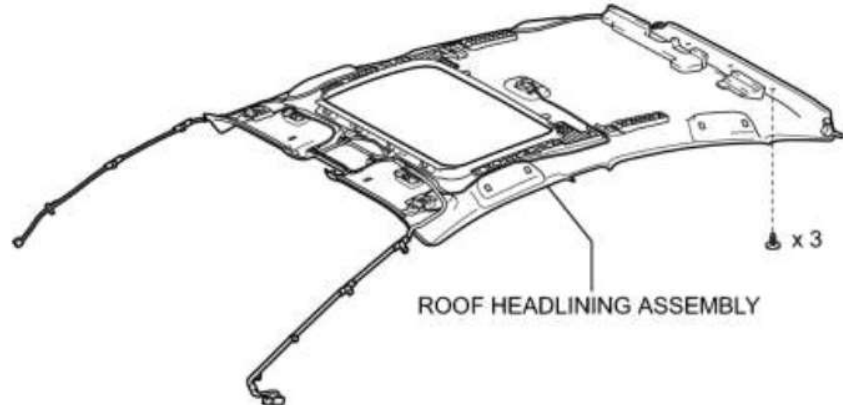


P

ILLUSTRATION

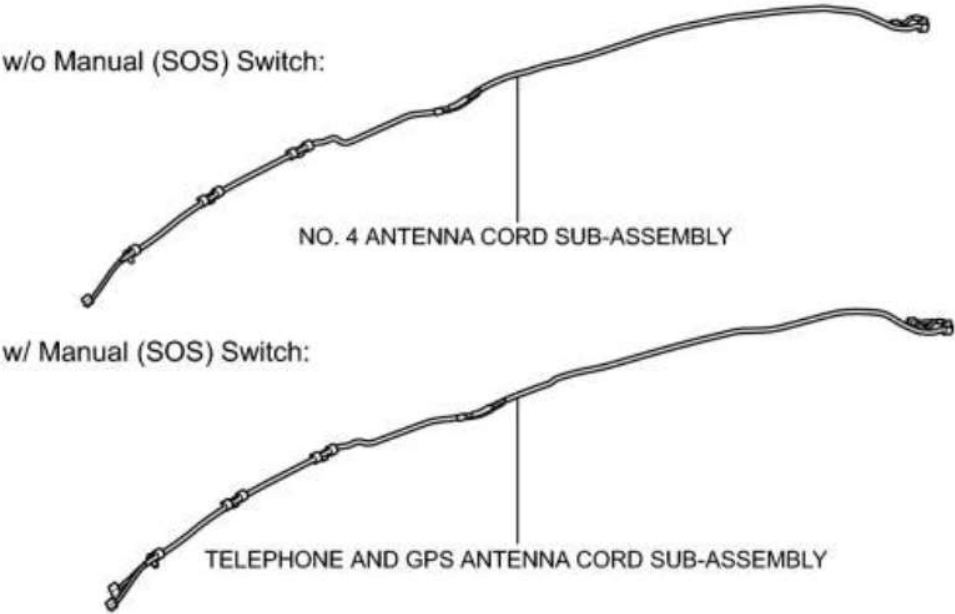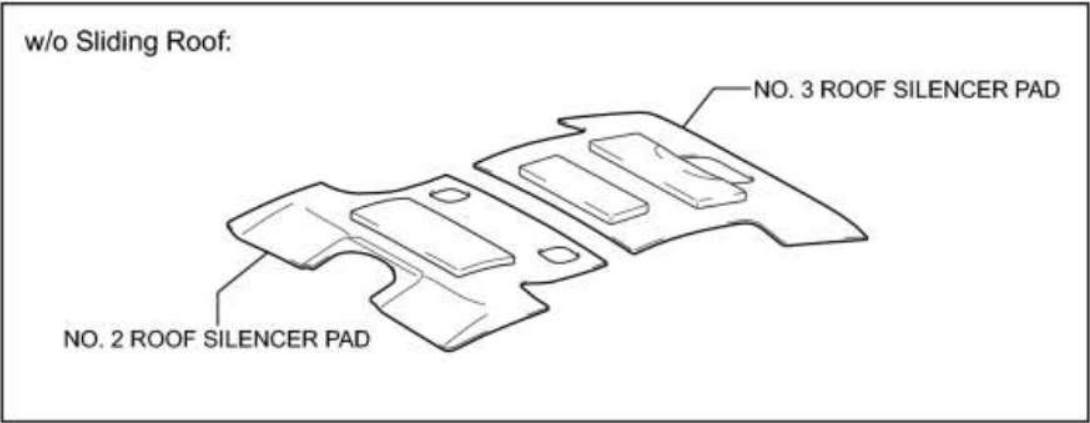

P

ILLUSTRATION

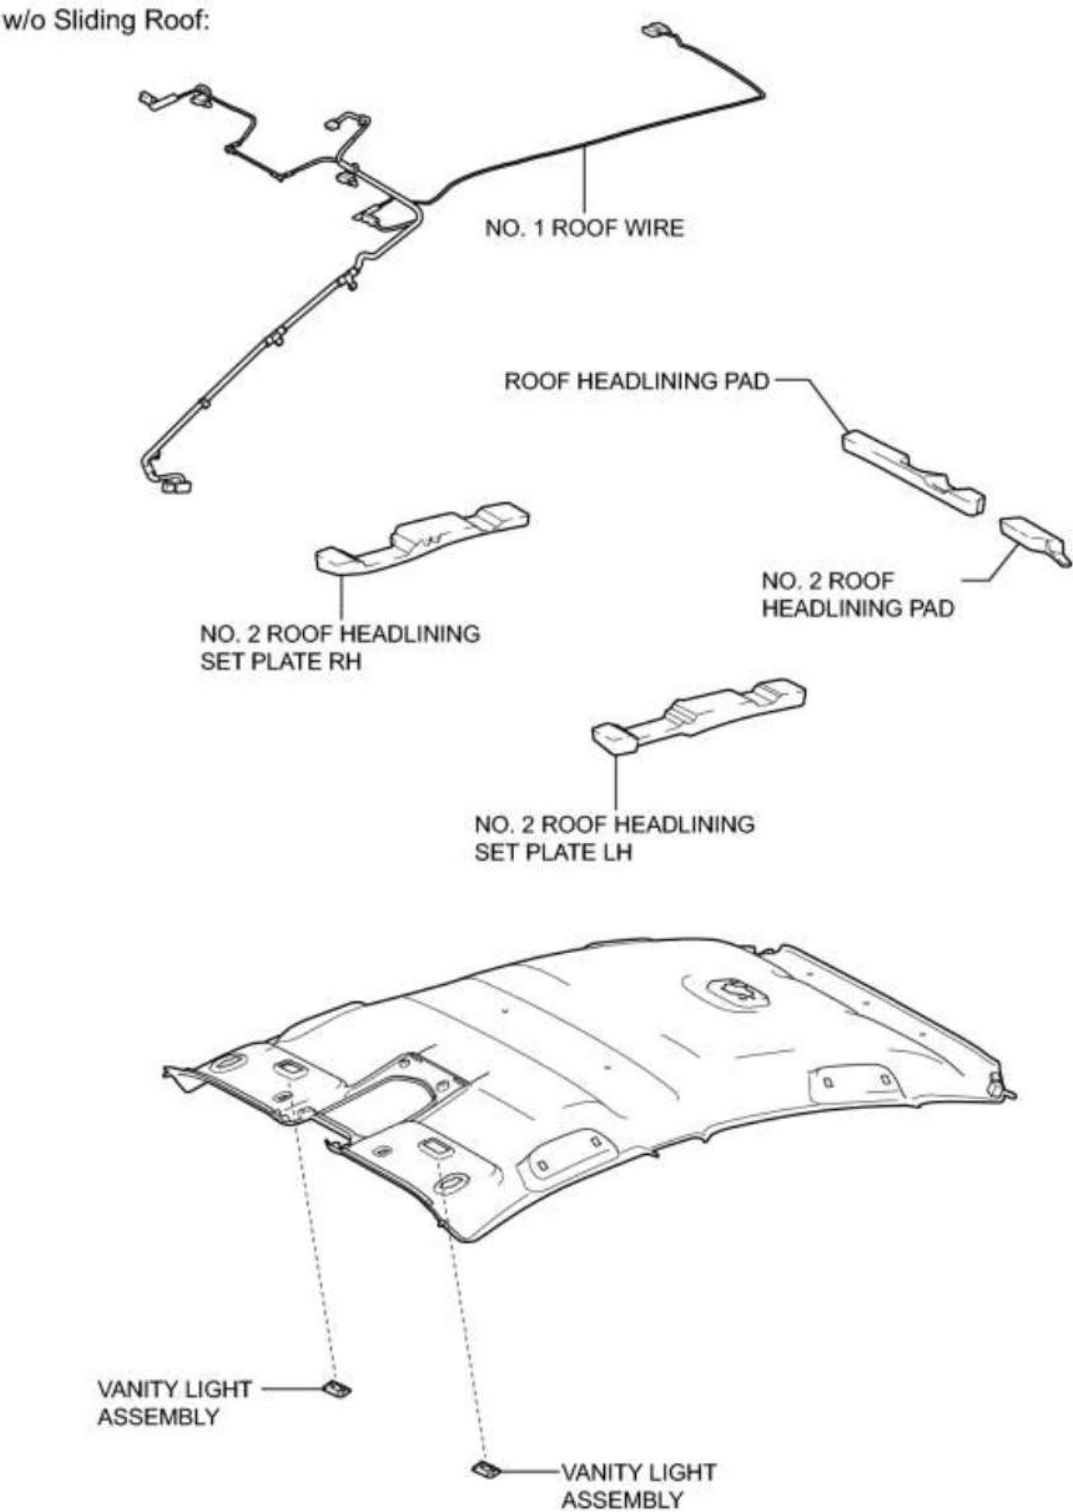


P

ILLUSTRATION

2010 Toyota Prius

Repair Manual

w/ Sliding Roof:

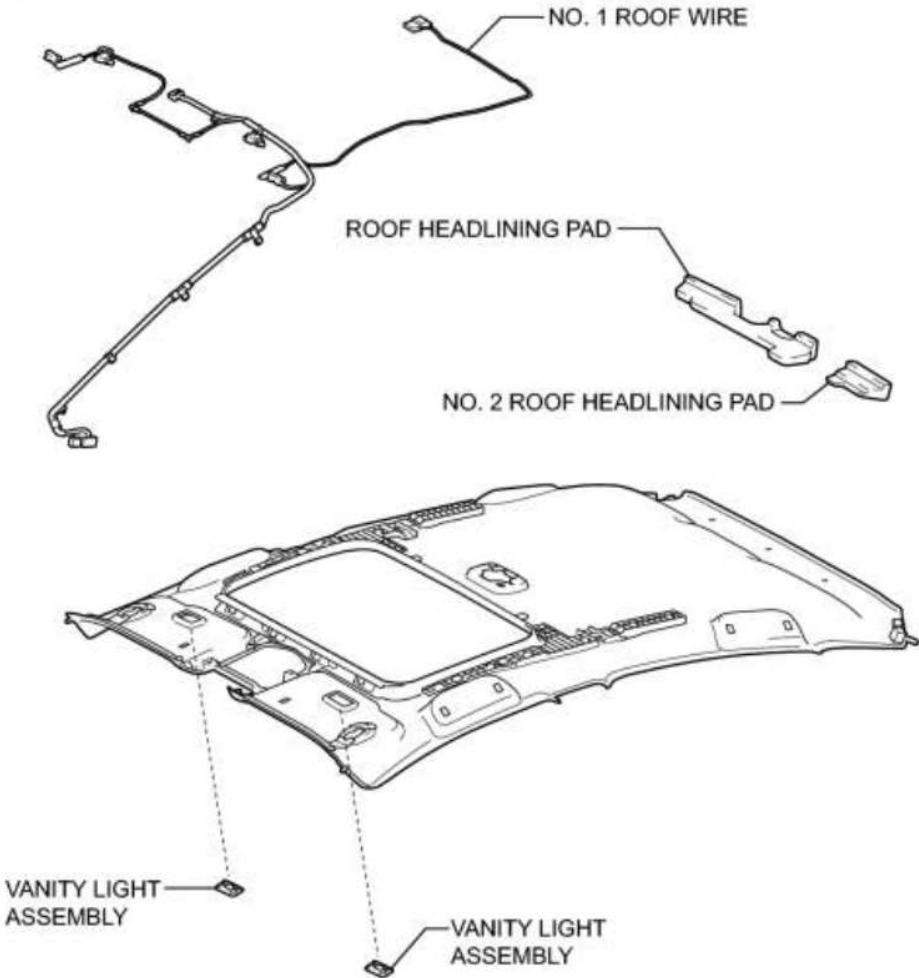


P

cardiagn.com

REMOVAL

1. REMOVE REAR NO. 2 FLOOR BOARD (for Separate Type)

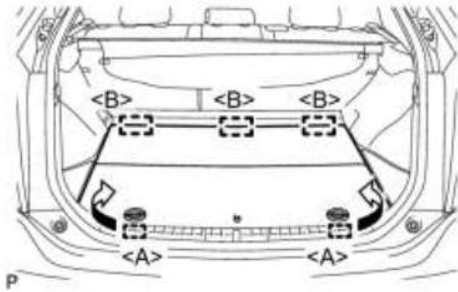

(a) Disengage the 2 guides <A> as shown in the illustration.

(b) Disengage the 3 guides and remove the rear No. 2 floor board.

2. REMOVE REAR DECK FLOOR BOX

(a) Remove the rear deck floor box.

3. REMOVE REAR NO. 3 FLOOR BOARD



(a) Disengage the 2 guides and remove the rear No. 3 floor board.


4. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected INFO.


5. REMOVE FRONT DOOR SCUFF PLATE LH

(a) Disengage the 10 claws and remove the front door scuff plate LH.

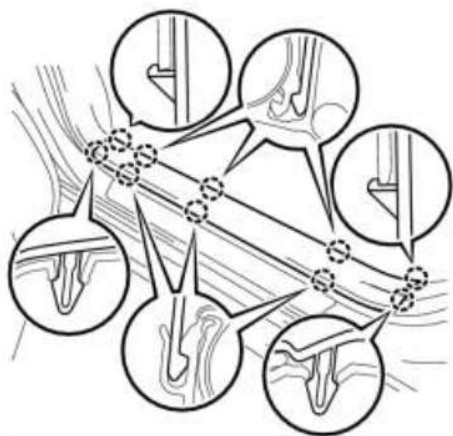

P

6. REMOVE COWL SIDE TRIM SUB-ASSEMBLY LH

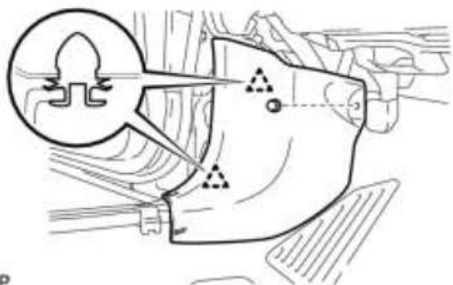


P

(a) Remove the clip.

(b) Disengage the 2 clips and remove the cowl side trim sub-assembly LH.

7. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH

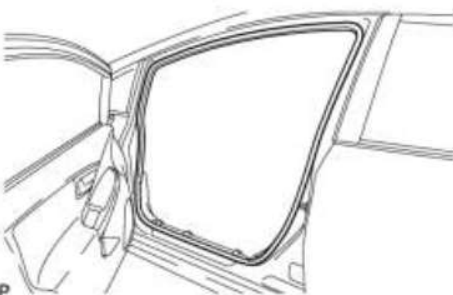


P

(a) Remove the front door opening trim weatherstrip LH.

8. REMOVE FRONT PILLAR GARNISH LH

(a) Pull the upper part of the garnish toward the inside of the cabin and disengage the 2 clips.

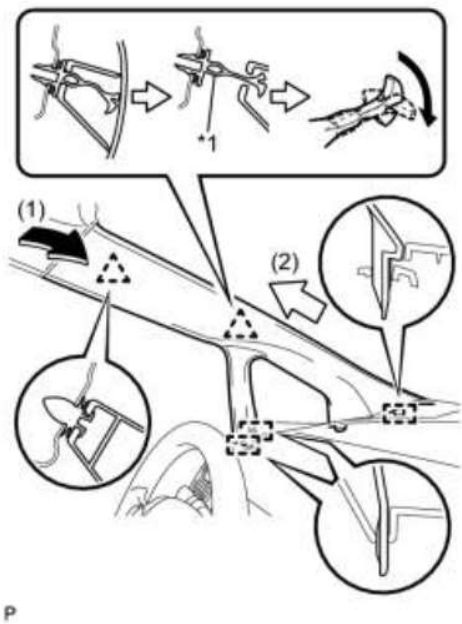

Text in Illustration

*1	Front Pillar Garnish Clip
----	---------------------------

HINT:
Make the front pillar garnish RH hang down from the front pillar garnish clip.

(b) Turn the end of the front pillar garnish clip 90° with needle-nosed pliers and remove it from the front pillar garnish RH.

NOTICE:

- Front pillar garnish clips are reusable if they are not removed from the vehicle and have no damage.
- Replace the front pillar garnish clips with new ones if they are removed from the vehicle.


HINT:

Tape the needle-nosed pliers tip before use.

(c) Disengage the 3 guides and remove the front pillar garnish LH.

(d) Protect the curtain shield airbag assembly.

Text in Illustration

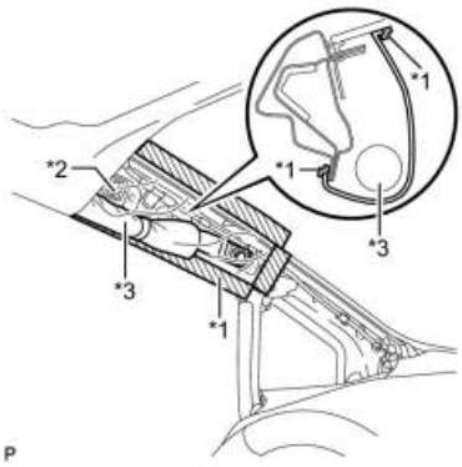

*1	Adhesive Tape
*2	Protective Cover
*3	Curtain Shield Airbag Assembly

(1) Cover the airbag with a cloth or piece of nylon and secure the ends of the cover with tape as shown in the illustration.

NOTICE:


Cover the curtain shield airbag with a protective cover as soon as the front pillar garnish is removed.

9. REMOVE REAR DOOR SCUFF PLATE LH



(a) Disengage the 7 claws and remove the rear door scuff plate LH.

10. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH

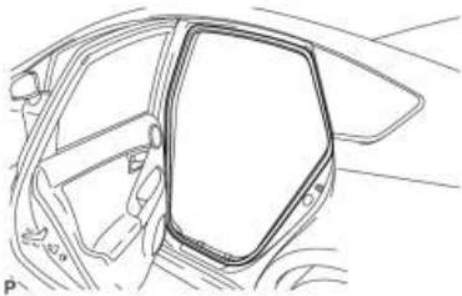


(a) Remove the rear door opening trim weatherstrip LH.

11. REMOVE LAP BELT OUTER ANCHOR COVER (for LH Side) INFO


12. DISCONNECT FRONT SEAT OUTER BELT ASSEMBLY LH INFO

13. REMOVE CENTER PILLAR LOWER GARNISH LH

(a) Disengage the 2 claws and 2 clips, and remove the center pillar lower garnish LH.

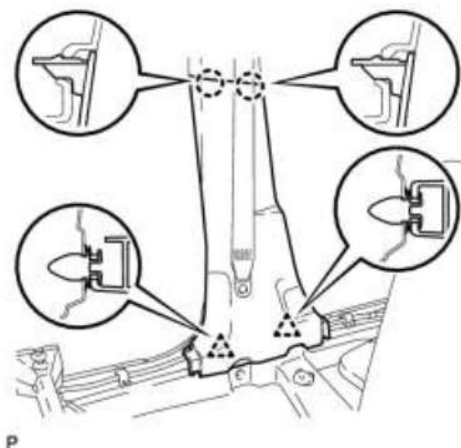

14. REMOVE CENTER PILLAR GARNISH LH

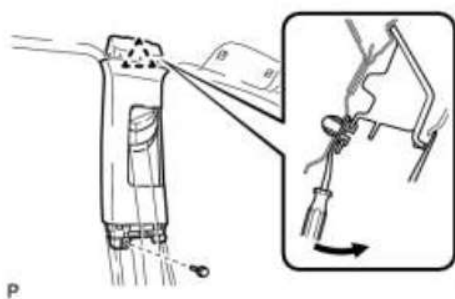

(a) Remove the screw.

(b) Using a clip remover, disengage the clip.

(c) Pass the floor anchor of the front seat outer seat belt assembly LH through the center pillar garnish LH and remove the center pillar garnish LH.

15. REMOVE FRONT DOOR SCUFF PLATE RH

HINT:

Use the same procedure described for the LH side.

16. REMOVE COWL SIDE TRIM SUB-ASSEMBLY RH

HINT:

Use the same procedure described for the LH side.

17. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH

HINT:

Use the same procedure described for the LH side.

18. REMOVE FRONT PILLAR GARNISH RH

HINT:

Use the same procedure described for the LH side.

19. REMOVE REAR DOOR SCUFF PLATE RH

HINT:

Use the same procedure described for the LH side.

20. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH

HINT:

Use the same procedure described for the LH side.

21. REMOVE LAP BELT OUTER ANCHOR COVER (for RH Side)

HINT:

Use the same procedure described for the LH side.

22. DISCONNECT FRONT SEAT OUTER BELT ASSEMBLY RH

HINT:

Use the same procedure described for the LH side.

23. REMOVE CENTER PILLAR LOWER GARNISH RH

HINT:

Use the same procedure described for the LH side.

24. REMOVE CENTER PILLAR GARNISH RH

HINT:

Use the same procedure described for the LH side.

25. REMOVE REAR SEAT CUSHION ASSEMBLY

26. REMOVE REAR SIDE SEATBACK ASSEMBLY LH

27. REMOVE REAR SIDE SEATBACK ASSEMBLY RH

28. REMOVE UPPER INSTRUMENT PANEL ASSEMBLY

(a) Remove the upper instrument panel assembly .

2010 Toyota Prius

Repair Manual

29. REMOVE TONNEAU COVER ASSEMBLY (w/ Tonneau Cover)

(a) Remove the tonneau cover assembly.

30. REMOVE REAR NO. 4 FLOOR BOARD



(a) Disengage the guide and remove the rear No. 4 floor board.


31. REMOVE DECK FLOOR BOX LH



(a) Remove the clip.


(b) Disengage the 2 guides and remove the deck floor box LH.

32. REMOVE REAR NO. 1 FLOOR BOARD SUB-ASSEMBLY

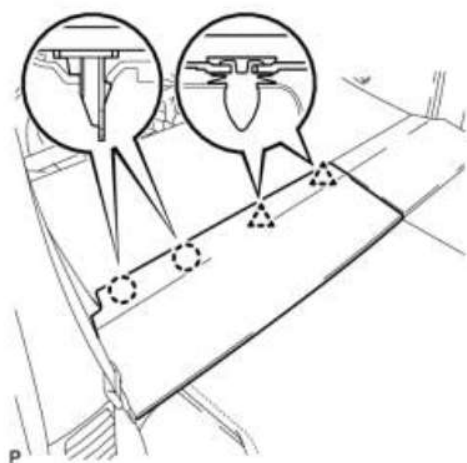


(a) Disengage the 2 claws and 2 clips, and remove the rear No. 1 floor board sub-assembly.

33. REMOVE REAR NO. 2 FLOOR BOARD SUB-ASSEMBLY

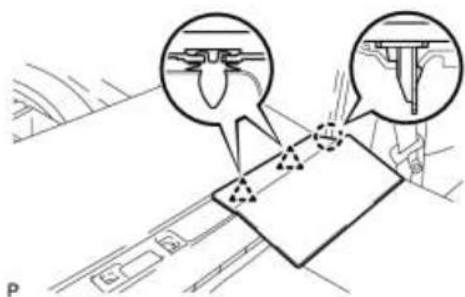

(a) Disengage the claw and 2 clips, and remove the rear No. 2 floor board sub-assembly.


34. REMOVE REAR NO. 1 FLOOR BOARD

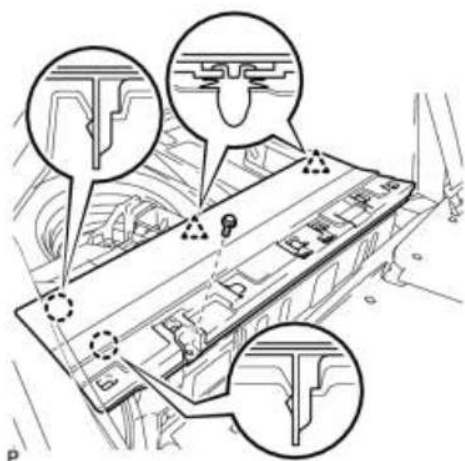

(a) Remove the bolt.

(b) Disengage the 2 claws and 2 clips, and remove the rear No. 1 floor board.


35. REMOVE DECK TRIM SERVICE HOLE COVER

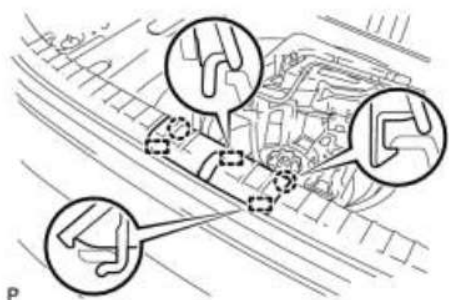

(a) Disengage the 2 claws and 3 guides, and remove the deck trim service hole cover.


36. REMOVE REAR DECK TRIM COVER

(a) Disengage the 4 claws and 4 guides, and remove the rear deck trim

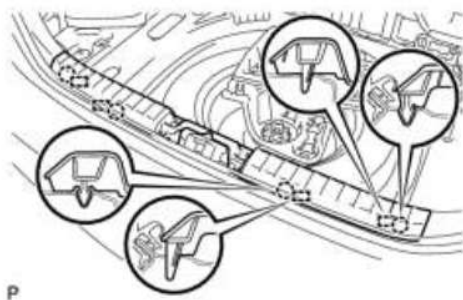

cover.


37. REMOVE LUGGAGE HOLD BELT STRIKER ASSEMBLY (for LH Side)

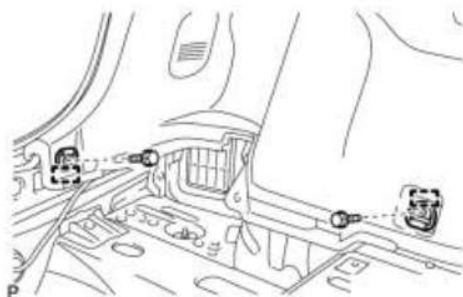

(a) Remove the 2 bolts.

(b) Disengage each guide and remove the 2 luggage hold belt striker assemblies.

38. REMOVE TONNEAU COVER HOLDER CAP (for LH Side)

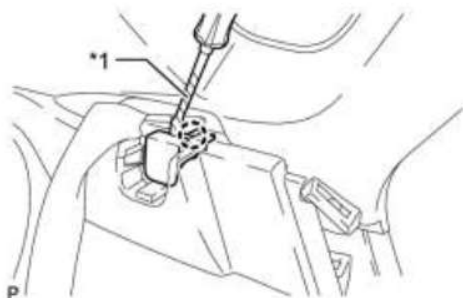

(a) Using a screwdriver, disengage the claw and remove the tonneau cover holder cap.

Text in Illustration

*1	Protective Tape
----	-----------------

HINT:


Tape the screwdriver tip before use.

39. REMOVE DECK TRIM SIDE PANEL ASSEMBLY LH

(a) Remove the screw.


(b) Disengage the 7 claws and 2 clips.

(c) Disconnect the connector and remove the deck trim side panel assembly LH.

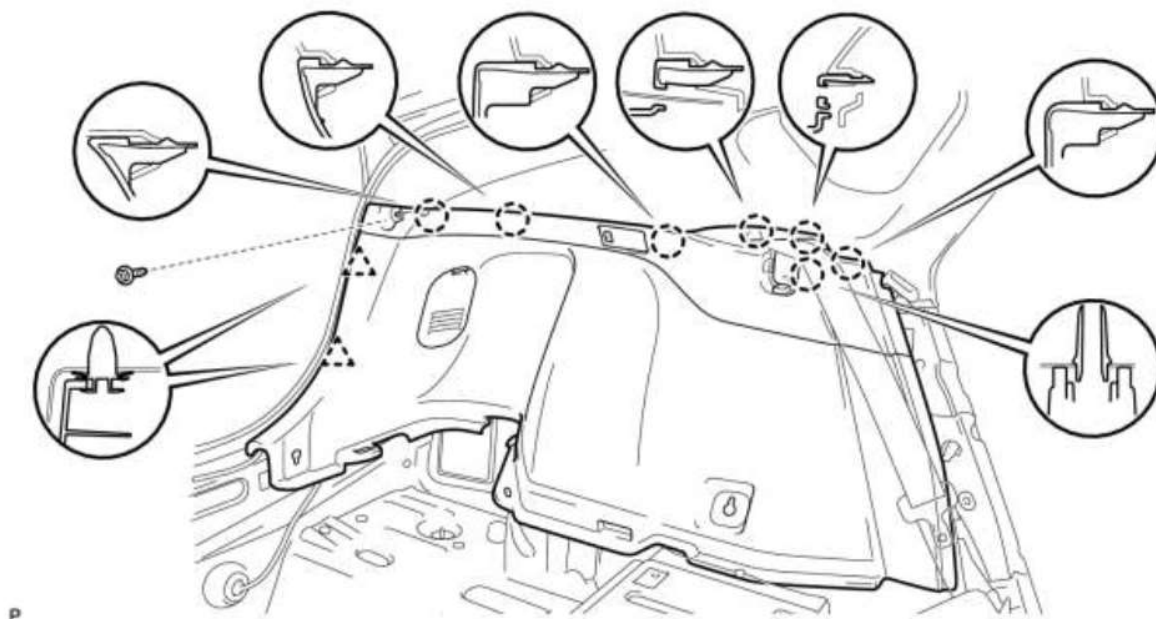

40. REMOVE ROOF SIDE INNER GARNISH ASSEMBLY LH

(a) Disengage the 9 clips and remove the roof side inner garnish assembly LH.

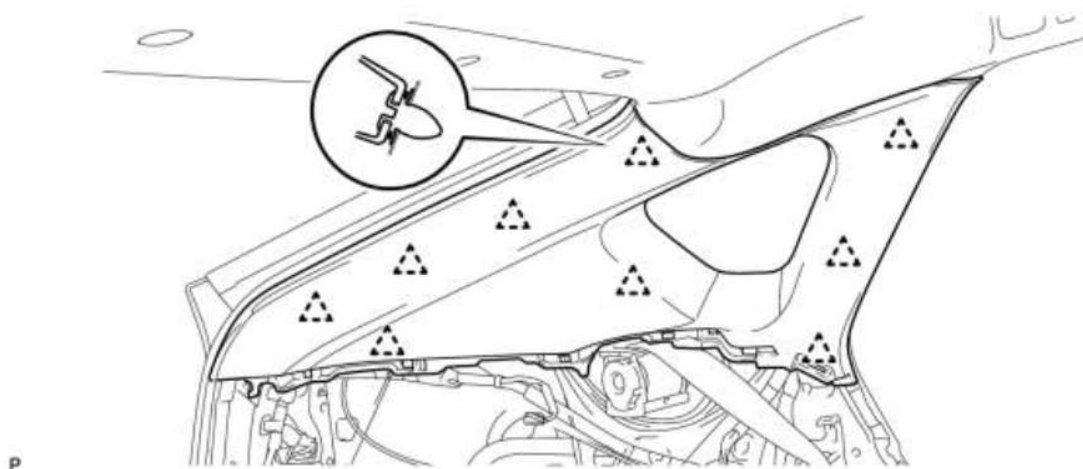

41. REMOVE LUGGAGE HOLD BELT STRIKER ASSEMBLY (for RH Side)

HINT:

Use the same procedure described for the LH side.

42. REMOVE TONNEAU COVER HOLDER CAP (for RH Side)


HINT:

Use the same procedure described for the LH side.

43. REMOVE DECK TRIM SIDE PANEL ASSEMBLY RH

(a) Remove the screw.

(b) Disengage the 7 claws and 2 clips, and remove the deck trim side panel assembly RH.

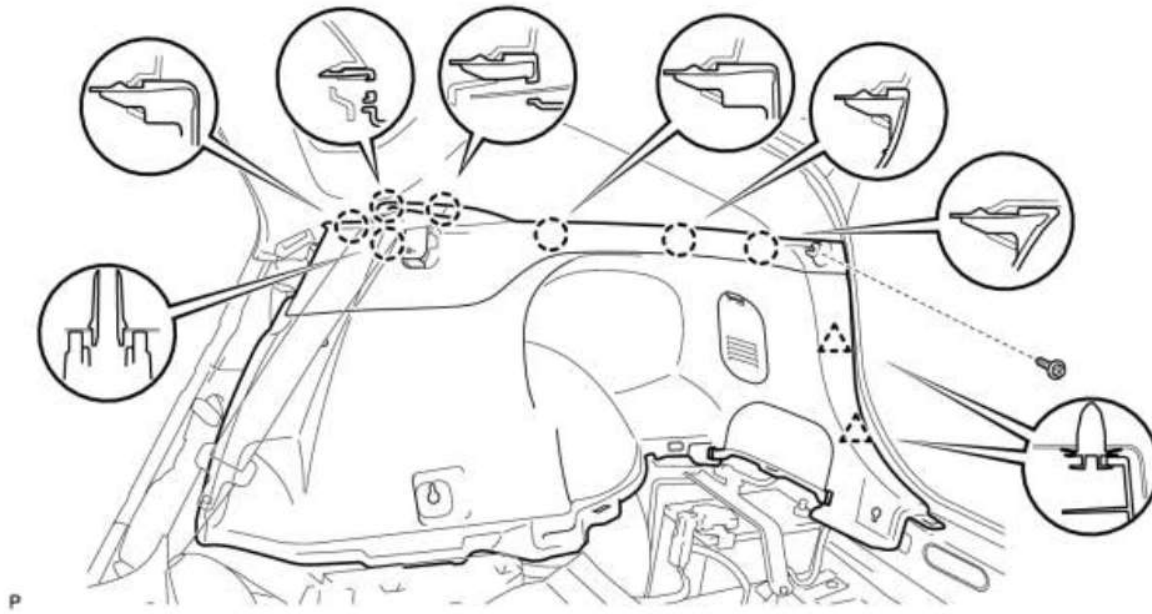


44. REMOVE ROOF SIDE INNER GARNISH ASSEMBLY RH

HINT:

Use the same procedure described for the LH side.

45. REMOVE INNER REAR VIEW MIRROR COVER (w/ EC Mirror) INFO

46. REMOVE ROOF TOP MOULDING (w/o Lane Keeping Assist System)

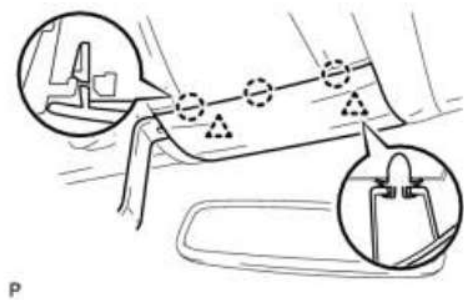


(a) Using a moulding remover, disengage the 3 claws and 2 clips, and remove the roof top moulding.

47. REMOVE ROOF TOP MOULDING (w/ Lane Keeping Assist System)

2010 Toyota Prius

Repair Manual

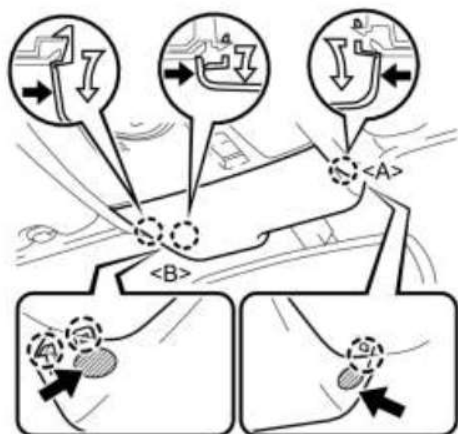

(a) Disengage the claw <A> as shown in the illustration.

(b) Disengage the 2 claws as shown in the illustration.



(c) Disengage the 3 claws and remove the roof top moulding.

48. REMOVE LANE RECOGNITION CAMERA SENSOR ASSEMBLY (w/ Lane Keeping Assist System)

INFO

49. REMOVE MAP LIGHT ASSEMBLY (w/o Sliding Roof)

INFO

50. REMOVE MAP LIGHT ASSEMBLY (w/ Sliding Roof)

INFO

51. REMOVE NO. 1 ROOM LIGHT ASSEMBLY

INFO

52. REMOVE FRONT ASSIST GRIP ASSEMBLY

(a) Using a clip remover, disengage the 4 claws.

NOTICE:


Do not forcibly pry the assist grip covers to prevent them from being deformed.

- Gently pry on the assist grip covers as shown in the illustration to remove them.



- Tape the clip remover tip before use.

(b) Pull off the 2 assist grip covers by hand.

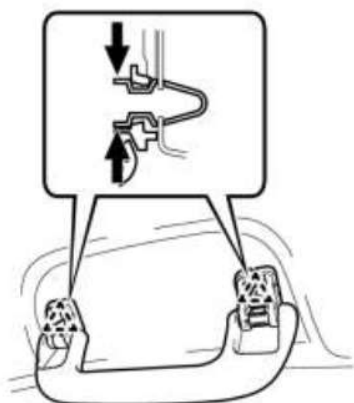

(c) Disengage the 2 clips and remove the front assist grip assembly.

(d) Remove the 2 clips from the vehicle body.

HINT:

Use the same procedure for the other front assist grip.

53. REMOVE REAR ASSIST GRIP ASSEMBLY

(a) Using a clip remover, disengage the 4 claws.

NOTICE:


Do not forcibly pry the assist grip covers to prevent them from being



deformed.

- Gently pry on the assist grip covers as shown in the illustration to remove them.
- Tape the clip remover tip before use.

(b) Pull off the 2 assist grip covers by hand.

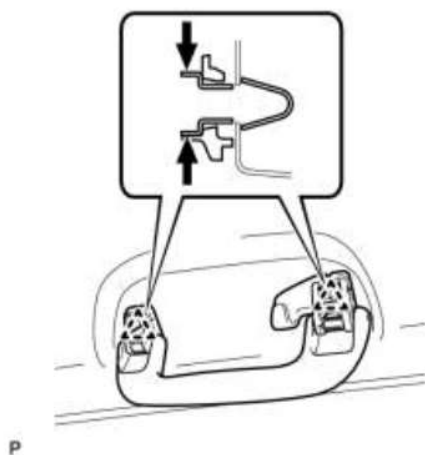

(c) Disengage the 2 clips and remove the rear assist grip assembly.


(d) Remove the 2 clips from the vehicle body.

HINT:


Use the same procedure for the other rear assist grip.

54. REMOVE VISOR BRACKET COVER LH

(a) Using a moulding remover, disengage the 3 claws and remove the visor bracket cover LH.

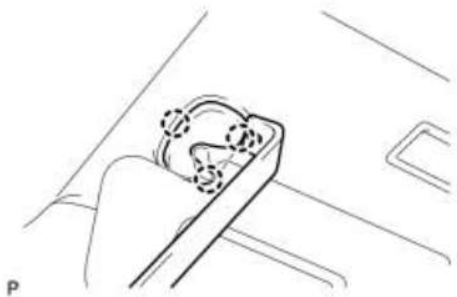

55. REMOVE VISOR ASSEMBLY LH

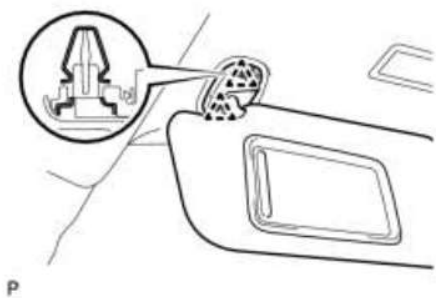

(a) Disengage the 2 clips and remove the visor assembly LH.

56. REMOVE VISOR BRACKET COVER RH

HINT:

Use the same procedure described for the LH side.


57. REMOVE VISOR ASSEMBLY RH

HINT:

Use the same procedure described for the LH side.

58. REMOVE VISOR HOLDER

(a) Turn the visor holder approximately 45° and pull it out as shown in the illustration.

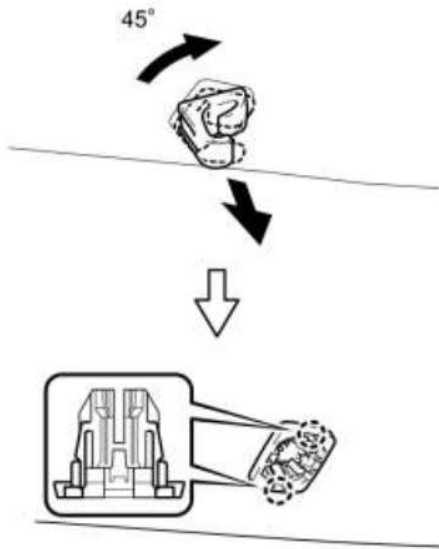

P

(b) Disengage the 2 claws and remove the visor holder.

HINT:

Use the same procedure for the other visor holder.

59. REMOVE ROOF HEADLINING ASSEMBLY (w/o Sliding Roof)

(a) w/ EC Mirror:

(1) Disengage the 2 clamps and disconnect the inner rear view mirror connector.

(b) w/ Lane Keeping Assist System:

(1) Disengage the clamp and disconnect the inner rear view mirror connector.

(c) w/o Manual (SOS) Switch:

(1) Disengage the 3 clamps and disconnect the connector from the front pillar RH.

(2) Disengage the clamp and disconnect the connector from the rear pillar RH.

(d) w/ Manual (SOS) Switch:


(1) Disengage the 3 clamps and disconnect the 2 connectors from the front pillar RH.

(2) Disengage the clamp and disconnect the 2 connectors from the rear pillar RH.

(e) Disengage the 4 clamps from the front pillar LH.

(f) Disconnect the 2 No. 1 roof wire connectors from the connector holder.

(g) Remove the 5 clips.

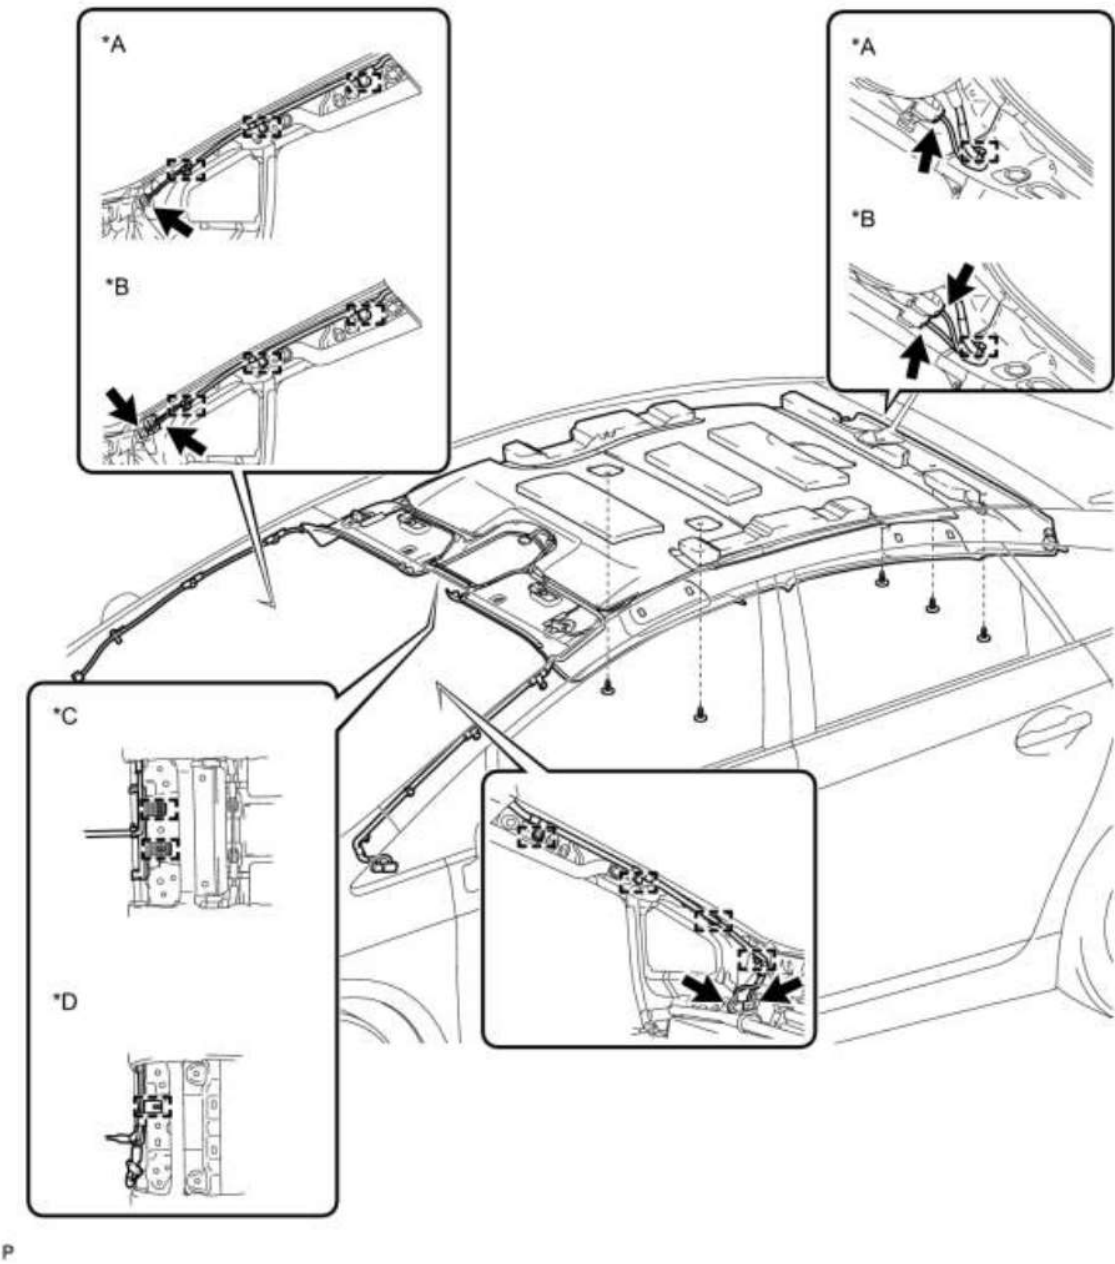


Text in Illustration

*A	w/o Manual (SOS) Switch	*B	w/ Manual (SOS) Switch
*C	w/ EC Mirror	*D	w/ Lane Keeping Assist System

(h) Remove the roof headlining assembly from the vehicle through the back door.

NOTICE:

Do not damage the roof headlining assembly or body interior.

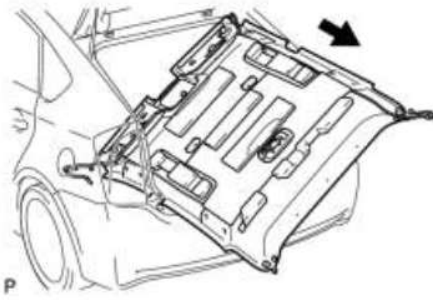

60. REMOVE ROOF HEADLINING ASSEMBLY (w/ Sliding Roof)

(a) w/ EC Mirror:

(1) Disengage the 2 clamps and disconnect the inner rear view mirror connector.

(b) w/o Manual (SOS) Switch:

(1) Disengage the 3 clamps and disconnect the connector from the front pillar RH.

(2) Disengage the clamp and disconnect the connector from the rear pillar RH.

(c) w/ Manual (SOS) Switch:


(1) Disengage the 3 clamps and disconnect the 2 connectors from the front pillar RH.

(2) Disengage the clamp and disconnect the 2 connectors from the rear pillar RH.

(d) Disengage the 4 clamps from the front pillar LH.

(e) Disconnect the 2 No. 1 roof wire connectors from the connector holder.

(f) Remove the 3 clips.


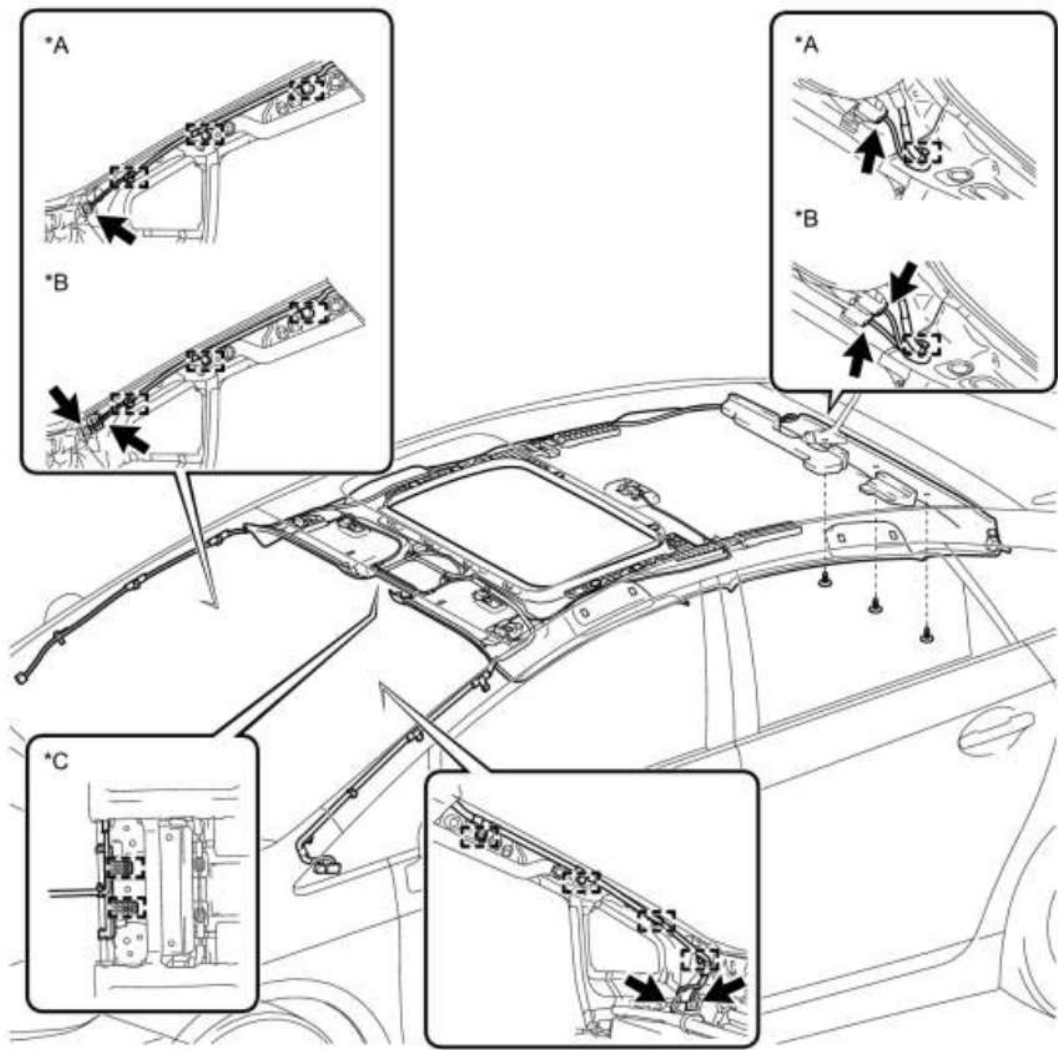


P

Text in Illustration

*A	w/o Manual (SOS) Switch	*B	w/ Manual (SOS) Switch
*C	w/ EC Mirror	-	-

(g) Disengage the 6 fasteners.

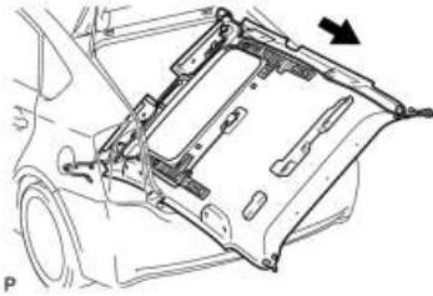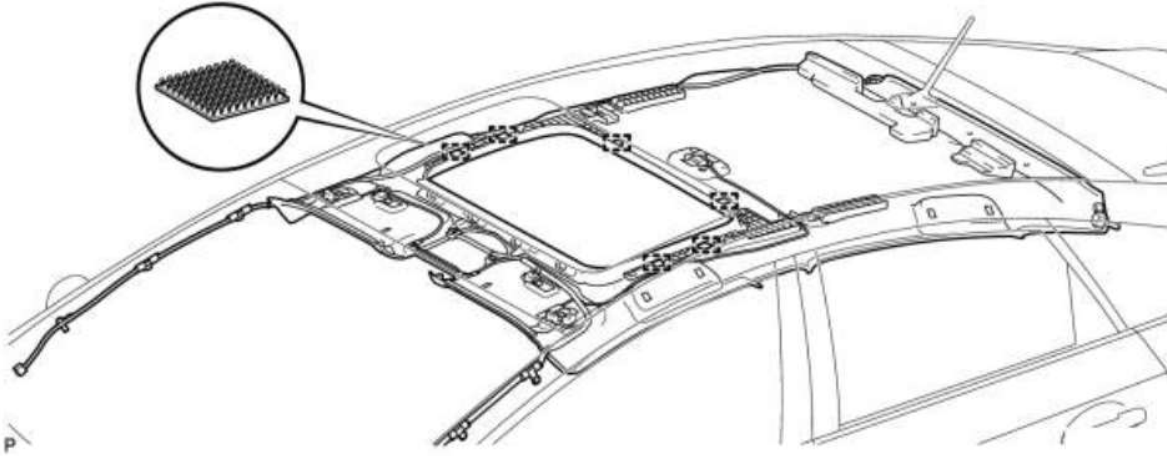

(h) Remove the roof headlining assembly from the vehicle through the back door.

NOTICE:

Do not damage the roof headlining assembly or body interior.

DISASSEMBLY

1. REMOVE VANITY LIGHT ASSEMBLY


- (a) Remove the vanity light assembly INFO.

HINT:

Use the same procedure for the other vanity light.

2. REMOVE NO. 2 ROOF SILENCER PAD (w/o Sliding Roof)


- (a) Remove the No. 2 roof silencer pad from the roof headlining assembly.

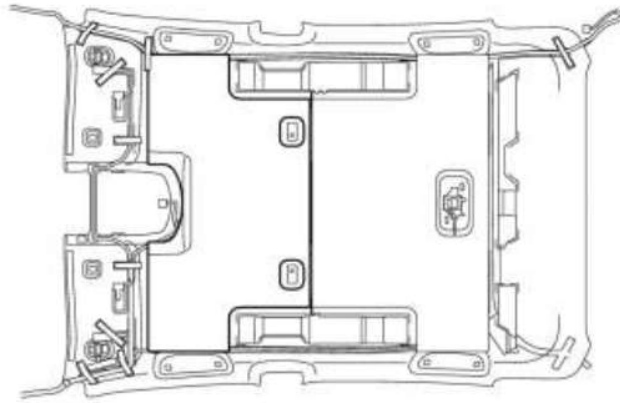

P


3. REMOVE NO. 3 ROOF SILENCER PAD (w/o Sliding Roof)

- (a) Remove the No. 3 roof silencer pad from the roof headlining assembly.

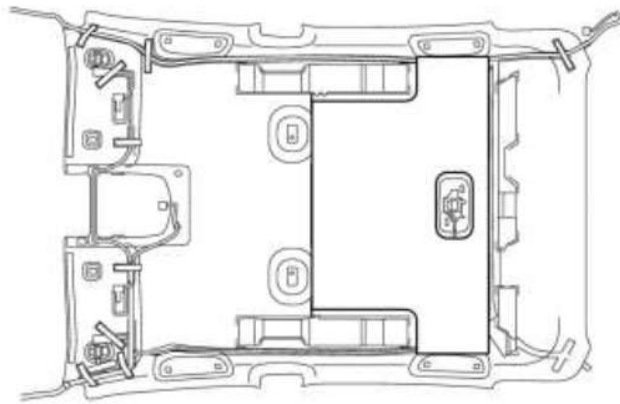

P

4. REMOVE NO. 4 ANTENNA CORD SUB-ASSEMBLY (w/o Manual (SOS) Switch) INFO
5. REMOVE TELEPHONE AND GPS ANTENNA CORD SUB-ASSEMBLY (w/ Manual (SOS) Switch) INFO
6. REMOVE NO. 1 ROOF WIRE
- (a) Remove the adhesive tape from the roof headlining assembly.

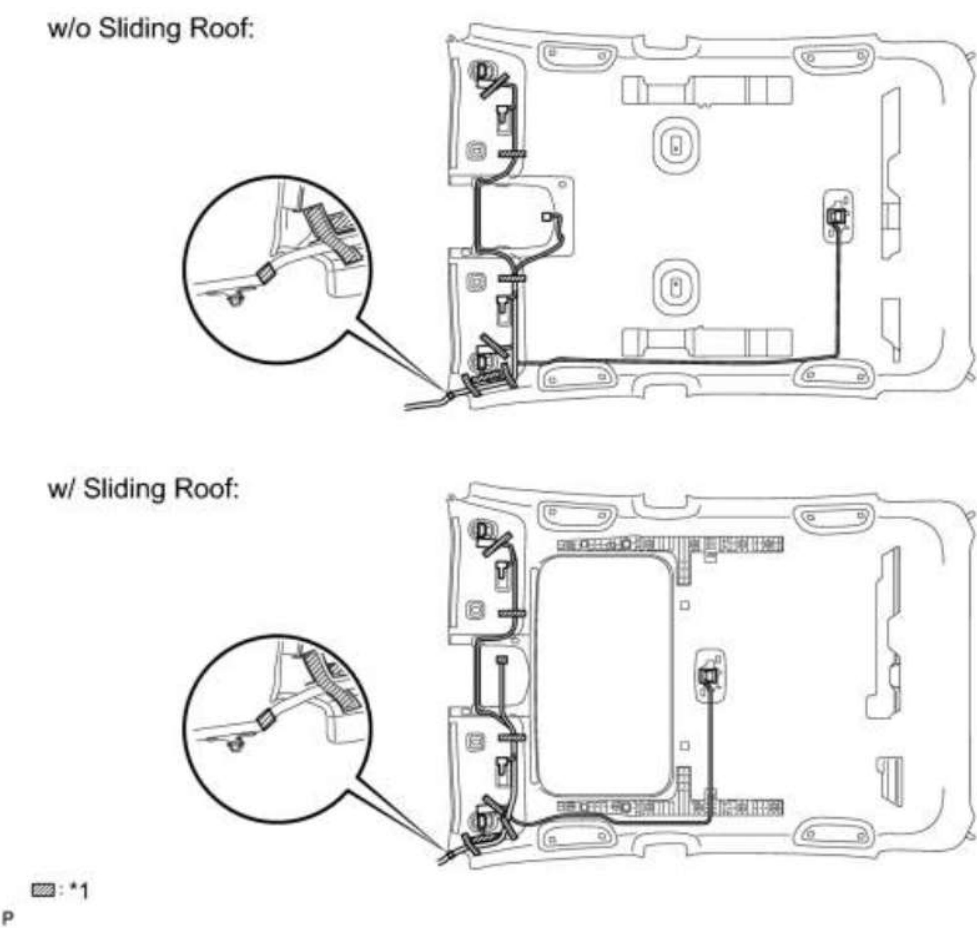


Text in Illustration


*1	Adhesive Tape	-	-
----	---------------	---	---

- (b) Turn the visor connectors counterclockwise approximately 45° and separate the connectors and each clamp from the roof headlining assembly.
- (c) Remove the No. 1 roof wire from the roof headlining assembly.

w/o Sliding Roof:

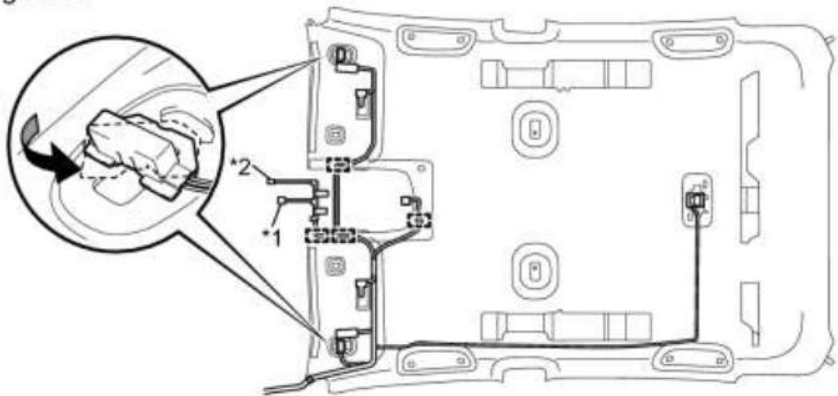

w/ Sliding Roof:

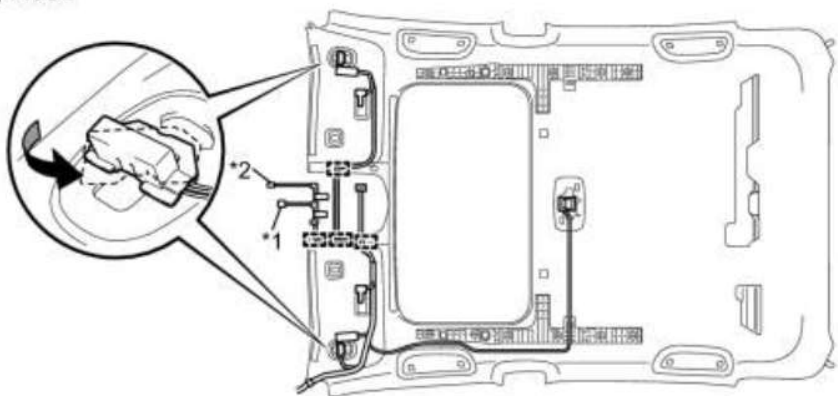


P

Text in Illustration

*1	w/ EC Mirror	*2	w/ Rain Sensor
----	--------------	----	----------------

7. REMOVE NO. 2 ROOF HEADLINING SET PLATE RH (w/o Sliding Roof)

- (a) Remove the No. 2 roof headlining set plate RH from the roof headlining assembly.

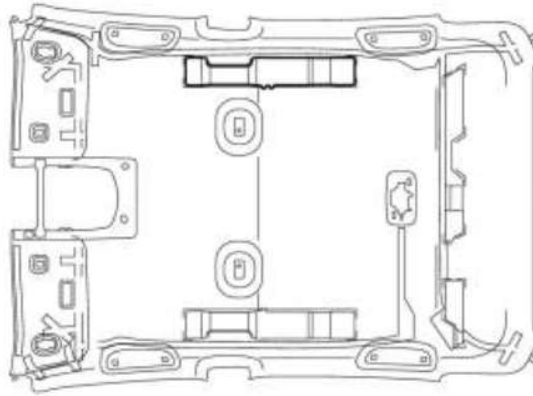

P

8. REMOVE NO. 2 ROOF HEADLINING SET PLATE LH (w/o Sliding Roof)


HINT:

Use the same procedure described for the RH side.


9. REMOVE ROOF HEADLINING PAD

- (a) Remove the roof headlining pad from the roof headlining assembly.

w/o Sliding Roof:

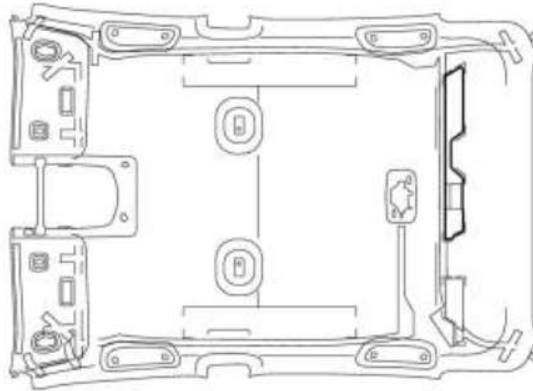

w/ Sliding Roof:

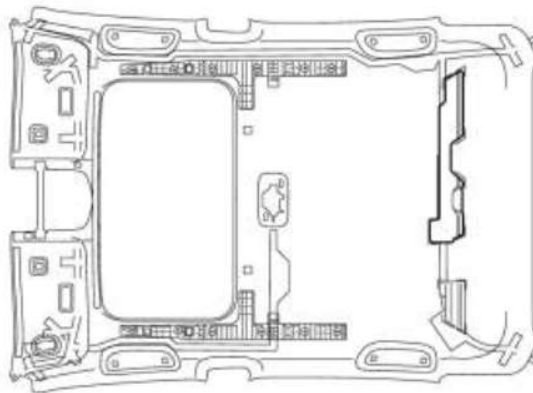


P


10. REMOVE NO. 2 ROOF HEADLINING PAD

- (a) Remove the No. 2 roof headlining pad from the roof headlining assembly.

w/o Sliding Roof:

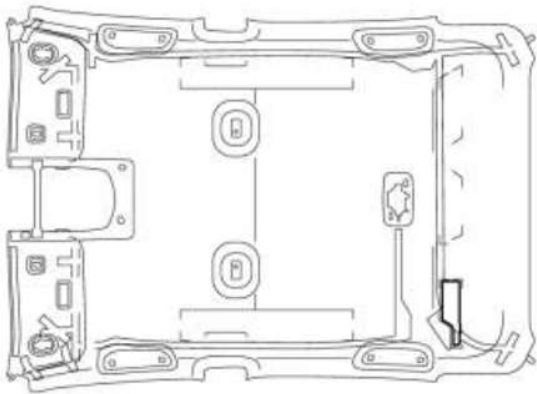

w/ Sliding Roof:

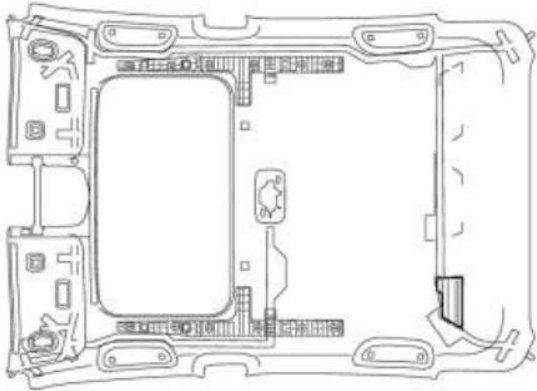


P

cardiagn.com

REASSEMBLY

1. INSTALL NO. 2 ROOF HEADLINING PAD

(a) Align the markings on the roof headlining assembly with the No. 2 roof headlining pad and install the pad using hot-melt glue as shown in the illustration.

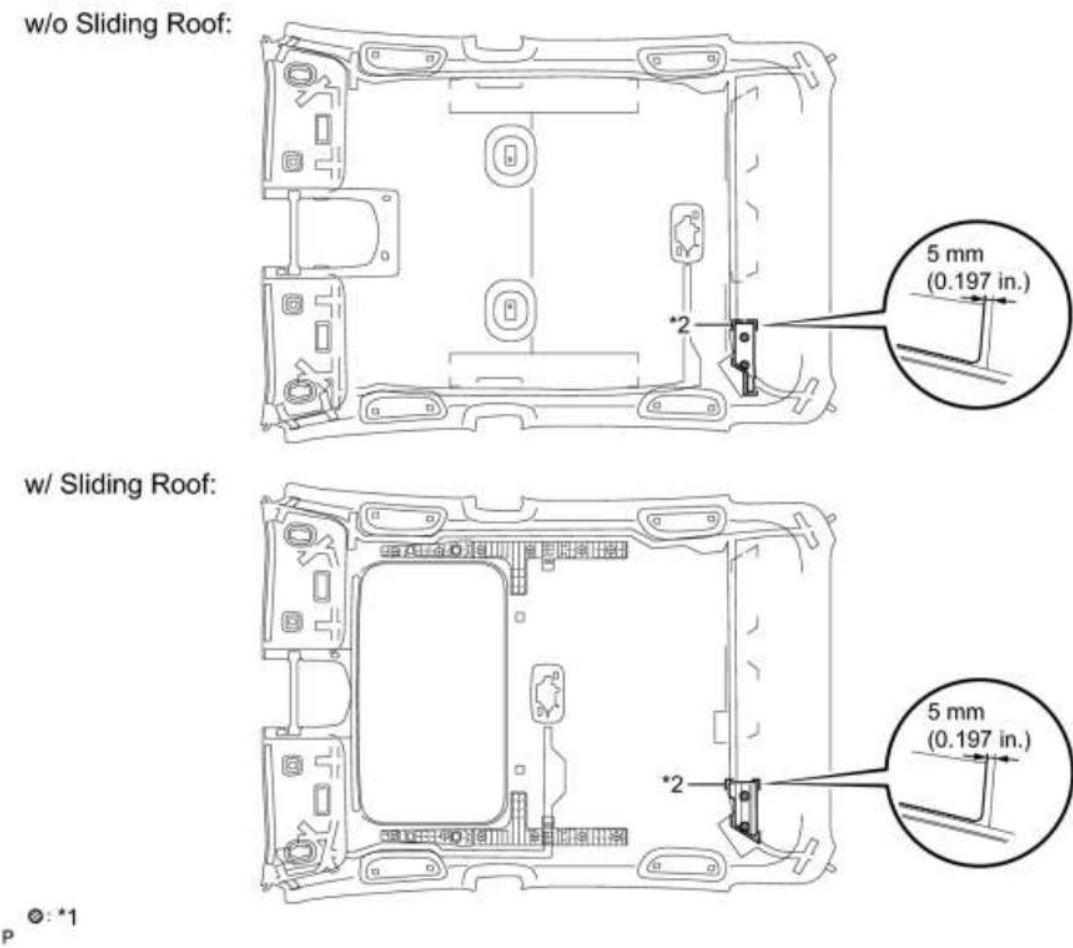


Text in Illustration

*1	Hot-melt Glue	*2	Marking
----	---------------	----	---------

2. INSTALL ROOF HEADLINING PAD

(a) Align the markings on the roof headlining assembly with the roof headlining pad and install the pad using hot-melt glue as shown in the illustration.

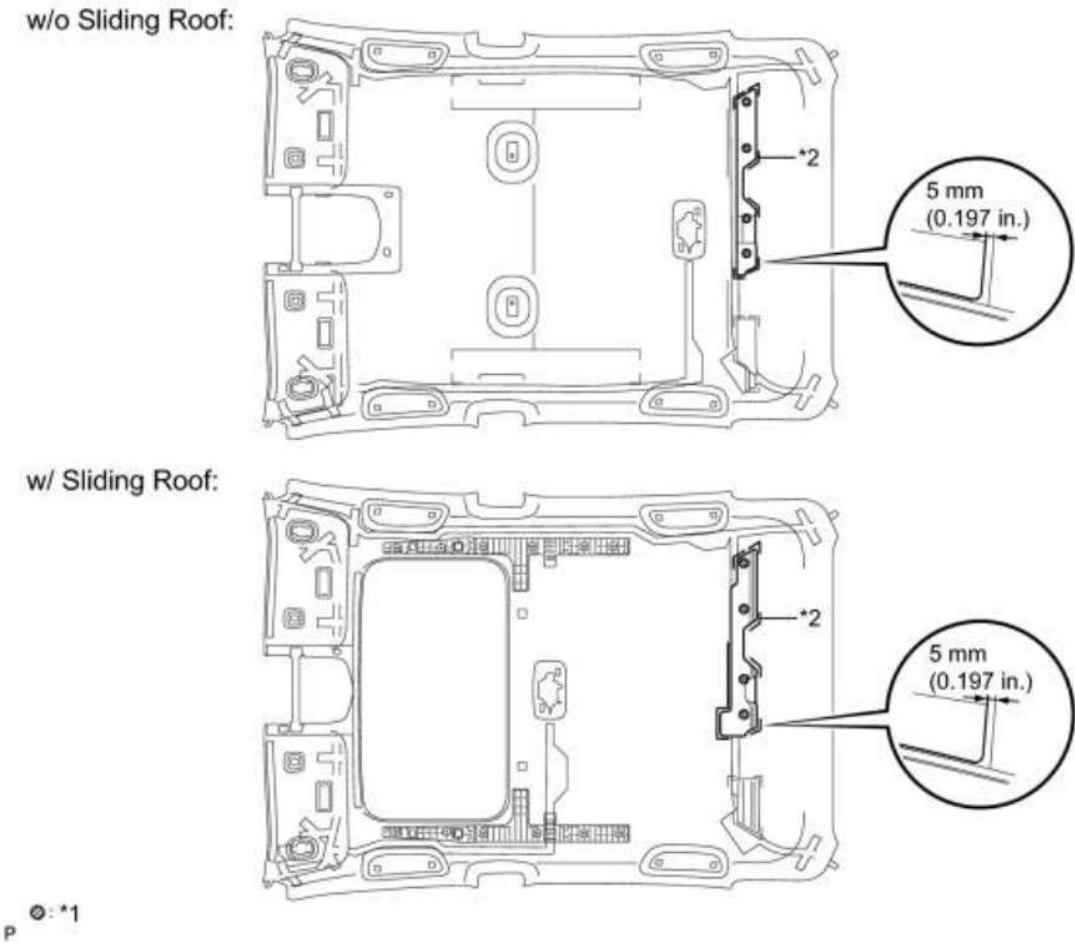


Text in Illustration

*1	Hot-melt Glue	*2	Marking
----	---------------	----	---------

3. INSTALL NO. 2 ROOF HEADLINING SET PLATE RH (w/o Sliding Roof)

(a) Align the markings on the roof headlining assembly with the No. 2 roof headlining set plate RH and install the set plate using hot-melt glue as shown in the illustration.

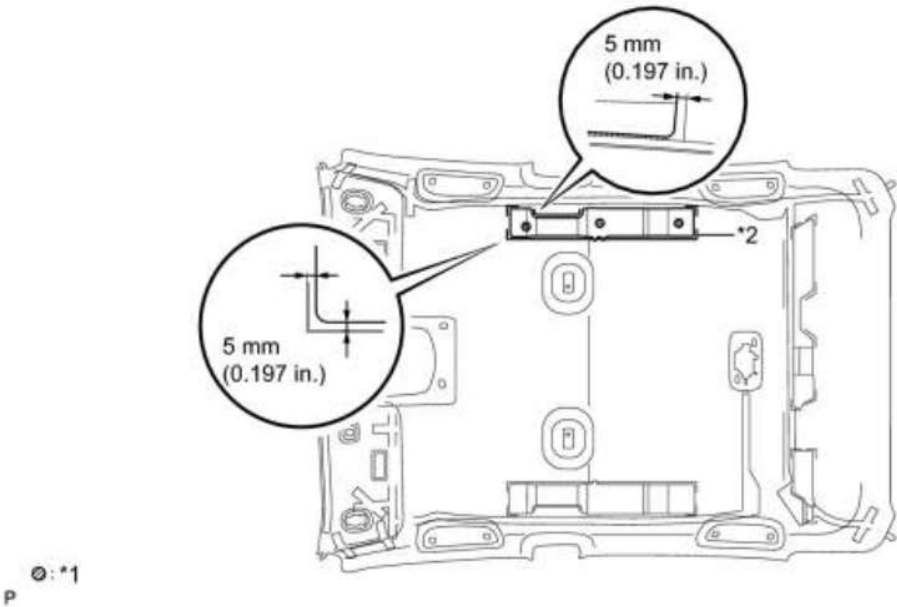

Text in Illustration

*1	Hot-melt Glue	*2	Marking
----	---------------	----	---------

4. INSTALL NO. 2 ROOF HEADLINING SET PLATE LH (w/o Sliding Roof)


HINT:

Use the same procedure described for the RH side.

5. INSTALL NO. 1 ROOF WIRE

- (a) Apply double-sided tape as shown in the illustration.
- (b) Peel off the release paper from the double-sided tape.
- (c) Attach the No. 1 roof wire along the double-sided tape so that the marking surface of the wire harness faces downward.

Tape Attachment Locations (Reference):

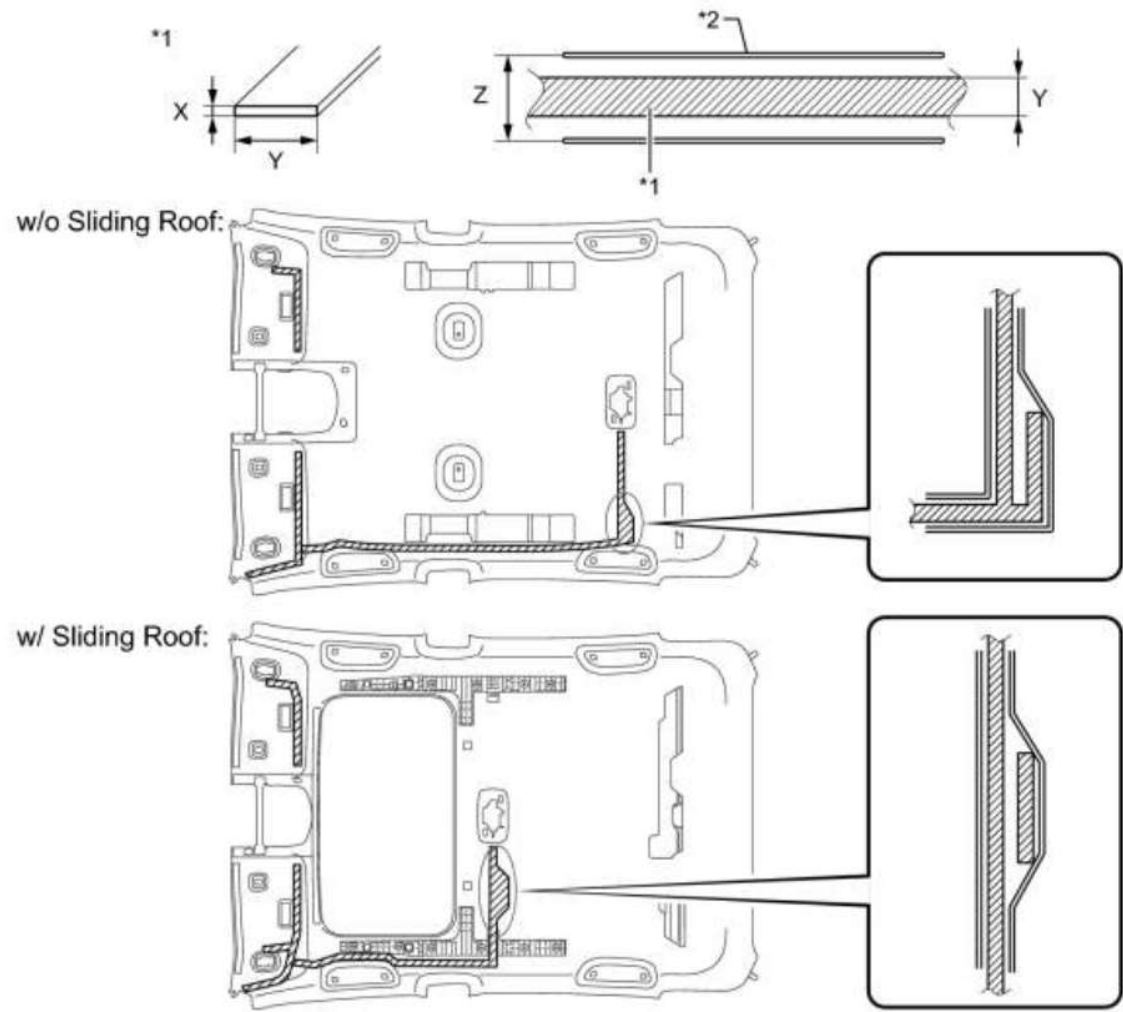

P

Text in Illustration

*1	Double-sided Tape	*2	Marking
----	-------------------	----	---------

Double-sided Tape Size:

- X
- 1 mm (0.0394 in.)
- Y
- 20 mm (0.787 in.)
- Z
- 40 mm (1.57 in.)
- 2010 Toyota Prius

(d) Align the pink marking tape <A> on the vehicle front side on the No. 1 roof wire with the vehicle front side tab on the roof headlining, and apply adhesive tape.

HINT:

Make sure that the No. 1 roof wire is not twisted and that the marking line (white) faces up.

(e) Turn the visor connector RH clockwise approximately 45° to install the connector to the roof headlining assembly.

(f) Align the pink marking tape on the No. 1 roof wire with the markings on the roof headlining, and apply adhesive tape.

(g) Engage each clamp.

(h) Align the pink marking tape <C> on the No. 1 roof wire with the markings on the roof headlining, and apply adhesive tape.

(i) Turn the visor connector LH clockwise approximately 45° to install the connector to the roof headlining assembly.

(j) Attach the No. 1 roof wire, starting from the front of the vehicle, while aligning it with the double-side tape.

NOTICE:


- Securely attach the No. 1 roof wire.
- If any of the No. 1 roof wire is left loose, this will cause abnormal noise. Make sure to attach the No. 1 roof wire without leaving any loose.

HINT:

Secure the extra length of the No. 1 roof wire in the adjustment area.

(k) Apply adhesive tape by aligning it with the markings on the roof headlining.

Tape Attachment Locations (Reference):

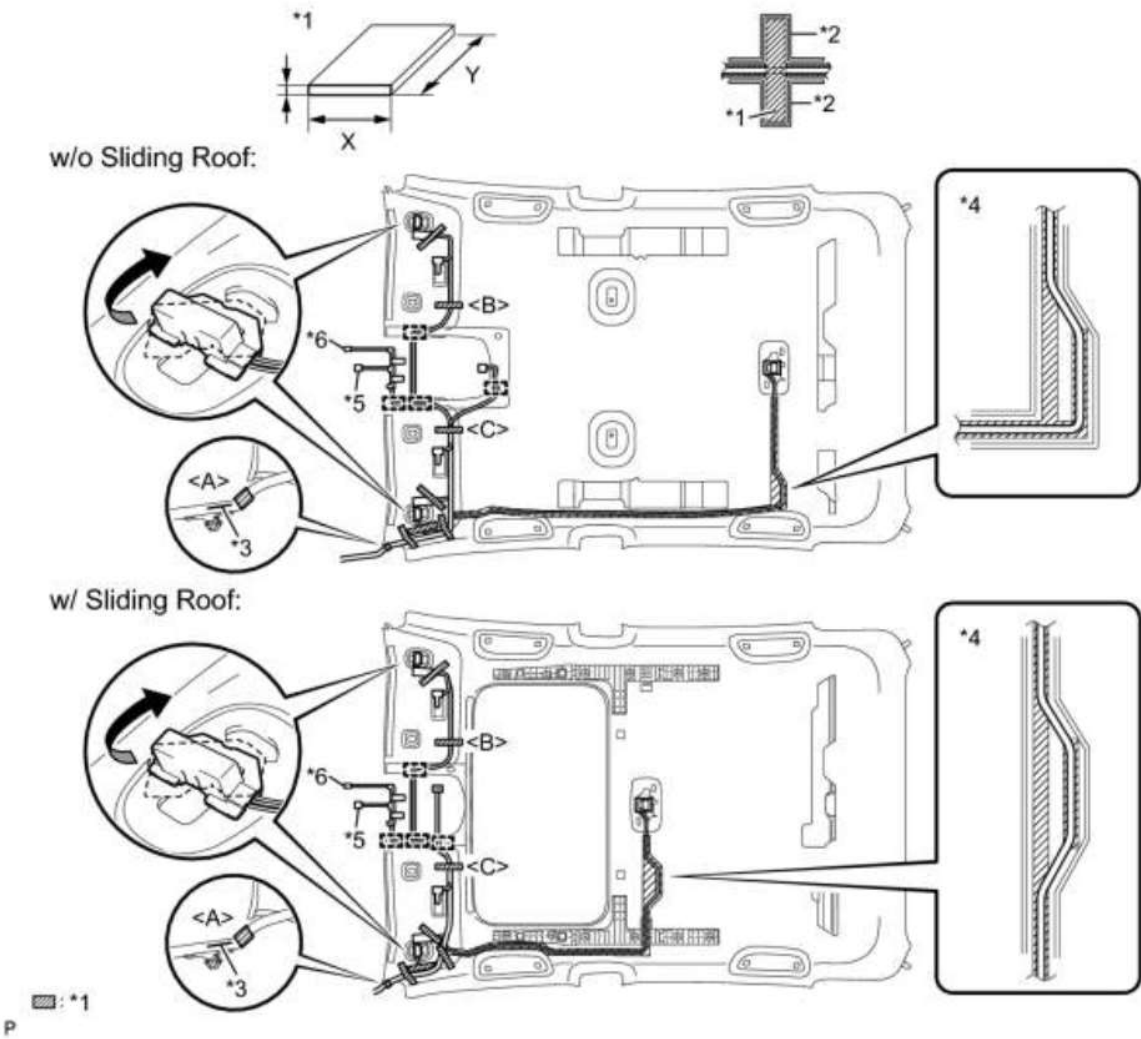

Text in Illustration


*1	Adhesive Tape	*2	Marking
*3	Marking Line (White)	*4	Adjustment Area
*5	w/ EC Mirror	*6	w/ Rain Sensor

Adhesive Tape Size:

- X
- 20 mm (0.787 in.)
- Y
- 100 mm (3.94 in.)

6. INSTALL NO. 4 ANTENNA CORD SUB-ASSEMBLY (w/o Manual (SOS) Switch) INFO
7. INSTALL TELEPHONE AND GPS ANTENNA CORD SUB-ASSEMBLY (w/ Manual (SOS) Switch) INFO
8. INSTALL NO. 3 ROOF SILENCER PAD (w/o Sliding Roof)

(a) Align the markings on the roof headlining assembly with the No. 3 roof silencer pad and install the set plate using hot-melt glue as shown in the illustration.

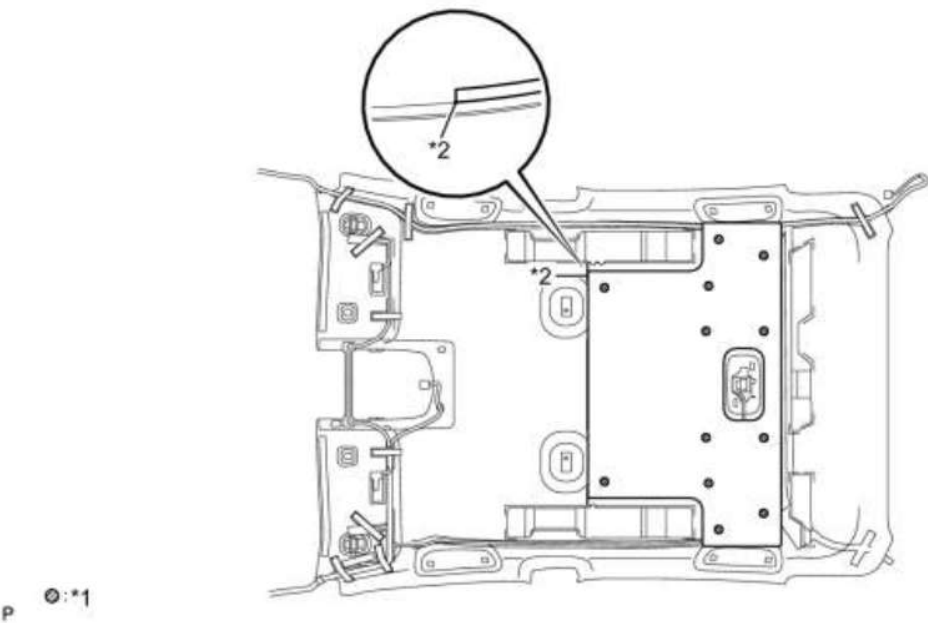

Text in Illustration


*1	Hot-melt Glue	*2	Marking
----	---------------	----	---------

NOTICE:

Securely attach the No. 1 roof wire. Failure to do so may cause abnormal noise.

9. INSTALL NO. 2 ROOF SILENCER PAD (w/o Sliding Roof)

(a) Align the markings on the roof headlining assembly with the No. 2 roof silencer pad and install the set plate using hot-melt glue as shown in the illustration.

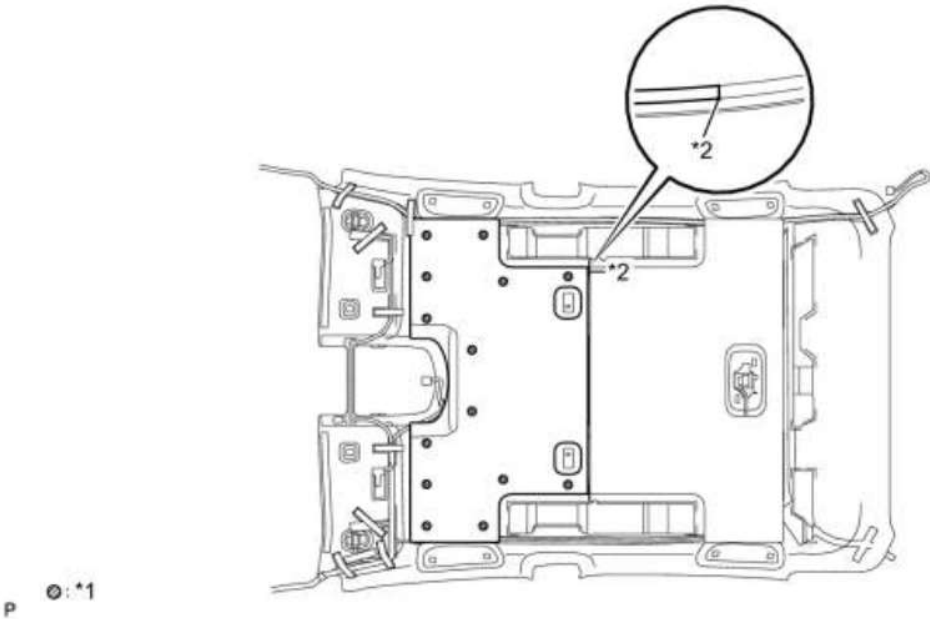

Text in Illustration

*1	Hot-melt Glue	*2	Marking
----	---------------	----	---------

10. INSTALL VANITY LIGHT ASSEMBLY


(a) Install the vanity light assembly INFO.

HINT:

Use the same procedure for the other vanity light.

INSTALLATION

1. INSTALL ROOF HEADLINING ASSEMBLY (w/o Sliding Roof)

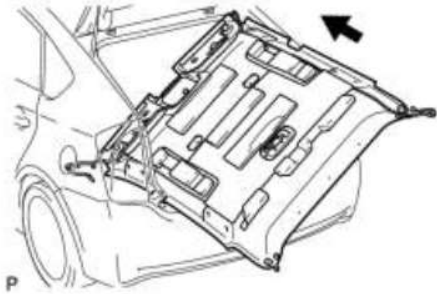

(a) Put the roof headlining assembly into the vehicle through the back door.

NOTICE:

Do not damage the roof headlining assembly or body interior.

(b) Install the 5 clips.

(c) Connect the 2 connectors to the connector holder.

(d) Engage the 4 clamps to the front pillar LH.

(e) w/o Manual (SOS) Switch:

(1) Engage the 3 clamps and connect the connector to the front pillar RH.

(2) Disengage the clamp and disconnect the connector to the rear pillar RH.

(f) w/ Manual (SOS) Switch:

(1) Engage the 3 clamps and connect the 2 connectors to the front pillar RH.


(2) Engage the clamp and connect the 2 connectors to the rear pillar RH.

(g) w/ EC Mirror:

(1) Connect the inner rear view mirror connector and engage the 2 clamps.

(h) w/ Lane Keeping Assist System:

(1) Connect the inner rear view mirror connector and engage the clamp.

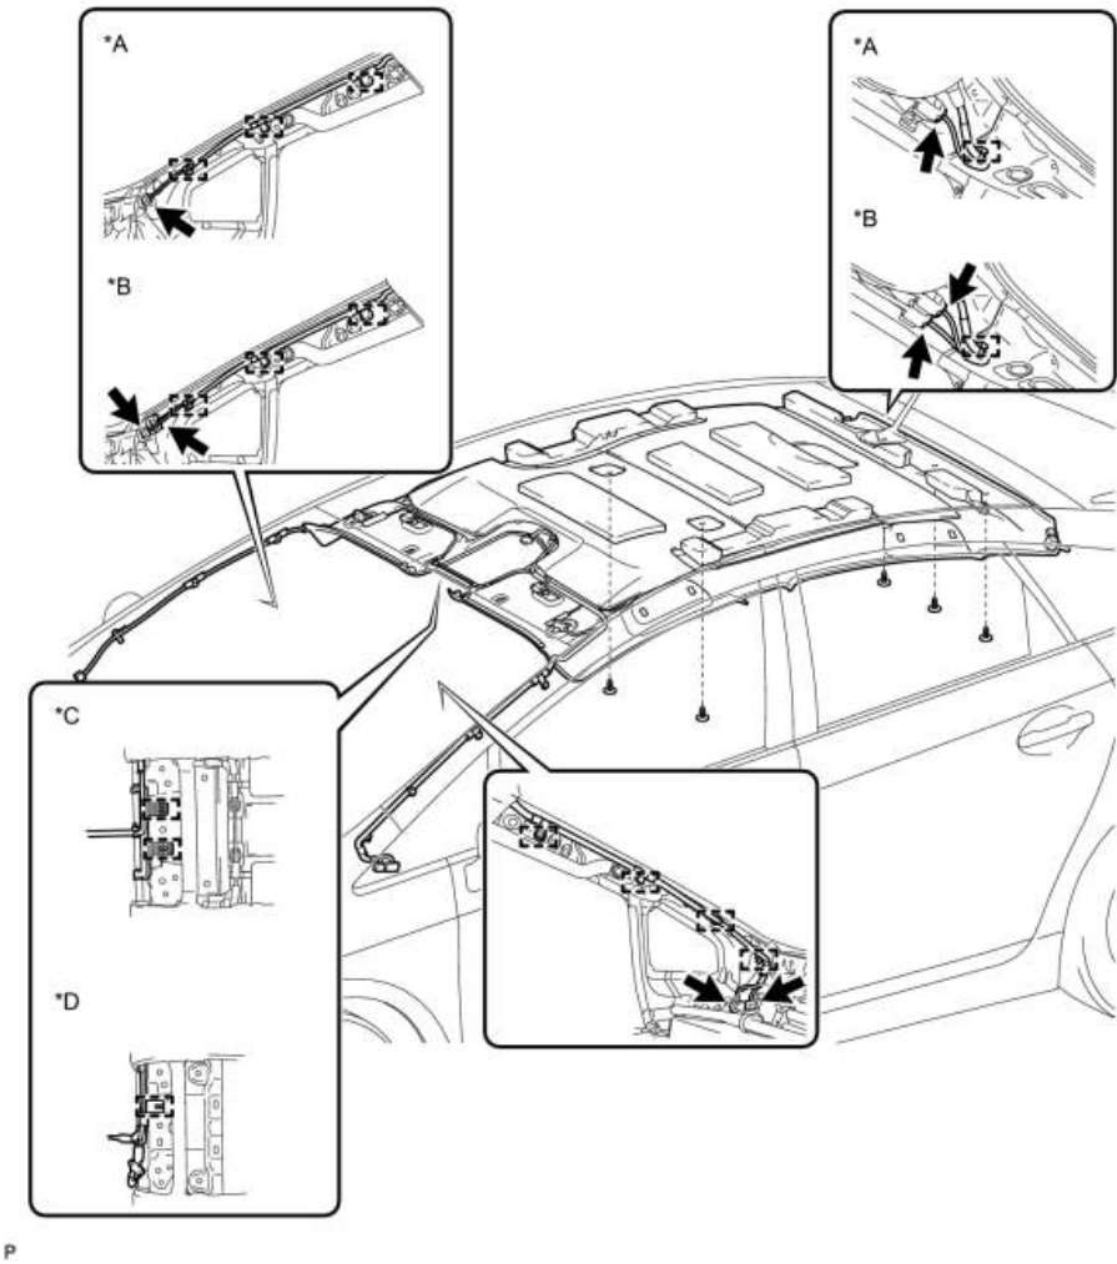


Text in Illustration

*A	w/o Manual (SOS) Switch	*B	w/ Manual (SOS) Switch
*C	w/ EC Mirror	*D	w/ Lane Keeping Assist System

2. INSTALL ROOF HEADLINING ASSEMBLY (w/ Sliding Roof)


(a) Put the roof headlining assembly into the vehicle through the back door.

NOTICE:

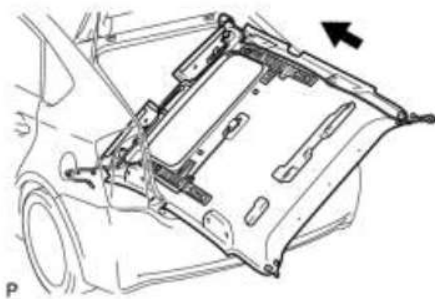

Do not damage the roof headlining assembly or body interior.

(b) Engage the 6 fasteners.

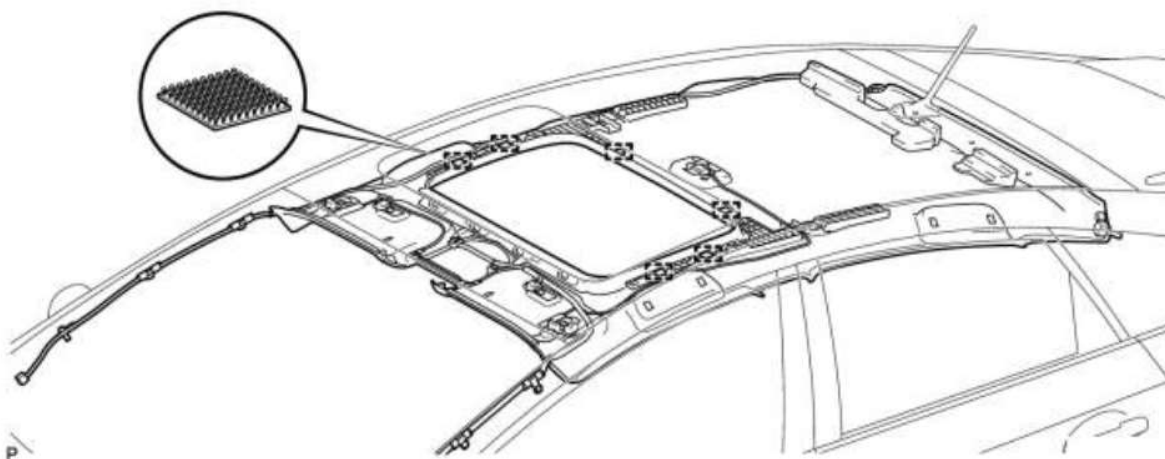

(c) Install the 3 clips.

(d) Connect the 2 connectors to the connector holder.

(e) Engage the 4 clamps to the front pillar LH.

(f) w/o Manual (SOS) Switch:

(1) Engage the 3 clamps and connect the connector to the front pillar RH.

(2) Disengage the clamp and disconnect the connector to the rear pillar RH.


(g) w/ Manual (SOS) Switch:

(1) Engage the 3 clamps and connect the 2 connectors to the front pillar RH.

(2) Engage the clamp and connect the 2 connectors to the rear pillar RH.

(h) w/ EC Mirror:

(1) Connect the inner rear view mirror connector and engage the 2 clamps.

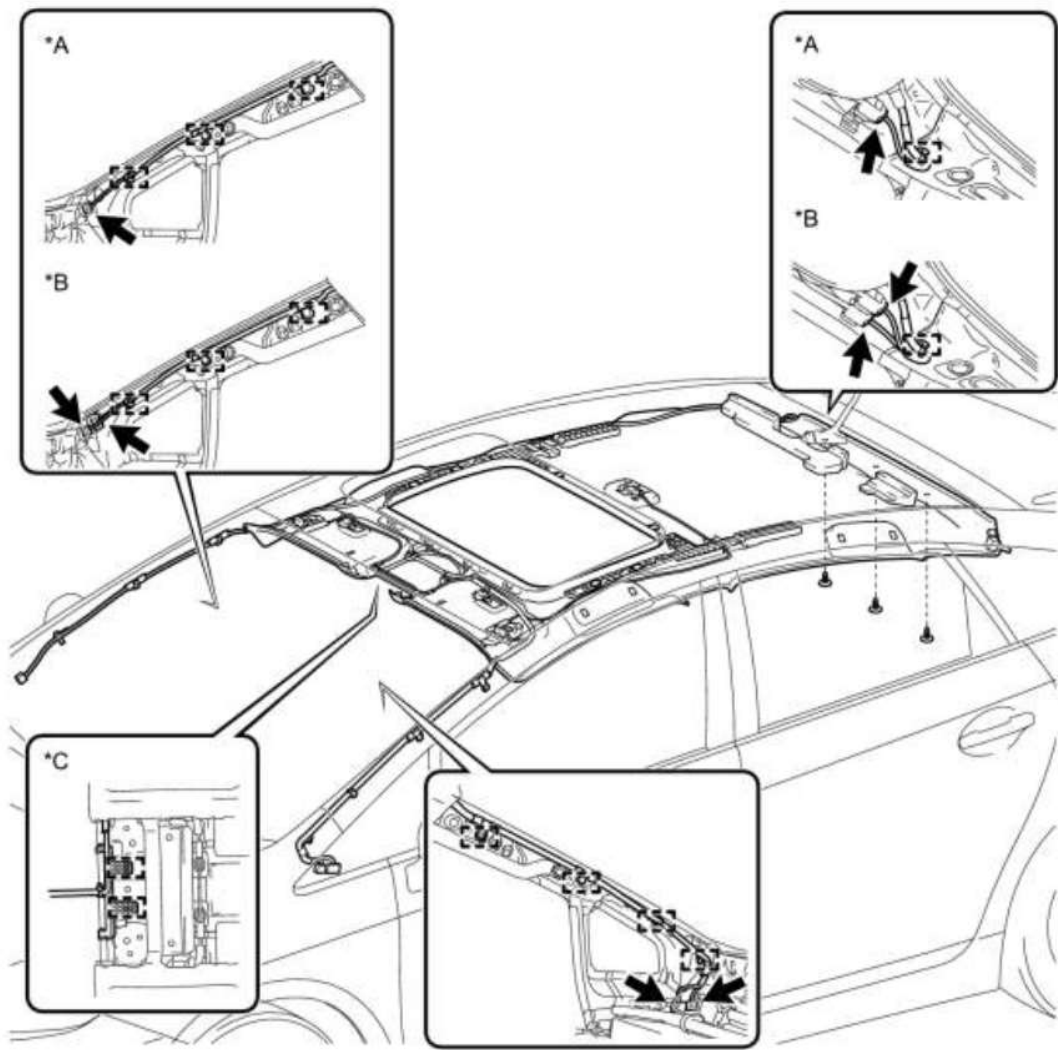


P

Text in Illustration

*A	w/o Manual (SOS) Switch	*B	w/ Manual (SOS) Switch
*C	w/ EC Mirror	-	-

3. INSTALL VISOR HOLDER

(a) Engage the 2 claws.

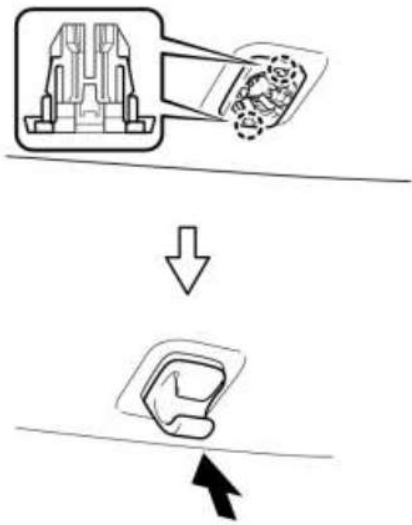


P

(b) Push in the visor holder as shown in the illustration.

HINT:

Use the same procedure for the other visor holder.

4. INSTALL VISOR ASSEMBLY LH

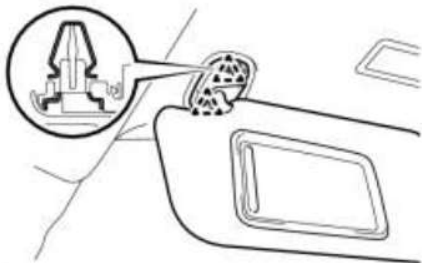


P

(a) Engage the 2 clips to install the visor assembly LH.

5. INSTALL VISOR BRACKET COVER LH

(a) Engage the 3 claws to install the visor bracket cover LH.

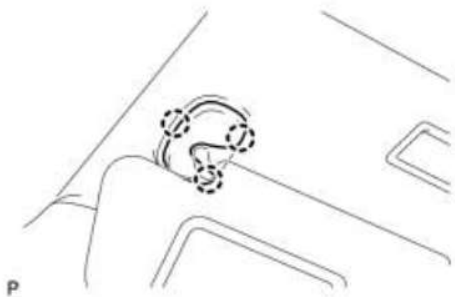

6. INSTALL VISOR ASSEMBLY RH

HINT:


Use the same procedure described for the LH side.

7. INSTALL VISOR BRACKET COVER RH


HINT:

Use the same procedure described for the LH side.

8. INSTALL FRONT ASSIST GRIP ASSEMBLY

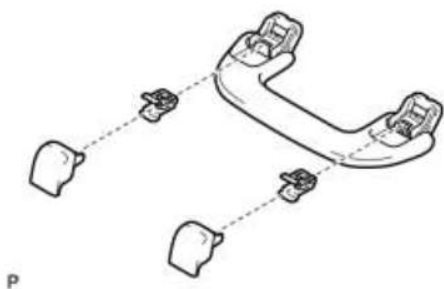

(a) Assemble the front assist grip assembly as shown in the illustration.

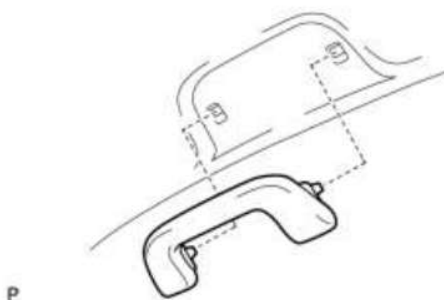


(b) Install the front assist grip assembly.

HINT:

Use the same procedure for the other front assist grip.

9. INSTALL REAR ASSIST GRIP ASSEMBLY


(a) Assemble the rear assist grip assembly as shown in the illustration.

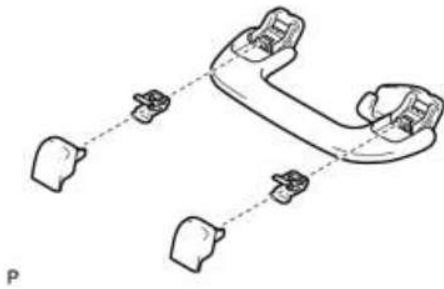

(b) Install the rear assist grip assembly.

HINT:

Use the same procedure for the other rear assist grip.

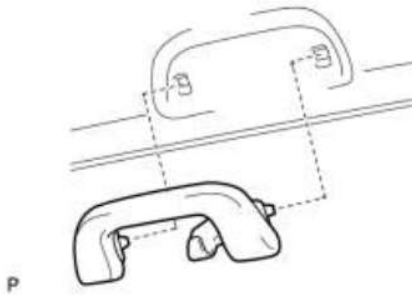

10. INSTALL NO. 1 ROOM LIGHT ASSEMBLY_ [INFO](#)


11. INSTALL MAP LIGHT ASSEMBLY (w/o Sliding Roof)_ [INFO](#)

12. INSTALL MAP LIGHT ASSEMBLY (w/ Sliding Roof)_ [INFO](#)

13. INSTALL LANE RECOGNITION CAMERA SENSOR ASSEMBLY (w/ Lane Keeping Assist System)

[INFO](#)


14. INSTALL ROOF TOP MOULDING (w/o Lane Keeping Assist System)

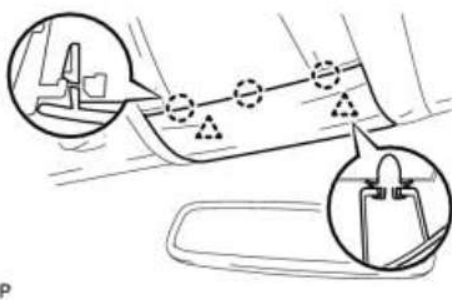

(a) Engage the 3 claws and 2 clips to install the roof top moulding.

15. INSTALL ROOF TOP MOULDING (w/ Lane Keeping Assist System)


(a) Engage the 6 claws to install the roof top moulding.

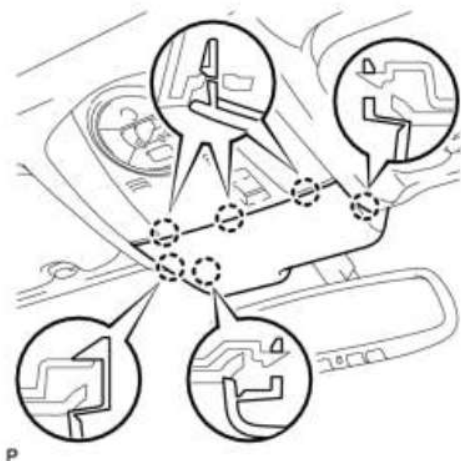

16. INSTALL INNER REAR VIEW MIRROR COVER (w/ EC Mirror) INFO

17. INSTALL ROOF SIDE INNER GARNISH ASSEMBLY LH

(a) Engage the 9 clips to install the roof side inner garnish assembly LH.

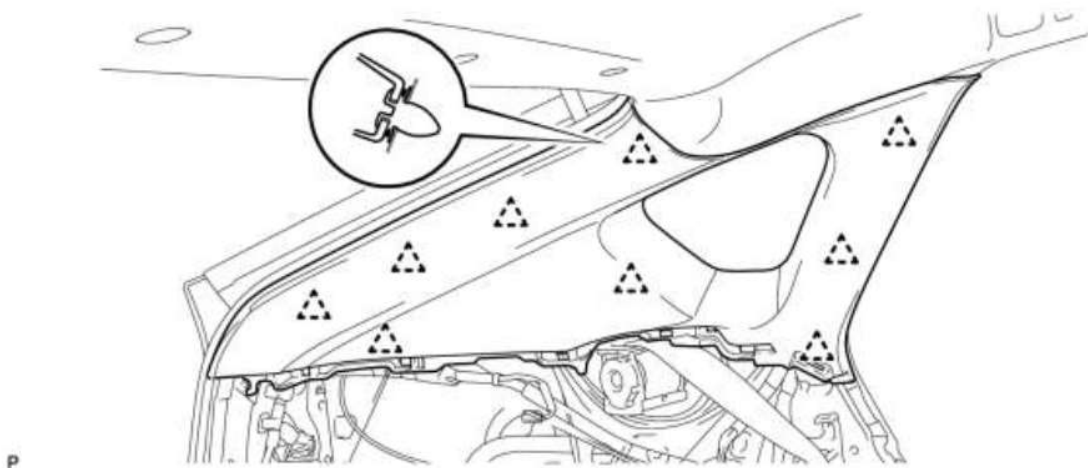


18. INSTALL DECK TRIM SIDE PANEL ASSEMBLY LH


(a) Connect the connector.

(b) Engage the 7 claws and 2 clips.

(c) Install the deck trim side panel assembly LH with the screw.

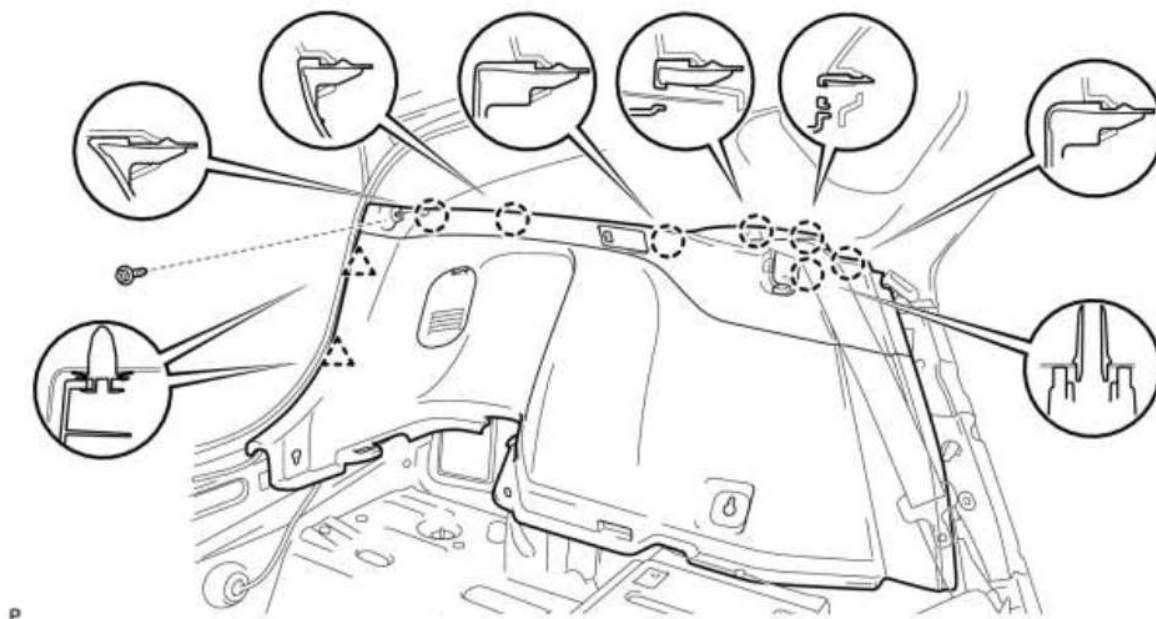


19. INSTALL TONNEAU COVER HOLDER CAP (for LH Side)

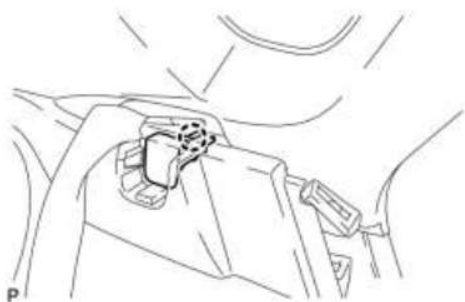

(a) Engage the claw to install the tonneau cover holder cap.

20. INSTALL LUGGAGE HOLD BELT STRIKER ASSEMBLY (for LH Side)

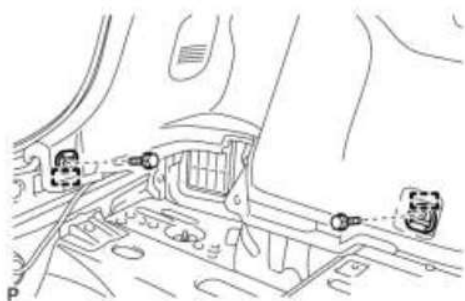

(a) Engage the 2 guides.

(b) Install the 2 luggage hold belt striker assemblies with the 2 bolts.


21. INSTALL ROOF SIDE INNER GARNISH ASSEMBLY RH

HINT:

Use the same procedure described for the LH side.

22. INSTALL DECK TRIM SIDE PANEL ASSEMBLY RH

- (a) Engage the 7 claws and 2 clips.
- (b) Install the deck trim side panel assembly RH with the screw.

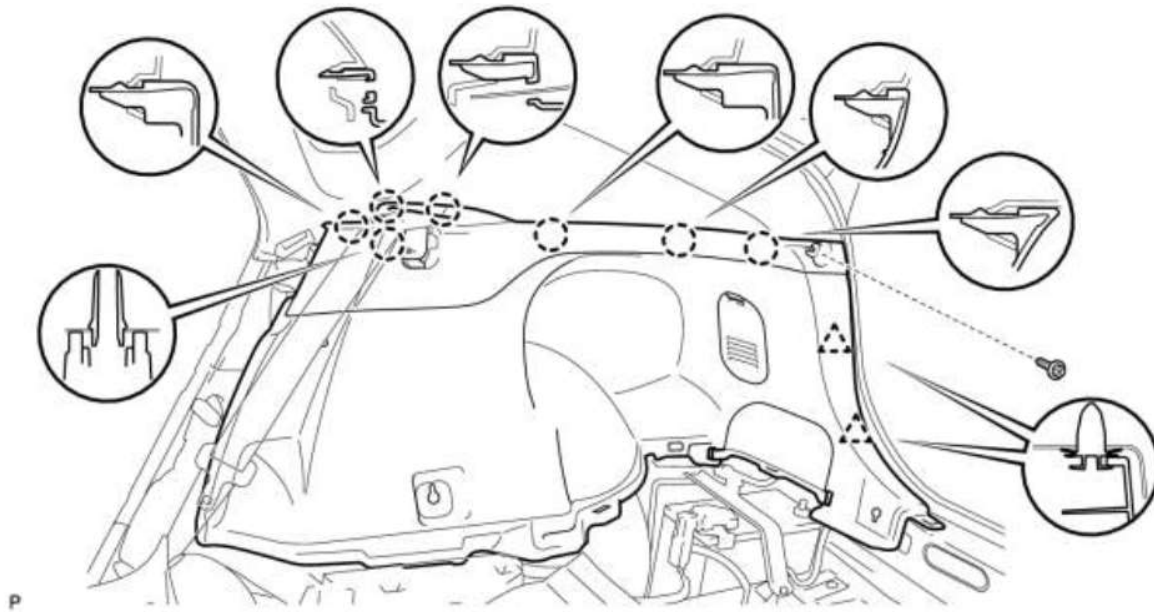**23. INSTALL TONNEAU COVER HOLDER CAP (for RH Side)****HINT:**


Use the same procedure described for the LH side.

24. INSTALL LUGGAGE HOLD BELT STRIKER ASSEMBLY (for RH Side)**HINT:**


Use the same procedure described for the LH side.

25. INSTALL REAR DECK TRIM COVER

- (a) Engage the 4 claws and 4 guides to install the rear deck trim cover.

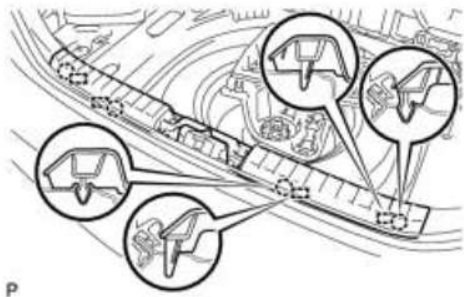


26. INSTALL DECK TRIM SERVICE HOLE COVER

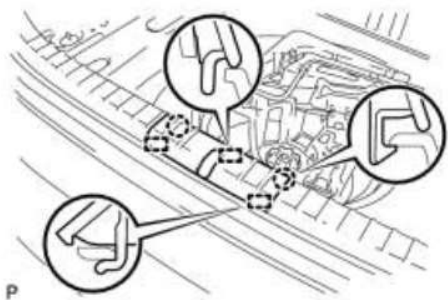

(a) Engage the 3 guides.

(b) Engage the 2 claws to install the deck trim service hole cover.

27. INSTALL REAR NO. 1 FLOOR BOARD

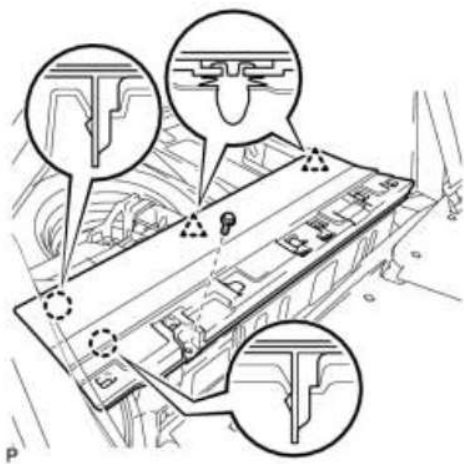


(a) Engage the 2 claws and 2 clips.


(b) Install the rear No. 1 floor board with the bolt.

28. INSTALL REAR NO. 2 FLOOR BOARD SUB-ASSEMBLY

(a) Engage the claw and 2 clips to install the rear No. 2 floor board sub-assembly.

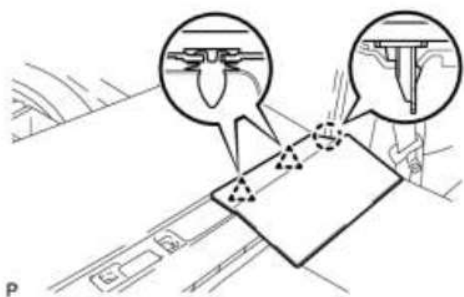


29. INSTALL REAR NO. 1 FLOOR BOARD SUB-ASSEMBLY

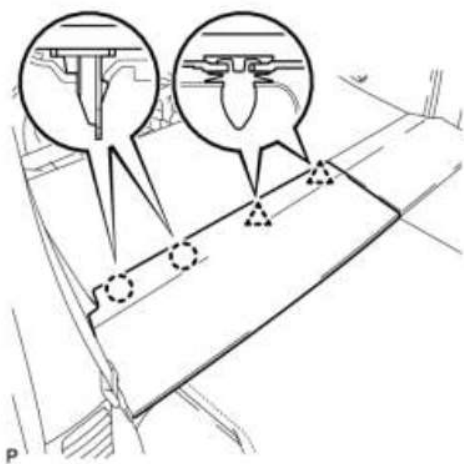

(a) Engage the 2 claws and 2 clips to install the rear No. 1 floor board sub-assembly.

30. INSTALL DECK FLOOR BOX LH

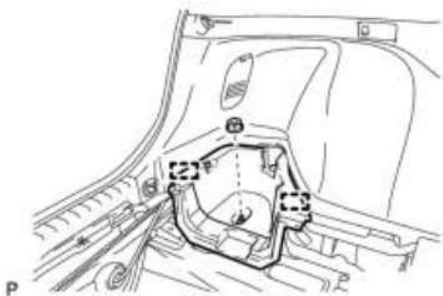

(a) Engage the 2 guides.

(b) Install the deck floor box LH with the clip.

31. INSTALL REAR NO. 4 FLOOR BOARD

(a) Engage the guide to install the rear No. 4 floor board.



32. INSTALL TONNEAU COVER ASSEMBLY (w/ Tonneau Cover)

(a) Install the tonneau cover assembly.

33. INSTALL UPPER INSTRUMENT PANEL ASSEMBLY

(a) Install the upper instrument panel assembly INFO.


34. INSTALL REAR SIDE SEATBACK ASSEMBLY LH INFO

35. INSTALL REAR SIDE SEATBACK ASSEMBLY RH INFO

36. INSTALL REAR SEAT CUSHION ASSEMBLY INFO

37. INSTALL CENTER PILLAR GARNISH LH

(a) Pass the floor anchor of the front seat outer seat belt assembly LH through the center pillar garnish LH.

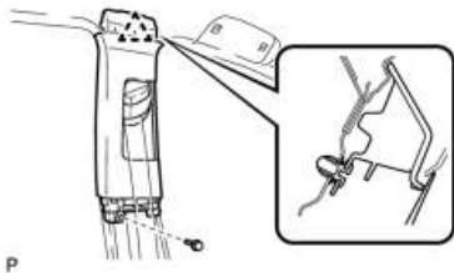


(b) Engage the clip.

(c) Install the center pillar garnish LH with the screw.

38. INSTALL CENTER PILLAR LOWER GARNISH LH


(a) Engage the 2 claws and 2 clips to install the center pillar lower garnish LH.

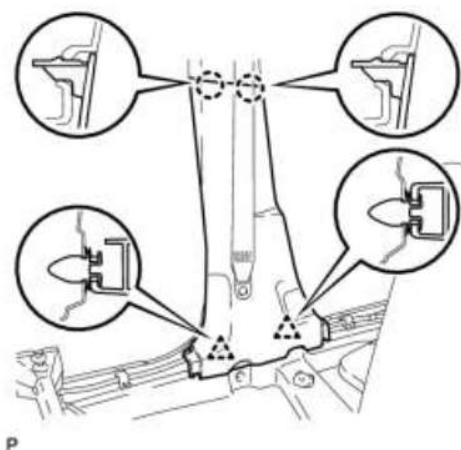

39. CONNECT FRONT SEAT OUTER BELT ASSEMBLY LH_ INFO

40. INSTALL LAP BELT OUTER ANCHOR COVER (for LH Side)_ INFO

41. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP LH

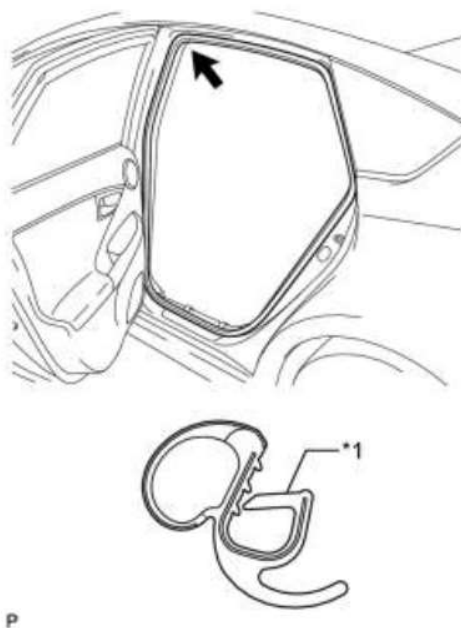

(a) Align the alignment mark (Red) on the weatherstrip with the protruding portion on the body indicated by the arrow in the illustration, and install the rear door opening trim weatherstrip LH.

Text in Illustration


*1	Alignment Mark (Red)
----	----------------------

NOTICE:


After installation, check that the corners fit correctly.

42. INSTALL REAR DOOR SCUFF PLATE LH

(a) Engage the 7 claws to install the rear door scuff plate LH.

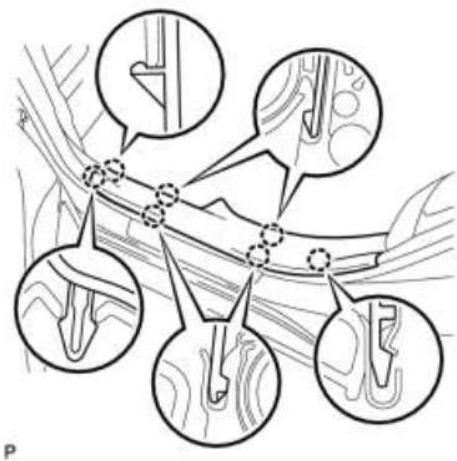

43. INSTALL FRONT PILLAR GARNISH LH

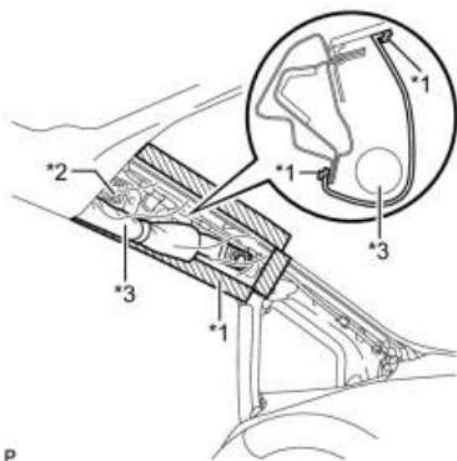

(a) Remove the protective cover.


Text in Illustration

*1	Adhesive Tape
*2	Protective Cover
*3	Curtain Shield Airbag Assembly

(b) Engage the 3 guides.

Text in Illustration

*1	Front Pillar Garnish Clip
----	---------------------------

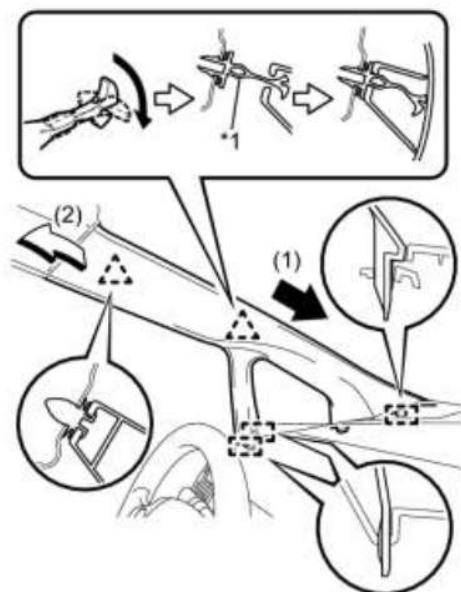

P


(c) Turn the end of the front pillar garnish clip 90° with needle-nosed pliers and install it to the front pillar garnish RH.

HINT:

Tape the needle-nosed pliers tip before use.

(d) Engage the 2 clips to install the front pillar garnish LH.

44. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP LH

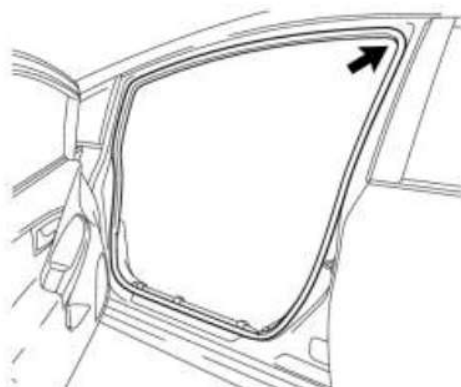

(a) Align the alignment mark (Yellow) on the weatherstrip with the protruding portion on the body indicated by the arrow in the illustration, and install the front door opening trim weatherstrip LH.

Text in Illustration

*1	Alignment Mark (Yellow)
----	-------------------------


NOTICE:

After installation, check that the corners fit correctly.



P


45. INSTALL COWL SIDE TRIM SUB-ASSEMBLY LH

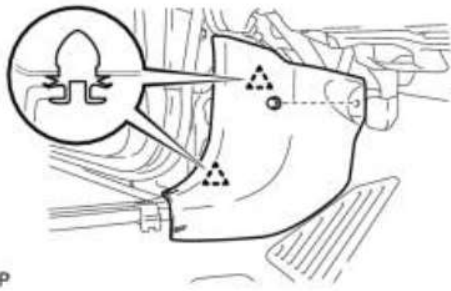

(a) Engage the 2 clips.

(b) Install the cowl side trim board LH with the clip.

46. INSTALL FRONT DOOR SCUFF PLATE LH

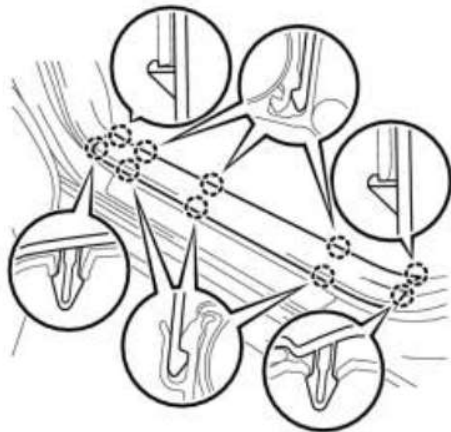

(a) Engage the 10 claws to install the front door scuff plate LH.

47. INSTALL CENTER PILLAR GARNISH RH

HINT:

Use the same procedure described for the LH side.

48. INSTALL CENTER PILLAR LOWER GARNISH RH

HINT:

Use the same procedure described for the LH side.

49. CONNECT FRONT SEAT OUTER BELT ASSEMBLY RH

HINT:


Use the same procedure described for the LH side.

50. INSTALL LAP BELT OUTER ANCHOR COVER (for RH Side)

HINT:

Use the same procedure described for the LH side.

51. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP RH

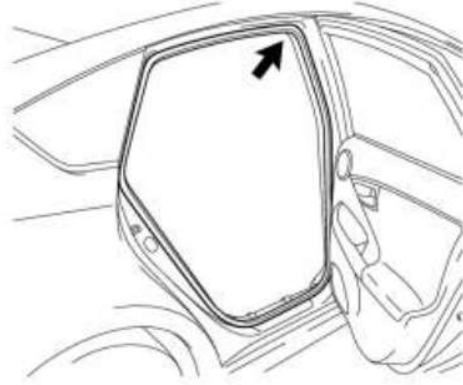

(a) Align the alignment mark (Blue) on the weatherstrip with the protruding portion on the body indicated by the arrow in the illustration, and install the rear door opening trim weatherstrip LH.

Text in Illustration

*1	Alignment Mark (Blue)
----	-----------------------

NOTICE:

After installation, check that the corners fit correctly.



52. INSTALL REAR DOOR SCUFF PLATE RH

HINT:

Use the same procedure described for the LH side.

53. INSTALL FRONT PILLAR GARNISH RH

HINT:


Use the same procedure described for the LH side.

54. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP RH

(a) Align the alignment mark (White) on the weatherstrip with the protruding portion on the body indicated by the arrow in the illustration, and install the front door opening trim weatherstrip RH.


Text in Illustration

*1	Alignment Mark (White)
----	------------------------

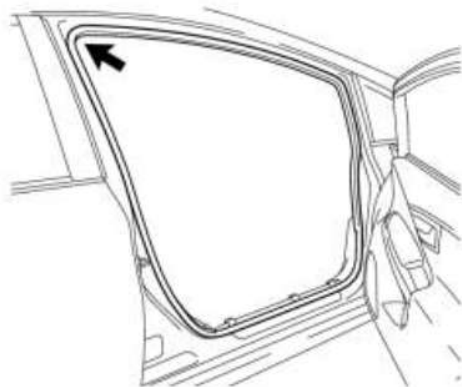

NOTICE:

After installation, check that the corners fit correctly.

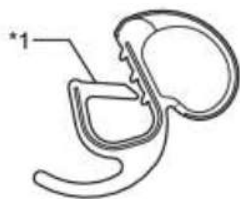

P

55. INSTALL COWL SIDE TRIM SUB-ASSEMBLY RH

HINT:

Use the same procedure described for the LH side.

56. INSTALL FRONT DOOR SCUFF PLATE RH

HINT:

Use the same procedure described for the LH side.

57. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected INFO.

58. INSTALL REAR NO. 3 FLOOR BOARD




P

(a) Engage the 2 guides to install the rear No. 3 floor board.

59. INSTALL REAR DECK FLOOR BOX

(a) Install the rear deck floor box.

60. INSTALL REAR NO. 2 FLOOR BOARD (for Separate Type)

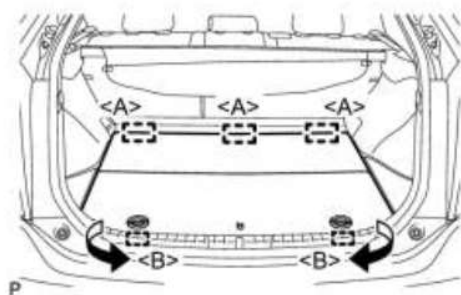

(a) Engage the 3 guides <A>.

(b) Engage the 2 guides and install the rear No. 2 floor board as shown in the illustration.

61. INSPECT SRS WARNING LIGHT

(a) Inspect the SRS warning light INFO.

62. ADJUST LANE RECOGNITION CAMERA SENSOR ASSEMBLY (w/ Lane Keeping Assist System)

INFO

PRECAUTION

 
 
1. PRECAUTION FOR VEHICLE WITH SRS AIRBAG AND SEAT BELT PRETENSIONER

(a) Some operations in this section may affect the SRS airbags. Prior to performing the corresponding operations, read the precautions regarding the SRS airbags INFO.

2. TABLE OF BOLT, SCREW AND NUT



HINT:

All bolts, screws and nuts relevant to installing and removing the instrument panel are shown along with their alphabet codes in the table below.

Code	Shape	Size	Code	Shape	Size
<A>		$\varnothing=8\text{ mm}$ (0.314 in.) Length=21 mm (0.827 in.)			$\varnothing=6\text{ mm}$ (0.236 in.) Length=20 mm (0.787 in.)
<C>		$\varnothing=5\text{ mm}$ (0.197 in.) Length=14 mm (0.551 in.)			



COMPONENTS

ILLUSTRATION

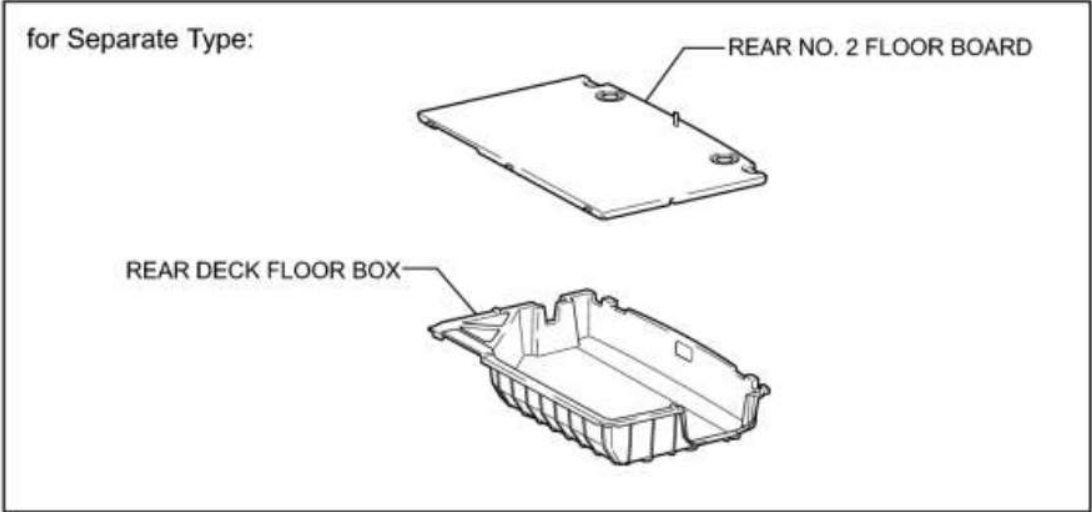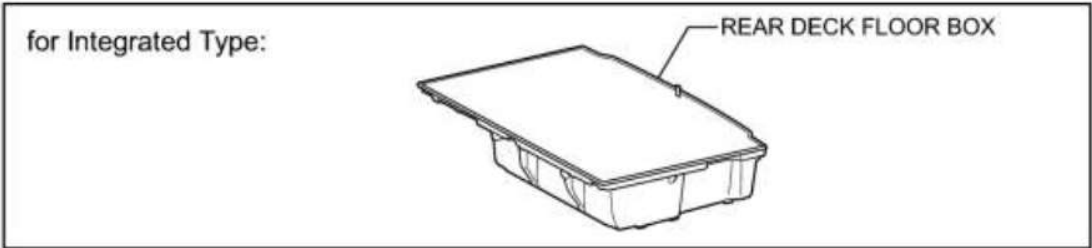


P

ILLUSTRATION

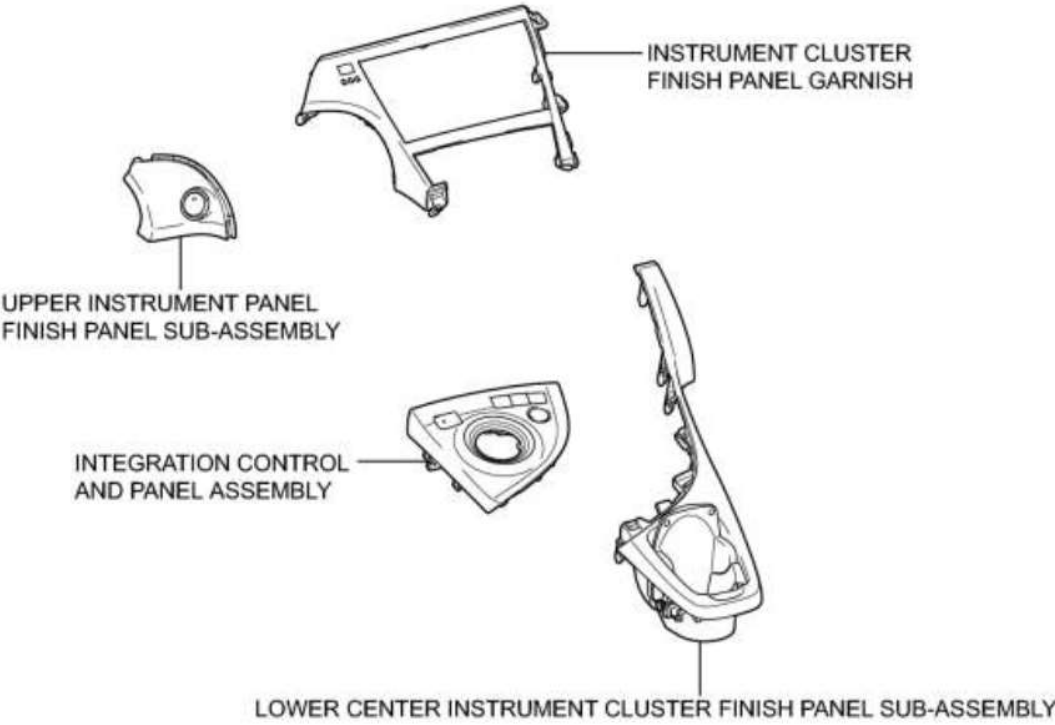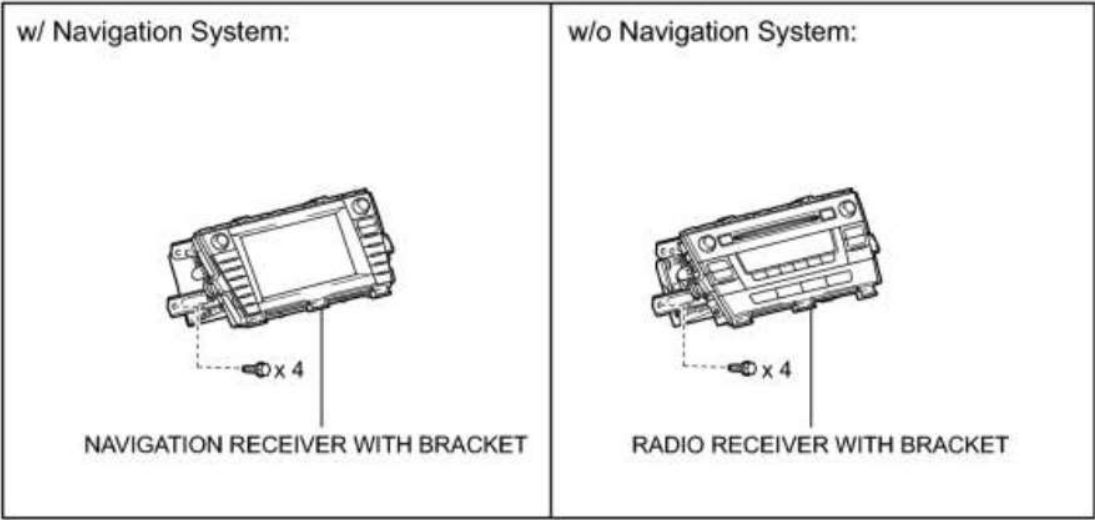

P

ILLUSTRATION

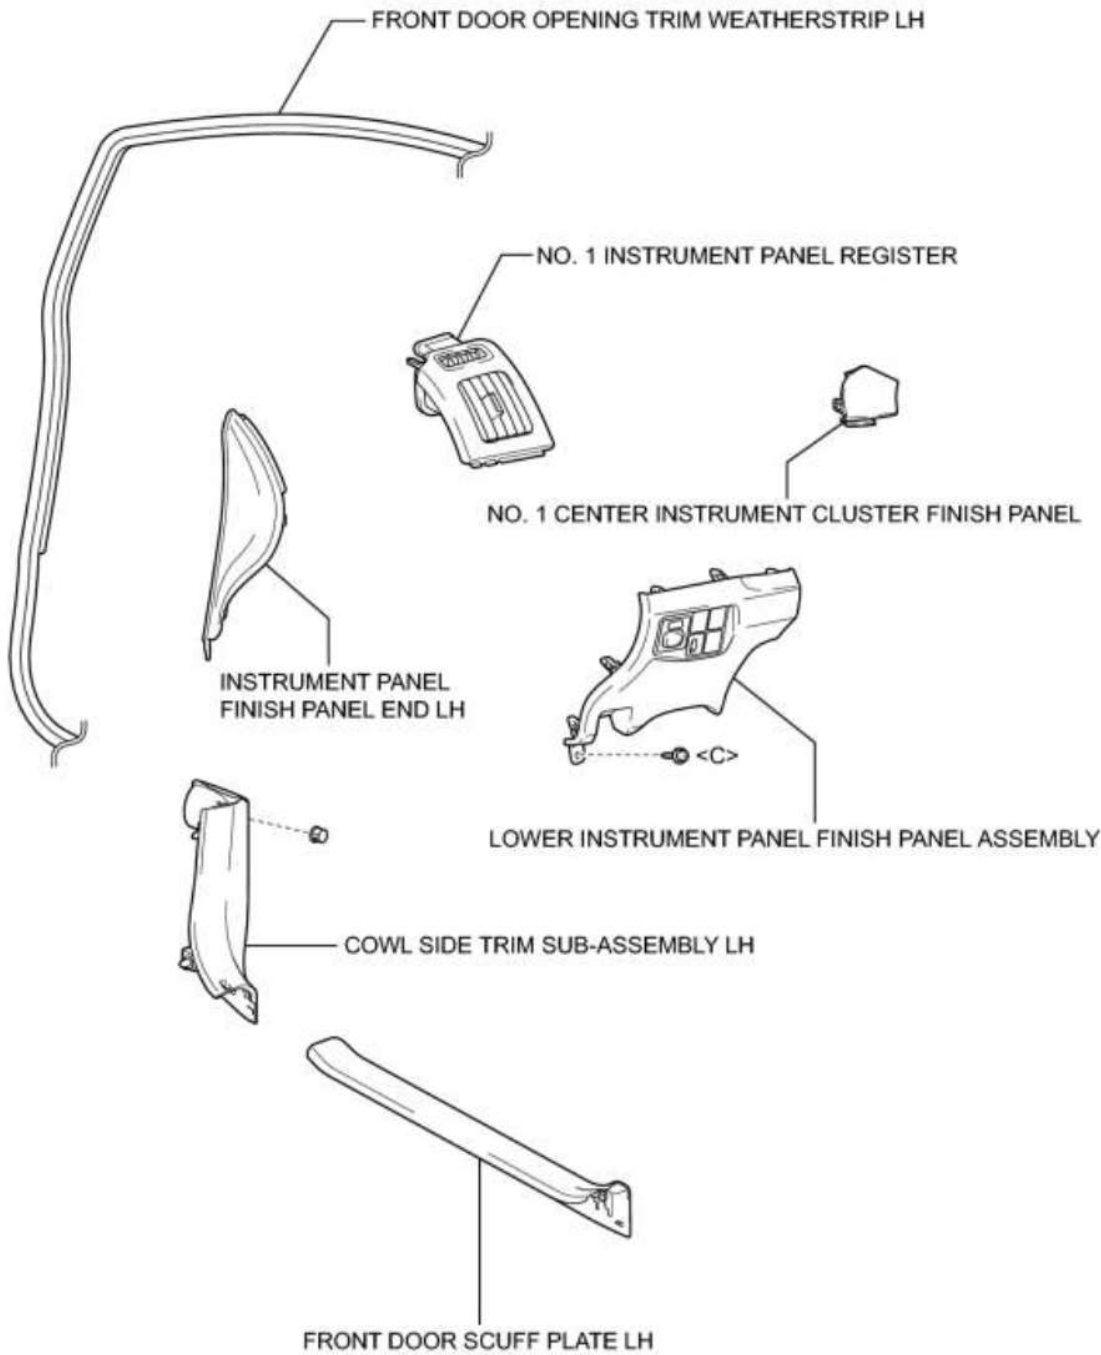


P

ILLUSTRATION


2010 Toyota Prius

Repair Manual

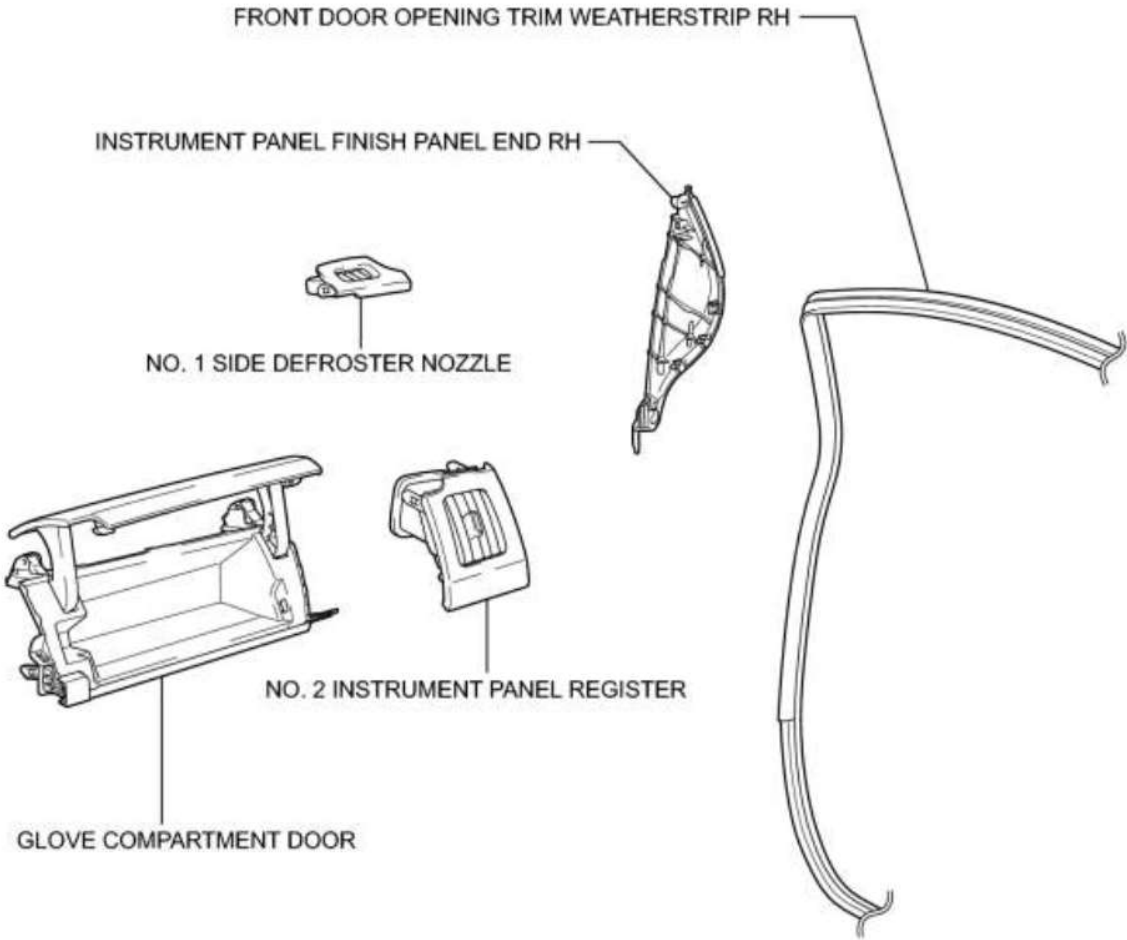

P


ILLUSTRATION

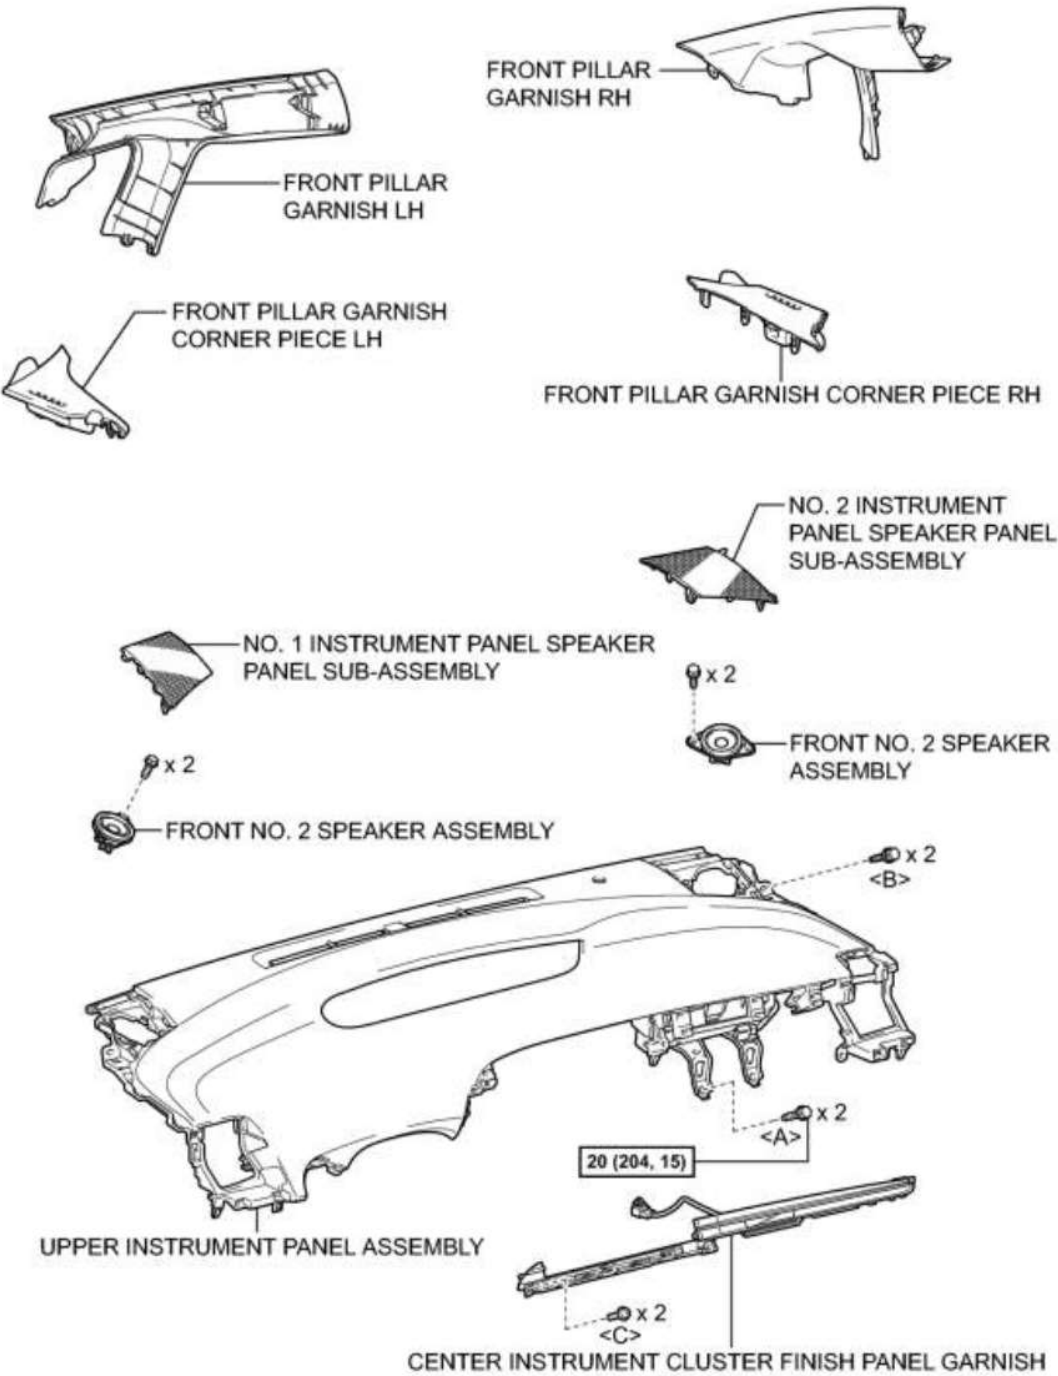

[N*m (kgf*cm, ft.*lbf) : Specified torque


P

ILLUSTRATION

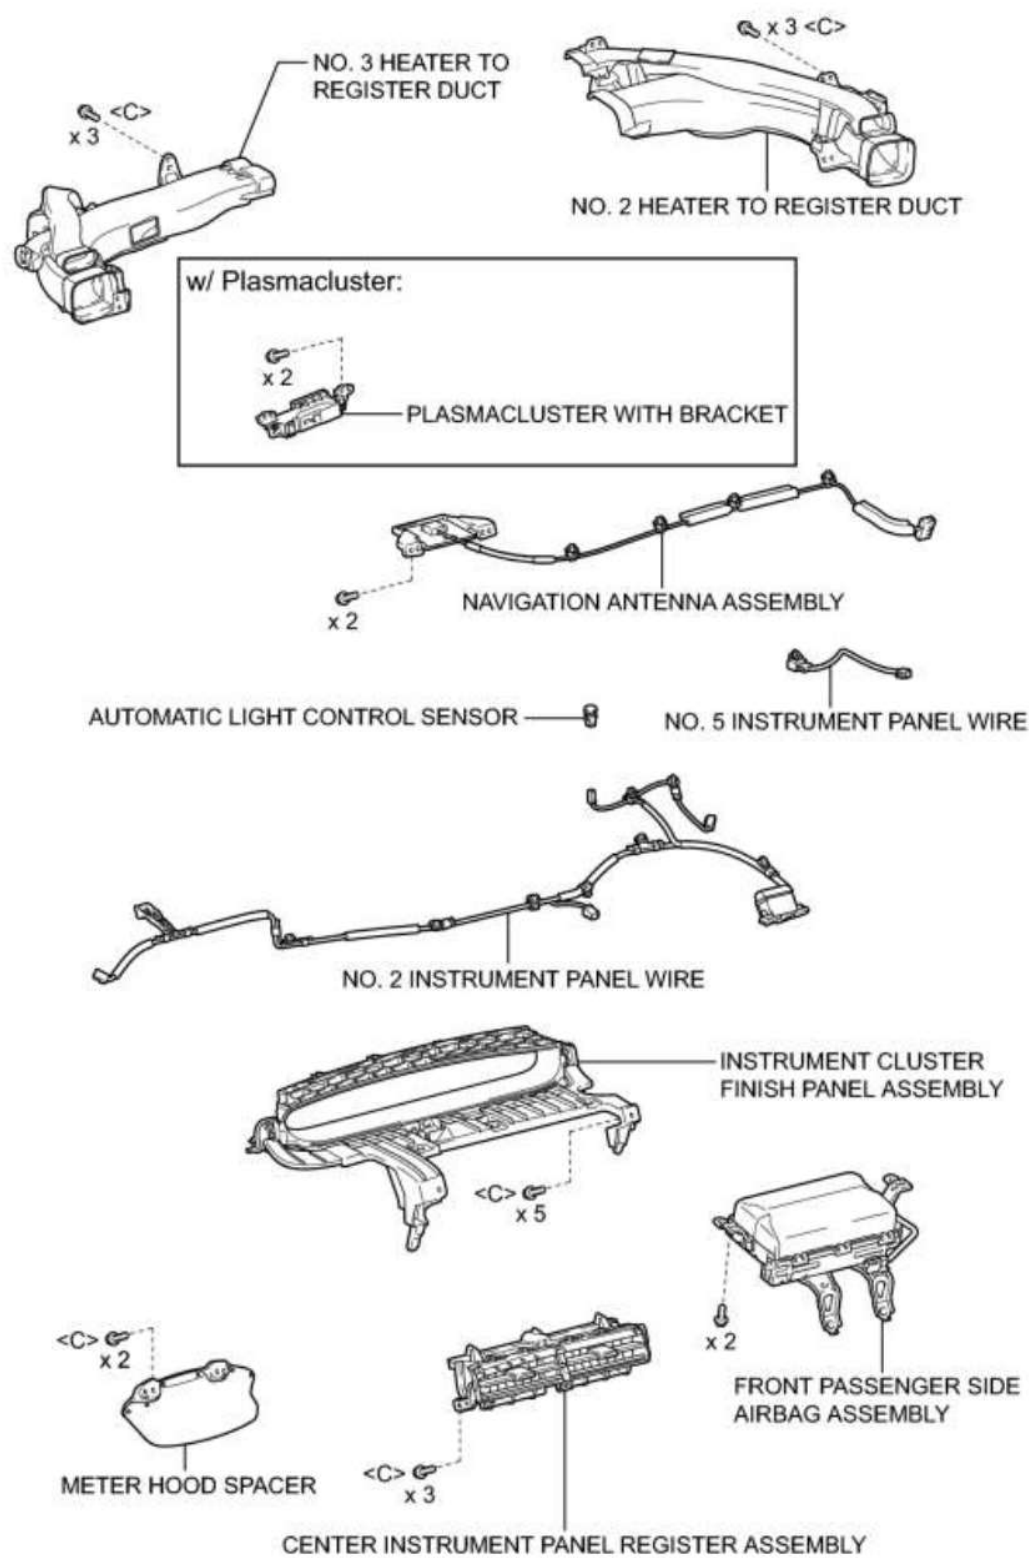

P

ILLUSTRATION

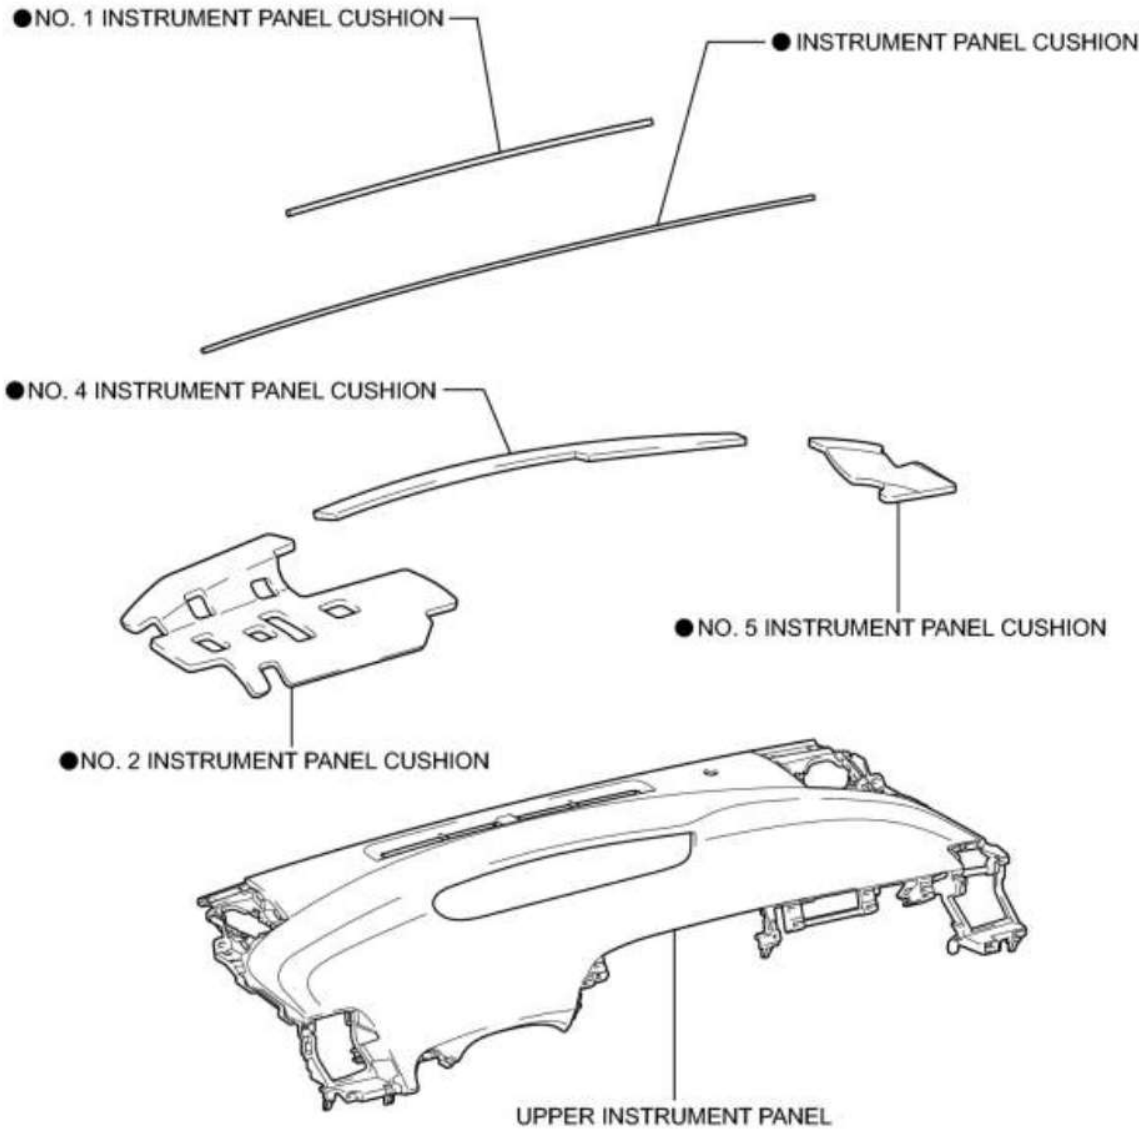


P

ILLUSTRATION

2010 Toyota Prius

Repair Manual

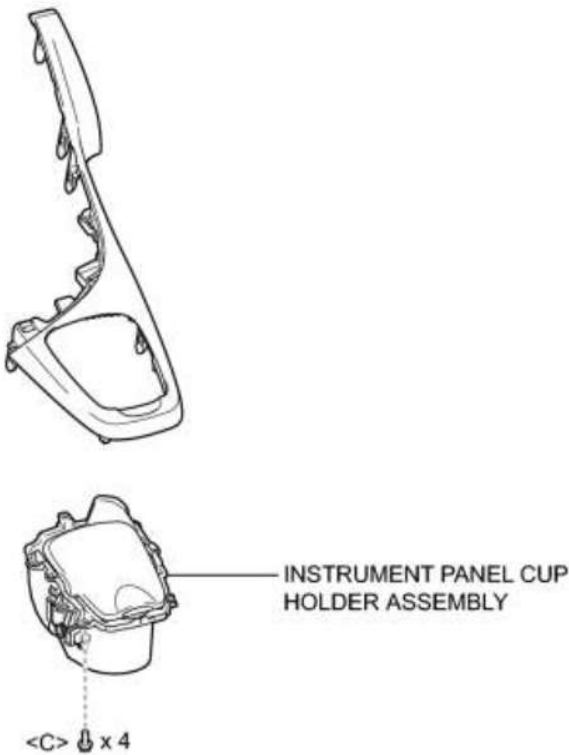

P

REMOVAL

1. PRECAUTION

INFO

2. REMOVE REAR NO. 2 FLOOR BOARD (for Separate Type) INFO

3. REMOVE REAR DECK FLOOR BOX INFO

4. REMOVE REAR NO. 3 FLOOR BOARD INFO

5. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected INFO.

6. REMOVE INTEGRATION CONTROL AND PANEL ASSEMBLY

(a) Using a moulding remover, slightly lift the panel at the position shown in the illustration.

Text in Illustration

*a	Lift slightly
----	---------------





(b) Pull the integration control and panel assembly in the direction indicated by the arrow to disengage the 6 claws.

(c) Disconnect each connector and remove the integration control and panel assembly.

7. REMOVE LOWER CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY


(a) Pull the lower center instrument cluster finish panel sub-assembly in the direction indicated by the arrow to disengage the 2 claws and 2 clips.

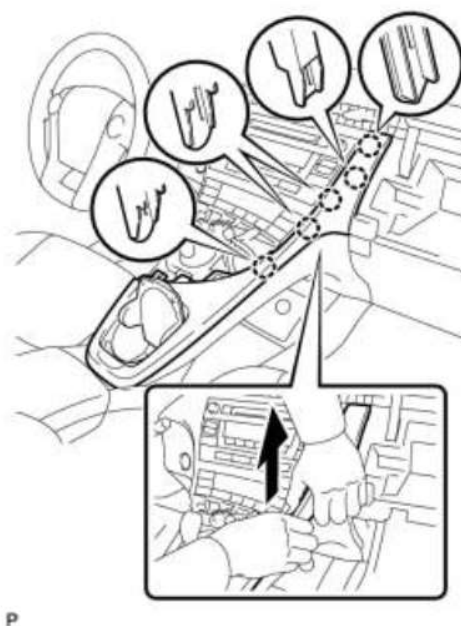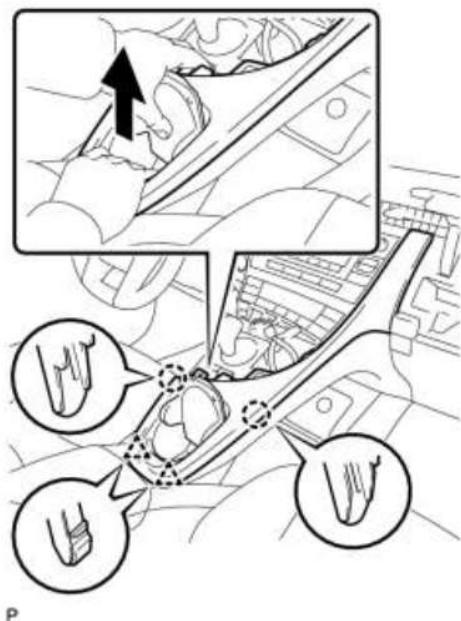

(b) Pull the lower center instrument cluster finish panel sub-assembly in the direction indicated by the arrow to disengage the 5 claws and remove the lower center instrument cluster finish panel sub-assembly.


8. REMOVE INSTRUMENT PANEL CUP HOLDER ASSEMBLY

(a) Remove the 4 screws <C> and instrument panel cup holder assembly from the lower center instrument cluster finish panel sub-assembly.

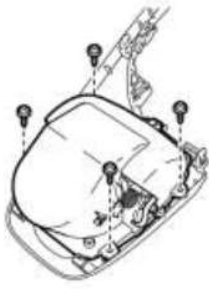


9. REMOVE INSTRUMENT CLUSTER FINISH PANEL GARNISH

- (a) Disengage the 14 claws.
- (b) Disconnect the connector and remove the instrument cluster finish panel garnish.

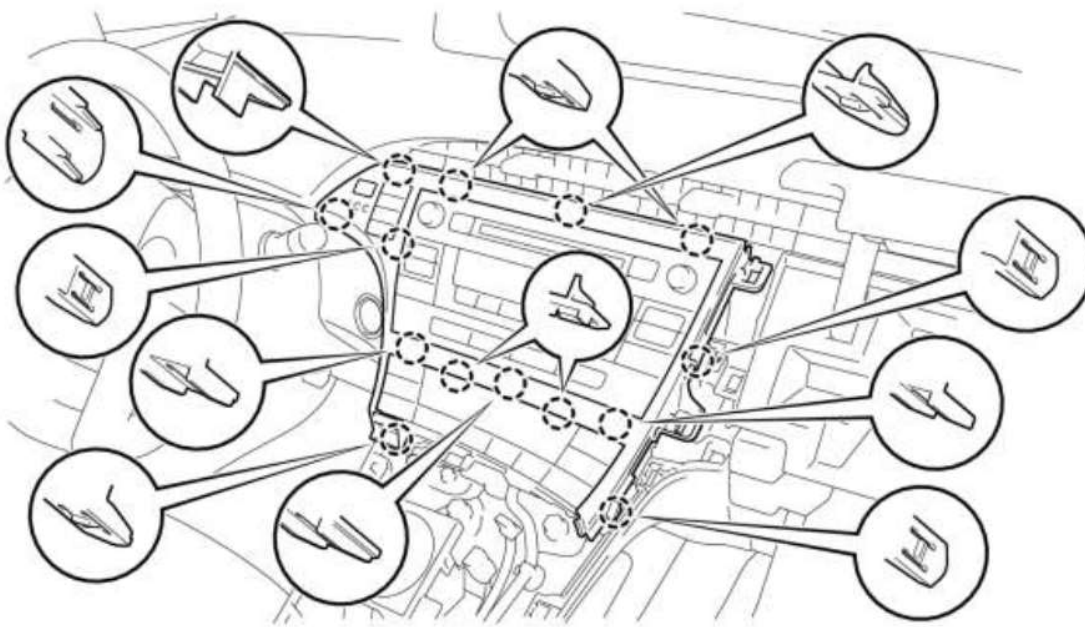

10. REMOVE UPPER INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY

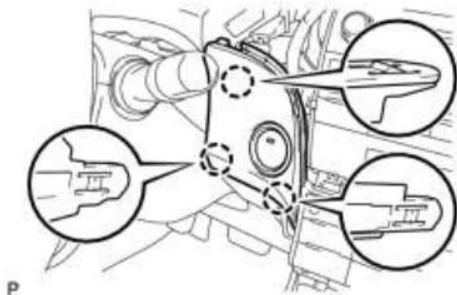

- (a) Disengage the 3 claws.

(b) Disconnect the connector and remove the upper instrument panel finish panel sub-assembly.


11. REMOVE RADIO RECEIVER WITH BRACKET (w/o Navigation System) INFO

12. REMOVE NAVIGATION RECEIVER WITH BRACKET (w/ Navigation System) INFO


13. REMOVE FRONT DOOR SCUFF PLATE LH INFO

14. REMOVE COWL SIDE TRIM SUB-ASSEMBLY LH INFO


15. REMOVE LOWER INSTRUMENT PANEL FINISH PANEL ASSEMBLY

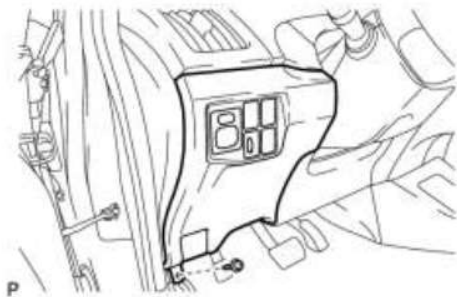

(a) Remove the screw <C>.

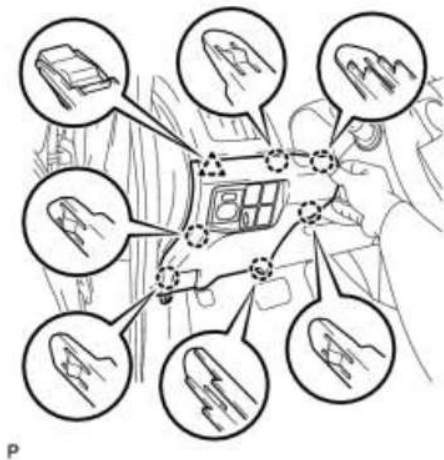


(b) Disengage the 6 claws and clip as shown in the illustration.

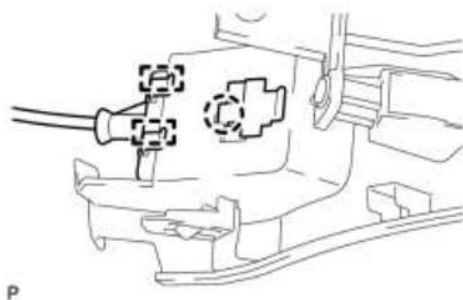


(c) Disengage the claw and 2 guides and disconnect the hood lock control cable.

(d) Disconnect each connector and clamp, and remove the lower instrument panel finish panel assembly.

16. REMOVE NO. 1 INSTRUMENT PANEL REGISTER

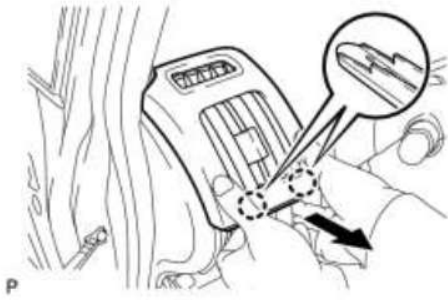


(a) Pull the No. 1 instrument panel register in the direction indicated by the arrow to disengage the 2 claws.

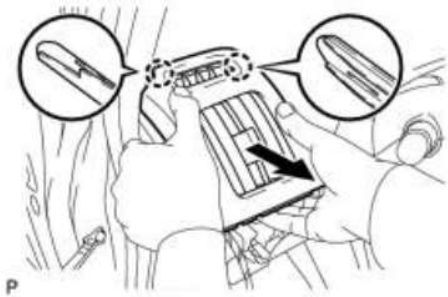

(b) Pull the No. 1 instrument panel register in the direction indicated by the arrow to disengage the 2 claws and remove the No. 1 instrument panel register.

17. REMOVE NO. 1 CENTER INSTRUMENT CLUSTER FINISH PANEL



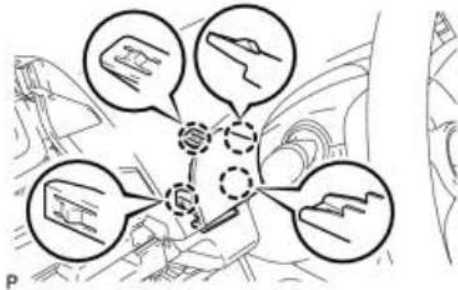


(a) Disengage the 4 claws to remove the No. 1 center instrument cluster finish panel.

18. DISCONNECT FRONT DOOR OPENING TRIM WEATHERSTRIP LH

19. REMOVE INSTRUMENT PANEL FINISH PANEL END LH


(a) Pull the instrument panel finish panel end LH in the direction indicated by the arrow to disengage the 4 claws.

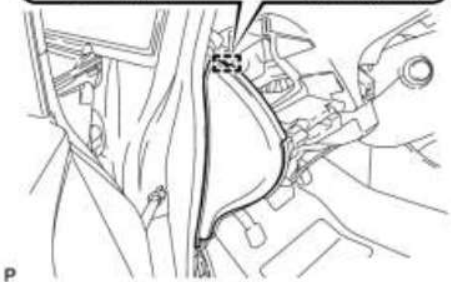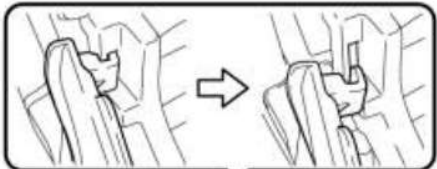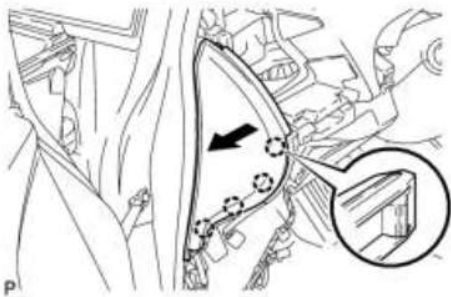

(b) Disengage the guide as shown in the illustration.



(c) Disengage the guide and remove the instrument panel finish panel end LH as shown in the illustration.

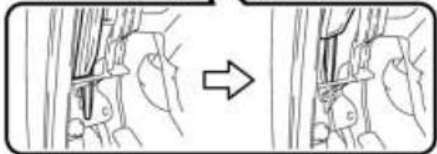


20. REMOVE NO. 1 SIDE DEFROSTER NOZZLE

(a) Using a moulding remover, slightly lift the panel at the position shown in the illustration.


Text in Illustration

*a	Lift slightly
----	---------------

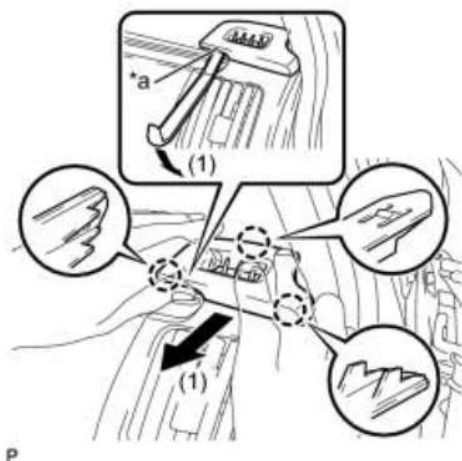


(b) Pull the No. 1 side defroster nozzle in the direction indicated by the arrow to disengage the 3 claws and remove the No. 1 side defroster nozzle.

21. REMOVE NO. 2 INSTRUMENT PANEL REGISTER

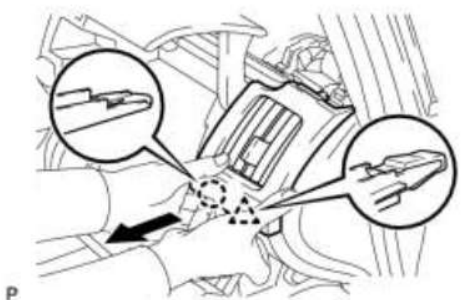

(a) Pull the No. 2 instrument panel register in the direction indicated by the arrow to disengage the claw and clip.

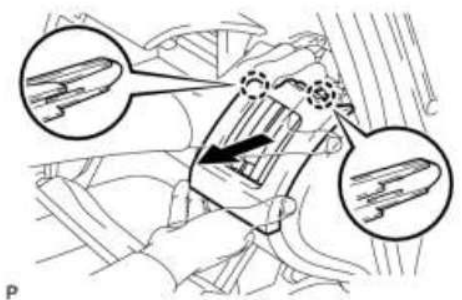


(b) Pull the No. 2 instrument panel register in the direction indicated by the arrow to disengage the 2 claws and remove the No. 2 instrument panel register.

22. REMOVE GLOVE COMPARTMENT DOOR

(a) Open the glove compartment door assembly.


(b) Pull the glove compartment door in the direction indicated by the arrow to disengage the 7 claws.

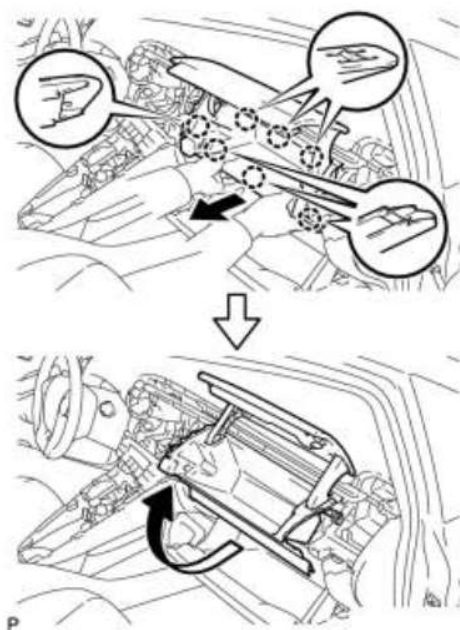

(c) Pull the glove compartment door in the direction indicated by the arrow to remove the glove compartment door.


23. DISCONNECT FRONT DOOR OPENING TRIM WEATHERSTRIP RH

24. REMOVE INSTRUMENT PANEL FINISH PANEL END RH

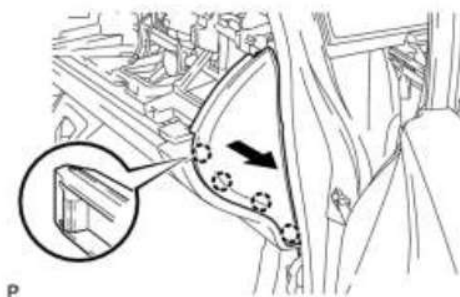

(a) Pull the instrument panel finish panel end RH in the direction indicated by the arrow to disengage the 4 claws.

(b) Disengage the guide as shown in the illustration.

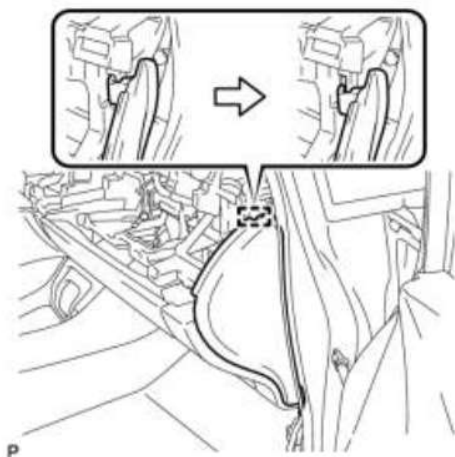


(c) Disengage the guide and remove the instrument panel finish panel end RH as shown in the illustration.



25. REMOVE FRONT PILLAR GARNISH LH_ INFO


26. REMOVE FRONT PILLAR GARNISH CORNER PIECE LH

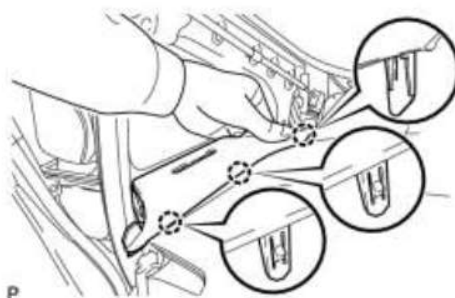

(a) Disengage the 3 claws and front pillar garnish corner piece LH as shown in the illustration.

27. REMOVE NO. 1 INSTRUMENT PANEL SPEAKER PANEL SUB-ASSEMBLY

(a) Pull the No. 1 instrument panel speaker panel sub-assembly in the direction indicated by the arrow to disengage the 6 claws and 2 guides, and remove the No. 1 instrument panel speaker panel sub-assembly.

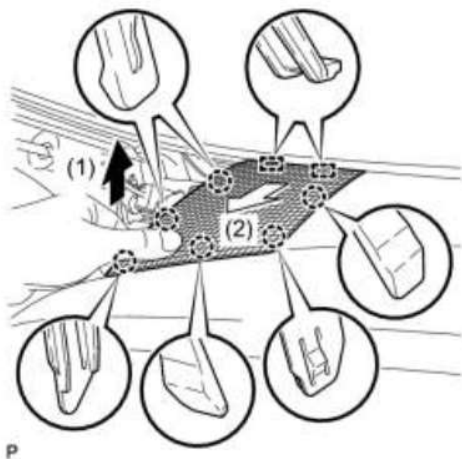


28. REMOVE FRONT NO. 2 SPEAKER ASSEMBLY INFO

29. REMOVE FRONT PILLAR GARNISH RH

HINT:

Use the same procedure for the RH side and LH side INFO.


30. REMOVE FRONT PILLAR GARNISH CORNER PIECE RH

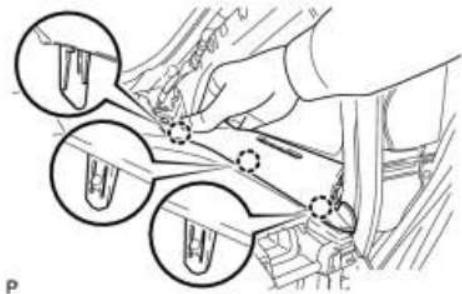

(a) Disengage the 3 claws and front pillar garnish corner piece RH as shown in the illustration.

31. REMOVE NO. 2 INSTRUMENT PANEL SPEAKER PANEL SUB-ASSEMBLY

(a) Pull the No. 2 instrument panel speaker panel sub-assembly in the direction indicated by the arrow to disengage the 6 claws and 2 guides, and remove the No. 2 instrument panel speaker panel sub-assembly.

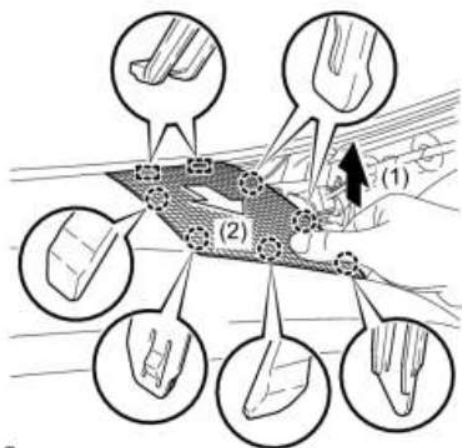

P


32. REMOVE FRONT NO. 2 SPEAKER ASSEMBLY

HINT:

Use the same procedure for the RH side and LH side INFO.

33. REMOVE CENTER INSTRUMENT CLUSTER FINISH PANEL GARNISH

- (a) Remove the 2 screws <C>.
- (b) Disengage the 7 claws.
- (c) Disconnect the connector and remove the center instrument cluster finish panel garnish.

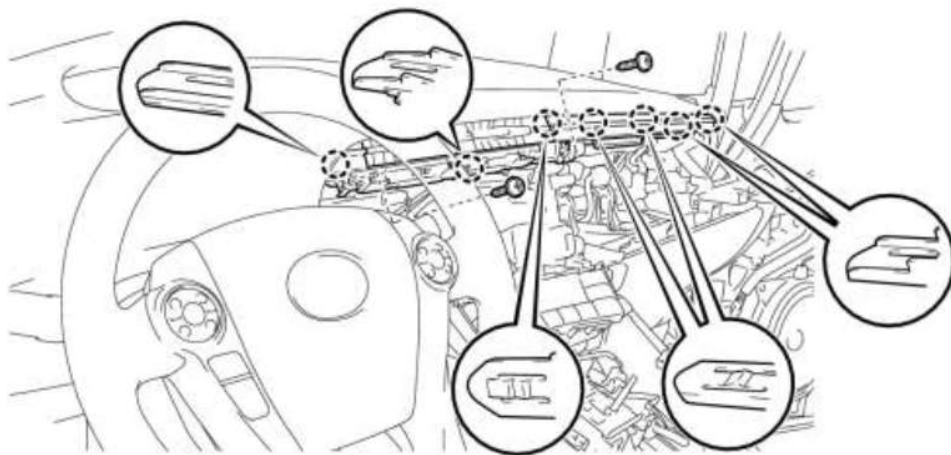


P

34. DISCONNECT NO. 3 INSTRUMENT PANEL WIRE_ INFO

35. REMOVE UPPER INSTRUMENT PANEL ASSEMBLY

- (a) Disconnect each connector.


(b) Disengage the 2 clamps.

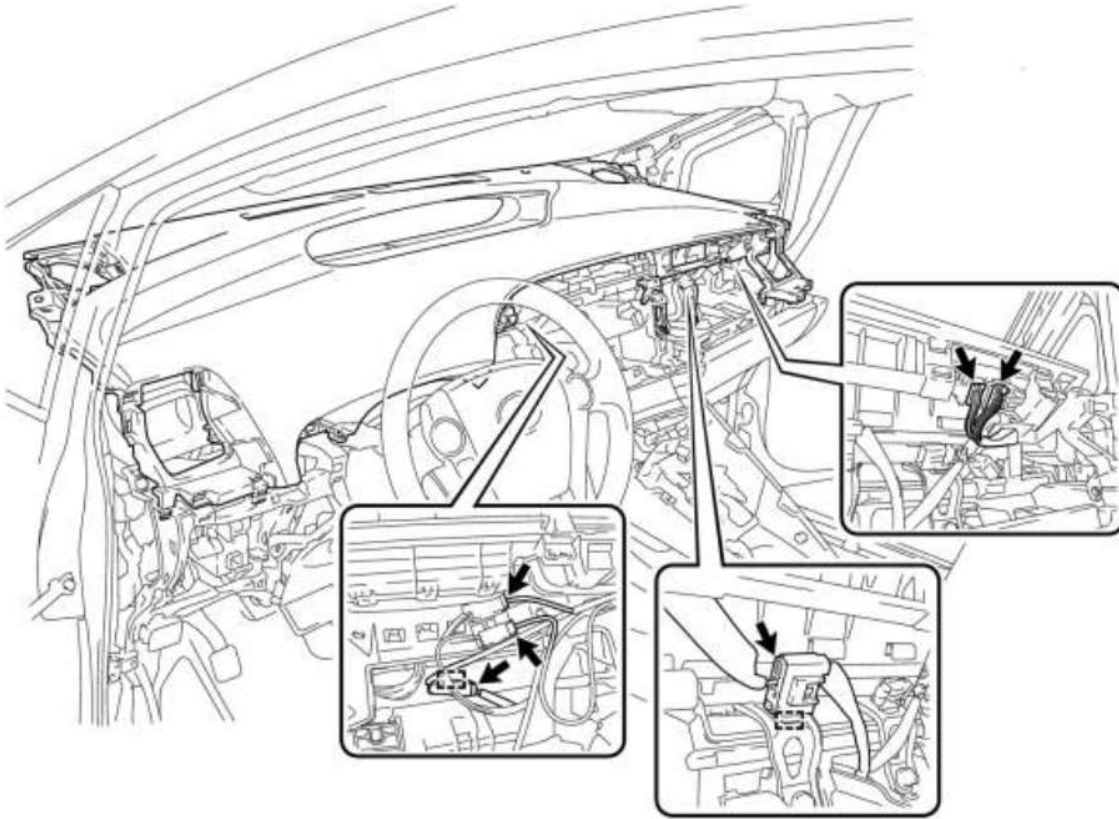

P

(c) Remove the 2 bolts .

(d) Remove the 2 passenger airbag bolts <A>.

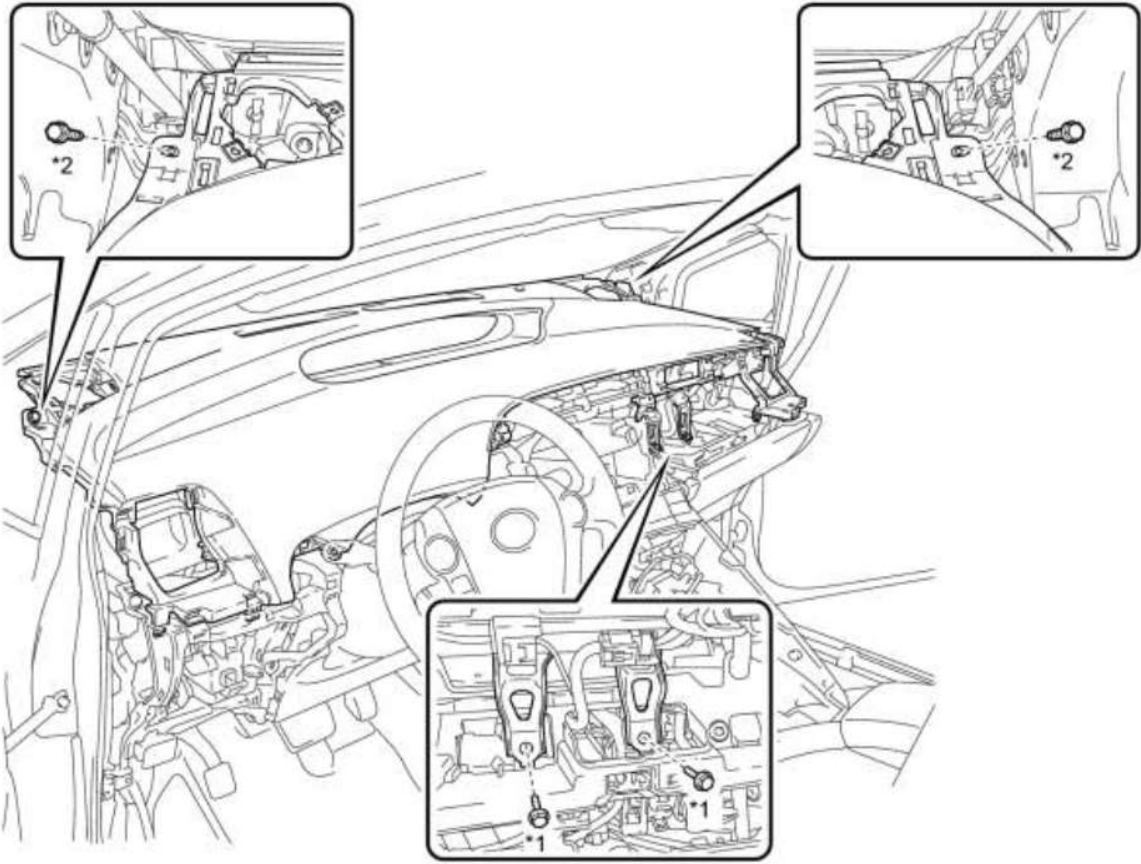


P

Text in Illustration

*1	Passenger Airbag Bolt <A>	*2	Bolt
----	---------------------------	----	----------


- (e) Pull the upper instrument panel assembly in the direction indicated by the arrow to disengage the 2 claws and 4 clips.
- (f) Pull the upper instrument panel assembly in the direction indicated by the arrow to disengage the 5 claws and remove the upper instrument panel assembly.

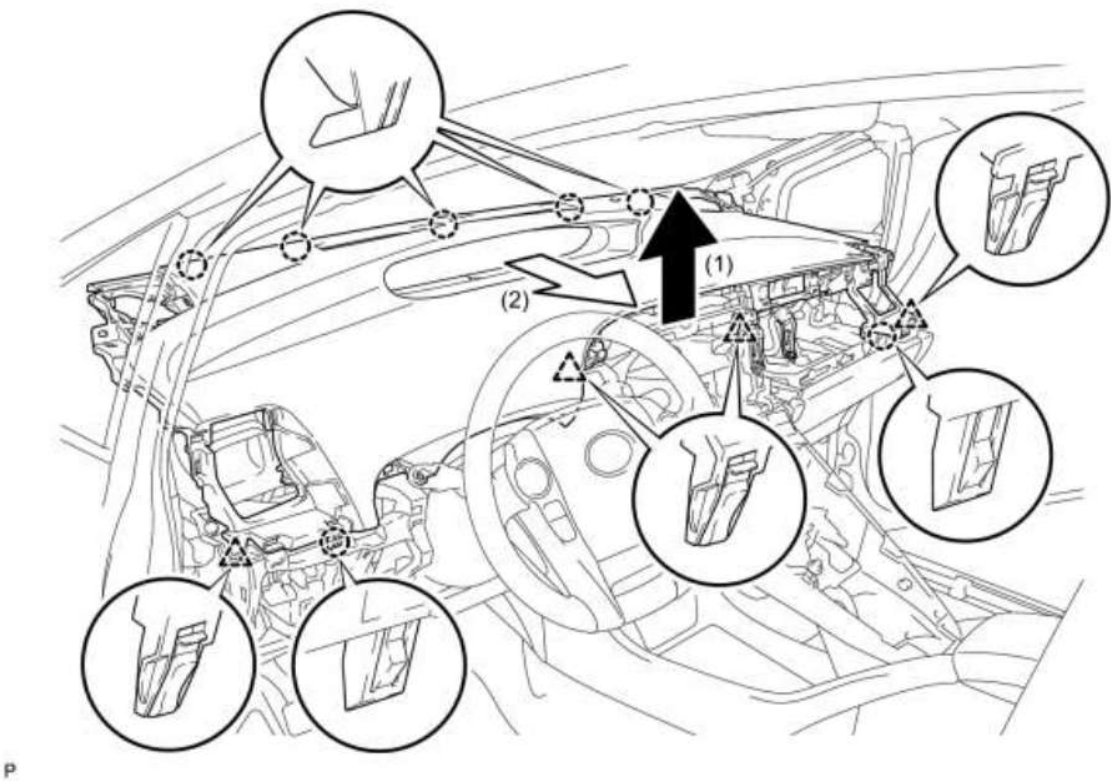

cardiagn.com


DISASSEMBLY

1. REMOVE NO. 3 HEATER TO REGISTER DUCT

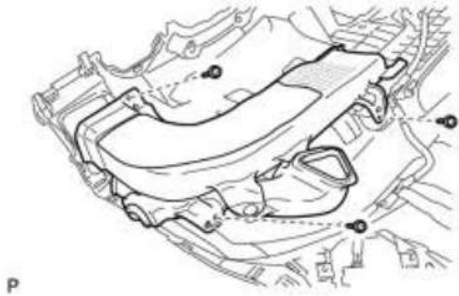

(a) Remove the 3 screws <C> and No. 3 heater to register duct.

2. REMOVE NO. 2 HEATER TO REGISTER DUCT

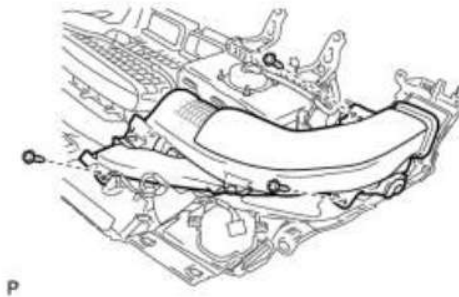

(a) Remove the 3 screws <C> and No. 2 heater to register duct.

3. REMOVE PLASMACLUSTER WITH BRACKET (w/ Plasmacluster) INFO


4. REMOVE NAVIGATION ANTENNA ASSEMBLY (w/ Navigation System) INFO

5. REMOVE AUTOMATIC LIGHT CONTROL SENSOR INFO

6. REMOVE NO. 2 INSTRUMENT PANEL WIRE


(a) Disconnect the connector.

(b) Disengage the 2 claws and each clamp, and remove the No. 2 instrument panel wire.

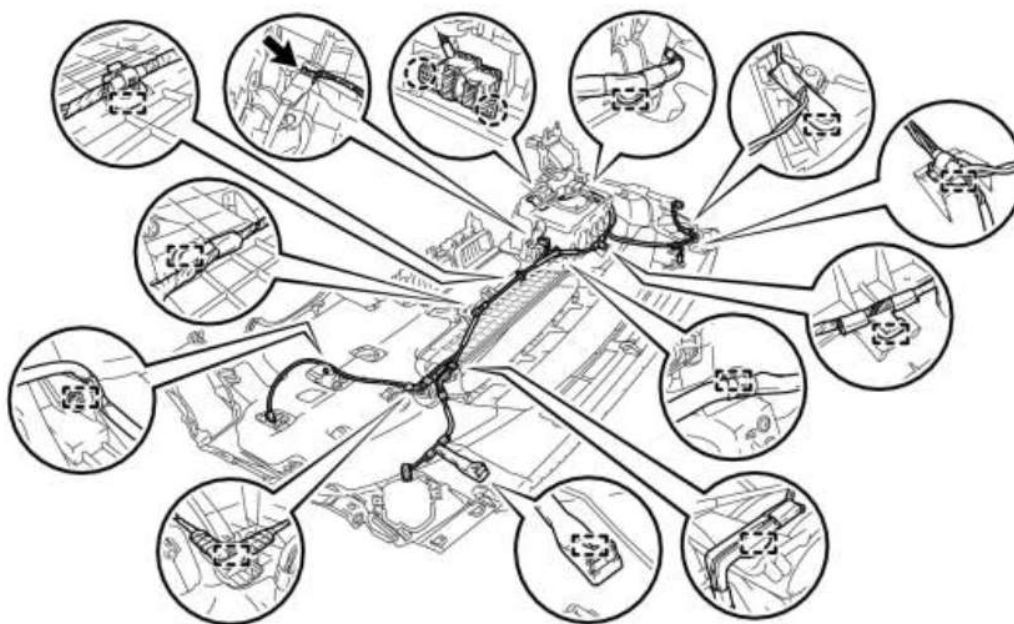

P


7. REMOVE NO. 5 INSTRUMENT PANEL WIRE

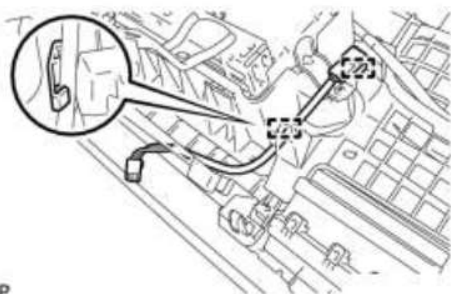

P

(a) Disengage the 2 clamps and remove the No. 5 instrument panel wire.

8. REMOVE INSTRUMENT CLUSTER FINISH PANEL ASSEMBLY

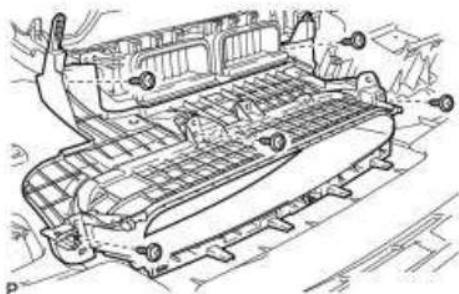


P

(a) Remove the 5 screws <C> and instrument cluster finish panel assembly.


9. REMOVE CENTER INSTRUMENT PANEL REGISTER ASSEMBLY

(a) Remove the 3 screws <C> and center instrument panel register

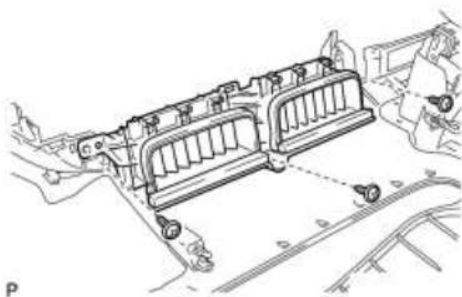

assembly.


10. REMOVE METER HOOD SPACER

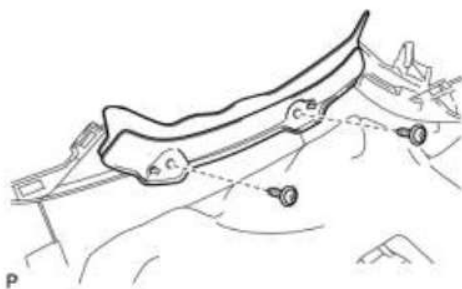

(a) Remove the 2 screws <C> and meter hood spacer.

11. REMOVE FRONT PASSENGER SIDE AIRBAG ASSEMBLY_ INFO


12. REMOVE NO. 1 INSTRUMENT PANEL CUSHION

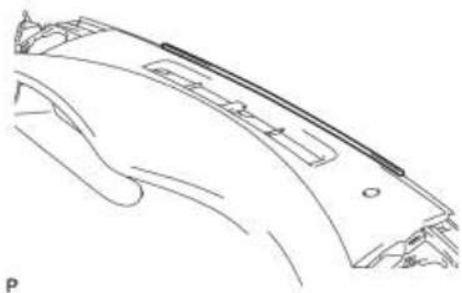


(a) Remove the No. 1 instrument panel cushion.

13. REMOVE INSTRUMENT PANEL CUSHION

(a) Remove the instrument panel cushion.

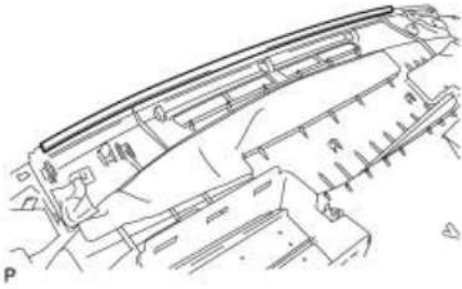


14. REMOVE NO. 2 INSTRUMENT PANEL CUSHION

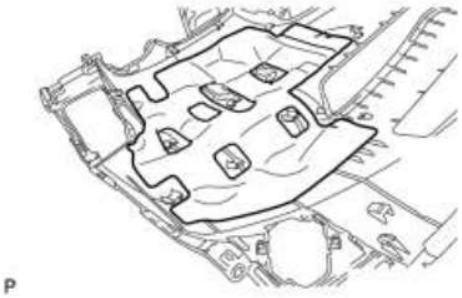


(a) Remove the No. 2 instrument panel cushion.

15. REMOVE NO. 4 INSTRUMENT PANEL CUSHION

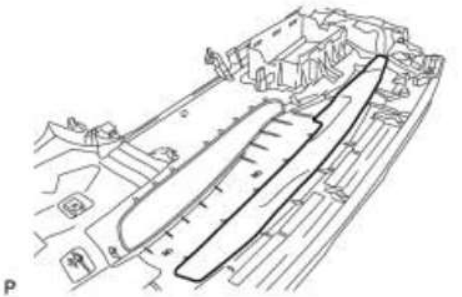

(a) Remove the No. 4 instrument panel cushion.


16. REMOVE NO. 5 INSTRUMENT PANEL CUSHION

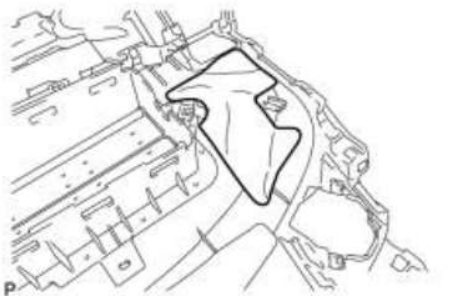

(a) Remove the No. 5 instrument panel cushion.


REASSEMBLY

1. INSTALL NO. 5 INSTRUMENT PANEL CUSHION

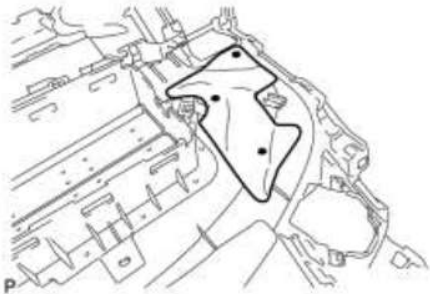


(a) Using hot-melt glue and install a new No. 5 instrument panel cushion as shown in the illustration.

2. INSTALL NO. 4 INSTRUMENT PANEL CUSHION

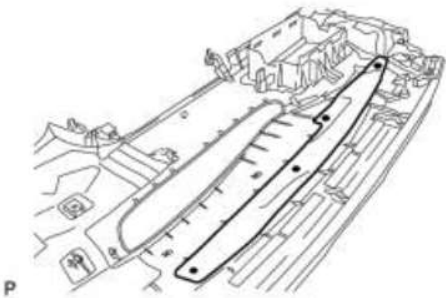

(a) Using hot-melt glue and install a new No. 4 instrument panel cushion as shown in the illustration.


3. INSTALL NO. 2 INSTRUMENT PANEL CUSHION

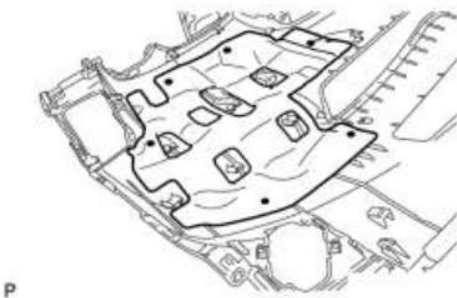

(a) Using hot-melt glue and install a new No. 2 instrument panel cushion as shown in the illustration.

4. INSTALL INSTRUMENT PANEL CUSHION

(a) Align the marking lines on the upper instrument panel with the ends of the instrument panel cushion and install a new instrument panel cushion

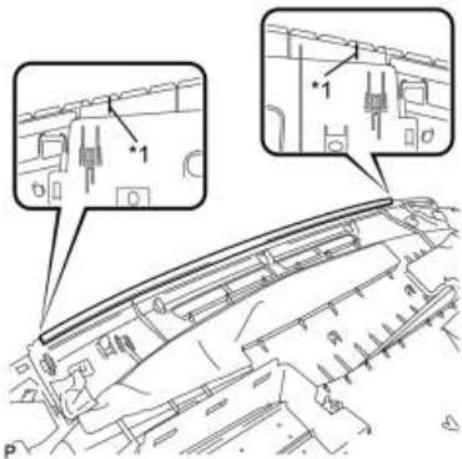


as shown in the illustration.

Text in Illustration

*1	Marking Line
----	--------------

5. INSTALL NO. 1 INSTRUMENT PANEL CUSHION

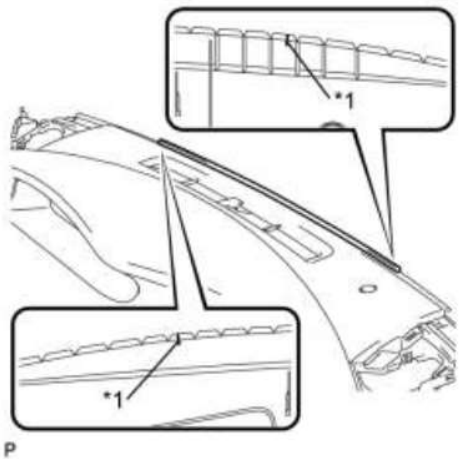


(a) Align the marking lines on the upper instrument panel with the ends of the No. 1 instrument panel cushion and install a new No. 1 instrument panel cushion as shown in the illustration.

Text in Illustration

*1	Marking Line
----	--------------


6. INSTALL FRONT PASSENGER SIDE AIRBAG ASSEMBLY_ INFO

7. INSTALL METER HOOD SPACER

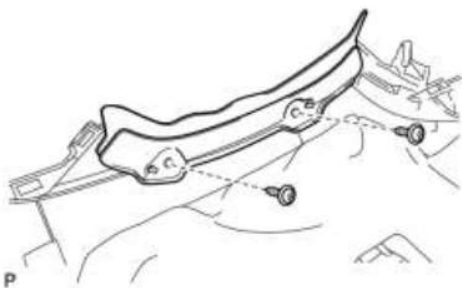


(a) Install the meter hood spacer with the 2 screws <C>.

8. INSTALL CENTER INSTRUMENT PANEL REGISTER ASSEMBLY

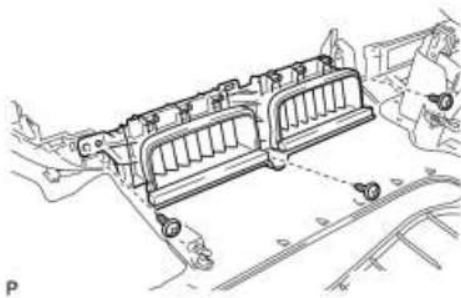


(a) Install the center instrument panel register assembly with the 3 screws <C>.

9. INSTALL INSTRUMENT CLUSTER FINISH PANEL ASSEMBLY

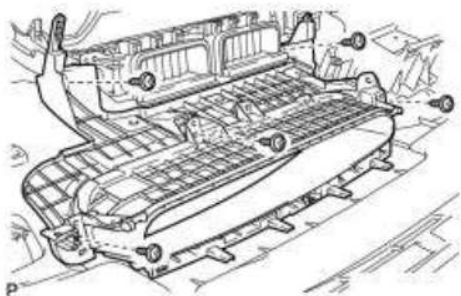

(a) Install the instrument cluster finish panel assembly with the 5 screws <C>.

10. INSTALL NO. 5 INSTRUMENT PANEL WIRE

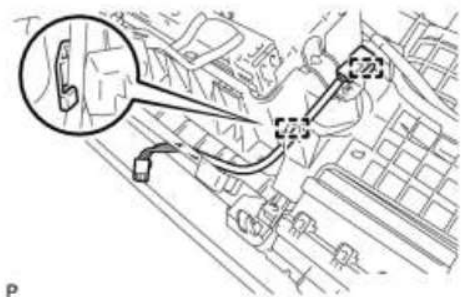


(a) Engage the 2 clamps to install the No. 5 instrument panel wire.

11. INSTALL NO. 2 INSTRUMENT PANEL WIRE

(a) Engage each clamp and 2 claws.

(b) Connect the connector to install the No. 2 instrument panel wire.

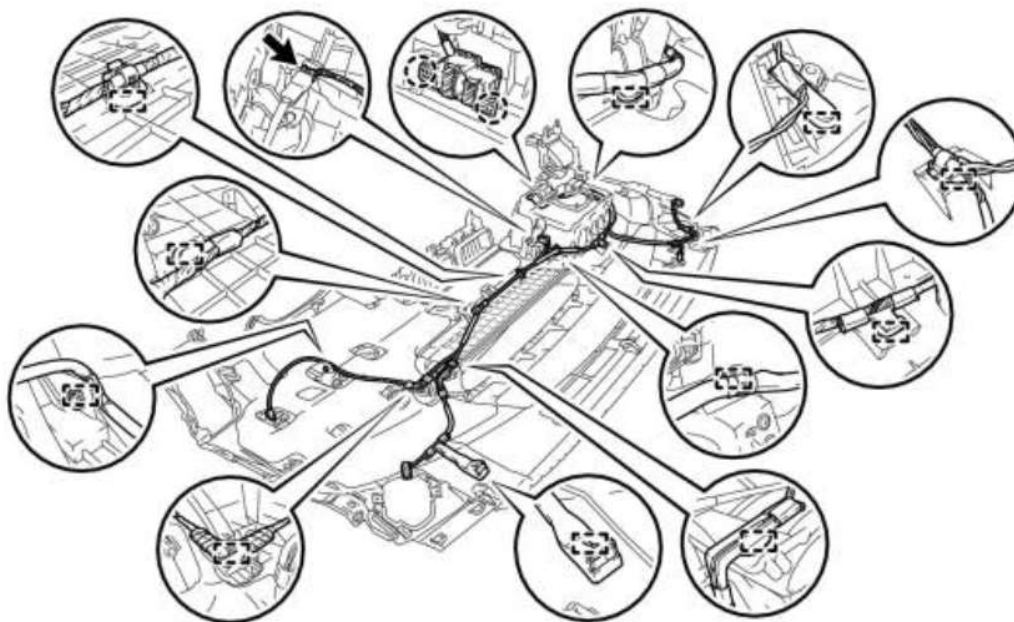


12. INSTALL AUTOMATIC LIGHT CONTROL SENSOR_ [INFO](#)

13. INSTALL NAVIGATION ANTENNA ASSEMBLY (w/ Navigation System)_ [INFO](#)

14. INSTALL PLASMACLUSTER WITH BRACKET (w/ Plasmacluster)_ [INFO](#)


15. INSTALL NO. 2 HEATER TO REGISTER DUCT

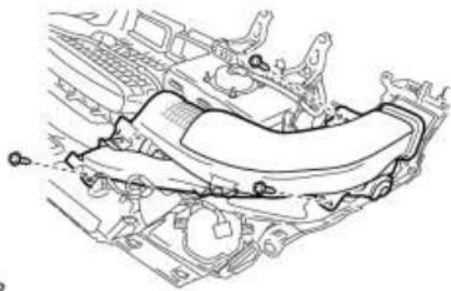

(a) Install the No. 2 heater to register duct with the 3 screws <C>.

16. INSTALL NO. 3 HEATER TO REGISTER DUCT

(a) Install the No. 3 heater to register duct with the 3 screws <C>.

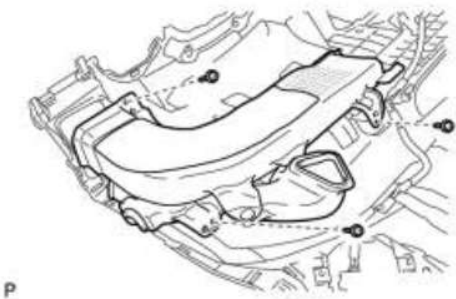


cardiagn.com

INSTALLATION

1. INSTALL UPPER INSTRUMENT PANEL ASSEMBLY

(a) When using a new upper instrument panel sub-assembly:


(1) Immediately before installing the upper instrument panel assembly, twist and cut off the portions shown in the illustration.

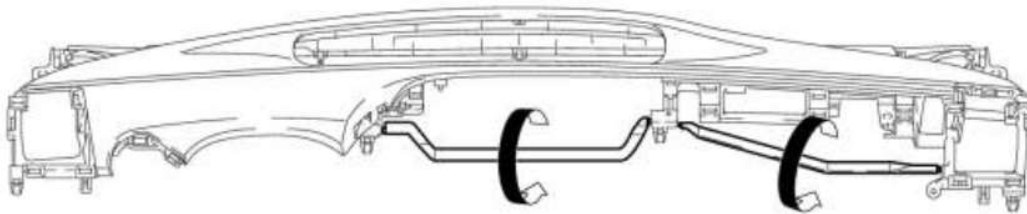

P

(b) Engage the 5 claws as shown in the illustration.


(c) Engage the 2 claws and 4 clips, and install the upper instrument panel assembly as shown in the illustration.

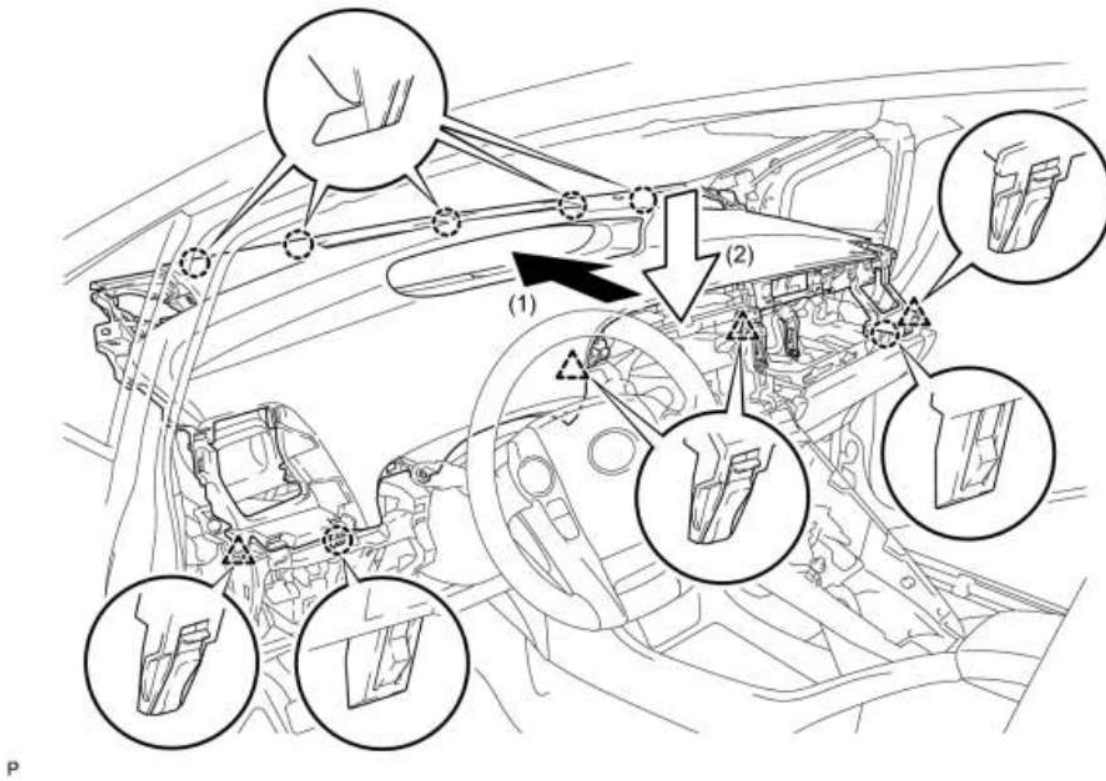

(d) Install the 2 bolts .

(e) Install the 2 passenger airbag bolts <A>.

Torque: 20 N·m (204 kgf·cm, 15ft·lbf)

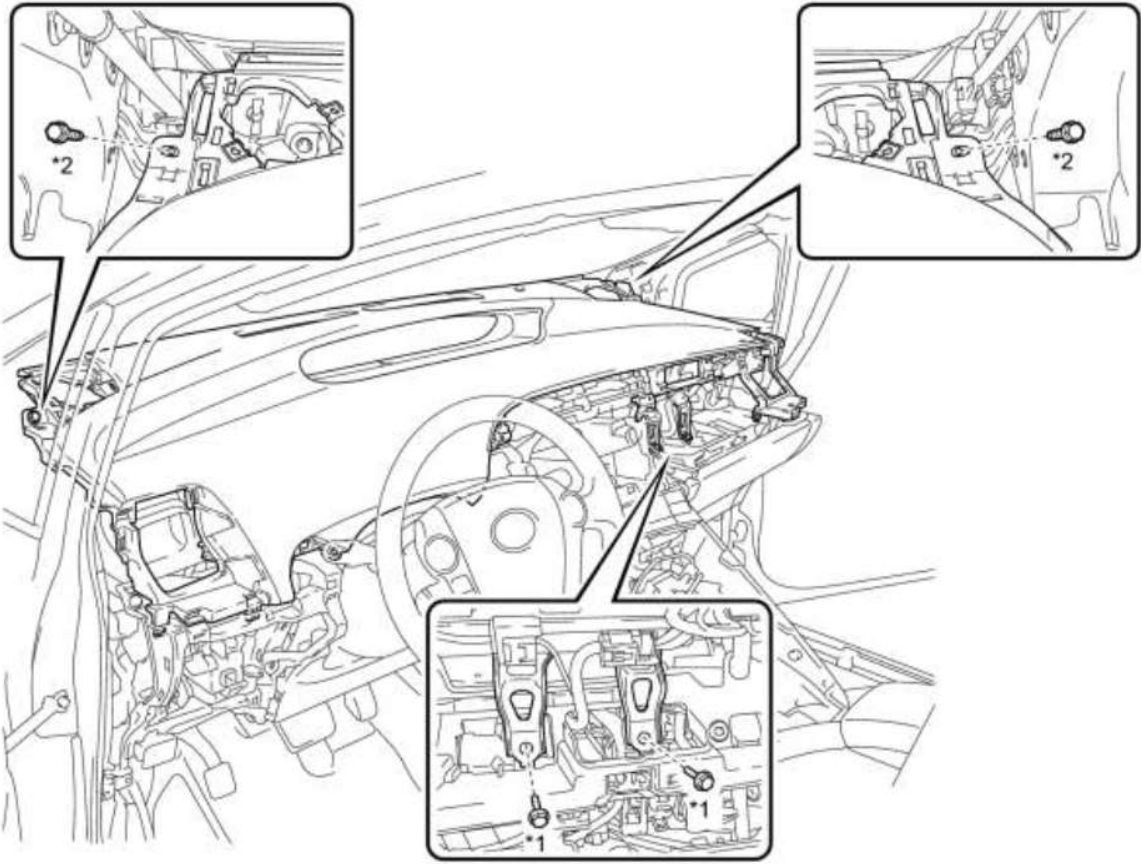


P

Text in Illustration

*1	Passenger Airbag Bolt <A>	*2	Bolt
----	---------------------------	----	----------

- (f) Engage the 2 clamps.
- (g) Connect each connector.

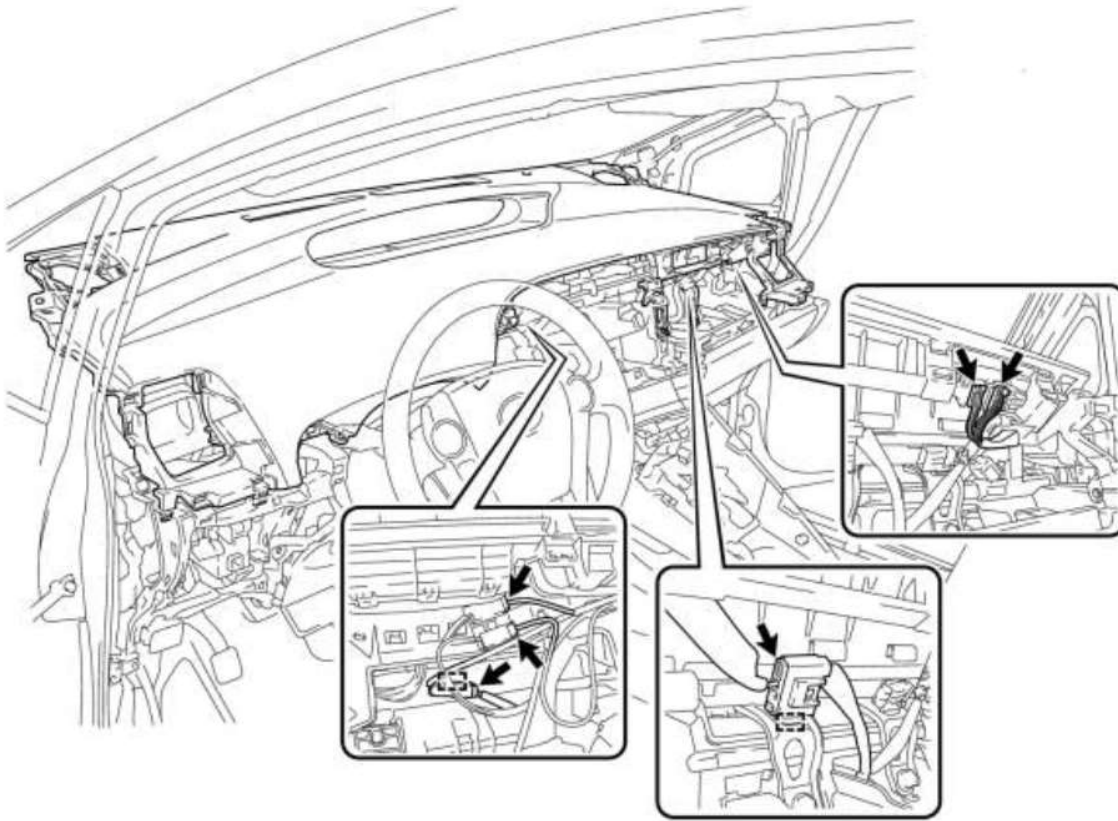


P

2. CONNECT NO. 3 INSTRUMENT PANEL WIRE_ INFO

3. INSTALL CENTER INSTRUMENT CLUSTER FINISH PANEL GARNISH

- (a) Connect the connector.
- (b) Engage the 7 claws.
- (c) Install the center instrument cluster finish panel garnish with the 2 screws <C>.

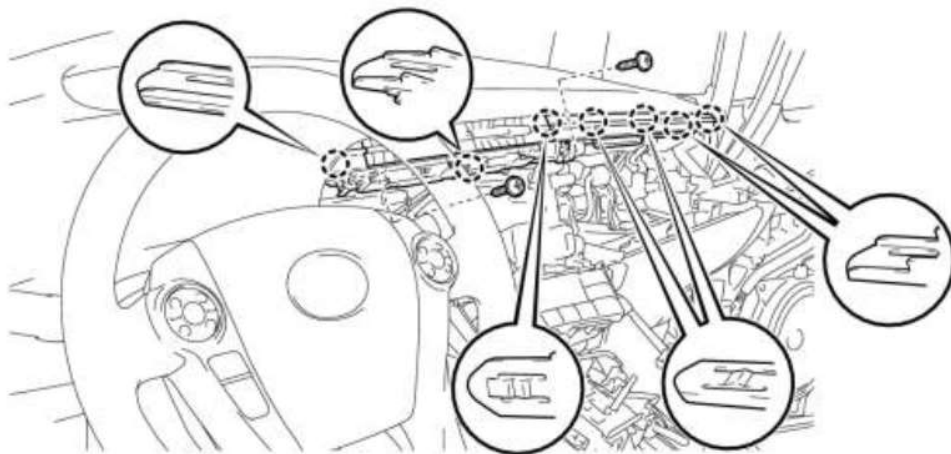


P

4. INSTALL FRONT NO. 2 SPEAKER ASSEMBLY

HINT:

Use the same procedure for the RH side and LH side INFO.

5. INSTALL NO. 2 INSTRUMENT PANEL SPEAKER PANEL SUB-ASSEMBLY

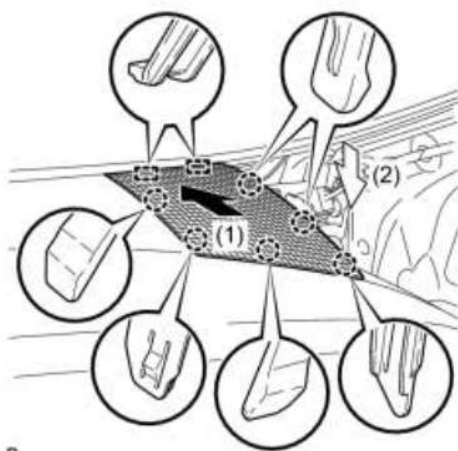


P

(a) Engage the 2 guides and 6 claws to install the No. 2 instrument panel speaker panel sub-assembly as shown in the illustration.

6. INSTALL FRONT PILLAR GARNISH CORNER PIECE RH

(a) Engage the 3 claws to install the front pillar garnish corner piece RH.

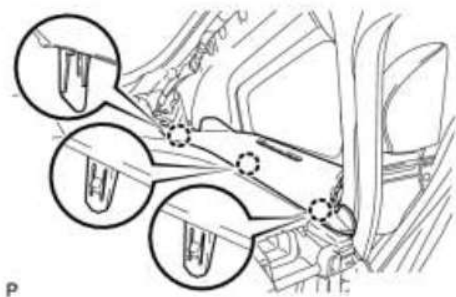


7. INSTALL FRONT PILLAR GARNISH RH

HINT:

Use the same procedure for the RH side and LH side INFO.


8. INSTALL FRONT NO. 2 SPEAKER ASSEMBLY INFO

9. INSTALL NO. 1 INSTRUMENT PANEL SPEAKER PANEL SUB-ASSEMBLY

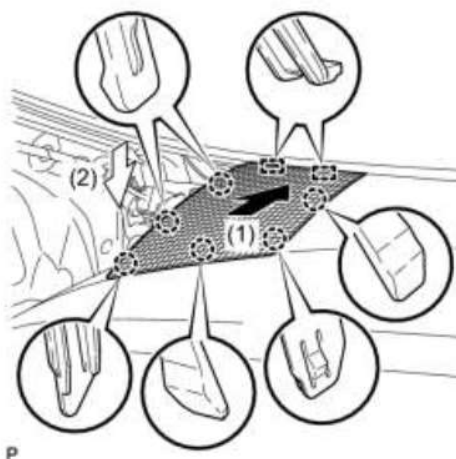

(a) Engage the 2 guides and 6 claws to install the No. 1 instrument panel speaker panel sub-assembly as shown in the illustration.

10. INSTALL FRONT PILLAR GARNISH CORNER PIECE LH

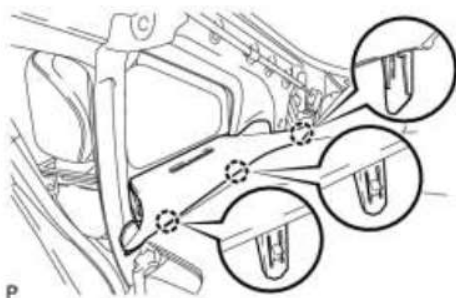

(a) Engage the 3 claws to install the front pillar garnish corner piece LH.

11. INSTALL FRONT PILLAR GARNISH LH INFO


2010 Toyota Prius

Repair Manual

12. INSTALL INSTRUMENT PANEL FINISH PANEL END RH




(a) Engage the guide as shown in the illustration.

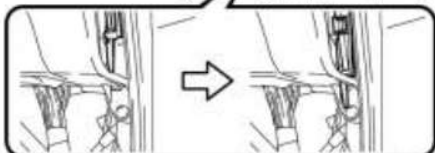

(b) Engage the guide as shown in the illustration.




(c) Engage the 4 claws to install the instrument panel finish panel end RH.

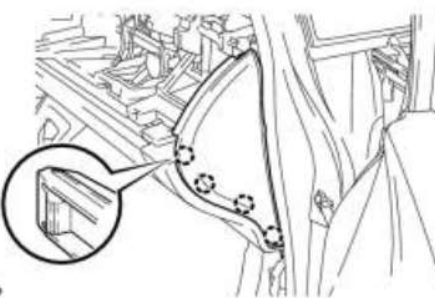13. CONNECT FRONT DOOR OPENING TRIM WEATHERSTRIP RH INFO

14. INSTALL GLOVE COMPARTMENT DOOR


(a) Open the glove compartment door assembly.

(b) Insert the glove compartment door as shown in the illustration.

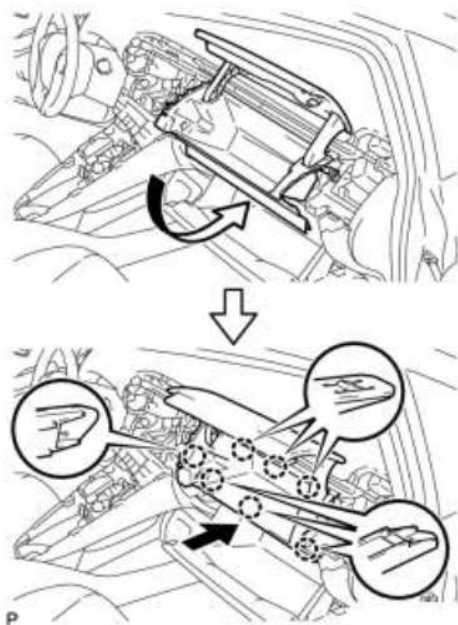


(c) Engage the 7 claws to install the glove compartment door.

15. INSTALL NO. 2 INSTRUMENT PANEL REGISTER

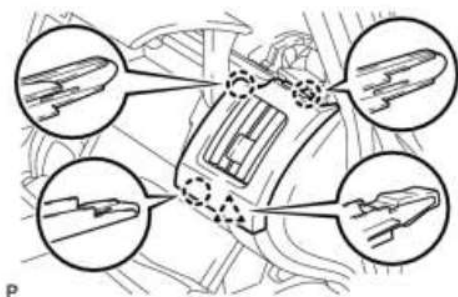


(a) Engage the 3 claws and clip to install the No. 2 instrument panel register.

16. INSTALL NO. 1 SIDE DEFROSTER NOZZLE

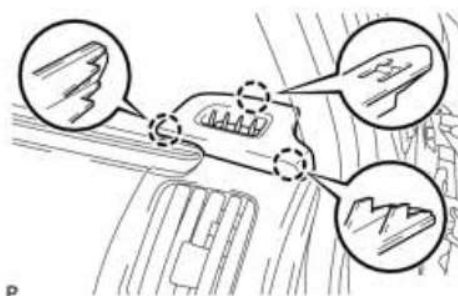

(a) Engage the 3 claws to install the No. 1 side defroster nozzle.

17. INSTALL INSTRUMENT PANEL FINISH PANEL END LH

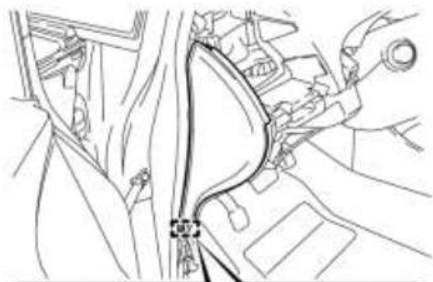


(a) Engage the guide as shown in the illustration.




P



(b) Engage the guide as shown in the illustration.

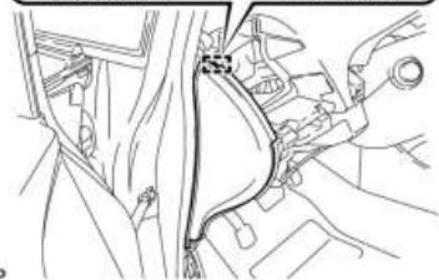

P

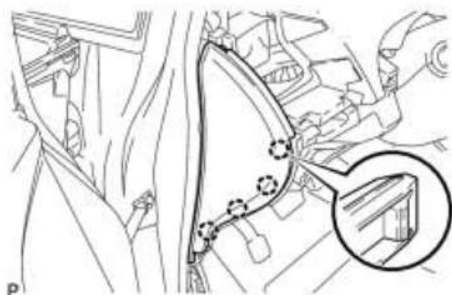


(c) Engage the 4 claws to install the instrument panel finish panel end LH.


18. CONNECT FRONT DOOR OPENING TRIM WEATHERSTRIP LH_ INFO

19. INSTALL NO. 1 CENTER INSTRUMENT CLUSTER FINISH PANEL

(a) Engage the 4 claws to install the No. 1 center instrument cluster finish panel.

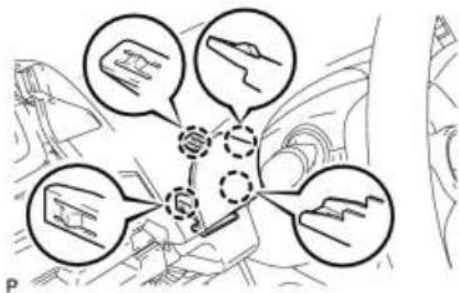

20. INSTALL NO. 1 INSTRUMENT PANEL REGISTER

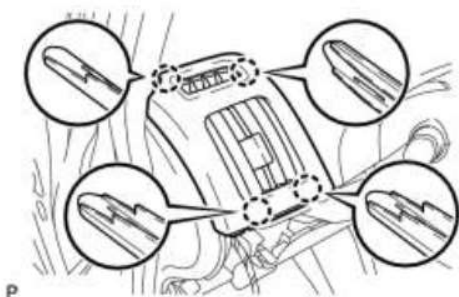


(a) Engage the 4 claws to install the No. 1 instrument panel register.

21. INSTALL LOWER INSTRUMENT PANEL FINISH PANEL ASSEMBLY


(a) Connect each connector.

(b) Engage the clamp.

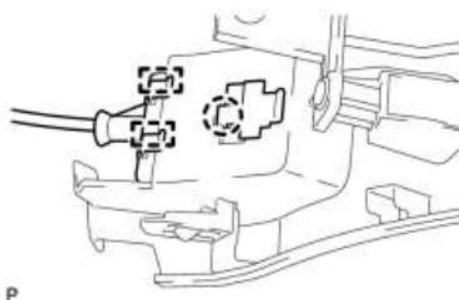


(c) Engage the 2 guides and claw to connect the hood lock control cable.

(d) Engage the 6 claws and clip.

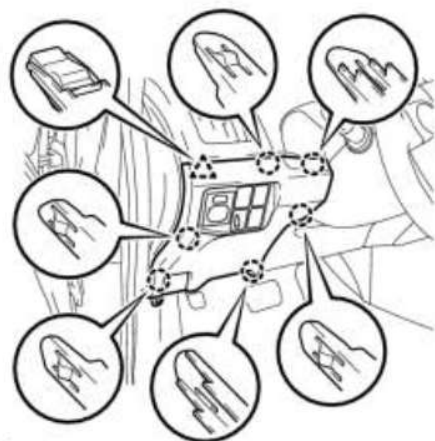

P

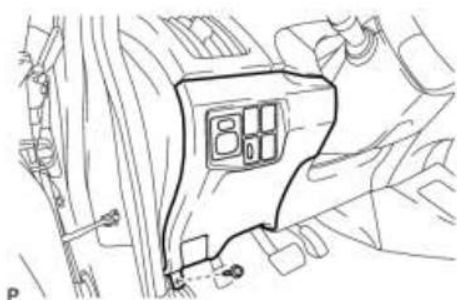

P

(e) Install the lower instrument panel finish panel assembly with the screw <C>.


22. INSTALL COWL SIDE TRIM SUB-ASSEMBLY LH_ [INFO](#)

23. INSTALL FRONT DOOR SCUFF PLATE LH_ [INFO](#)

24. INSTALL NAVIGATION RECEIVER WITH BRACKET (w/ Navigation System)_ [INFO](#)

25. INSTALL RADIO RECEIVER WITH BRACKET (w/o Navigation System)_ [INFO](#)

26. INSTALL UPPER INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY

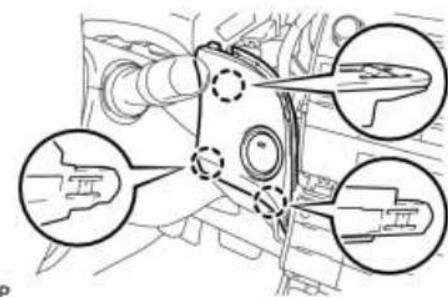


P

(a) Connect the connector.

(b) Engage the 3 claws to install the upper instrument panel finish panel sub-assembly.

27. INSTALL INSTRUMENT CLUSTER FINISH PANEL GARNISH

- (a) Connect the connector.
- (b) Engage the 14 claws to install the instrument cluster finish panel garnish.

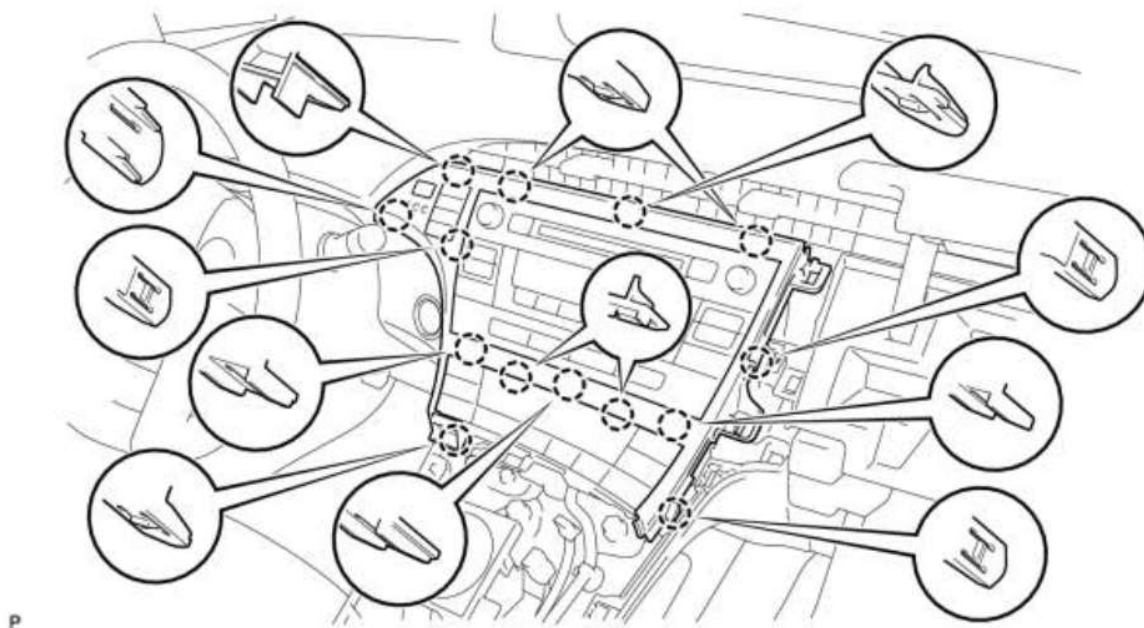


28. INSTALL INSTRUMENT PANEL CUP HOLDER ASSEMBLY




- (a) Install the instrument panel cup holder with the 4 screws <C> to the lower center instrument cluster finish panel sub-assembly.

29. INSTALL LOWER CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY

- (a) Engage the 7 claws and 2 clips to install the lower center instrument cluster finish panel sub-assembly.

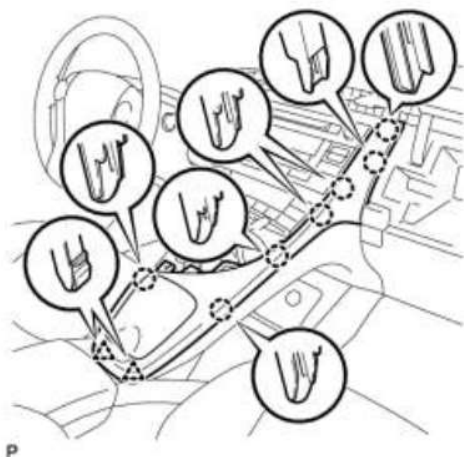

30. INSTALL INTEGRATION CONTROL AND PANEL ASSEMBLY

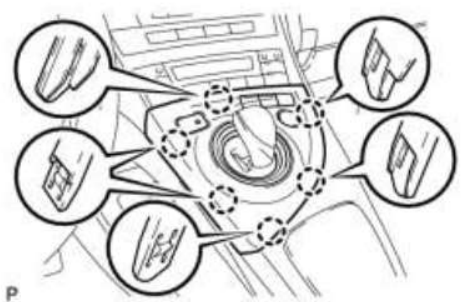

(a) Connect each connector.

(b) Engage the 6 claws to install the integration control and panel assembly.

31. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected INFO.

32. INSTALL REAR NO. 3 FLOOR BOARD INFO

33. INSTALL REAR DECK FLOOR BOX INFO

34. INSTALL REAR NO. 2 FLOOR BOARD (for Separate Type) INFO

35. INSPECT SRS WARNING LIGHT

(a) Inspect the SRS warning light INFO.