 
 


Position of Parts in Engine Compartment <LHD 2AZ-FE>

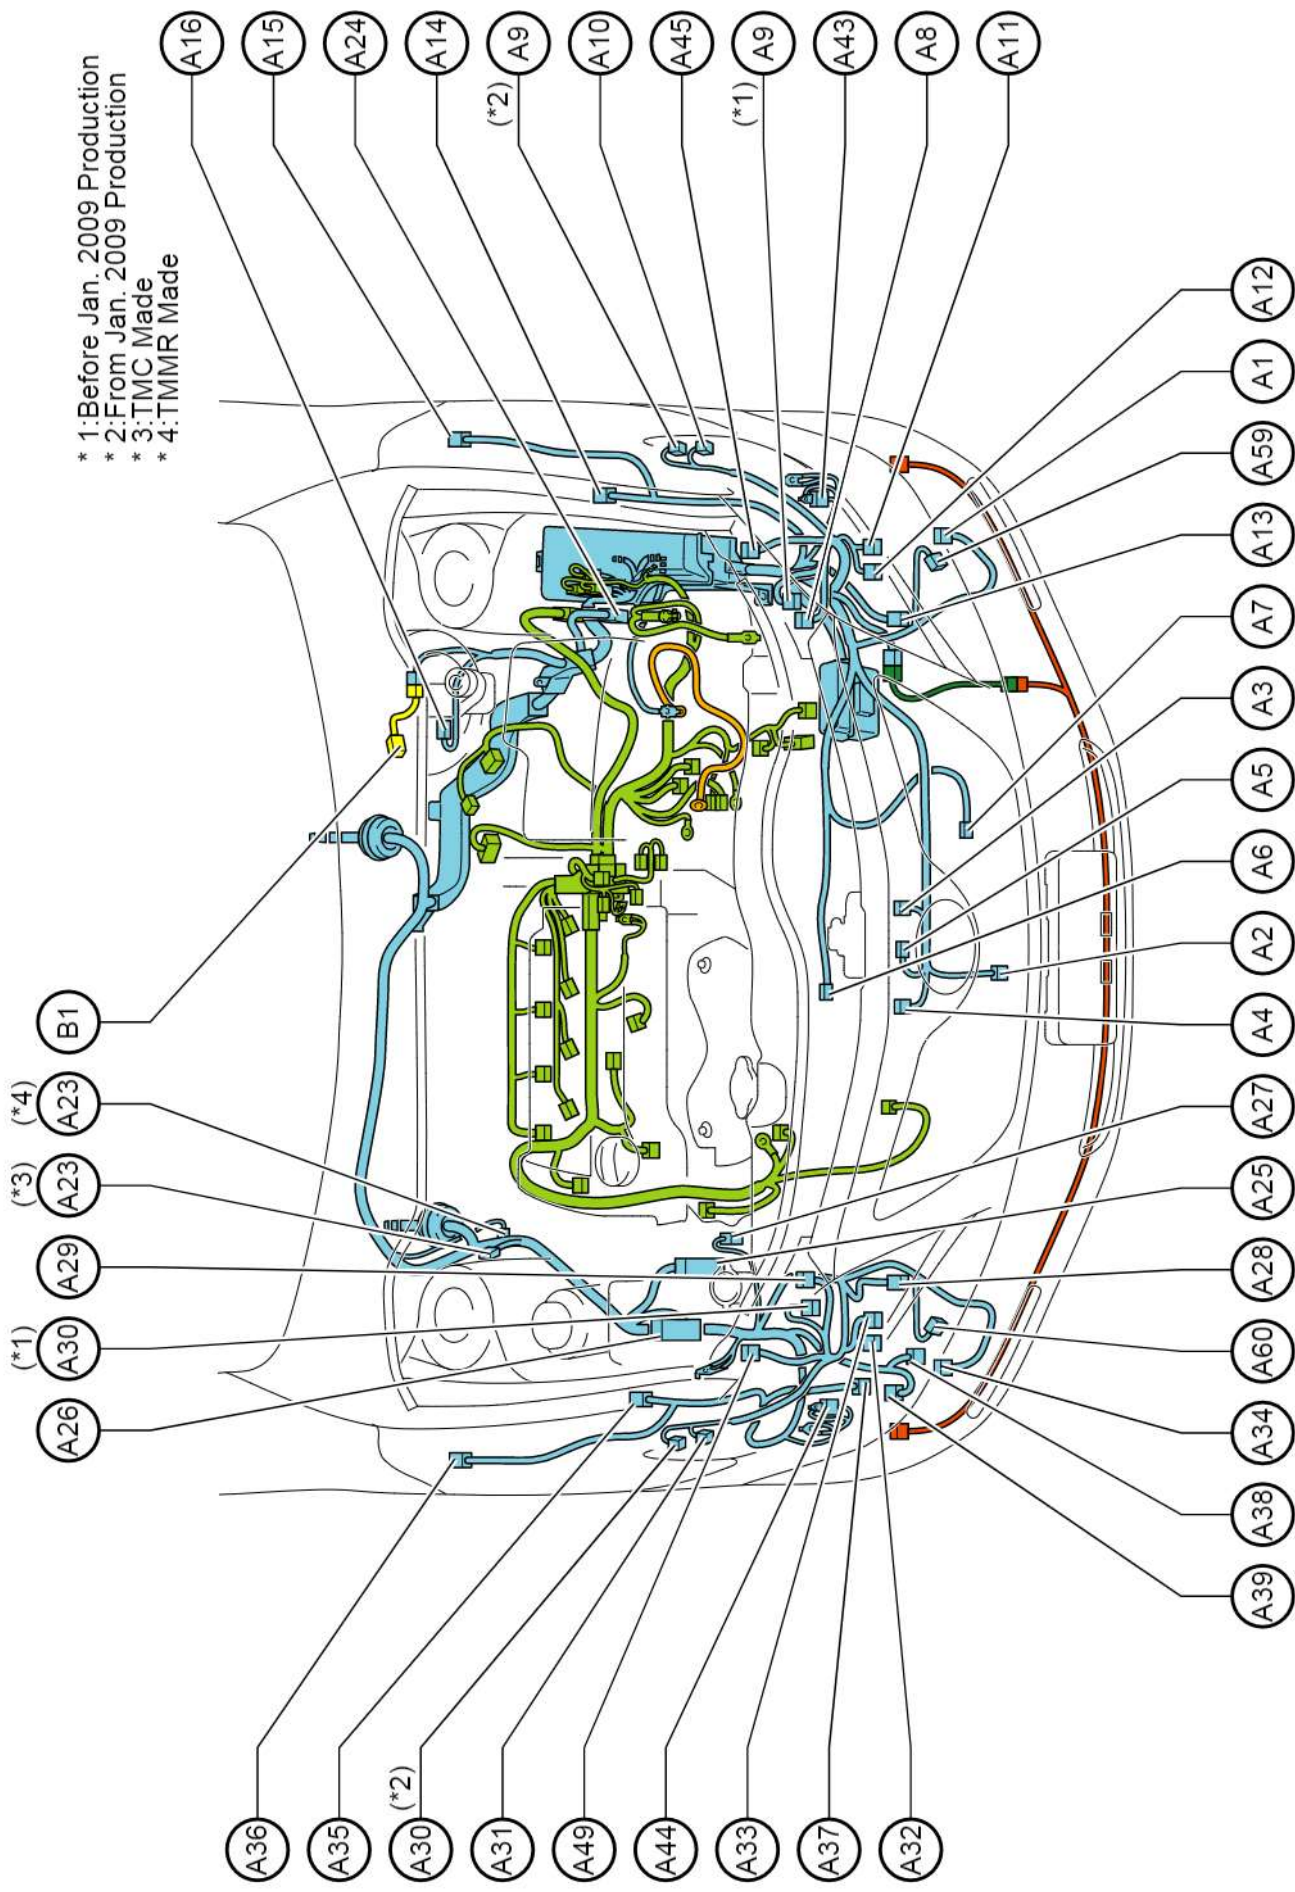

A	1	Fog Lamp (Front LH)
A	2	Ambient Temp. Sensor
A	3	Horn (High)
A	4	Horn (Low)
A	5	Engine Hood Courtesy SW
A	6	A/C Condenser Fan Motor
A	7	Radiator Fan Motor
A	8	Headlamp (LH High)
A	9	Clearance Lamp (Front LH)
A	10	Turn Signal Lamp (Front LH)
A	11	Headlamp Assembly (LH)
A	12	Headlamp Leveling Motor (LH)
A	13	Airbag Sensor (Front LH)
A	14	Speed Sensor (Front LH)
A	15	Turn Signal Lamp (Front Side LH)
A	16	Brake Fluid Level Warning SW
A	23	Security Horn
A	24	Engine ECU
A	25	Skid Control ECU with Actuator
A	26	Skid Control ECU with Actuator
A	27	A/C Pressure Sensor
A	28	Airbag Sensor (Front RH)
A	29	Headlamp (RH High)
A	30	Clearance Lamp (Front RH)
A	31	Turn Signal Lamp (Front RH)
A	32	Headlamp Assembly (RH)
A	33	Headlamp Leveling Motor (RH)
A	34	Fog Lamp (Front RH)
A	35	Speed Sensor (Front RH)
A	36	Turn Signal Lamp (Front Side RH)
A	37	Windshield Washer Motor
A	38	Headlamp Cleaner Motor
A	39	Headlamp Cleaner Control Relay
A	43	Junction Connector
A	44	Junction Connector
A	45	Headlamp (LH Low)
A	49	Headlamp (RH Low)
A	59	No.1 Ultrasonic Sensor (Front LH)
A	60	No.1 Ultrasonic Sensor (Front RH)
B	1	Windshield Wiper Motor

 
Position of Parts in Engine Compartment <LHD 2AZ-FE>

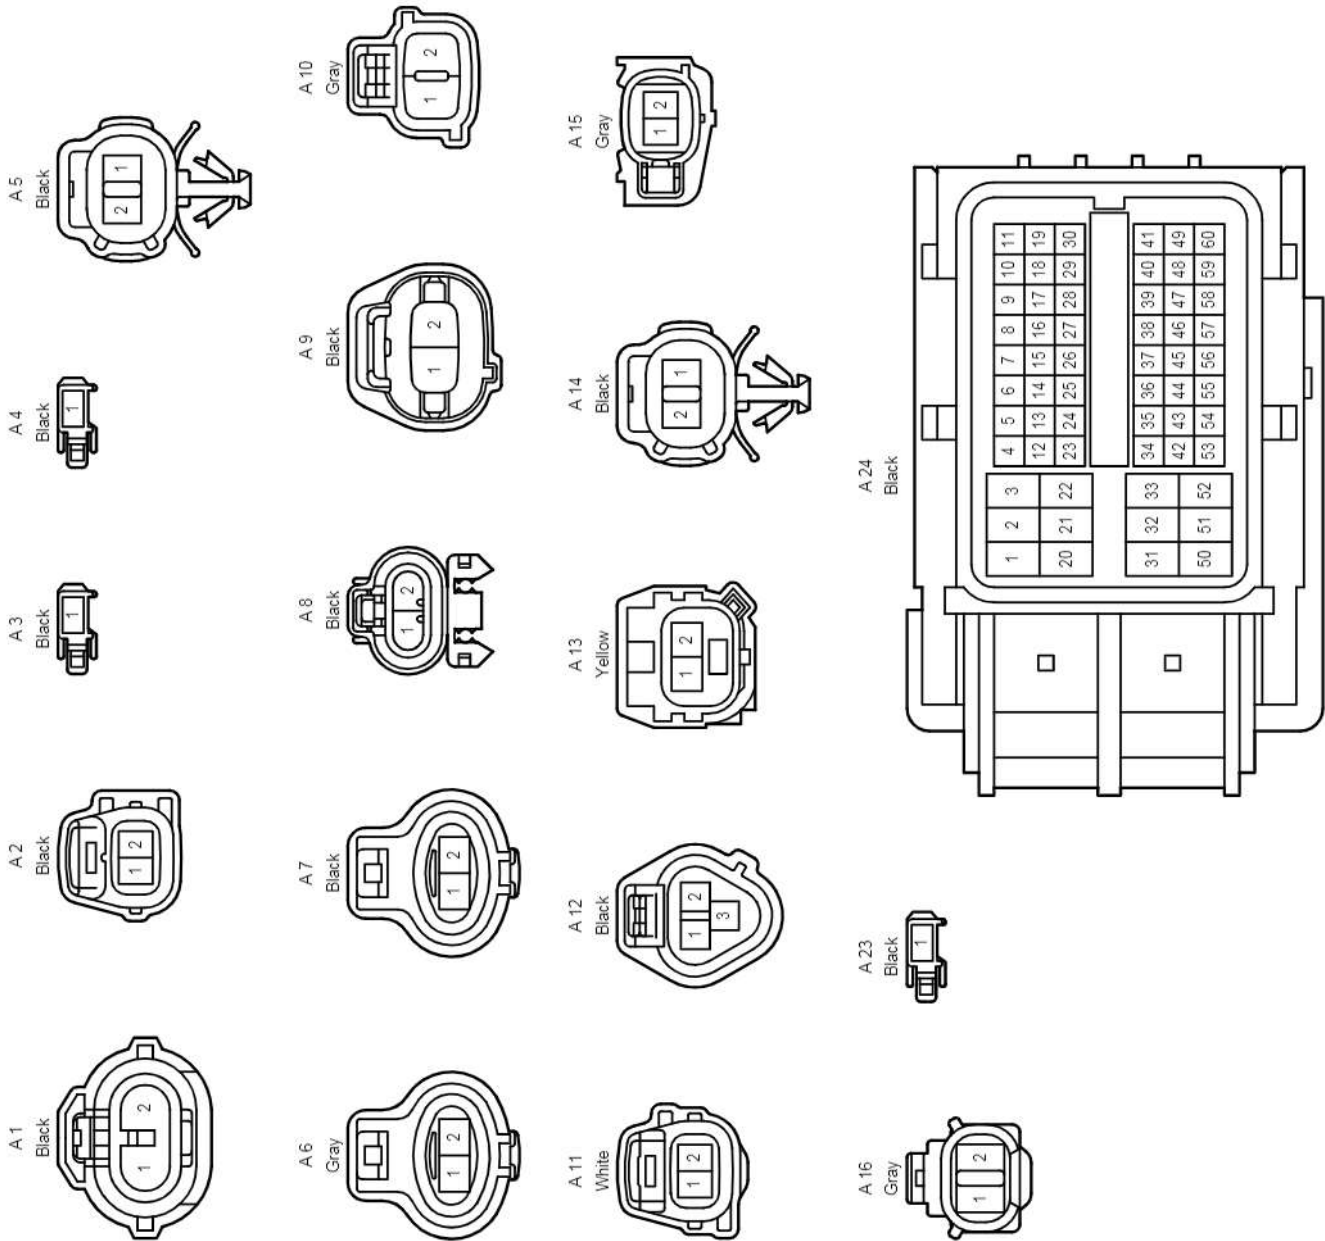

cardiagn.com

Position of Parts in Engine Compartment <LHD 2AZ-FE>


A 26
Black

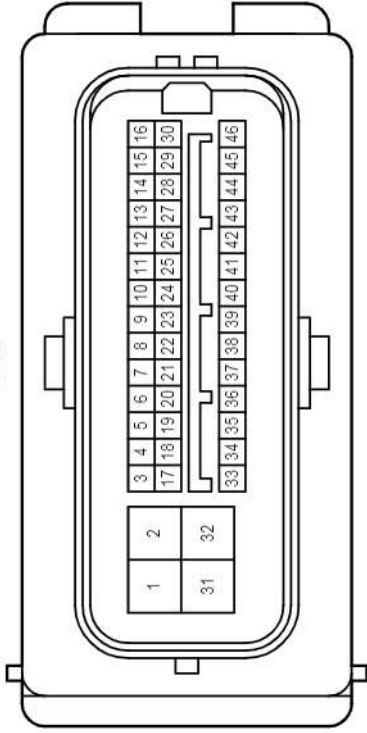


A 27
Black



 A 28
Yellow

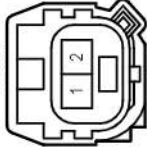

A 29
Black

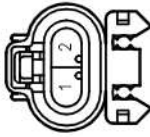 

A 30
Black



 
A 31
Gray




A 32
White




A 33
Black

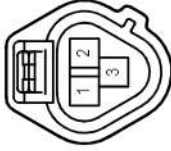


A 34
Black

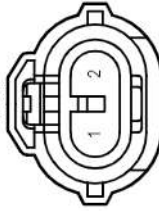 

A 35
Gray

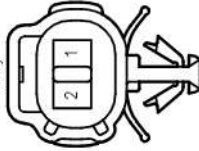 

A 36
Gray

 


A 37
Black




A 38
Black



 
A 39
Gray

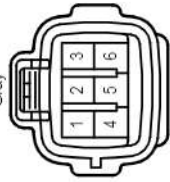


A 43
Gray

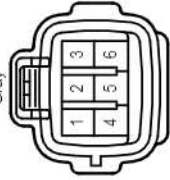 

A 44
Gray

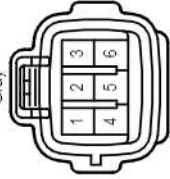 


A 45
Black

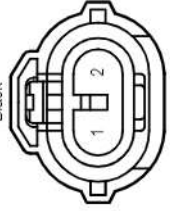 


A 49
Black



 
A 59
Gray




A 60
Gray

 

B 1
Black





















 


 Position of Parts in Engine Compartment <LHD 2AZ-FE>

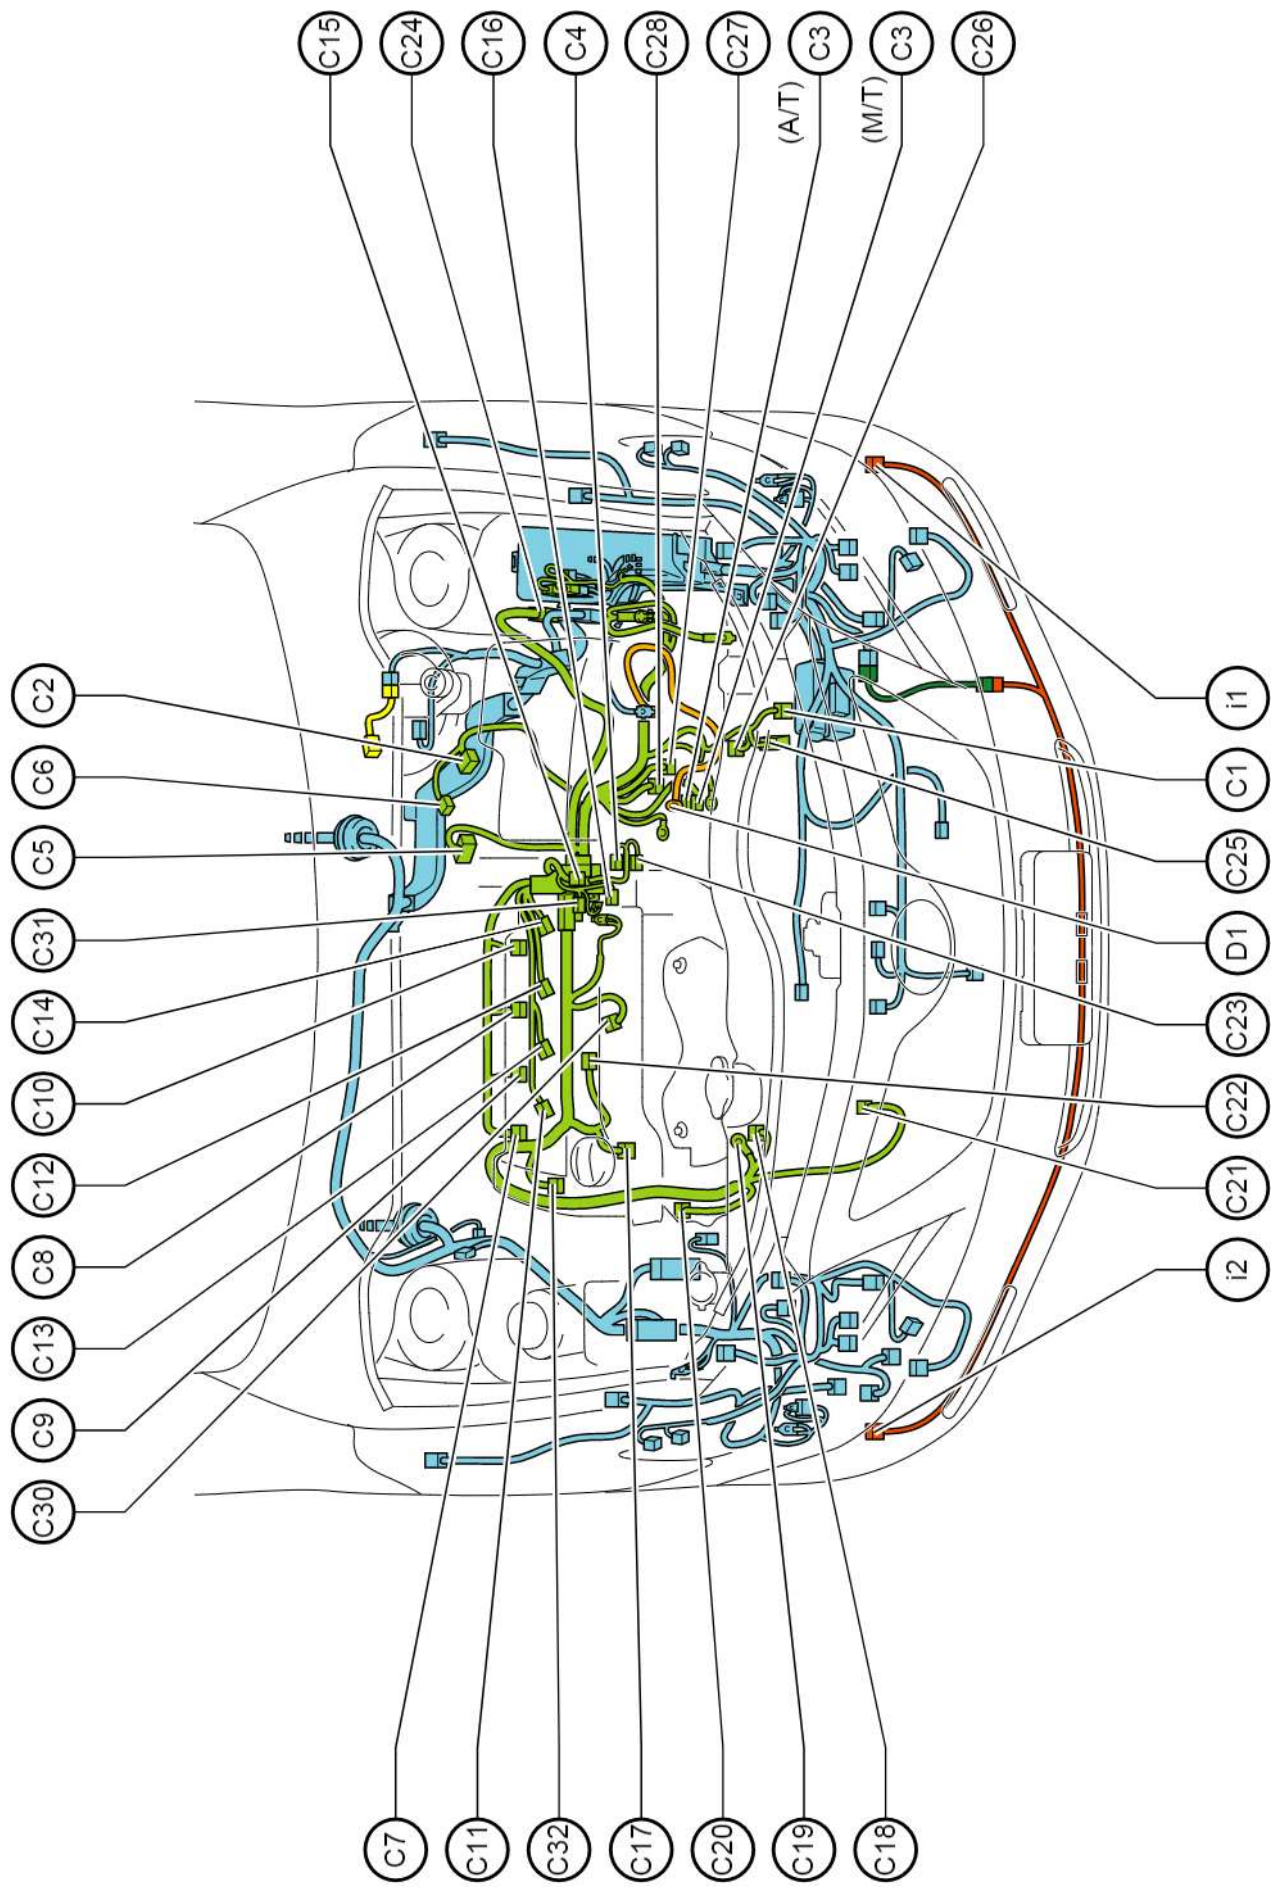

C	1	Park/Neutral Position SW
C	2	Air Flow Meter
C	3	Starter
C	4	EFI Water Temp. Sensor
C	5	Throttle Body Assembly
C	6	VSV (Purge)
C	7	Fuel Injector (No.1)
C	8	Fuel Injector (No.3)
C	9	Fuel Injector (No.2)
C	10	Fuel Injector (No.4)
C	11	Ignition Coil (No.1)
C	12	Ignition Coil (No.3)
C	13	Ignition Coil (No.2)
C	14	Ignition Coil (No.4)
C	15	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C	16	Noise Filter (Ignition RH)
C	16	Noise Filter (Ignition RH)
C	17	Power Steering Oil Pressure SW
C	18	Alternator
C	19	Alternator
C	19	Alternator
C	20	Crankshaft Position Sensor
C	21	A/C Compressor
C	22	Heated Oxygen Sensor (Bank 1 Sensor 2)
C	23	Engine Oil Pressure SW
C	24	Engine ECU
C	25	ECT Solenoid
C	26	Transmission Revolution Sensor (Turbine)
C	27	Transmission Revolution Sensor (Counter Gear)
C	28	Back-Up Lamp SW
C	30	Knock Control Sensor (Bank 1)
C	31	Camshaft Position Sensor
C	32	Camshaft Timing Oil Control Valve
D	1	Starter
i	1	No.1 Ultrasonic Sensor (Front LH)
i	2	No.1 Ultrasonic Sensor (Front RH)

                     Position of Parts in Engine Compartment <LHD 2AZ-FE>

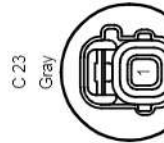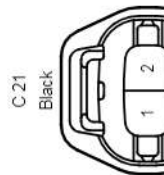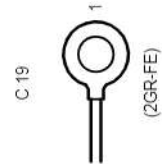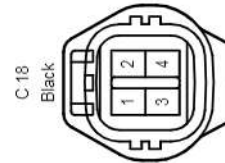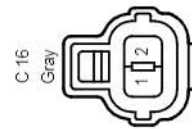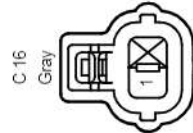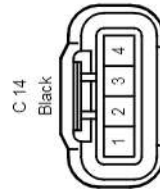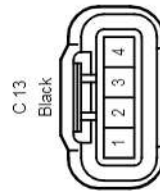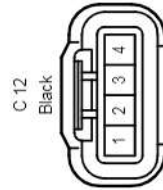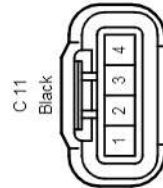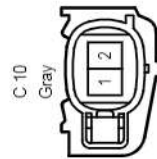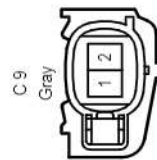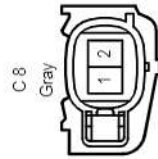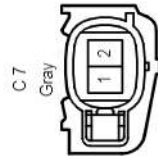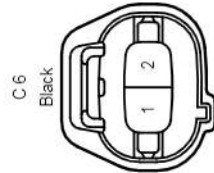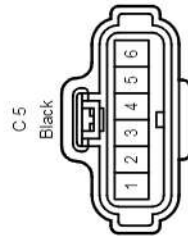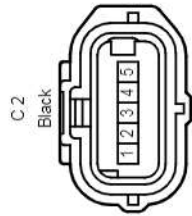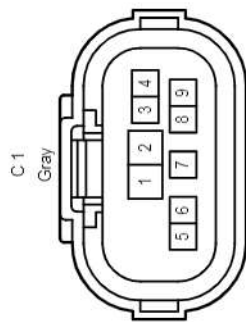


(From Aug. 2010 Production)


(Before Aug. 2010 Production)

Position of Parts in Engine Compartment <LHD 2AZ-FE>

 
C 24
Black

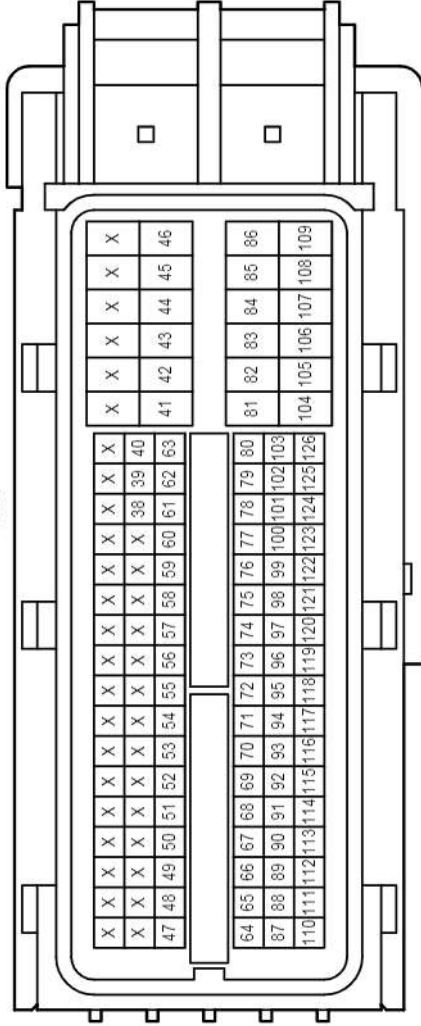


C 25
Gray

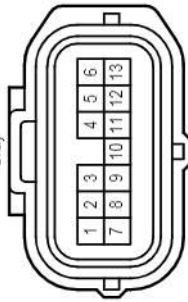 

C 26
Black

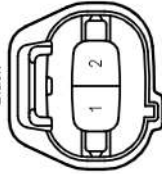 

C 27
Black

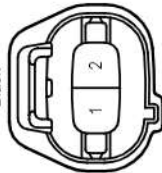 

C 28
Gray



C 30
Gray



C 31
Black



 
C 32
Black




D 1





i 1
Black

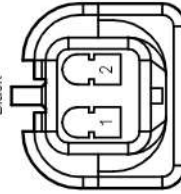


i 2
Black

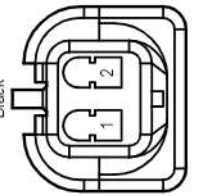 

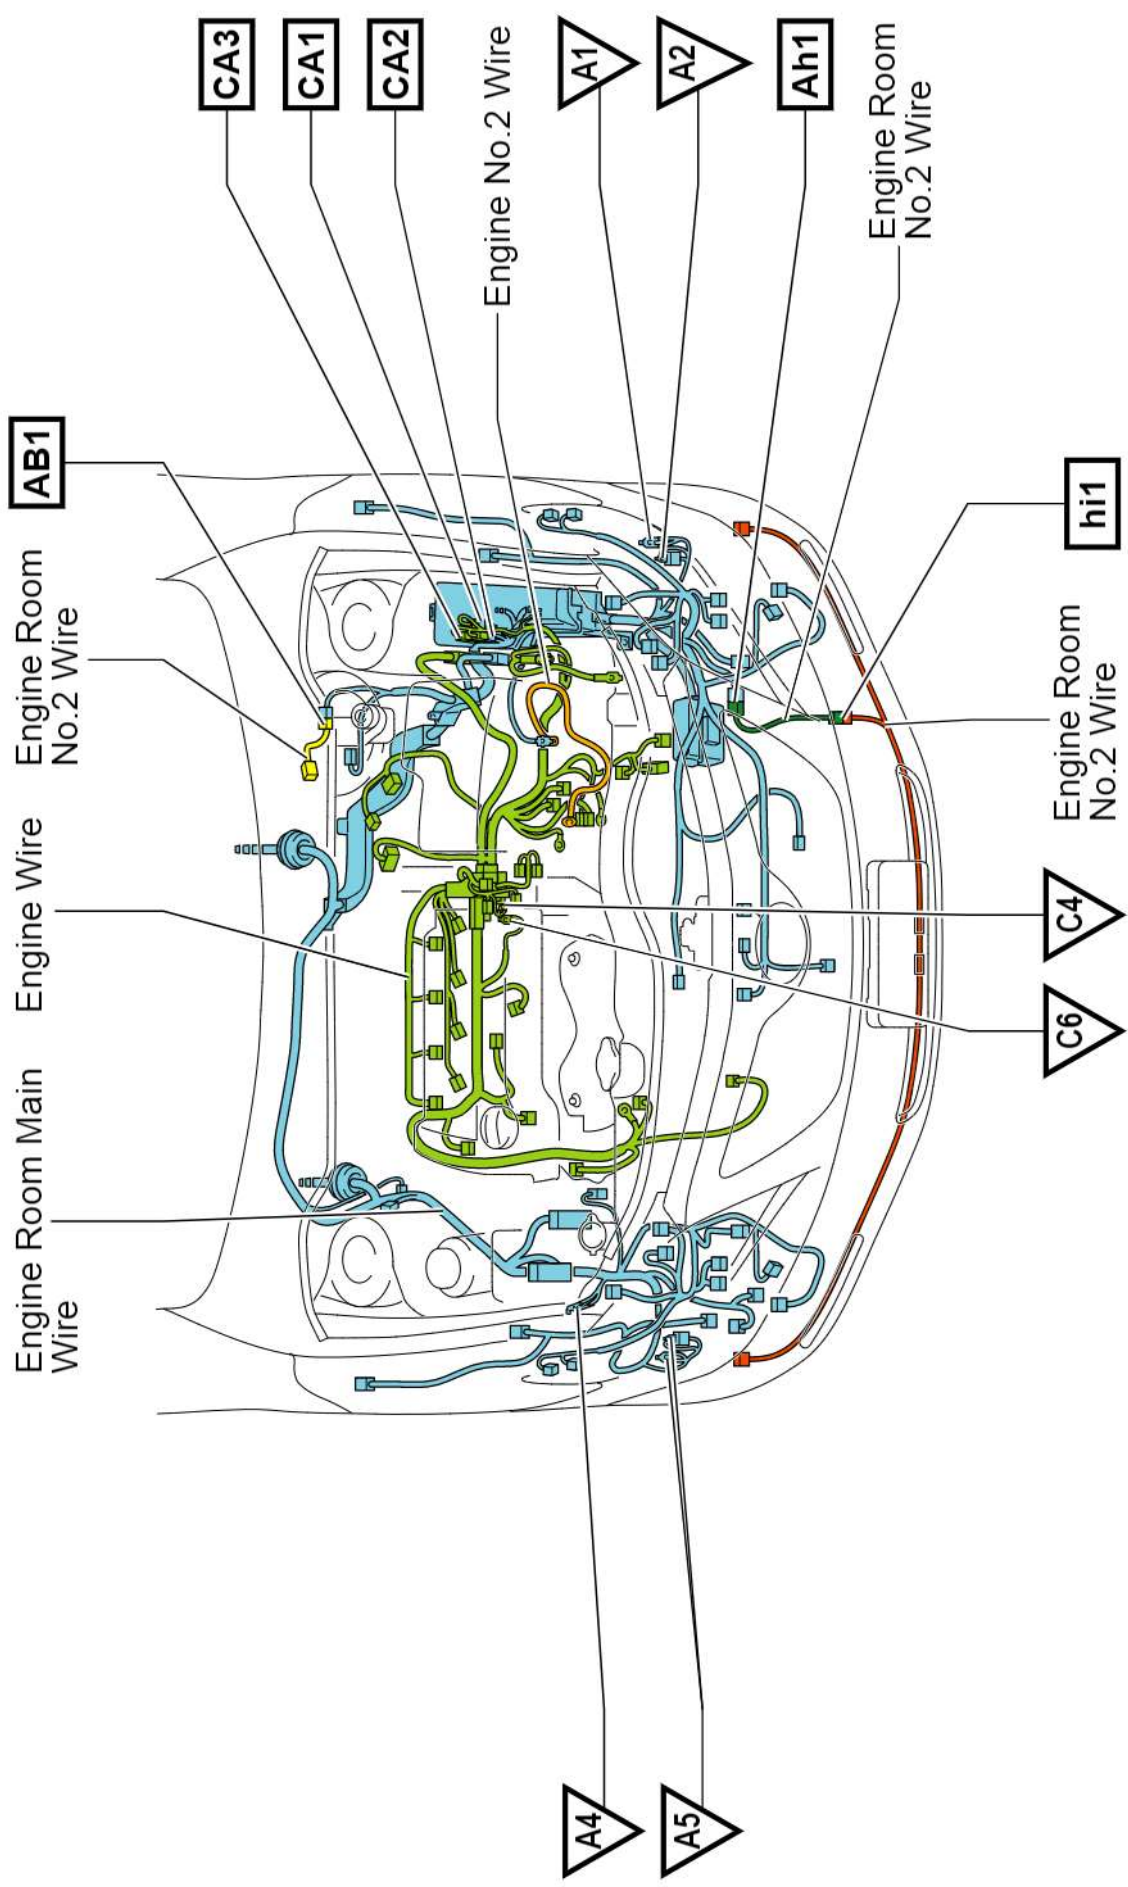 

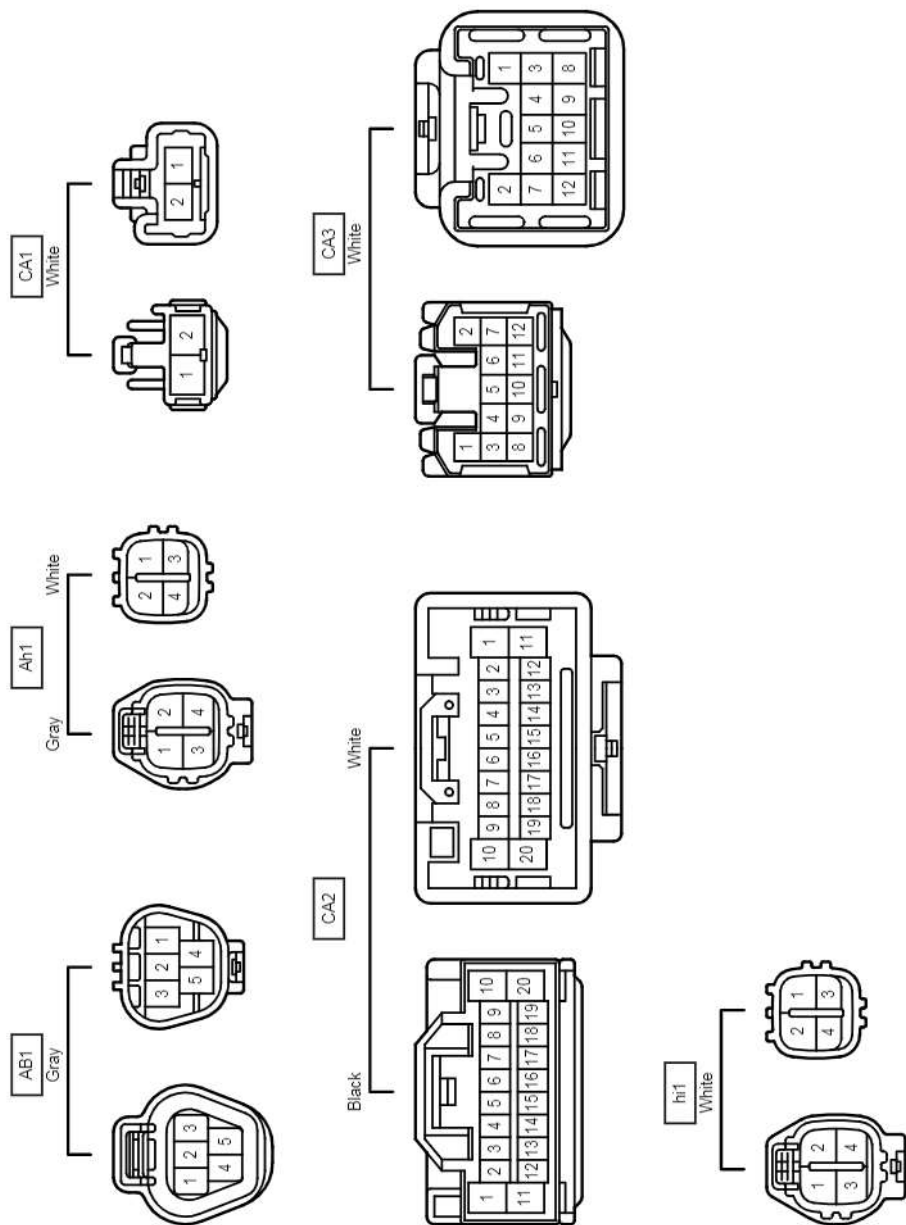 


 Position of Parts in Engine Compartment <RHD 2AZ-FE>

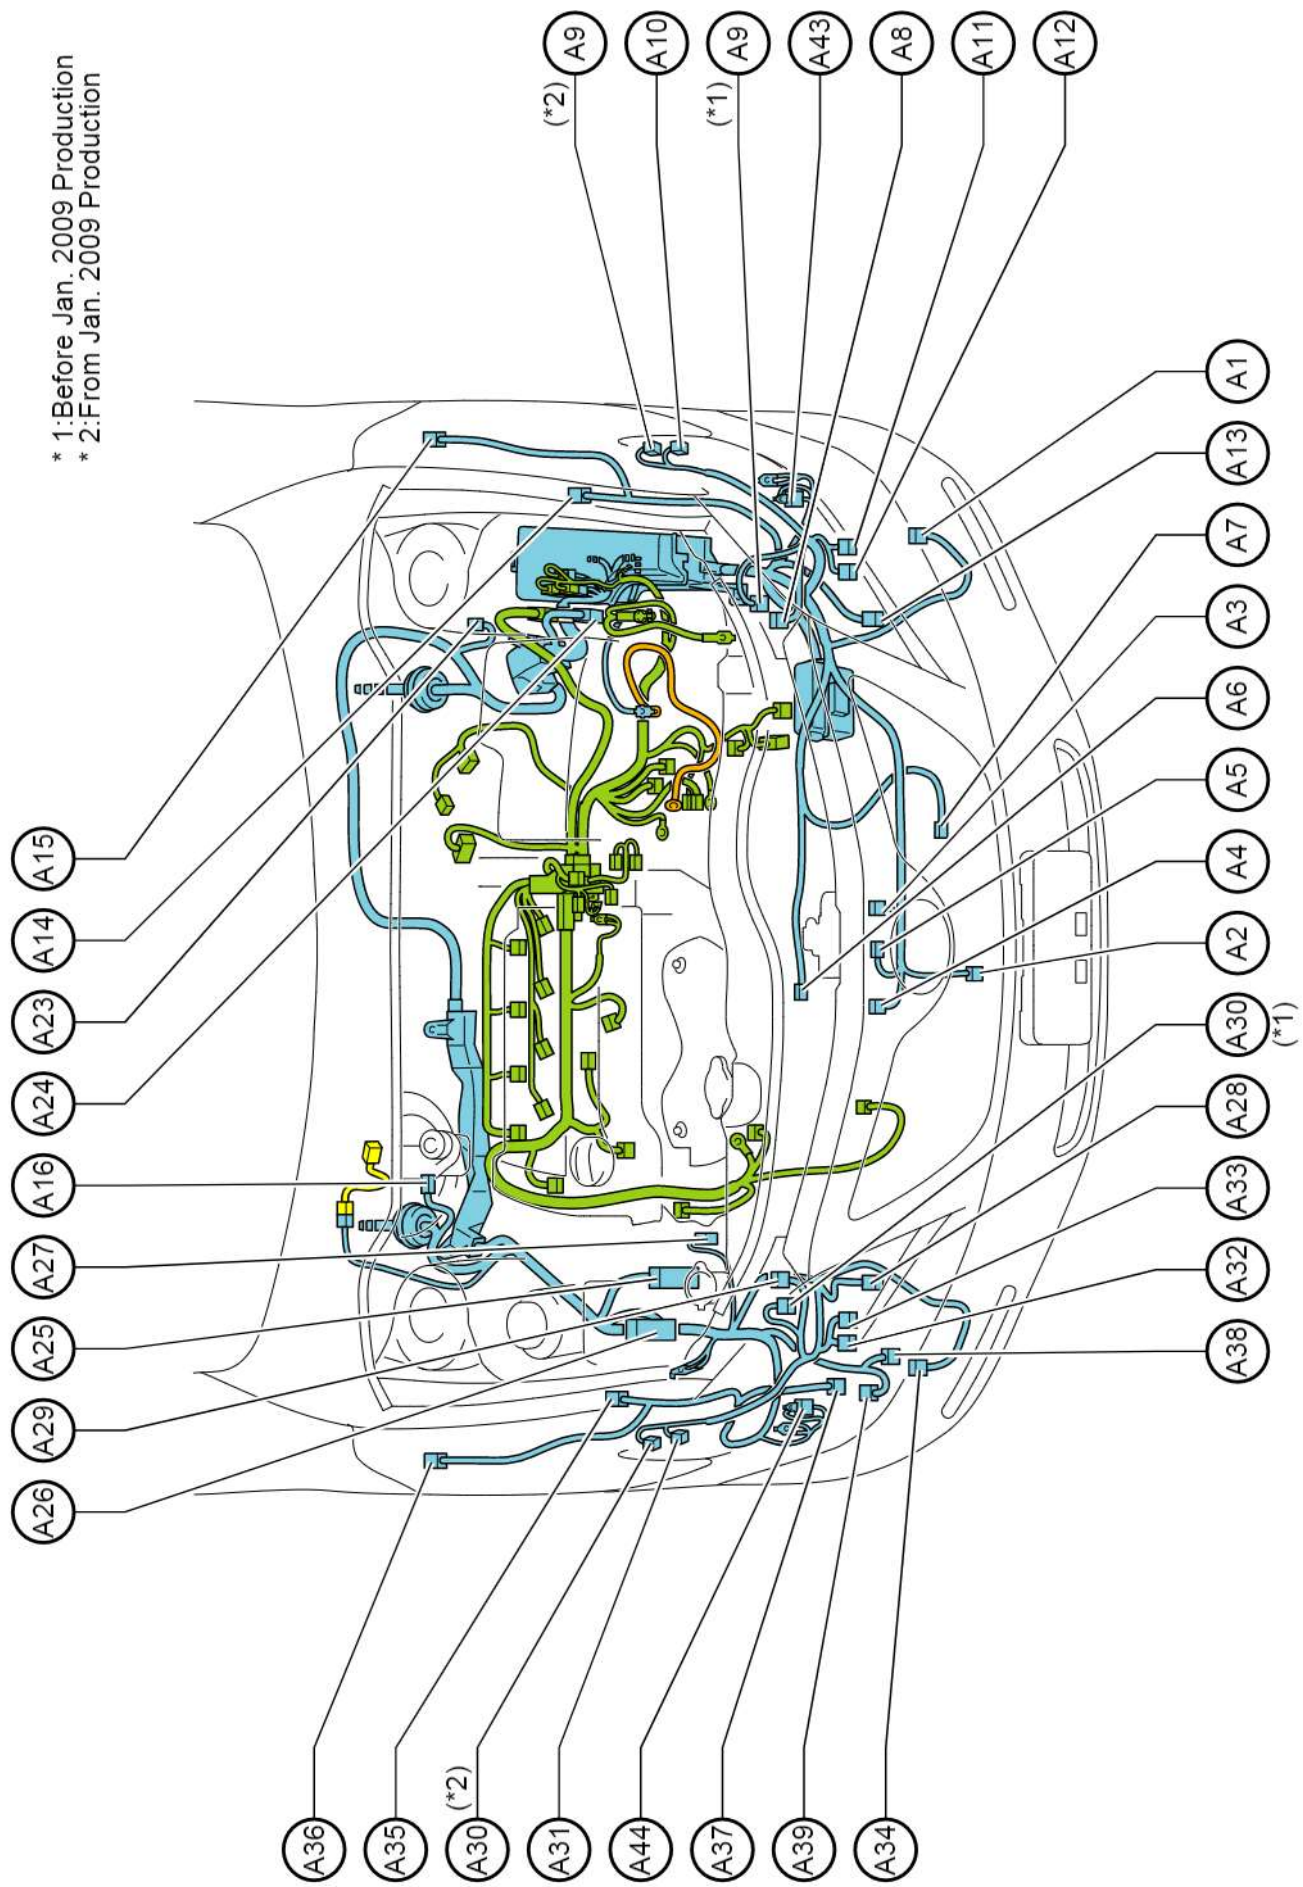

* 1: Before Jan. 2009 Production
* 2: From Jan. 2009 Production

A 1	Fog Lamp (Front LH)
A 2	Ambient Temp. Sensor
A 3	Horn (High)
A 4	Horn (Low)
A 5	Engine Hood Courtesy SW
A 6	A/C Condenser Fan Motor
A 7	Radiator Fan Motor
A 8	Headlamp (LH High)
A 9	Clearance Lamp (Front LH)
A 10	Turn Signal Lamp (Front LH)
A 11	Headlamp Assembly (LH)
A 12	Headlamp Leveling Motor (LH)
A 13	Airbag Sensor (Front LH)
A 14	Speed Sensor (Front LH)
A 15	Turn Signal Lamp (Front Side LH)
A 16	Brake Fluid Level Warning SW
A 23	Security Horn
A 24	Engine ECU
A 25	Skid Control ECU with Actuator
A 26	Skid Control ECU with Actuator
A 27	A/C Pressure Sensor
A 28	Airbag Sensor (Front RH)
A 29	Headlamp (RH High)
A 30	Clearance Lamp (Front RH)
A 31	Turn Signal Lamp (Front RH)
A 32	Headlamp Assembly (RH)
A 33	Headlamp Leveling Motor (RH)
A 34	Fog Lamp (Front RH)
A 35	Speed Sensor (Front RH)
A 36	Turn Signal Lamp (Front Side RH)
A 37	Windshield Washer Motor
A 38	Headlamp Cleaner Motor
A 39	Headlamp Cleaner Control Relay
A 43	Junction Connector
A 44	Junction Connector

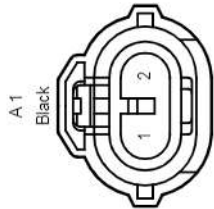 

A 1
Black



A 2
Black



 
A 3
Black




A 4
Black




A 5
Black

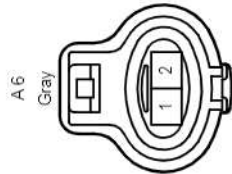


A 6
Gray

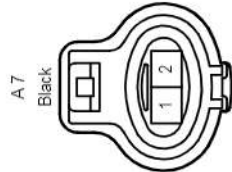 


A 7
Black

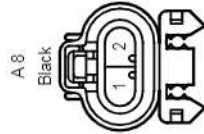 

A 8
Black

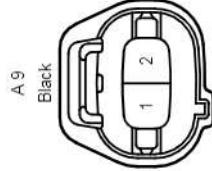 


A 9
Black

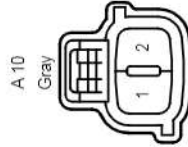 


A 10
Gray



 A 11
White

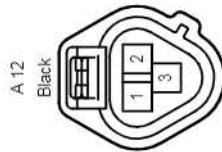


A 12
Black

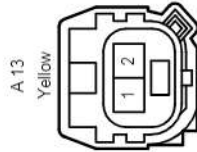 


A 13
Yellow



 A 14
Black

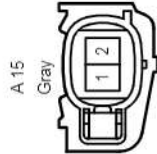


A 15
Gray

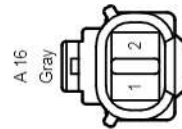 

A 16
Gray



 A 23
Black

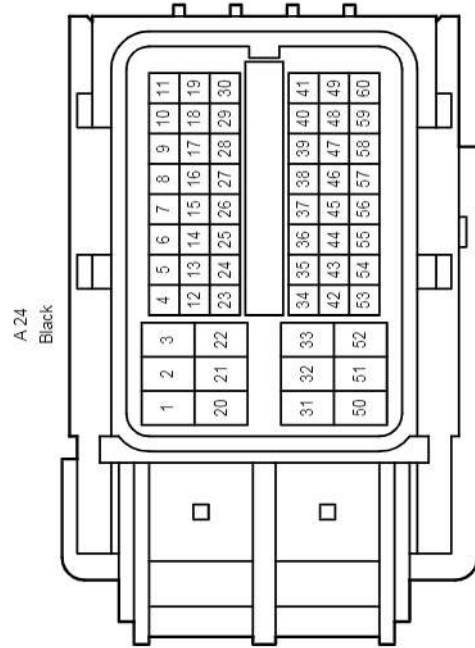


A 24
Black

A 25
Black

Position of Parts in Engine Compartment <RHD 2AZ-FE>

 
A 26
Black

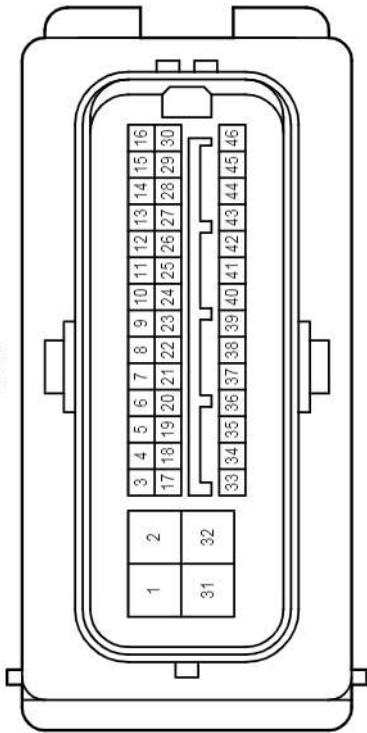


A 27
Black



 A 28
Yellow

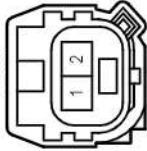

A 29
Black

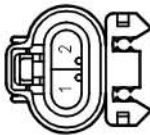 

A 30
Black



 
A 31
Gray




A 32
White




A 33
Black

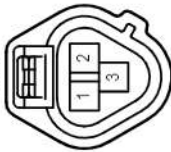

A 34
Black

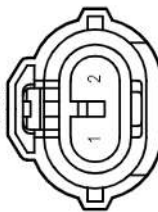 

A 35
Gray

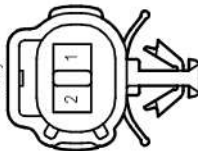 

A 36
Gray



 
A 37
Black




A 38
Black




A 39
Gray

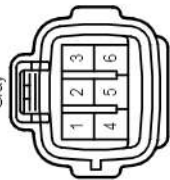

A 43
Gray

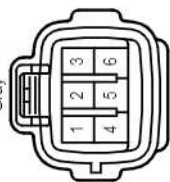 


A 44
Gray

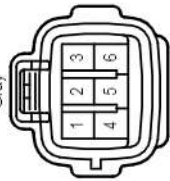 




B	1	Windshield Wiper Motor
C	1	Park/Neutral Position SW
C	2	Air Flow Meter
C	3	Starter
C	4	EFI Water Temp. Sensor
C	5	Throttle Body Assembly
C	6	VSV (Purge)
C	7	Fuel Injector (No.1)
C	8	Fuel Injector (No.3)
C	9	Fuel Injector (No.2)
C	10	Fuel Injector (No.4)
C	11	Ignition Coil (No.1)
C	12	Ignition Coil (No.3)
C	13	Ignition Coil (No.2)
C	14	Ignition Coil (No.4)
C	15	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C	16	Noise Filter (Ignition RH)
C	16	Noise Filter (Ignition RH)
C	17	Power Steering Oil Pressure SW
C	18	Alternator
C	19	Alternator
C	19	Alternator
C	20	Crankshaft Position Sensor
C	21	A/C Compressor
C	22	Heated Oxygen Sensor (Bank 1 Sensor 2)
C	23	Engine Oil Pressure SW
C	24	Engine ECU
C	25	ECT Solenoid
C	26	Transmission Revolution Sensor (Turbine)
C	27	Transmission Revolution Sensor (Counter Gear)
C	28	Back-Up Lamp SW
C	30	Knock Control Sensor (Bank 1)
C	31	Camshaft Position Sensor
C	32	Camshaft Timing Oil Control Valve
D	1	Starter

 
Position of Parts in Engine Compartment <RHD 2AZ-FE>

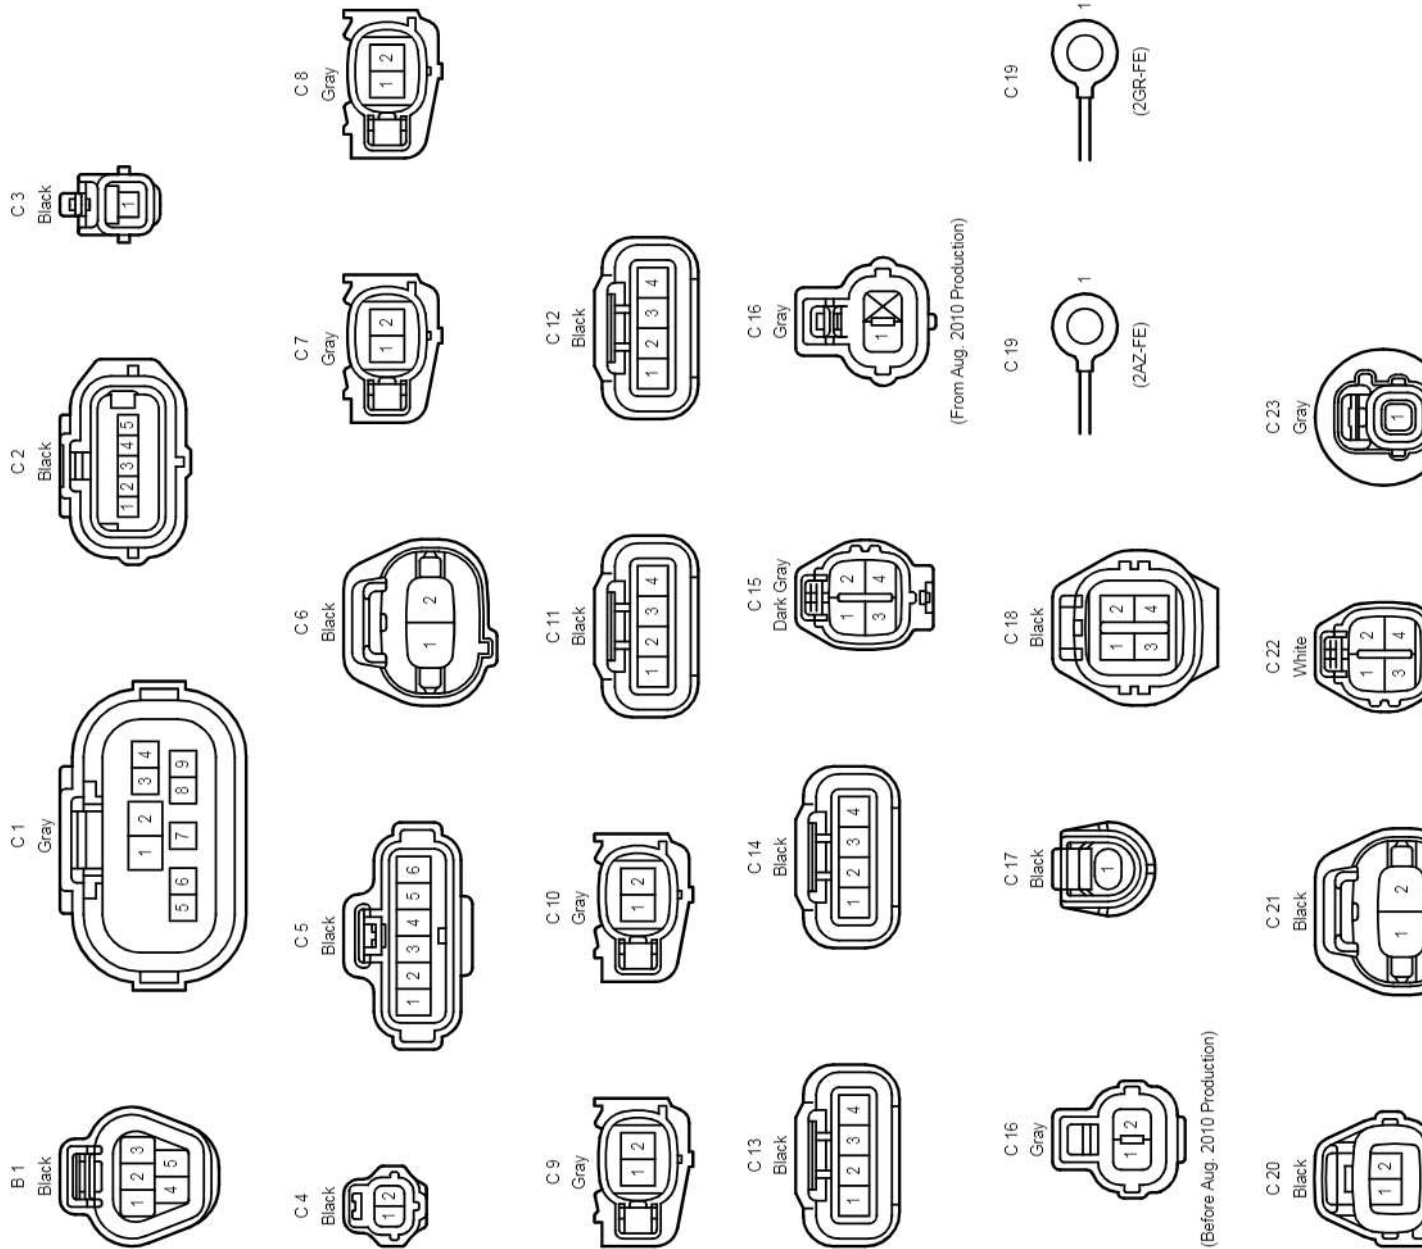

C 24
Black

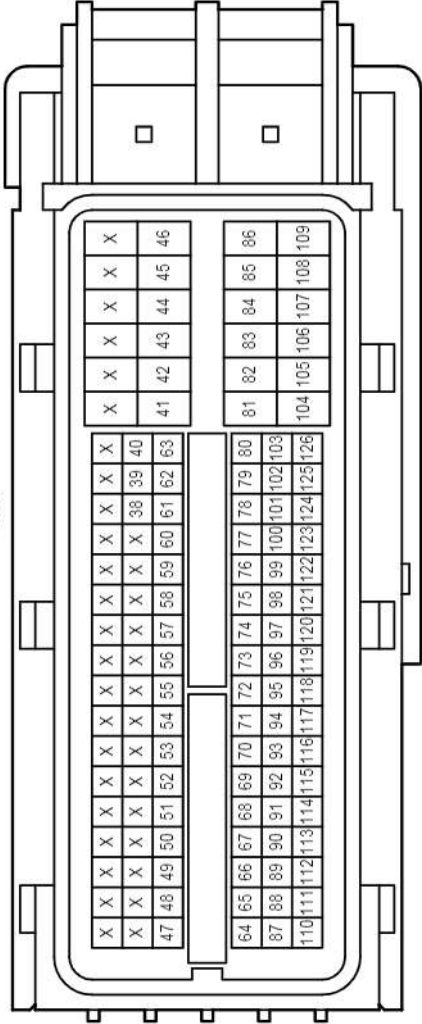 

C 25
Gray

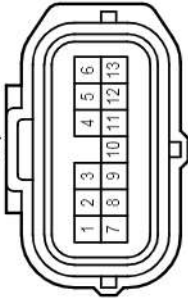 

C 26
Black



C 27
Black



C 28
Gray



C 30
Gray



C 31
Black

 


 
C 32
Black

 


D 1



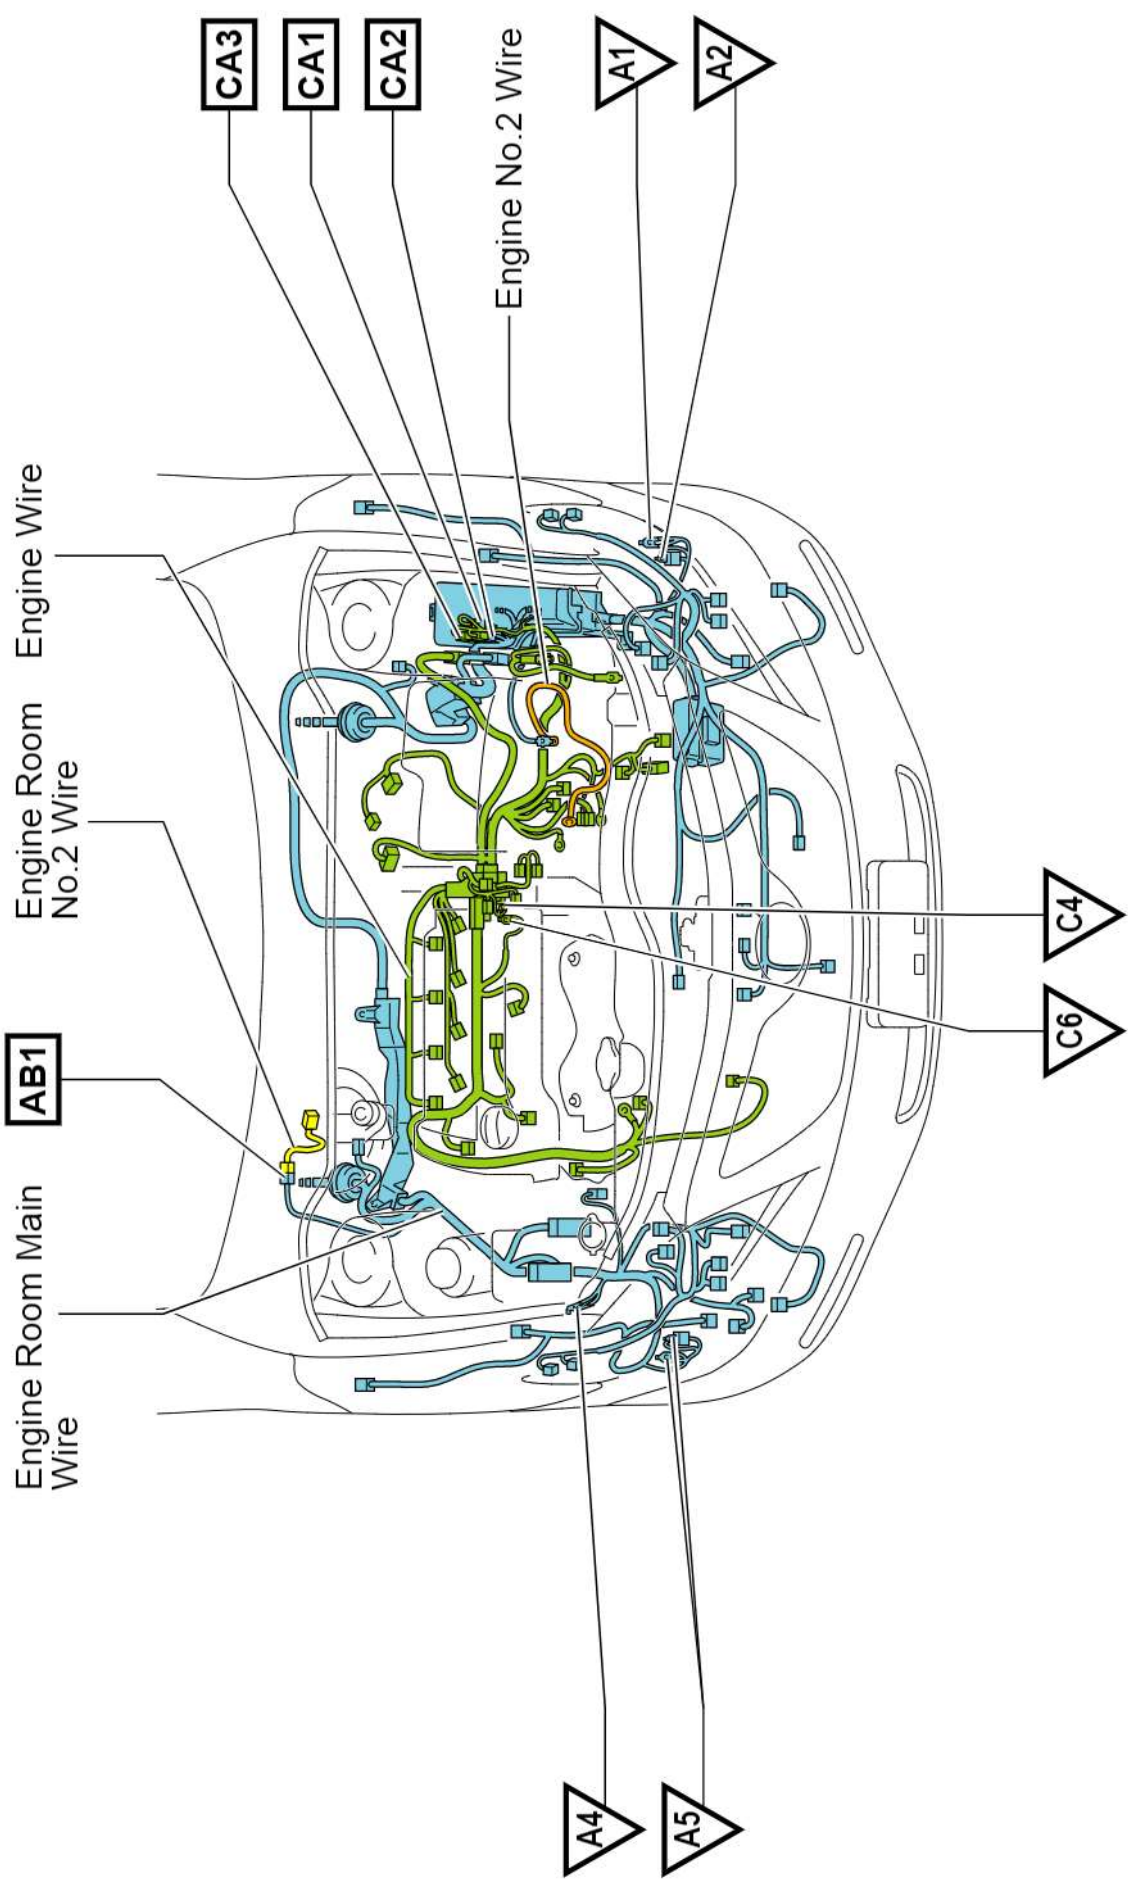

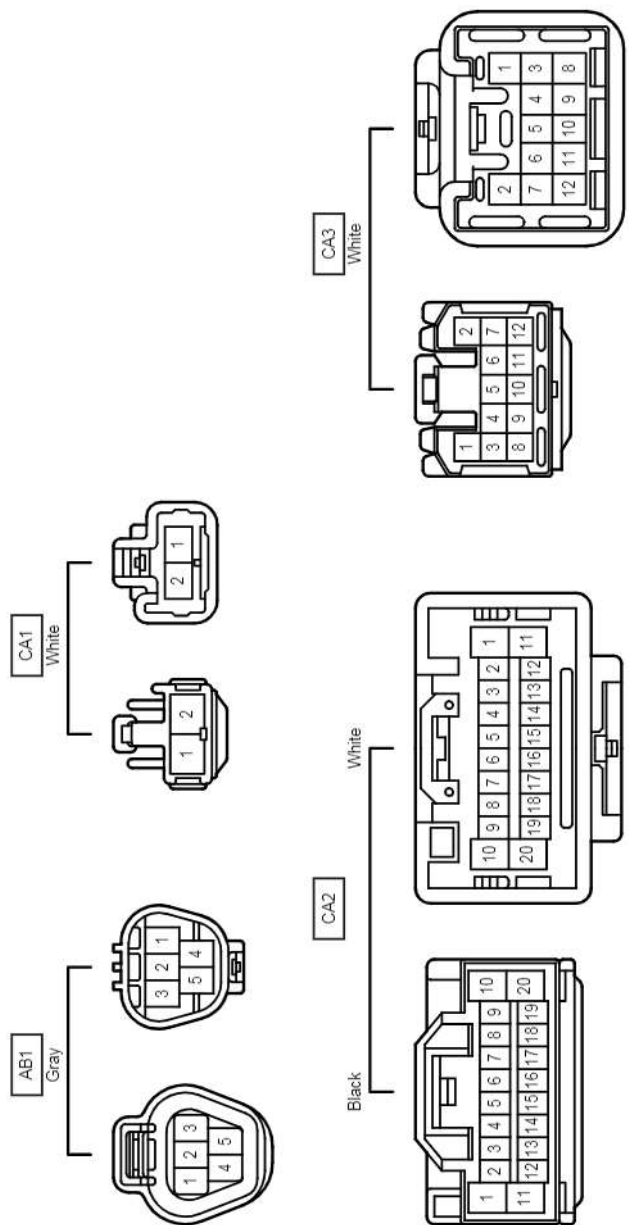

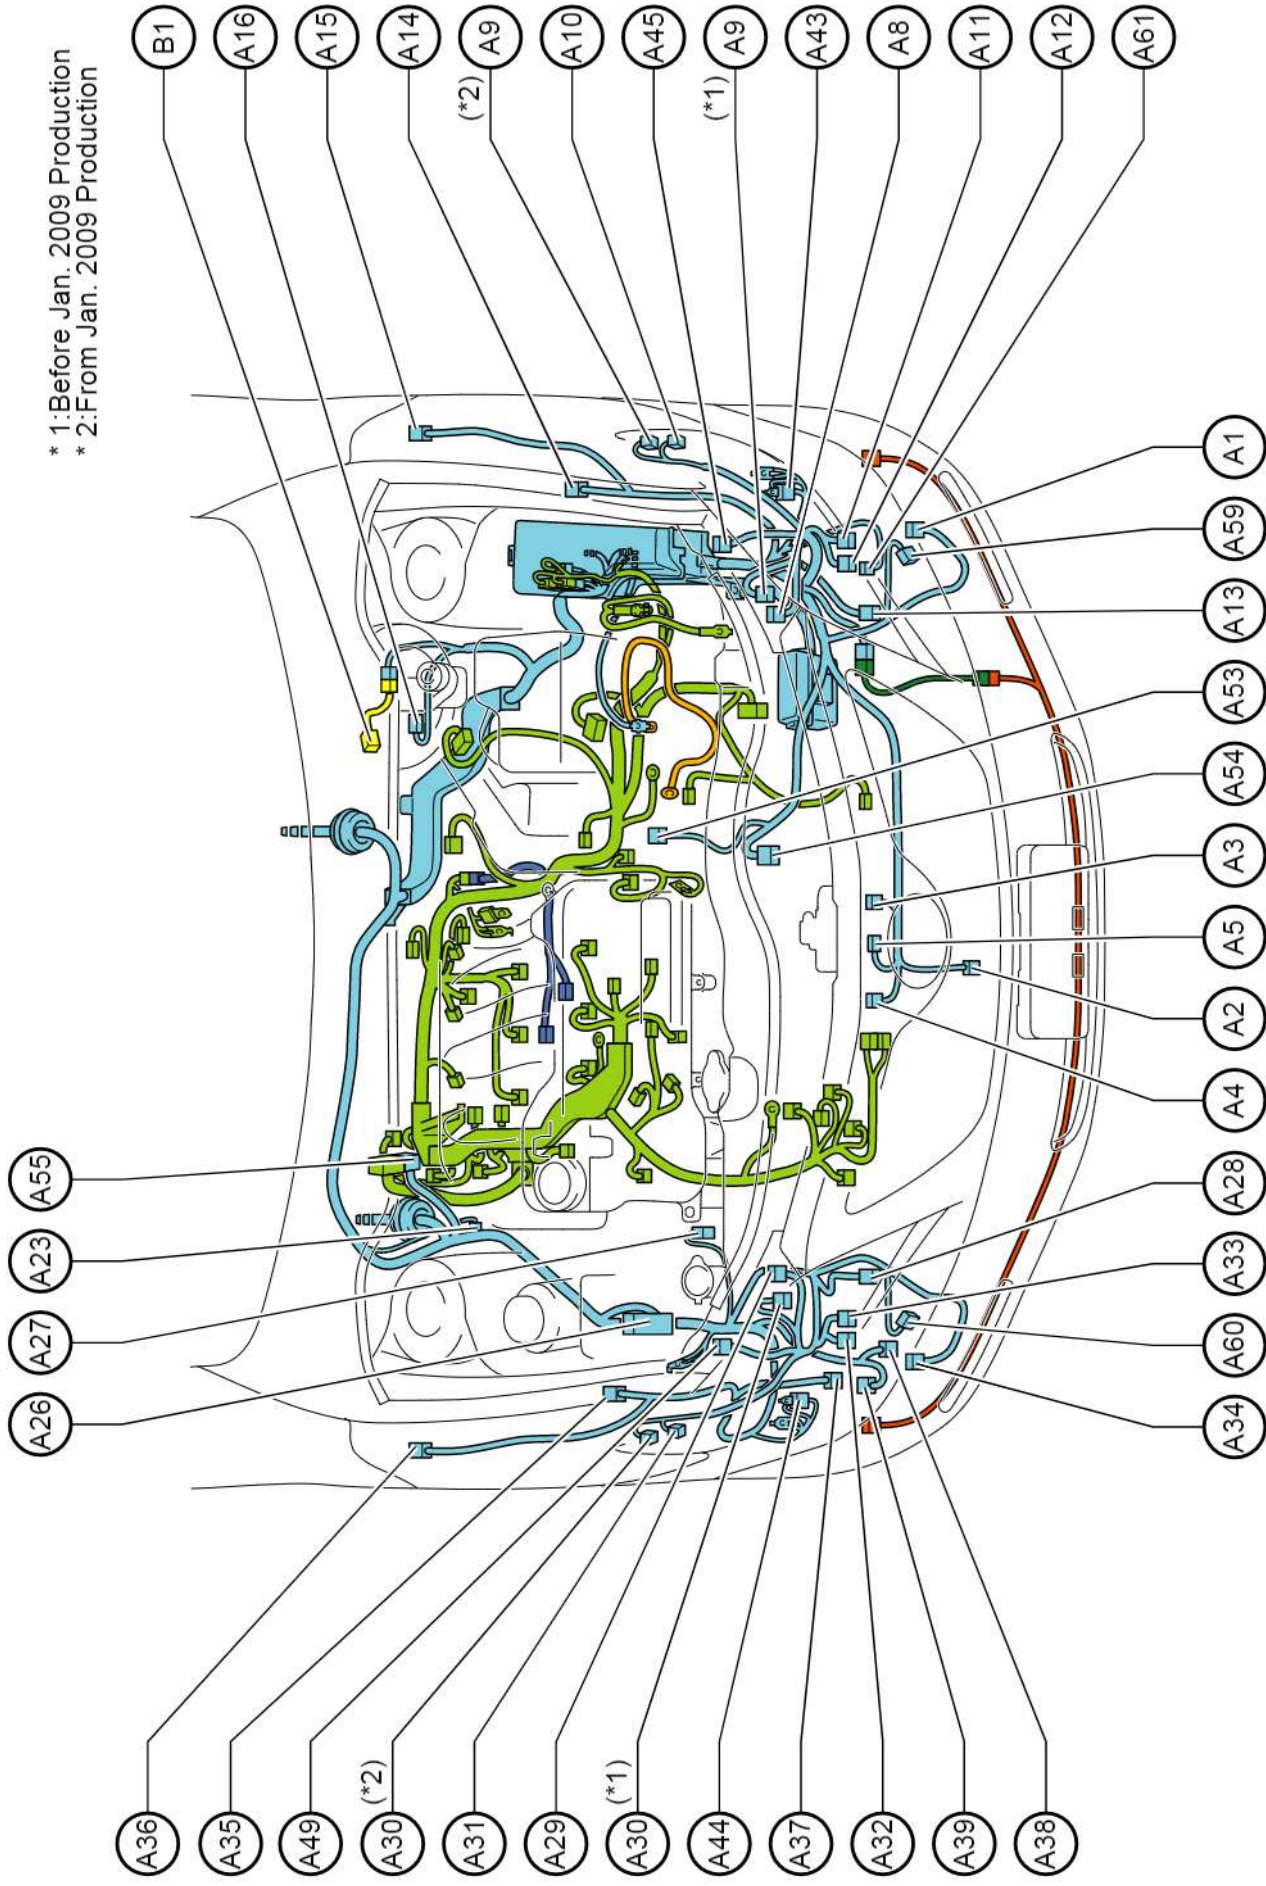


* 1: Before Jan. 2009 Production
 * 2: From Jan. 2009 Production

A	1	Fog Lamp (Front LH)
A	2	Ambient Temp. Sensor
A	3	Horn (High)
A	4	Horn (Low)
A	5	Engine Hood Courtesy SW
A	8	Headlamp (LH High)
A	9	Clearance Lamp (Front LH)
A	10	Turn Signal Lamp (Front LH)
A	11	Headlamp Assembly (LH)
A	12	Headlamp Leveling Motor (LH)
A	13	Airbag Sensor (Front LH)
A	14	Speed Sensor (Front LH)
A	15	Turn Signal Lamp (Front Side LH)
A	16	Brake Fluid Level Warning SW
A	23	Security Horn
A	26	Skid Control ECU with Actuator
A	27	A/C Pressure Sensor
A	28	Airbag Sensor (Front RH)
A	29	Headlamp (RH High)
A	30	Clearance Lamp (Front RH)
A	31	Turn Signal Lamp (Front RH)
A	32	Headlamp Assembly (RH)
A	33	Headlamp Leveling Motor (RH)
A	34	Fog Lamp (Front RH)
A	35	Speed Sensor (Front RH)
A	36	Turn Signal Lamp (Front Side RH)
A	37	Windshield Washer Motor
A	38	Headlamp Cleaner Motor
A	39	Headlamp Cleaner Control Relay
A	43	Junction Connector
A	44	Junction Connector
A	45	Headlamp (LH Low)
A	49	Headlamp (RH Low)
A	53	VSV (Air Intake Control)
A	54	Cooling Fan ECU
A	55	Engine ECU
A	59	No.1 Ultrasonic Sensor (Front LH)
A	60	No.1 Ultrasonic Sensor (Front RH)
A	61	Wireless Door Lock Buzzer

B 1 Windshield Wiper Motor

 
Position of Parts in Engine Compartment <LHD 2GR-FE>

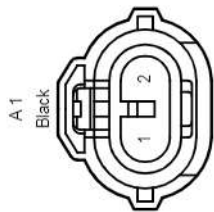

A 1
Black



 A 2
Black




A 3
Black




A 4
Black



 
A 5
Black

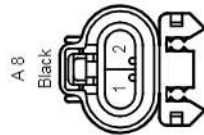

A 8
Black

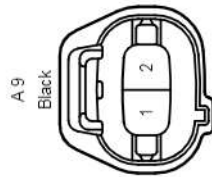 


A 9
Black

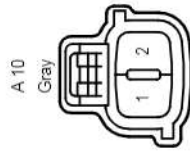 


A 10
Gray



 A 11
White

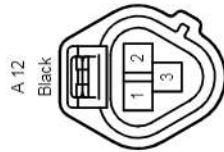


A 12
Black

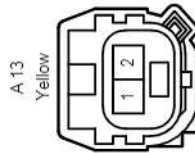 


A 13
Yellow



 A 14
Black

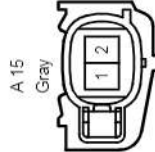

A 15
Gray

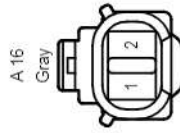 


A 16
Gray




A 23
Black

 
A 26
Black

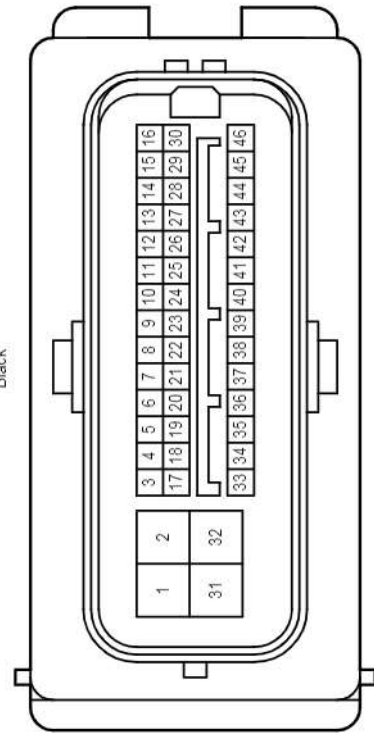

A 27
Black

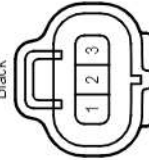 

A 28
Yellow

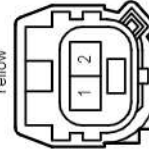 

A 29
Black



A 30
Black



 
 
 
A 31
Gray



A 32
White

























A 33
Black

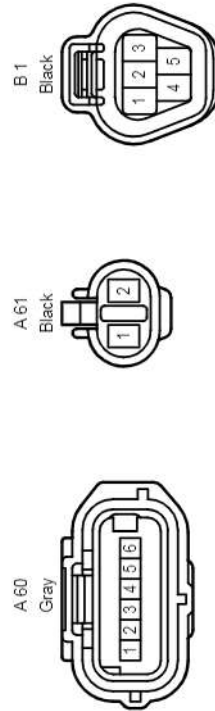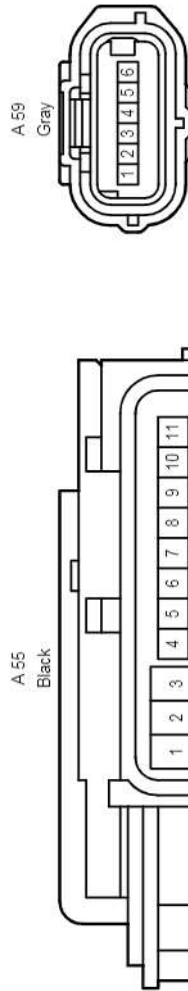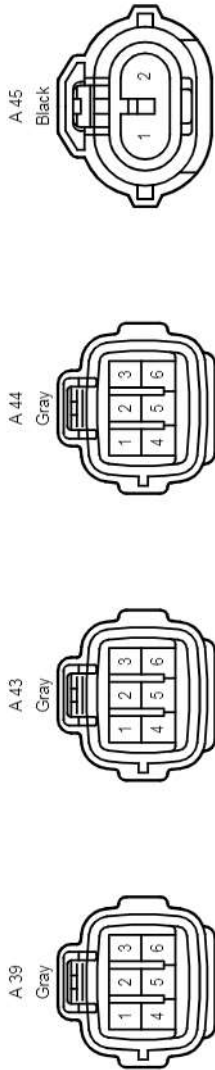





C 1	Park/Neutral Position SW
C 2	Air Flow Meter
C 3	Starter
C 4	EFI Water Temp. Sensor
C 5	Throttle Body Assembly
C 6	VSV (Purge)
C 7	Fuel Injector (No.1)
C 8	Fuel Injector (No.3)
C 9	Fuel Injector (No.2)
C 10	Fuel Injector (No.4)
C 11	Ignition Coil (No.1)
C 12	Ignition Coil (No.3)
C 13	Ignition Coil (No.2)
C 14	Ignition Coil (No.4)
C 15	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C 16	Noise Filter (Ignition RH)
C 17	Power Steering Oil Pressure SW
C 18	Alternator
C 19	Alternator
C 19	Alternator
C 21	A/C Compressor
C 23	Engine Oil Pressure SW
C 34	VSV (ACM)
C 35	Air Fuel Ratio Sensor (Bank 2 Sensor 1)
C 36	Fuel Injector (No.5)
C 37	Fuel Injector (No.6)
C 38	Ignition Coil (No.5)
C 39	Ignition Coil (No.6)
C 40	V/T Sensor (Bank 1 Exhaust Side)
C 41	V/T Sensor (Bank 1 Intake Side)
C 42	Camshaft Timing Oil Control Valve (Bank 1 Exhaust Side)
C 43	Camshaft Timing Oil Control Valve (Bank 1 Intake Side)
C 44	V/T Sensor (Bank 2 Exhaust Side)
C 45	V/T Sensor (Bank 2 Intake Side)
C 46	Camshaft Timing Oil Control Valve (Bank 2 Exhaust Side)
C 47	Camshaft Timing Oil Control Valve (Bank 2 Intake Side)
C 48	VSV (ACIS)
C 49	Noise Filter (Ignition LH)
C 50	Crankshaft Position Sensor
C 51	Heated Oxygen Sensor (Bank 2 Sensor 2)
C 52	Heated Oxygen Sensor (Bank 1 Sensor 2)
C 53	A/C Compressor
C 55	Engine ECU
C 56	Transmission Control ECU

                      
Position of Parts in Engine Compartment <LHD 2GR-FE>

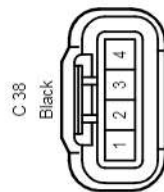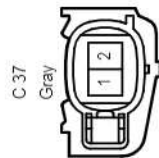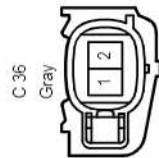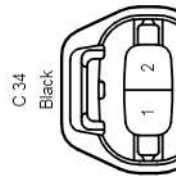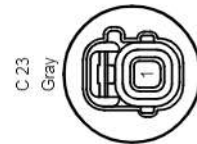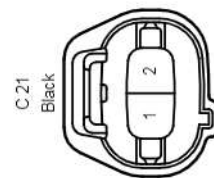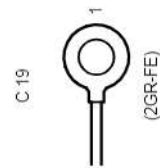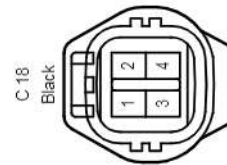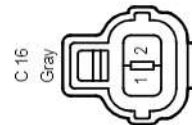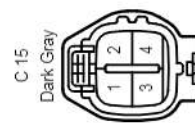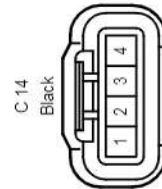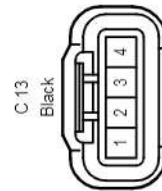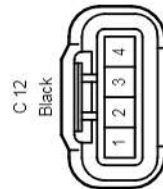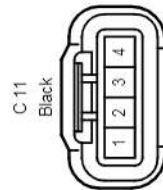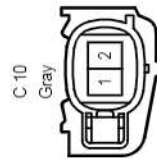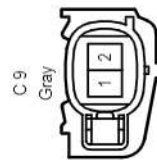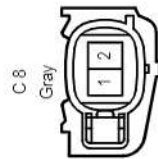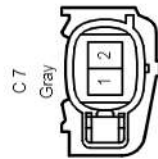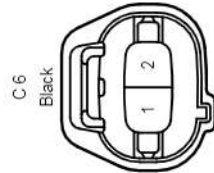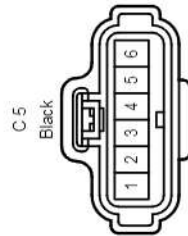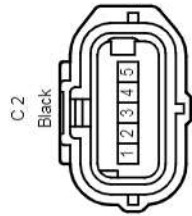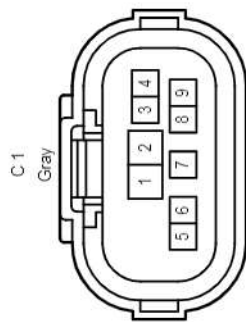


 
 
Position of Parts in Engine Compartment <LHD 2GR-FE>

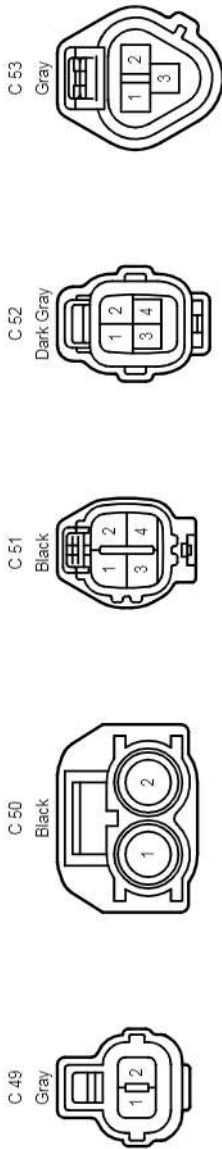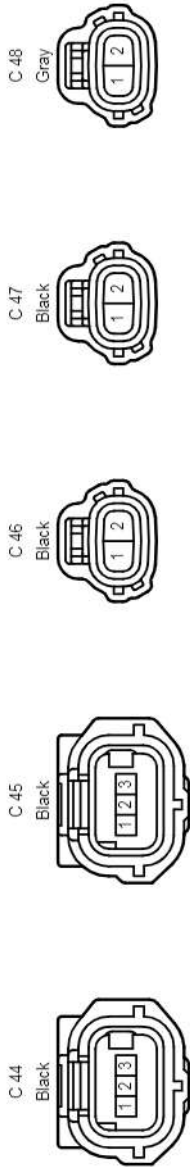


C 55
Black

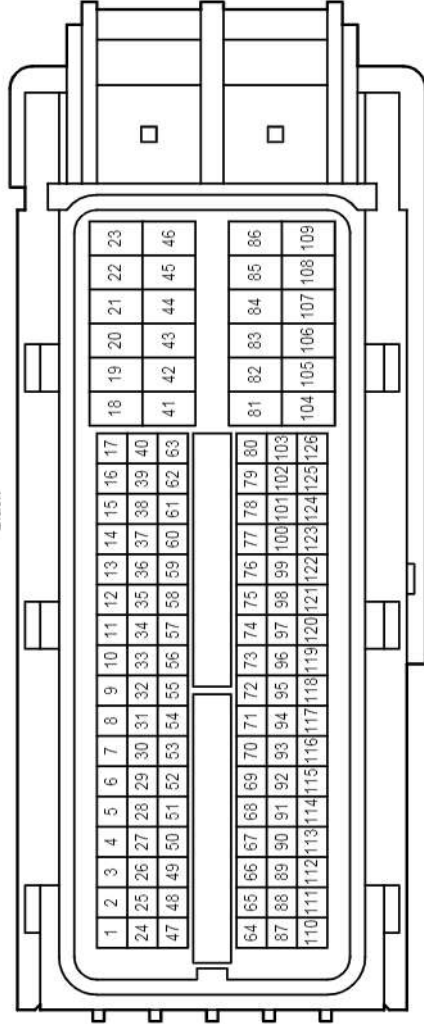 


   Position of Parts in Engine Compartment <LHD 2GR-FE>

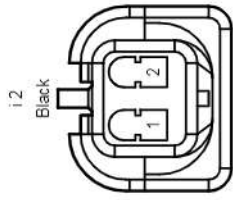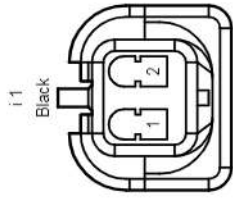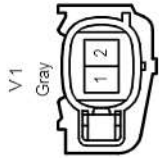

  
Wire and Wire , Ground Points in Engine Compartment <LHD 2GR-FE>

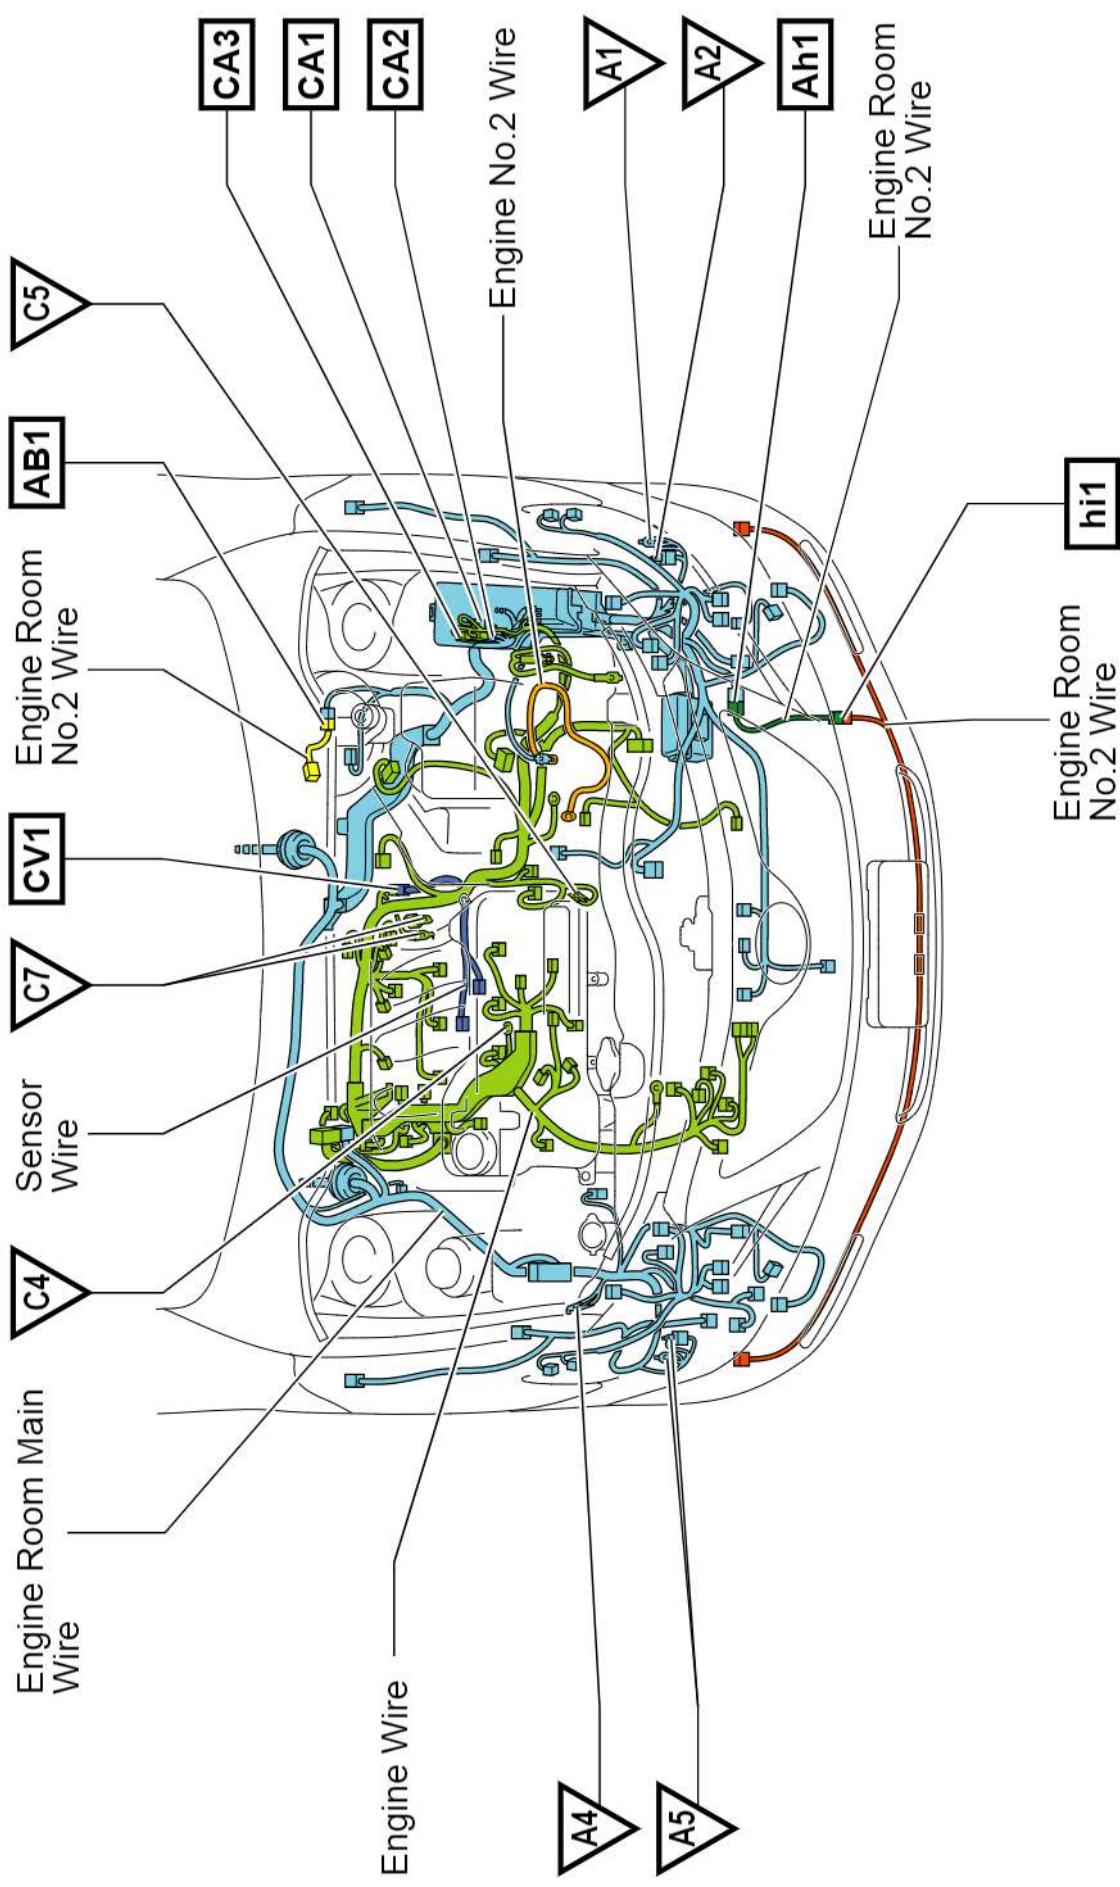









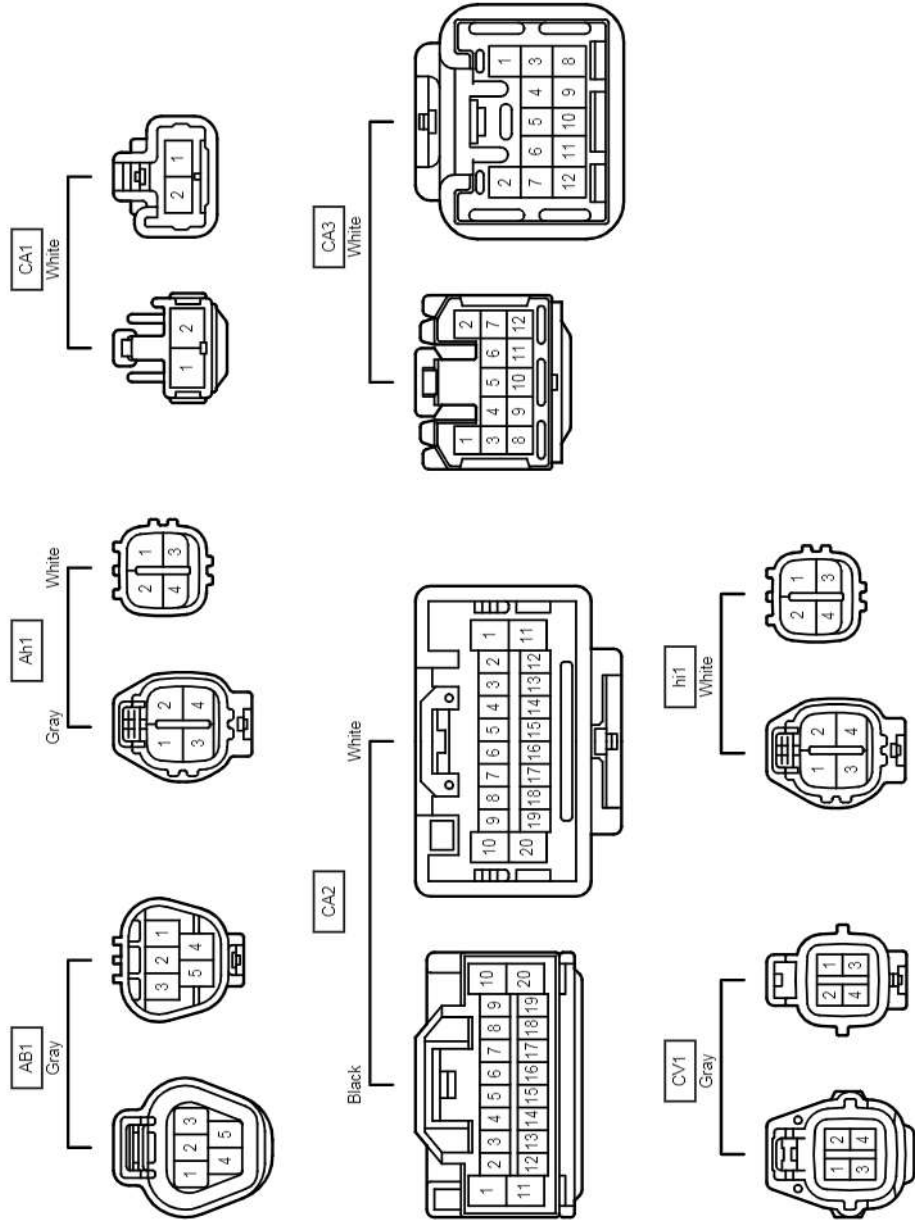


Position of Parts in Engine Compartment <RHD 2GR-FE>

 * 1: Before Jan. 2009 Production
* 2: From Jan. 2009 Production

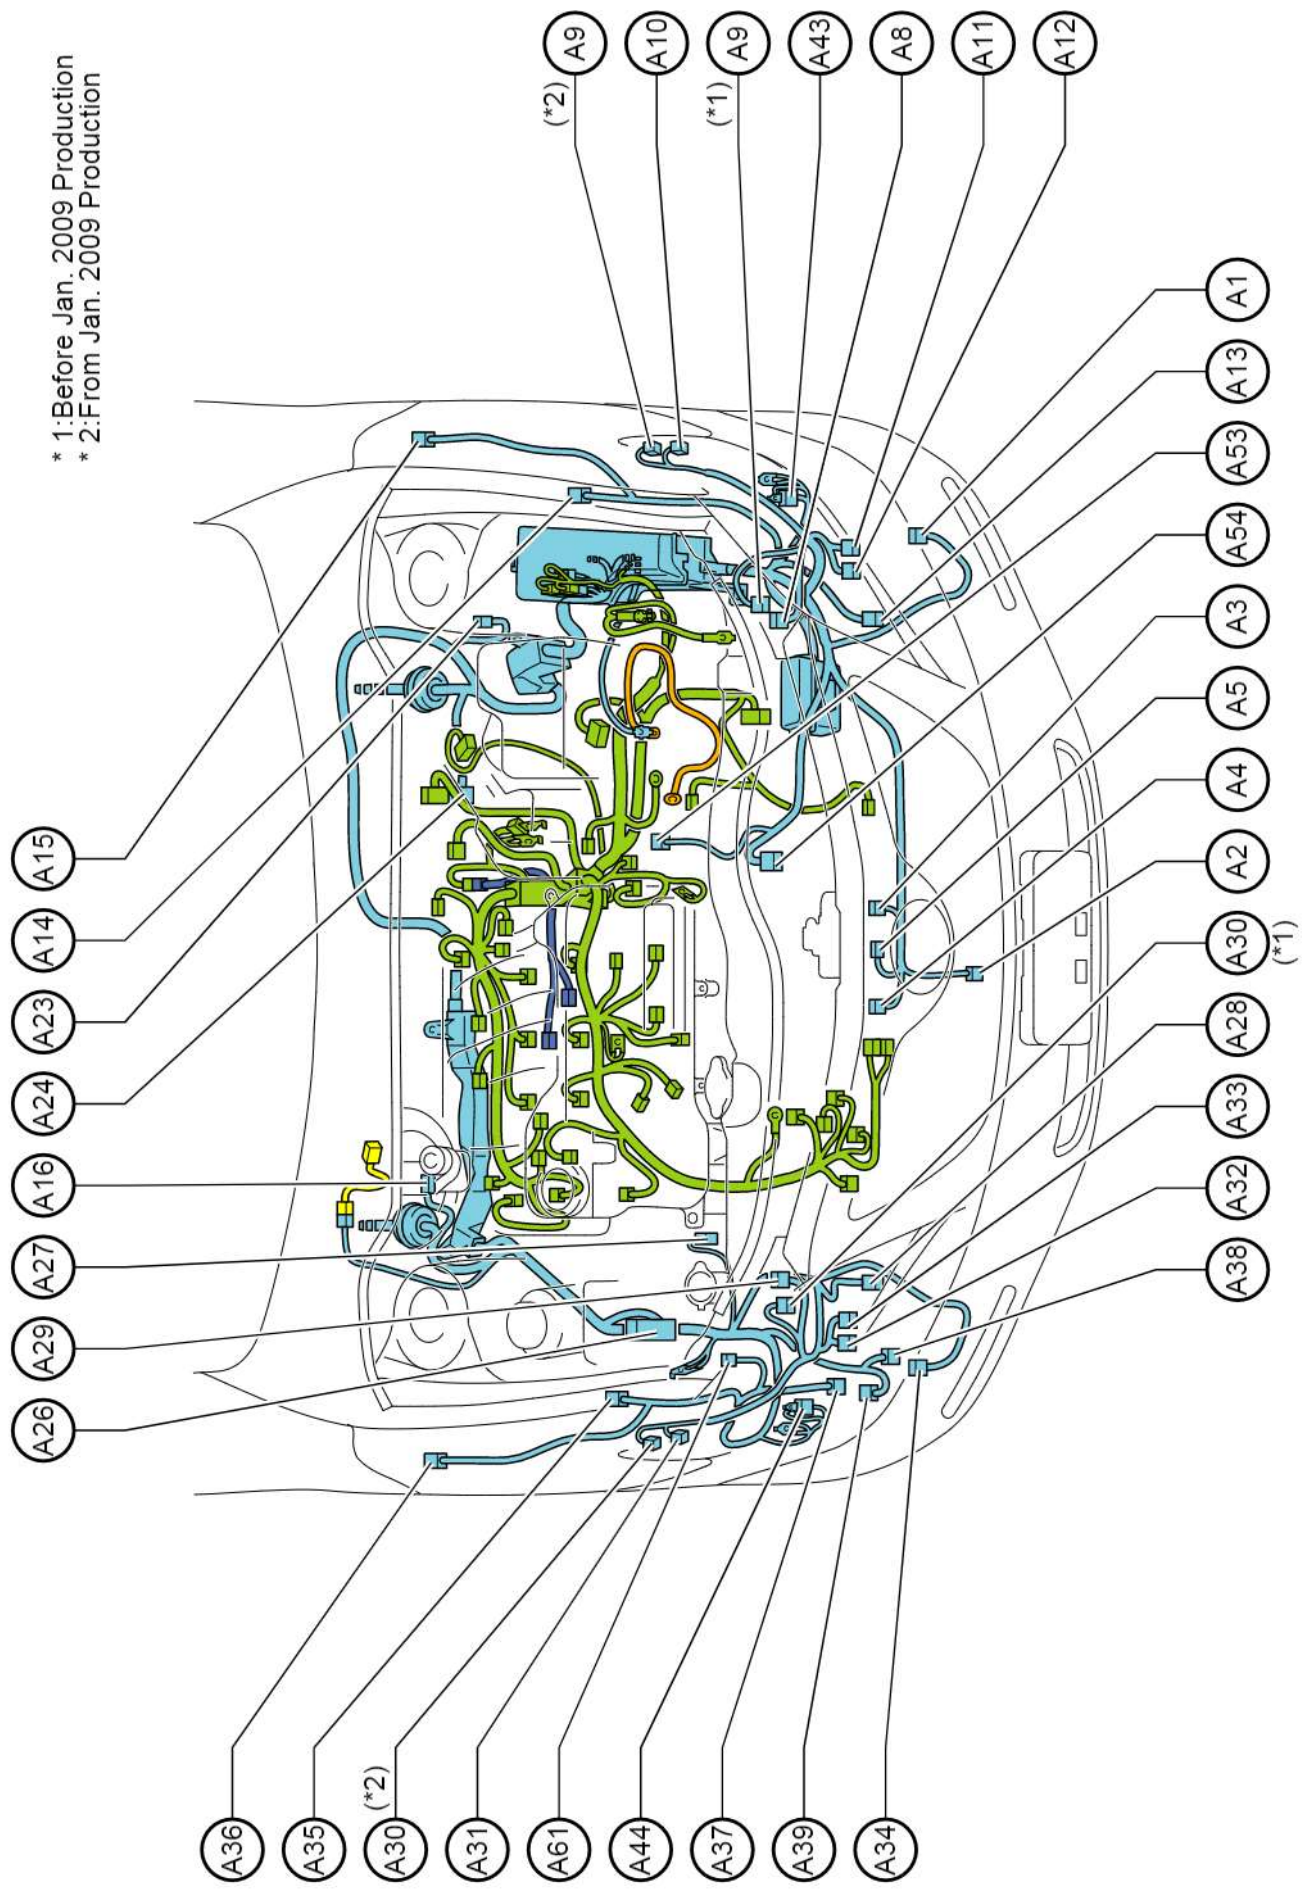

A 1	Fog Lamp (Front LH)
A 2	Ambient Temp. Sensor
A 3	Horn (High)
A 4	Horn (Low)
A 5	Engine Hood Courtesy SW
A 8	Headlamp (LH High)
A 9	Clearance Lamp (Front LH)
A 10	Turn Signal Lamp (Front LH)
A 11	Headlamp Assembly (LH)
A 12	Headlamp Leveling Motor (LH)
A 13	Airbag Sensor (Front LH)
A 14	Speed Sensor (Front LH)
A 15	Turn Signal Lamp (Front Side LH)
A 16	Brake Fluid Level Warning SW
A 23	Security Horn
A 24	Engine ECU
A 26	Skid Control ECU with Actuator
A 27	A/C Pressure Sensor
A 28	Airbag Sensor (Front RH)
A 29	Headlamp (RH High)
A 30	Clearance Lamp (Front RH)
A 31	Turn Signal Lamp (Front RH)
A 32	Headlamp Assembly (RH)
A 33	Headlamp Leveling Motor (RH)
A 34	Fog Lamp (Front RH)
A 35	Speed Sensor (Front RH)
A 36	Turn Signal Lamp (Front Side RH)
A 37	Windshield Washer Motor
A 38	Headlamp Cleaner Motor
A 39	Headlamp Cleaner Control Relay
A 43	Junction Connector
A 44	Junction Connector
A 53	VSV (Air Intake Control)
A 54	Cooling Fan ECU
A 61	Wireless Door Lock Buzzer

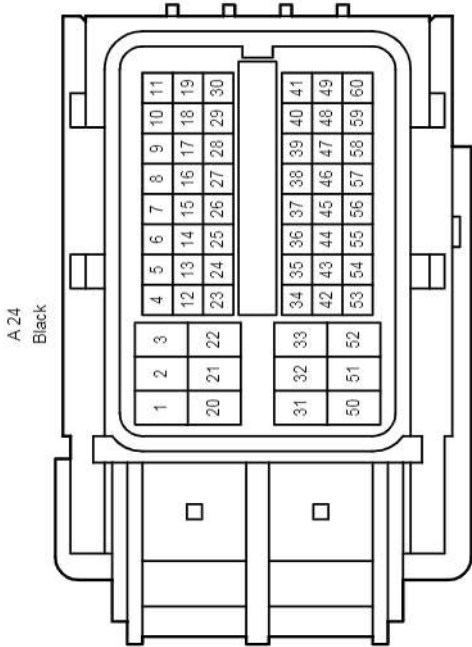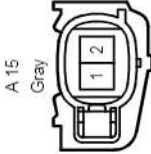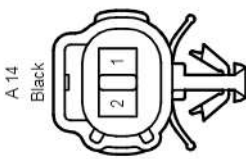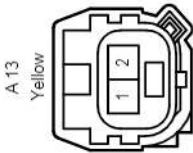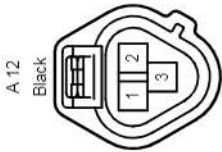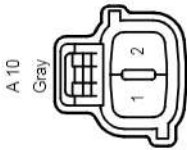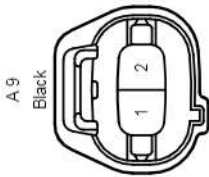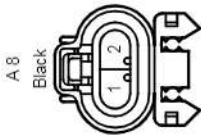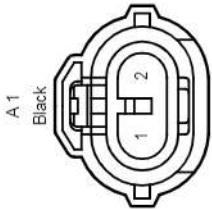         


A 26
Black

A 27
Black

A 28
Yellow

Position of Parts in Engine Compartment <RHD 2GR-FE>

 A 29
Black

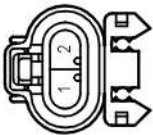

A 30
Black



 
A 31
Gray




A 32
White




A 33
Black

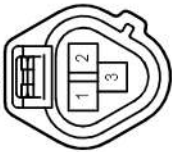

A 34
Black

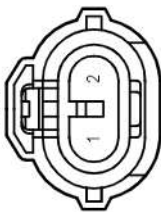 

A 35
Gray

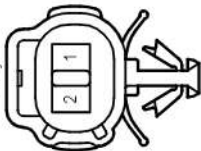 

A 36
Gray



 
A 37
Black




A 38
Black




A 39
Gray

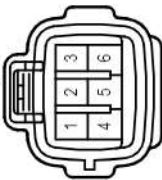


A 43
Gray

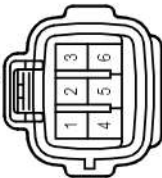 


A 44
Gray

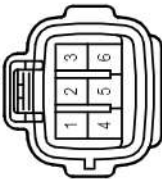 

A 53
Black

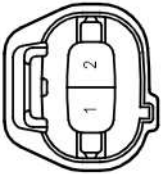 


A 54
Black

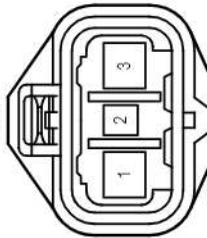 

A 61
Black



















 Position of Parts in Engine Compartment <RHD 2GR-FE>









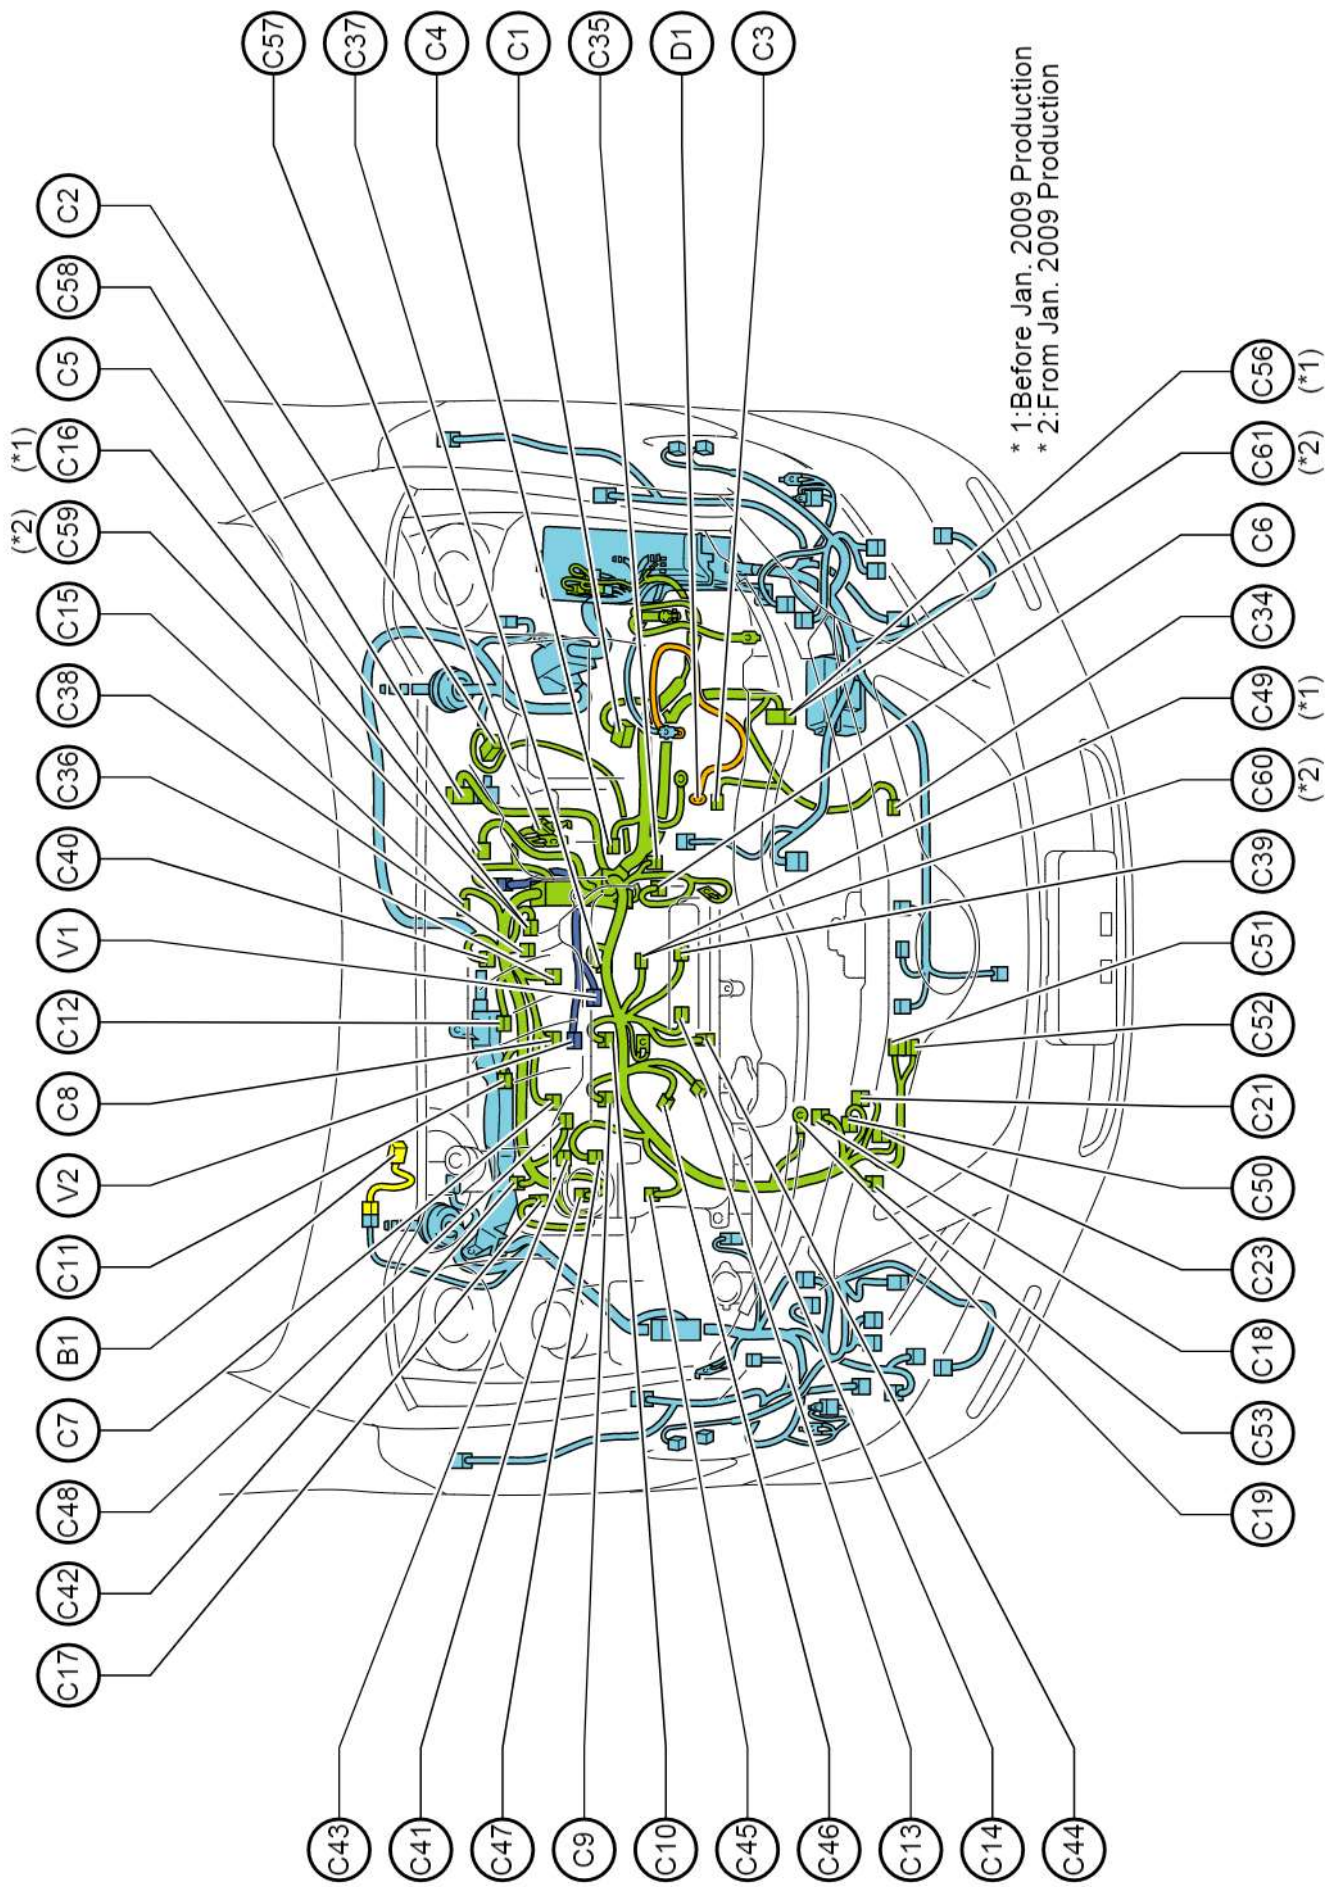


B	1	Windshield Wiper Motor
C	1	Park/Neutral Position SW
C	2	Air Flow Meter
C	3	Starter
C	4	EFI Water Temp. Sensor
C	5	Throttle Body Assembly
C	6	VSV (Purge)
C	7	Fuel Injector (No.1)
C	8	Fuel Injector (No.3)
C	9	Fuel Injector (No.2)
C	10	Fuel Injector (No.4)
C	11	Ignition Coil (No.1)
C	12	Ignition Coil (No.3)
C	13	Ignition Coil (No.2)
C	14	Ignition Coil (No.4)
C	15	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C	16	Noise Filter (Ignition RH)
C	17	Power Steering Oil Pressure SW
C	18	Alternator
C	19	Alternator
C	19	Alternator
C	21	A/C Compressor
C	23	Engine Oil Pressure SW
C	34	VSV (ACM)
C	35	Air Fuel Ratio Sensor (Bank 2 Sensor 1)
C	36	Fuel Injector (No.5)
C	37	Fuel Injector (No.6)
C	38	Ignition Coil (No.5)
C	39	Ignition Coil (No.6)
C	40	V/T Sensor (Bank 1 Exhaust Side)
C	41	V/T Sensor (Bank 1 Intake Side)
C	42	Camshaft Timing Oil Control Valve (Bank 1 Exhaust Side)
C	43	Camshaft Timing Oil Control Valve (Bank 1 Intake Side)
C	44	V/T Sensor (Bank 2 Exhaust Side)
C	45	V/T Sensor (Bank 2 Intake Side)
C	46	Camshaft Timing Oil Control Valve (Bank 2 Exhaust Side)
C	47	Camshaft Timing Oil Control Valve (Bank 2 Intake Side)
C	48	VSV (ACIS)
C	49	Noise Filter (Ignition LH)
C	50	Crankshaft Position Sensor
C	51	Heated Oxygen Sensor (Bank 2 Sensor 2)
C	52	Heated Oxygen Sensor (Bank 1 Sensor 2)
C	53	A/C Compressor

                
Position of Parts in Engine Compartment <RHD 2GR-FE>

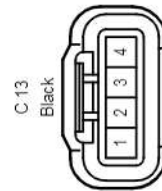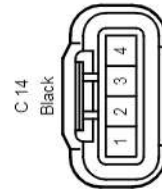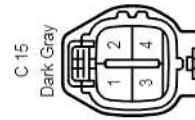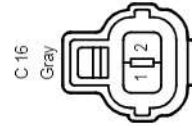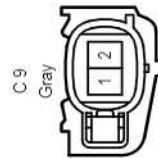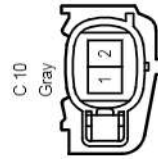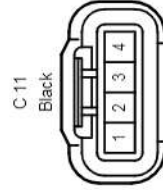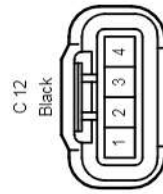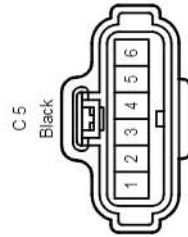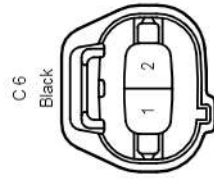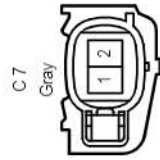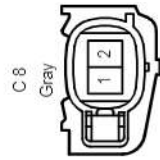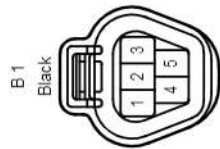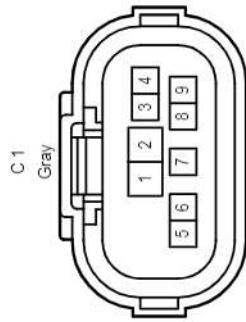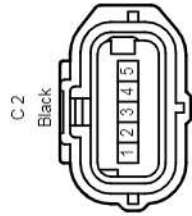


(Before Aug. 2010 Production)

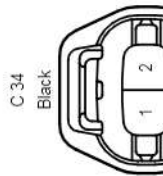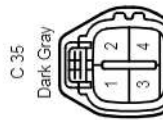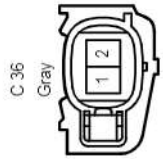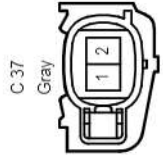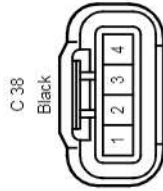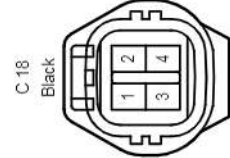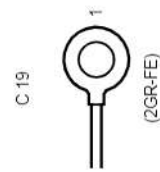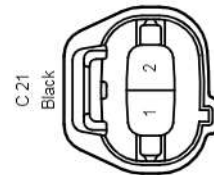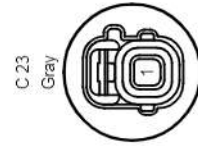         

 
Position of Parts in Engine Compartment <RHD 2GR-FE>

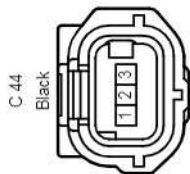

C 44
Black

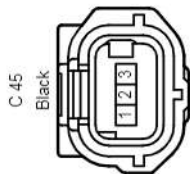 


C 45
Black

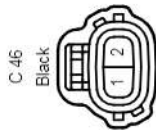 

C 46
Black



 
C 47
Black

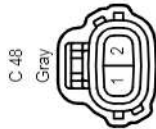


C 48
Gray



 C 49
Gray

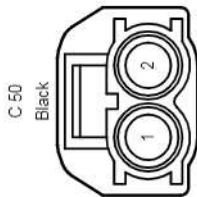


C 50
Black

 


C 51
Black



 
C 52
Dark Gray

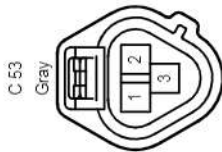

C 53
Gray

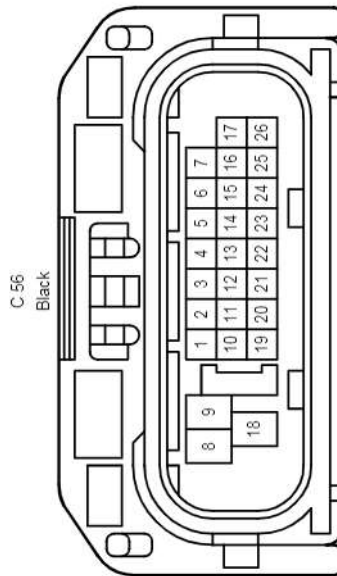 


C 56
Black

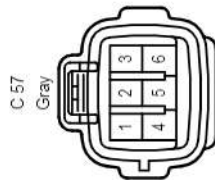 

C 57
Gray

 C 58
Black

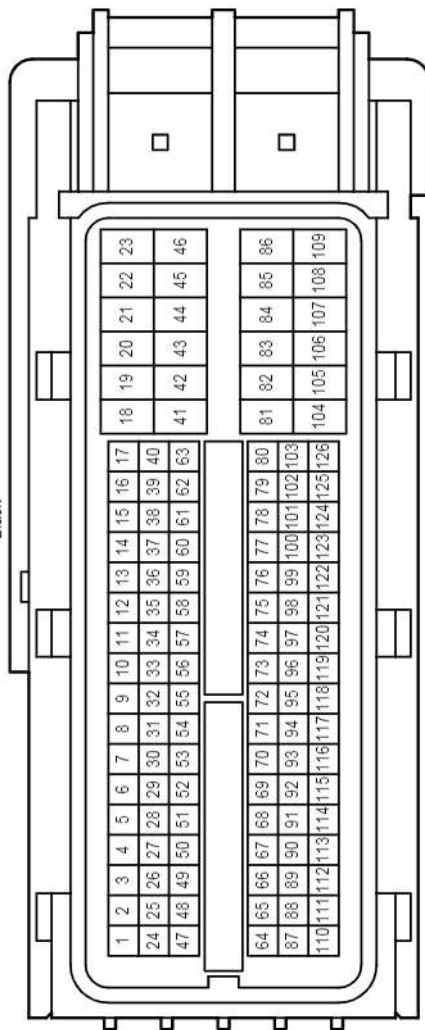



C 59
Gray




   cardiagn.com



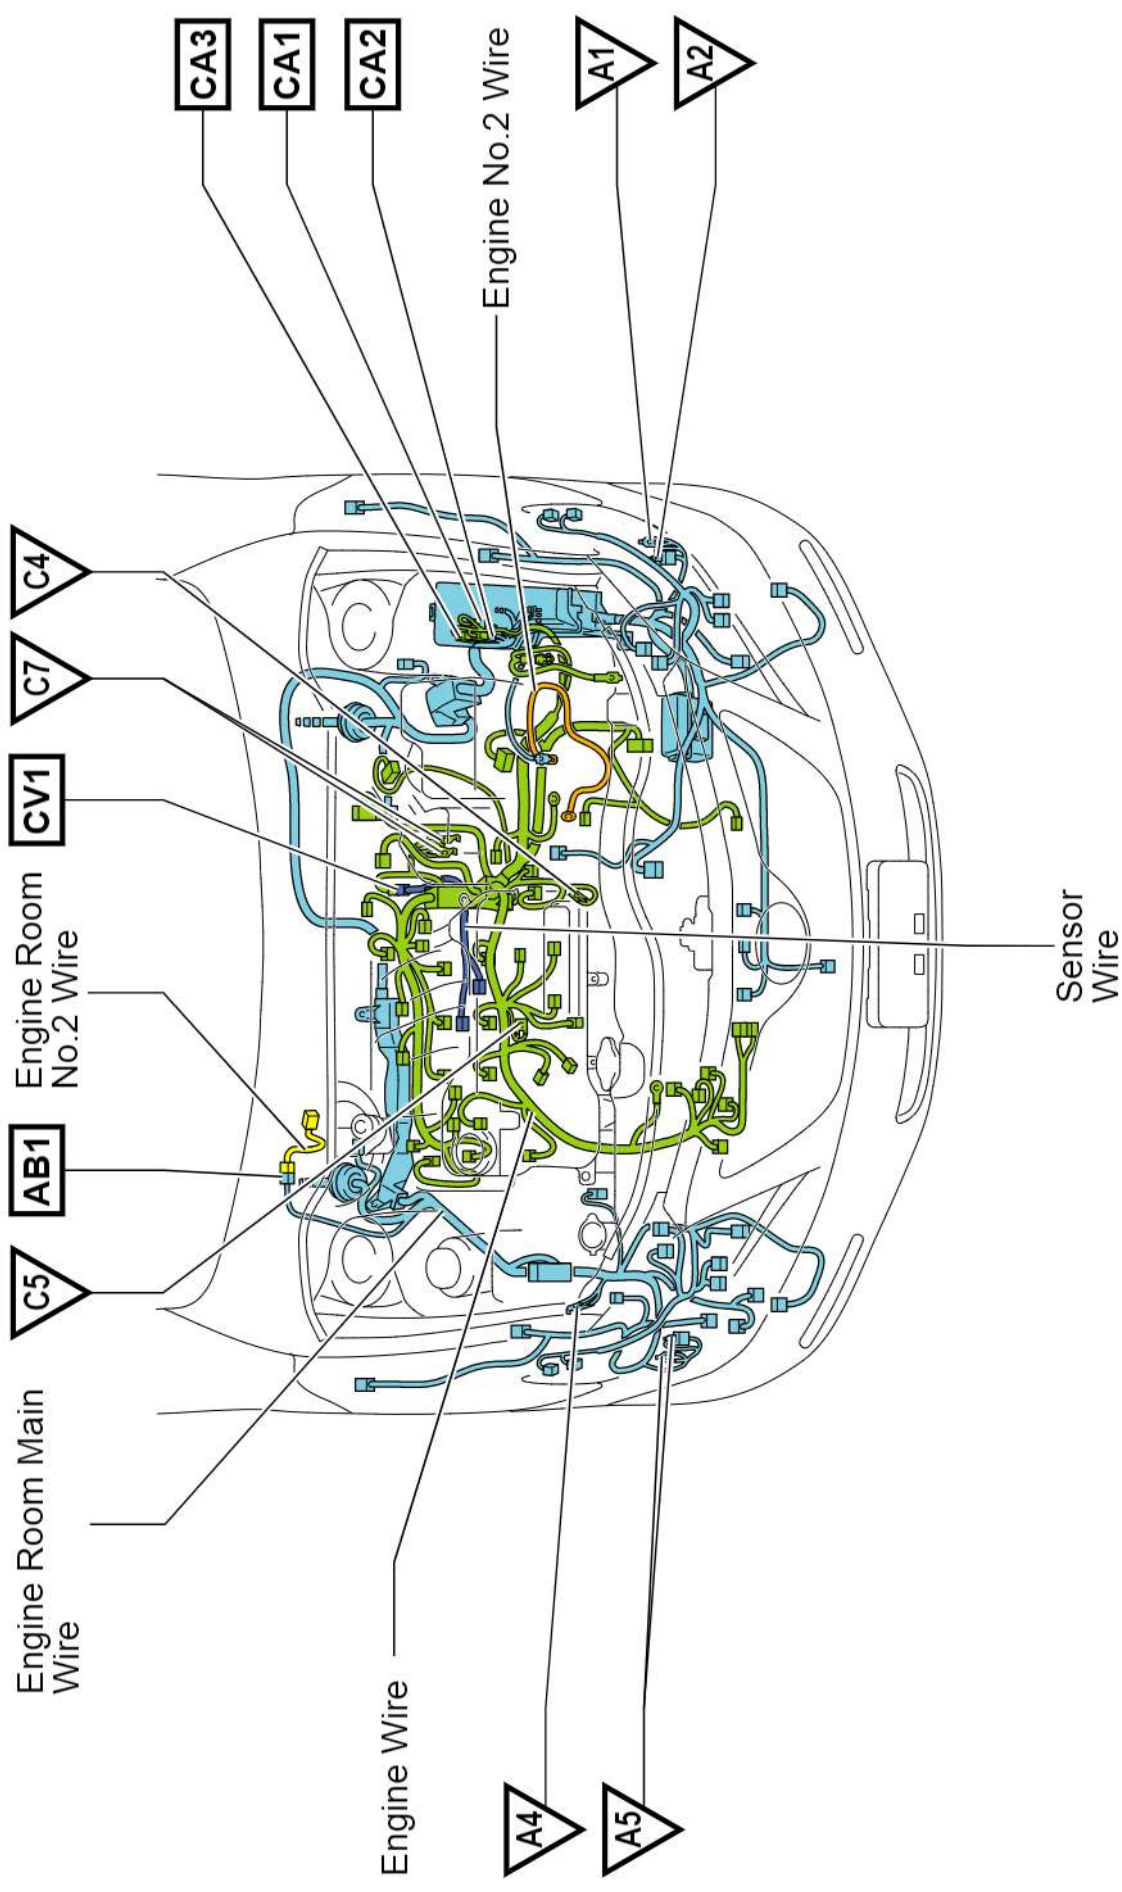

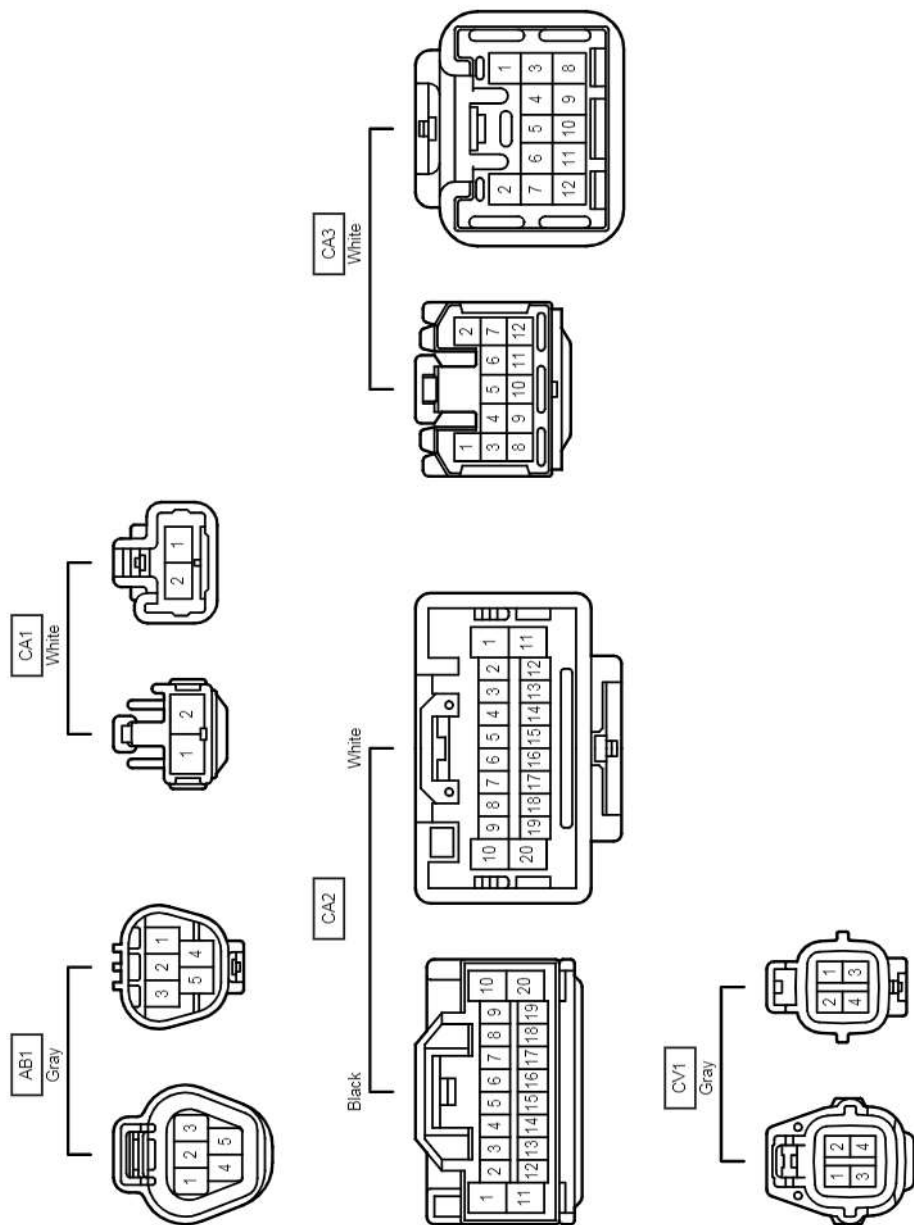

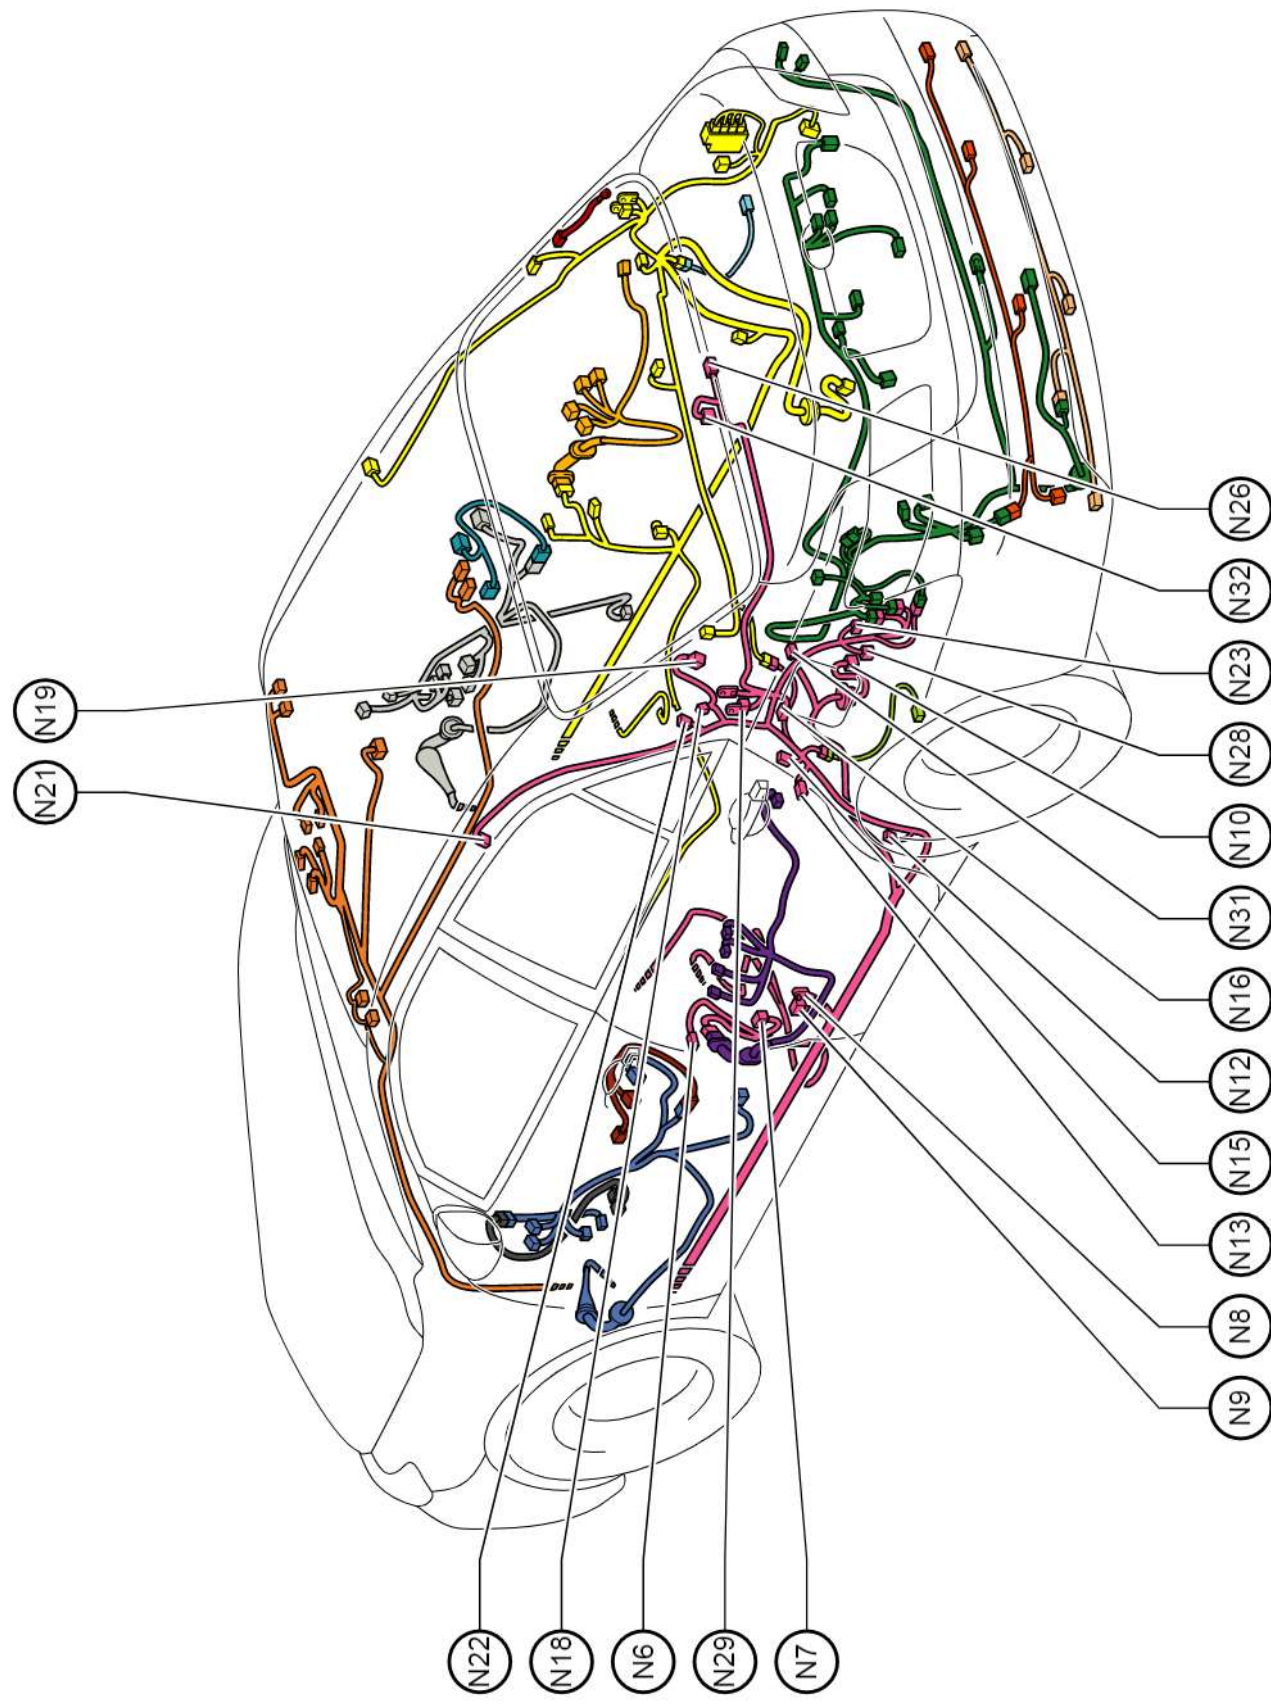

N 6	Door Courtesy SW (Front LH)
N 6	Door Courtesy SW (Front LH)
N 7	Side Airbag Sensor (Front LH)
N 8	Pretensioner (LH)
N 9	Tension Reducer (LH)
N 10	Fuel Suction Pump and Gage Assembly
N 12	Side Airbag Sensor (Rear LH)
N 13	Door Courtesy SW (Rear LH)
N 13	Door Courtesy SW (Rear LH)
N 15	Noise Filter (Dome and Stop)
N 16	Center Stop Lamp
N 18	Noise Filter (Rear Window Defogger)
N 19	Rear Window Defogger
N 21	Curtain Shield Airbag Squib (LH)
N 22	Rear Window Defogger
N 23	Diode (Luggage Compartment Lamp)
N 26	Luggage Compartment Lamp
N 28	Junction Connector
N 29	Junction Connector
N 31	Electrical Key Oscillator (Rear Seat)
N 32	Electrical Key Oscillator (Inside Luggage Room)

Position of Parts in Body <LHD>



 
N 6
White

(Before Jul. 2007 Production)




N 6
Black

(From Jul. 2007 Production)

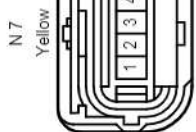


N 7
Yellow

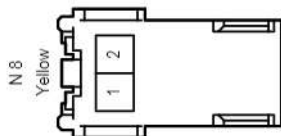 


N 8
Yellow



 N 9
White

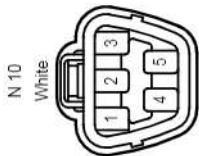

N 10
White

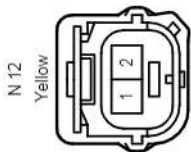 

N 12
Yellow



 
N 13
Black

(Before Jul. 2007 Production)



N 13
White


(From Jul. 2007 Production)

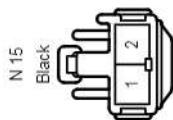

N 15
Black



 
N 16
White



N 18
Black



 
N 19
Black

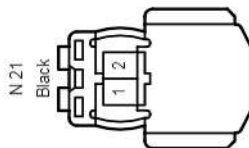


N 21
Black



 
N 22
White




N 23
Black

 


N 26
Gray

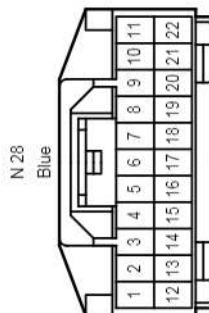 


N 28
Blue

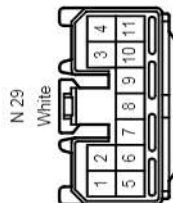 

N 29
White

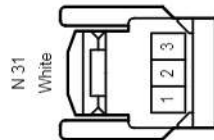 


N 31
White

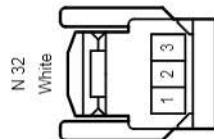 

N 32
White

 Position of Parts in Body <LHD>

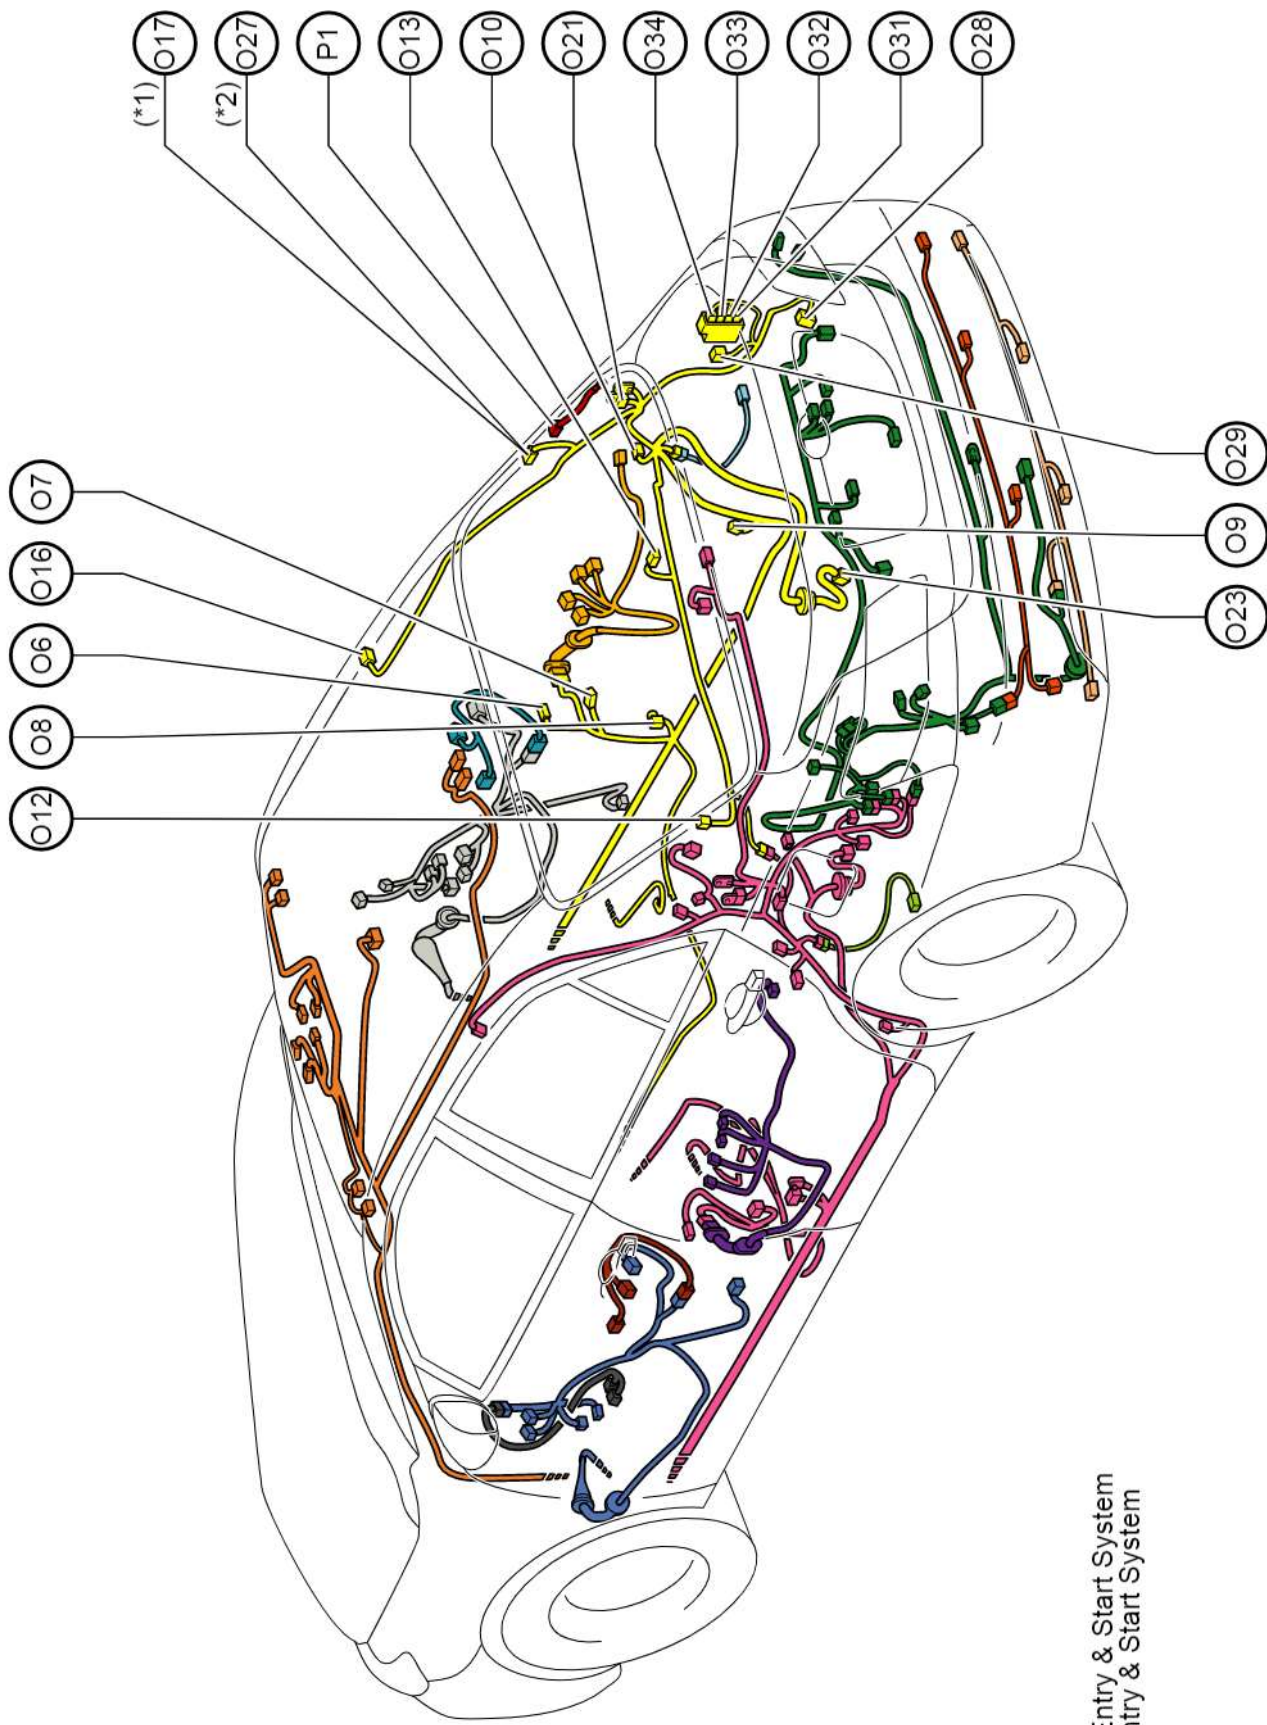

* 1:w/o Entry & Start System
* 2:w/ Entry & Start System

O	6	Door Courtesy SW (Front RH)
O	6	Door Courtesy SW (Front RH)
O	7	Side Airbag Sensor (Front RH)
O	8	Pretensioner (RH)
O	9	Side Airbag Sensor (Rear RH)
O	10	Door Courtesy SW (Rear RH)
O	10	Door Courtesy SW (Rear RH)
O	12	Speaker (Rear LH)
O	13	Speaker (Rear RH)
O	16	Curtain Shield Airbag Squib (RH)
O	17	Door Control Receiver
O	21	Junction Connector
O	23	Height Control Sensor
O	27	Door Control Receiver
O	28	Rear Clearance Warning ECU Assembly
O	29	Electrical Key Antenna
O	31	Junction Connector
O	32	Junction Connector
O	33	Junction Connector
O	34	Junction Connector
P	1	Rear Window Defogger

Position of Parts in Body <LHD>

O 6
White



 
(Before Jul. 2007 Production)

O 6
Black




(From Jul. 2007 Production)


O 7
Yellow

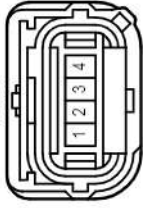

O 8
Yellow

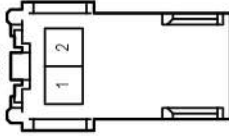 

O 9
Yellow

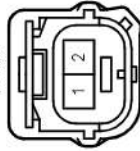 

O 10
White



(From Jul. 2007 Production)

O 10
Black



(Before Jul. 2007 Production)

 
O 12
White




O 13
White




O 16
Black

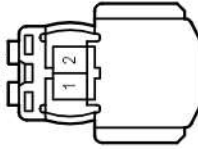

O 17
White

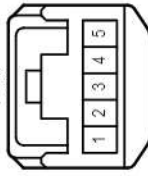 

O 21
White

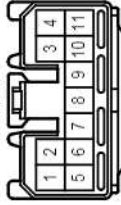 


O 23
Black




O 27
White



 
O 28
White

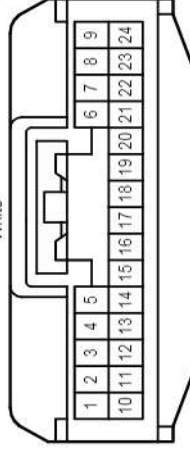


O 29
Gray

 


O 31
Blue

 

O 32
White

 

O 33
Gray

 


O 34
White



P 1
Black





 Position of Parts in Body <LHD>


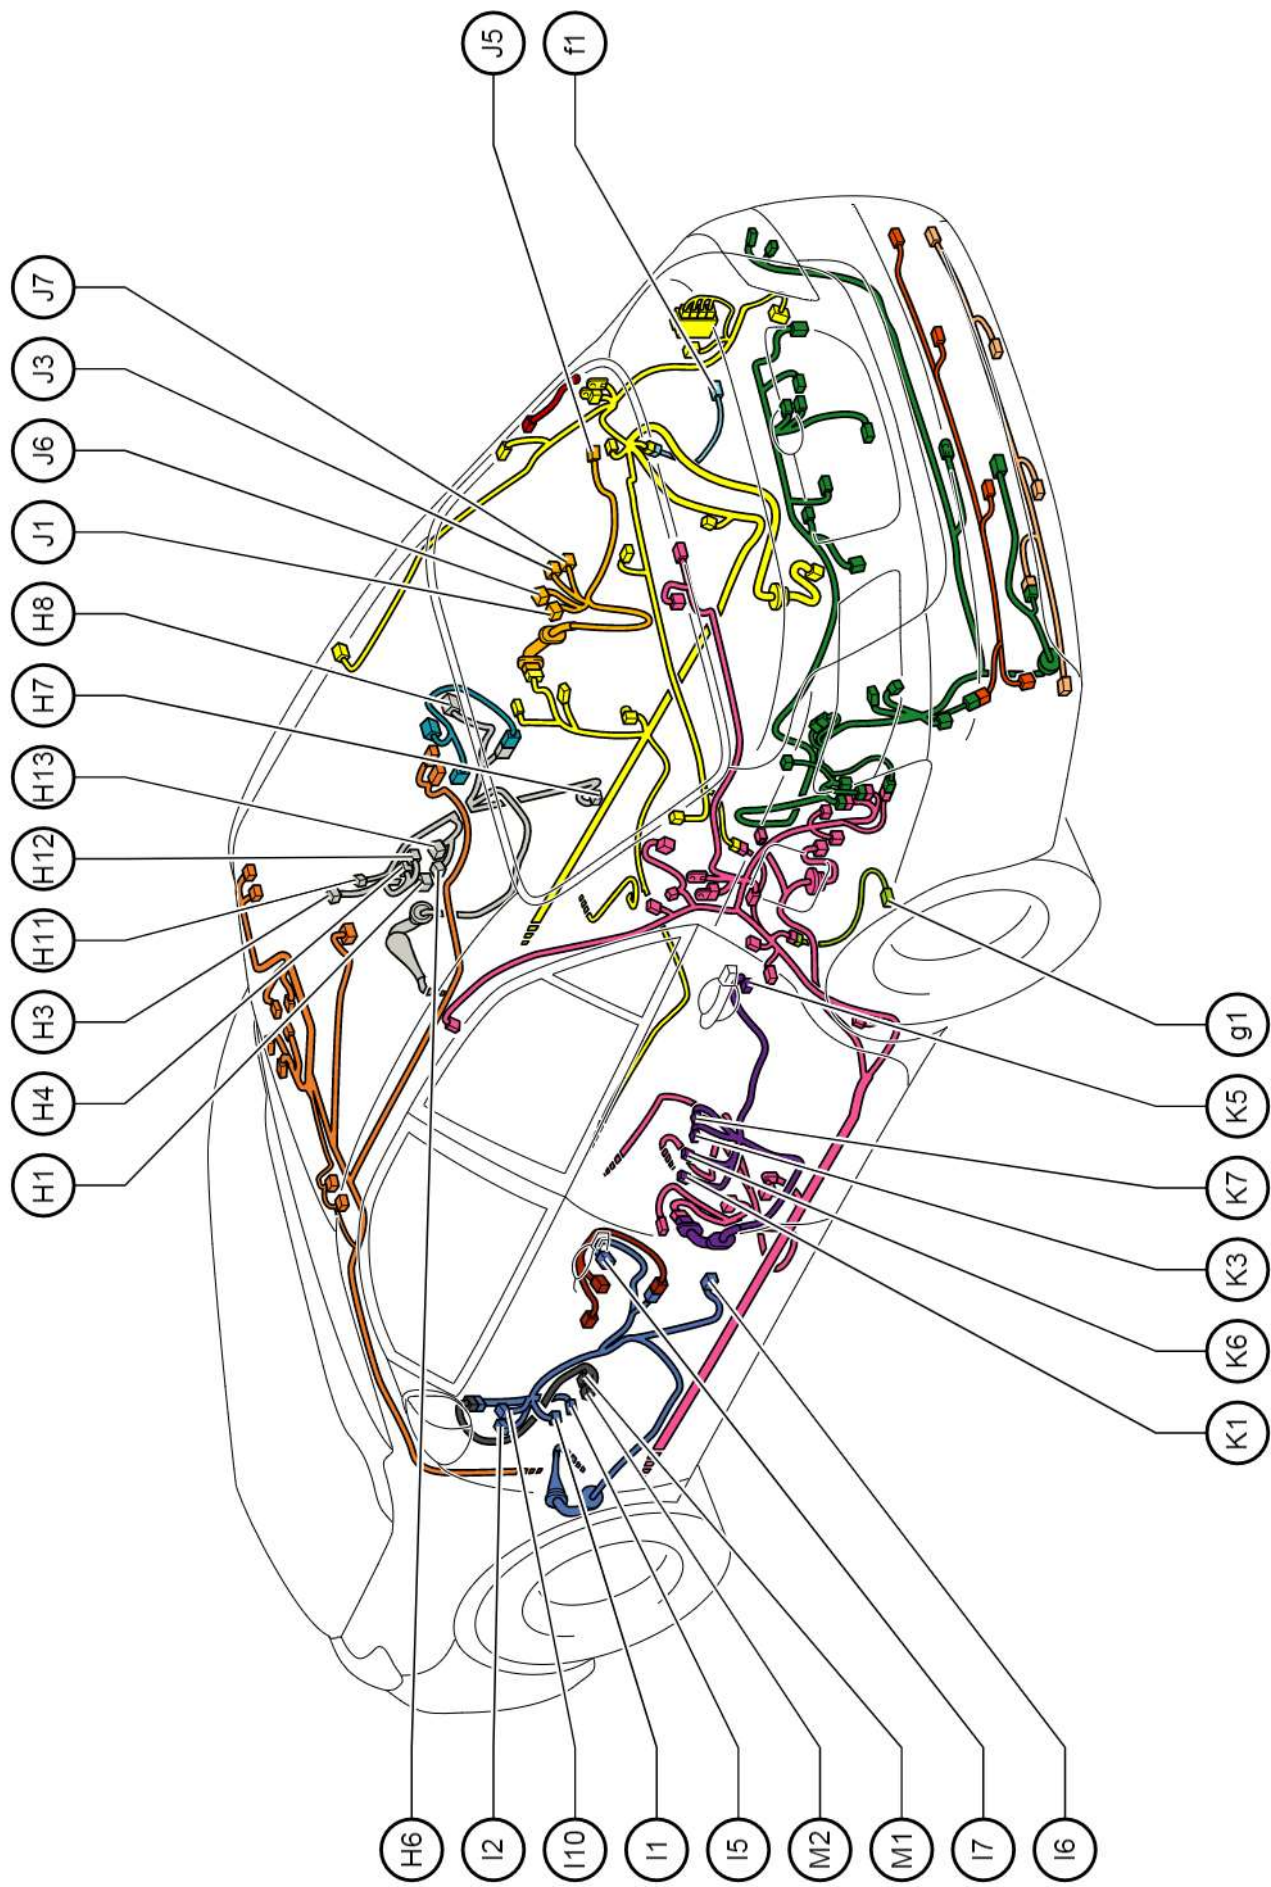


H	1	Speaker (Front Door RH)
H	3	Outer Rear View Mirror (RH)
H	4	Power Window Regulator Motor (Front RH)
H	6	Power Window SW (Front RH)
H	7	Courtesy Lamp (Front Door RH)
H	8	Door Lock Assembly (Front RH)
H	11	Outer Rear View Mirror (RH)
H	11	Outer Rear View Mirror (RH)
H	12	Power Window Regulator Motor (Front RH)
H	13	Power Window SW (Front RH)
I	1	Speaker (Front Door LH)
I	2	Outer Rear View Mirror (LH)
I	5	Power Window Regulator Motor (Front LH)
I	6	Courtesy Lamp (Front Door LH)
I	7	Door Lock Assembly (Front LH)
I	10	Outer Rear View Mirror (LH)
I	10	Outer Rear View Mirror (LH)
J	1	Power Window SW (Rear RH)
J	3	Power Window Regulator Motor (Rear RH)
J	5	Door Lock Assembly (Rear RH)
J	6	Power Window SW (Rear RH)
J	7	Power Window Regulator Motor (Rear RH)
K	1	Power Window SW (Rear LH)
K	3	Power Window Regulator Motor (Rear LH)
K	5	Door Lock Assembly (Rear LH)
K	6	Power Window SW (Rear LH)
K	7	Power Window Regulator Motor (Rear LH)
M	1	Power Window Master SW
M	2	Power Window Master SW
f	1	Speed Sensor (Rear RH)
g	1	Speed Sensor (Rear LH)

  Position of Parts in Body <LHD>








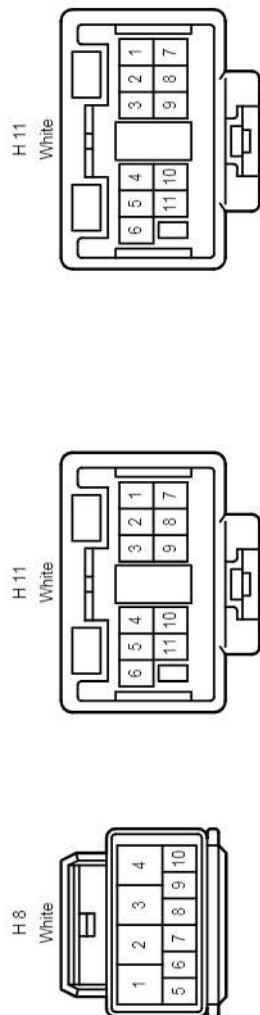
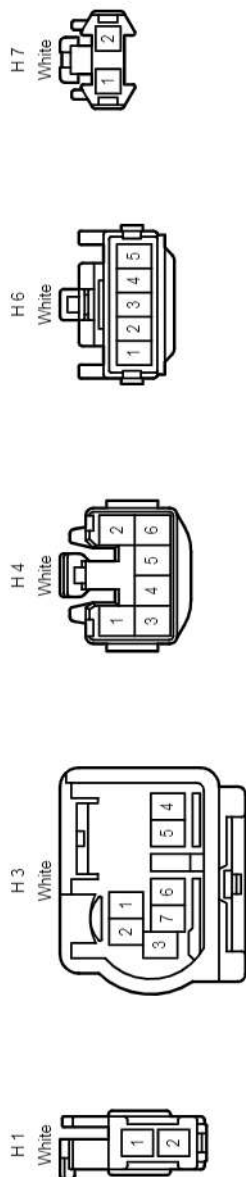


  (From Jan. 2009 Production until Aug. 2010 Production)

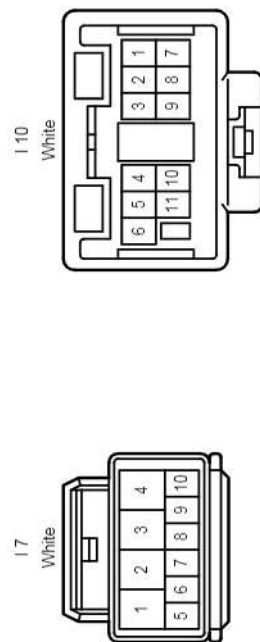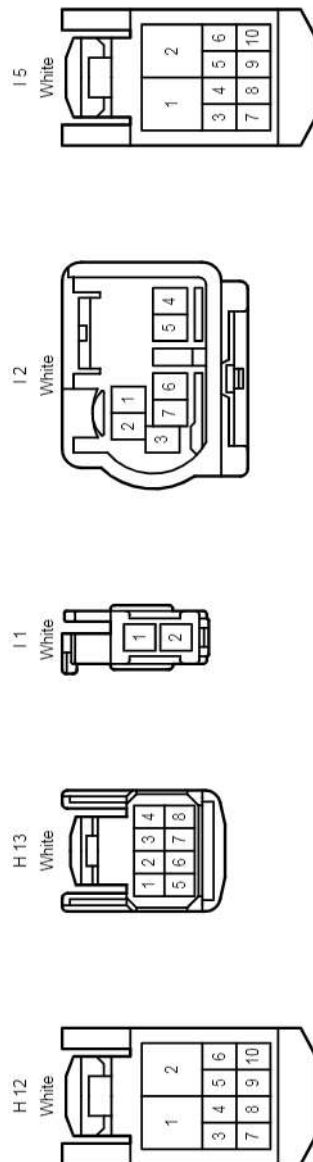

         (From Jan. 2009 Production until Aug. 2010 Production)



























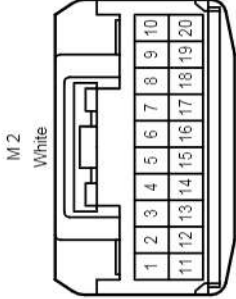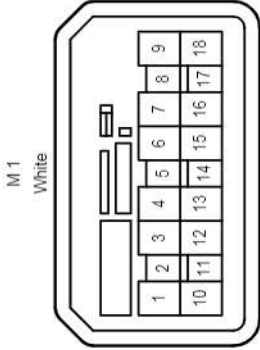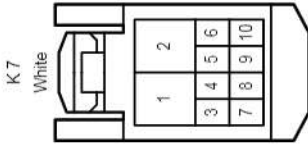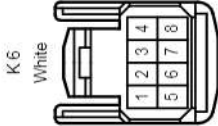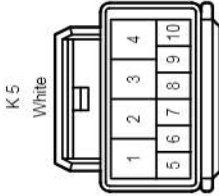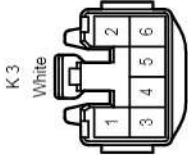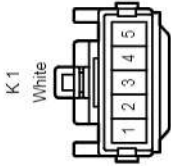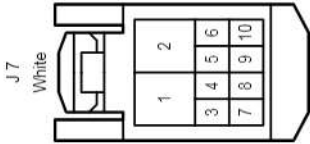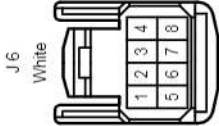





Q	1	Vanity Lamp SW (LH)
Q	2	Vanity Lamp SW (RH)
Q	3	Inner Rear View Mirror
Q	4	Rain Sensor
Q	6	Overhead J/B
Q	7	Vanity Lamp (LH)
Q	8	Vanity Lamp (RH)
Q	9	Room Lamp (Center)
Q	10	Map Lamp (RH)
Q	11	Map Lamp (LH)
Q	12	Sliding Roof Control ECU and Motor
Q	13	Microphone
Q	14	Inner Rear View Mirror
S	1	License Plate Lamp (RH)
S	2	Rear Combination Lamp (RH)
S	3	Rear Combination Lamp (LH)
S	4	License Plate Lamp (LH)
S	5	Door Lock Assembly (Luggage)
S	6	Luggage Compartment Door Lock Cylinder
S	10	Turn Signal Lamp (Rear LH)
S	11	Rear Combination Lamp (LH)
S	12	Rear Combination Lamp (RH)
S	13	Turn Signal Lamp (Rear RH)
S	15	Junction Connector
S	16	Junction Connector
S	17	Rear Clearance Warning ECU Assembly
S	18	Luggage Compartment Door Lock Cylinder
S	19	Luggage Electrical Key SW , Television Camera
S	20	Electrical Key Oscillator (Outside Luggage Room)
W	1	Door Outside Handle (Front RH)
W	2	Electrical Key Oscillator (Front Door RH)
X	1	Door Outside Handle (Front LH)
X	2	Electrical Key Oscillator (Front Door LH)
j	1	No.1 Ultrasonic Sensor (Rear Center LH)
j	2	No.1 Ultrasonic Sensor (Rear Center RH)
j	3	No.1 Ultrasonic Sensor (Rear Corner LH)
j	4	No.1 Ultrasonic Sensor (Rear Corner RH)
k	1	No.1 Ultrasonic Sensor (Rear Corner RH)
k	2	No.1 Ultrasonic Sensor (Rear Center RH)

                        Position of Parts in Body <LHD>

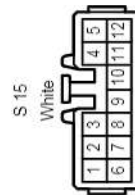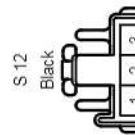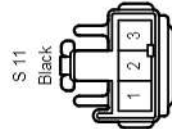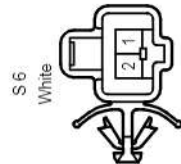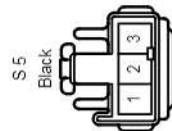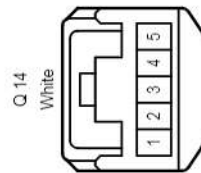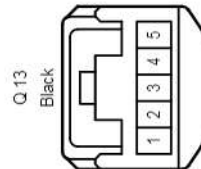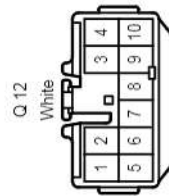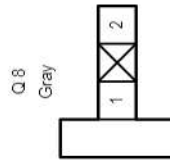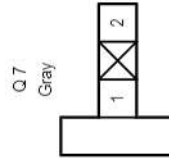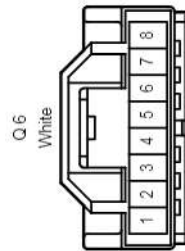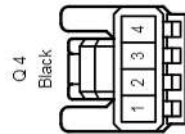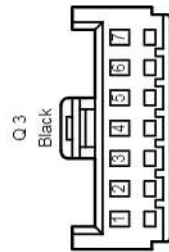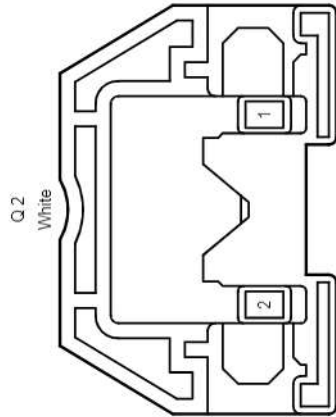
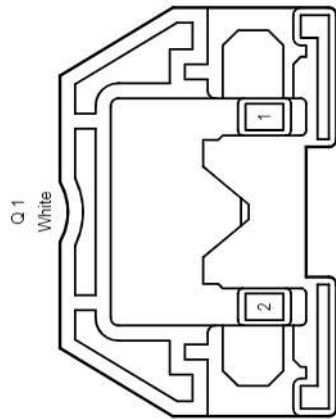


Position of Parts in Body <LHD>


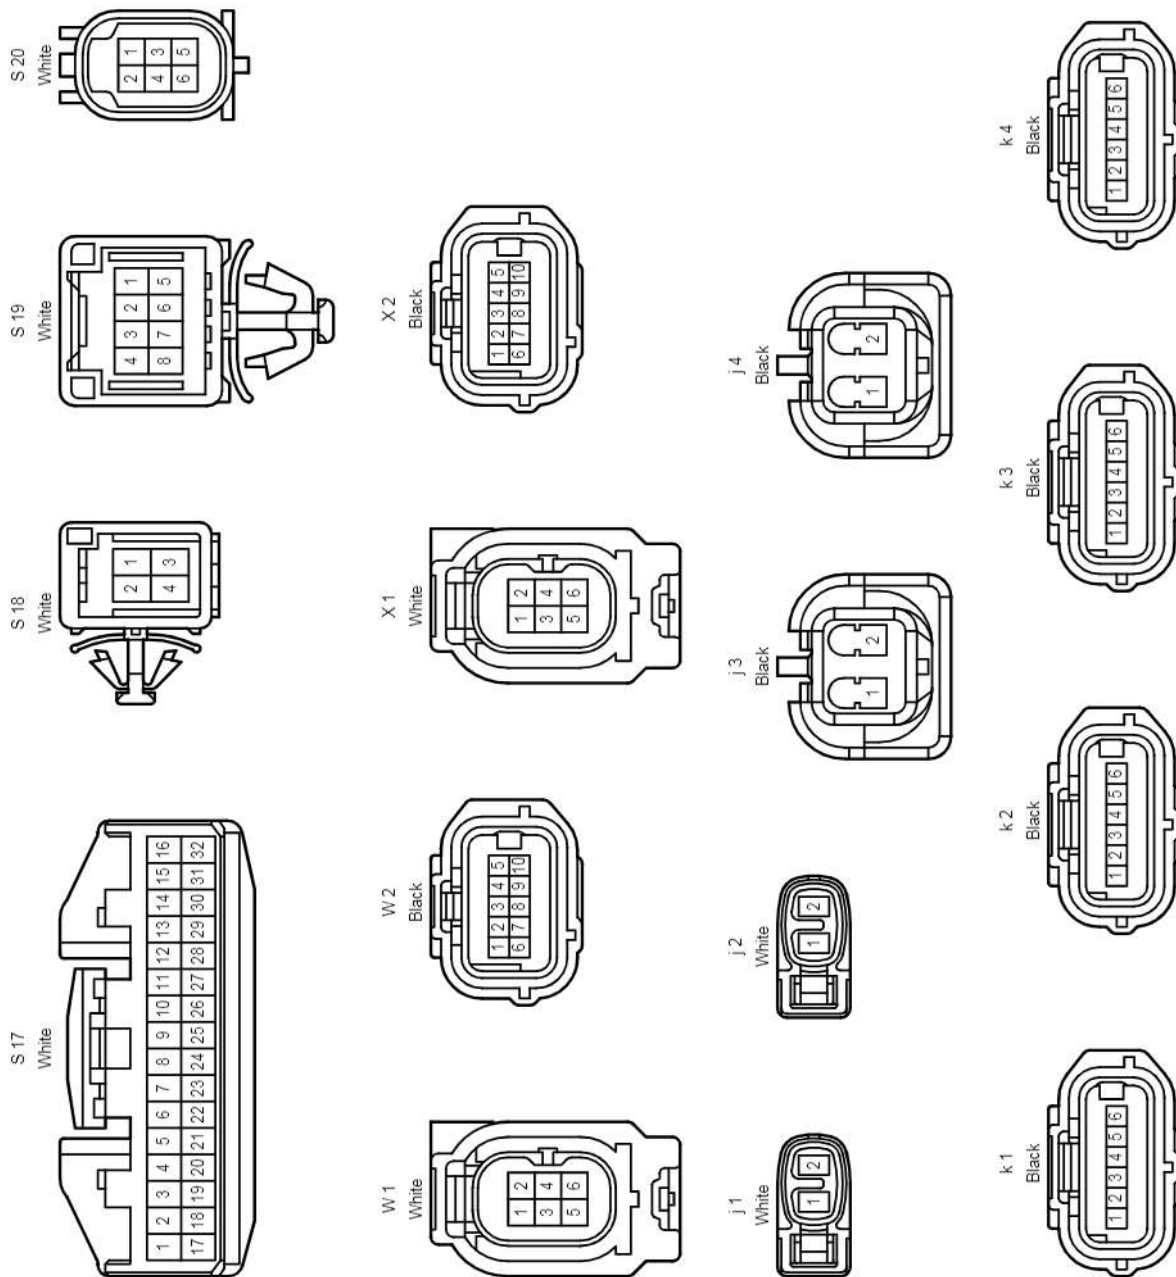 


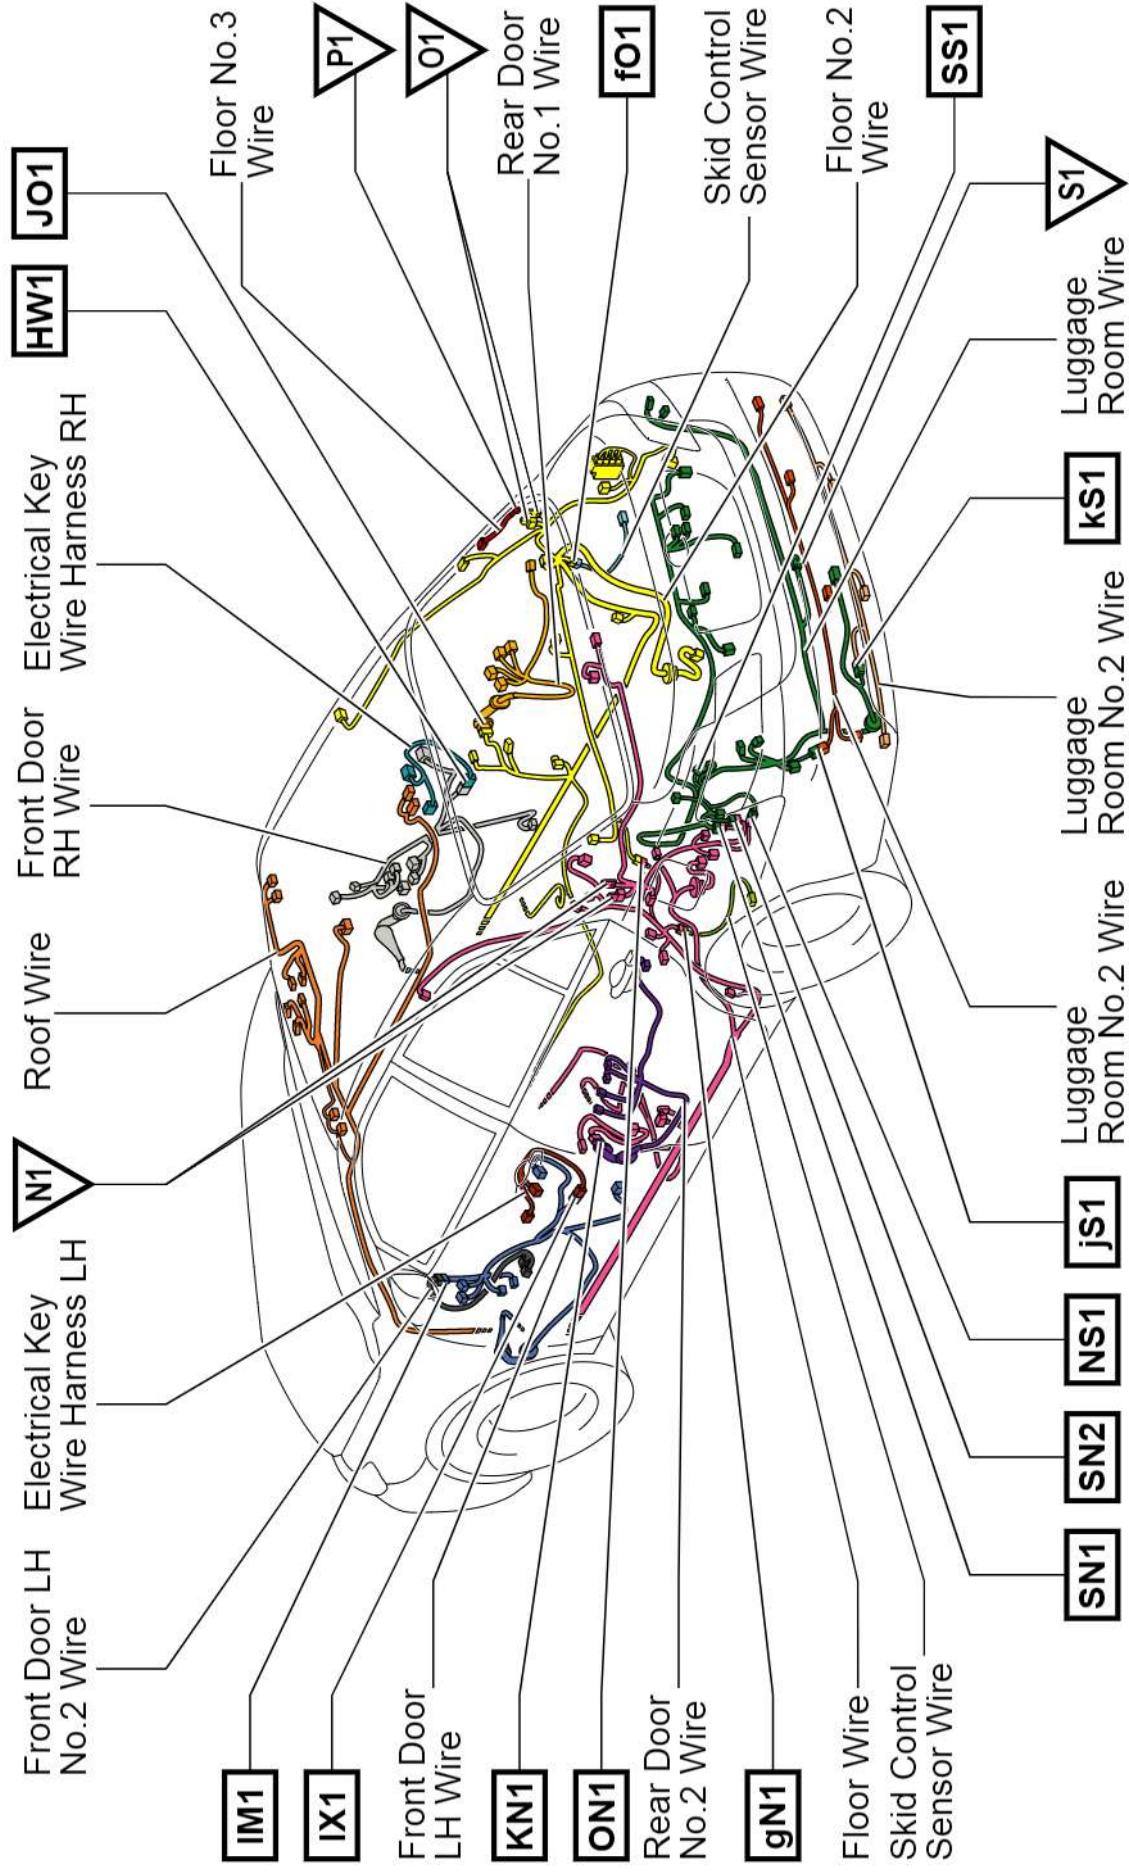 



HW1
Gray

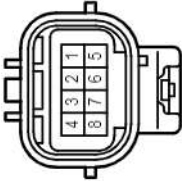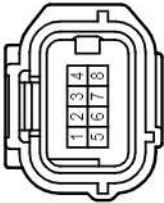  



IX1
Gray

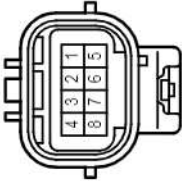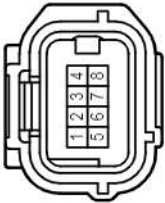  



JO1
White

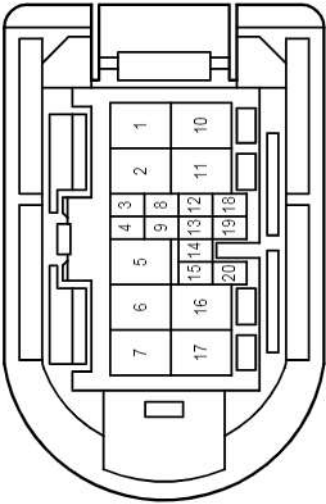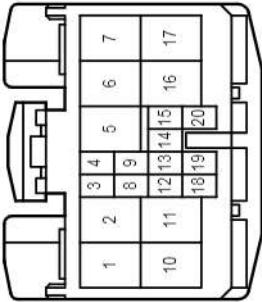  





KN1
White

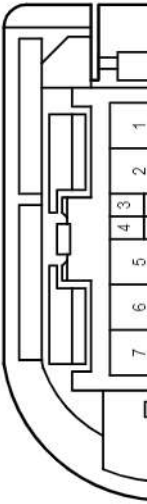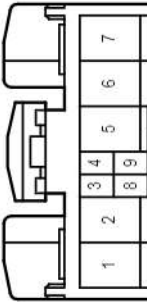  


IM1
White

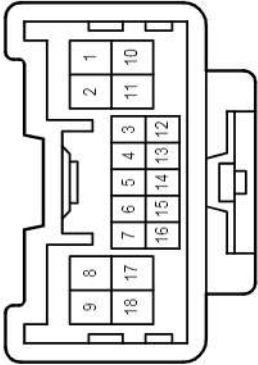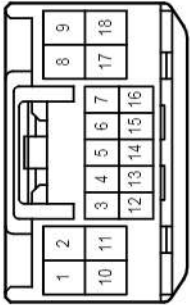  

    Wire and Wire , Ground Points in Body <LHD>

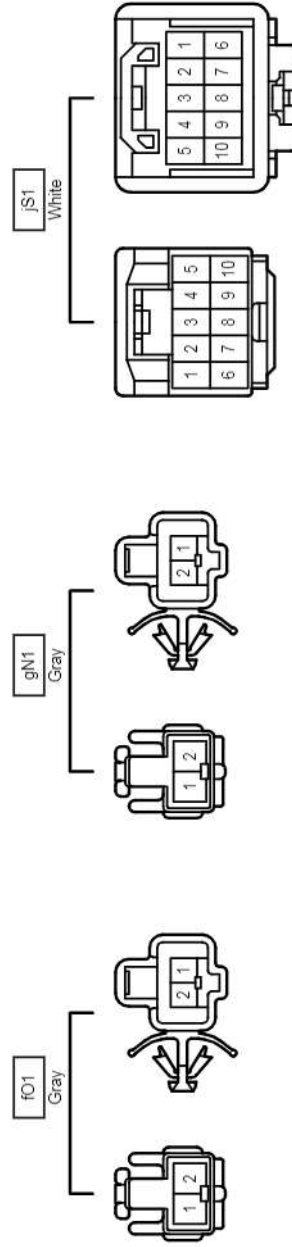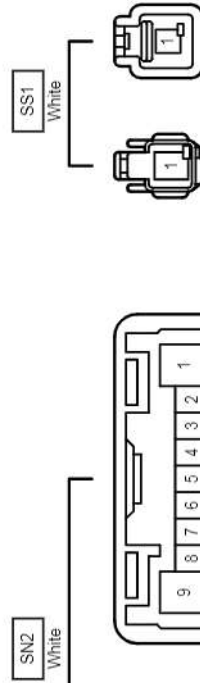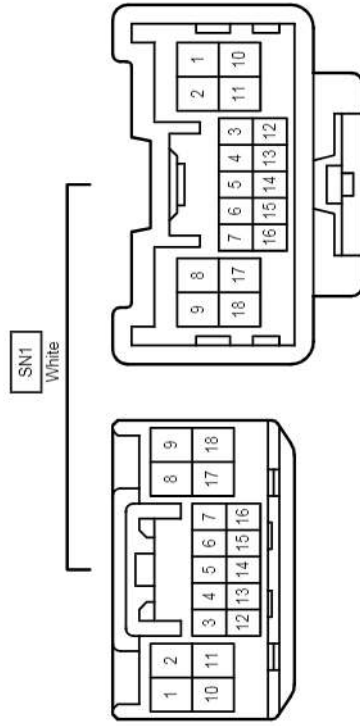
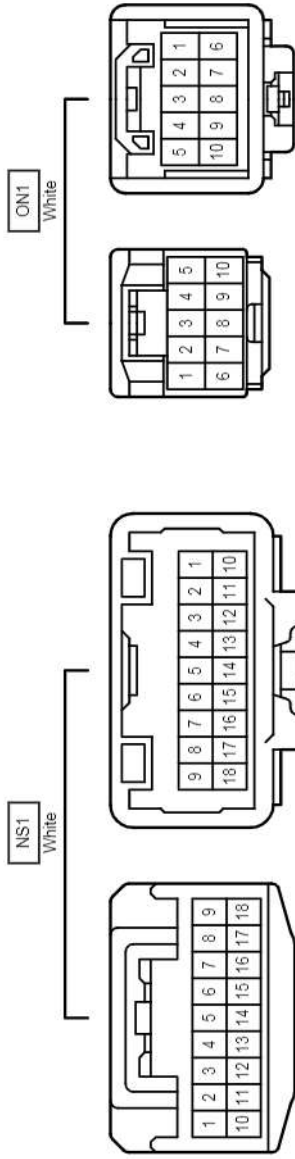


Position of Parts in Body <RHD>

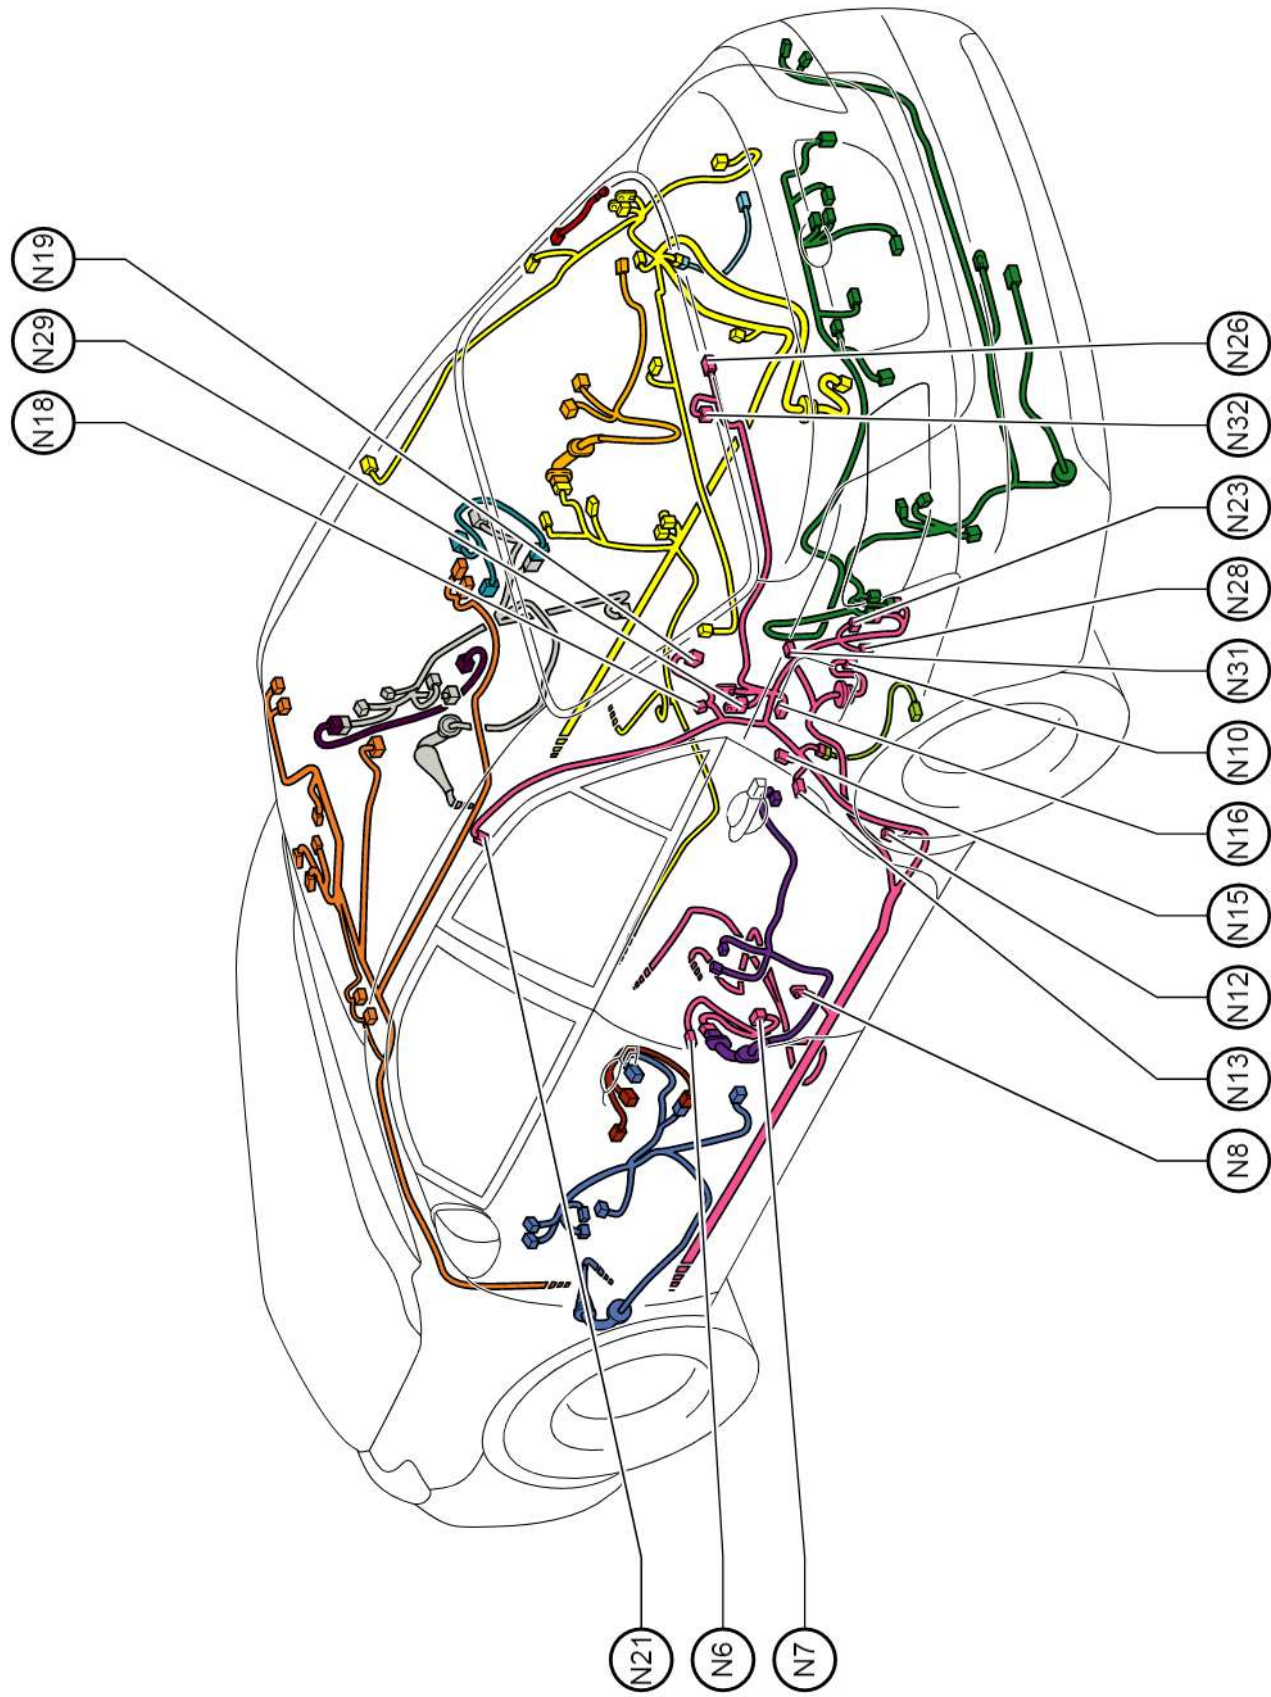 



N 6	Door Courtesy SW (Front LH)
N 6	Door Courtesy SW (Front LH)
N 7	Side Airbag Sensor (Front LH)
N 8	Pretensioner (LH)
N 10	Fuel Suction Pump and Gage Assembly
N 12	Side Airbag Sensor (Rear LH)
N 13	Door Courtesy SW (Rear LH)
N 13	Door Courtesy SW (Rear LH)
N 15	Noise Filter (Dome and Stop)
N 16	Center Stop Lamp
N 18	Noise Filter (Rear Window Defogger)
N 19	Rear Window Defogger
N 21	Curtain Shield Airbag Squib (LH)
N 23	Diode (Luggage Compartment Lamp)
N 26	Luggage Compartment Lamp
N 28	Junction Connector
N 29	Junction Connector
N 31	Electrical Key Oscillator (Rear Seat)
N 32	Electrical Key Oscillator (Inside Luggage Room)

  Position of Parts in Body <RHD>

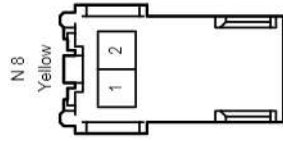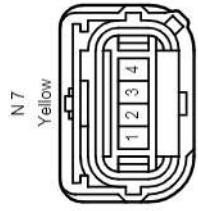










(Before Jul. 2007 Production)

  (From Jul. 2007 Production)

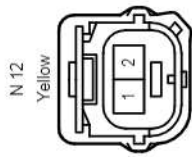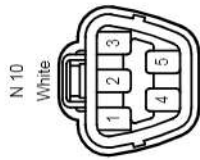


(From Jul. 2007 Production)

         (Before Jul. 2007 Production)

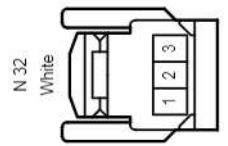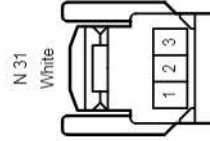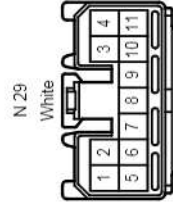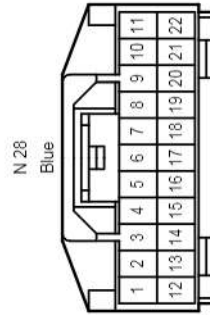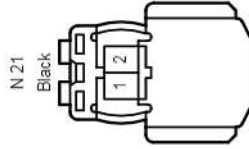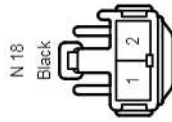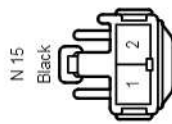

Position of Parts in Body <RHD>

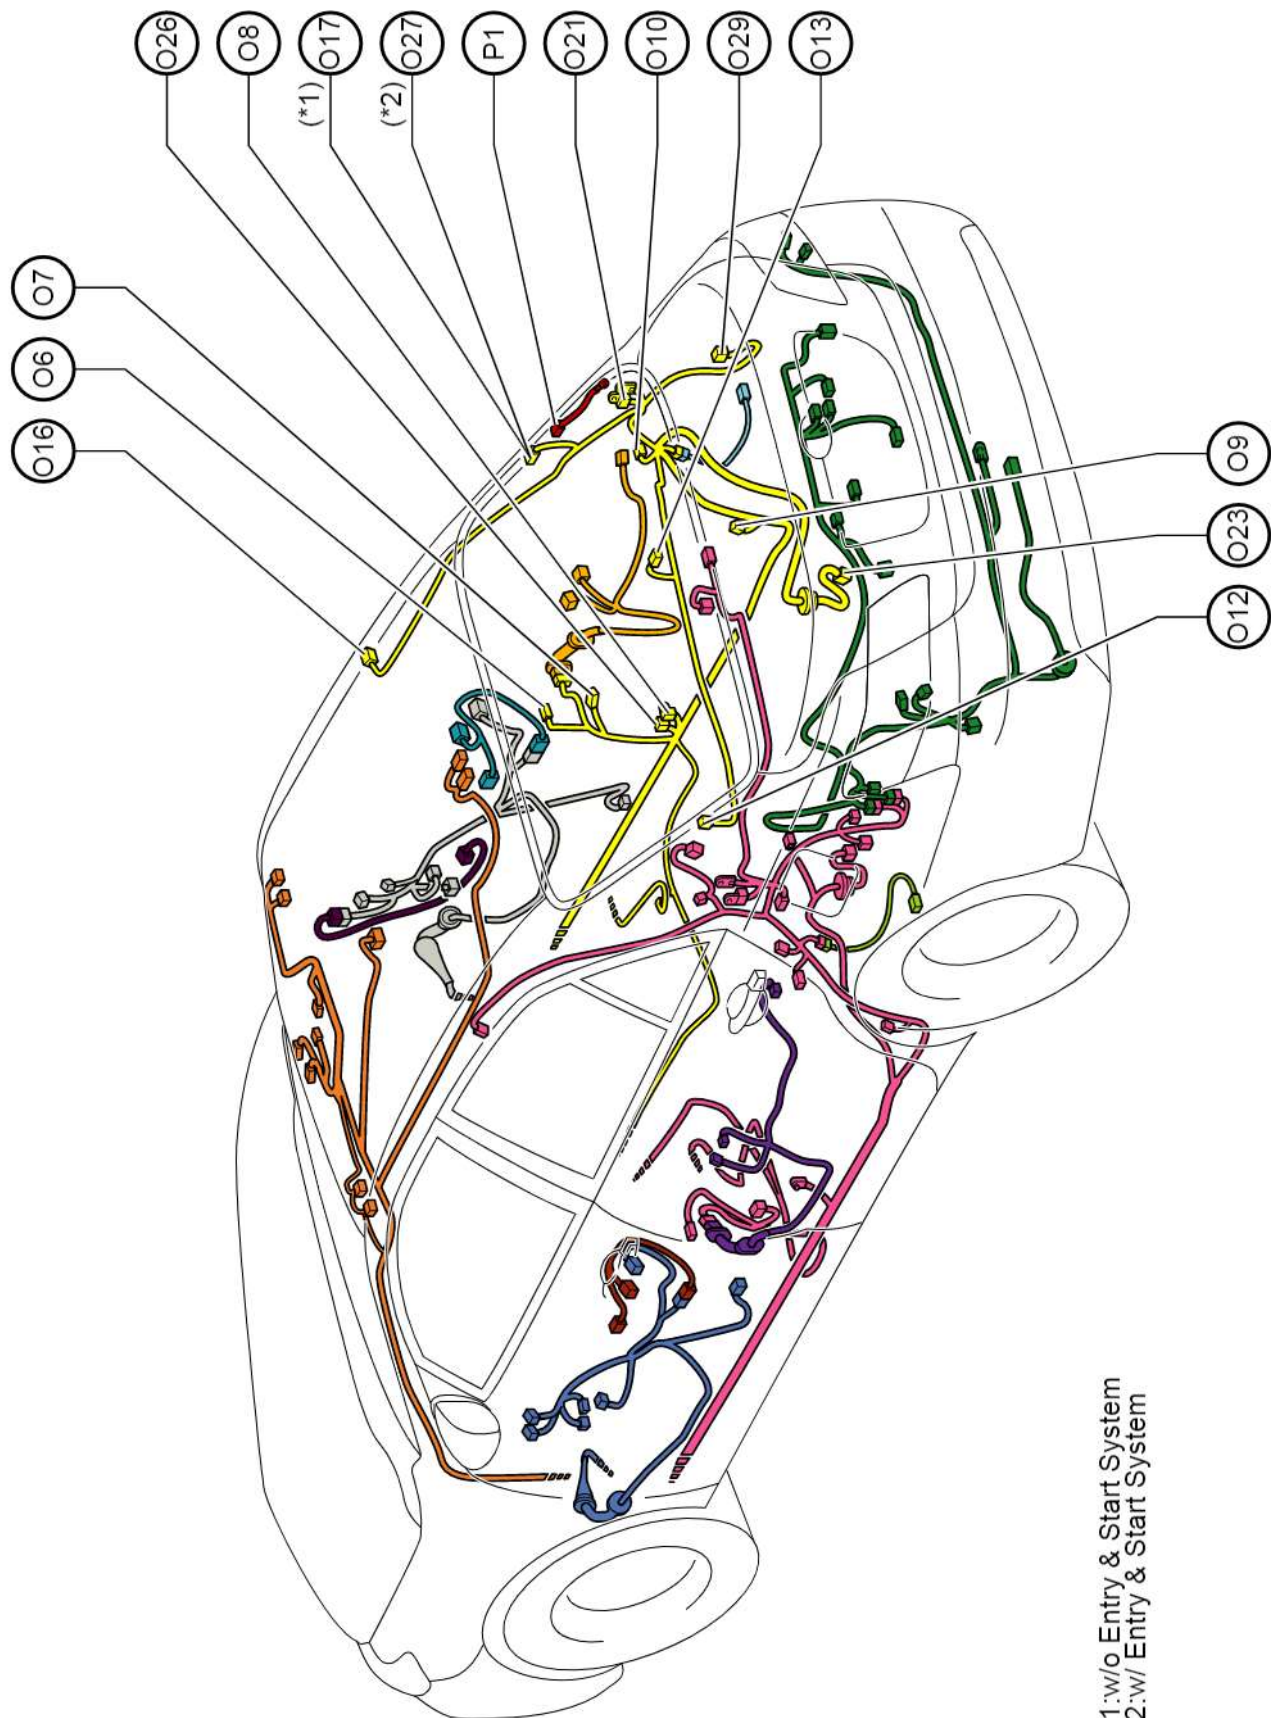 

* 1:w/o Entry & Start System
* 2:w/ Entry & Start System

- O 6 Door Courtesy SW (Front RH)
- O 6 Door Courtesy SW (Front RH)
- O 7 Side Airbag Sensor (Front RH)
- O 8 Pretensioner (RH)
- O 9 Side Airbag Sensor (Rear RH)
- O 10 Door Courtesy SW (Rear RH)
- O 10 Door Courtesy SW (Rear RH)
- O 12 Speaker (Rear LH)
- O 13 Speaker (Rear RH)
- O 16 Curtain Shield Airbag Squib (RH)
- O 17 Door Control Receiver
- O 21 Junction Connector
- O 23 Height Control Sensor
- O 26 Tension Reducer (RH)
- O 27 Door Control Receiver
- O 29 Electrical Key Antenna
- P 1 Rear Window Defogger

Position of Parts in Body <RHD>

O 6
White



 
(Before Jul. 2007 Production)

O 6
Black




(From Jul. 2007 Production)


O 7
Yellow

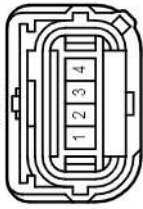

O 8
Yellow

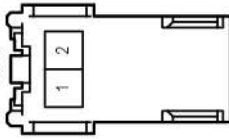 

O 9
Yellow

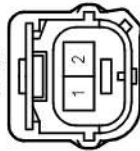 

O 10
Black



(Before Jul. 2007 Production)

O 10
White



(From Jul. 2007 Production)

 
O 12
White




O 13
White




O 16
Black

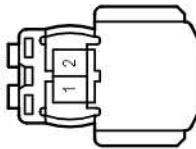

O 17
White

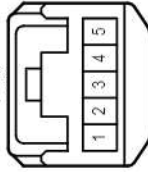 

O 21
White

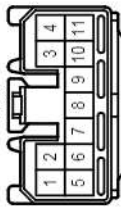 

O 23
Black



 
O 26
White



O 27
White




O 29
Gray



P 1
Black





 Position of Parts in Body <RHD>

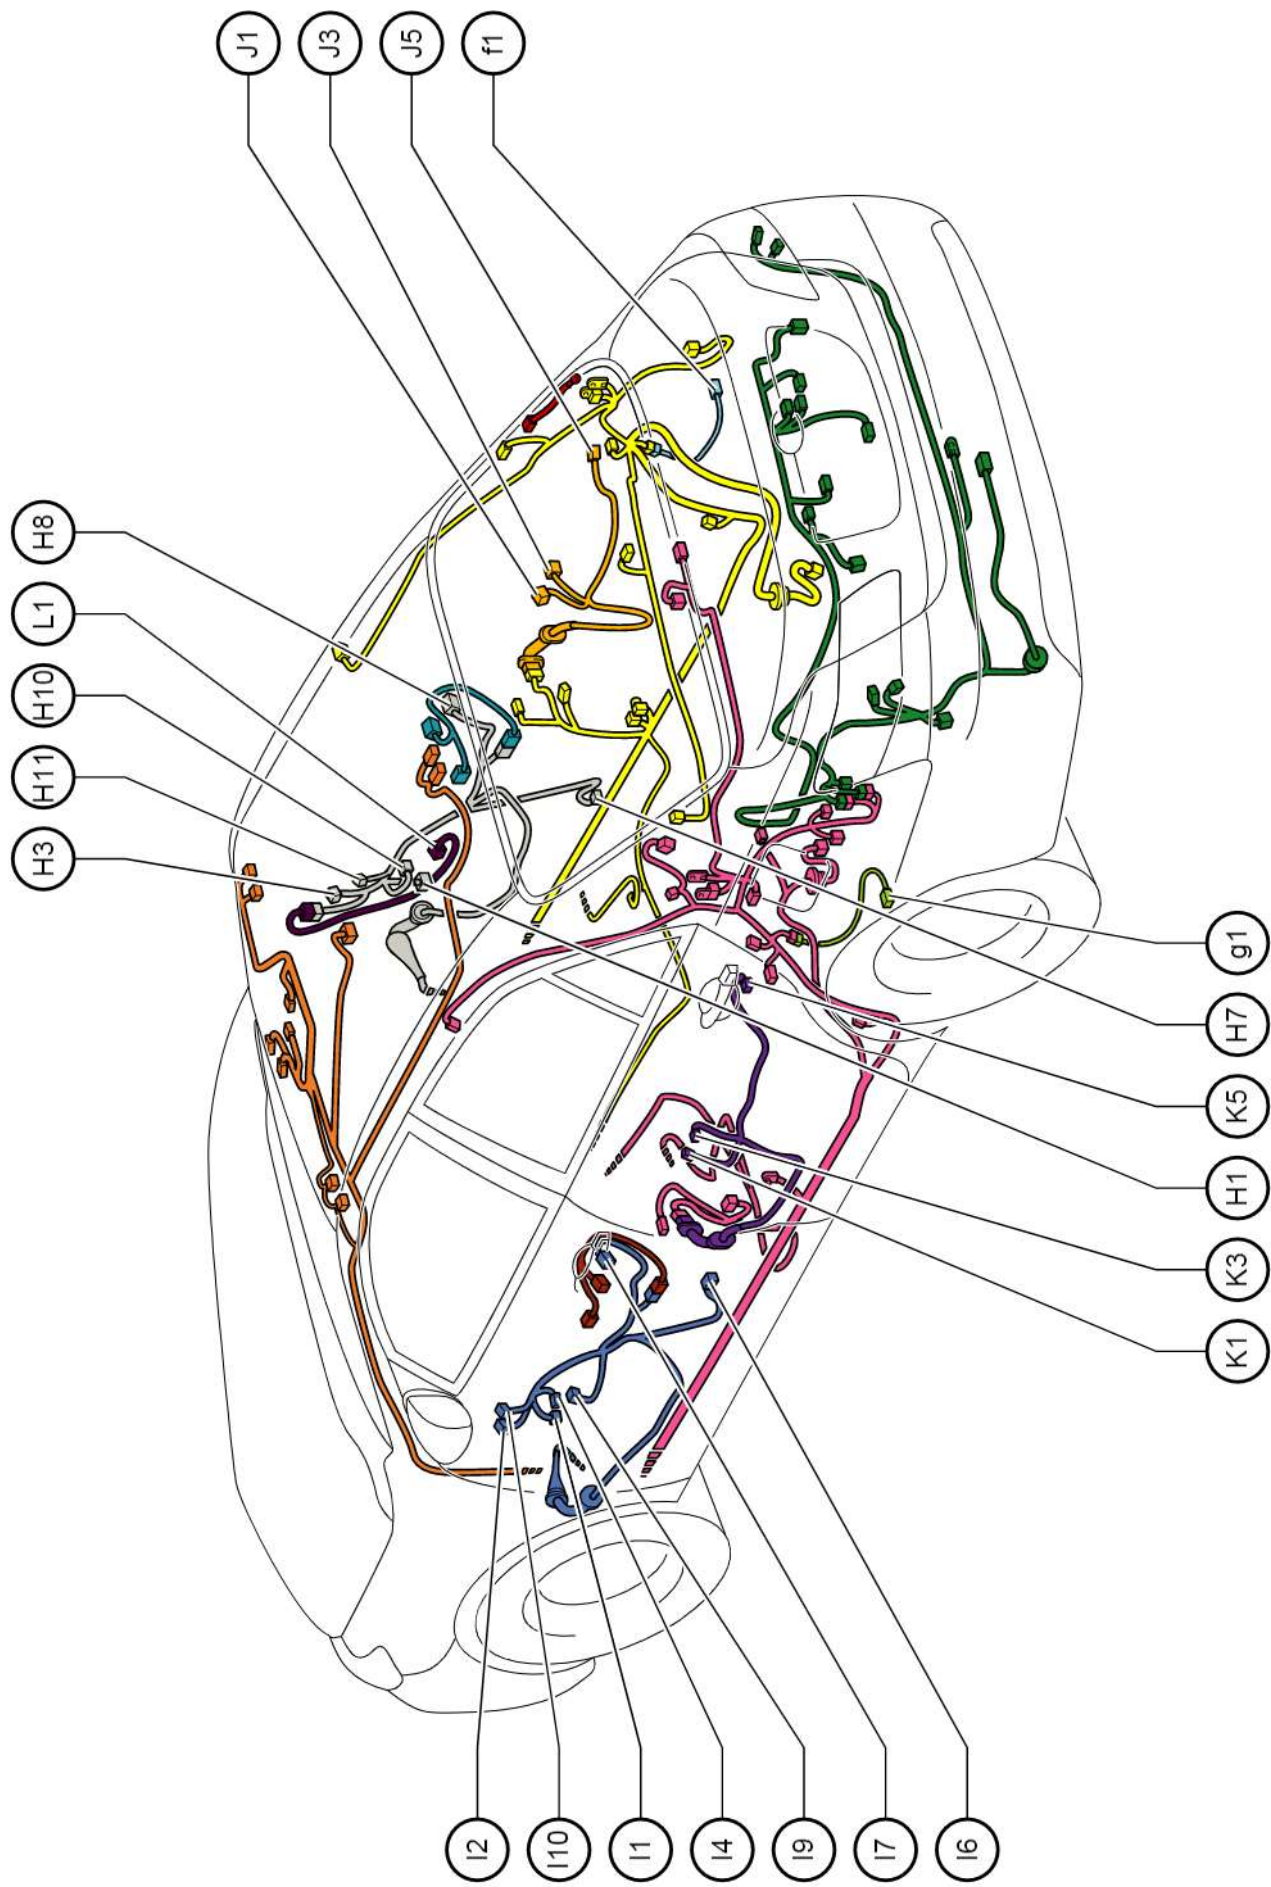



H	1	Speaker (Front Door RH)
H	3	Outer Rear View Mirror (RH)
H	7	Courtesy Lamp (Front Door RH)
H	8	Door Lock Assembly (Front RH)
H	10	Power Window Regulator Motor (Front RH)
H	11	Outer Rear View Mirror (RH)
H	11	Outer Rear View Mirror (RH)
I	1	Speaker (Front Door LH)
I	2	Outer Rear View Mirror (LH)
I	4	Power Window Regulator Motor (Front LH)
I	6	Courtesy Lamp (Front Door LH)
I	7	Door Lock Assembly (Front LH)
I	9	Power Window SW (Front LH)
I	10	Outer Rear View Mirror (LH)
I	10	Outer Rear View Mirror (LH)
J	1	Power Window SW (Rear RH)
J	3	Power Window Regulator Motor (Rear RH)
J	5	Door Lock Assembly (Rear RH)
K	1	Power Window SW (Rear LH)
K	3	Power Window Regulator Motor (Rear LH)
K	5	Door Lock Assembly (Rear LH)
L	1	Power Window Master SW
f	1	Speed Sensor (Rear RH)
g	1	Speed Sensor (Rear LH)

  Position of Parts in Body <RHD>

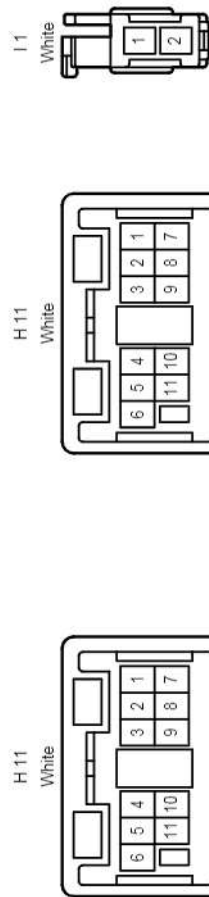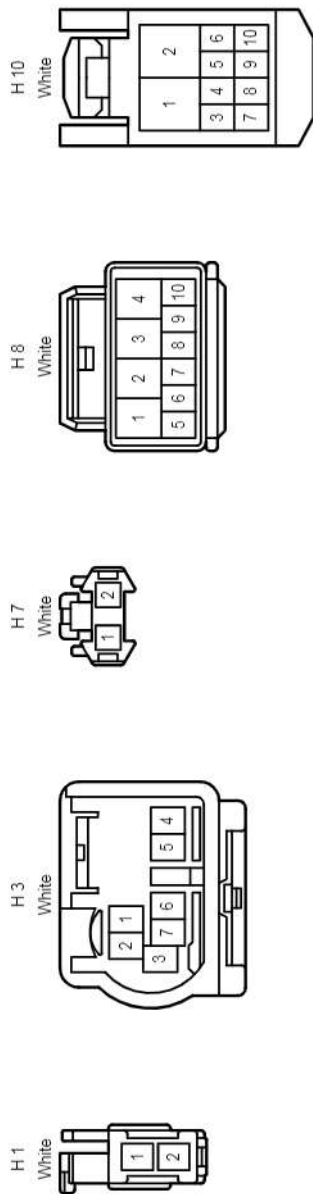

(From Jan. 2009 Production until Aug. 2010 Production)

  (From Aug. 2010 Production)

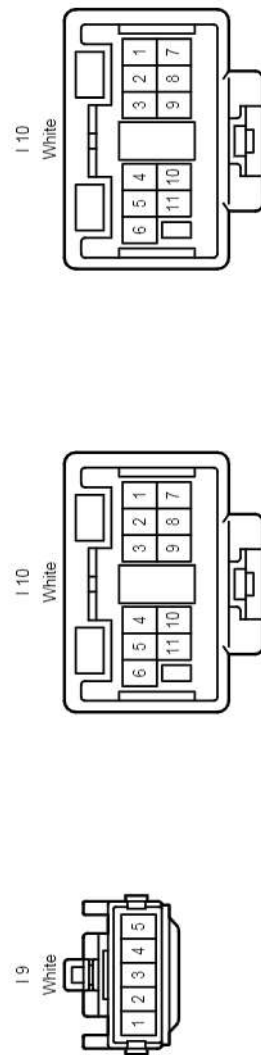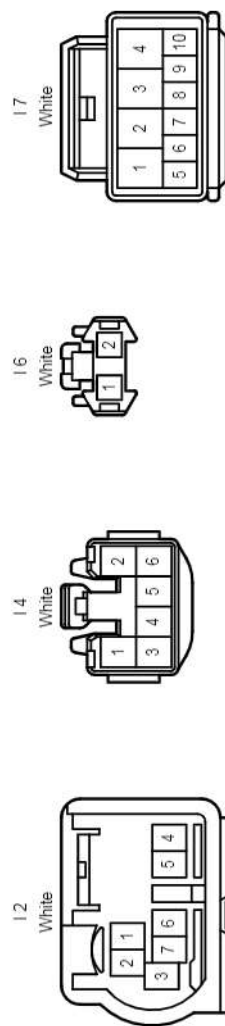


(From Jan. 2009 Production until Aug. 2010 Production)

(From Aug. 2010 Production)




























 Position of Parts in Body <RHD>

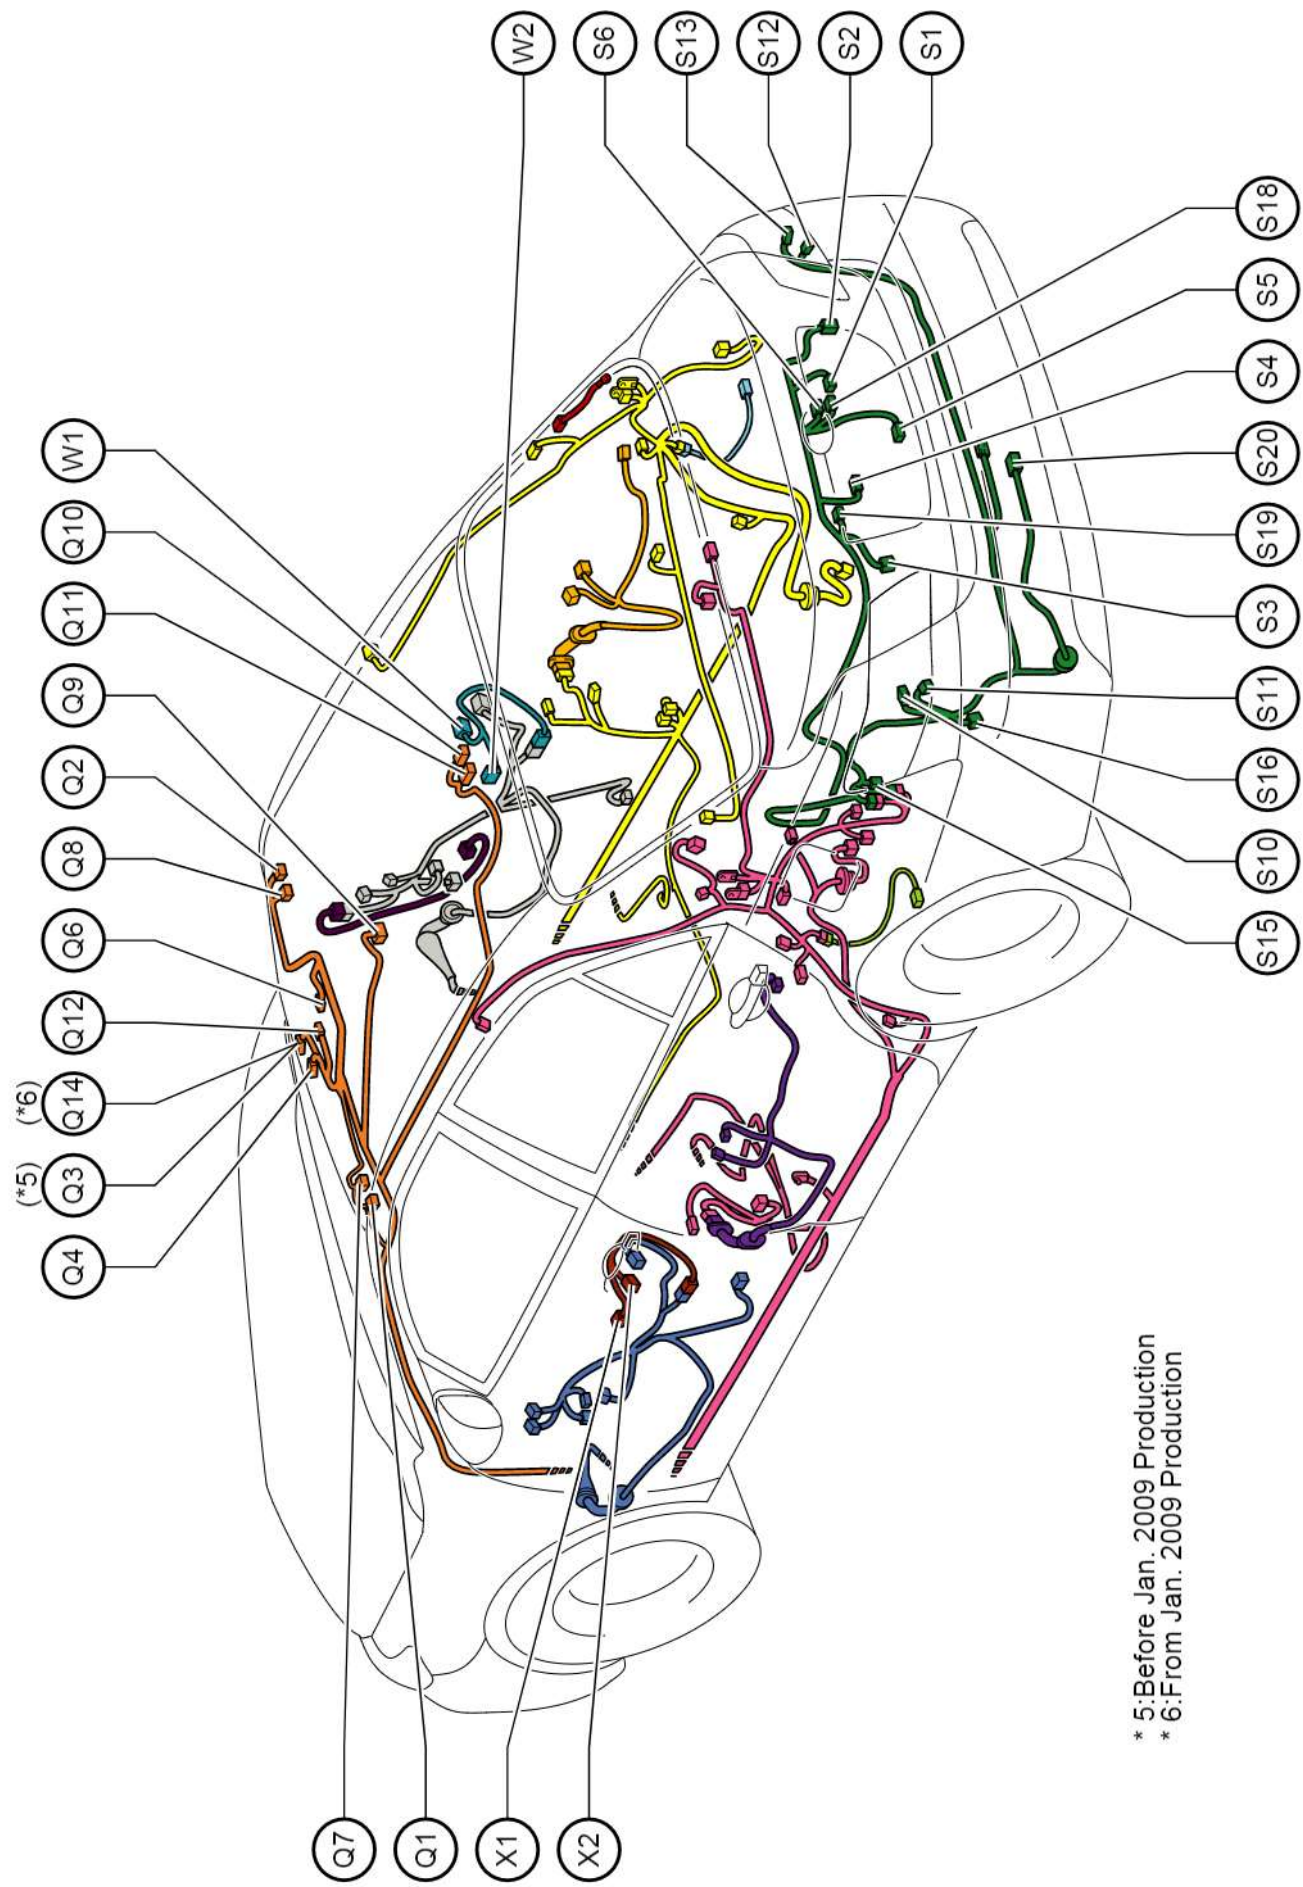


Q	1	Vanity Lamp SW (LH)
Q	2	Vanity Lamp SW (RH)
Q	3	Inner Rear View Mirror
Q	4	Rain Sensor
Q	6	Overhead J/B
Q	7	Vanity Lamp (LH)
Q	8	Vanity Lamp (RH)
Q	9	Room Lamp (Center)
Q	10	Map Lamp (RH)
Q	11	Map Lamp (LH)
Q	12	Sliding Roof Control ECU and Motor
Q	14	Inner Rear View Mirror
S	1	License Plate Lamp (RH)
S	2	Rear Combination Lamp (RH)
S	3	Rear Combination Lamp (LH)
S	4	License Plate Lamp (LH)
S	5	Door Lock Assembly (Luggage)
S	6	Luggage Compartment Door Lock Cylinder
S	10	Turn Signal Lamp (Rear LH)
S	11	Rear Combination Lamp (LH)
S	12	Rear Combination Lamp (RH)
S	13	Turn Signal Lamp (Rear RH)
S	15	Junction Connector
S	16	Junction Connector
S	18	Luggage Compartment Door Lock Cylinder
S	19	Luggage Electrical Key SW , Television Camera
S	20	Electrical Key Oscillator (Outside Luggage Room)
W	1	Door Outside Handle (Front RH)
W	2	Electrical Key Oscillator (Front Door RH)
X	1	Door Outside Handle (Front LH)
X	2	Electrical Key Oscillator (Front Door LH)

                       Position of Parts in Body <RHD>

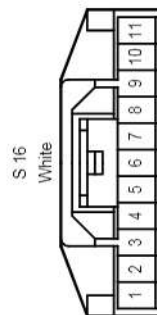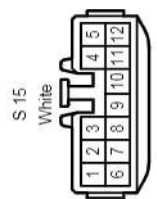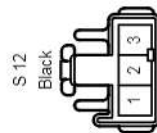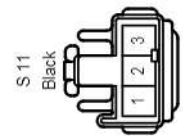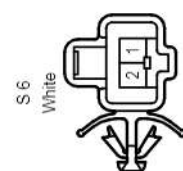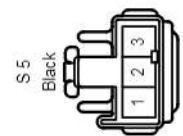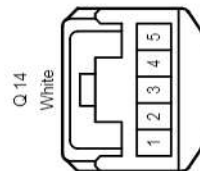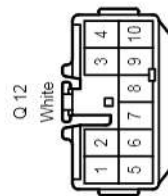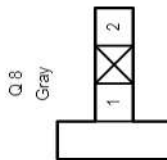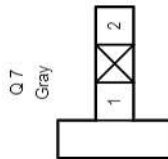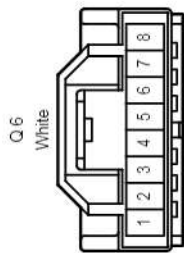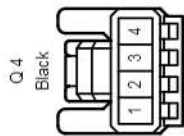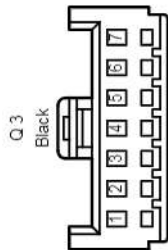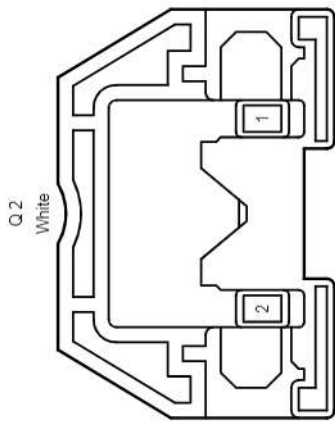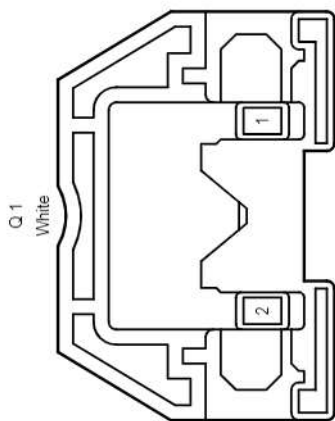


Position of Parts in Body <RHD>

 
W 2
Black

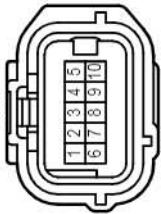


X 1
White




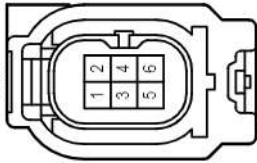 



X 2
Black

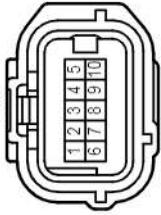 

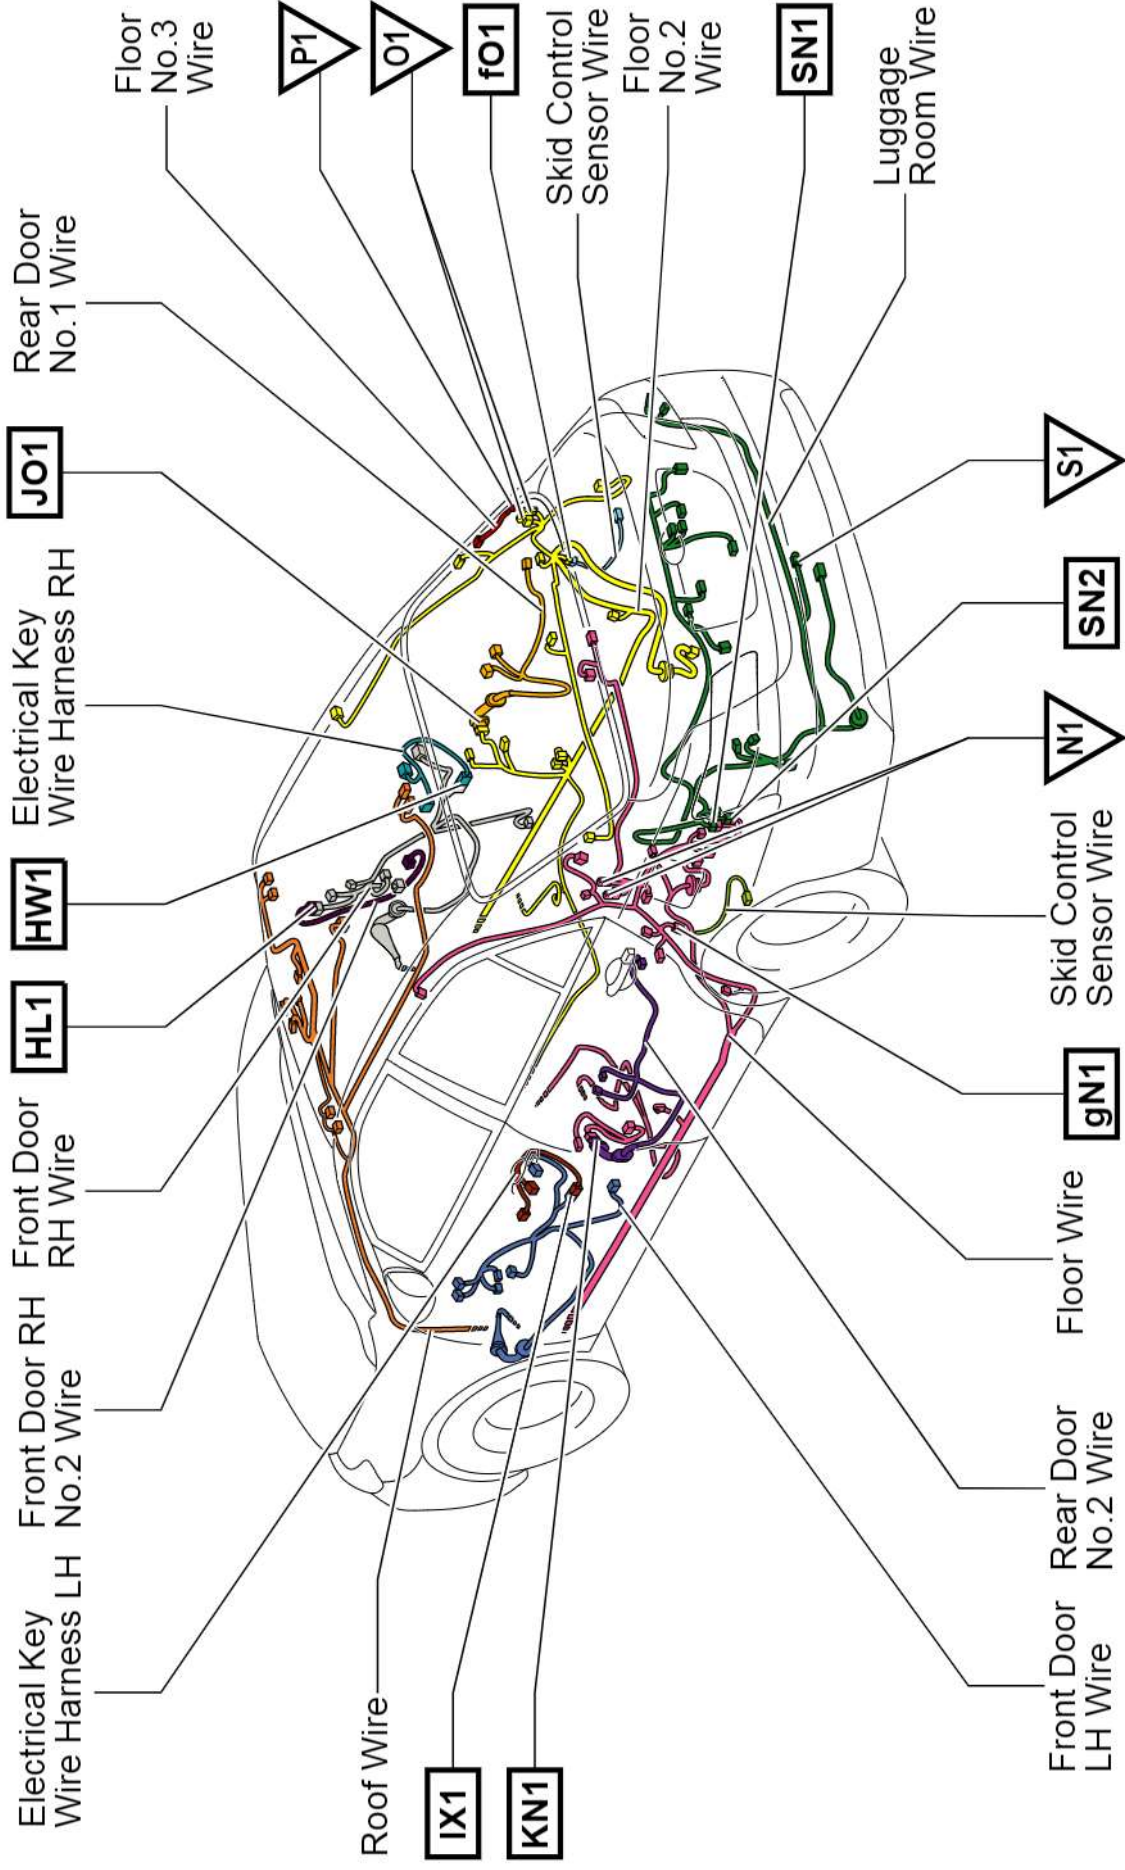 


     Wire and Wire , Ground Points in Body <RHD>

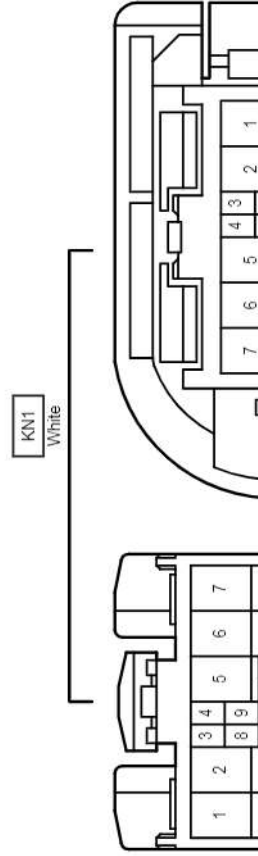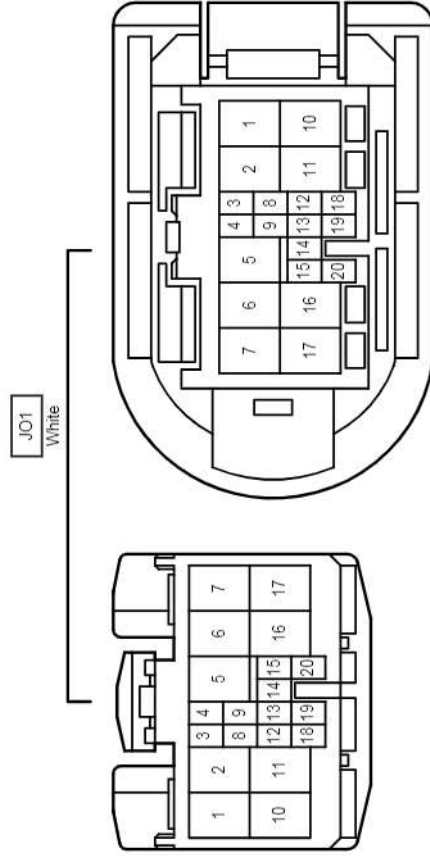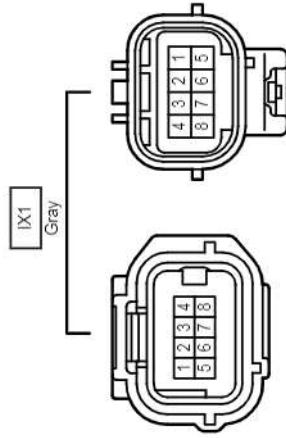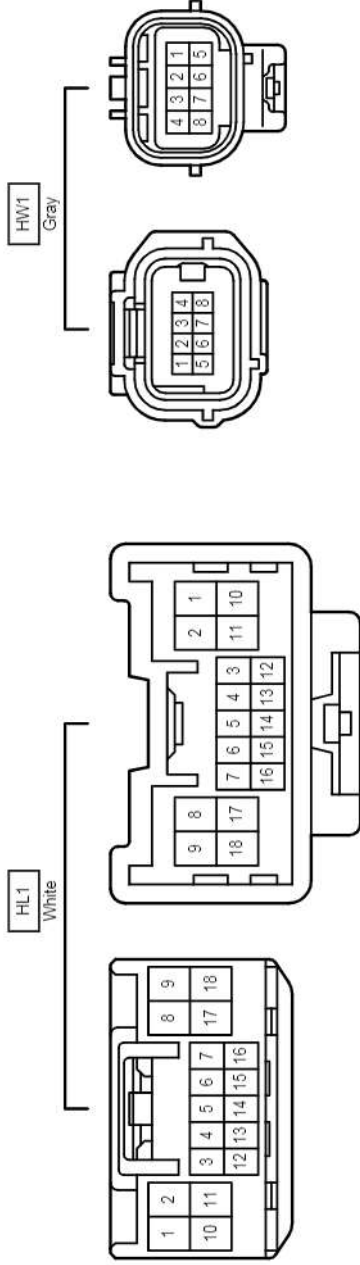


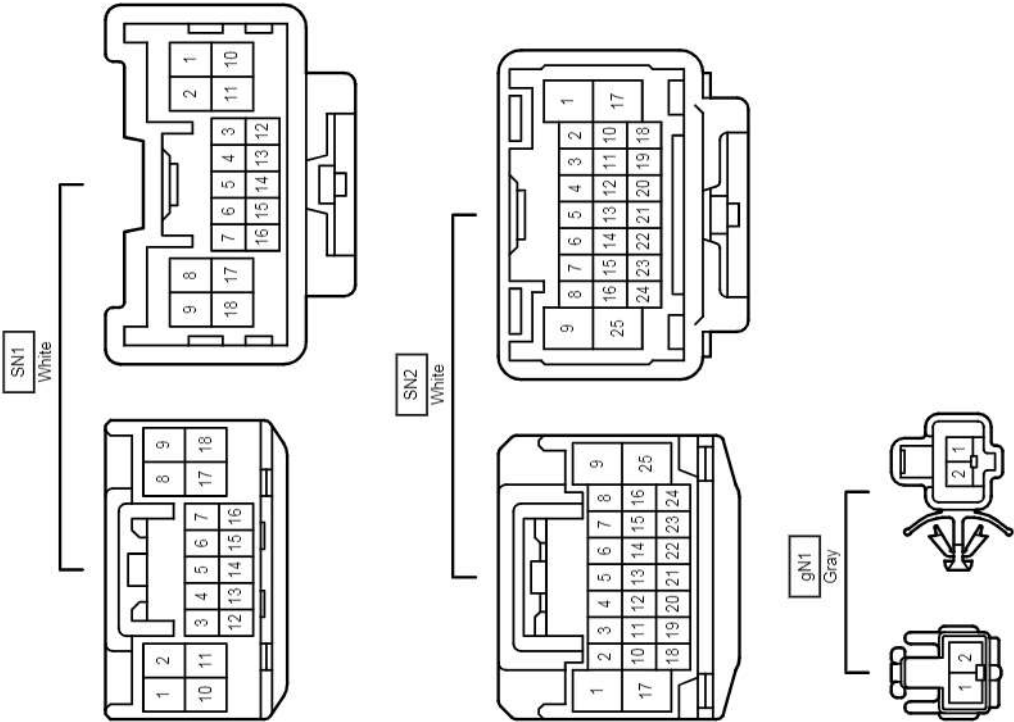

Ground Points in Instrument Panel <LHD>















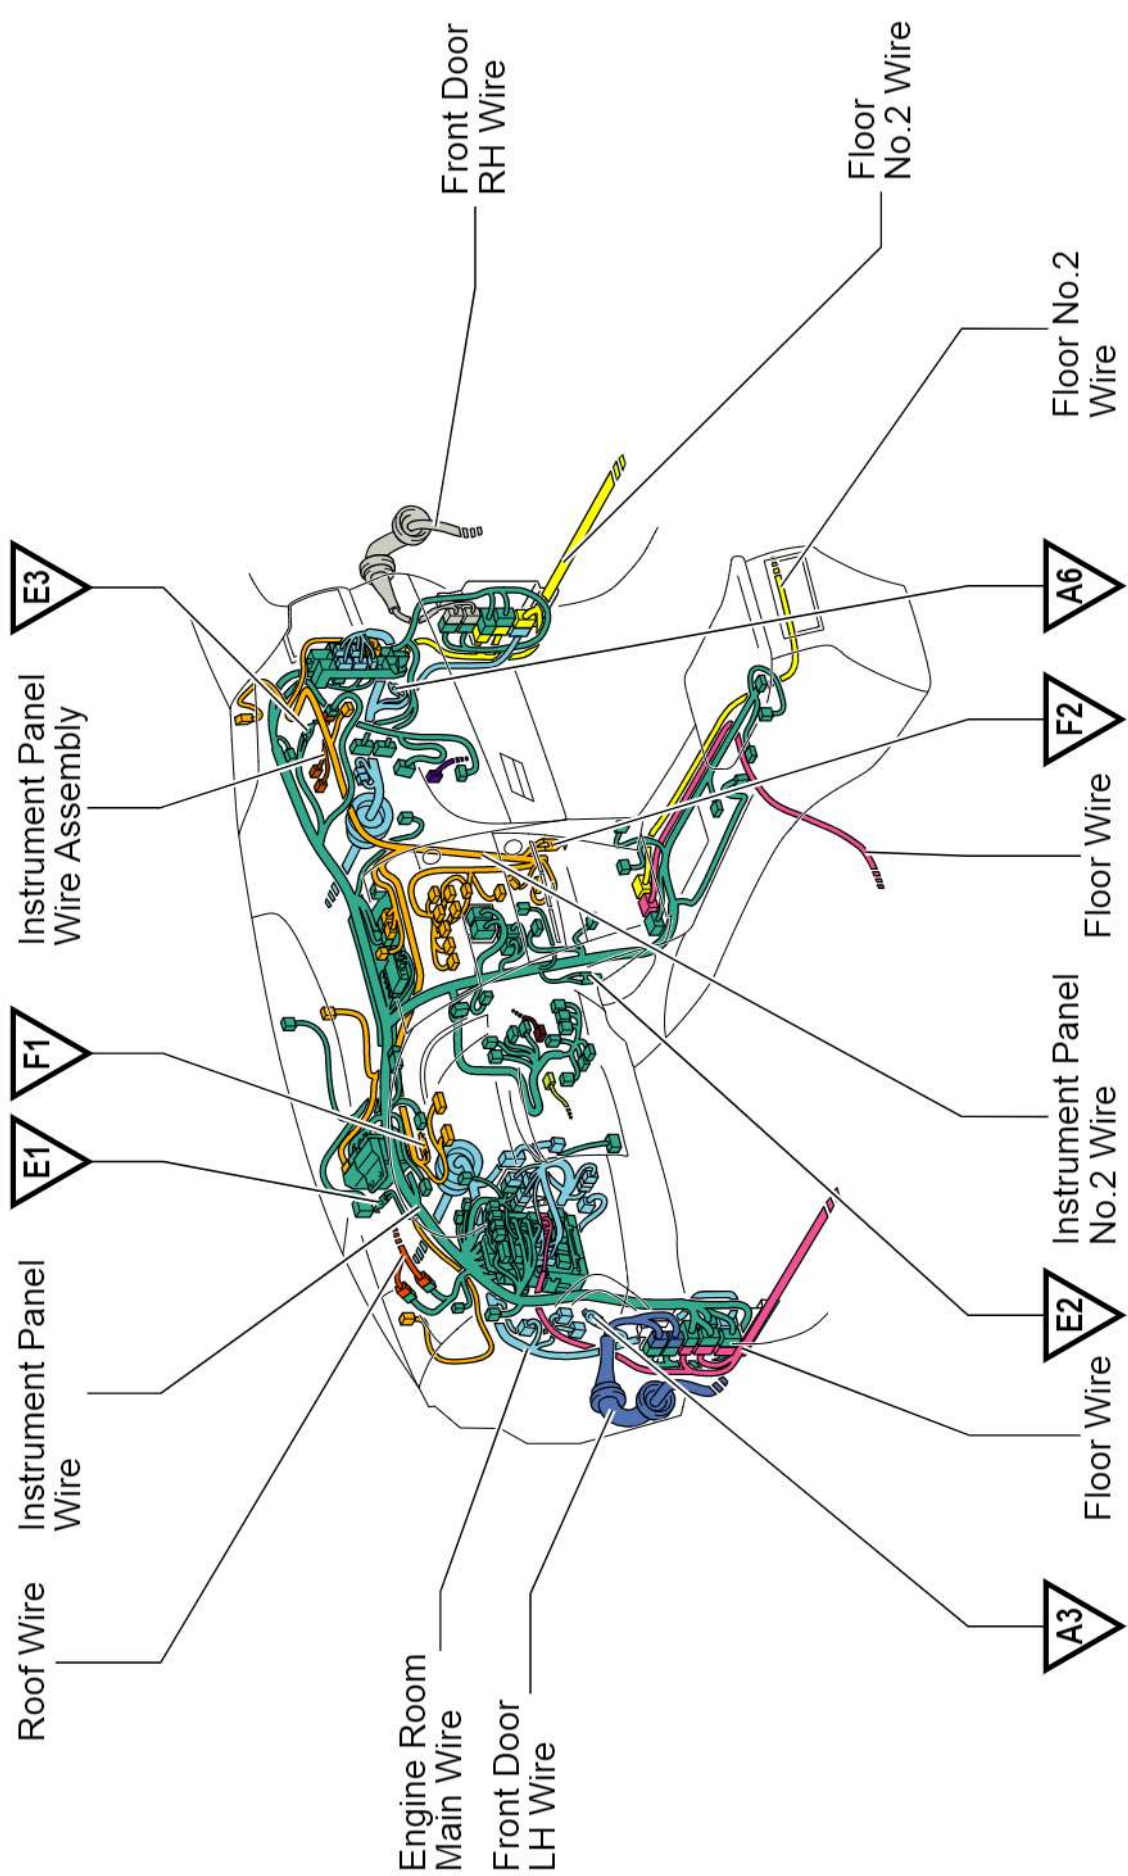 


 Position of Parts in Instrument Panel <LHD>

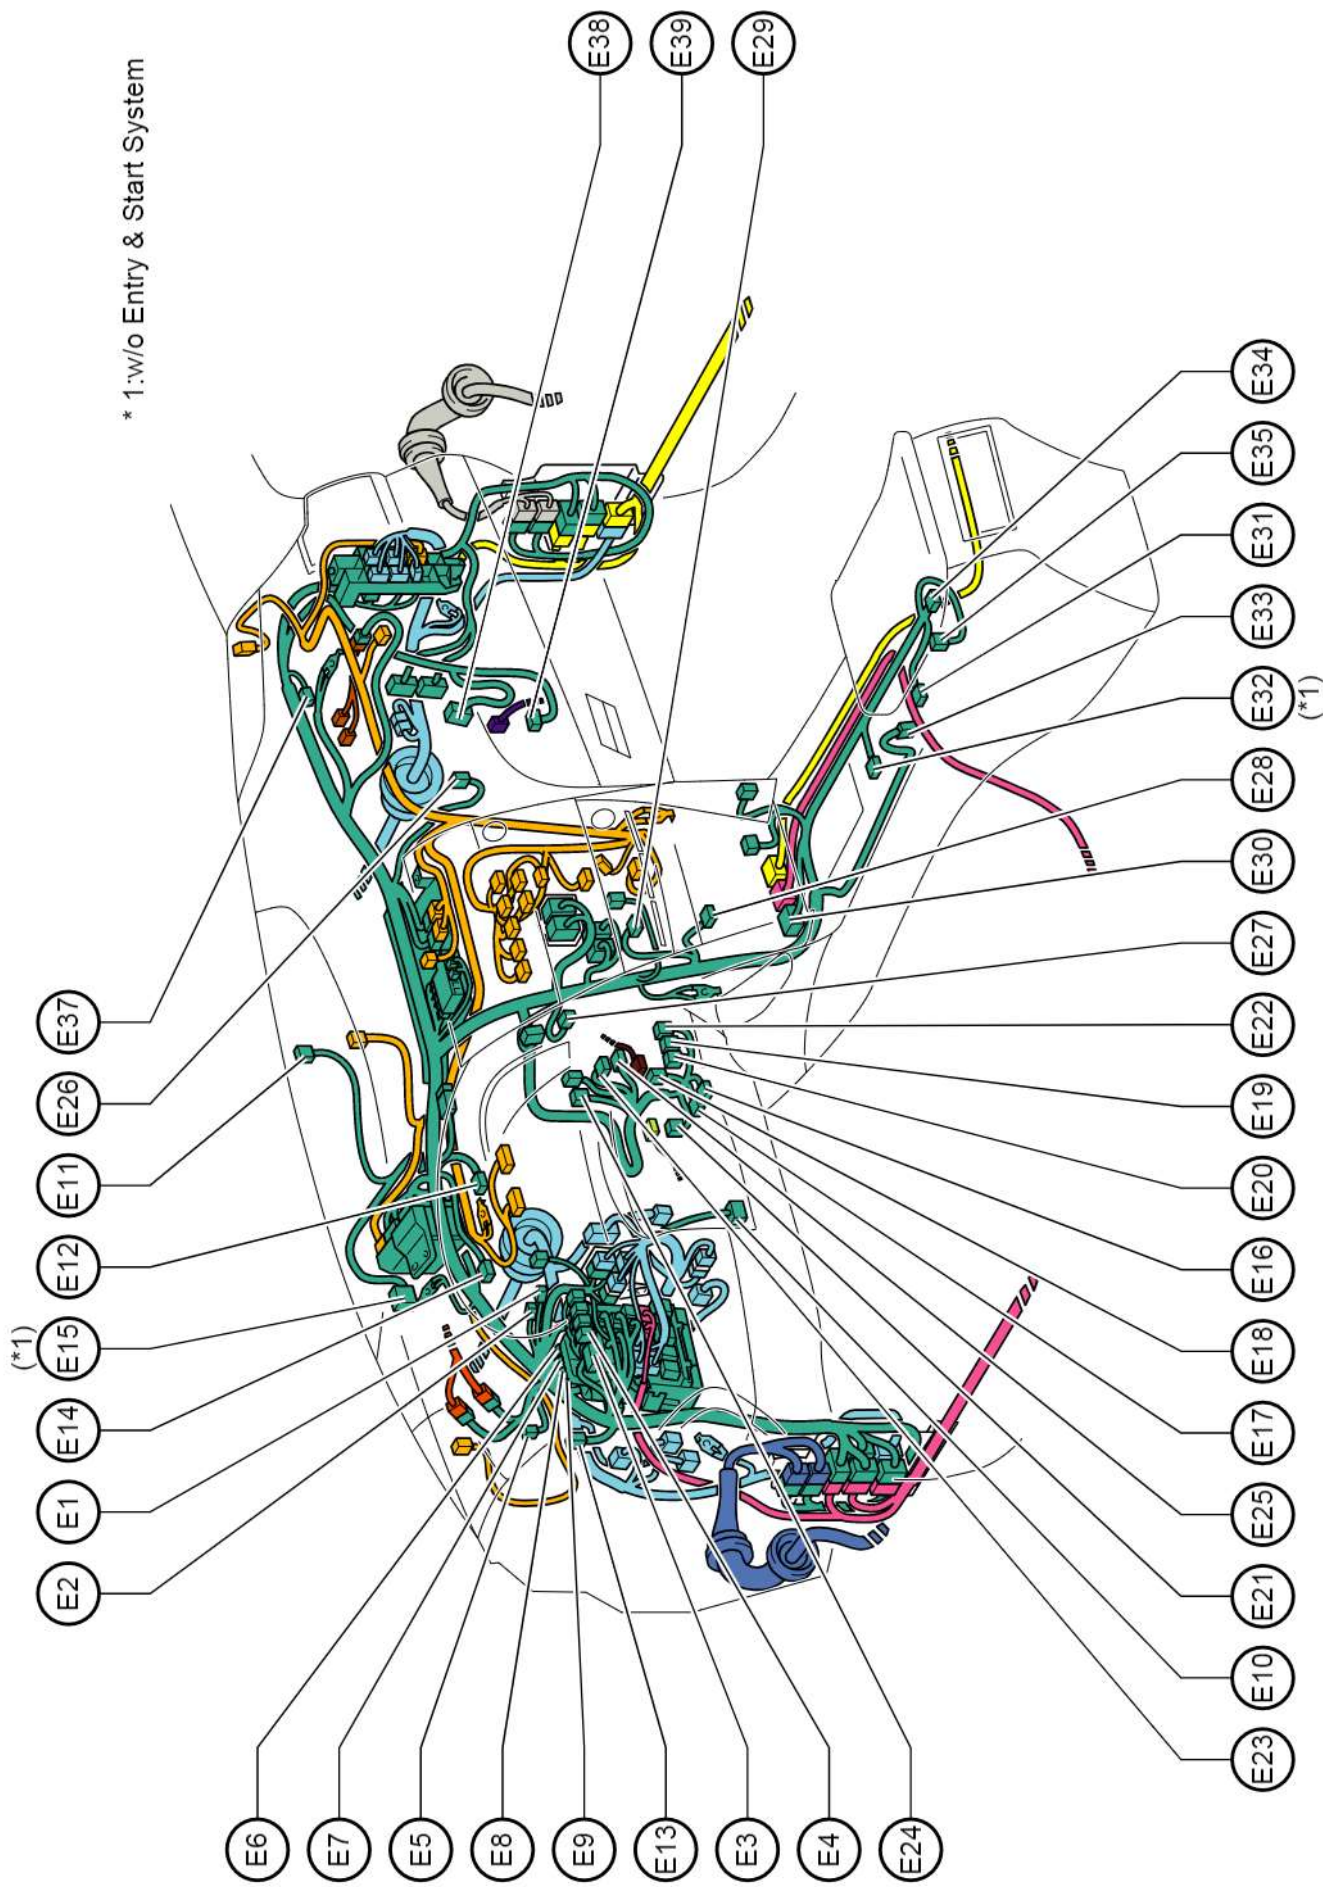


E	1	Diode (Door Courtesy Rear LH)
E	2	Diode (Door Courtesy Rear RH)
E	3	Outer Mirror SW
E	4	Headlamp Cleaner SW
E	5	Diode (Door Courtesy Front LH)
E	6	Main Body ECU
E	7	Main Body ECU
E	8	Main Body ECU
E	9	Main Body ECU
E	10	DLC3
E	11	Automatic Light Control Sensor
E	12	Ion Generator
E	13	VSC Warning Buzzer
E	14	Turn Signal Flasher
E	15	Transponder Key ECU
E	16	Airbag Squib (Steering Wheel Pad)
E	17	Steering Sensor
E	18	Spiral Cable
E	19	Windshield Wiper SW Assembly
E	20	Windshield Wiper SW Assembly
E	21	Headlamp Dimmer SW Assembly
E	22	Unlock Warning SW
E	23	Ignition SW
E	24	Key Interlock Solenoid
E	25	Transponder Key Amplifier
E	26	Windshield Wiper Relay
E	27	A/C Room Temp. Sensor
E	28	Cigarette Lighter
E	29	Power Outlet Socket (Front)
E	30	Airbag Sensor Assembly Center
E	31	Transmission Control SW
E	32	Shift Lock Control ECU
E	33	Parking Brake SW
E	34	Yaw Rate Sensor
E	35	Power Outlet Socket (Rear)
E	37	Diode (Door Courtesy Front RH)
E	38	A/C Amplifier
E	39	Blower Motor

               Position of Parts in Instrument Panel <LHD>

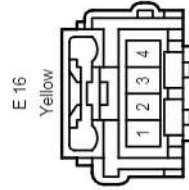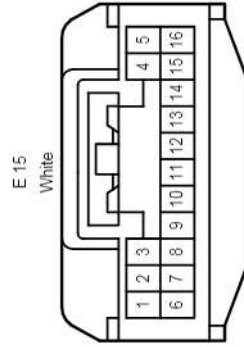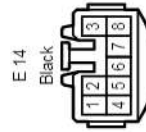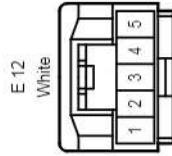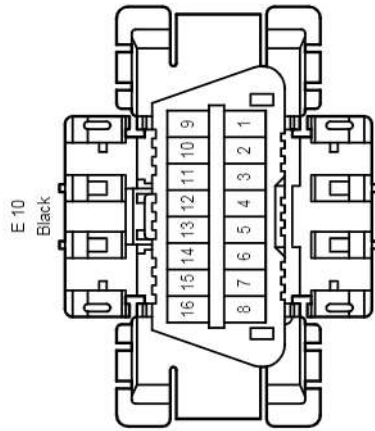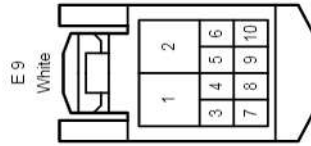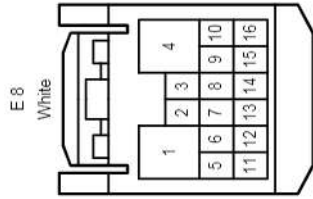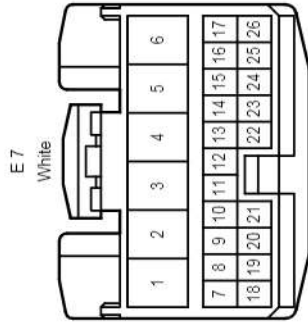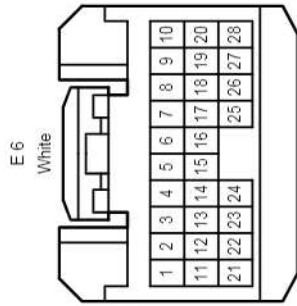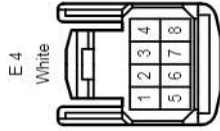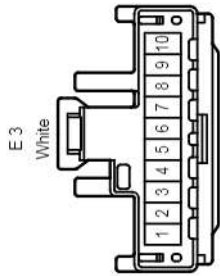


Position of Parts in Instrument Panel <LHD>

 E 25
Black

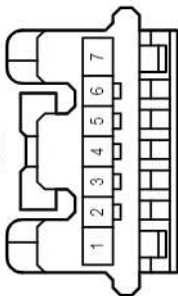

E 26
White

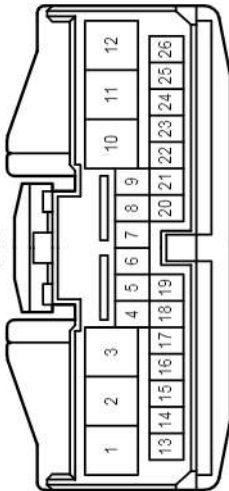 


E 27
Black




E 28
White



 
E 29
White




E 30
Yellow

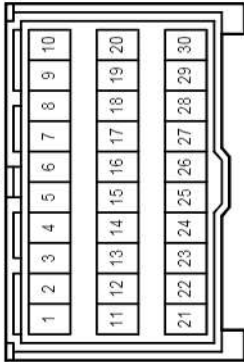 

E 32
White

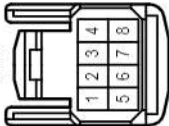 


E 31
White

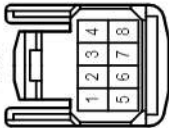 


E 33
White



 E 34
Black

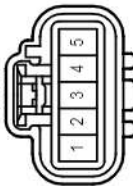


E 35
White

 


E 37
Black



 
E 38
White

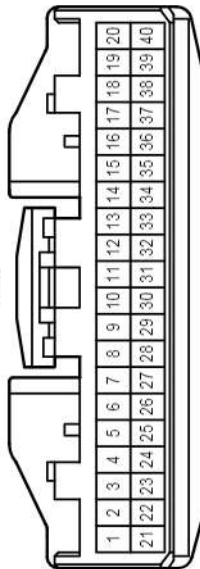

E 39
White






















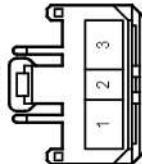 


 Position of Parts in Instrument Panel <LHD>

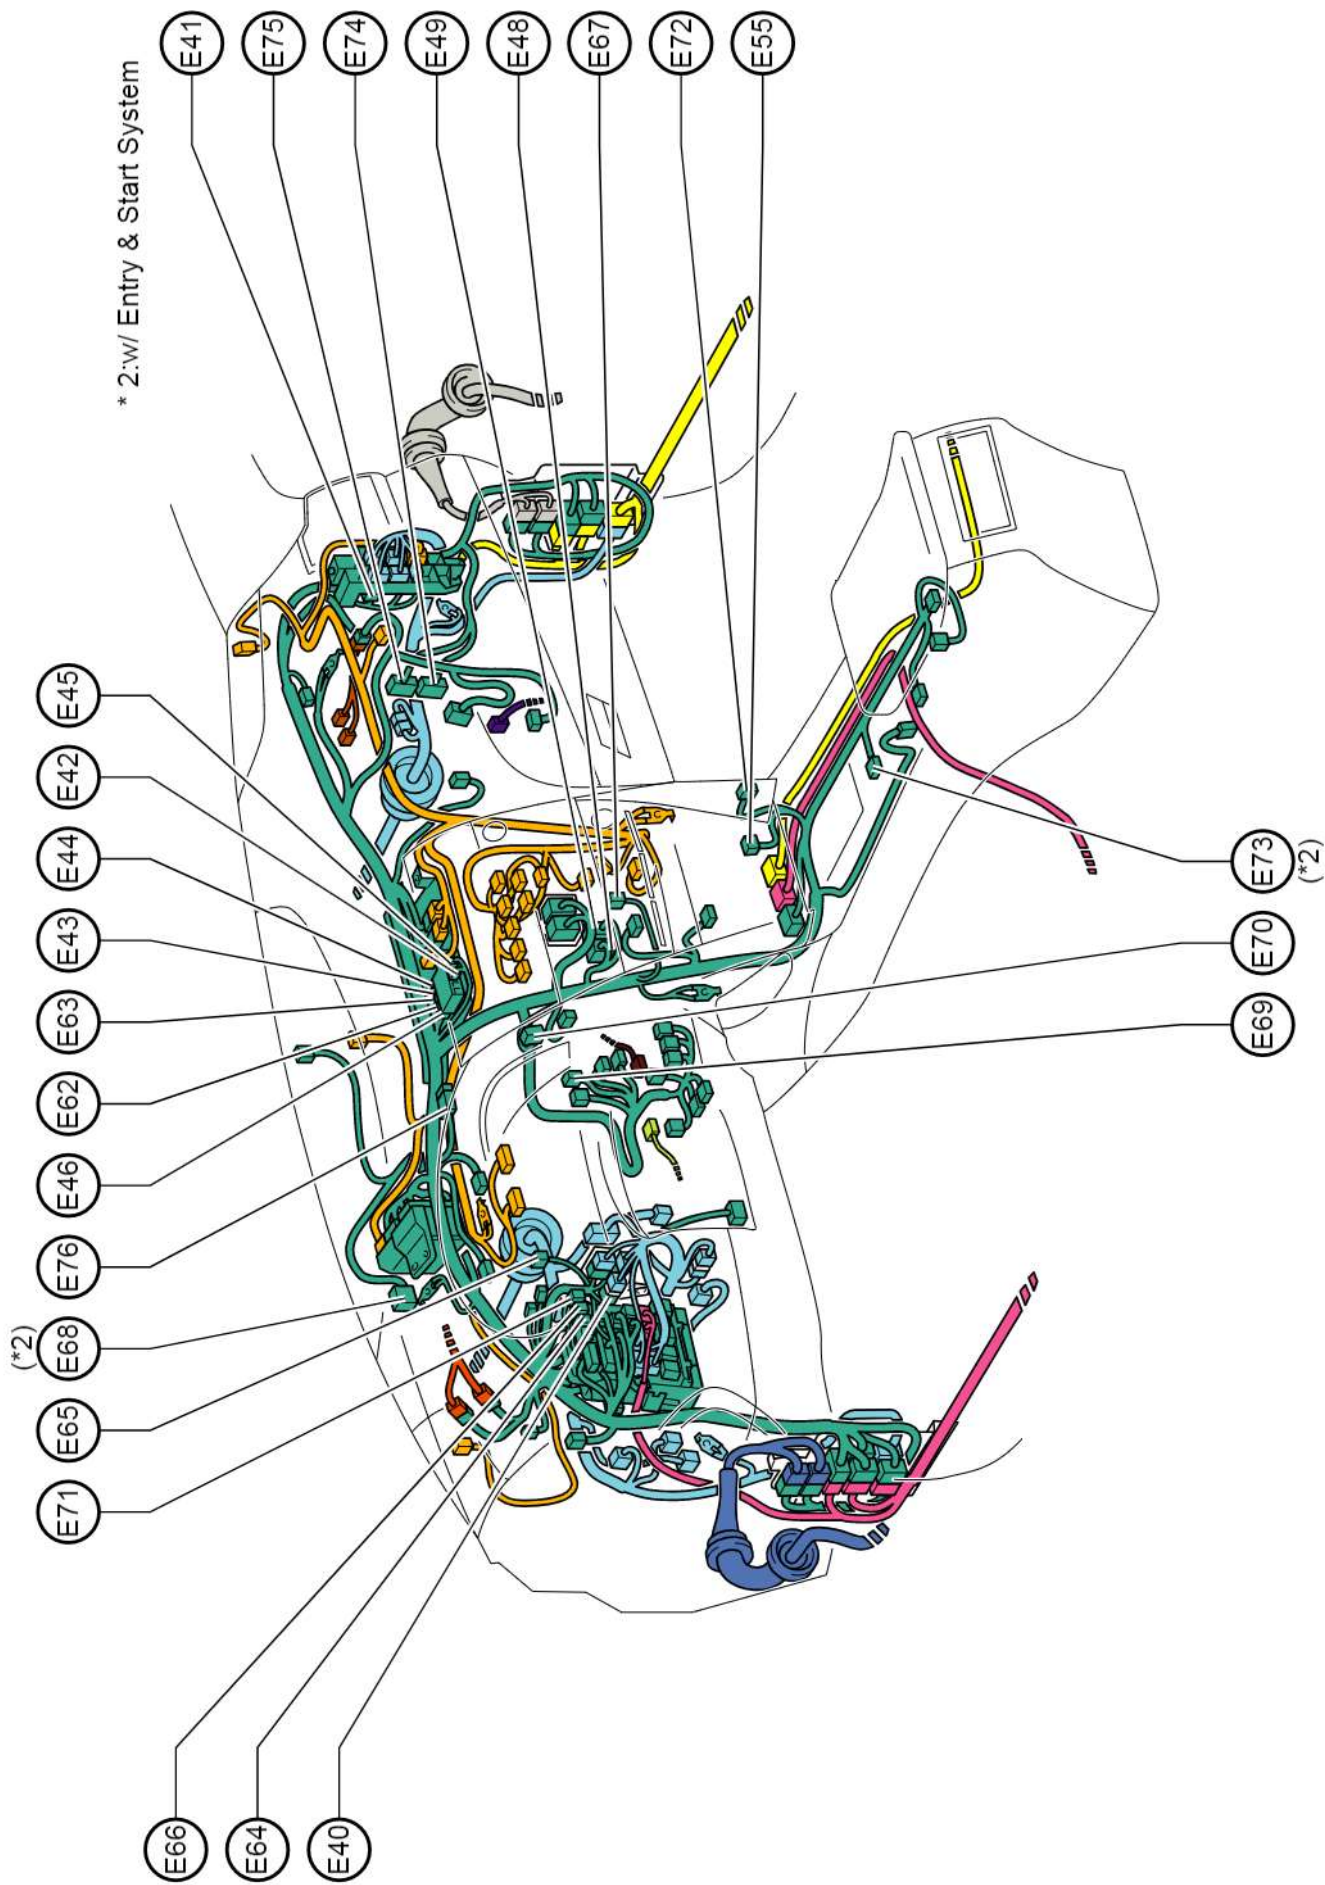

E 40	Junction Connector
E 41	Junction Connector
E 42	Junction Connector
E 43	Junction Connector
E 44	Junction Connector
E 45	Junction Connector
E 46	Junction Connector
E 48	Junction Connector
E 49	Junction Connector
E 55	Seat Heater SW
E 62	Junction Connector
E 63	Junction Connector
E 64	Headlamp Leveling SW
E 65	Clearance Warning Buzzer (Back Sonar)
E 66	Back Sonar Switch Assembly
E 67	Clearance Warning Buzzer
E 68	ID Code Box
E 69	Steering Lock ECU
E 70	Engine Switch
E 71	Back Sonar Switch Assembly
E 72	Electrical Key Oscillator (Console)
E 73	Shift Lock Control ECU
E 74	Certification ECU
E 75	Certification ECU
E 76	Junction Connector

                      
Position of Parts in Instrument Panel <LHD>

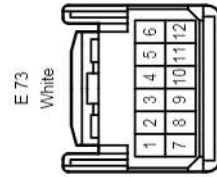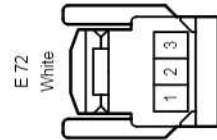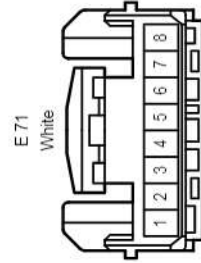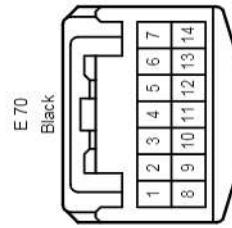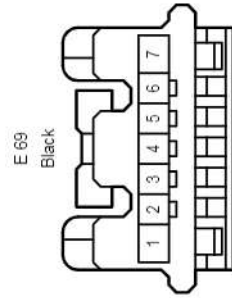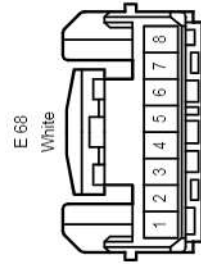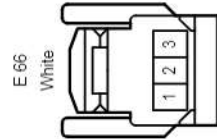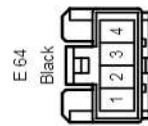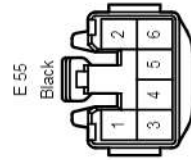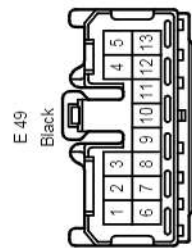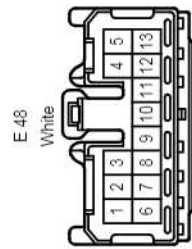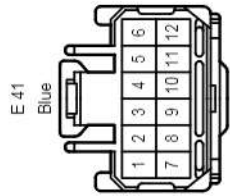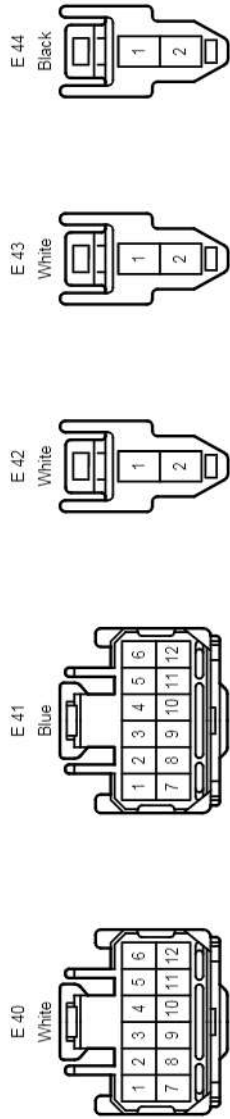

E 74 White






E 75 White

 Position of Parts in Instrument Panel <LHD>

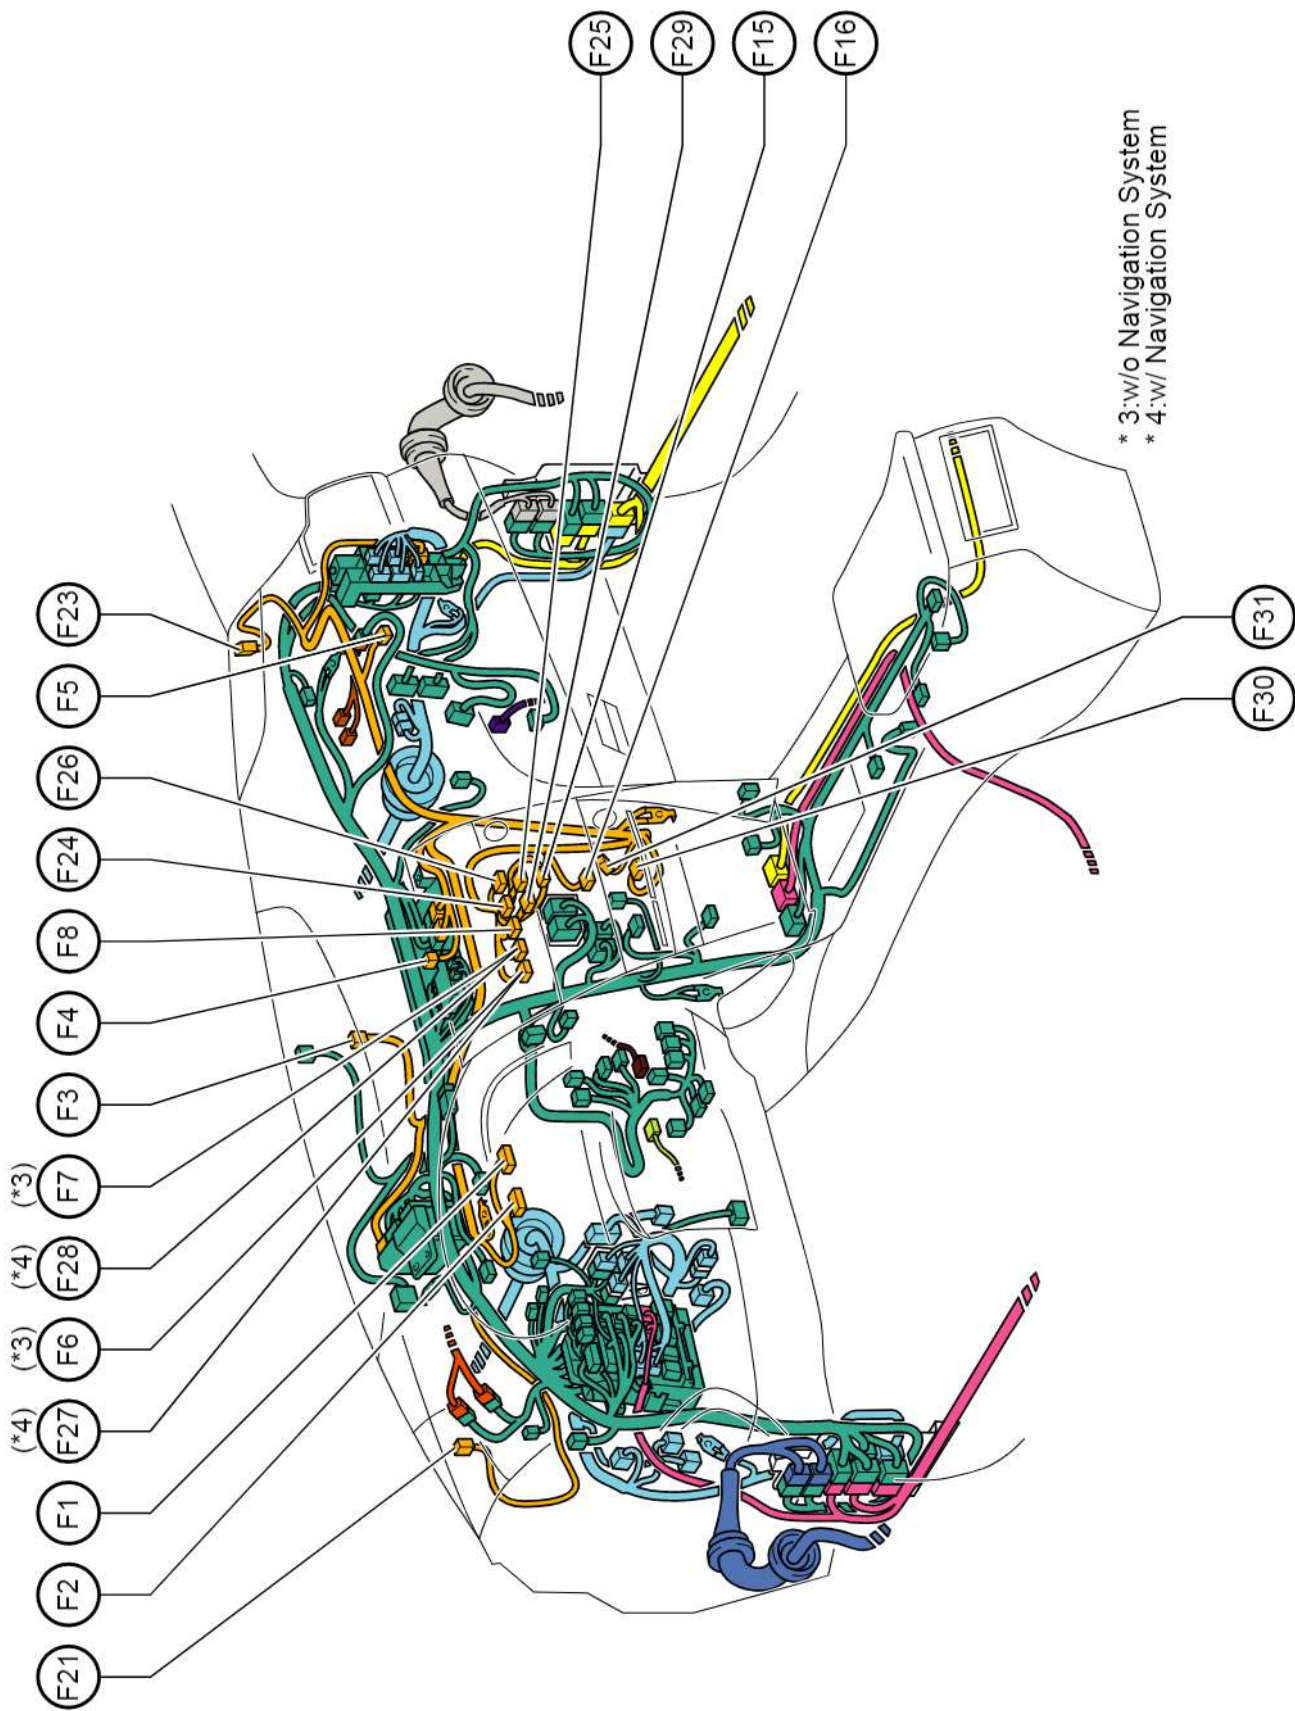


F	1	Combination Meter
F	2	Combination Meter
F	3	Clock
F	4	Hazard Warning Signal SW
F	5	Glove Box Lamp
F	6	Radio Receiver Assembly
F	7	Radio Receiver Assembly
F	8	Radio Receiver Assembly
F	15	Antenna Amplifier
F	16	A/C Control Assembly
F	21	Tweeter (Front LH)
F	23	Tweeter (Front RH)
F	24	Navigation Receiver Assembly
F	25	Navigation Receiver Assembly
F	26	Navigation Receiver Assembly
F	27	Navigation Receiver Assembly
F	28	Navigation Receiver Assembly
F	29	Radio Receiver Assembly
F	30	Stereo Jack Adapter
F	31	Clearance Warning Buzzer

     Position of Parts in Instrument Panel <LHD>

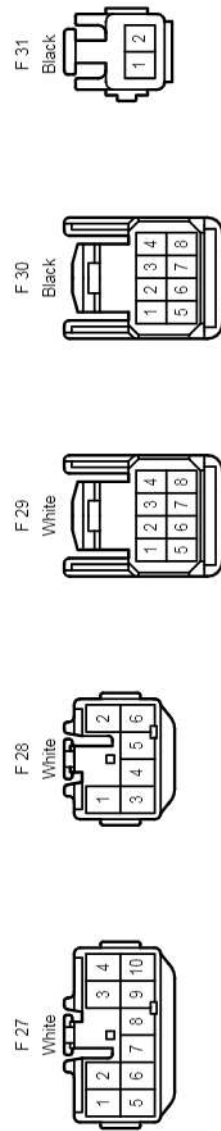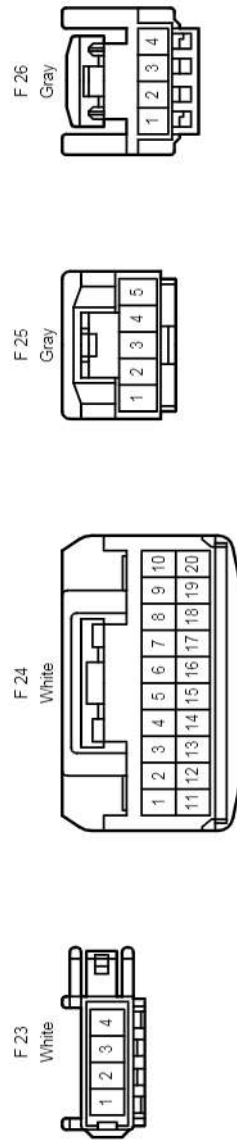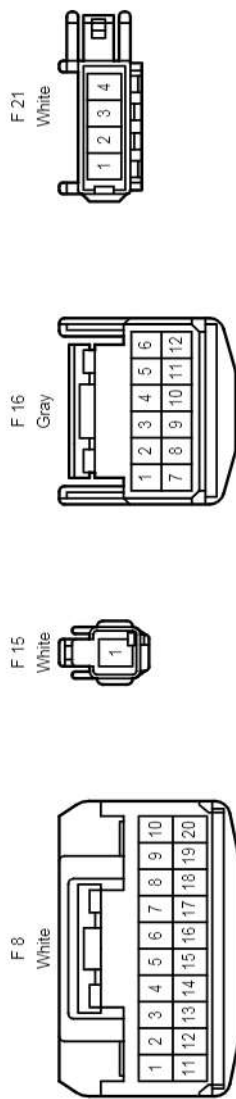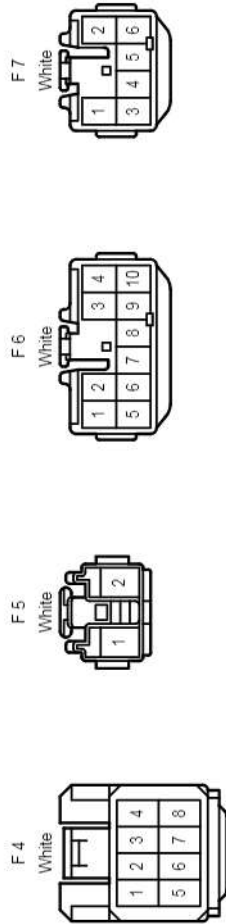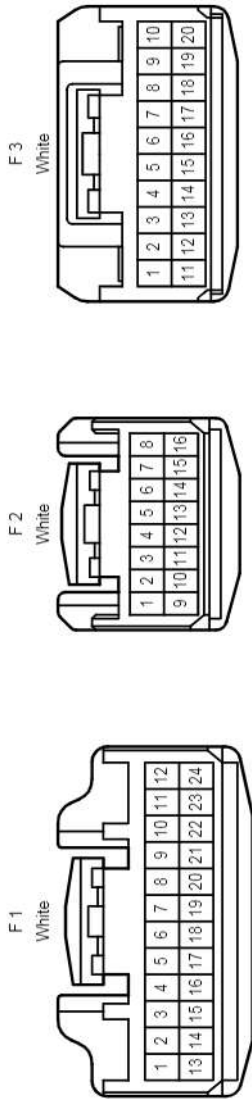


 Position of Parts in Instrument Panel <LHD>

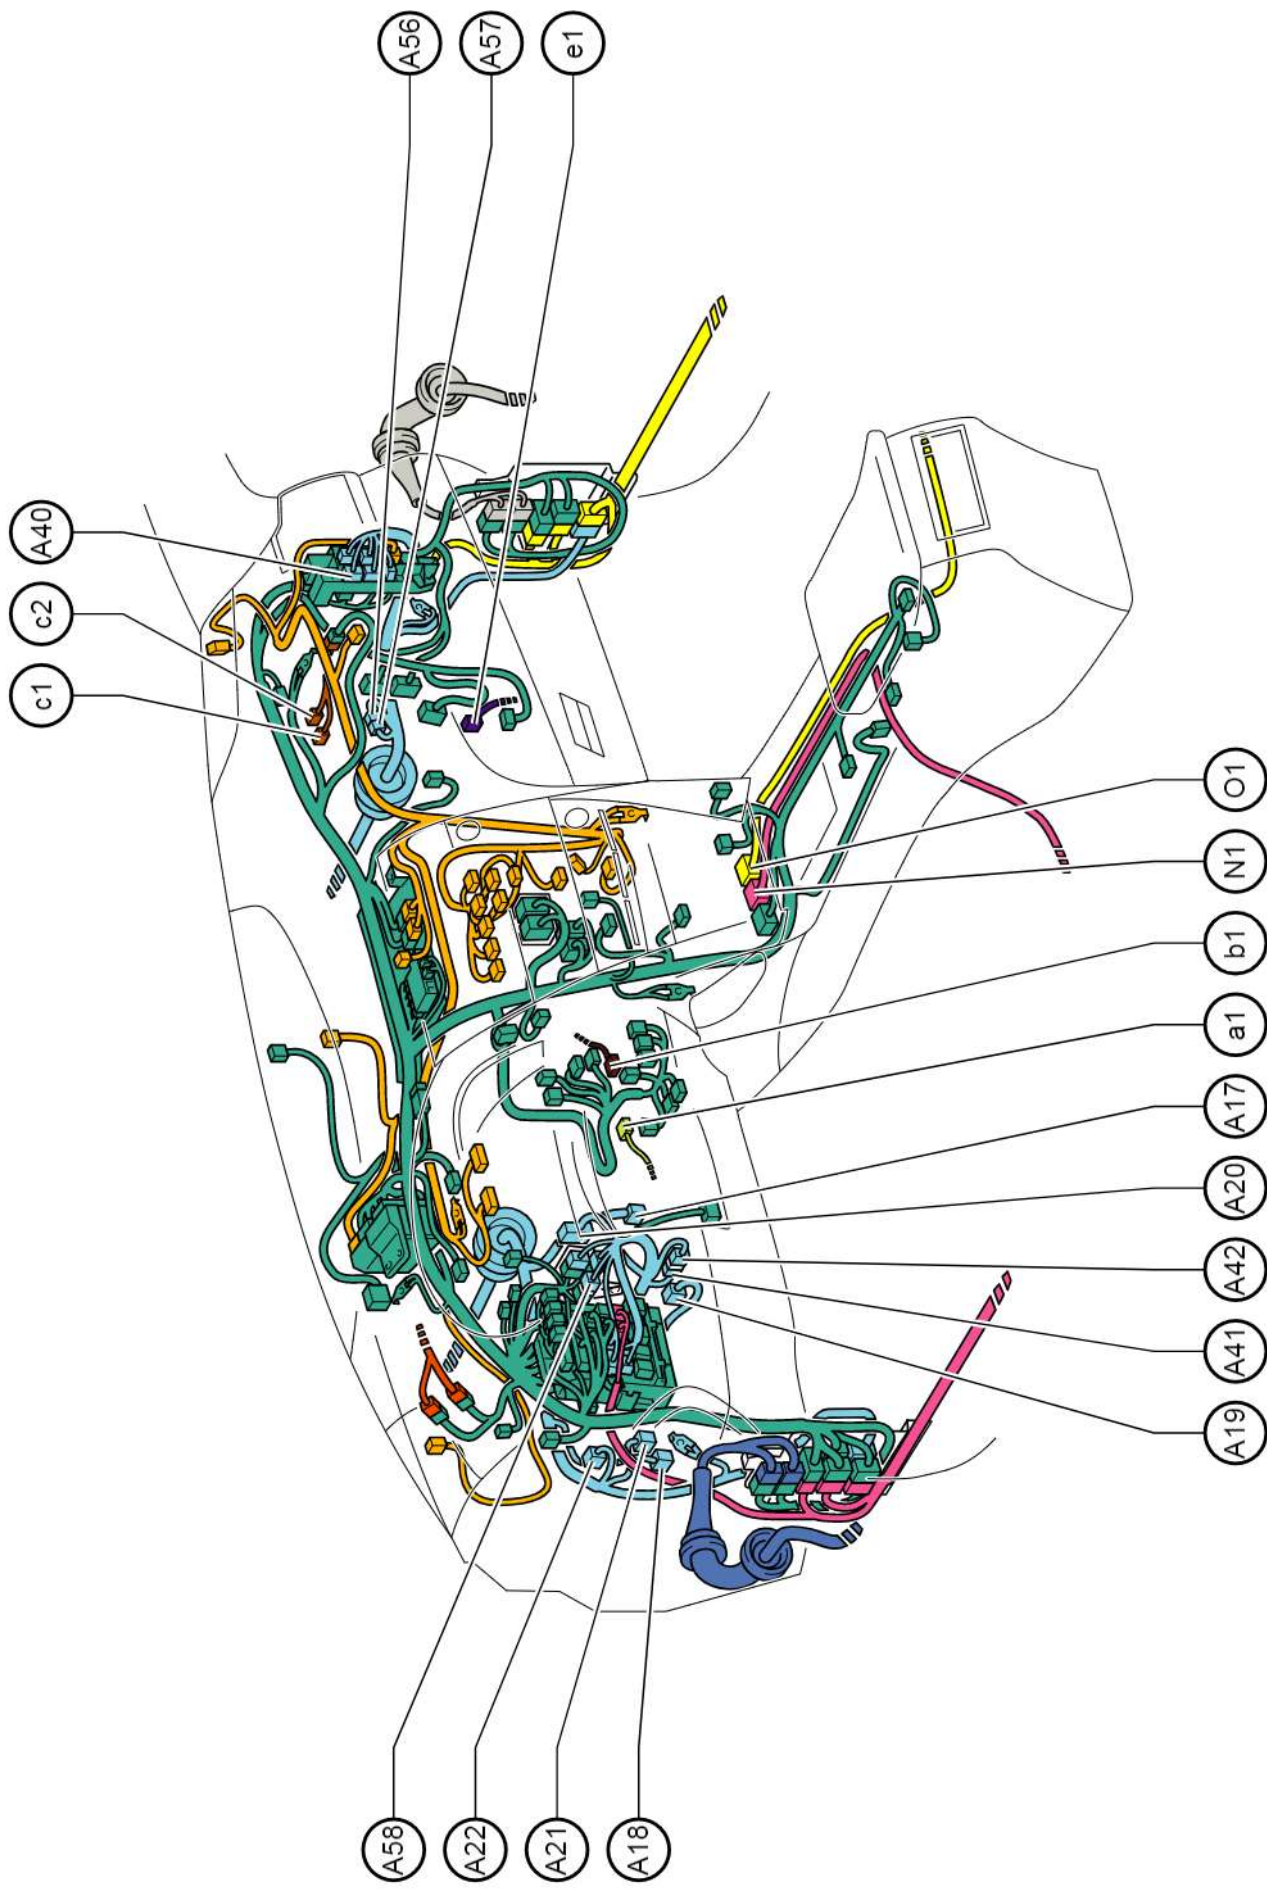


A	17	Accelerator Position Sensor
A	18	Parking Brake SW
A	19	Stop Lamp SW
A	20	Headlamp Leveling ECU
A	21	Cruise Control Clutch SW
A	22	Clutch Start SW
A	40	Junction Connector
A	41	Junction Connector
A	42	Junction Connector
A	56	Short Connector
A	57	Short Connector
A	58	Junction Connector
N	1	Airbag Sensor Assembly Center
O	1	Airbag Sensor Assembly Center
a	1	Spiral Cable , Steering Pad SW
b	1	Spiral Cable , Cruise Control SW
c	1	Airbag Squib (Front Passenger's Airbag Assembly)
c	2	Airbag Squib (Front Passenger's Airbag Assembly)
e	1	A/C Amplifier , A/C Blower Assembly

 
Position of Parts in Instrument Panel <LHD>

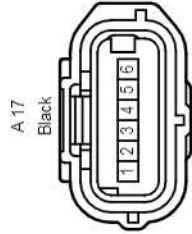


A 17
Black

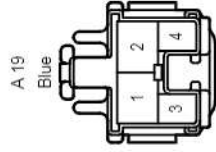 


A 19
Blue

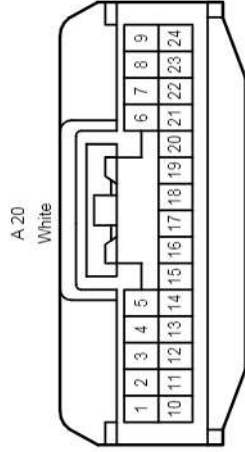 


A 20
White

 


A 21
White

 


A 22
Black

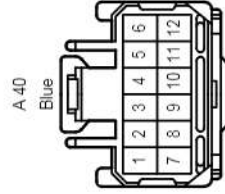 


A 40
Blue

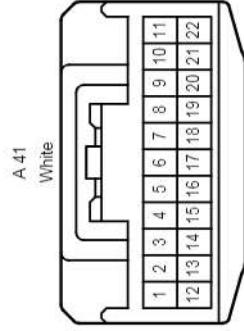 


A 41
White

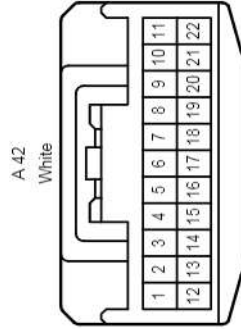 


A 42
White

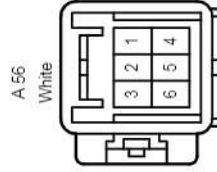 


A 56
White

 


A 57
White

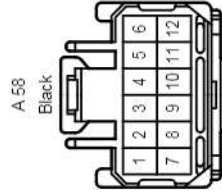 


A 58
Black

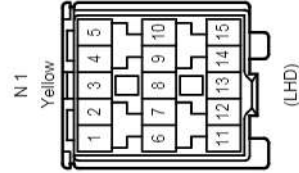 


N 1
Yellow

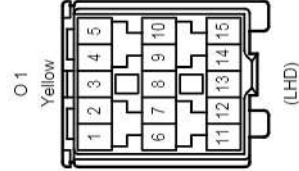 


O 1
Yellow

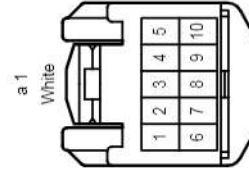 


a 1
White

 


b 1
White

 

c 1
Black

 




c 2
Orange

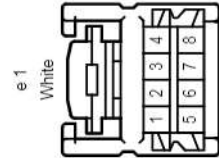 


e 1
White

   
 
Wire and Wire in Instrument Panel <LHD>

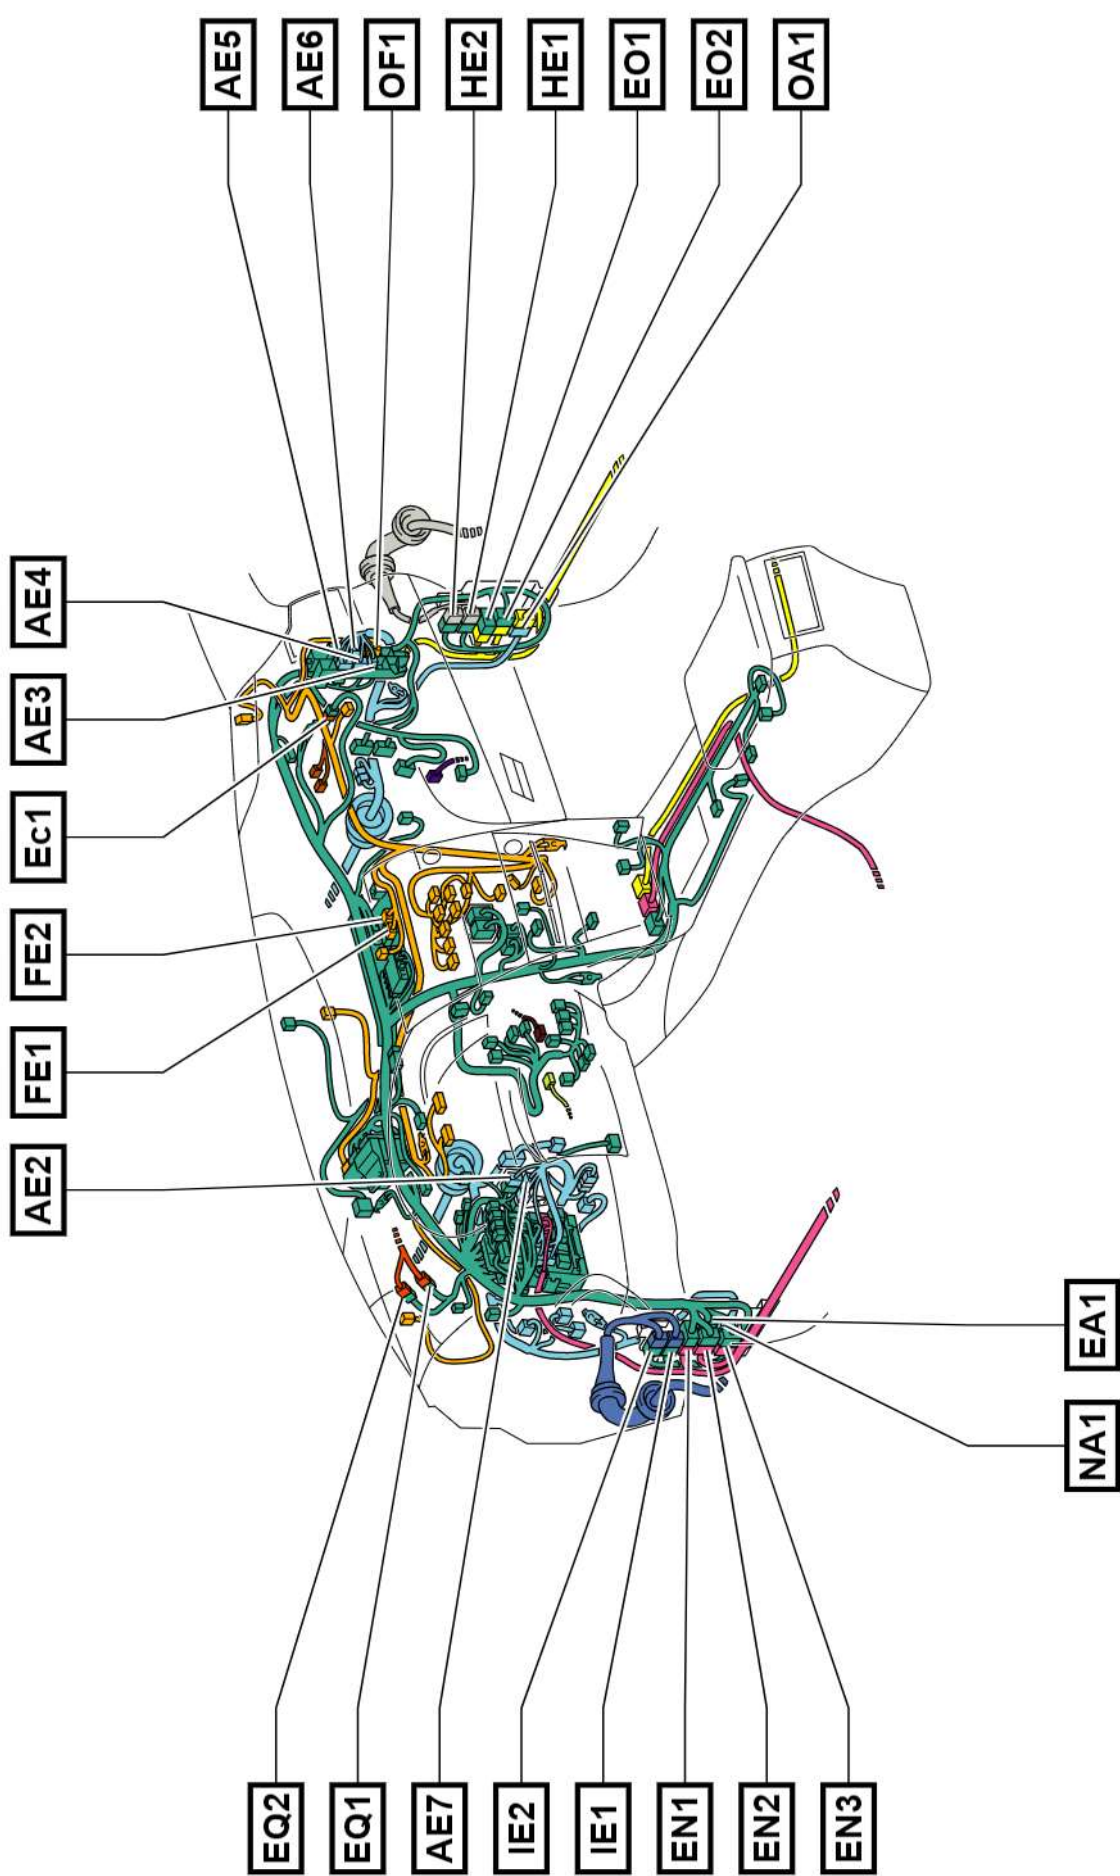

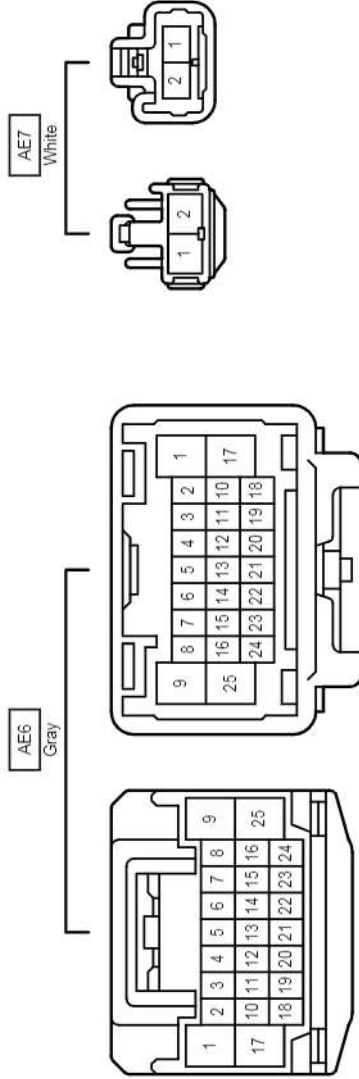
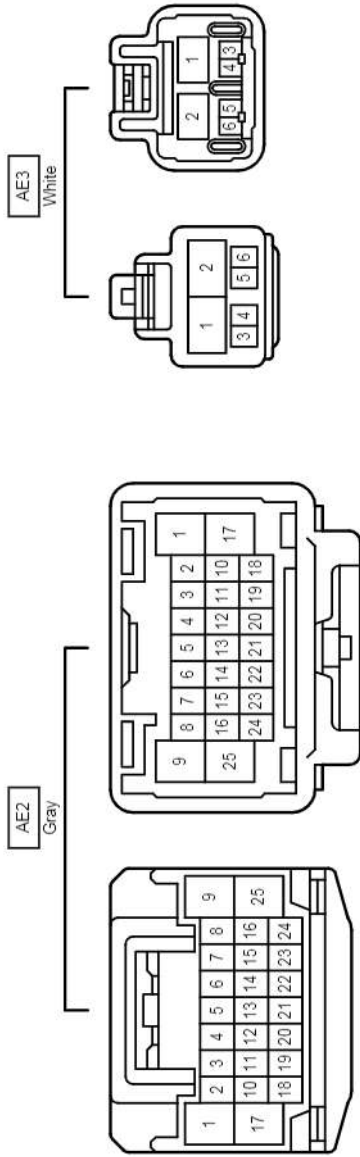


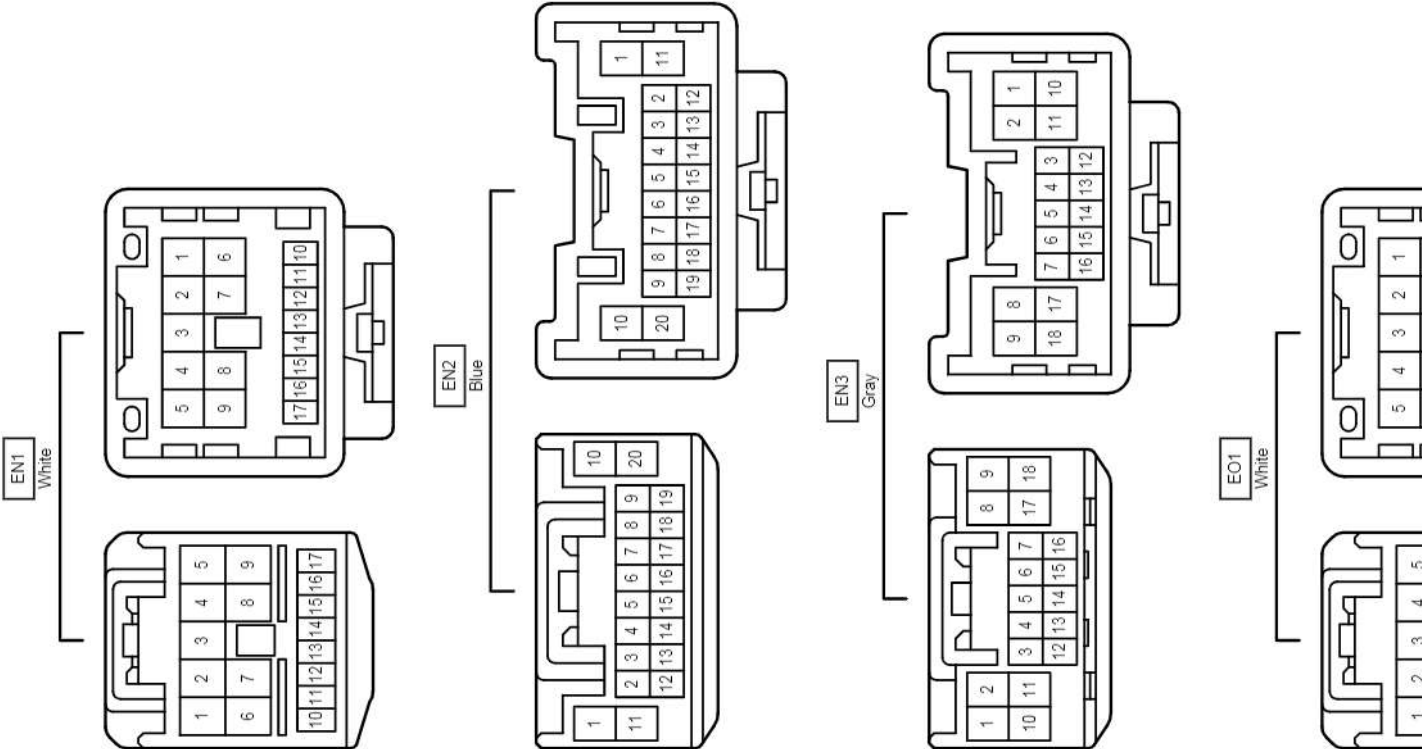



EO2
Blue

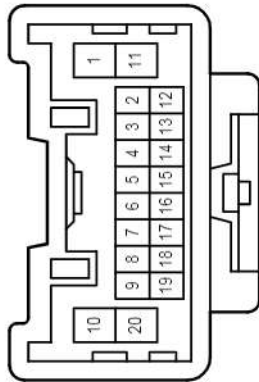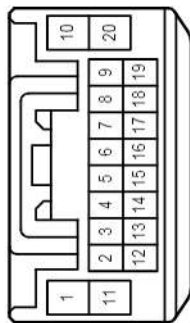  



EQ1
White

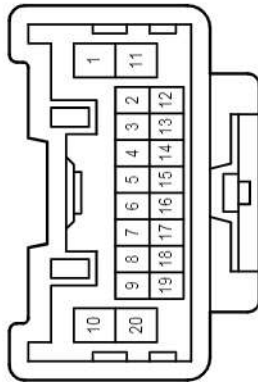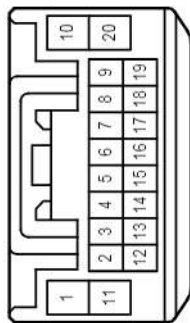  



EQ2
White



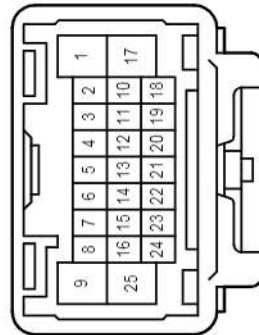 
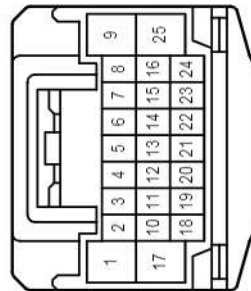 


Ec1
Yellow

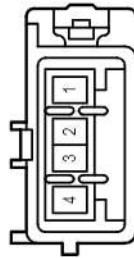 
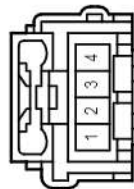 


FE1
Gray

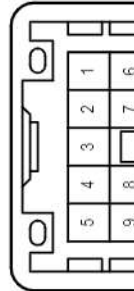 
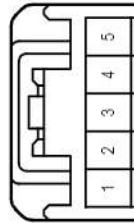 


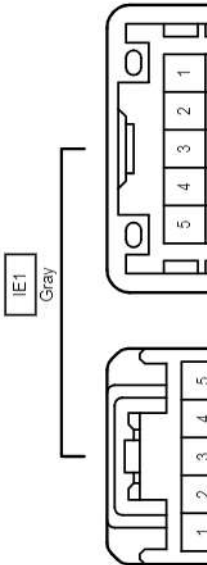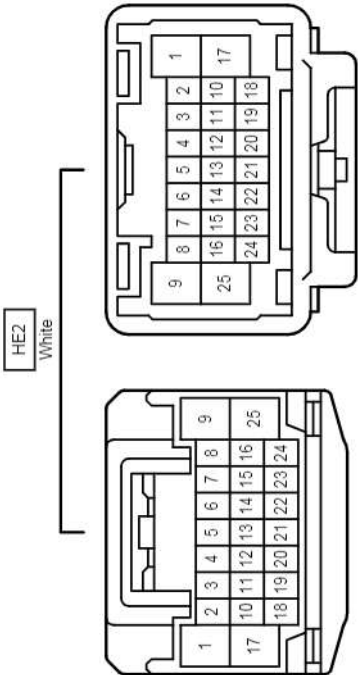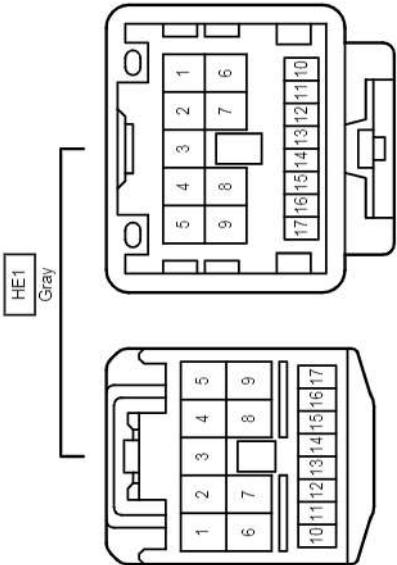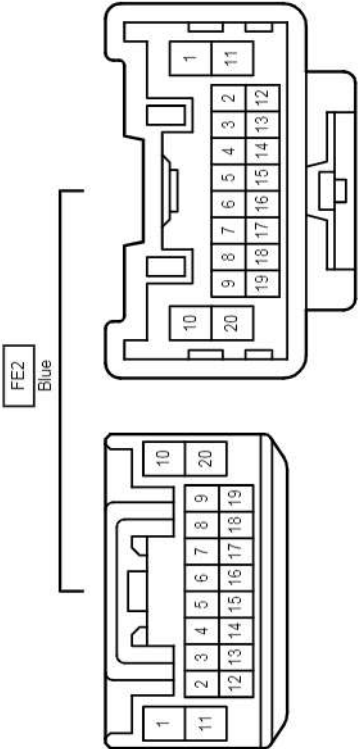    



IE2
White

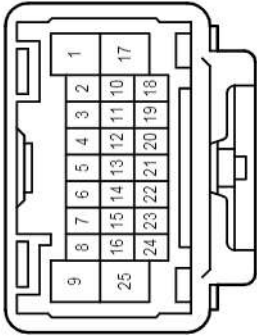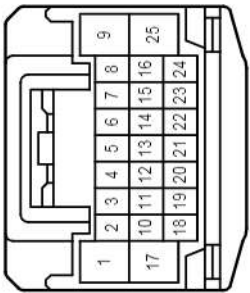  



NA1
Black

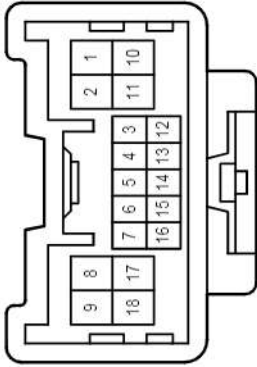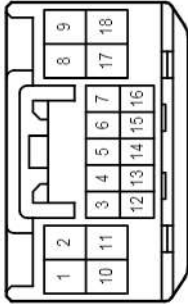  


OA1
Black

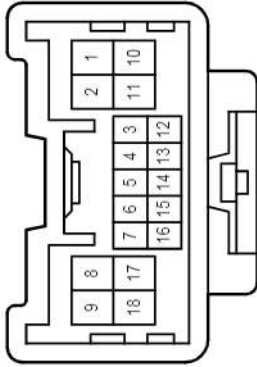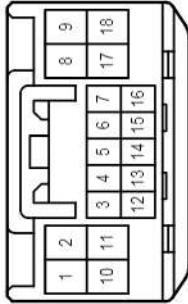  


OF1
Black

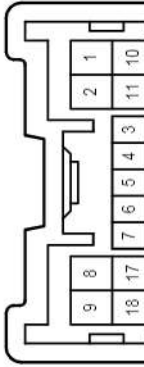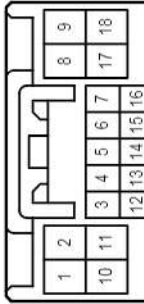  

Ground Points in Instrument Panel <RHD>



















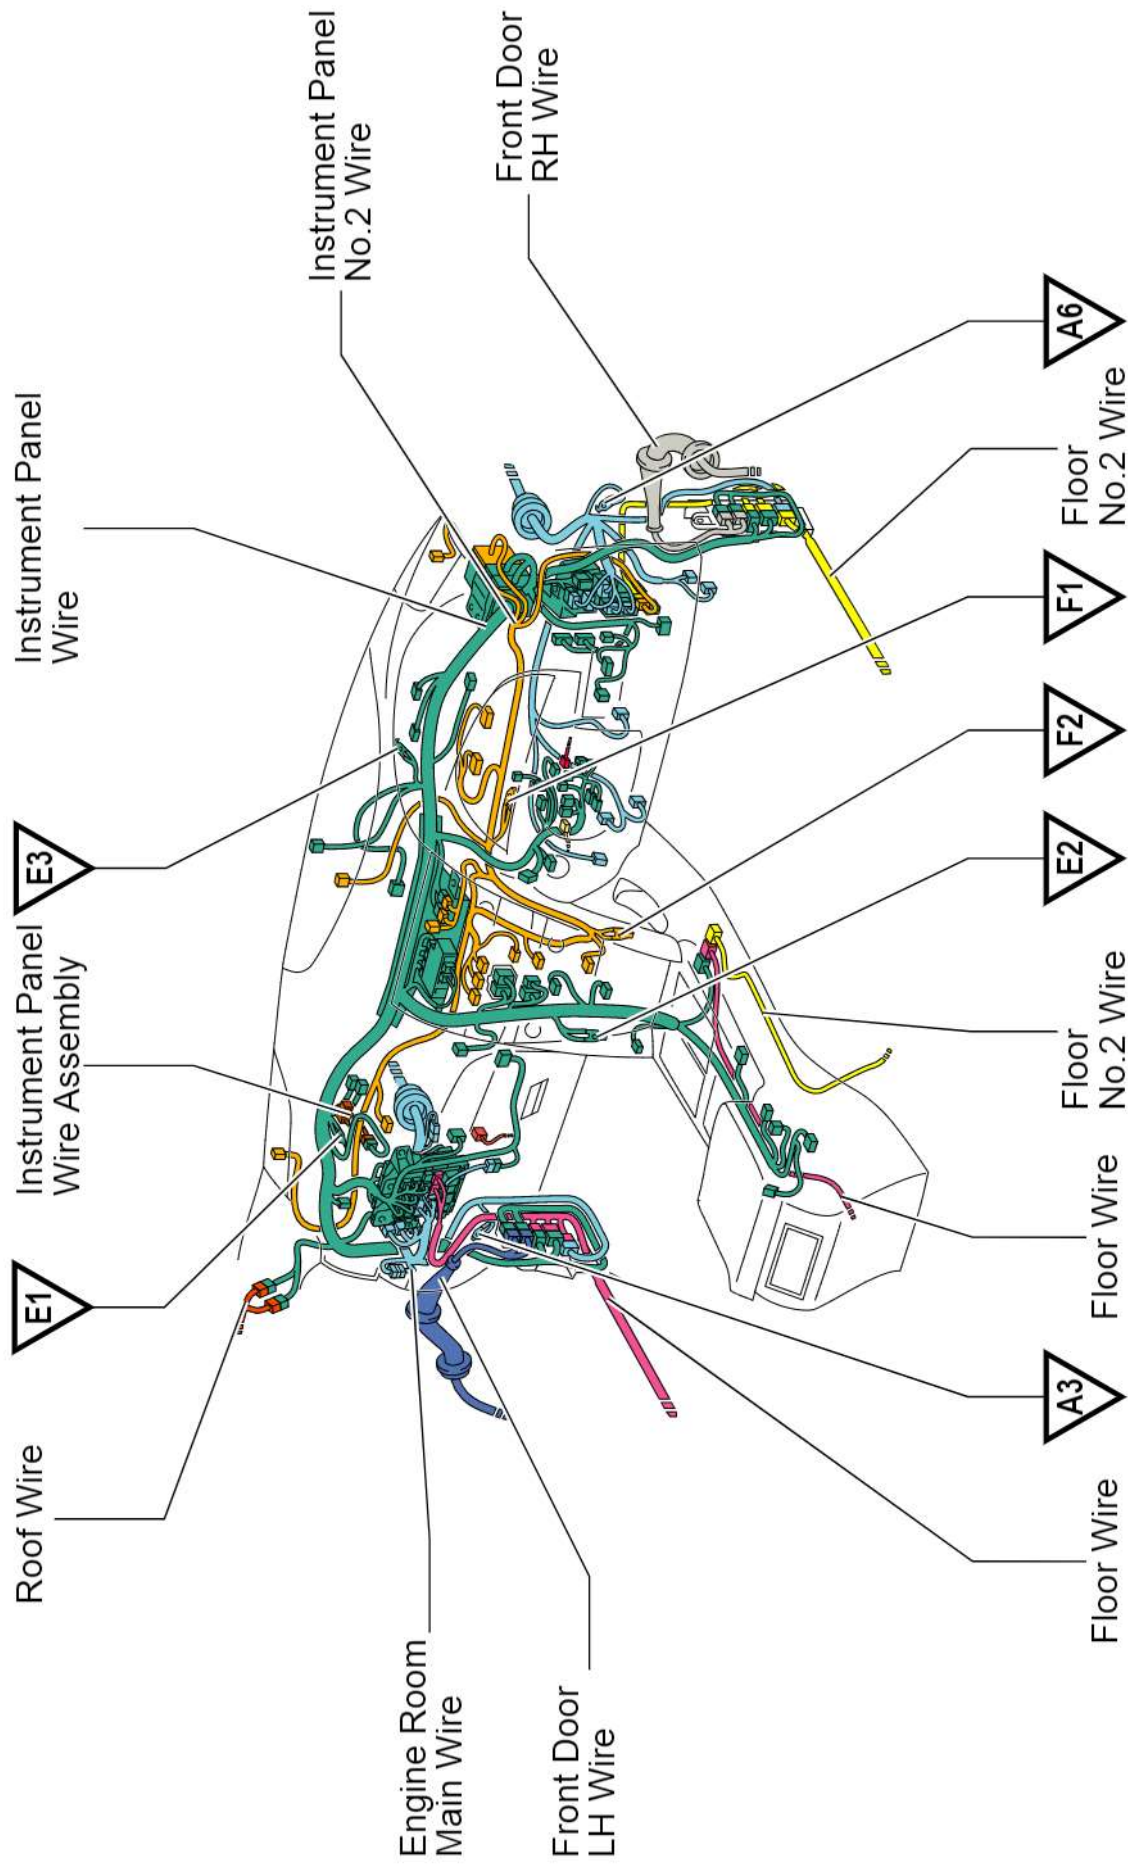 


 Position of Parts in Instrument Panel <RHD>

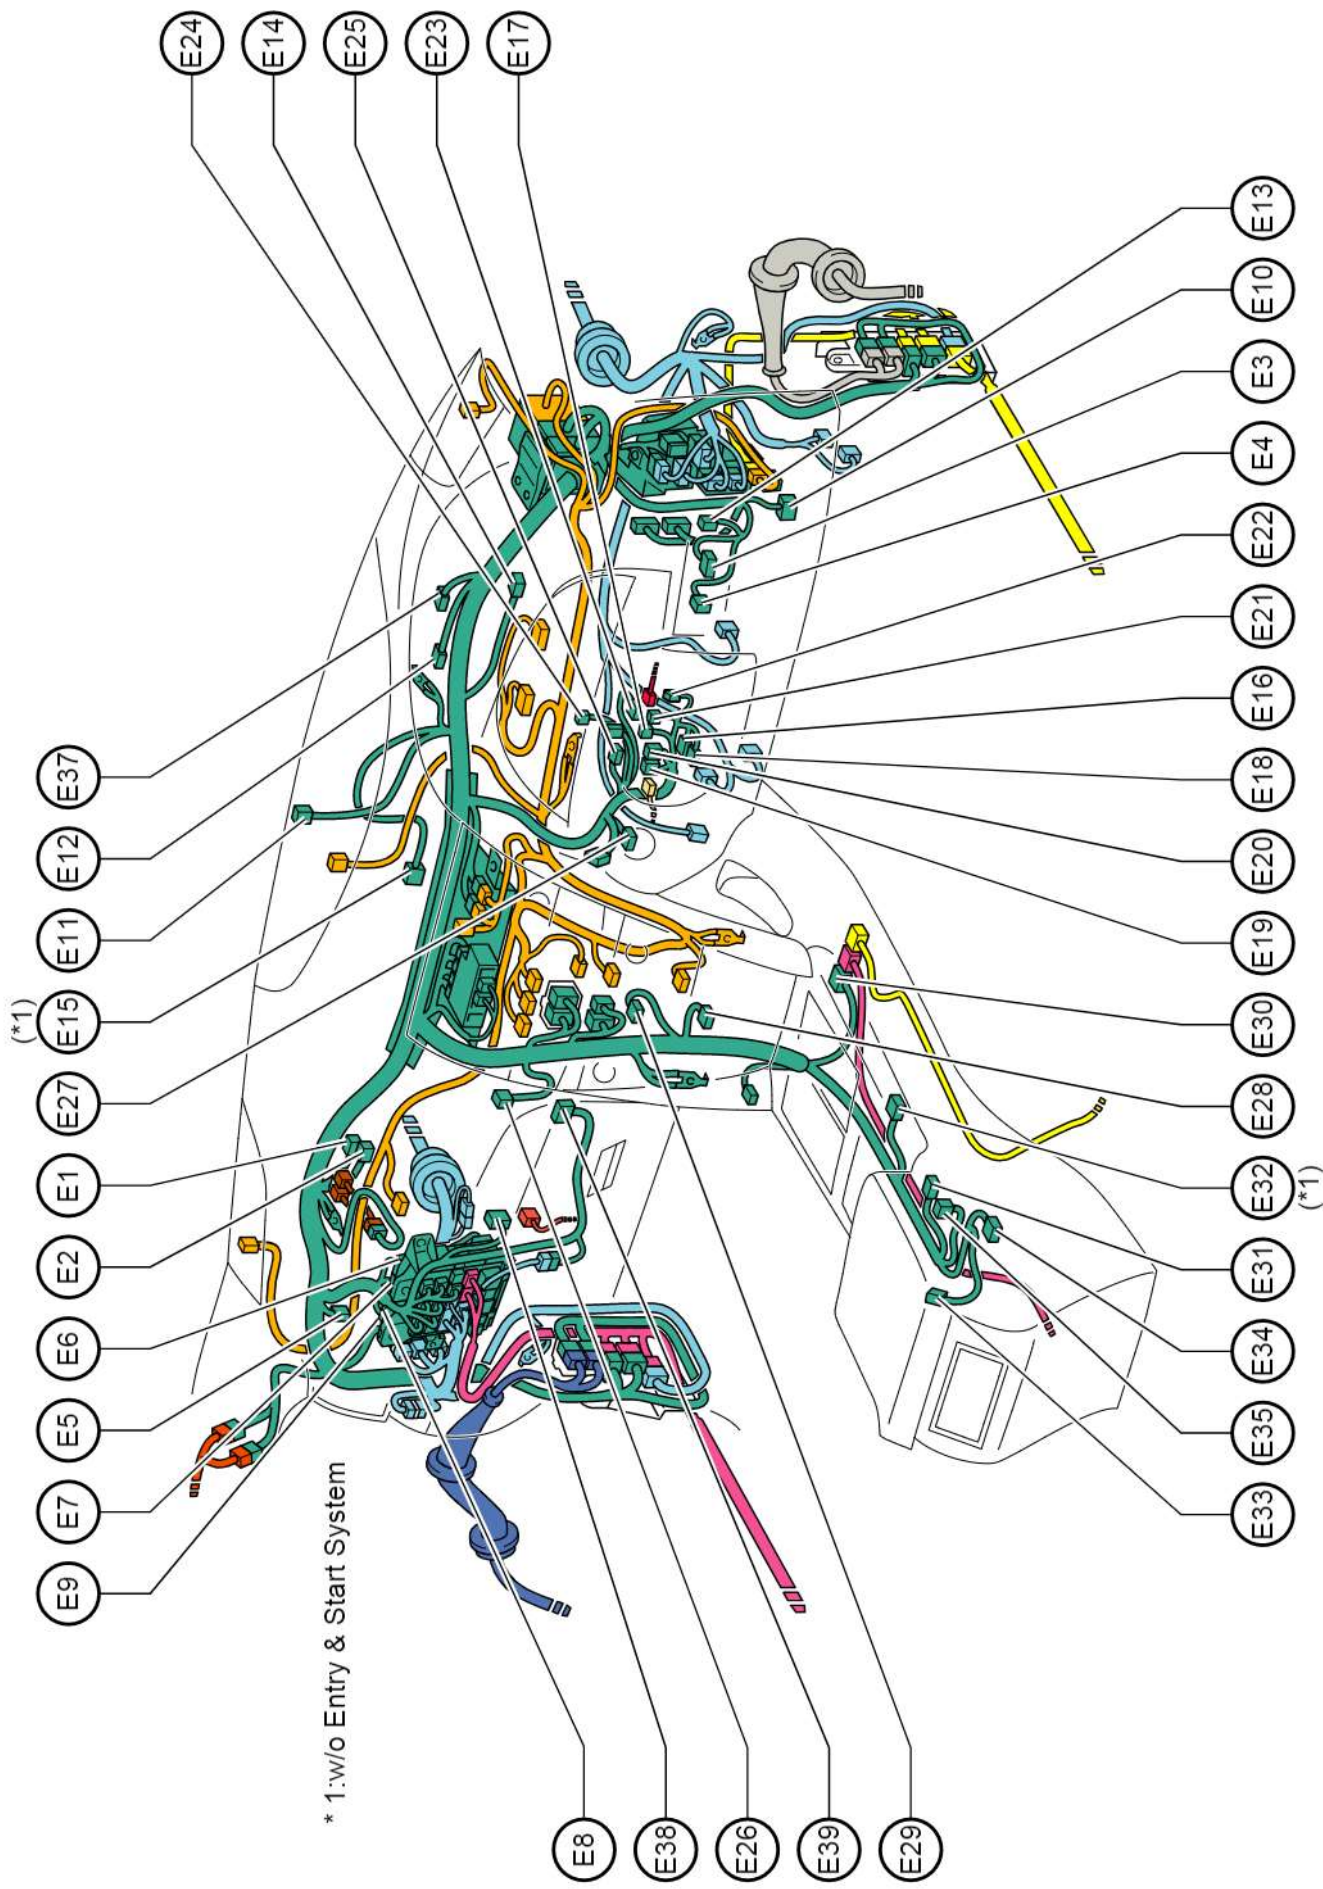


E	1	Diode (Door Courtesy Rear LH)
E	2	Diode (Door Courtesy Rear RH)
E	3	Outer Mirror SW
E	4	Headlamp Cleaner SW
E	5	Diode (Door Courtesy Front LH)
E	6	Main Body ECU
E	7	Main Body ECU
E	8	Main Body ECU
E	9	Main Body ECU
E	10	DLC3
E	11	Automatic Light Control Sensor
E	12	Ion Generator
E	13	VSC Warning Buzzer
E	14	Turn Signal Flasher
E	15	Transponder Key ECU
E	16	Airbag Squib (Steering Wheel Pad)
E	17	Steering Sensor
E	18	Spiral Cable
E	19	Windshield Wiper SW Assembly
E	20	Windshield Wiper SW Assembly
E	21	Headlamp Dimmer SW Assembly
E	22	Unlock Warning SW
E	23	Ignition SW
E	24	Key Interlock Solenoid
E	25	Transponder Key Amplifier
E	26	Windshield Wiper Relay
E	27	A/C Room Temp. Sensor
E	28	Cigarette Lighter
E	29	Power Outlet Socket (Front)
E	30	Airbag Sensor Assembly Center
E	31	Transmission Control SW
E	32	Shift Lock Control ECU
E	33	Parking Brake SW
E	34	Yaw Rate Sensor
E	35	Power Outlet Socket (Rear)
E	37	Diode (Door Courtesy Front RH)
E	38	A/C Amplifier
E	39	Blower Motor

                   
Position of Parts in Instrument Panel <RHD>

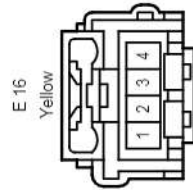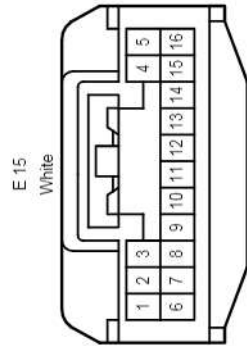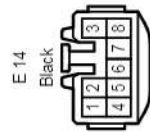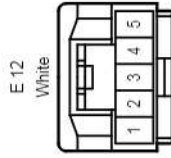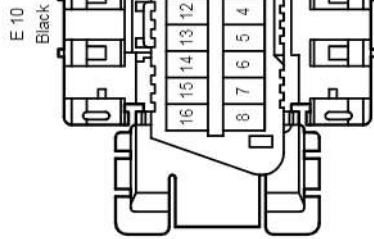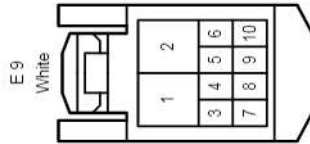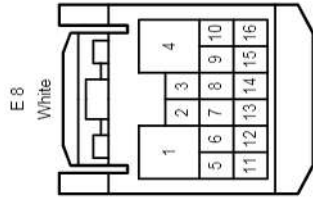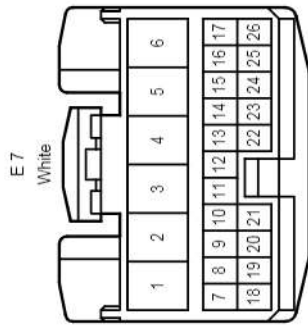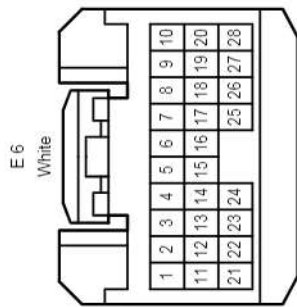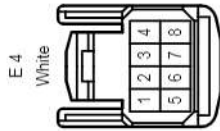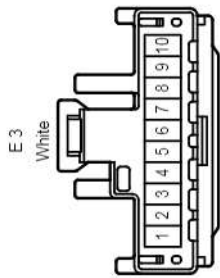


E 25
Black

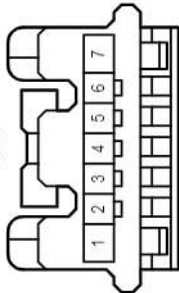 

E 26
White

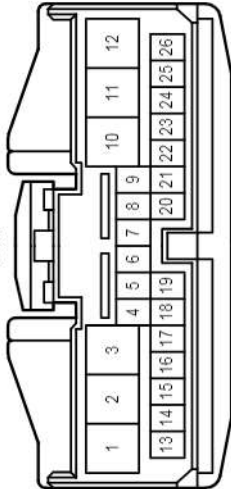 


E 27
Black

 


E 28
White



 
E 29
White




E 30
Yellow

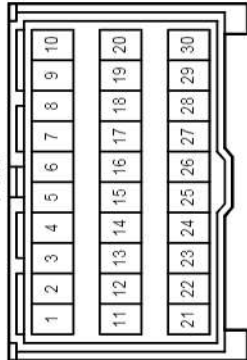 

E 31
White

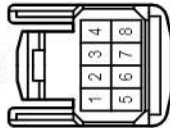 


E 32
White

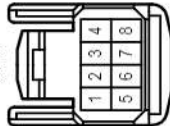 


E 33
White



 E 34
Black

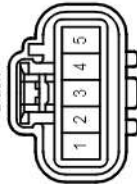


E 35
White

 


E 37
Black



 
E 38
White

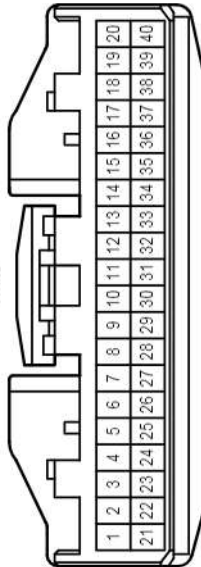

E 39
White

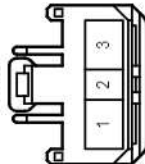 


 Position of Parts in Instrument Panel <RHD>

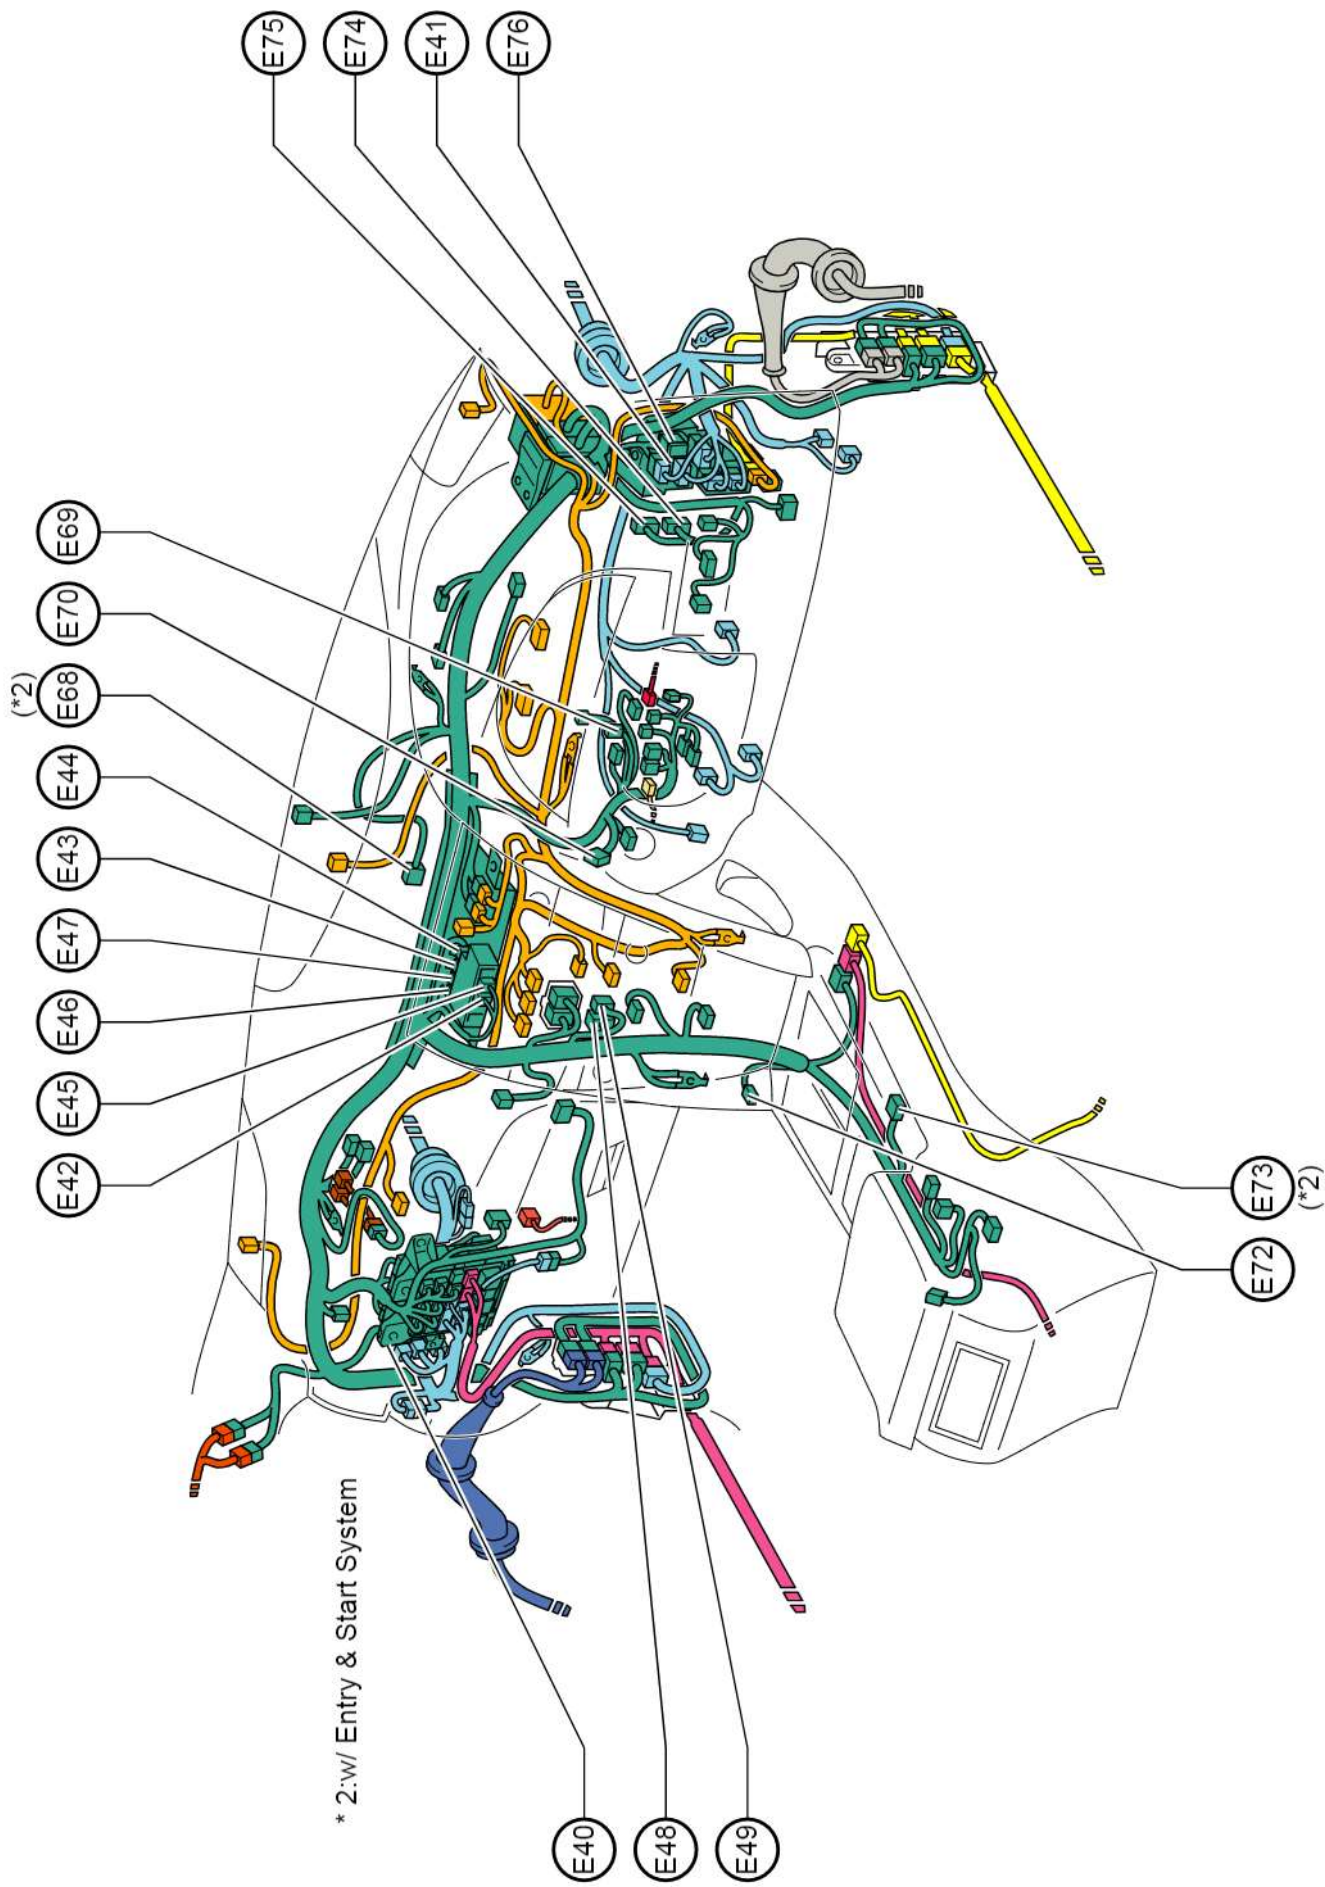


E 40	Junction Connector
E 41	Junction Connector
E 42	Junction Connector
E 43	Junction Connector
E 44	Junction Connector
E 45	Junction Connector
E 46	Junction Connector
E 47	Junction Connector
E 48	Junction Connector
E 49	Junction Connector
E 68	ID Code Box
E 69	Steering Lock ECU
E 70	Engine Switch
E 72	Electrical Key Oscillator (Console)
E 73	Shift Lock Control ECU
E 74	Certification ECU
E 75	Certification ECU
E 76	Junction Connector

 Position of Parts in Instrument Panel <RHD>









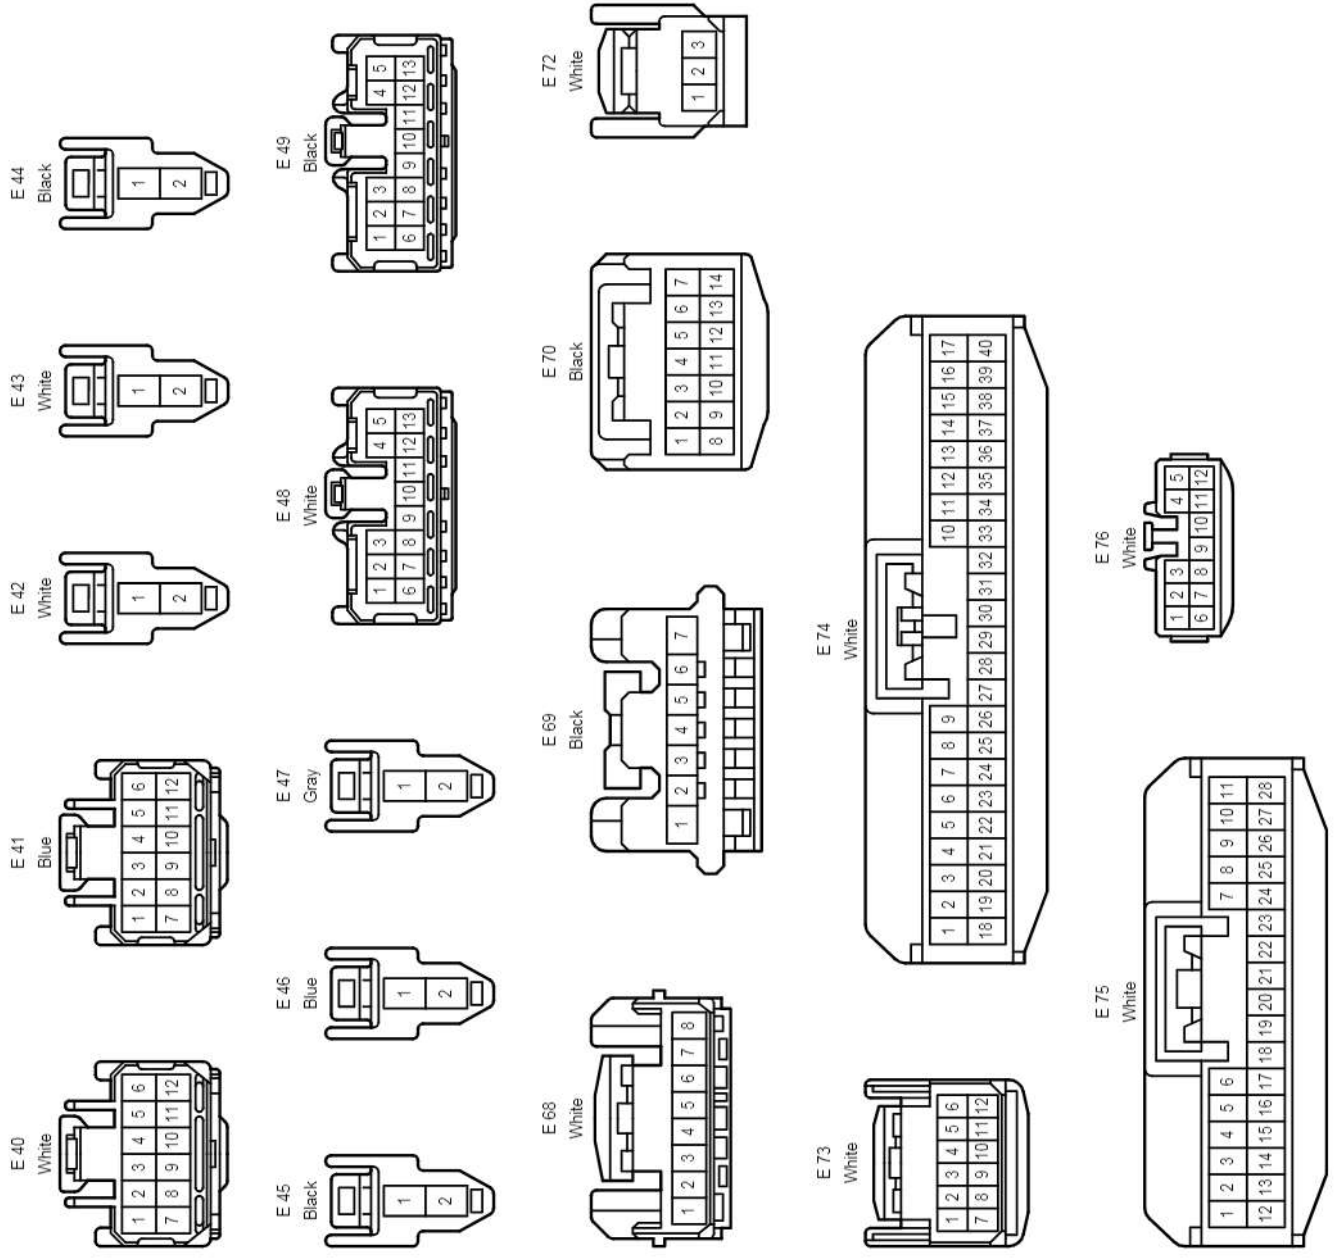


 Position of Parts in Instrument Panel <RHD>

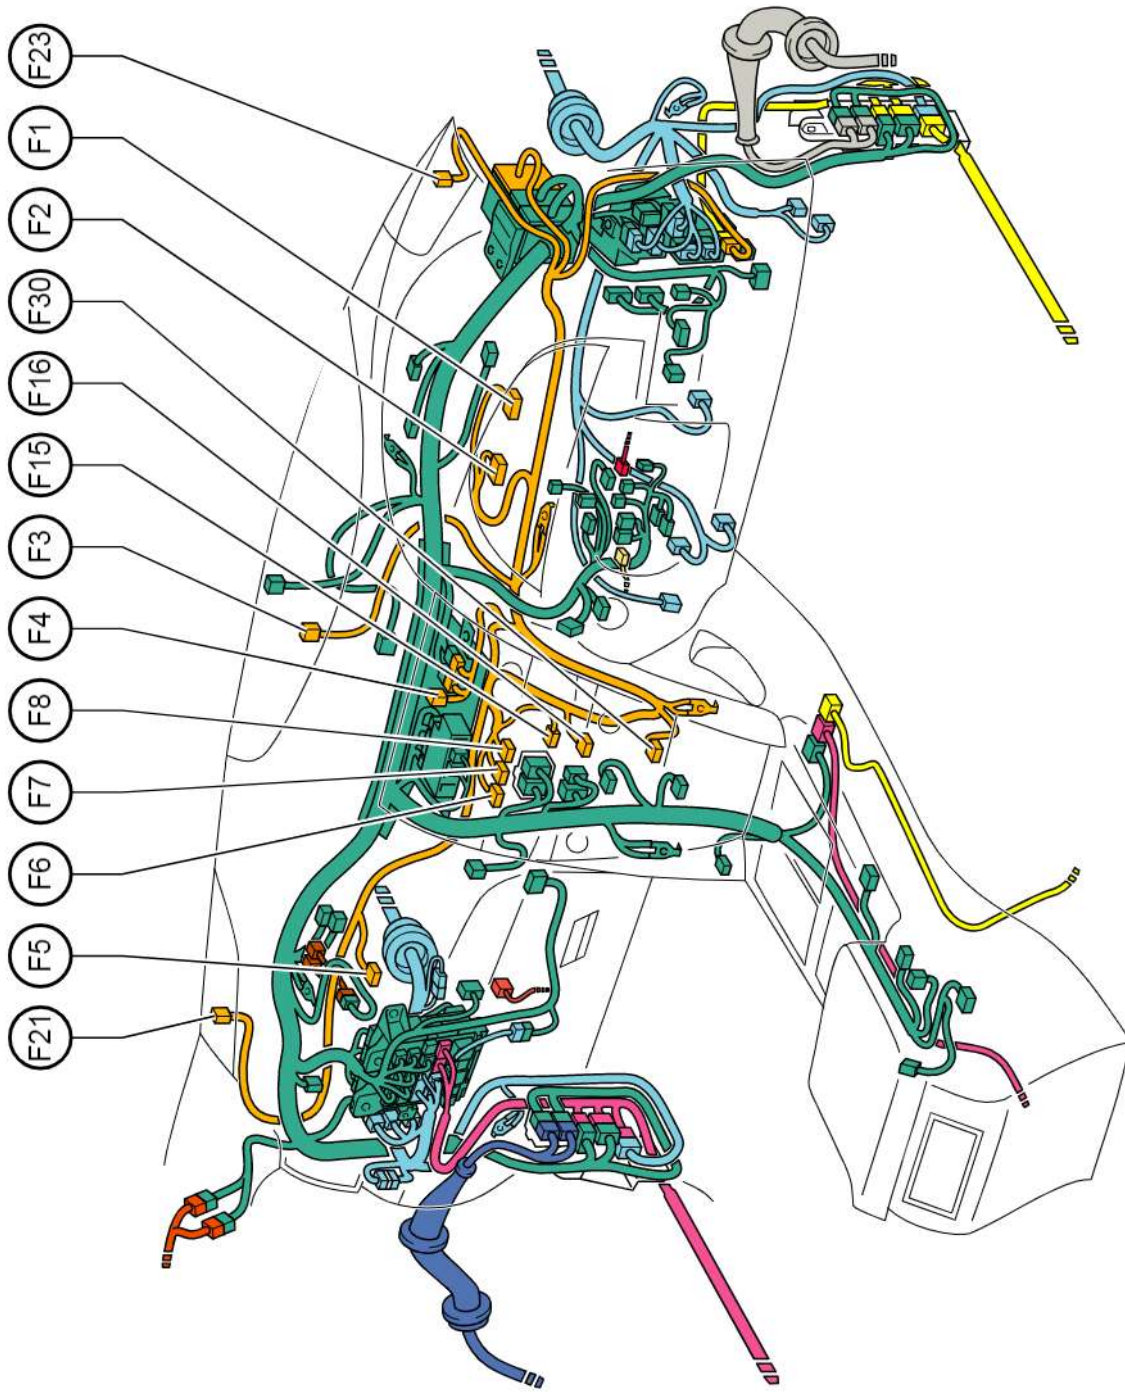


- F 1 Combination Meter
- F 2 Combination Meter
- F 3 Clock
- F 4 Hazard Warning Signal SW
- F 5 Glove Box Lamp
- F 6 Radio Receiver Assembly
- F 7 Radio Receiver Assembly
- F 8 Radio Receiver Assembly
- F 15 Antenna Amplifier
- F 16 A/C Control Assembly
- F 21 Tweeter (Front LH)
- F 23 Tweeter (Front RH)
- F 30 Stereo Jack Adapter

         Position of Parts in Instrument Panel <RHD>

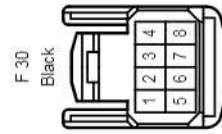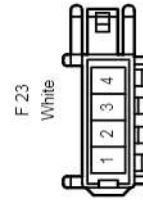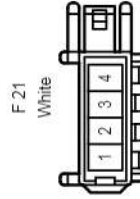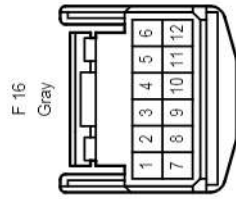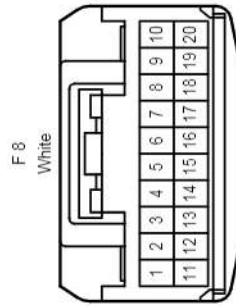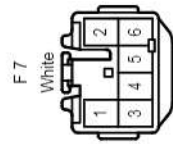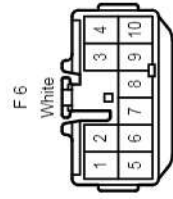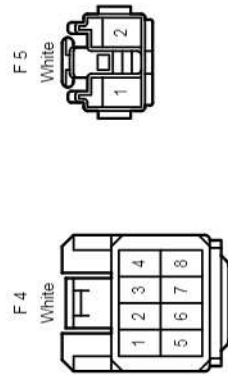
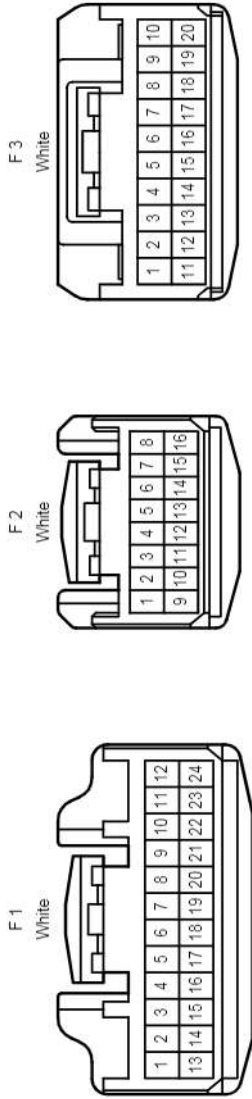


 Position of Parts in Instrument Panel <RHD>




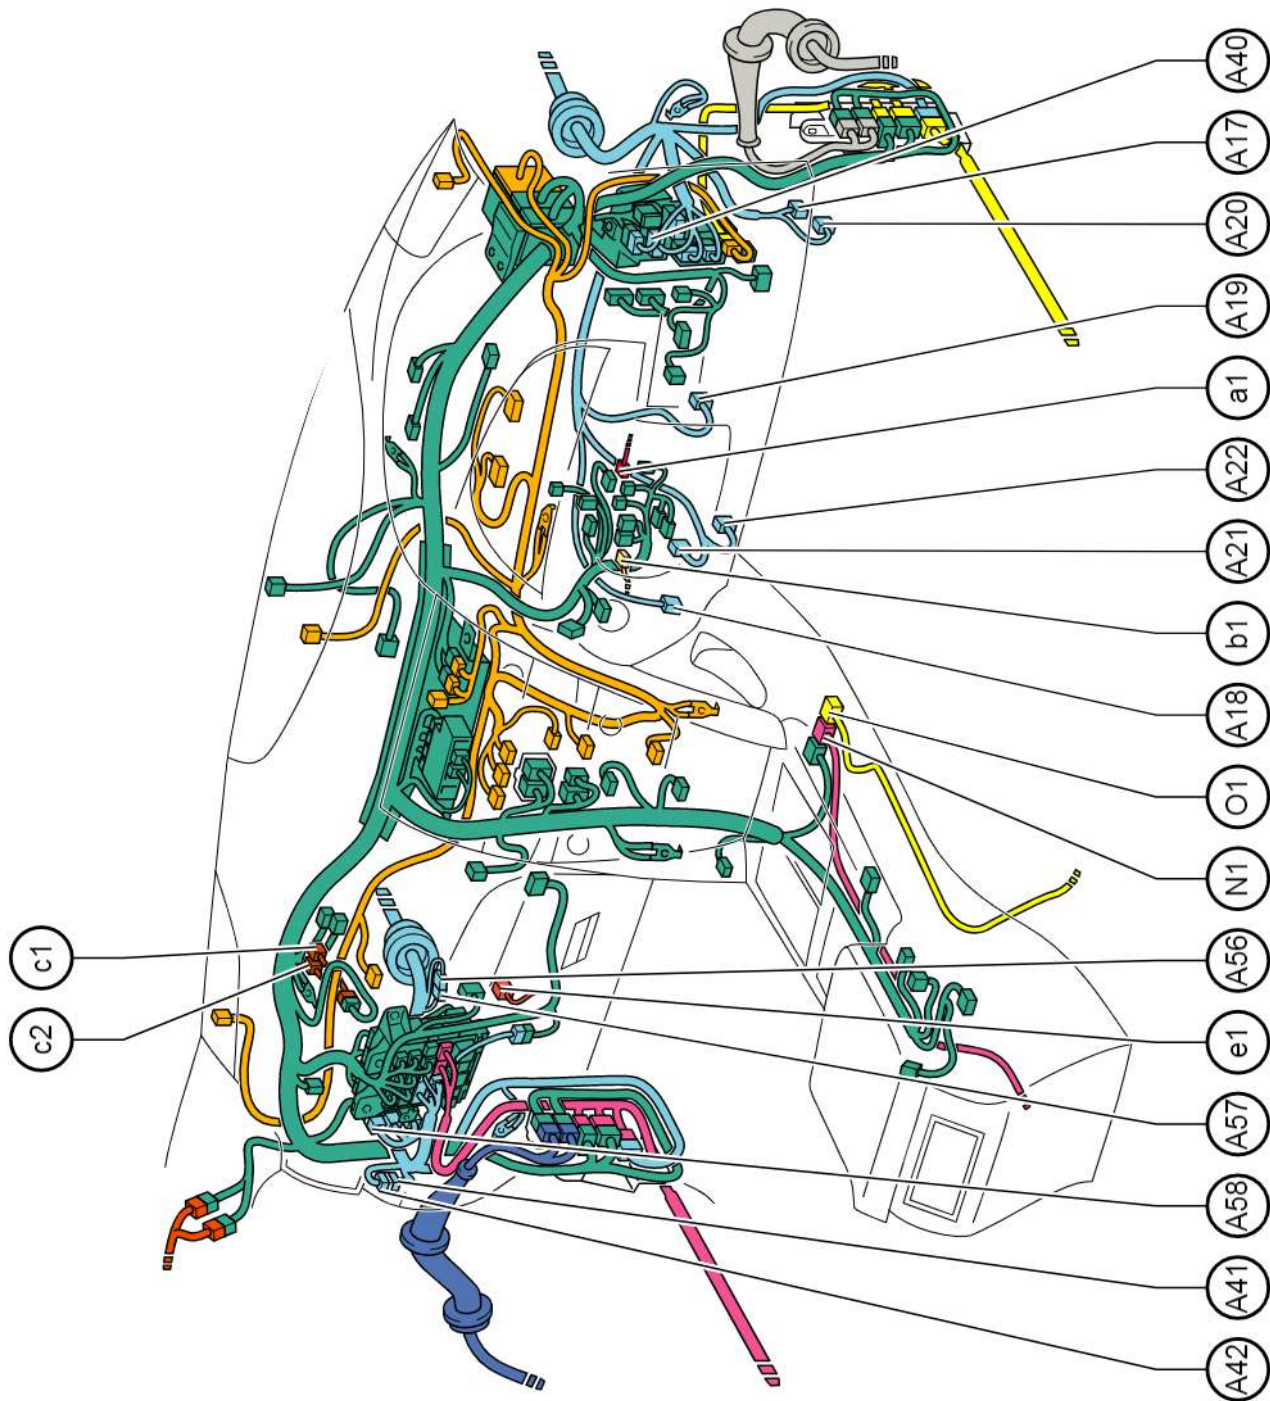


A	17	Accelerator Position Sensor
A	18	Parking Brake SW
A	19	Stop Lamp SW
A	20	Headlamp Leveling ECU
A	21	Cruise Control Clutch SW
A	22	Clutch Start SW
A	40	Junction Connector
A	41	Junction Connector
A	42	Junction Connector
A	56	Short Connector
A	57	Short Connector
A	58	Junction Connector
N	1	Airbag Sensor Assembly Center
O	1	Airbag Sensor Assembly Center
a	1	Spiral Cable , Steering Pad SW
b	1	Spiral Cable , Cruise Control SW
c	1	Airbag Squib (Front Passenger's Airbag Assembly)
c	2	Airbag Squib (Front Passenger's Airbag Assembly)
e	1	A/C Amplifier , A/C Blower Assembly

  
Position of Parts in Instrument Panel <RHD>

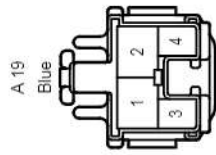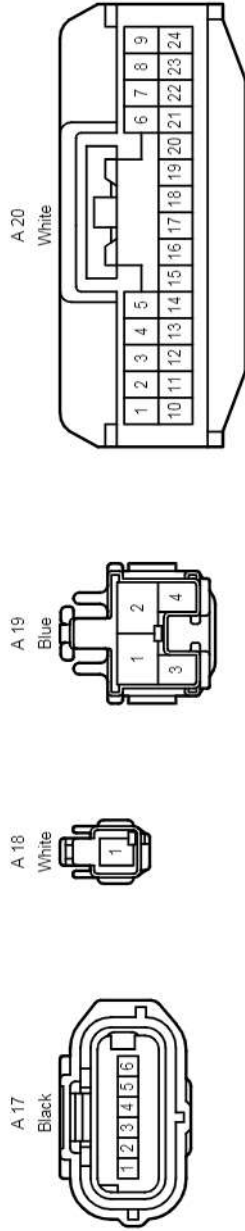


A 20
White

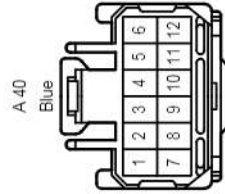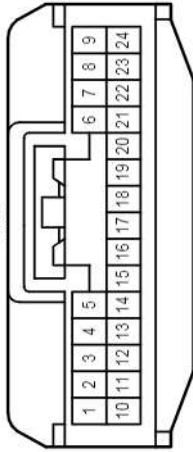    


A 41
White

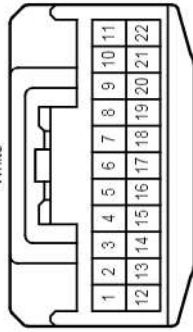 


A 42
White

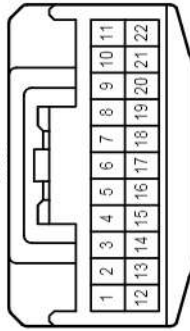 


A 56
White

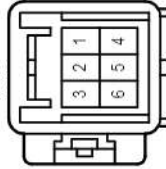 


A 57
White

 


A 58
Black

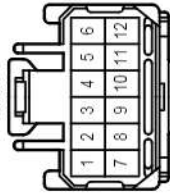 


N 1
Yellow

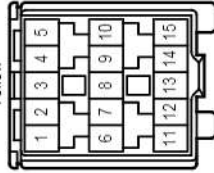 


O 1
Yellow

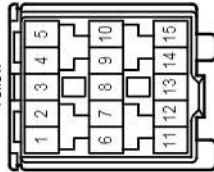 


a 1
White

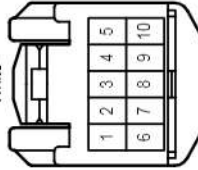 


b 1
White

 


c 1
Black

 


c 2
Orange


 


e 1
White


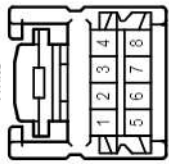 


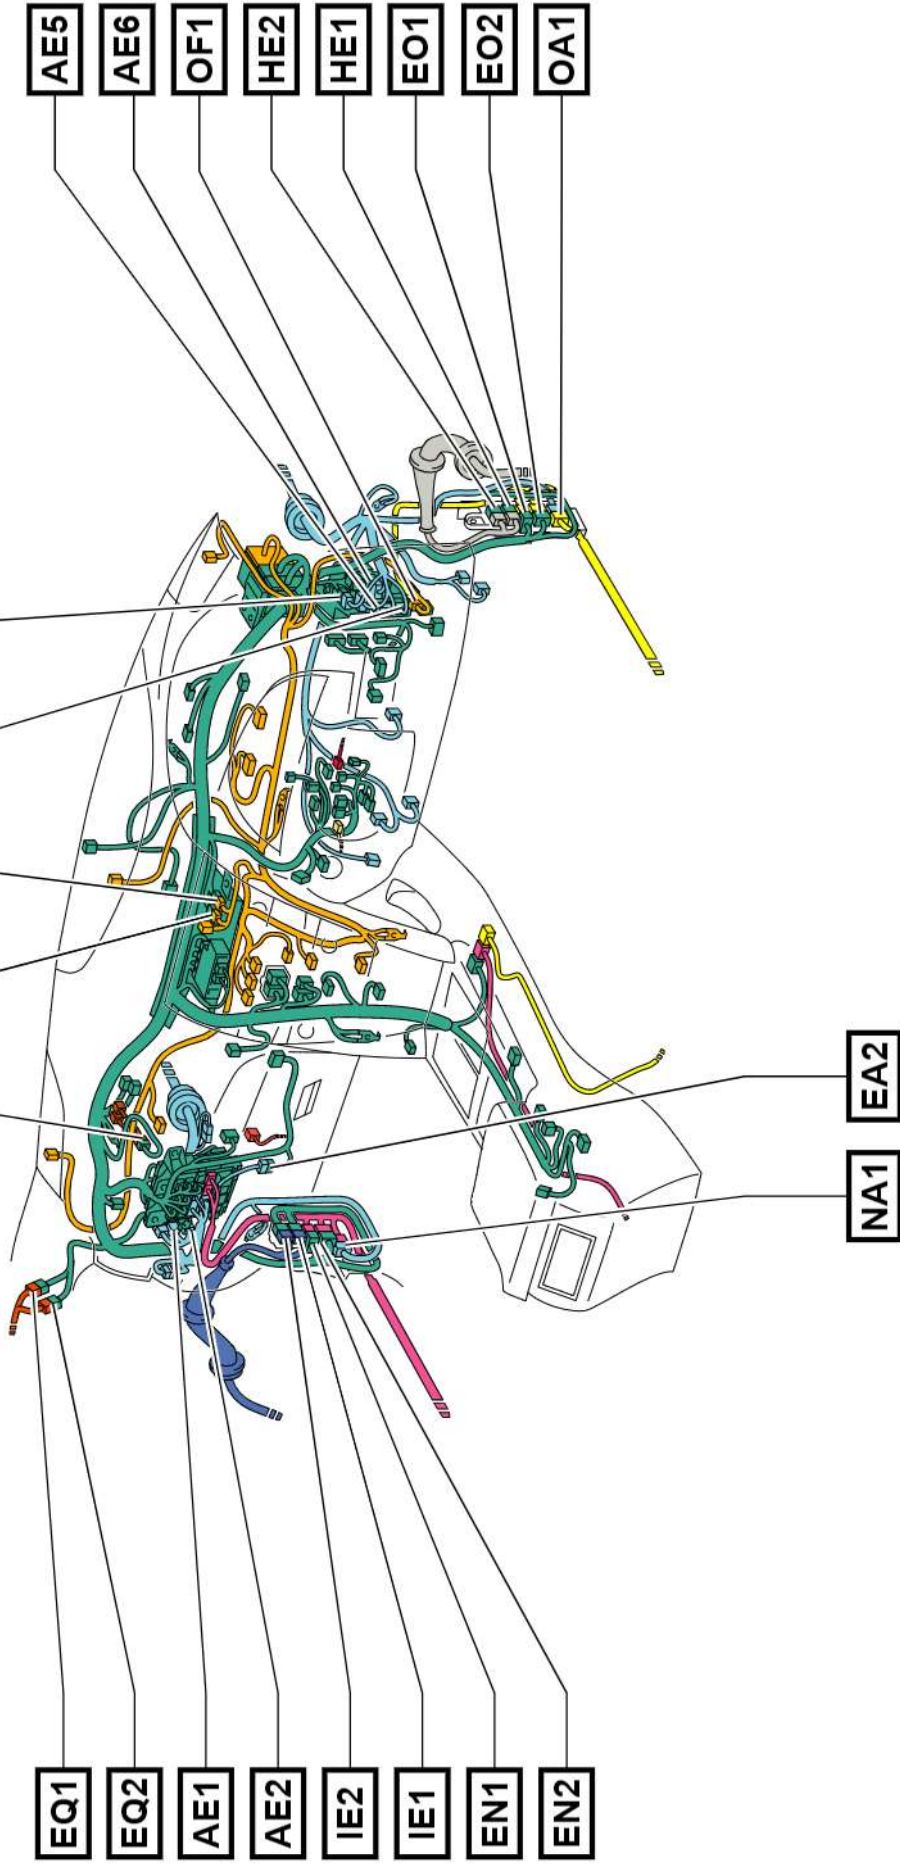 



AE1
White

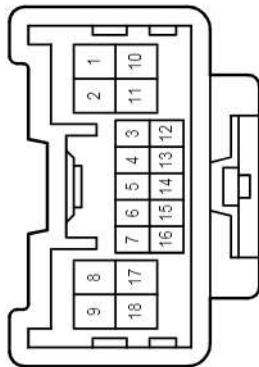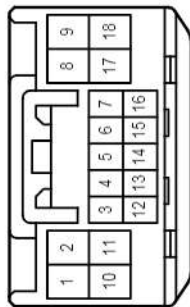  



AE2
Gray

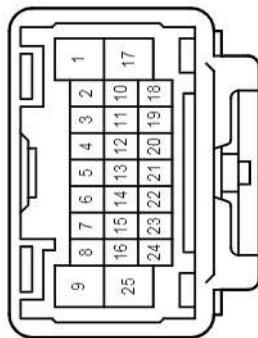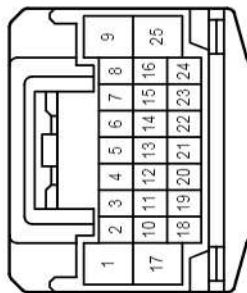  



AE4
Yellow

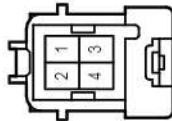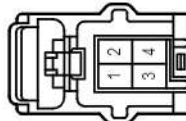  


AE5
White



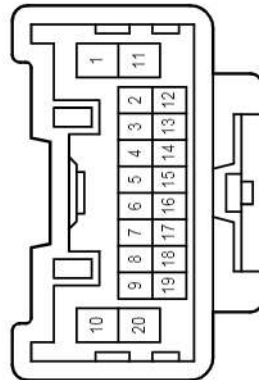 
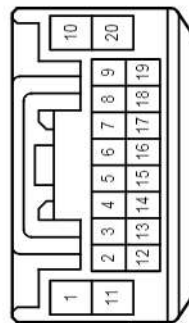 


AE6
Gray

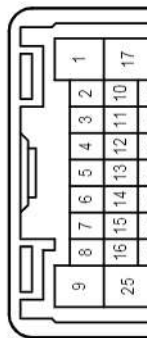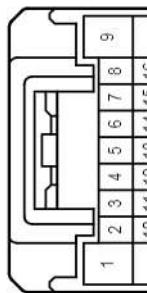  


AE7
White

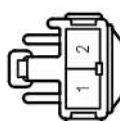 


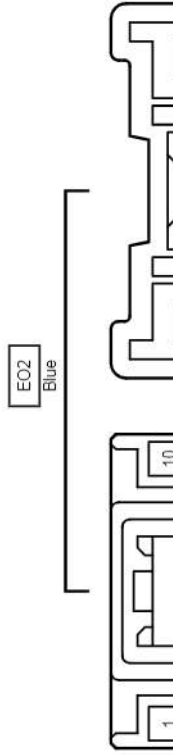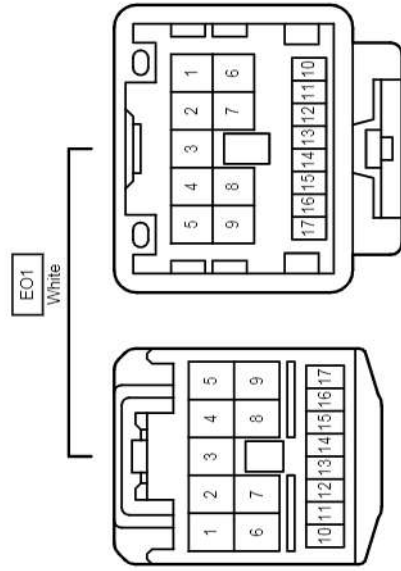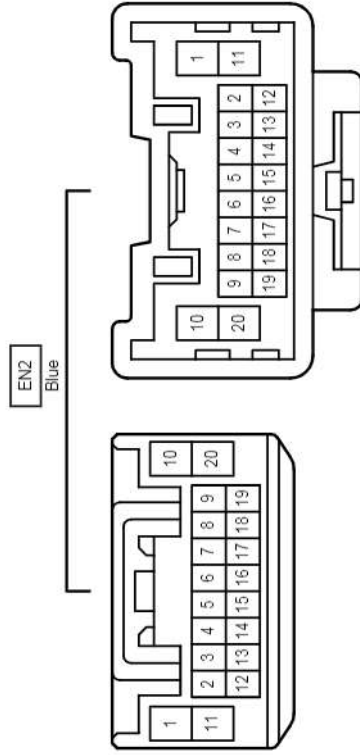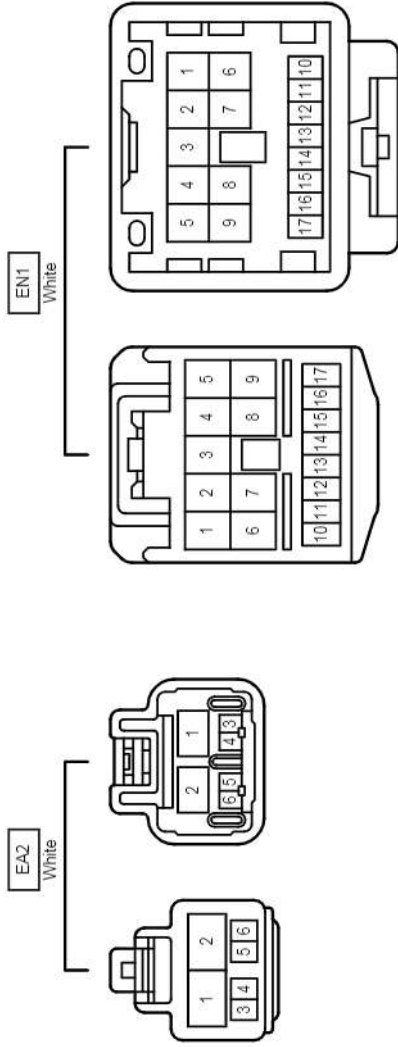    


EQ1
White

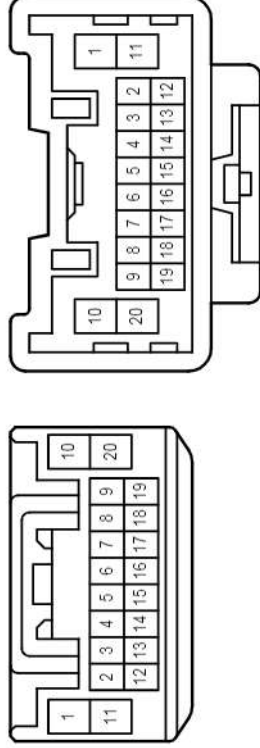 


EQ2
White

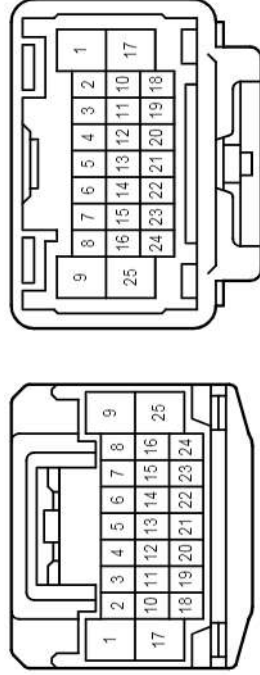 


Ec1
Yellow

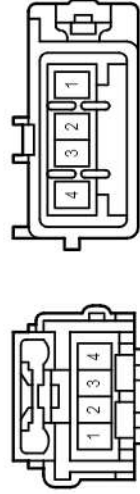 



FE1
Gray

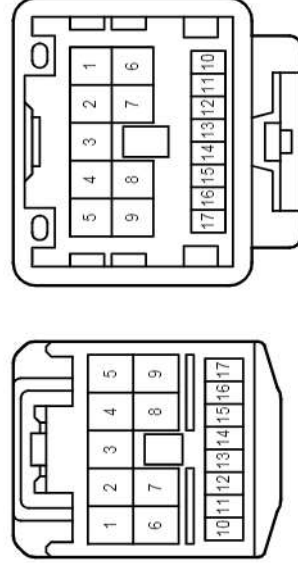 


FE2
Blue

 

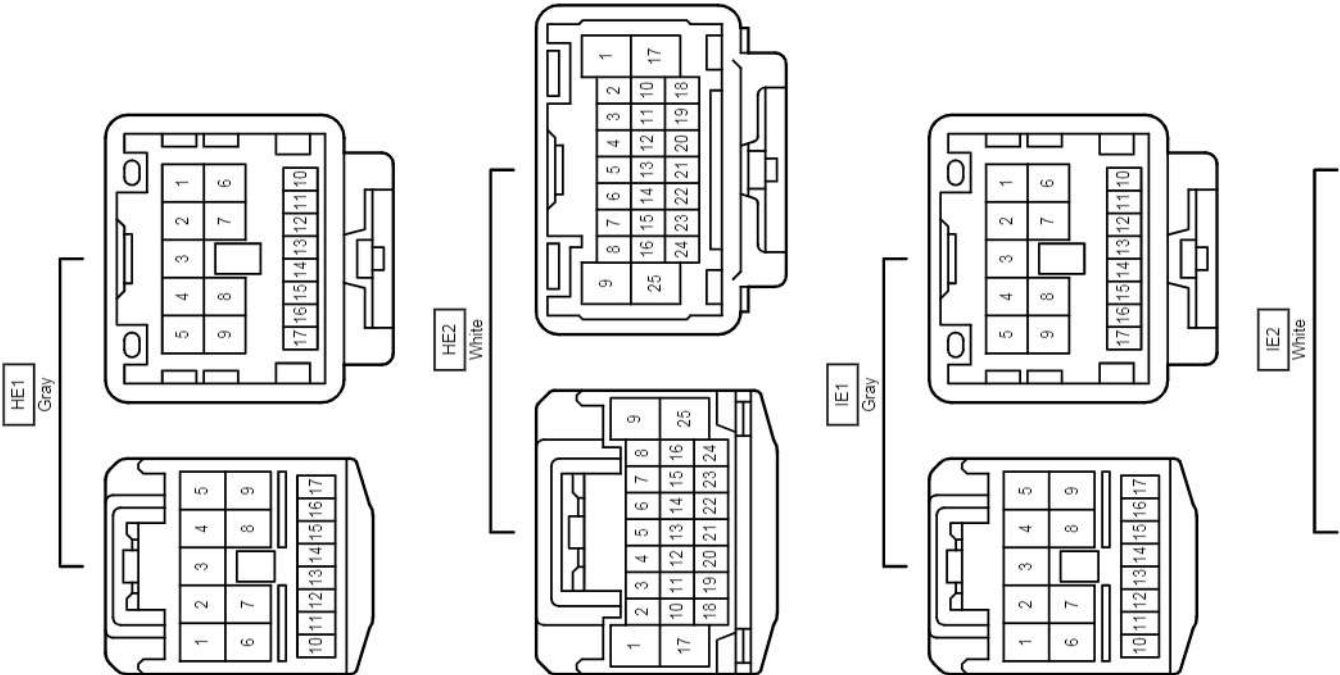 






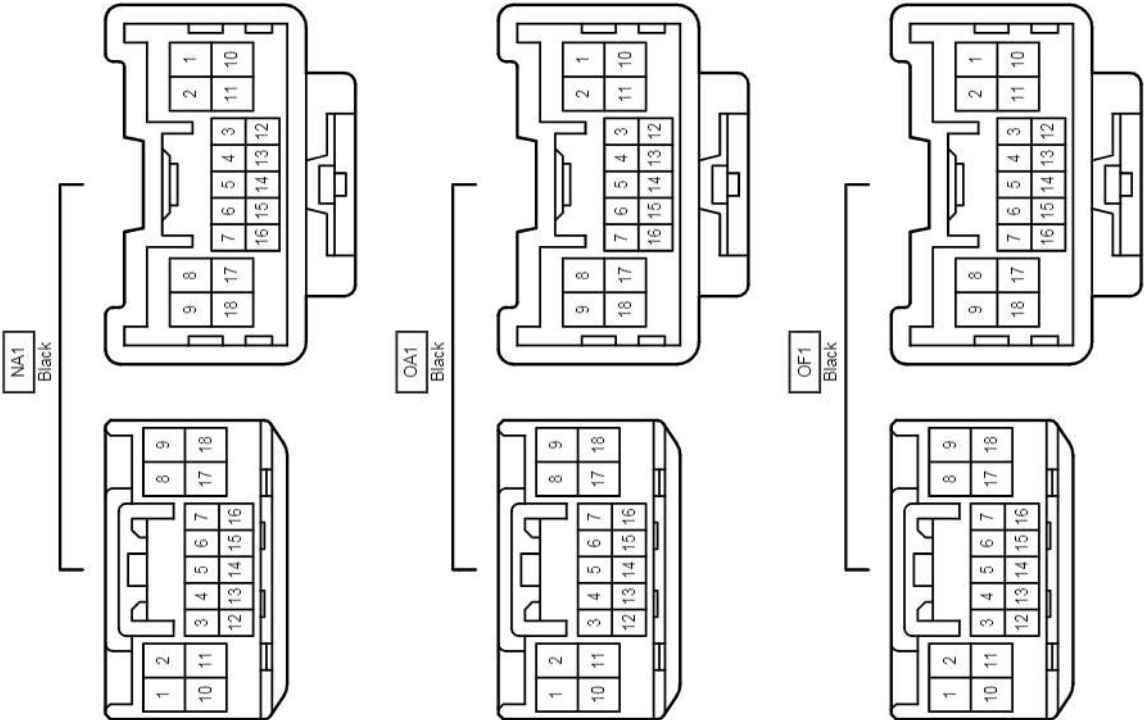 


 
Position of Parts in Seat <LHD w/o Power Seat>

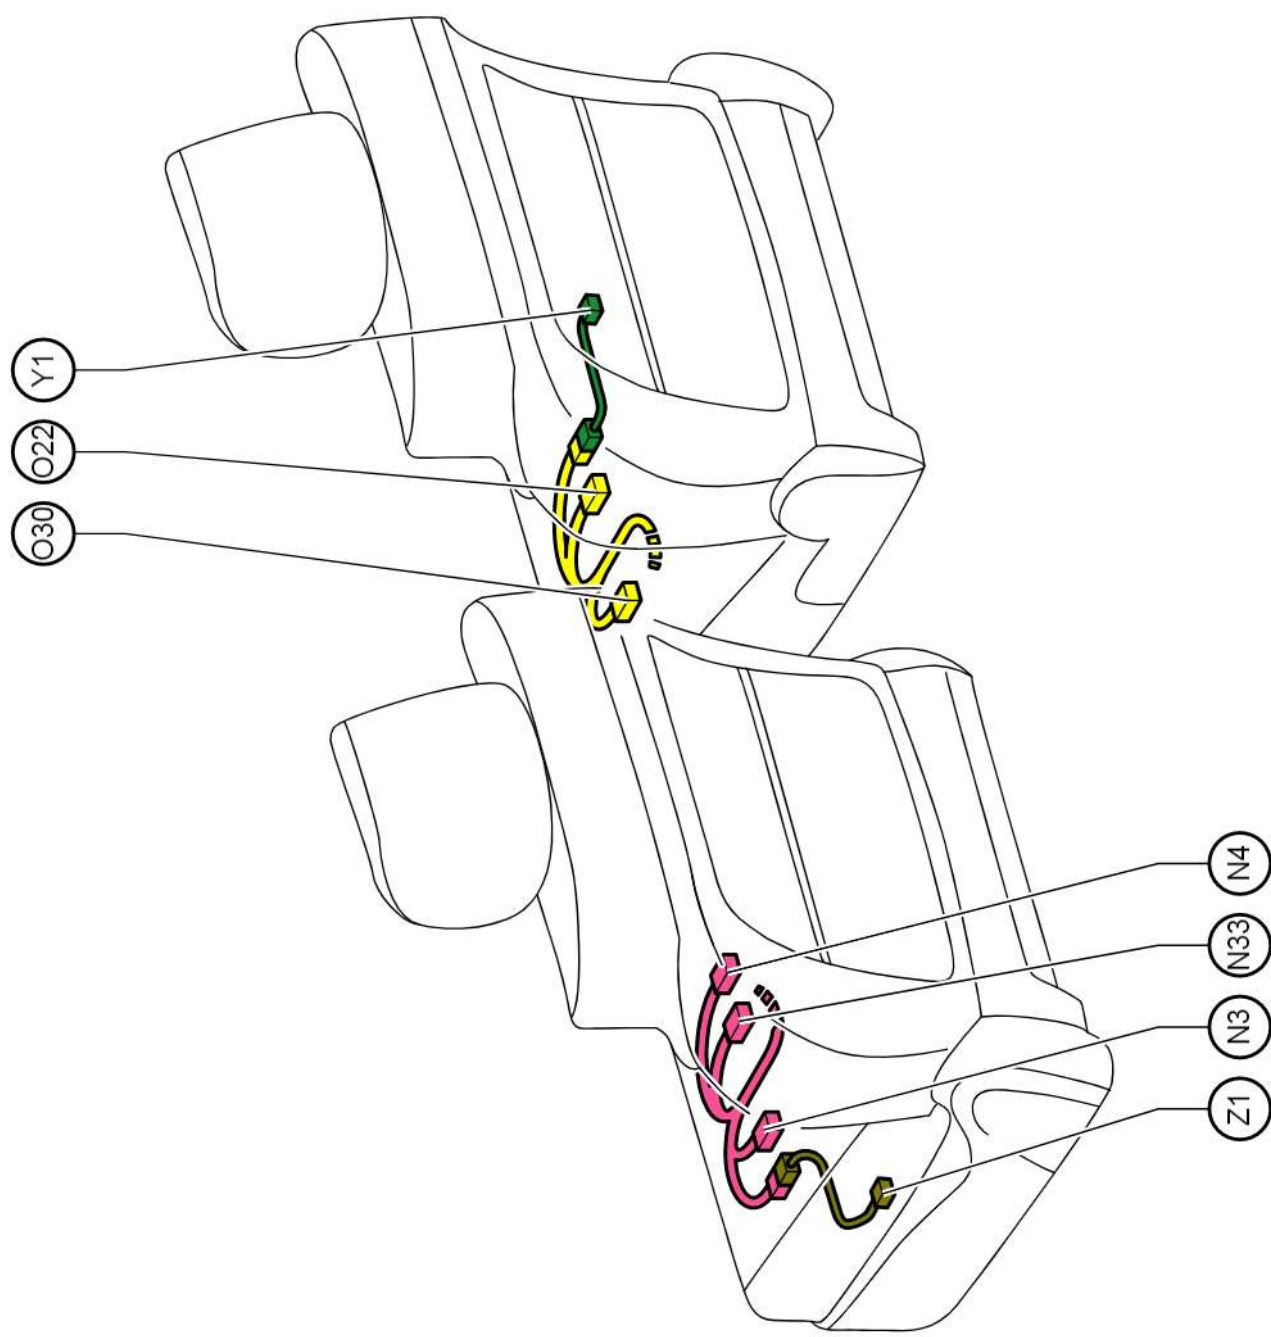


- N 3 Front Seat Inner Belt (Front LH)
- N 4 Front Seat Inner Belt (Front LH)
- N 33 Seat Heater (LH)
- O 22 Front Seat Inner Belt (Front RH)
- O 30 Seat Heater (RH)
- Y 1 Side Airbag Squib (RH)
- Z 1 Side Airbag Squib (LH)

        
Position of Parts in Seat <LHD w/o Power Seat>

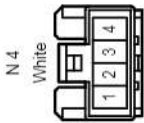

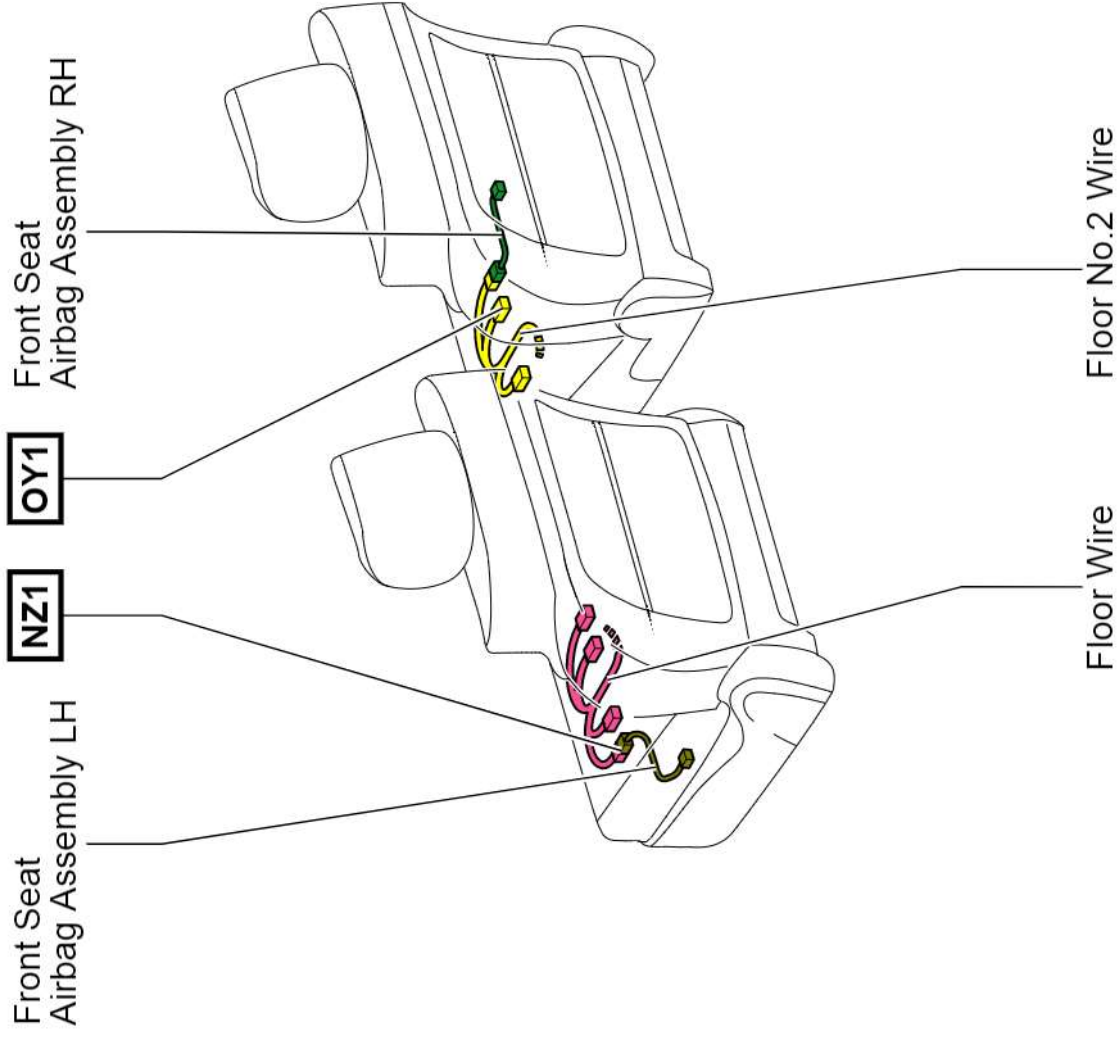



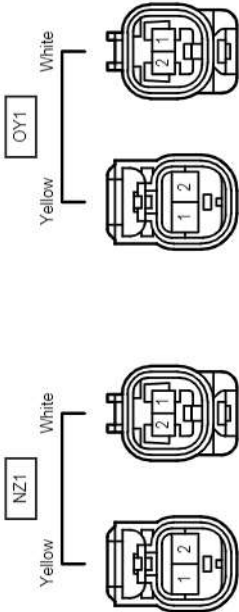


 Position of Parts in Seat <RHD w/o Power Seat>

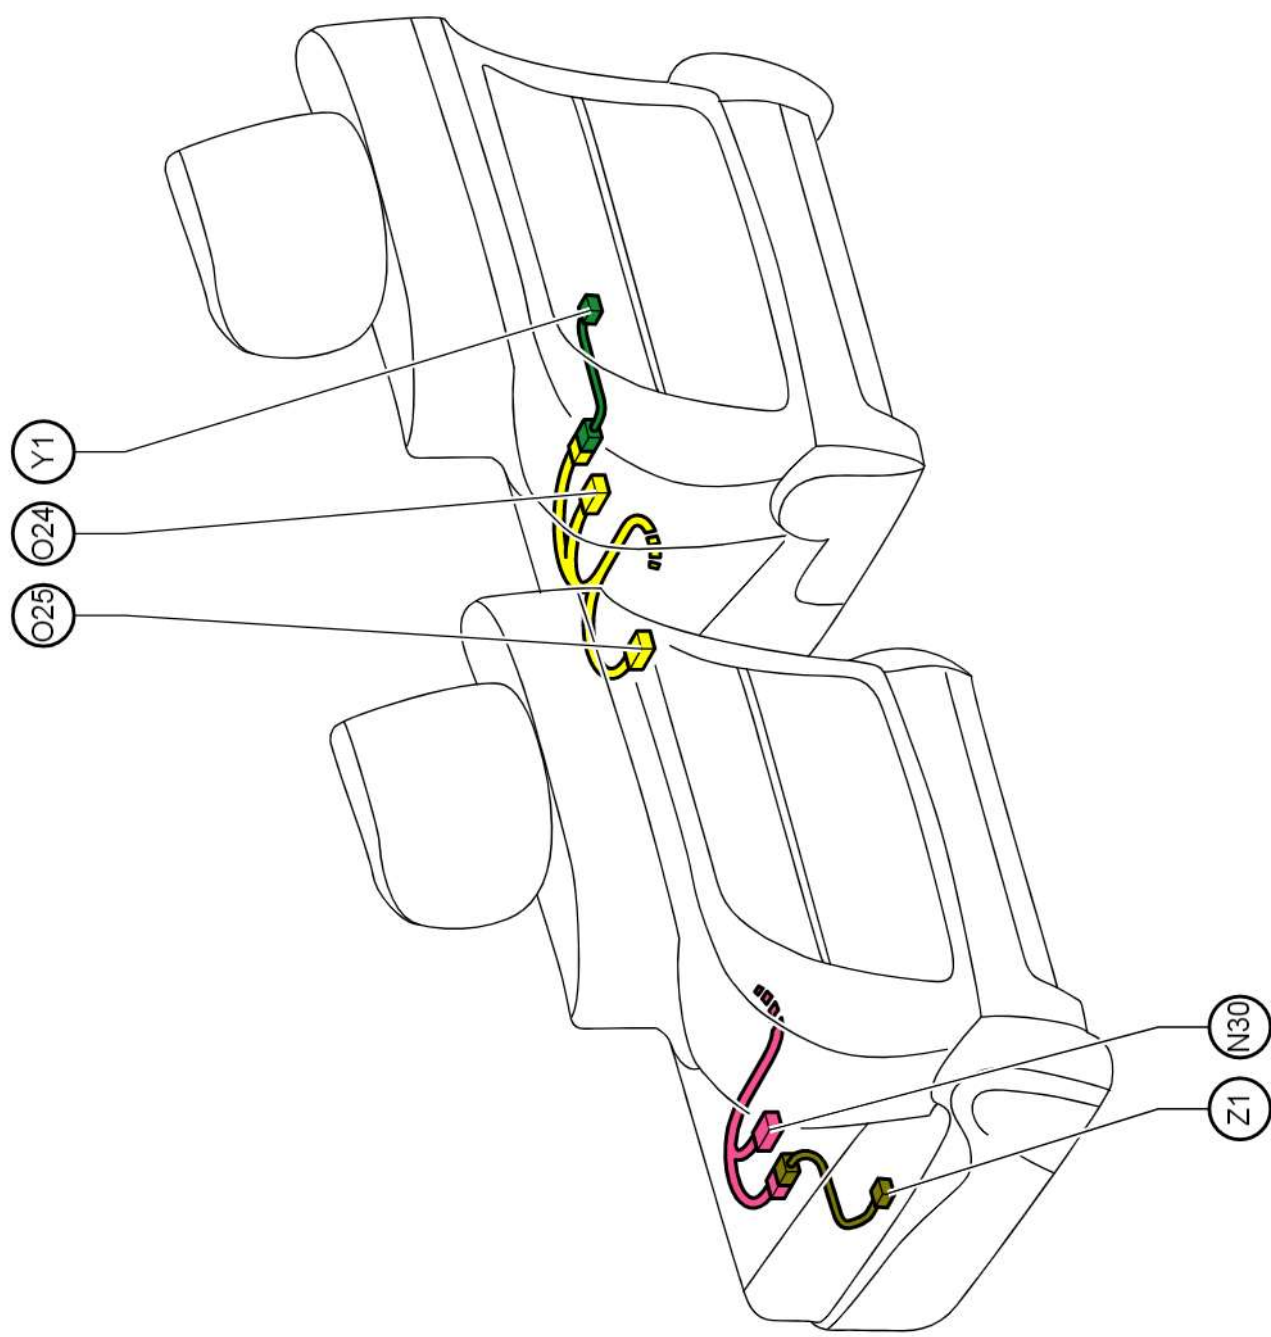



- N 30 Front Seat Inner Belt (Front LH)
- O 24 Front Seat Inner Belt (Front RH)
- O 25 Front Seat Inner Belt (Front RH)
- Y 1 Side Airbag Squib (RH)
- Z 1 Side Airbag Squib (LH)

   Position of Parts in Seat <RHD w/o Power Seat>

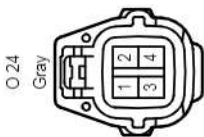


  Wire and Wire in Seat <RHD w/o Power Seat>

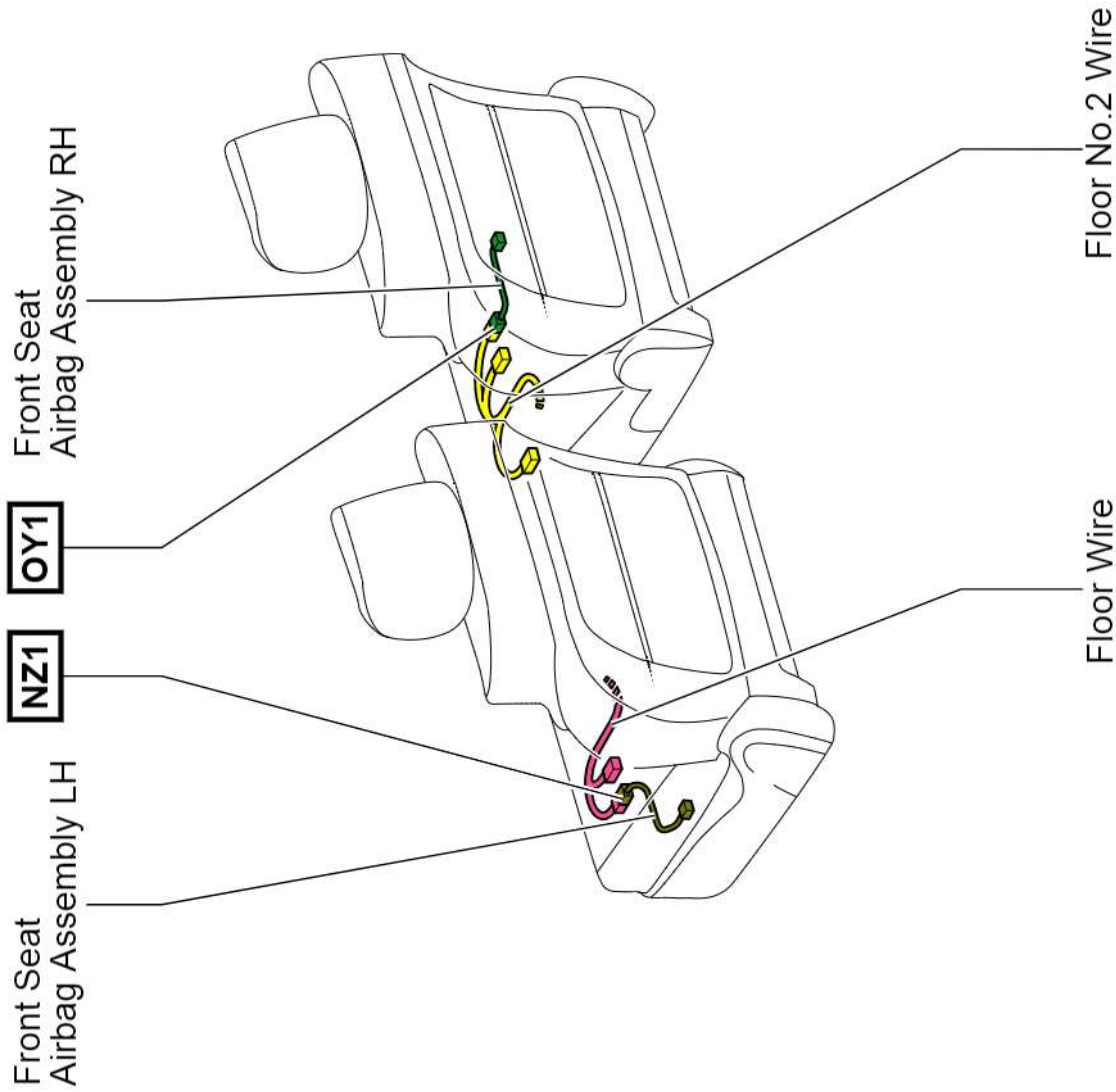

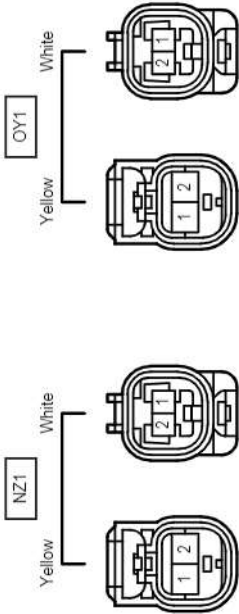




 
Position of Parts in Seat <LHD w/ Power Seat>

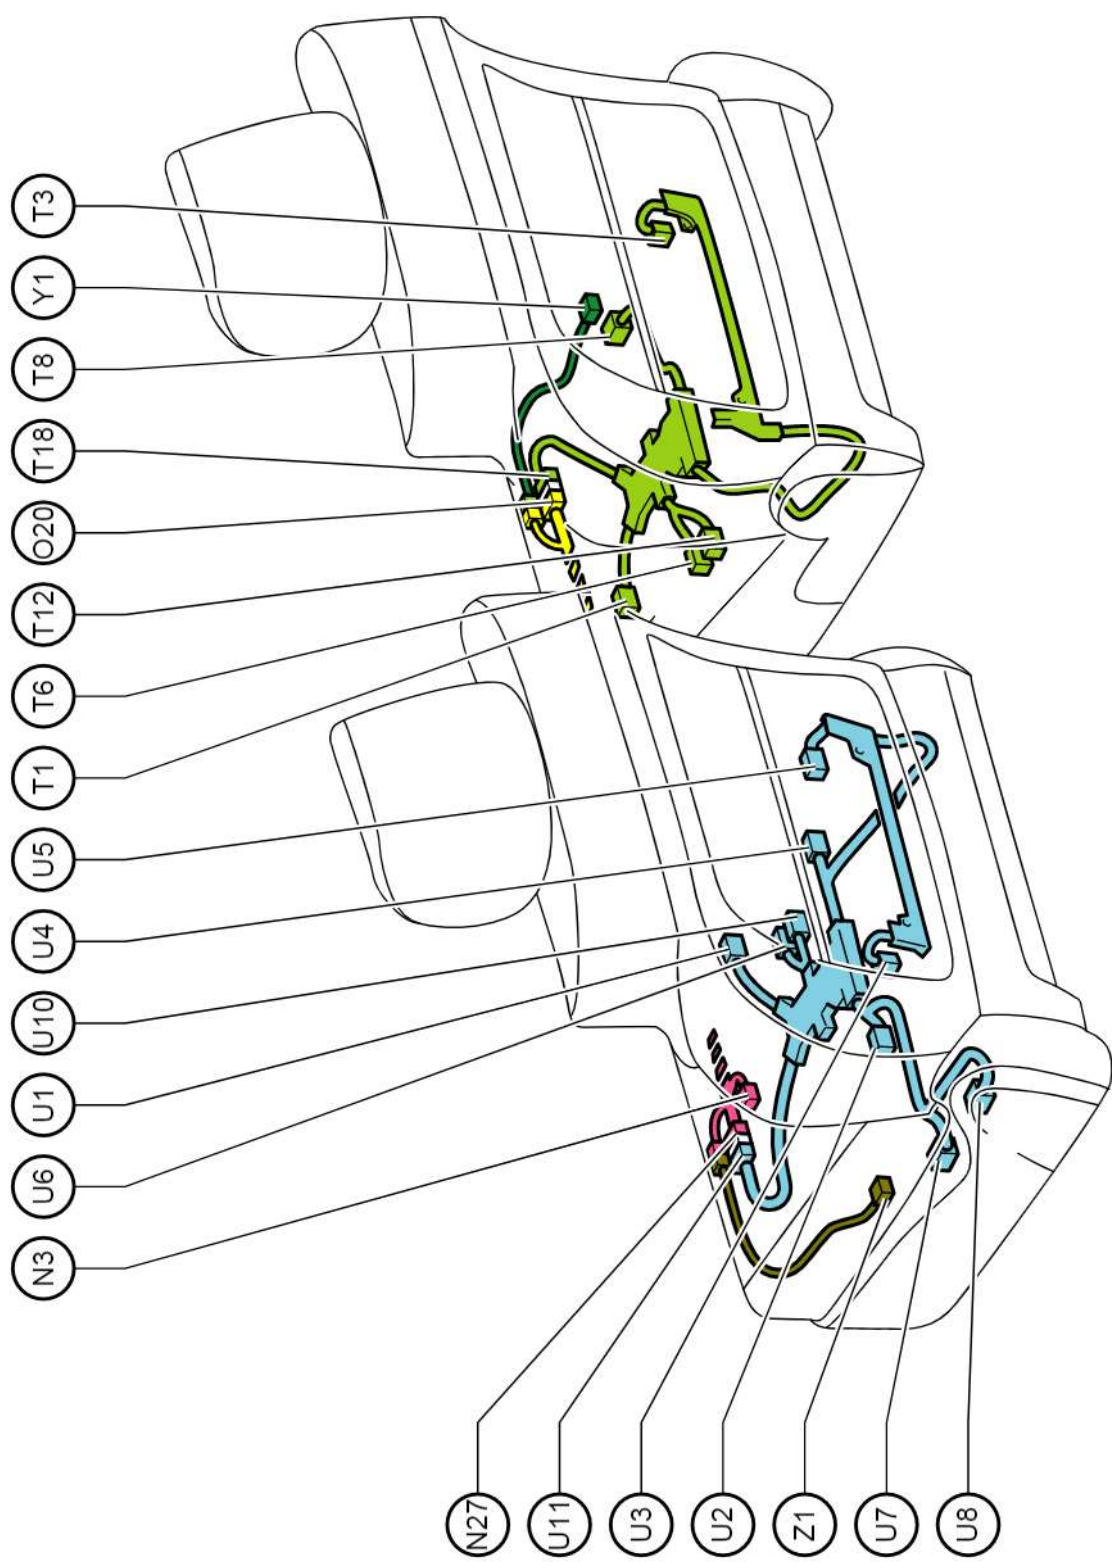



Position of Parts in Seat <LHD w/ Power Seat>

N	3	Front Seat Inner Belt (Front LH)
N	27	Junction Connector
O	20	Junction Connector
T	1	Power Seat Motor (Front RH Seat Slide Control)
T	3	Power Seat Motor (Front RH Seat Reclining Control)
T	6	Seat Heater (RH)
T	8	Power Seat SW (Front RH Seat)
T	12	Front Seat Inner Belt (Front RH)
T	18	Junction Connector
U	1	Power Seat Motor (Front LH Seat Slide Control)
U	2	Power Seat Motor (Front LH Seat Front Vertical Control)
U	3	Power Seat Motor (Front LH Seat Reclining Control)
U	4	Power Seat Motor (Front LH Seat Lifter Control)
U	5	Power Seat Motor (Front LH Seat Lumbar Support Control)
U	6	Seat Heater (LH)
U	7	Power Seat SW (Front LH Seat)
U	8	Power Seat SW (Front LH Seat Lumbar Support Control)
U	10	Front Seat Inner Belt (Front LH)
U	11	Junction Connector
Y	1	Side Airbag Squib (RH)
Z	1	Side Airbag Squib (LH)

      
Position of Parts in Seat <LHD w/ Power Seat>

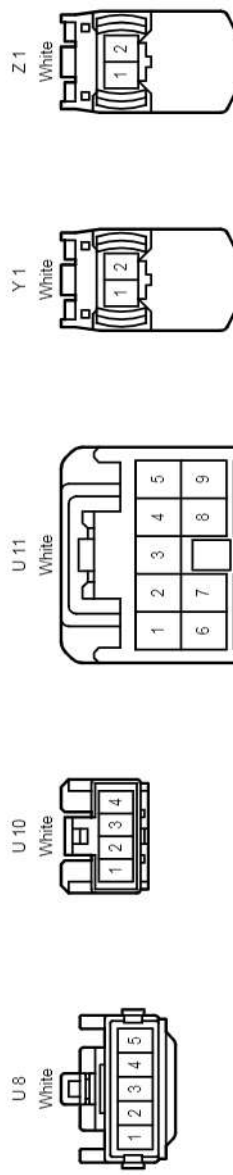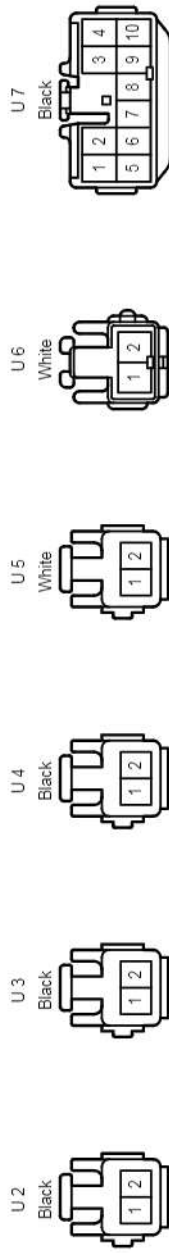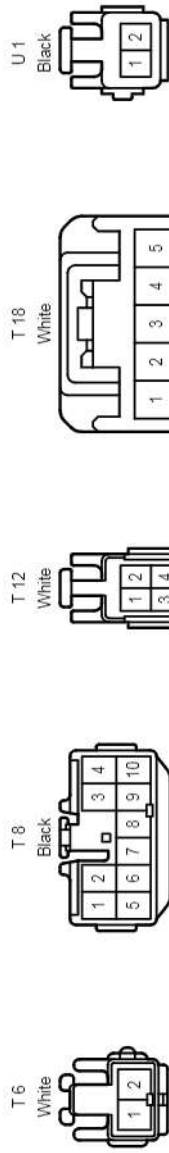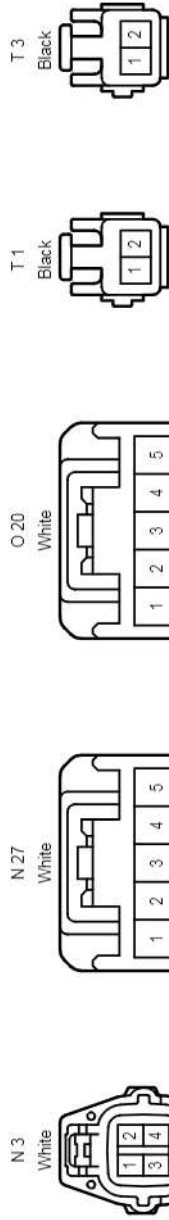

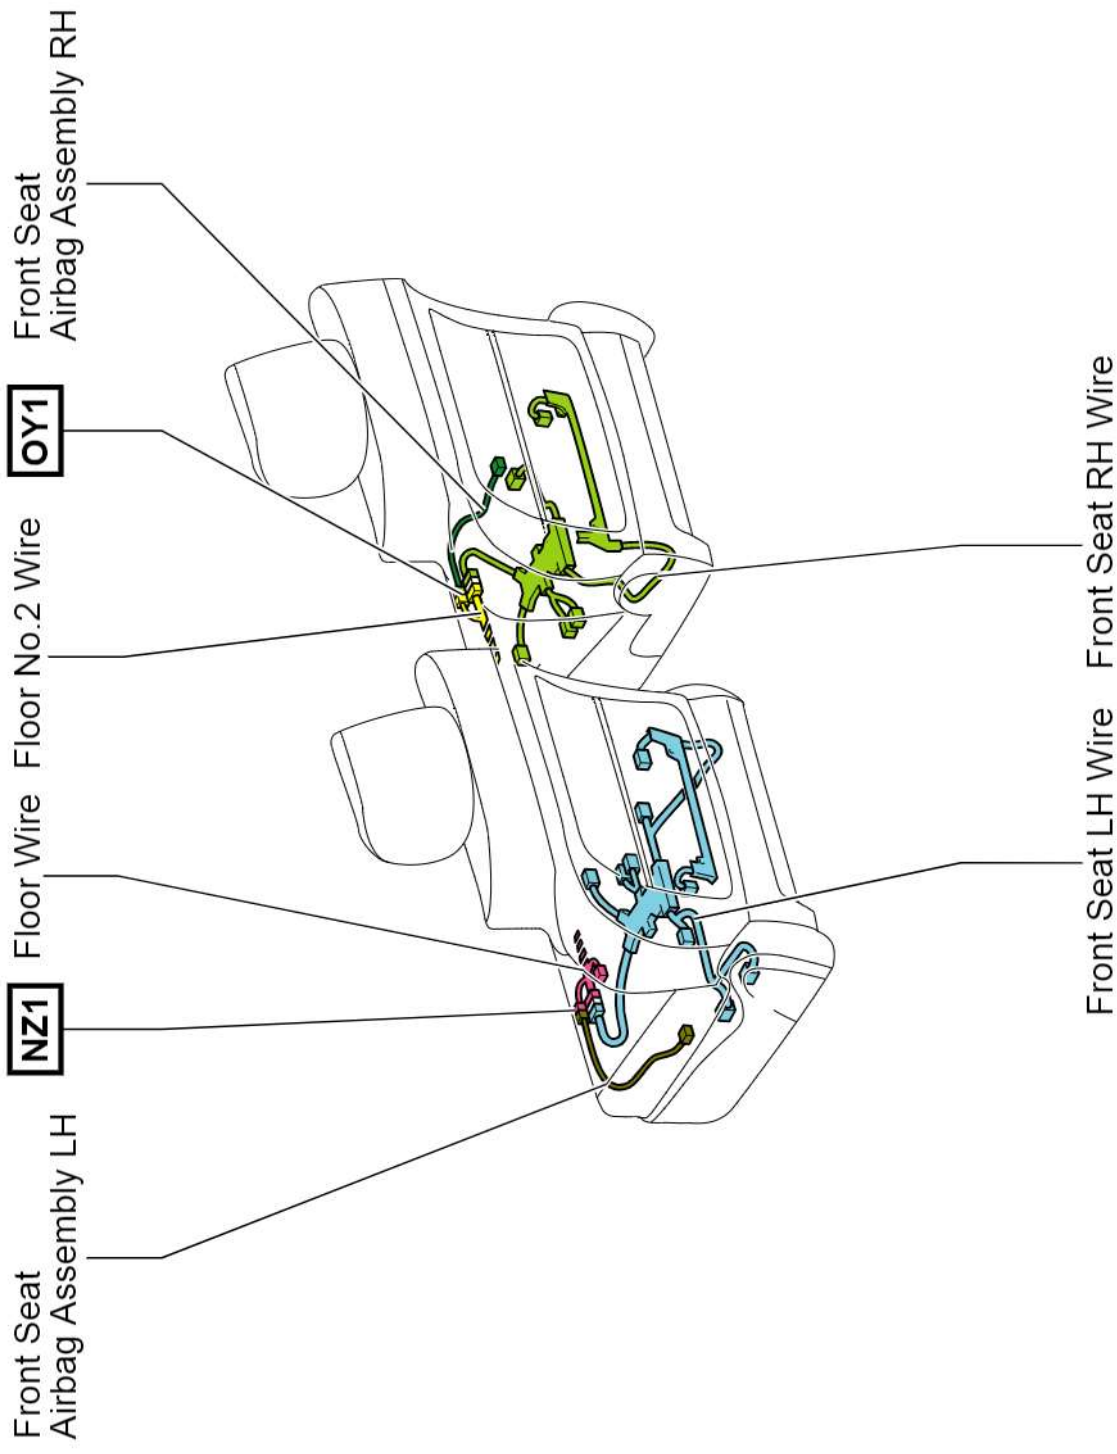

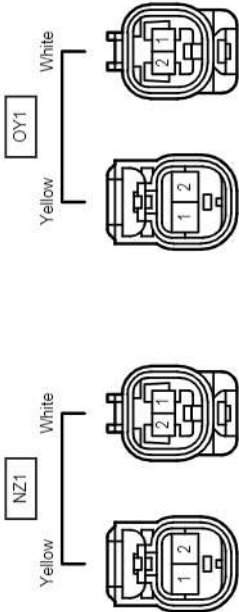

 Position of Parts in Seat <RHD w/ Power Seat>

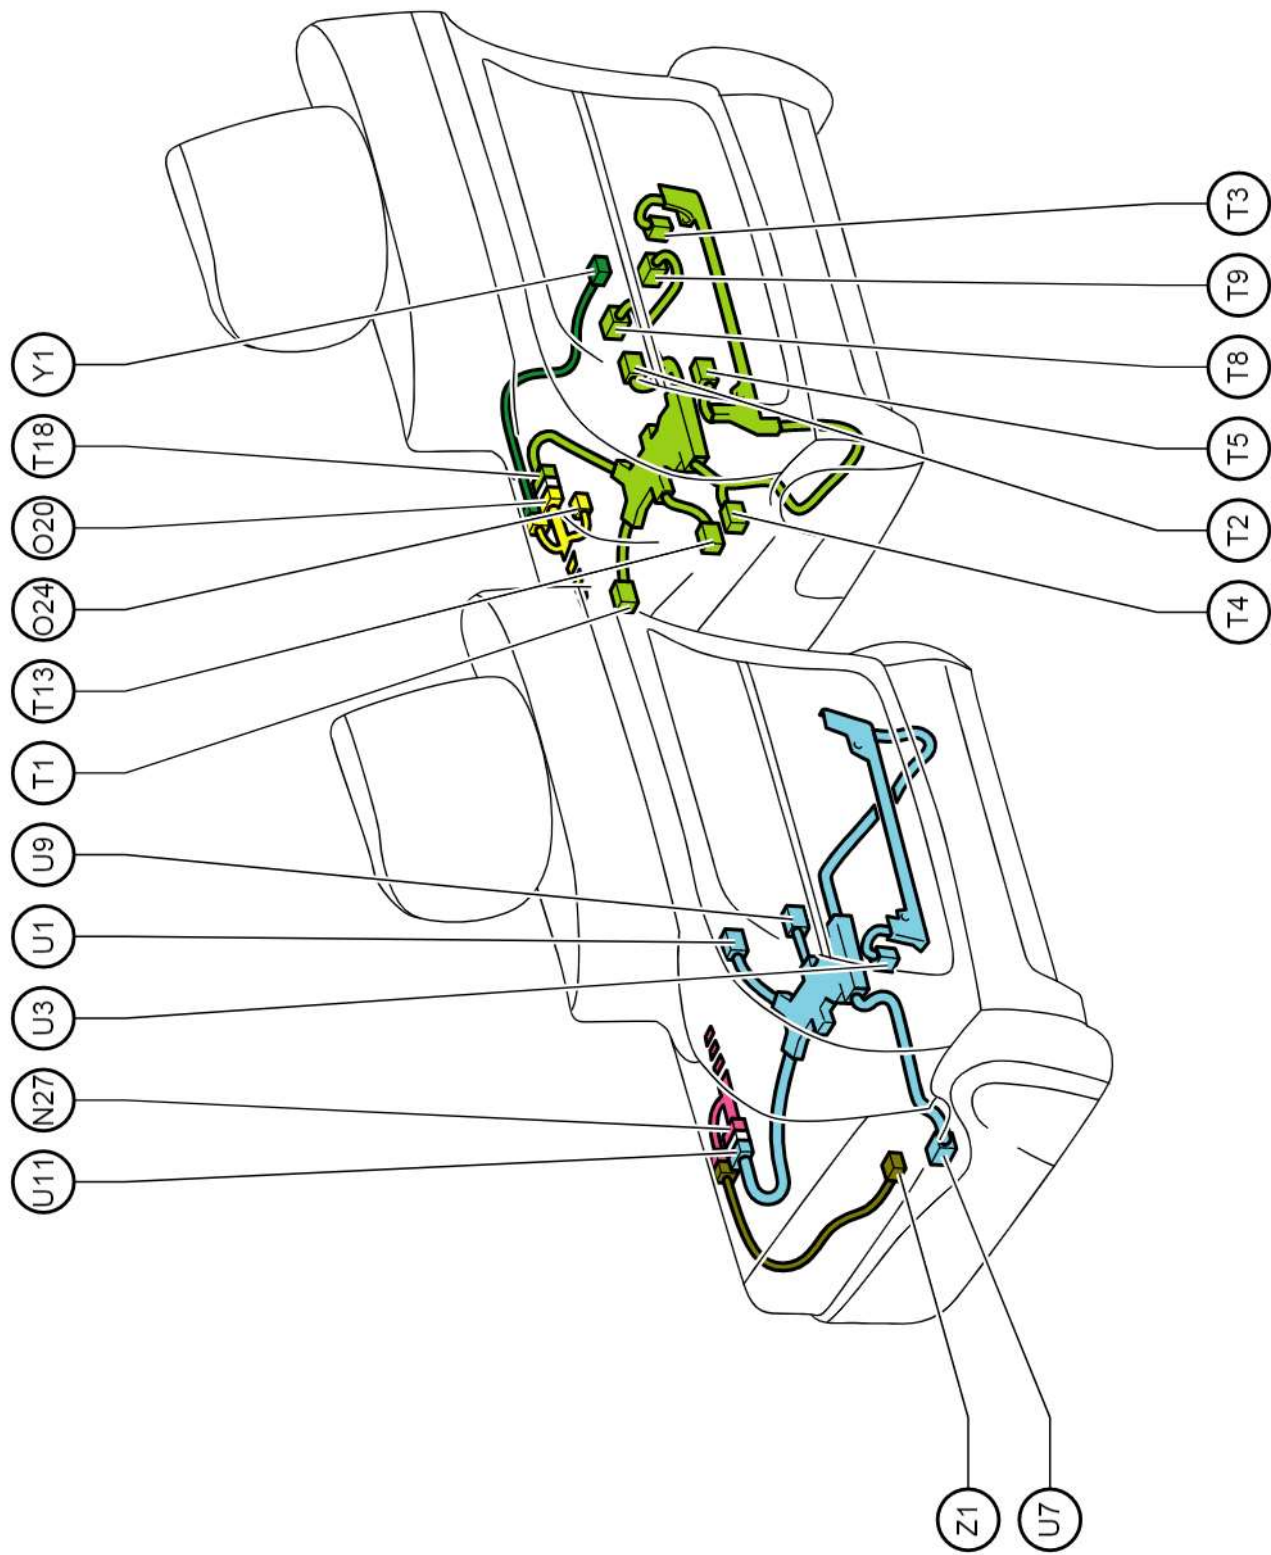

Position of Parts in Seat <RHD w/ Power Seat>

N 27	Junction Connector
O 20	Junction Connector
O 24	Front Seat Inner Belt (Front RH)
T 1	Power Seat Motor (Front RH Seat Slide Control)
T 2	Power Seat Motor (Front RH Seat Front Vertical Control)
T 3	Power Seat Motor (Front RH Seat Reclining Control)
T 4	Power Seat Motor (Front RH Seat Lifter Control)
T 5	Power Seat Motor (Front RH Seat Lumbar Support Control)
T 8	Power Seat SW (Front RH Seat)
T 9	Power Seat SW (Front RH Seat Lumbar Support Control)
T 13	Front Seat Inner Belt (Front RH)
T 18	Junction Connector
U 1	Power Seat Motor (Front LH Seat Slide Control)
U 3	Power Seat Motor (Front LH Seat Reclining Control)
U 7	Power Seat SW (Front LH Seat)
U 9	Front Seat Inner Belt (Front LH)
U 11	Junction Connector
Y 1	Side Airbag Squib (RH)
Z 1	Side Airbag Squib (LH)

Position of Parts in Seat <RHD w/ Power Seat>

