 


Pontiac Grand Prix 1993 fuse box diagram

Glove box fuse block

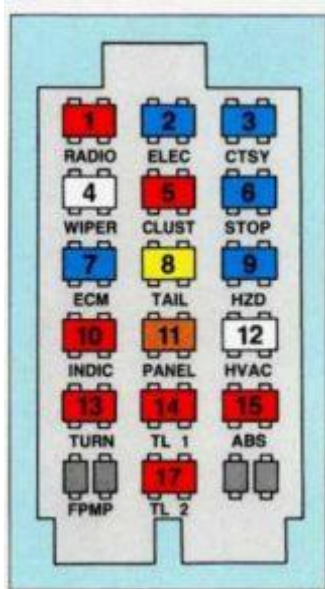


Pontiac Grand Prix – fuse box – glove box

Fuse	Ampere rating [A]	Usage
1	10	Radio & Clock; Steering Wheel Controls
2	15	Radio & Clock; Passive Restraint Lockout; Compass; Trip Computer (STE Model) ; Lamp Monitor Module (STE Model
3	15	Door Lock; Courtesy, Glove Box, Underhood, Trunk, Header Lights; Cigarette Lighter (Except STE); Door Handle (STE Model); Lighted Visor Mirror (STE Model); Lighted Inside Rearview Mirror (STE Model); Dome Light (STE Model)
4	25	Windshield Wiper & Washer

5	10	Temp Door Motor; HVAC & Rear Defogger; DRL Module (Canada); Instrument Cluster (Except STE); Compass; HUD Dimmer; Trip Computer (STE Model); Light Monitor Module (STE Model)
6	15	Brake Lights; ABS Control Module; Chime Module
7	15	ECM
8	20	Taillights; Radio & Clock; HVAC; Chime Module; DRL Module (Canada) ; Compass (Except STE) ; HUD Module; Lamp Monitor Module (STE Model); Fog Light Delay (STE Model)
9	15	Hazard Warning Flasher
10	10	Rear Defogger Timer Relay; Instrument Cluster; Chime Module; Cruise Control; DRL Module (Canada); Lamp Driver Module (Except STE) ; ABS Lamp Driver (STE Model)
11	5	Instrument Panel, Console, Switch Lights
12	25	Blower Motor, SOL Bo
13	10	Turn Signals/Flasher
14	10	Side Marker, Forward Park Lights (STE Model)
15	10	ABS Control Module
16	—	Not Used

17	10	Taillights (STE Model)
18	—	Not Used

 Component Center

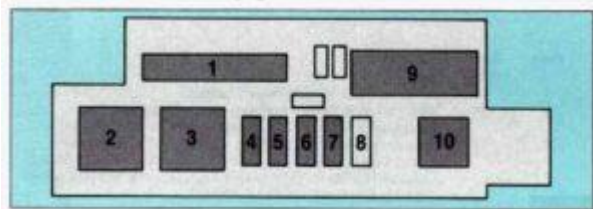


Pontiac Grand Prix – fuse box –

component center

Fuses	Ampere rating [A]	Usage
1		Defogger Timer Relay
2		Air Conditioner Blower Relay (HI)
3		Air Conditioner Blower Relay (LO)
4	30	Rear Defogger and HVAC Circuit Breaker
5	30	Power Accessories Circuit Breaker
6	30	Power Windows and Sunroof Circuit Breaker
7	20	Headlight Circuit Breaker
8	—	Not used
9		Chime Module

10		Hazard Flasher
----	--	----------------

 Passenger Side Underhood Electrical Center

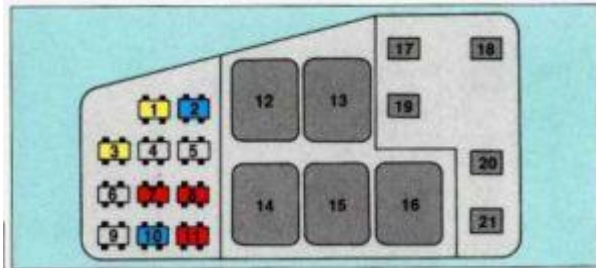

Pontiac Grand Prix – fuse box – engine compartment (passenger's side)

Fuse	Ampere rating [A]	Usage
1	20	AIR Pump (3.4L Manual)
2	15	Trunk Release, Back-up Lights (Auto)
3	20	ECM; Fuel Pump
4		Not Used
5		Not Used
6		Not Used
7	10	Direct Ignition System
8	10	Fuel Injectors
9		Not Used


10	15	A/C Coil, Secondary Cooling Fan, Generator, Digital EGR, Purge Canister, Back-up Lights (3.4L Manual)
11	10	Primary Cooling Fan (3.1L); TCC; AIR Pump (3.4L Manual)

Relay	Usage
12	Fuel Pump
13	AIR Pump (3.4L
14	Secondary Cooling Fan
15	Primary Cooling Fan
16	A/C Clutch Coil

Fusible element	Ampere rating [A]	Usage
17	60	Starter Solenoid
18	30	Cooling Fan (3.1L)
	60	Cooling Fan (3.4L)
19	60	Blower Motor

20	60	Cooling Fan
21	30	Fuse Block

 Driver Side Underhood Electrical center

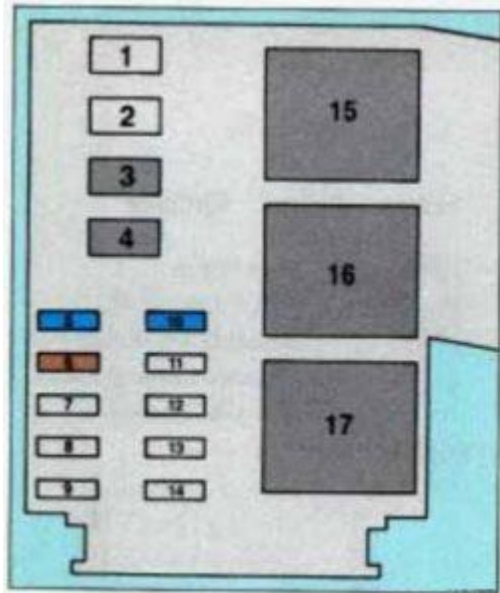

Pontiac Grand Prix – fuse box – engine

compartment (driver's side)

Fuse	Ampere rating [A]	Usage
1	—	Not Used
2	—	Not Used
3	60	ABS Controller
4	50	Exterior Lights
5	15	Horns
6	5	ABS

7	—	Not Used
8	—	Not Used
9	—	Not Used
10	15	Fog Lights
11	—	Not Used
12	—	Not Used
13	—	Not Used
14	—	Not Used

Relay	Usage
15	Horns
16	Fog Lights
17	ABS