

EyeSight System

WIRING SYSTEM


19.EyeSight System

A: WIRING DIAGRAM

1. NON-TURBO MODEL

1a

1a

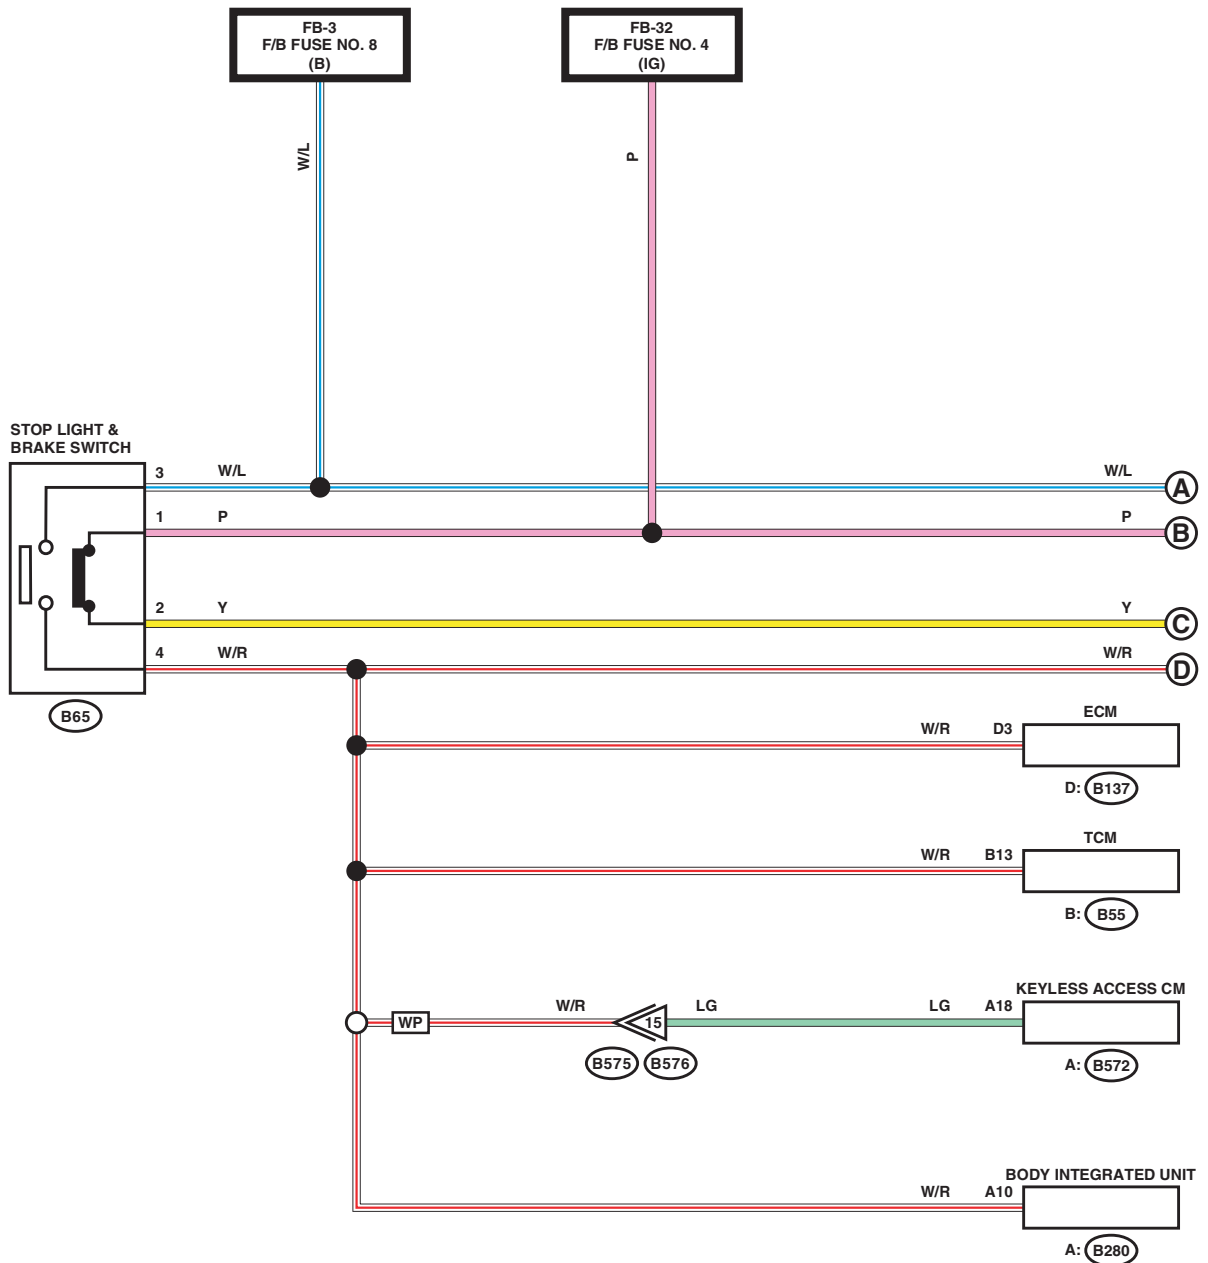

WP : WITH PUSH BUTTON START


WI-40809

EyeSight System

WIRING SYSTEM

1b


1b

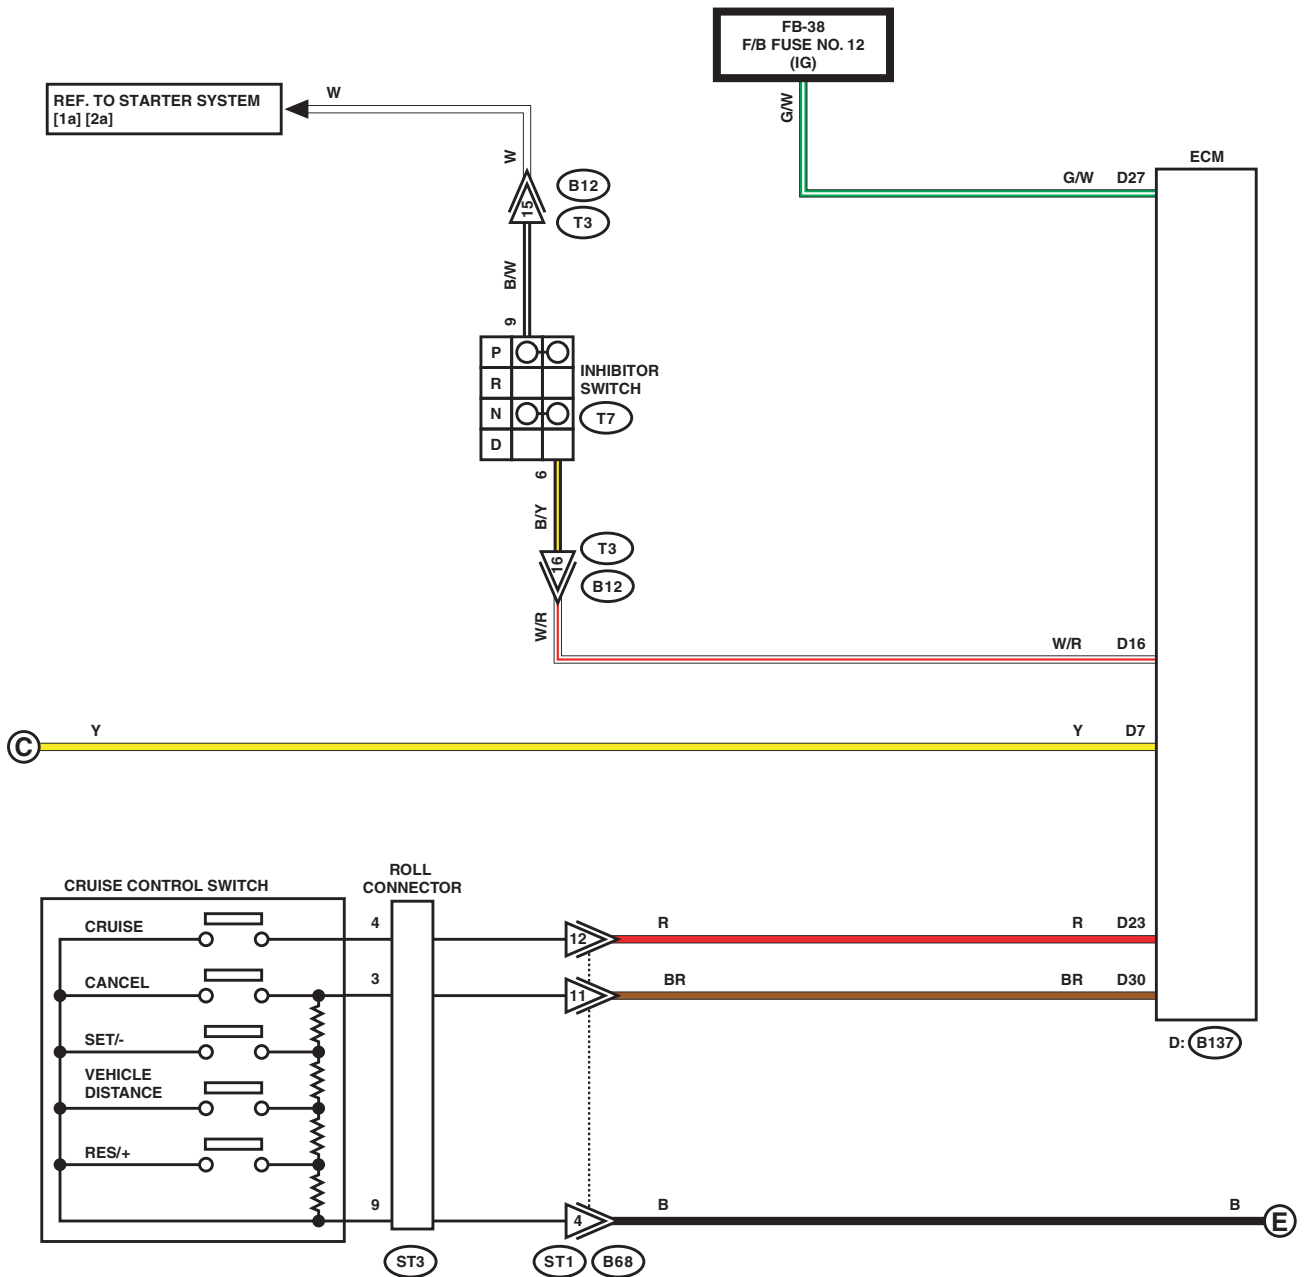

WI-40810

EyeSight System

WIRING SYSTEM

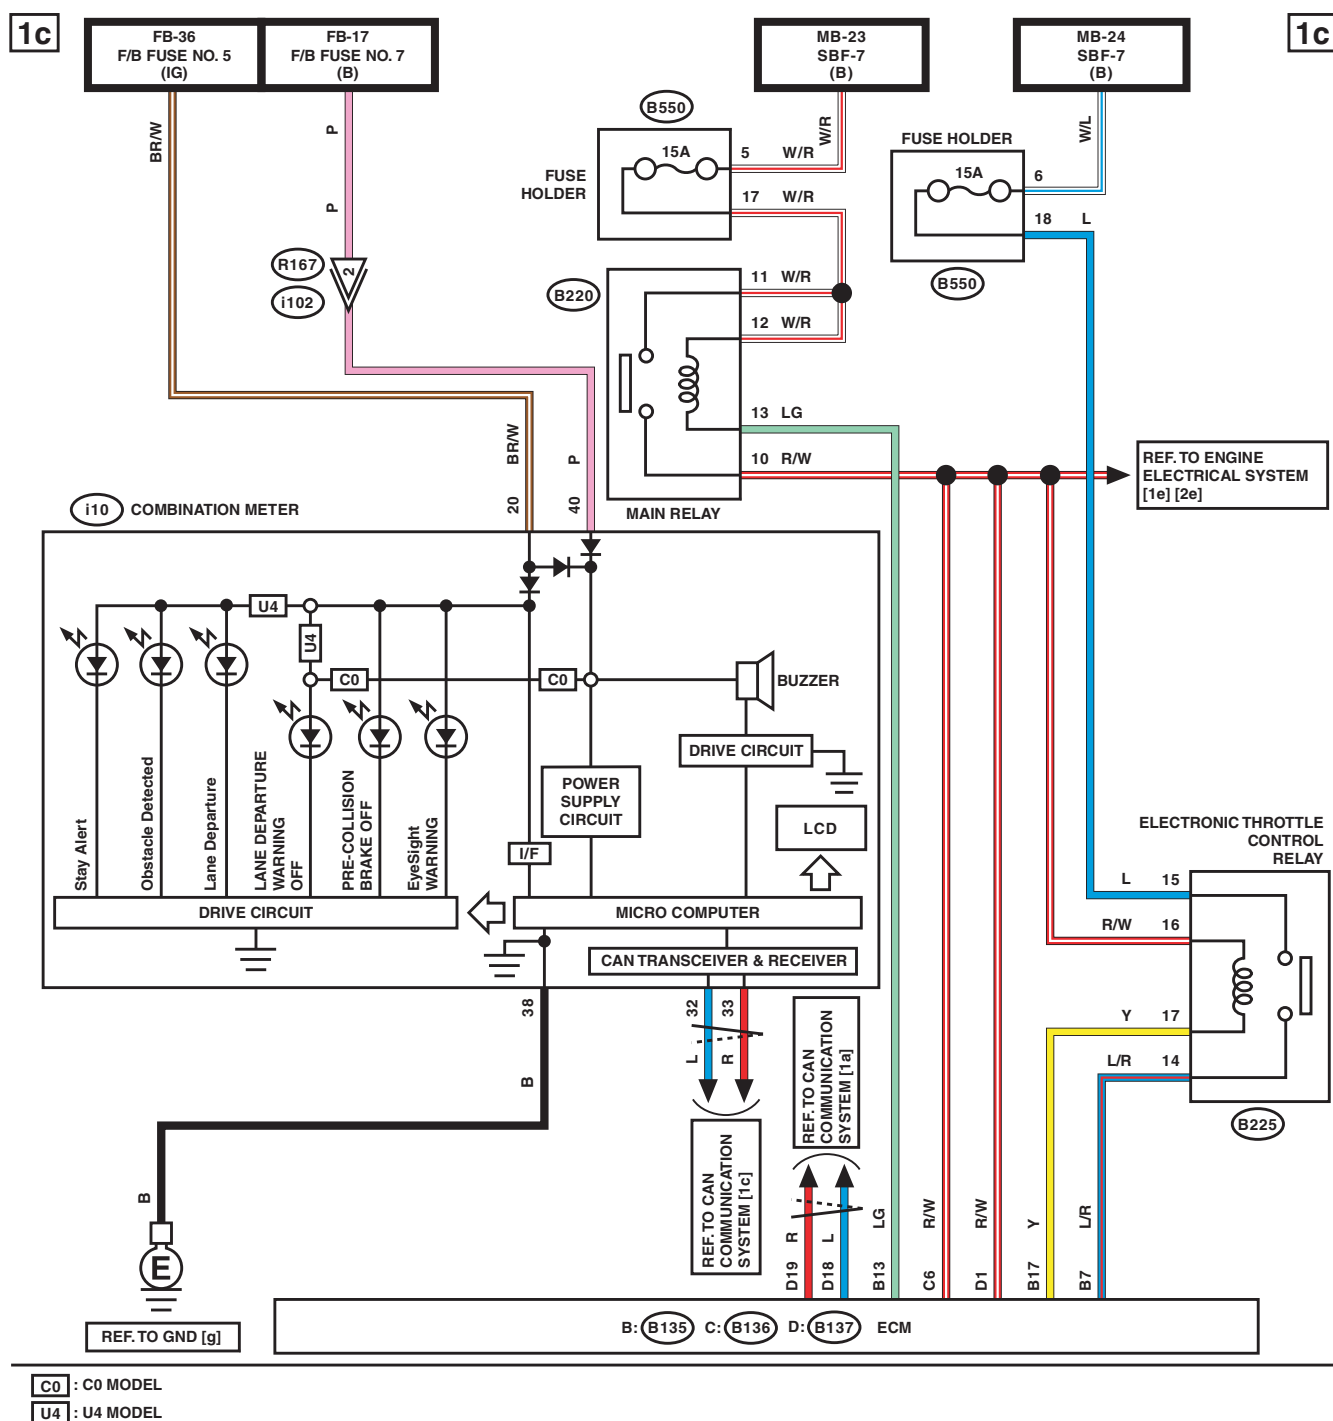


WI-40811

EyeSight System

WIRING SYSTEM

1d

1d

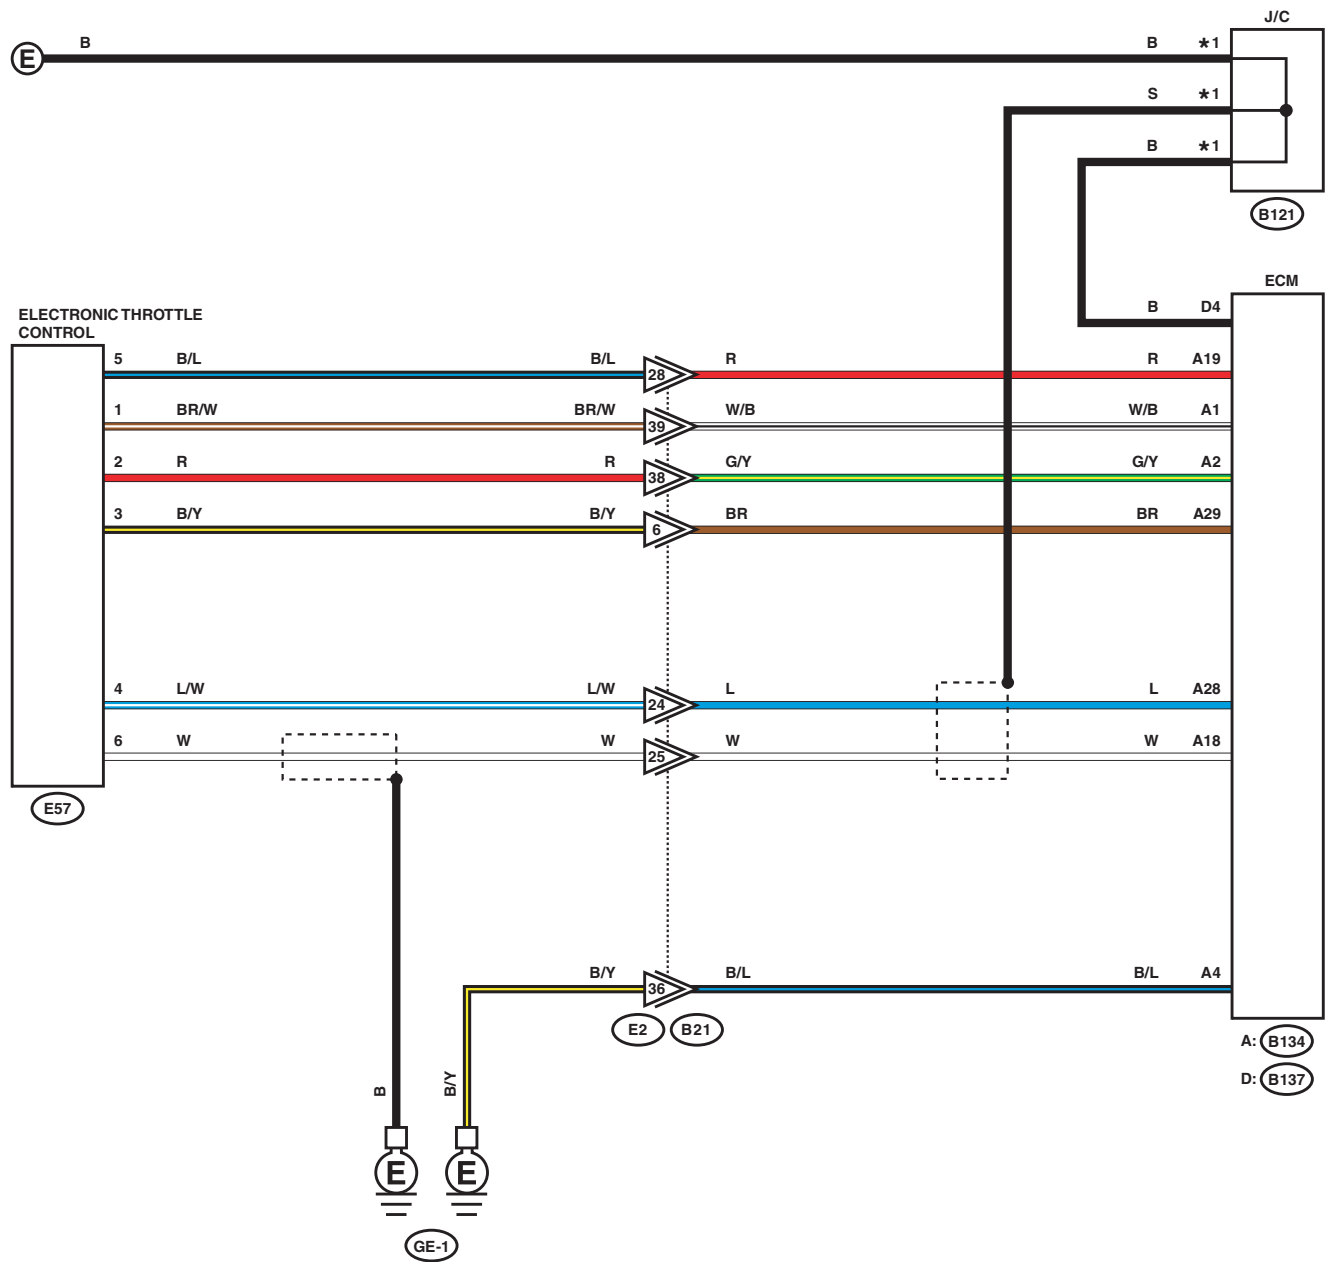


*1 : TERMINAL No. OPTIONAL ARRANGEMENT

WI-40812

EyeSight System

WIRING SYSTEM

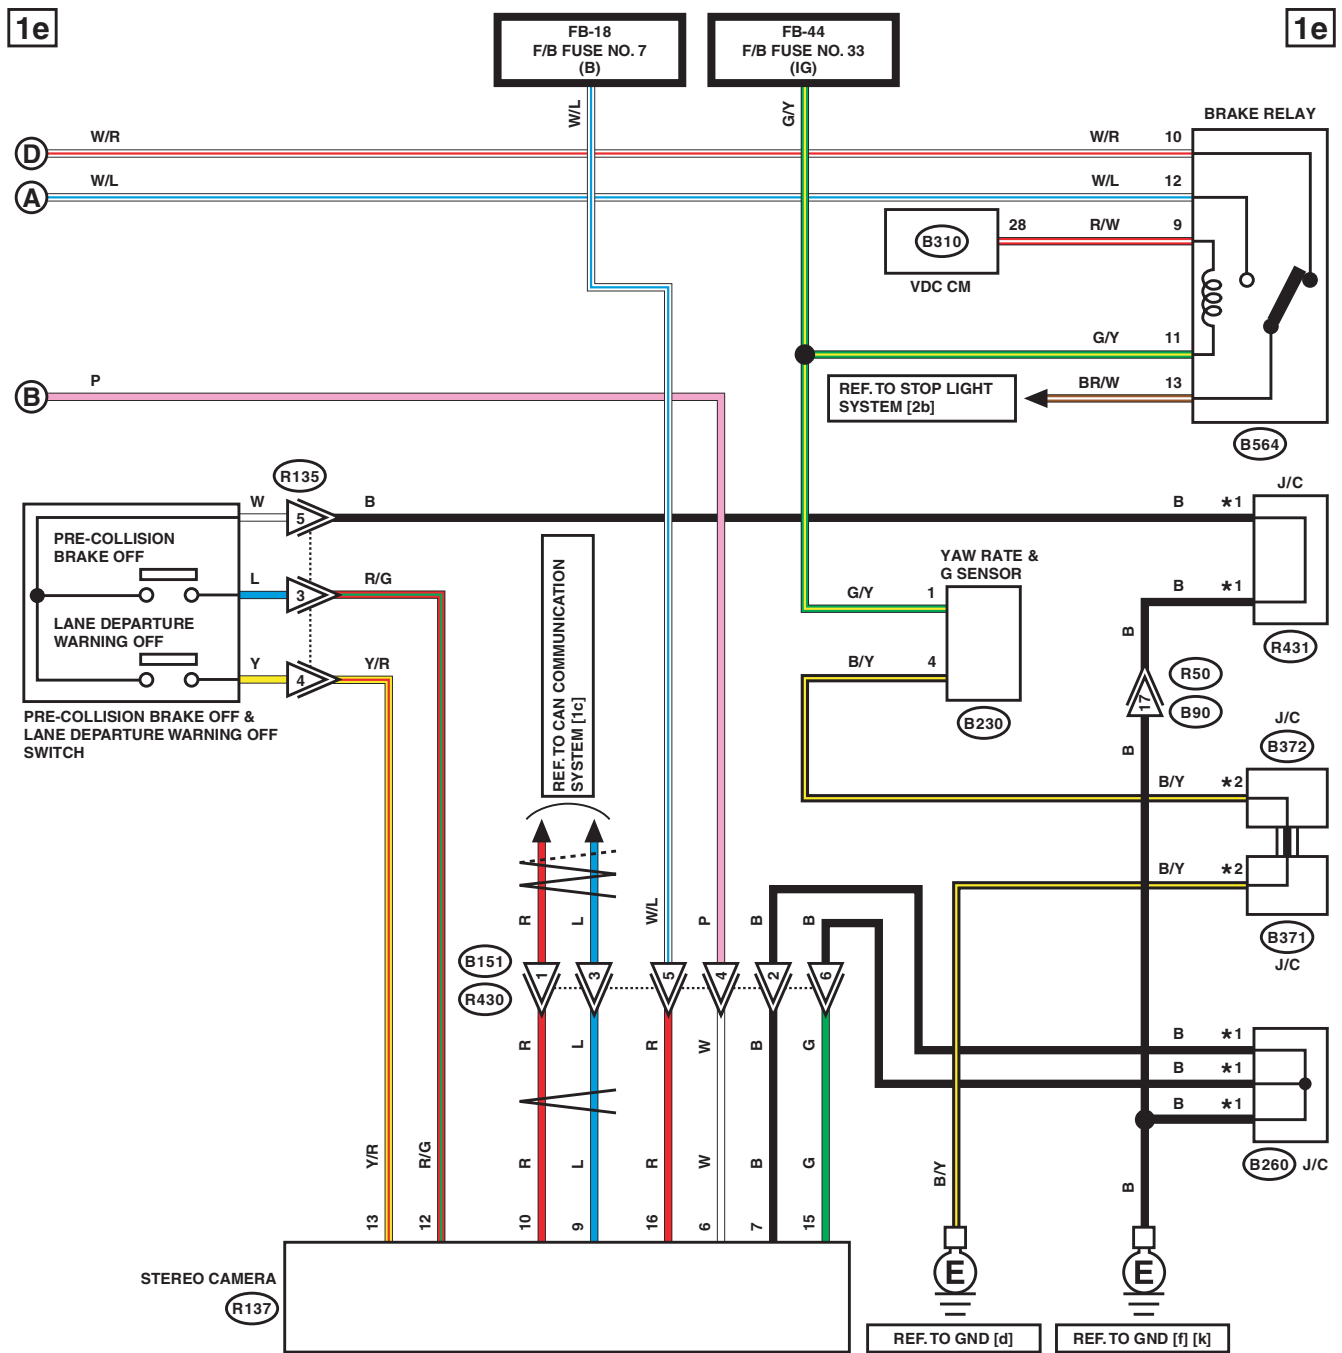

*1 : TERMINAL No. OPTIONAL ARRANGEMENT


*2 : TERMINAL No. OPTIONAL ARRANGEMENT AMONG 1, 2, 3, 4, 5 AND 6

WI-40813

1f

1f

LIST OF CONNECTORS

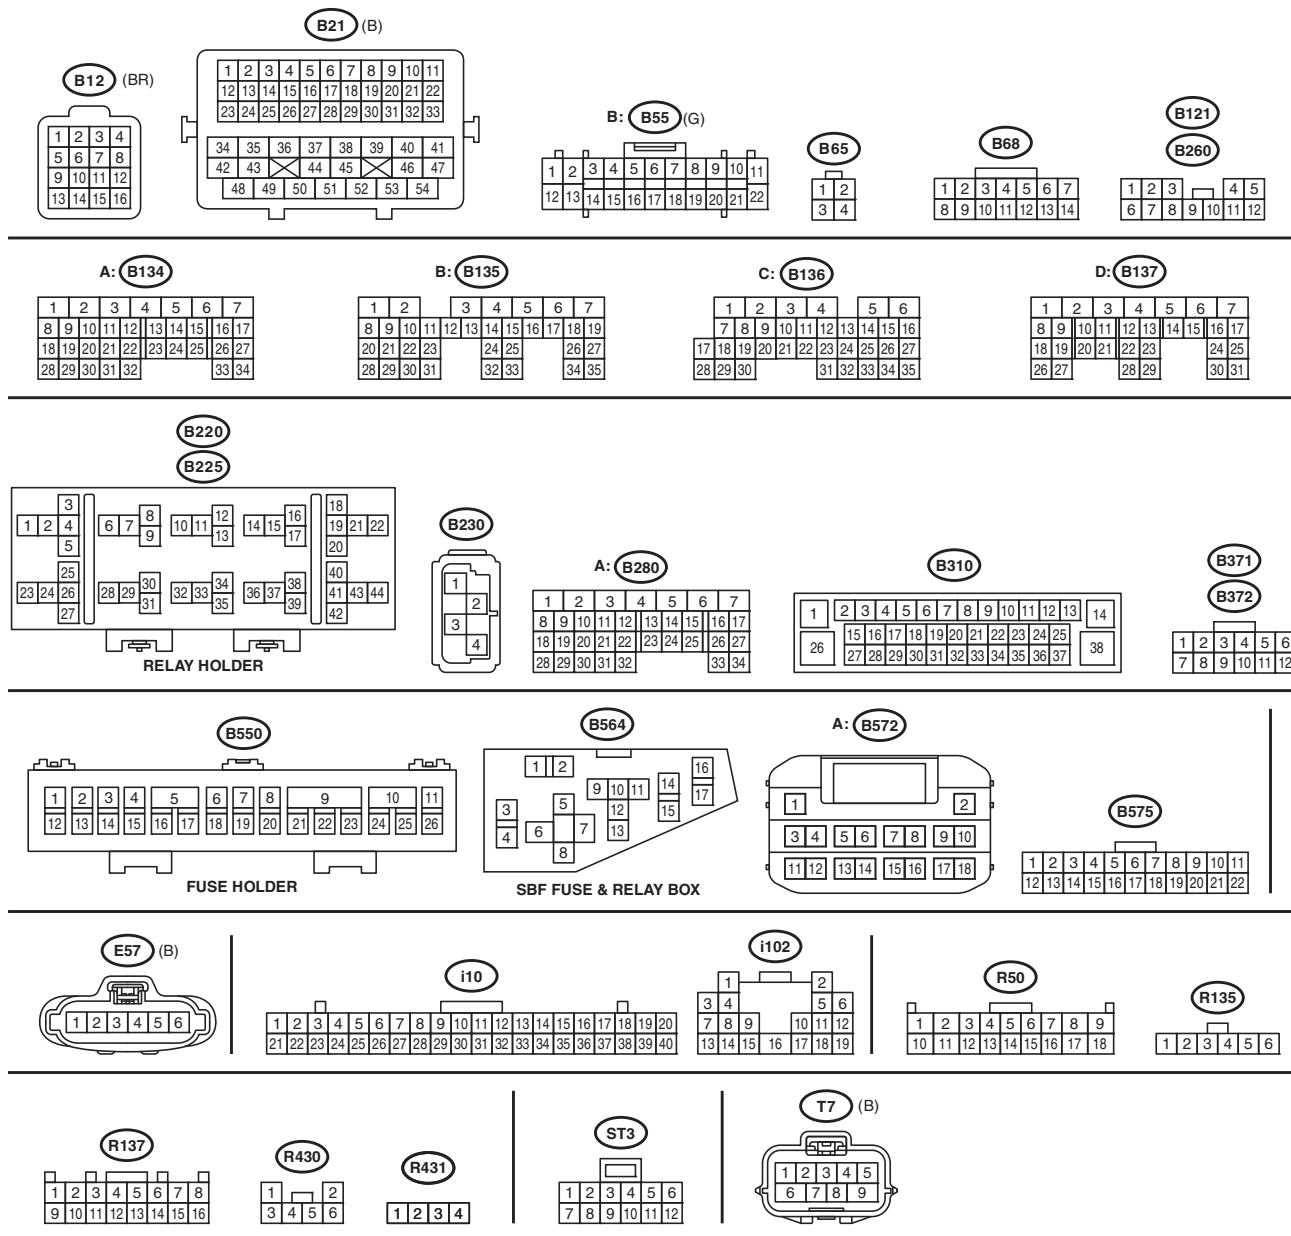

WI-40814


EyeSight System

WIRING SYSTEM

2. TURBO MODEL

2a

2a

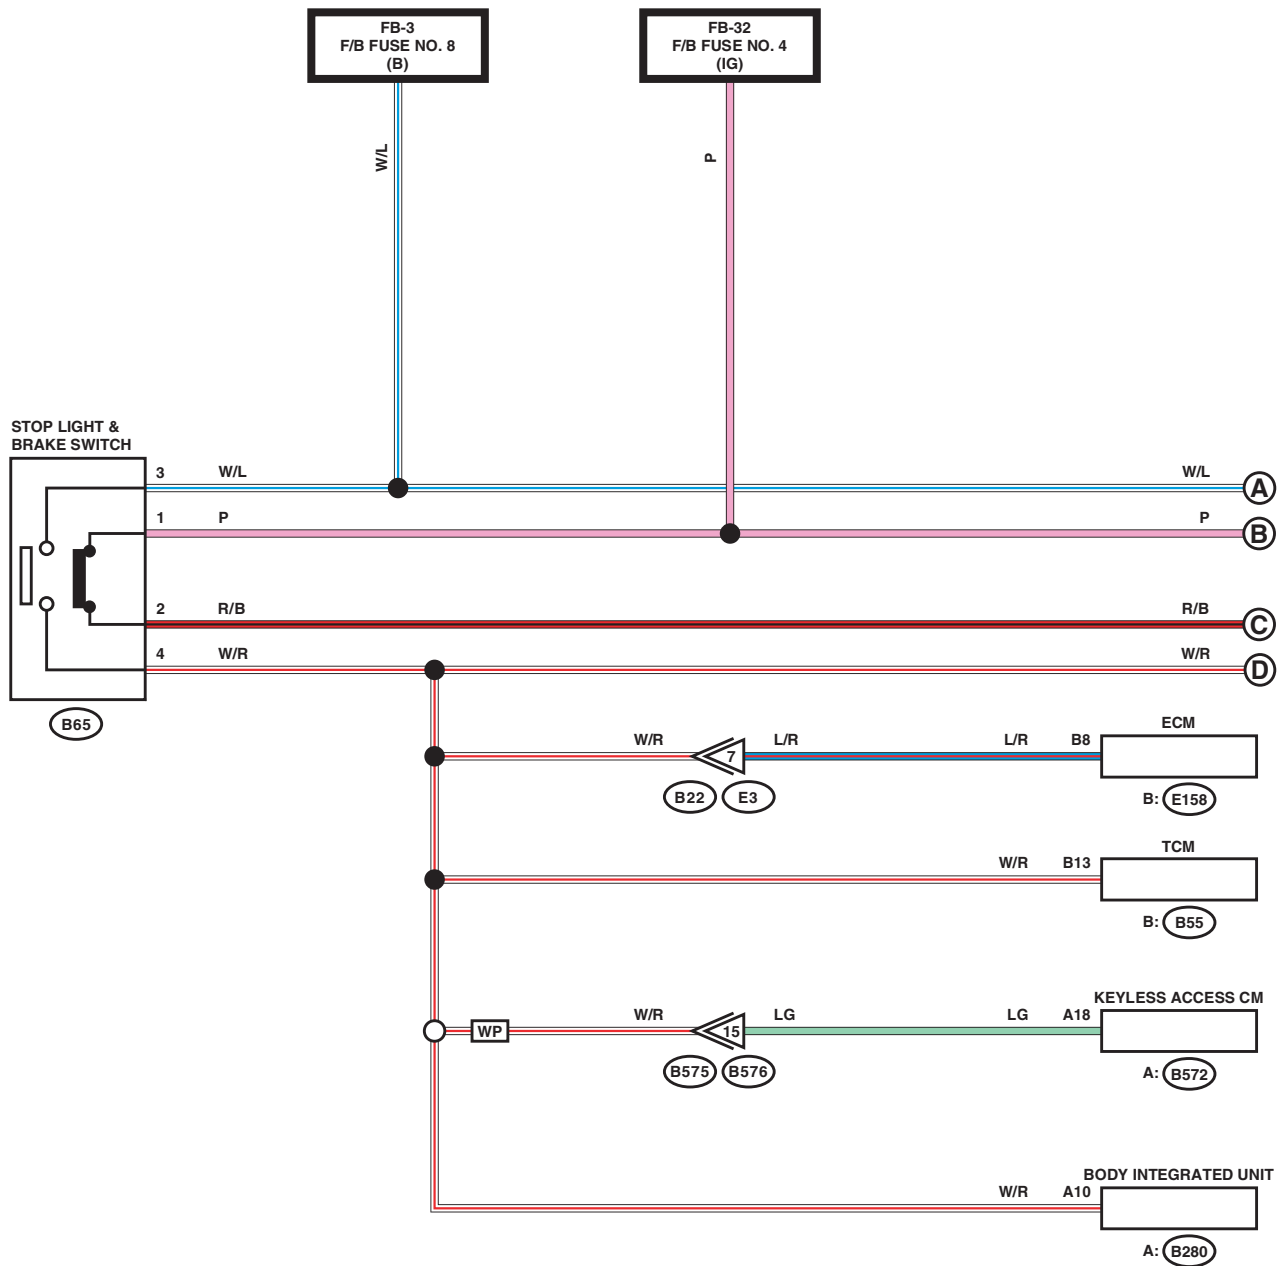

WP : WITH PUSH BUTTON START


WI-40815

EyeSight System

WIRING SYSTEM

2b

2b

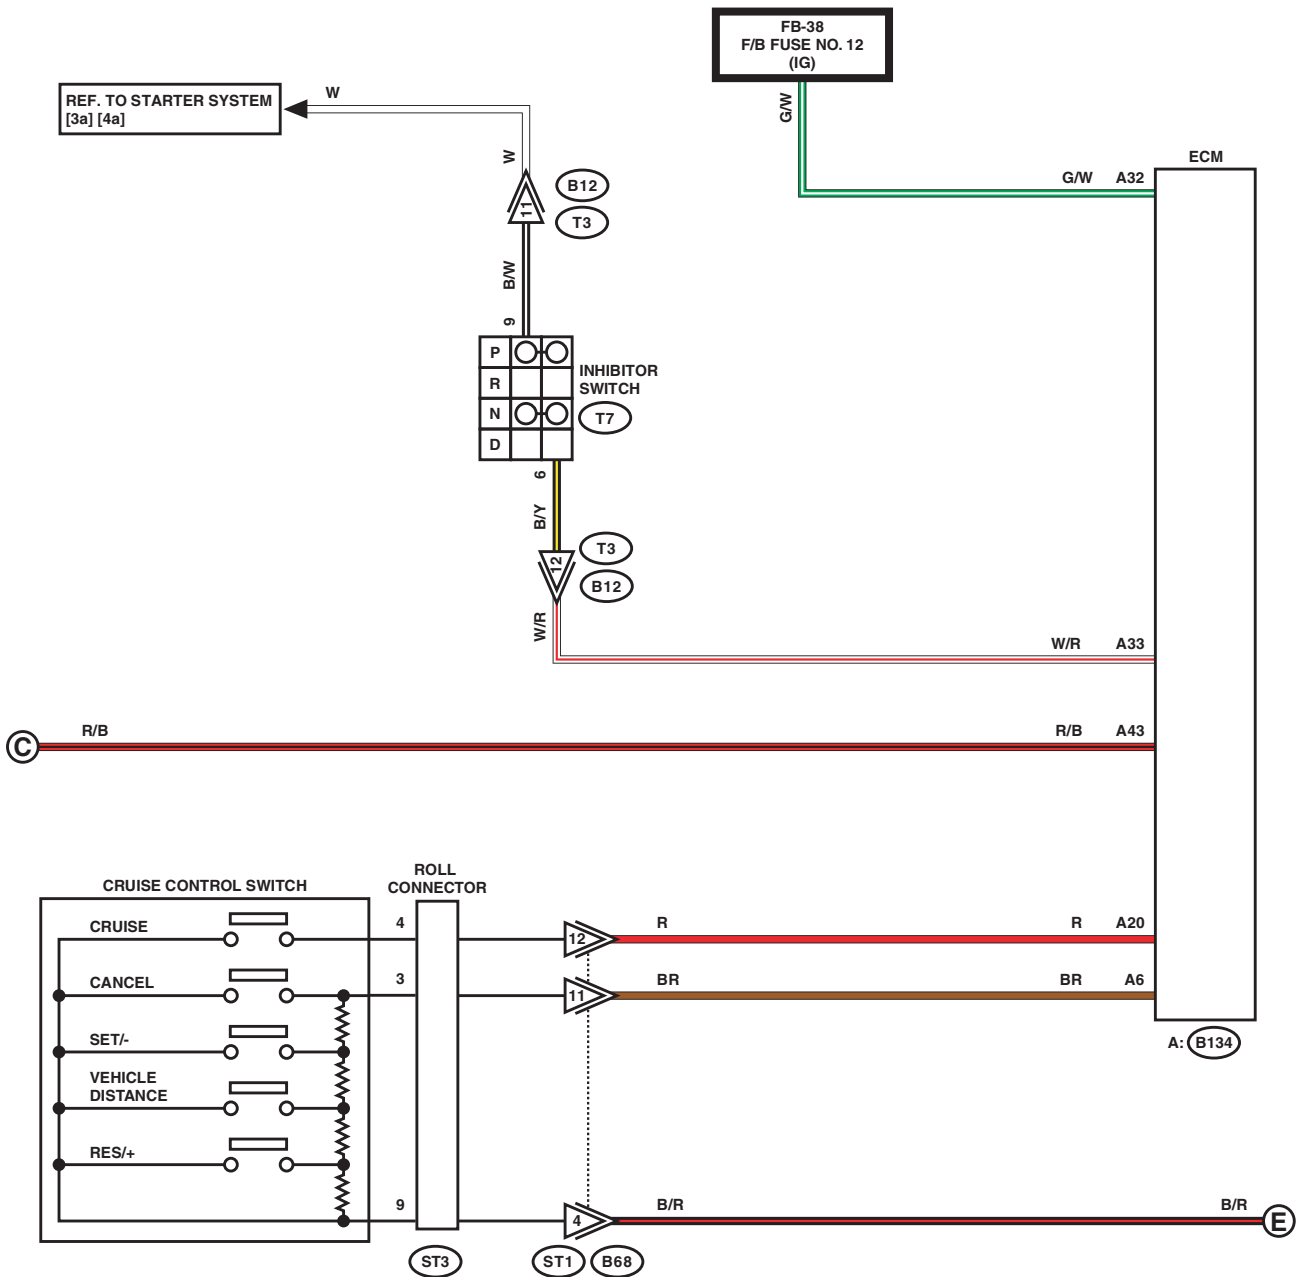


WI-40816

WI-245

EyeSight System

WIRING SYSTEM

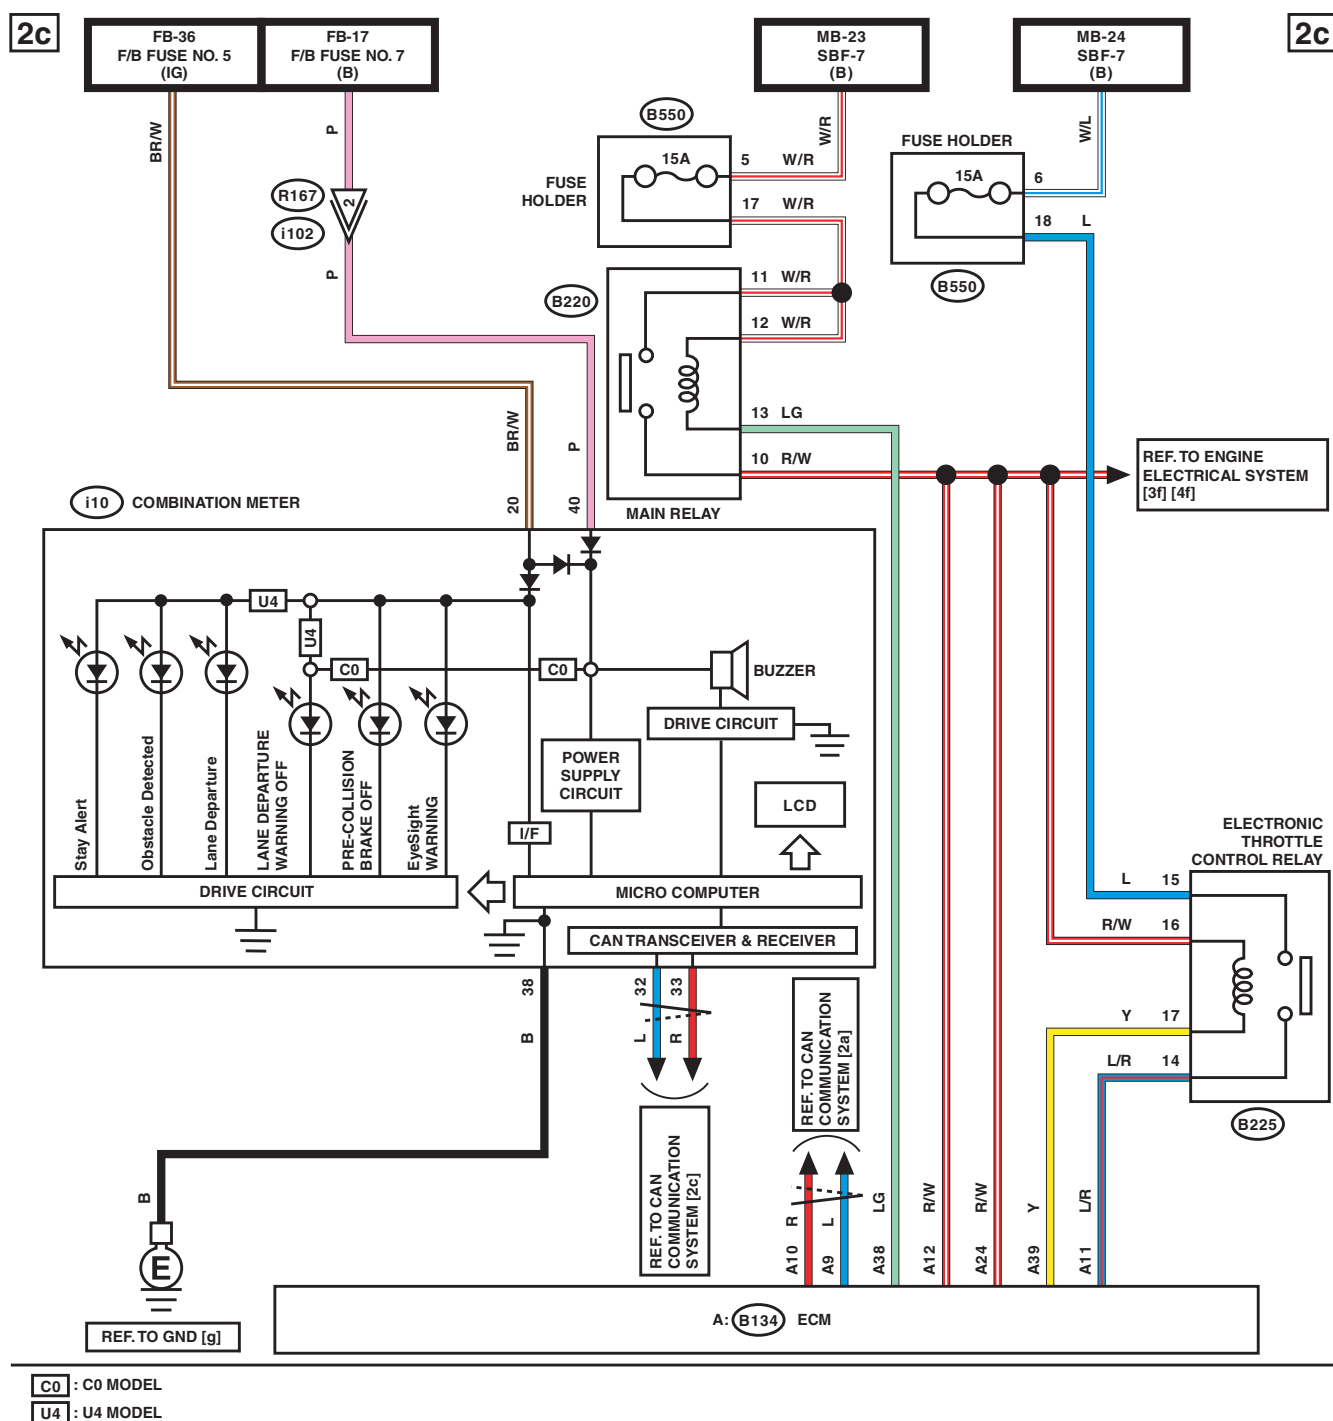


WI-40817

EyeSight System

WIRING SYSTEM

2d


2d

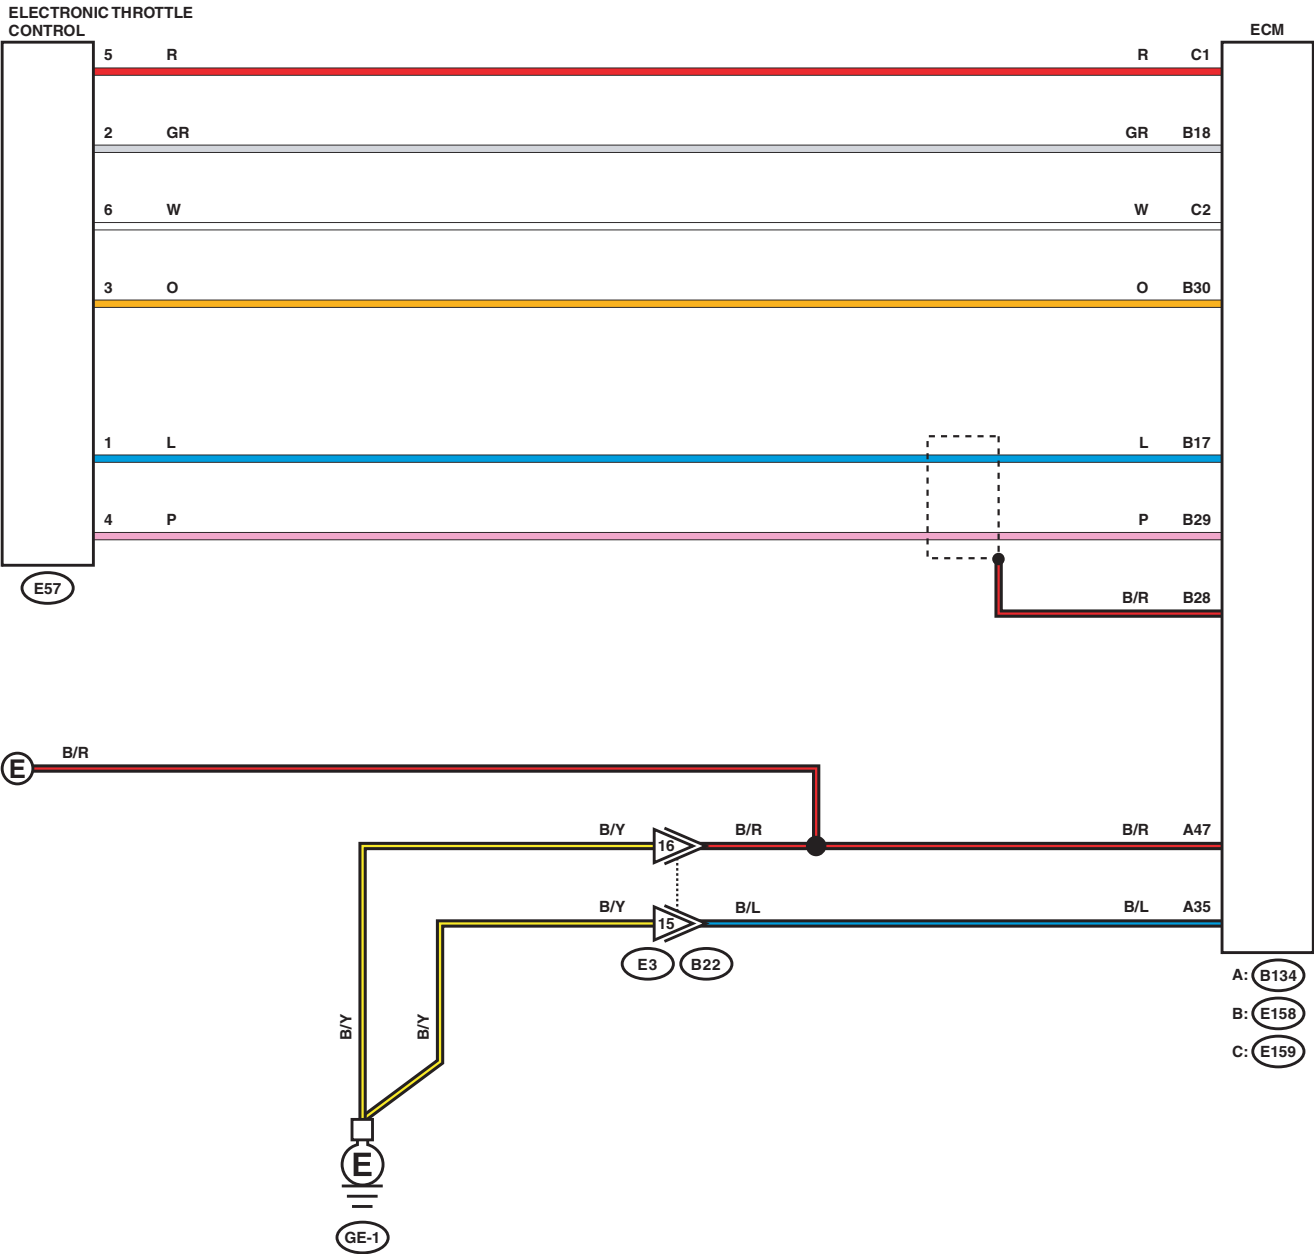

WI-40818

EyeSight System

WIRING SYSTEM

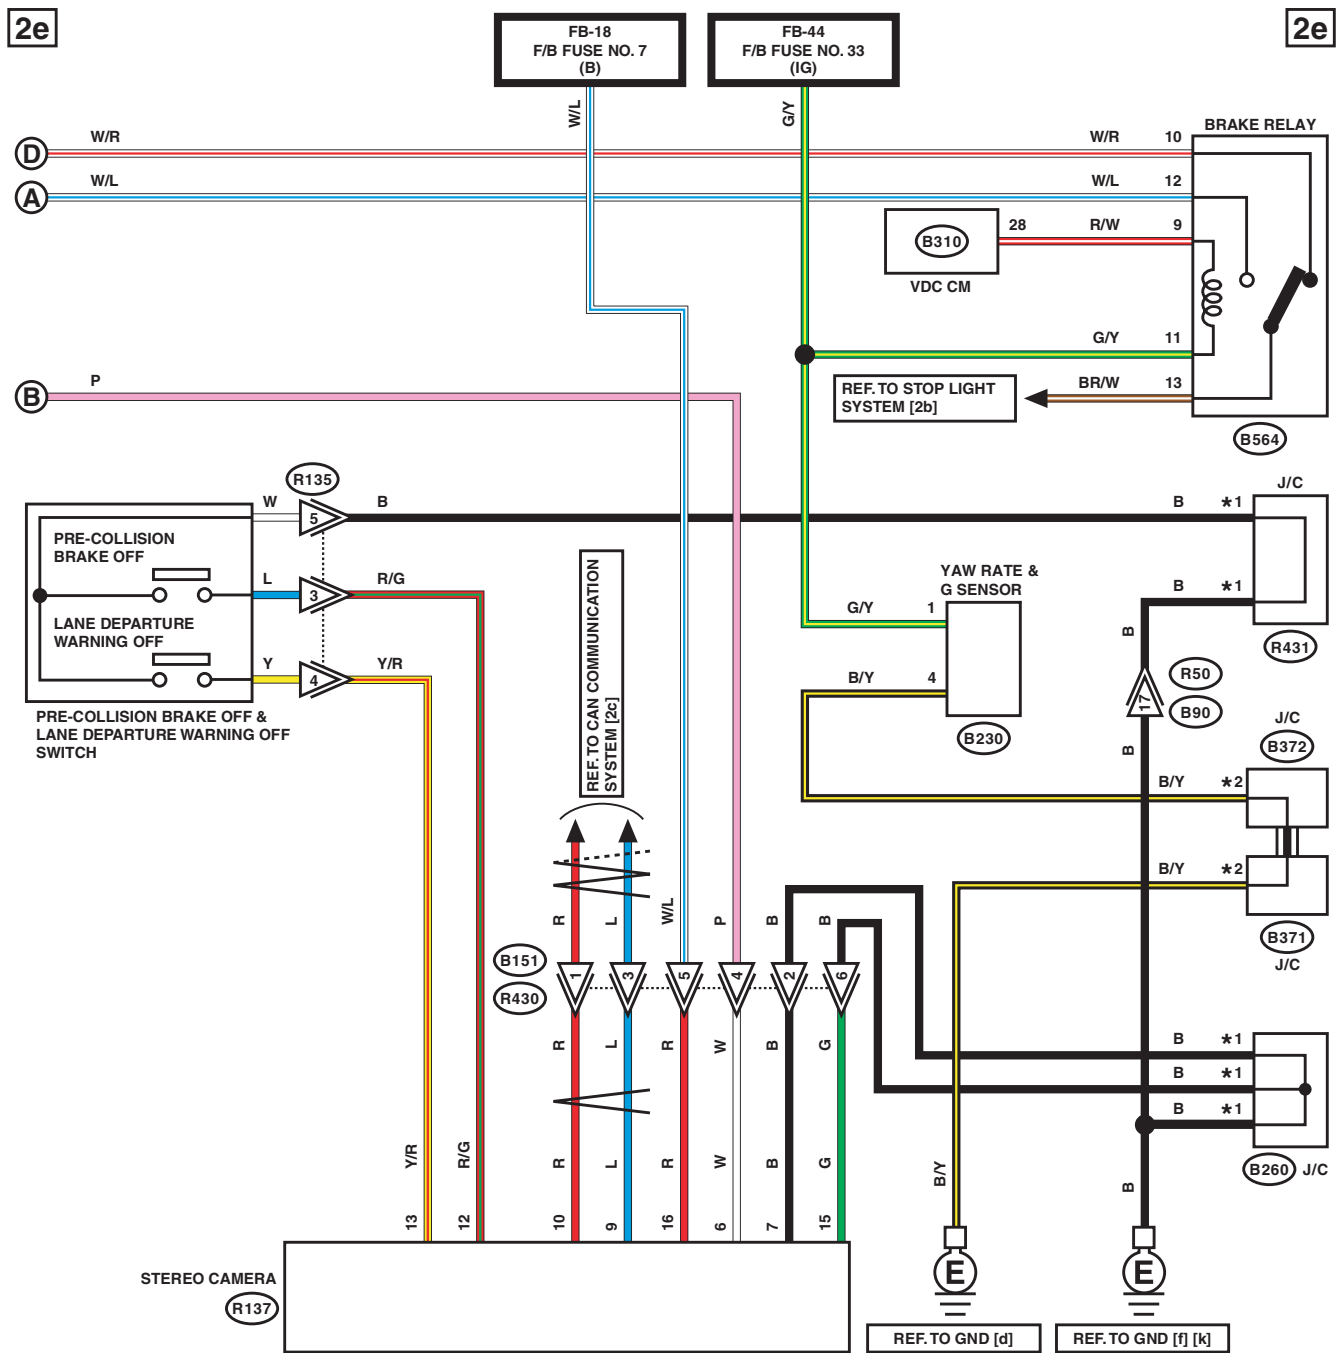

*1 : TERMINAL No. OPTIONAL ARRANGEMENT

*2 : TERMINAL No. OPTIONAL ARRANGEMENT AMONG 1, 2, 3, 4, 5 AND 6

WI-40819


EyeSight System

WIRING SYSTEM

2f

2f

LIST OF CONNECTORS

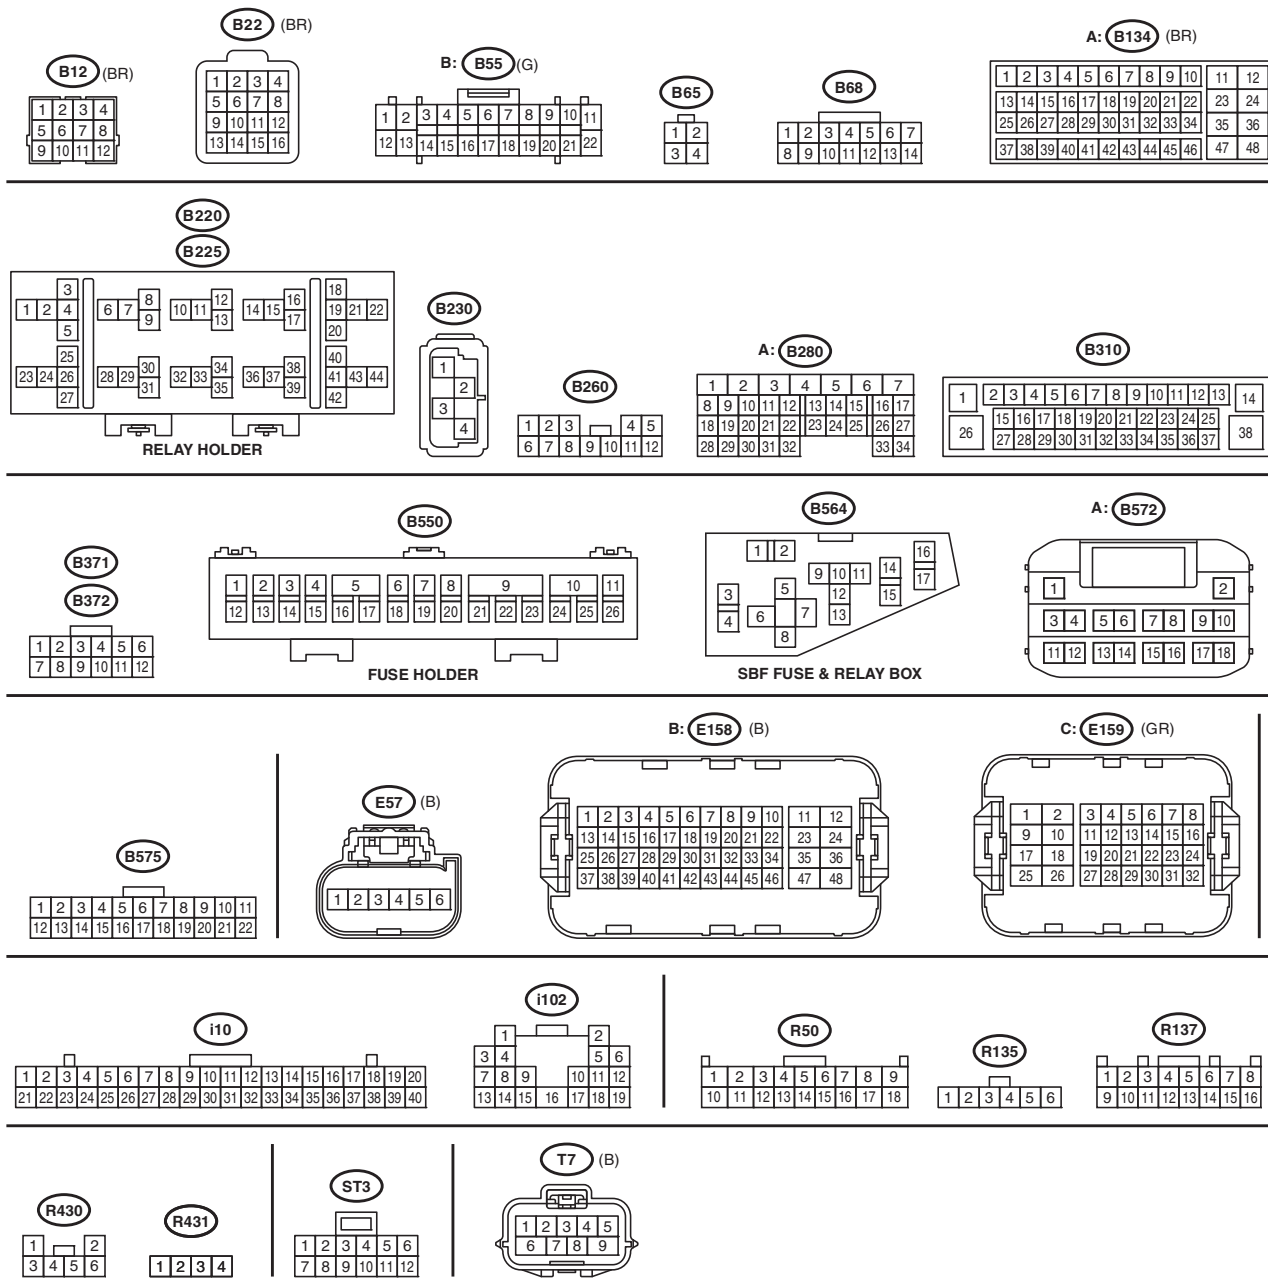

WI-40820