

2008 Suzuki Grand Vitara Alarm/Remote Start Wiring

12 VOLT CONSTANT - WHITE/ RED (+) 50 AMP

STARTER - BLACK / YELLOW (+)

IGNITION 1 - BLACK / YELLOW (+)

ACCESSORY /HEATER BLOWER 1 - YELLOW (+)

ACCESSORY /HEATER BLOWER 2 - BLUE (+)

KEYSENSE N/A

PARKING LIGHTS (-) RED / BLUE (-) @ HEADLIGHT SWITCH or BCM, (24-PIN PLUG), PIN 11, NOTE #2

PARKING LIGHTS (+) RED / YELLOW (+) in DRIVERS KICK or FUSE BOX, (20-PIN PLUG), PIN 4

POWER LOCK - PINK/BLACK (-), TYPE B in DRIVERS KICK PANEL or BCM, (40-PIN PLUG), PIN 27, NOTE #2

POWER UNLOCK - PINK/GREEN or WHITE/ GREEN (-), TYPE B in DRIVERS KICK PANEL or BCM, (40-PIN PLUG), PIN 26, NOTE #2

LOCK MOTOR WIRE - BLUE/RED (+)

DOOR TRIGGER - BLACK/ ORANGE (-) in DRIVERS KICK PANEL or BCM, (40-PIN PLUG), PIN 39, NOTE #2

DOMELIGHT SUPERVISION - BLACK/ RED (-) @ FUSE BOX, (16-PIN PLUG), PIN 9 or BCM, (15-PIN PLUG), PIN 15, NOTE #2

TRUNK RELEASE - Use RELEASE Motor wire

SLIDING POWER DOOR N/A

HORN BLUE (-) @ HORN SWITCH or BCM, (40-PIN PLUG), PIN 15, NOTE #2

TACH ANY wire NOT BLUE/BLACK @ Any FUEL-INJECTOR

WAIT TO START LIGHT N/A

BRAKE GREEN / WHITE (+) @ BRAKE PEDAL SWITCH or in DRIVERS KICK PANEL, Harness to REAR of Vehicle

FACTORY ALARM DISARM PINK/BLUE (-), Requires Double Pulse in DRIVERS KICK PANEL or BCM, (40-PIN PLUG), PIN 36, NOTE #2

ANTI-THEFT - SUZUKI'S TRANSPONDER ANTI-THEFT SYSTEM, Requires Bypass Module, See NOTE #1

NOTES:

NOTE #1: SUZUKI'S TRANSPONDER ANTI-THEFT SYSTEM, Requires Bypass Module,

Part # 556u Bypass Module for REMOTE START

Part # DLPK-CANBUS MULTI for REMOTE START/DOOR LOCKS

NOTE #2: the BCM (Body Control Module) is located Under the DRIVERS DASH and to the LEFT of the FUSE BOX.