

Dodge Intrepid 2004 fuse box diagram

Underhood Fuses

A Power Distribution center is located in the engine compartment.

Interior Fuses

Cavity	Ampere rating	Description
1	10	Transmission Controller, Gauges, Autostick
2	10	Right High Beam Headlight
3	10	Left High Beam Headlight
4	10	Radio, CD Player
5	10	Washer Motor
6	15	Power Outlet
7	20	Tail, License, Parking, Illumination Lights, Instrument Cluster
8	10	Airbag
9	10	Turn Signal Lights, Turn Signal/Hazard Indicator
10	15	Right Low Beam
11	20	High Beam Relay, High Beam Indicator, High Beam Switch

12	15	Left Low Beam Headlight
13	10	Fuel Pump Relay, Power Train Control Module
14	10	Cluster, Day/Night Mirror, Sunroof, Overhead Console, Garage Door Opener, Body Control Module
15	10	Daytime Running Light Module (Canada)
16	20	Fog Light Indicator
17	10	ABS Control, Back Up Lights, Daytime Running Lights, A/C Heater Control,
18	20	Power Amplifier, Horn
19	15	Overhead Console, Garage Door Opener, Trunk, Overhead, Rear Reading, and Visor Vanity Lights, Trunk Release Solenoid, Power Mirrors, Power Door Locks, Body Control Module, Aspirator Motor
20	20	Brake Lights
21	10	Leak Detection Pump, Low Rad Relay, High Rad Relay, A/C Clutch Relay
22	10	Airbag
23	30	Blower Motor, ATC Power Module
24	20	Power Window Motors
25	20	Power Door Lock Motors, Power Seats