


Cadillac DeVille 1993 fuse box diagram

Instrument panel

The fuse block is located under the instrument panel, next to the parking brake.

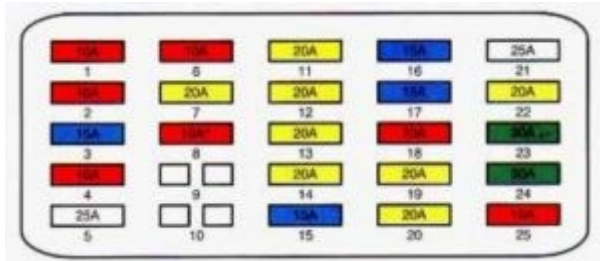


Cadillac DeVille – fuse box diagram

Fuse	Ampere rating [A]	Usage
1	10	CRANK, DIAG. ENERGY RESERVE MODULE
2	10	SPARE
3	15	SPARE
4	10	RADIO, BODY COMPUTER MODULE
5	25	WSHIELD WIPE/WASH, WIPER/WASHER SWITCH
6	10	COOLING FAN RELAYS, HIGH SPEED COOLANT FAN, LOW SPEED COOLANT FAN
7	20	AIR CONDITIONIN, A/C COMPRESSOR RELAY, BODY COMPUTER MODULE, ELECTRONIC CLIMATE CONTROL, CRUISE CONTROL SWITCH, ELEC. CLIMATE CTRL PROG., ELEC. HEIGHT SENSOR, FUEL DATA CENTER, HEATED WIS CONTROL MODULE, INSTRUMENT CLUSTER, REAR DEFOGGER RELAY, WINDOW LOCKOUT SWITCH
8	10	ANTI-LOCK BRAKE-CONTR
	20*	VAC PUMP (H.D. CHASSIS ONLY) MODULE, ELEC. BRAKE CONTROL, BR.4KE PRESSURE MODULE, MAIN RELAY
9	—	BLAVK
10	—	BLAVK
11	20	CHIME/CIG LTH/RADIO/PWK ANT, POWER ANT. RELAY, FRONT CIGAR LIGHTER, LEFT HAND INFO. CENTER, GLOVE COMPARTMENT LIGHT, MULTIFUNCTION CHIME MODULE, RADIO
12	20	AUTO LEVEL CONTROL, ELEC. COMPRESSOR, ELEC. HEIGHT SENSOR, ELEC. RELAY

13	20	BRAKE & HAZARD LPS, BRAKE LIGHT SWITCH, HAZARD FLASHER
14	20	PARK LAMPS, INSTRUMENT CLUSTER, LIGHT SWITCH, TWILIGHT SENTINEL/DAYTIME RUNNING LIGHTS MODULE
15	15	CTSY LP/PWR MIRROR, DOME/MAP LIGHTS AND GARAGE DOOR OPENER, FRONT DOOR LOCK FIBER OPTIC LIGHTS, FRONT/REAR DOOR WARNING LIGHTS, FRONT/FLEET VANITY MIRROR LIGHTS, FRONT/REAR/QTR PANEL COURTESY/READING LIGHTS, TRUNK LIGHT, LT POWER SEAT SWITCH
16	15	GAUCES/DR LUCK/ILL ENT, AUTO. DAY/NIGHT MIRROR, AUTO. DOOR LOCK MODULE, BODY COMPUTER MODULE, COMPUTER CONTROLLED RIDE MODULE, DIAG. ENERGY RESERVE MODULE, FUEL TANK UNIT, ILLUMINATED ENTRY, INSTRUMENT CLUSTER, POWER SEATS, KEYLESS ENTRY, L & R GO SPECIAL SEAT CTRLS, MULTIFUNCTION CHIME MODULE, RIGHT SIDE INFO. CENTER, SEAT MEMORY MODULE, THEFT DETERRENT MODIJLE
17	15	ENGINE CTRL MOD, POWER CONTROL MODULE, PASS KEY DECODER MODULE
18	10	SUP INFL REST, DIAGNOSTIC/ENERGY RESERVE MODULE (DERM), DUAL SENSOR
19	20	TURN SIGN/BACK UP LPS, NEUTRAL SAFETY BACKUP, TURN FLASHER, TURN/HAZARD SWITCH
20	20	SPARE
21	25	SPARE
22	20	TRULVK RELWEL FILLER, TRUNK LID RELEASE SWITCH, FUEL DOOR RELEASE SWITCH
23	30 CB	PWR WDO/SUN ROOF, ASTROROOF CONTROL MODULE, EXPRESS DOWN WINDOW MODULE, POWER WINDOW SWITCHES AND LOCKOUT RELAY
24	30 CB	DR LKS/RR DEFOG, DOOR LOCK RELAY, LEFT & RIGHT SIDE RECLINER SWITCHES, LEFT & RIGHT SEAT SWITCHES, L & R 60 SPECIAL SEAT CTRL SW, REAR DEFOGGER, SEAT MEMORY MODULE, KEYLESS ENTRY
25	10	INST PANEL LAMPS, ASHTRAY LIGHT, BODY COMPUTER MODULE, ENGINE COMPARTMENT LIGHT, I/P AND SWITCH BACK LIGHTS, RADIO DISPLAY DIMMING INPUT

Relay panel

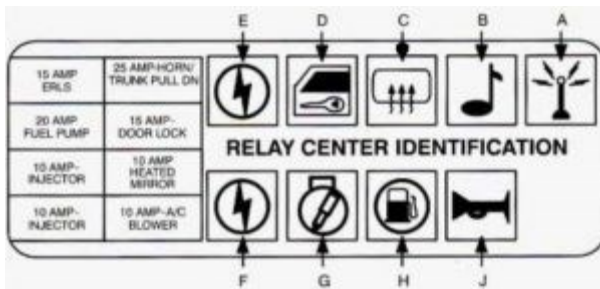

Cadillac DeVille – fuse box diagram – relay panel

Fuse name	Ampere rating	Description
HORN/TRUNK PULL ON	25	HORN RELAY, PULL DOWN UNIT
DOOR LOCK	15	DOOR LOCK SWITCHES, OUTSIDE MIRROR CONTROL SWITCH, LT AND RT REAR CIGAR LIGHTS, KEYLESS ENTRY, TRUNK LID RELEASE, AUTOMATIC DOOR LOCKS, ILLUMINATED ENTRY, LT AND RT REAR, DOOR LOCK SWITCHES, LT AND RT REAR DOOR COURTESY LIGHTS
HEATED MIRROR	10	HEATED MIRROR
A/C PROGRAMMER	10	A/C PROGRAMMER
ERLS	15	A/C COMPRESSOR CONTROL RELAY, VISCOVS CONVERTER CLUTCH BRAKE SWITCH, EGR SOLENOID, VAPOR CANISTER PURGE SOLENOID, POWER STEERING PRESSURE SWITCH
FUEL PUMP	20	FUEL PUMP RELAY, ENGINE OIL PRESSURE SWITCH
INJECTOR	10	FUEL INJECTORS 2,3,5 AND a
INJECTOR	10	FUEL INJECTORS 1,4,6 AND 7
Relay	Usage	
A	ANTENNA RELAY	
B	BOSE RELAY (IF EQUIPPED)	
C	DEFOGGER RELAY	
D	WINDOW LOCKOUT RELAY	
E	RETAINED ACCESSORY POWER REMY NO. 2	
F	RETAINED ACCESSORY POWER RELAY NO. 1	
G	LECTRONIC LEVEL CONTROL (ELC)	

H	FUEL PUMP RELAY
J	HORN RELAY

Maxi Fuses

Right side

Fuse name	Ampere rating	Description
SPARE	30	SPARE
1GN SW	60	RETAINED ACCESSORY POWER, IGNITION SWITCH
BLWR	30	ELECTRONIC CLIMATE CONTROL, POWER MODULE BLOWER CONTROL MODULE
ECM	20	BODY CONTROL MODULE (BCM), ELECTRONIC CONTROL MODULE (ECM), PASS KEY DECODER MODULE
BOSE/SPARE	20	BOSE RADIO RELAY IF EQUIPPED
PWR LK SEATS RR DE	50	POWER TO CB 24 (SEE FUSE BLOCK)
HORN	40	POWER TO FUSES 1 AND 2 (SEE FUSE BLOCK)
HTD W/S SPARE	20	HEATED WINDSHIELD IF EQUIPPED

Left side

Fuse name	Ampere rating	Description
ABS PMP	40	ABS PUMP RELAY
ABS MA	30	MAIN RELAY
ELC	40	POWER TO FUSES 11 AND 12 (SEE FUSE BLOCK)
COOL FAN	40	COOLANT FAN RELAYS
MISC LTS	60	POWERS FOR FUSES 13,14 AND 15 (SEE FUSE BLOCK)
HDLPS	30	HEADLIGHT SWITCH
IGN	60	THEFT DETERRENT, IGNITION SWITCH
SPARE	60	SPARE