



Lighting switch, parking light switch

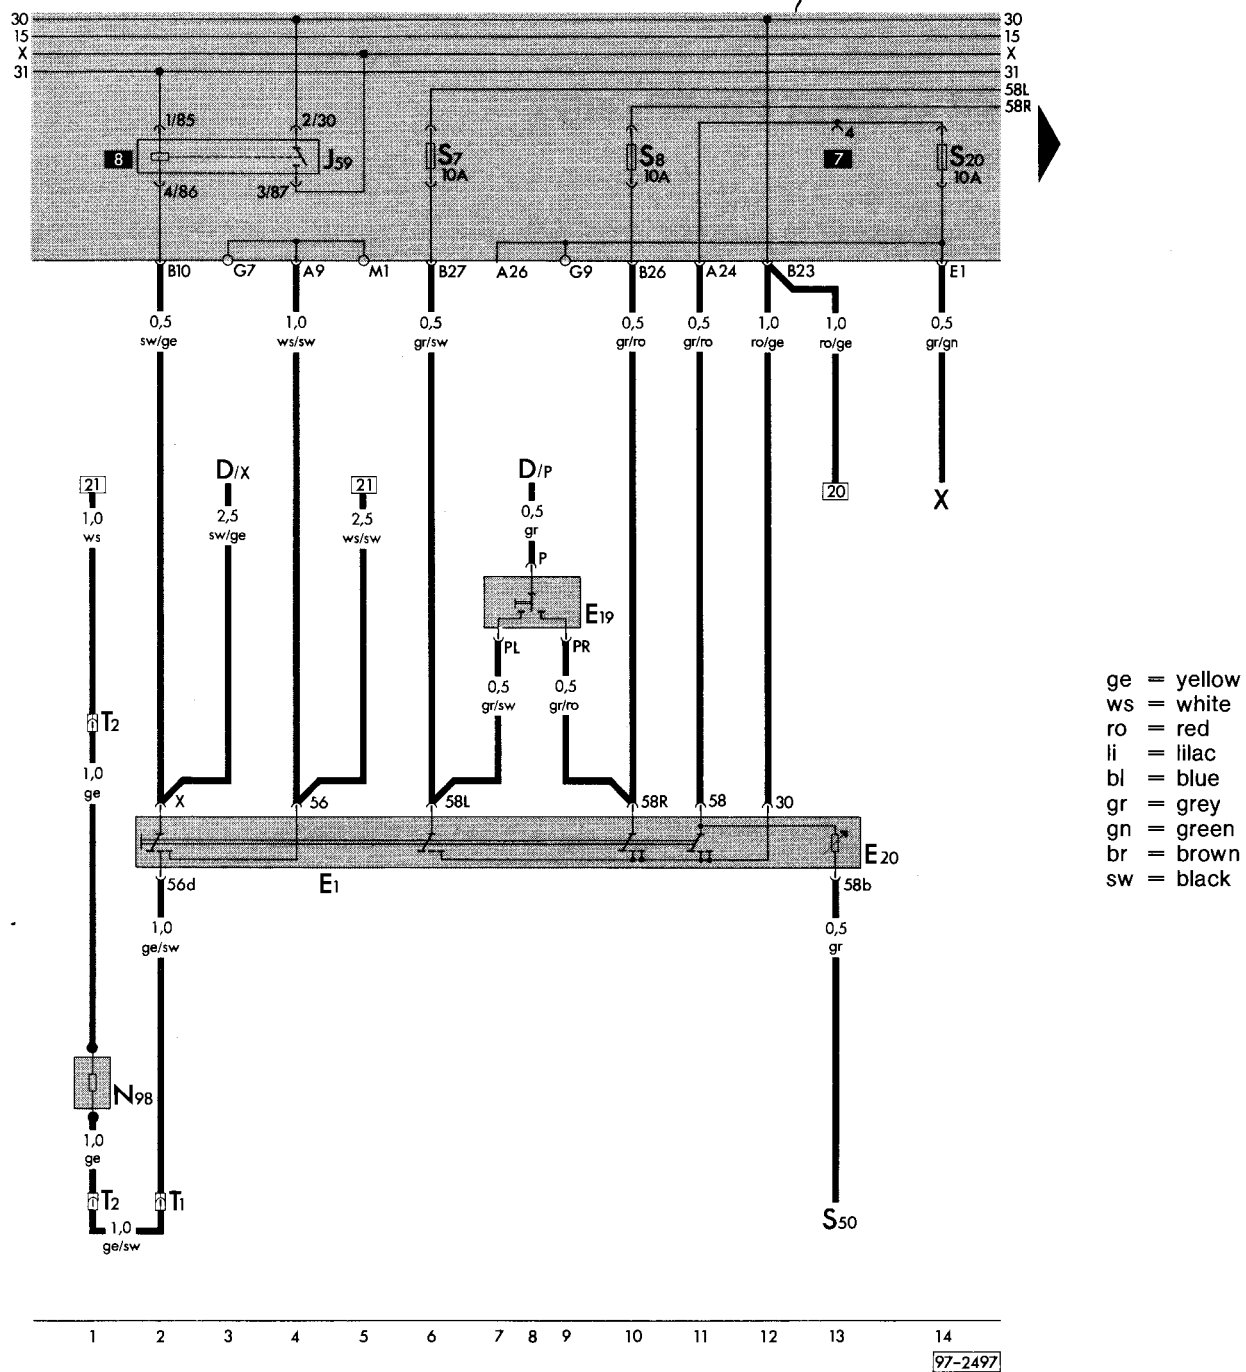

- D — Ignition/starter switch
- E 1 — Lighting switch
- E 19 — Parking light switch
- E 20 — Instrument/instrument panel lighting control
- J 59 — Relief relay for x contact
- N 98 — Series resistance/town driving lights
- S 50 — Fuse, terminal 58B, on fuse box/relay plate
- T 1 — Connector single, behind dash panel
- T 2 — Connector 2 pin, behind dash panel
- X — Number plate lights

Headlights, tail lights, headlight dipper/flasher switch

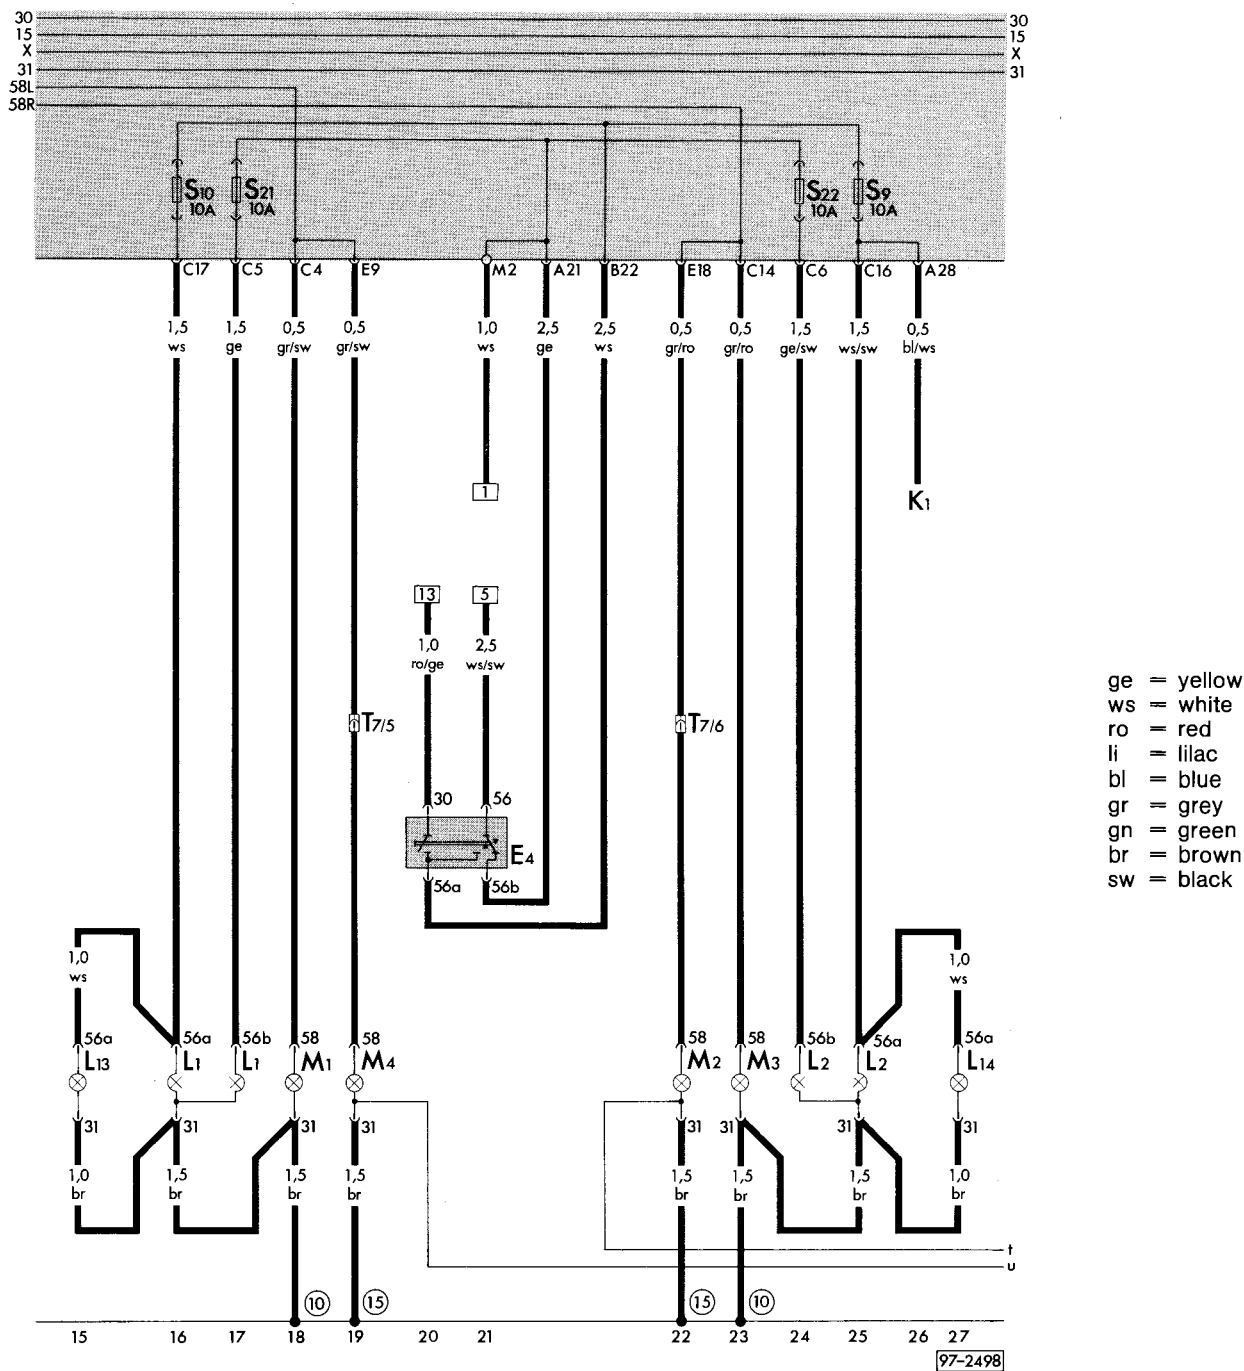

- E 4 — Headlight dipper/flasher switch
- K 1 — Main beam warning lamp
- L 1 — Twin filament bulb, left
- L 2 — Twin filament bulb, right
- L 13 — Main beam headlight bulb, left
- L 14 — Main beam headlight bulb, right
- M 1 — Side light bulb, left
- M 2 — Tail light bulb, right
- M 3 — Side light bulb, right
- M 4 — Tail light bulb, left
- T 7 — Connector 7 pin, in engine compartment junction box

Earthing points

- ⑩ — Earth point next to relay plate
- ⑮ — Earth point underneath coil