



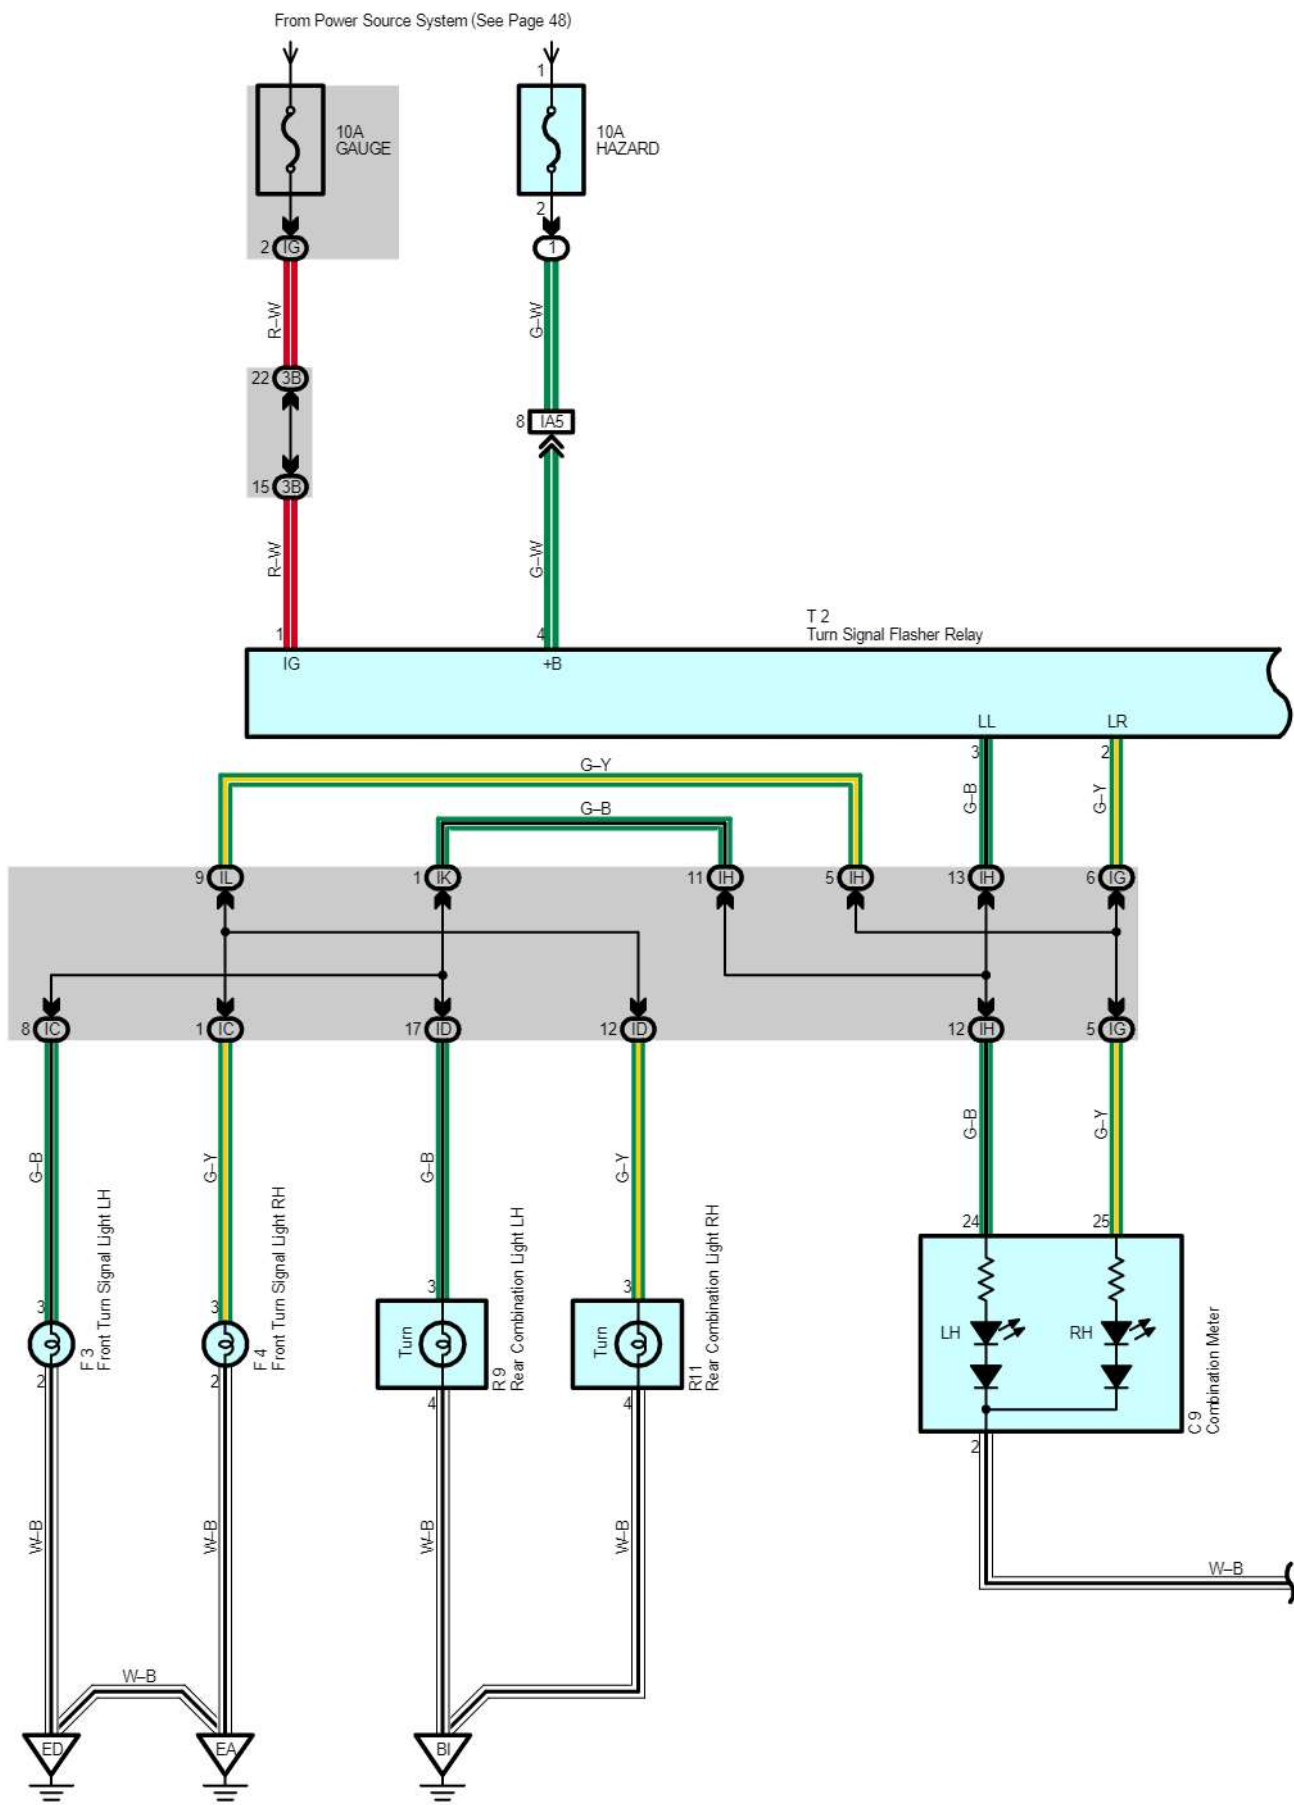

- \* 1 : w/ Wireless Door Lock
- \* 2 : w/o Wireless Door Lock

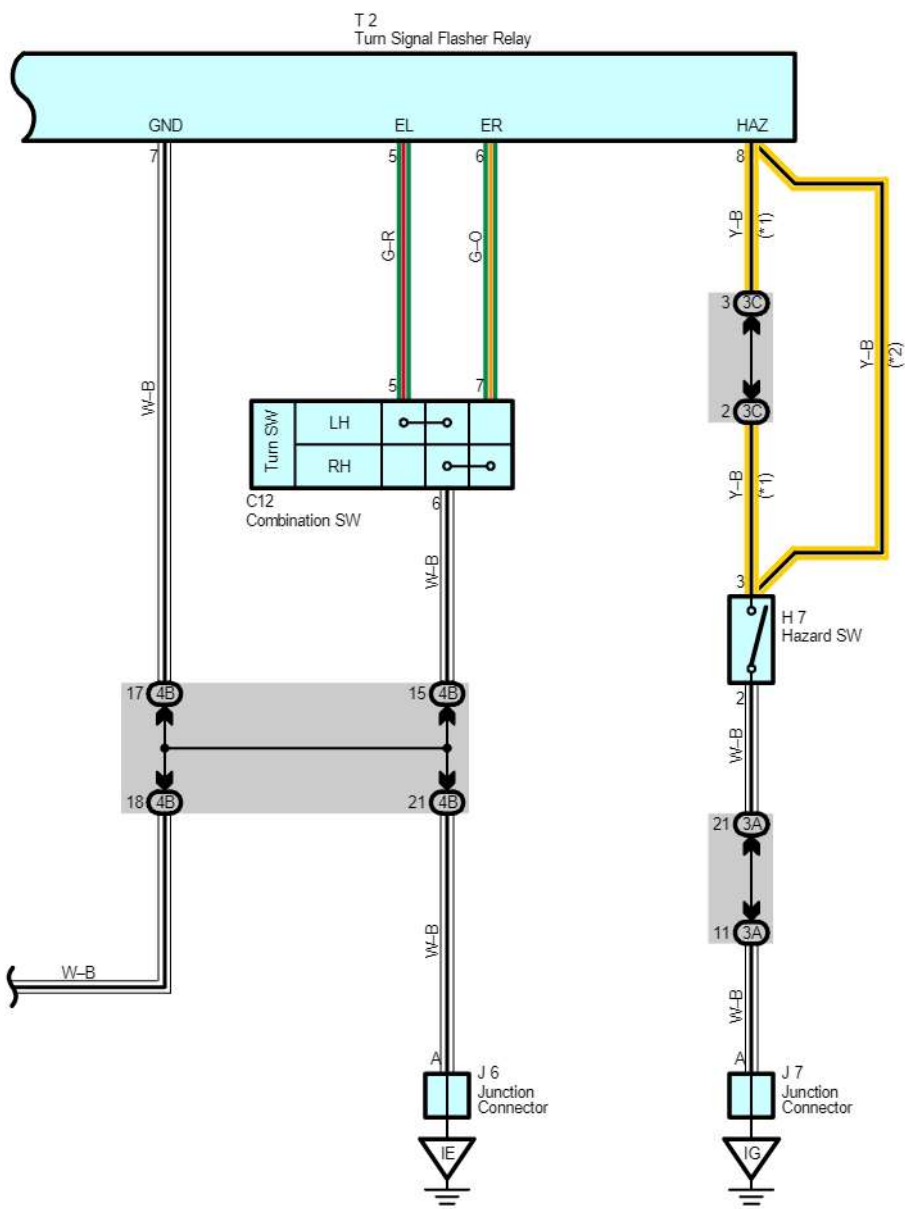

# Turn Signal and Hazard Warning Light

## Service Hints

### T2 Turn Signal Flasher Relay

1—Ground : Approx. 12 volts with the ignition SW at ON position

7—Ground : Always continuity

4—Ground : Always approx. 12 volts

## ○ : Parts Location

| Code | See Page | Code | See Page | Code | See Page |
|------|----------|------|----------|------|----------|
| C9   | 34       | H7   | 35       | R11  | 37       |
| C12  | 34       | J6   | 35       | T2   | 35       |
| F3   | 32       | J7   | 35       |      |          |
| F4   | 32       | R9   | 37       |      |          |

## ○ : Relay Blocks

| Code | See Page | Relay Blocks (Relay Block Location)       |
|------|----------|-------------------------------------------|
| 1    | 22       | Engine Room R/B (Engine Compartment Left) |

## ○ : Junction Block and Wire Harness Connector

| Code | See Page | Junction Block and Wire Harness (Connector Location)                                |
|------|----------|-------------------------------------------------------------------------------------|
| IC   | 25       | Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)                 |
| ID   | 25       | Floor Wire and Instrument Panel J/B (Lower Finish Panel)                            |
| IG   | 25       | Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)                 |
| IH   |          |                                                                                     |
| IK   |          |                                                                                     |
| IL   | 24       |                                                                                     |
| 3A   | 28       | Instrument Panel Wire and RH J/B (Right Side of the Instrument Panel Reinforcement) |
| 3B   |          |                                                                                     |
| 3C   |          |                                                                                     |
| 4B   | 30       | Instrument Panel Wire and Center J/B (Behind the Combination Meter)                 |

## □ : Connector Joining Wire Harness and Wire Harness

| Code | See Page | Joining Wire Harness and Wire Harness (Connector Location)                                        |
|------|----------|---------------------------------------------------------------------------------------------------|
| IA5  | 40       | Engine Room Main Wire and Instrument Panel Wire (Left Side of the Instrument Panel Reinforcement) |

## ▽ : Ground Points

| Code | See Page | Ground Points Location       |
|------|----------|------------------------------|
| EA   | 38       | Front Right Fender           |
| ED   | 38       | Front Left Suspension Tower  |
| IE   | 40       | Behind the Combination Meter |
| IG   | 40       | Right Kick Panel             |
| BI   | 44       | Lower Back Panel             |

