


1. NAVIGATION OPERATION

1. OVERVIEW BUTTON AND GUIDANCE SCREEN

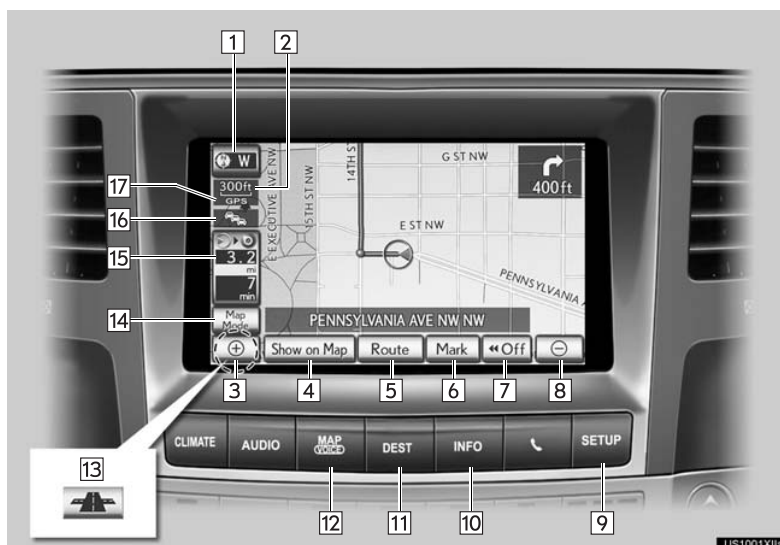

No.	Name	Function	Page
1	North-up or heading-up symbol	This symbol indicates whether the map orientation is set to north-up or heading-up. Touching this symbol changes the map orientation. Both north-up and heading-up symbols display the vehicles direction as a letter (e.g. N for north).	44
2	Scale indicator	This figure indicates the map scale.	43
3	Zoom in button	Touch to magnify the map scale.	43
4	"Show on Map"	Touch to browse information about guidance route, to set the POI (Point of Interest) icons to be displayed on the screen, to record the route, etc.	96, 166, 191
5	"Route"	Touch to change the route.	89, 91
6	"Mark"	Touch to register the current position or the cursor position as an address book entry.	36

No.	Name	Function	Page
7	“◀◀ Off”	Touch to obtain a broader view. Some of the buttons on the screen will not be displayed. They are displayed again by touching “On ▶▶”.	120
8	Zoom out button	Touch to reduce the map scale.	43
9	“SETUP” button	Press to display the “Setup” screen.	22, 33, 46, 56, 100, 116, 124, 168, 195
10	“INFO” button	Press to display the “Information” screen.	24, 148, 153, 156, 159, 162, 165, 180, 192
11	“DEST” button	Press to display the “Destination” screen.	12, 14, 16, 17, 20, 60, 187, 189
12	“MAP/VOICE” button	Press to repeat a voice guidance, cancel the screen scroll, start guidance, and display the current position.	35
13	Foot print map button	Touch to display the foot print map and the building information.	43
14	“Map Mode”	Touch to display the “Map Mode” screen.	40
15	Distance and time to destination	Touch to display the distance, estimated travel and arrival time to the destination.	88
16	XM indicator	This mark is displayed when XM information is received.	164, 166
17	“GPS” mark (Global Positioning System)	Whenever the vehicle is receiving signals from the GPS, this mark is displayed.	130

*: Press and hold the “PWR·VOL” knob for 3 seconds or more to turn off the screen and restart the navigation system. Do this when the vehicle-mounted device response is extremely slow.

1. NAVIGATION OPERATION

2. REGISTERING HOME

- 1 Press the "DEST" button.



- 4 There are 4 different methods to search your home. (See "DESTINATION SEARCH" on page 60.)



- 2 Touch "Go Home".



- 5 Touch "Enter".



If a home address has not been registered, it can be registered by touching "Go Home".

The "Edit Home" screen is displayed.

- 3 Touch "Yes".



6 Touch "OK".

Registration of home is complete.

Home can also be registered by touching **"Navigation"** on the "Setup" screen. (See "REGISTERING HOME" on page 101.)

The name, location, phone number and icon can be changed. (See "EDITING HOME" on page 102.)

The registered points can be used on the "Destination" screen. (See "DESTINATION SEARCH BY HOME" on page 61.)


1. NAVIGATION OPERATION

3. REGISTERING PRESET DESTINATIONS


- 1 Press the "DEST" button.



- 4 There are 4 different methods to search preset destinations. (See "DESTINATION SEARCH" on page 60.)

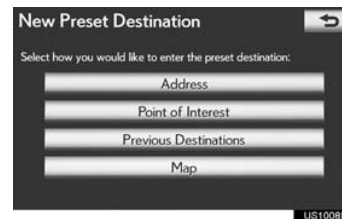

- 2 Touch one of the preset destination buttons.

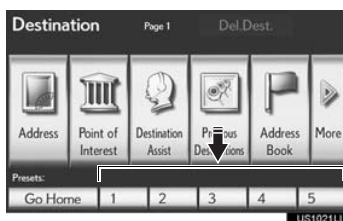

- 5 Touch "Enter".




A preset destination can be set to any preset destination button that has not yet been set.

The "Edit Preset Destination" screen is displayed.

- 3 Touch "Yes".

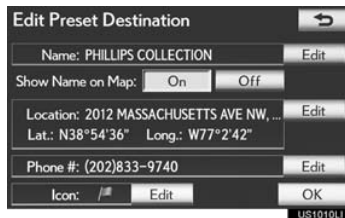

6 Touch "OK".

Registration of preset destinations is complete.

Preset destinations can also be registered by touching "**Navigation**" on the "Setup" screen. (See "REGISTERING PRESET DESTINATIONS" on page 103.)

The name, location, phone number and icon can be changed. (See "EDITING PRESET DESTINATIONS" on page 104.)

The registered points can be used on the "Destination" screen. (See "DESTINATION SEARCH BY PRESET DESTINATIONS" on page 61.)

1. NAVIGATION OPERATION


4. OPERATION FLOW: GUIDING THE ROUTE

- 1 Press the "DEST" button.



- 2 There are 11 different methods to search destinations. (See "DESTINATION SEARCH" on page 60.)


► Page 1

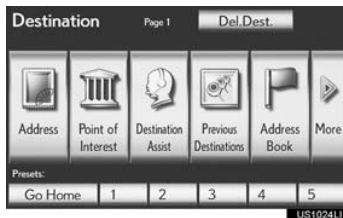

► Page 2



- 3 Touch "Go to".

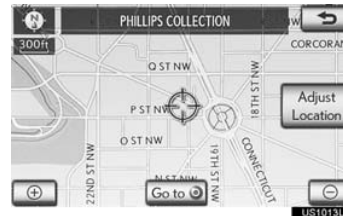

The navigation system performs a search for the route.

- 4 Touch "OK". Then start driving.



Routes other than the one recommended can also be selected. (See "STARTING ROUTE GUIDANCE" on page 78.)

Guidance to the destination is displayed on the screen and can be heard via voice guidance.

1. NAVIGATION OPERATION

5. SETTING HOME AS THE DESTINATION

- 1 Press the "DEST" button.




- 2 Touch "Go Home".



"Go Home" can be used if your home address has been registered. (To register home, see "REGISTERING HOME" on page 101.)

Your home address is set as the destination. The navigation system performs a search for the route.

- 3 Touch "OK". Then start driving.

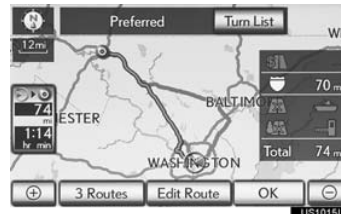

Routes other than the one recommended can also be selected. (See "STARTING ROUTE GUIDANCE" on page 78.)

Guidance to the destination is displayed on the screen and can be heard via voice guidance.

2. FUNCTION INDEX

1. NAVIGATION SYSTEM FUNCTION INDEX

► Map

Displaying maps	Page
Viewing the map screen	10
Displaying the current position	35
Viewing the current position vicinity map	35
Changing the scale	43
Changing the map orientation	44
Displaying Points of Interest	96
Displaying the estimated travel/arrival time to the destination	88
Selecting the map mode	40
Deleting map screen buttons	120
Displaying traffic information	165

Searching destinations	Page
Searching the destination	60
Changing the selected search area	60
Operating the map location of the selected destination	78

► Route guidance

Before starting route guidance	Page
Setting the destination	78
Viewing alternative routes	80
Starting route guidance	78

Before starting or during route guidance	Page
Viewing the route	78
Adding destinations	89
Changing the route	91
Displaying the estimated travel/arrival time to the destination	88

During route guidance	Page
Pausing route guidance	95
Adjusting route guidance volume	57
Deleting the destination	90
Displaying the entire route map	92

► Useful functions

Address book	Page
Registering address book entries	105
Marking icons on the map	107


Information	Page
Displaying vehicle maintenance	124

Voice command system	Page
Operating the system with your voice	134

3. QUICK REFERENCE

1. “Destination” SCREEN

The “Destination” screen enables a destination search. Press the “DEST” button to display the “Destination” screen.

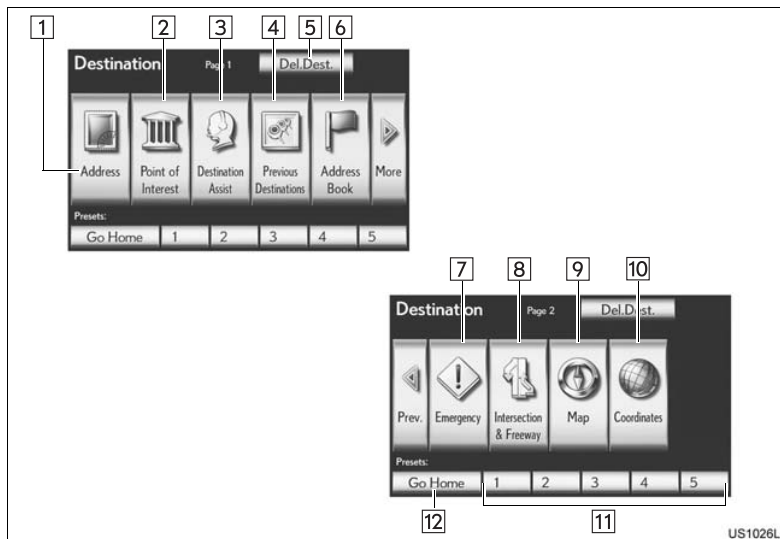


No.	Name	Function	Page
1	“Address”	Touch to input a house number and the street address using the input keys.	62
2	“Point of Interest”	Touch to select one of the POIs that have already been stored in the system’s database.	65,189
3	“Destination Assist”	Touch to provide you with live assistance finding destinations via the Lexus Enform with Safety Connect response center.	71,187
4	“Previous Destinations”	Touch to select a destination from any of the last 100 previously set destinations and from the previous starting point.	72

No.	Name	Function	Page
5	"Del.Dest."	Touch to delete set destinations.	77
6	"Address Book"	Touch to select the desired location from a registered entry in "Address book". (To register address book entries, see "REGISTERING ADDRESS BOOK ENTRIES" on page 106.)	72
7	"Emergency"	Touch to select one of the 4 categories of emergency service points that have already been stored in the system's database.	73
8	"Intersection & Freeway"	Touch to enter the names of 2 intersecting streets or a freeway (interstate) entrance or exit. This is helpful if only the general vicinity, not the specific address, is known.	73
9	"Map"	Touch to enable setting a destination by touching a location on the map screen.	76
10	"Coordinates"	Touch to enter latitude and longitude coordinates.	76
11	Preset destination buttons	Touch to select one of the 5 preset destination points as a destination. If a preset destination point has not been registered, a message will be displayed asking if it is desirable to set a destination to the preset screen button. (To register a preset destination, see "REGISTERING PRESET DESTINATIONS" on page 103.)	61
12	"Go Home"	Touch to select your personal home address without having to enter the address each time. If a home address has not been registered, a message will be displayed and the setting screen will automatically appear. (To register home, see "REGISTERING HOME" on page 101.)	61

3. QUICK REFERENCE

2. "Setup" SCREEN

The items shown on the "Setup" screen can be set. Press the "SETUP" button to display the "Setup" screen.

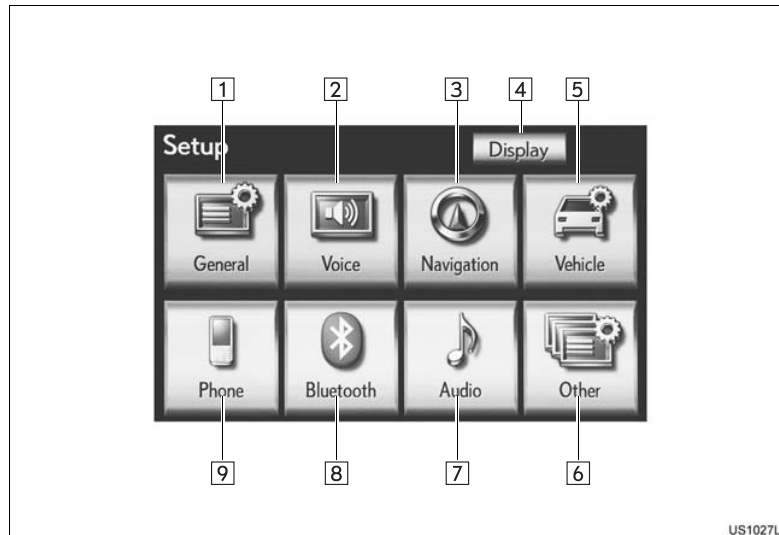


No.	Name	Function	Page
1	"General"	Touch to change the selected language, operation sound, automatic screen change settings, etc.	46
2	"Voice"	Touch to set the voice guidance settings.	56
3	"Navigation"	Touch to set home, preset destinations, address book, areas to avoid, etc. or to delete previous destinations.	100
4	"Display"	Touch to adjust the contrast and brightness of the screens, turn the display off, etc.	33
5	"Vehicle"	Touch to set vehicle information such as maintenance information.	124
6	"Other"	Touch to set Lexus Insider, XM Sports, XM Stocks and XM Fuel Prices.	168, 195
7	"Audio"	Touch to set iPod and HD Radio™ channel settings.	Owner's Manual
8	"Bluetooth*"	Touch to set Bluetooth® phones and Bluetooth® audio devices.	Owner's Manual
9	"Phone"	Touch to set the phone sound, phonebook, message settings, etc.	Owner's Manual

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

3. QUICK REFERENCE

3. "Information" SCREEN

This screen can be used to display the XM satellite system, fuel consumption, etc. Press the "INFO" button to display the "Information" screen.

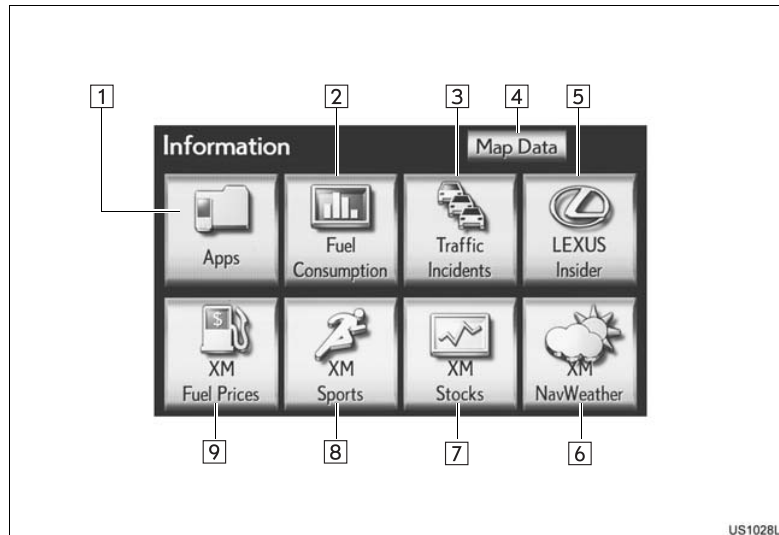

3. QUICK REFERENCE

No.	Name	Function	Page
1	"Apps"	Touch to display the "Apps" screen.	180, 183
2	"Fuel Consumption"	Touch to display the fuel consumption screen.	Owner's Manual
3	"Traffic Incidents"	Touch to display traffic incidents.	165
4	"Map Data"	Touch to display map data information.	148
5	"LEXUS Insider"	Touch to display the "LEXUS Insider" screen.	192
6	"XM NavWeather"	Touch to display weather information.	162
7	"XM Stocks"	Touch to display personally selected stocks information.	156
8	"XM Sports"	Touch to display personally selected sports teams information.	153
9	"XM Fuel Prices"	Touch to display current fuel prices and gas station locations information.	159

