

WIRING HARNESS

SECTION WH

GI

EM

LC

EC

FE

CONTENTS

PRECAUTION

Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	4
---	---

ENGINE

ENGINE (QG1.5)

Circuit Diagram	5
Wiring Diagram	6
Power & Ground	6
POS	7
PHASE	8
WTS	9
Oxygen Sensor	10
Knock Sensor	11
A/C Refrigerant Pressure Sensor	12
TPS	13
P.S Signal	14
AT Communication	15
Ignition	16
Injector	17
Fuel Pump	18
Canister	19
ISC	20
MAP	21
AT Communication	22
Cooling Fan	23
Diagnosis	24

ENGINE (QG1.6)

Circuit Diagram	25
Wiring Diagram	26
Power & Ground	26
POS	27
PHASE	28
WTS	29
Oxygen Sensor	30
Knock Sensor	31
A/C Refrigerant Pressure Sensor	32

ETC	33
AWU	35
P.S Signal	36
AT Communication	37
Ignition	38
Injector	39
Fuel Pump	40
Canister	41
CVTC	42
AFM	43
Ignition Signal	44
ECM Power Supply	45
Neutral Position Signal	46
AT Signal	47
Cooling Fan	48
Diagnosis	49

RS

AC

AV

EL

WH

CL

CHASSIS

AUTOMATIC TRANSAXLE

Circuit Diagram	50
Wiring Diagram	51
AT	51
AT-DEVICE	56

MT

AT

FA

ABS SYSTEM

Circuit Diagram	57
Wiring Diagram	58
ABS	58

RA

ELECTRIC

SRS AIRBAG

Circuit Diagram	61
Wiring Diagram	62
SRS	62

ST

BT

MANUAL/AUTO AIR CONDITIONER

Circuit Diagram	64
Manual A/C	64

CONTENTS

Wiring Diagram	65	Headlamp	117
Manual A/C	65	Headlamp Aiming	118
Circuit Diagram	70	TAIL LAMP	
Auto A/C	70	Circuit Diagram	119
Wiring Diagram	71	Wiring Diagram	120
Auto A/C	71	Tail lamp.....	120
AUDIO		FOG LAMP	
Circuit Diagram	77	Wiring Diagram	122
Audio	77	Fog lamp (FR)	122
Wiring Diagram	78	Fog lamp (RR)	123
Audio	78	ROOM LAMP	
COMBINATION METER		Wiring Diagram	124
Circuit Diagram	80	Room lamp	124
Wiring Diagram	81	TRUNK ROOM LAMP	
Warning light	81	Wiring Diagram	125
Gage	85	Trunk room lamp	125
COMBINATION METER - CHIME		STOP LAMP	
Circuit Diagram	87	Wiring Diagram	126
Wiring Diagram	88	Stop lamp.....	126
Warning light (Buzzer)	88	REVERSE LAMP	
Meter	90	Wiring Diagram	127
Meter (Diagnosis)	91	Reverse lamp	127
LOCK • UNLOCK		ILLUMINATION	
Circuit Diagram - Single	92	Circuit Diagram	128
Wiring Diagram	93	Wiring Diagram	129
Lock-Unlock (Single)	93	Illumination	129
Circuit Diagram - Double	97	TURN SIGNAL LAMP • HAZARD LAMP	
Wiring Diagram	98	Circuit Diagram	133
Lock-Unlock (Double)	98	Wiring Diagram	134
ANTI-THEFT SYSTEM		Turn signal lamp	134
Circuit Diagram	103	DIGITAL CLOCK	
Wiring Diagram	104	Wiring Diagram	136
Anti-Theft	104	Digital clock	136
IMMOBILIZER		WIPER	
Wiring Diagram	107	Wiring Diagram	137
Immobilizer	107	Wiper	137
POWER WINDOW SYSTEM		HORN	
Circuit Diagram	108	Wiring Diagram	138
Wiring Diagram	109	Horn	138
Power Window (4DR)	109	CIGARETTE LIGHTER / POWER SOCKET	
Power Window (2DR)	112	Wiring Diagram	139
CHARGING SYSTEM		Power Socket	139
Wiring Diagram	114	HEATER SEAT	
Charge	114	Wiring Diagram	140
STARTING SYSTEM		Heater Seat.....	140
Wiring Diagram	115	TRUNK LID OPENER	
Start (M/T)	115	Wiring Diagram	141
Start (A/T)	116	Trunk Opener	141
HEADLAMP			
Wiring Diagram	117		

CONTENTS

DEFOGGER, DE-ICER

Circuit Diagram	142
Wiring Diagram	143
Defogger	143

MIRROR

Wiring Diagram	145
Mirror	145

CAN COMMUNICATION

Wiring Diagram	146
CAN Communication	146

POWER SUPPLY ROUTING

Circuit Diagram	147
Wiring Diagram	148
Power	148
Ground - Engine Room	155
Ground - Main	158
Ground - EGI (QG16)	162
Ground - EGI (QG15)	163
Ground - Body	164
Ground - Tail	165

ELECTRICAL UNIT LOCATION

Engine Room	166
Interior	167
Trunk Room	168

HARNESS DIAGRAM

Overall	169
How to Read Harness Layout	170

HARNESS LAYOUT

Engine Room Harness	171
Main Harness	173
Engine Control Harness (QG15)	175
Engine Control Harness (QG16)	177
Body, Body No. 2, Tail and Room lamp harness	179
Door Harness	181

FUSE BLOCK-JUNCTION BLOCK (J/B)

Fuse Block	183
------------------	-----

FUSE & FUSIBLE LINK BOX

Fuse & Fusible Link Box	184
-------------------------------	-----

CONTROL UNIT, JOINT CONNECTOR

Terminal Arrangement	185
----------------------------	-----

GI

EM

LC

EC

FE

RS

AC

AV

EL

WH

CL

MT

AT

FA

RA

BR

ST

BT

PRECAUTION

Precaution

Precautions for Supplemental Restraint System (SRS) “AIR BAG” and “SEAT BELT PRE-TENSIONER”

The Supplemental Restraint System such as “AIR BAG” and “SEAT BELT PRE-TENSIONER”, used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the RS section of this Service Manual.

WARNING:

To install/remove the SRS airbag, pretensioner seatbelt system related components and harness, turn the ignition switch “OFF”, disconnect the battery terminals and wait over 3 minutes. (This is to discharge all the remaining electricity in the airbag sensor unit's auxiliary power circuit.)

Do not use air impact or electrical tools when installing/removing the components.

Do not use any hand-held tools for harness used in SRS airbag and pretensioner seatbelt systems. Be careful with the harness not to tangle with or interfere with other components.

Do not use any electrical test equipments such as circuit tester when inspecting the SRS airbag and pretensioner seatbelt circuit while installed unless the Service Manual instructs to do so. (The weak current in the tester can cause the SRS airbag to operate.)

Do not insert any foreign materials such as a screwdriver in the airbag module and pretensioner seatbelt connector in order to prevent unintended operation due to static electricity.

The harnesses used in SRS airbag and pretensioner are covered with yellow insulation for easy identification.

Refer to “RS Restraint System” in this Service Manual for safe airbag system service information.

ENGINE (QG1.5)

 
Circuit Diagram



ENGINE (QG1.5)

Wiring Diagram

EC/Power & Ground






ENGINE (QG1.5)

Wiring Diagram

 
EC/Oxygen Sensor



ENGINE (QG1.5)

Wiring Diagram

 EC/A/C Refrigerant Pressure Sensor






ENGINE (QG1.5)

Wiring Diagram

 EC/Injector



ENGINE (QG1.5)

Wiring Diagram

 
EC/Fuel Pump



ENGINE (QG1.5)

Wiring Diagram

EC/ISC



ENGINE (QG1.5)

 
Wiring Diagram

EC/AT Communication

ENGINE (QG1.5)

Wiring Diagram

EC/Cooling Fan



ENGINE (QG1.5)

Wiring Diagram

EC/Diagnosis

ENGINE (QG1.6)

Circuit Diagram



ENGINE (QG1.6)

Wiring Diagram

EC/Power & Ground





Wiring Diagram

 
EC/Oxygen Sensor

 


ENGINE (QG1.6)

Wiring Diagram

EC/A/C Refrigerant Pressure Sensor





ENGINE (QG1.6)

 
 
Wiring Diagram

EC/P .S Signal

ENGINE (QG1.6)

Wiring Diagram

EC/AT Communication



ENGINE (QG1.6)

Wiring Diagram

EC/Ignition



ENGINE (QG1.6)

 
Wiring Diagram

EC/Fuel Pump

ENGINE (QG1.6)

Wiring Diagram






EC/Canister



ENGINE (QG1.6)

Wiring Diagram

   EC/AFM

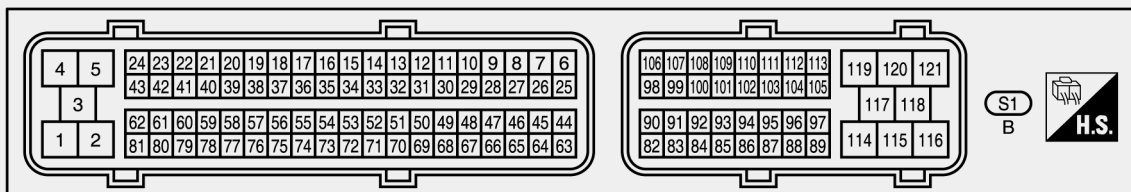

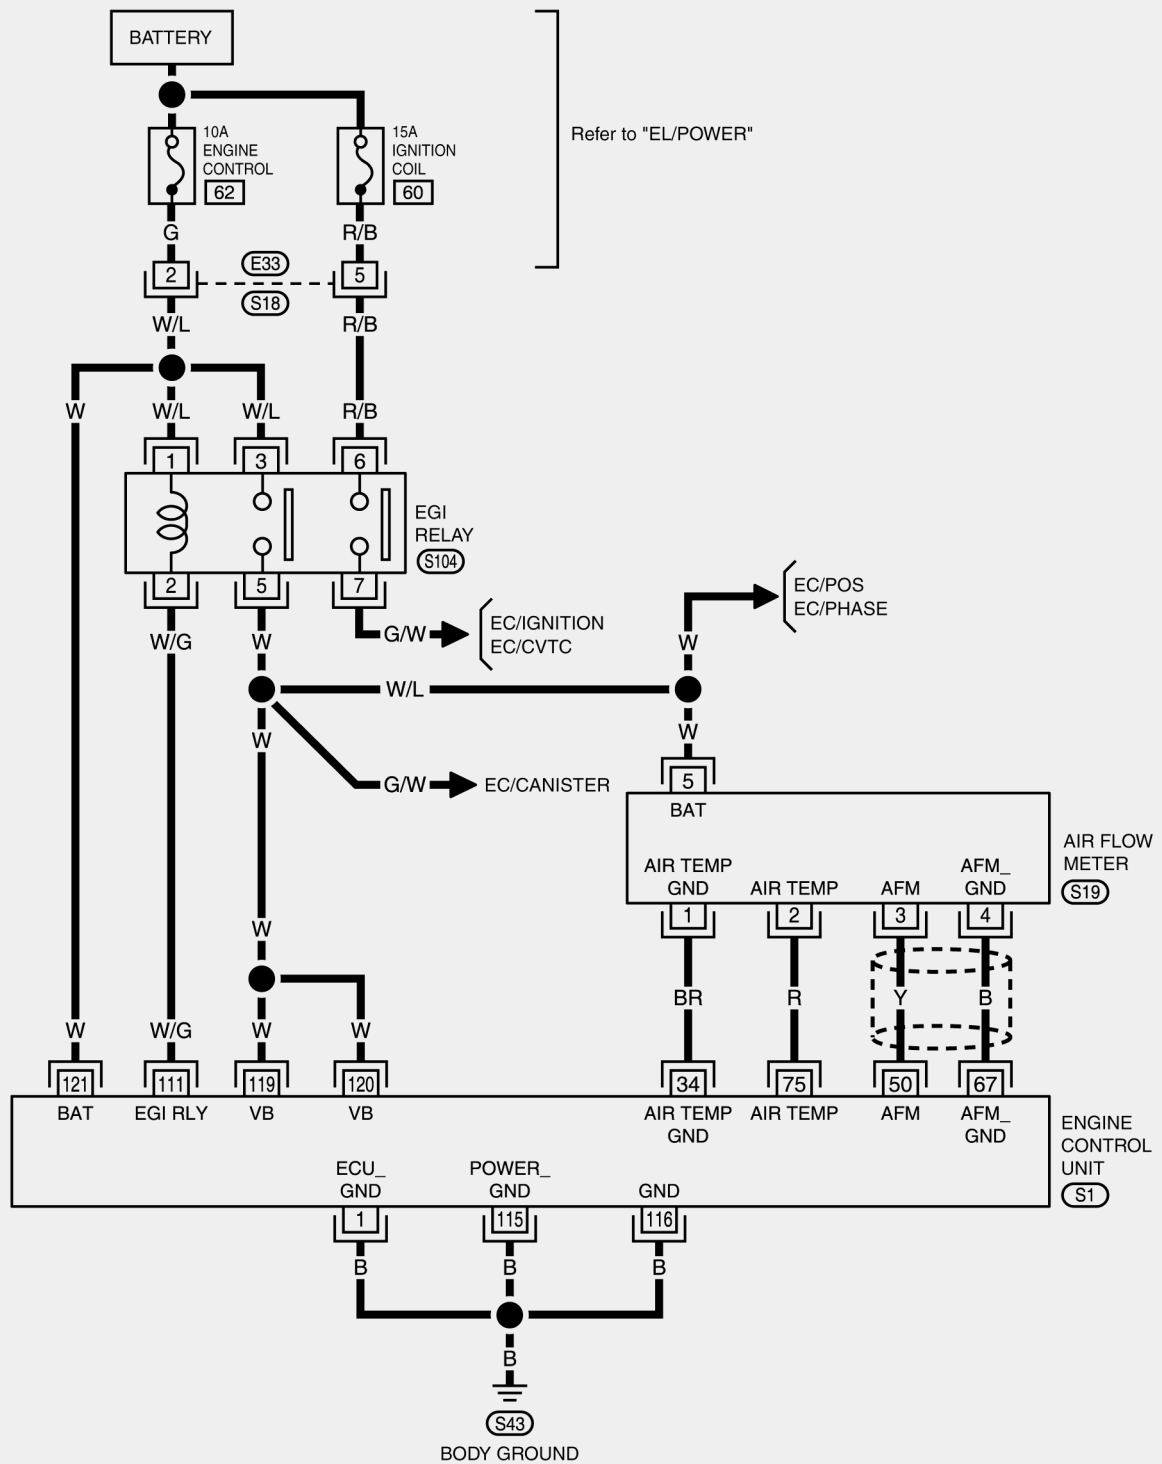


SEWU019_O1



ENGINE (QG1.6)

Wiring Diagram

  EC/Ignition Signal

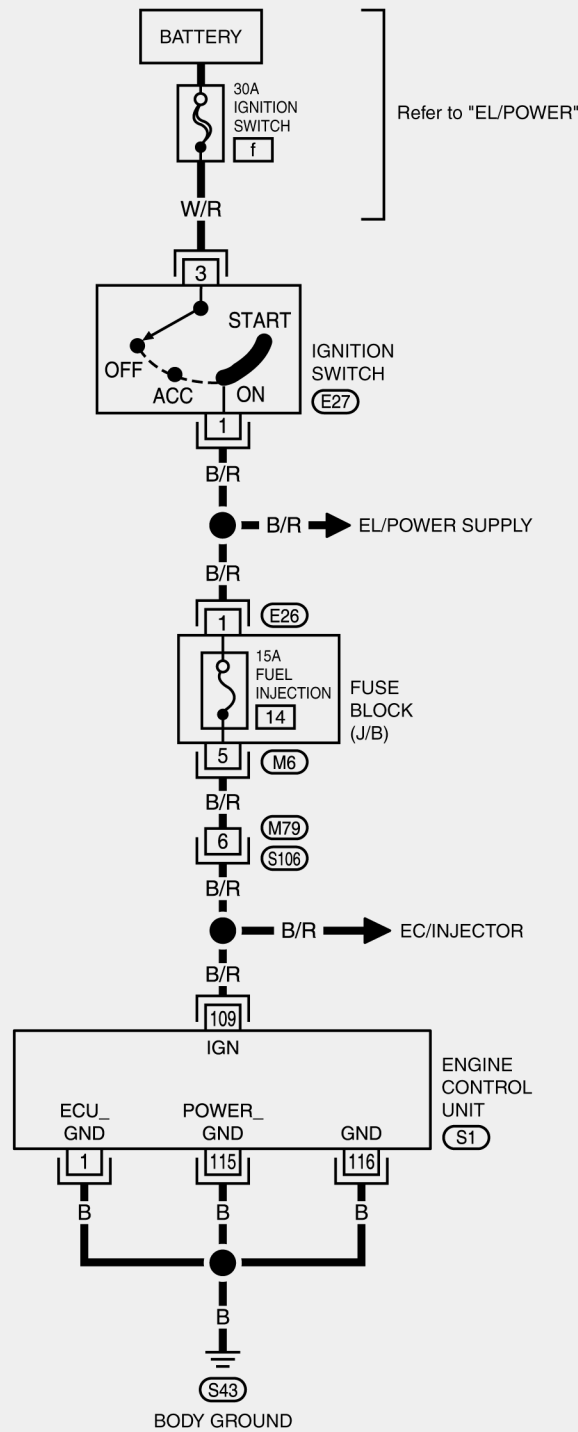

Refer to "FUSE BLOCK (J/B)"


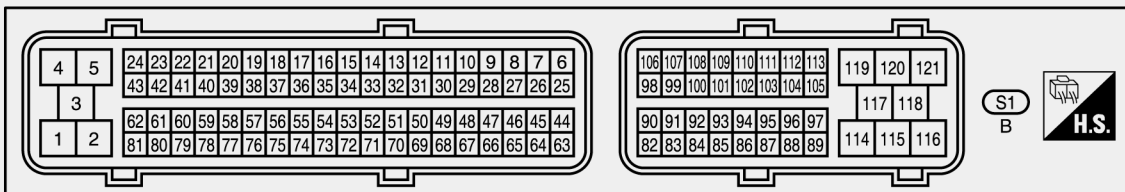
 


SEWU020_01

ENGINE (QG1.6)

Wiring Diagram

 EC/ECM Power Supply

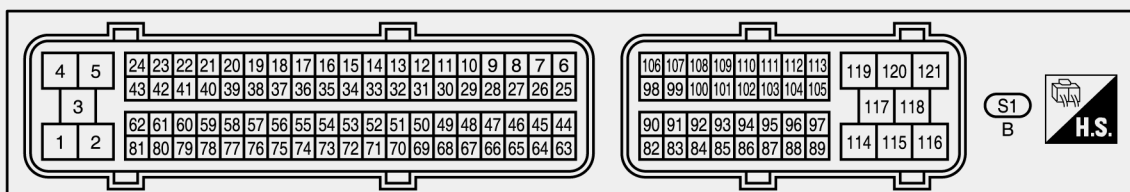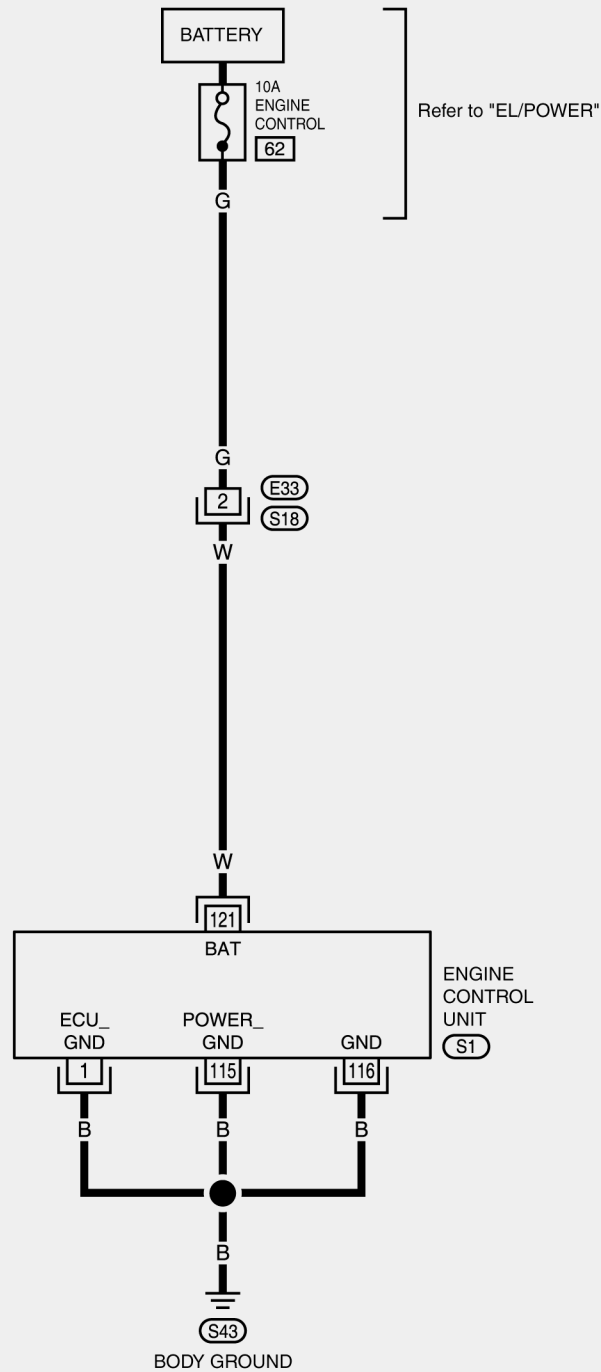


SEWU021_O1

GI
EM
LC
EC
FE
RS
AC
AV
EL
WH
CL
MT
AT
FA
RA
BR
ST
BT

ENGINE (QG1.6)

Wiring Diagram

EC/Neutral Position Signal


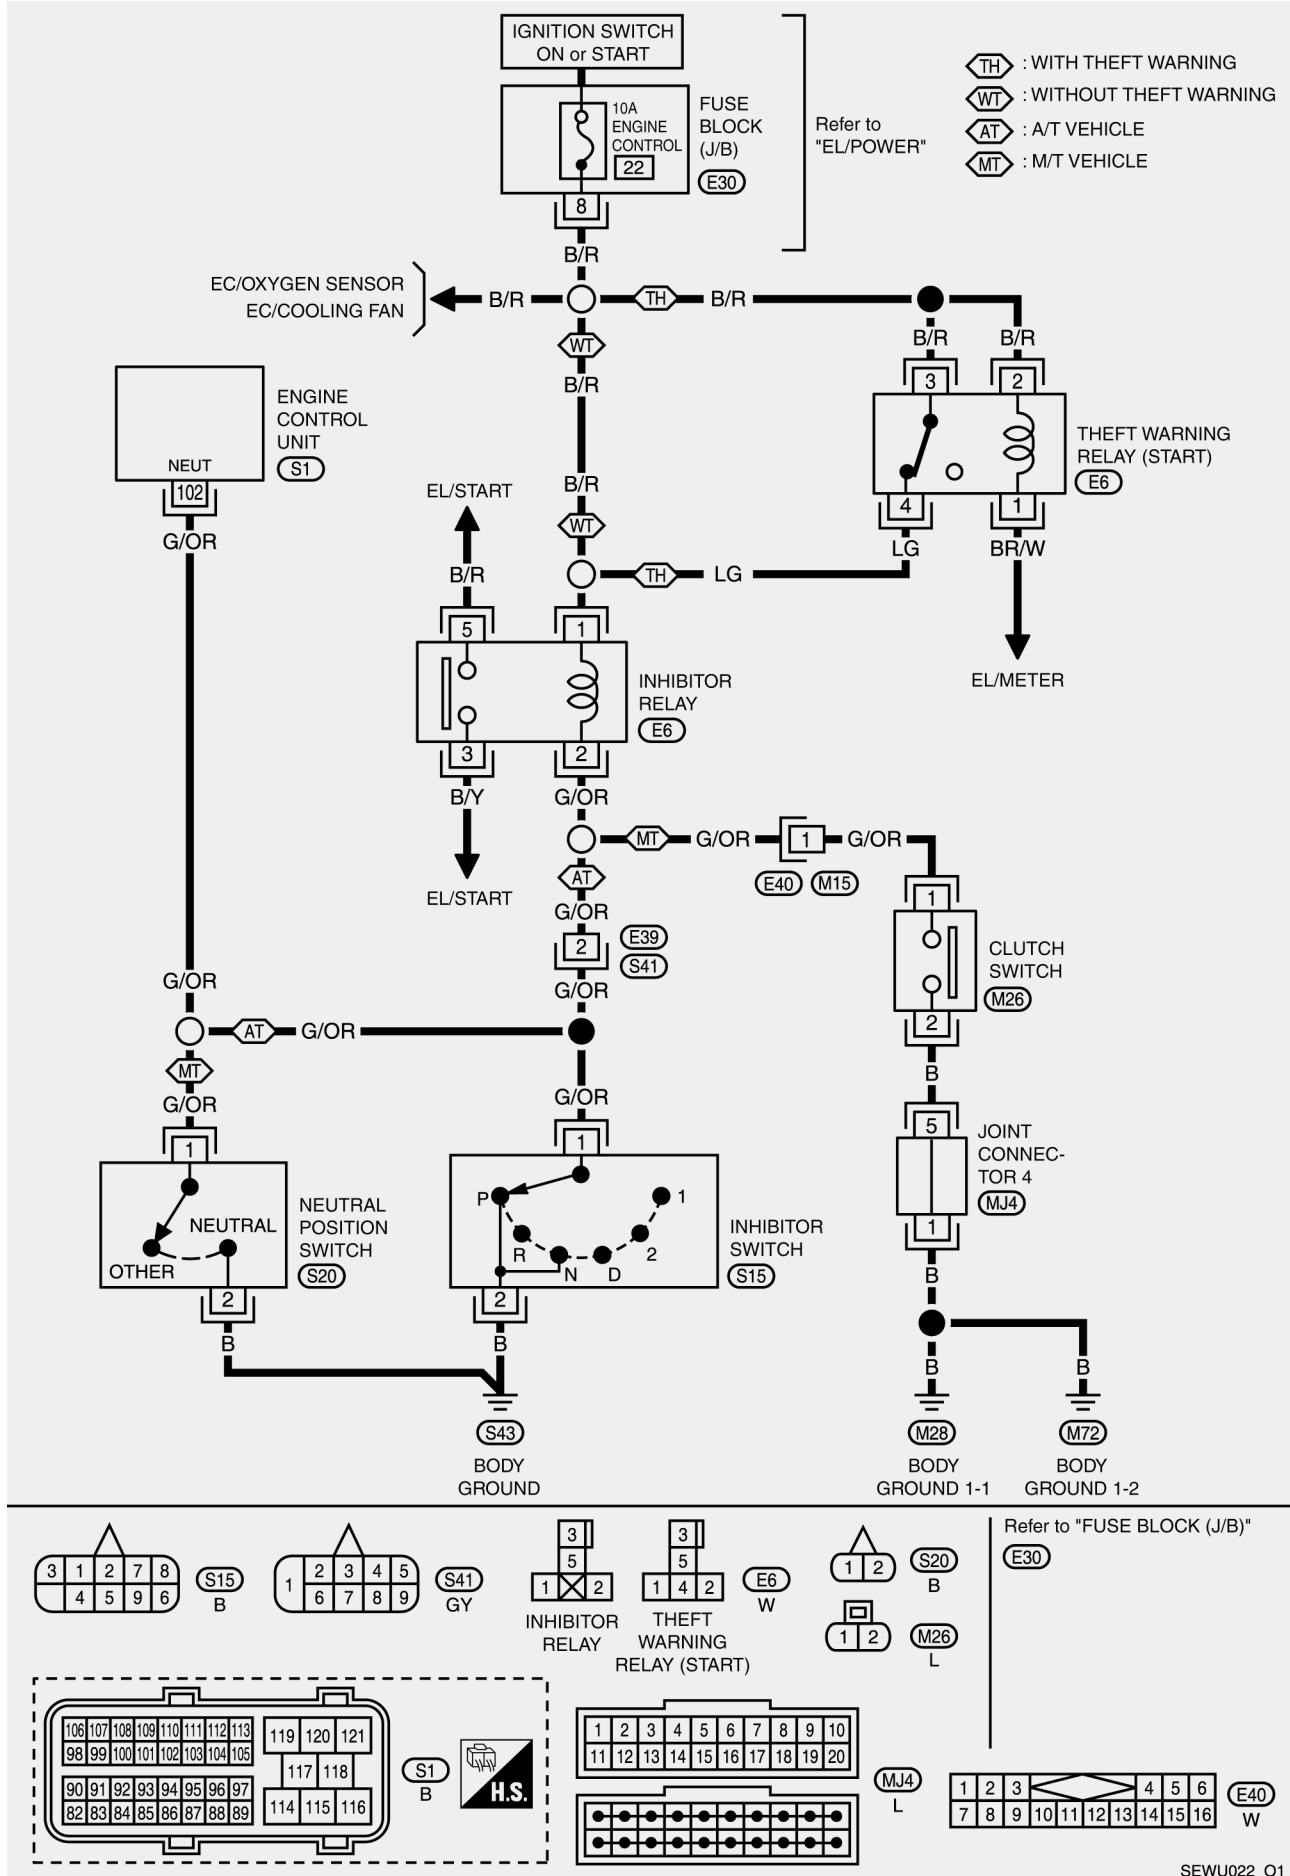


SEWU022_01

ENGINE (QG1.6)

Wiring Diagram

EC/AT Signal

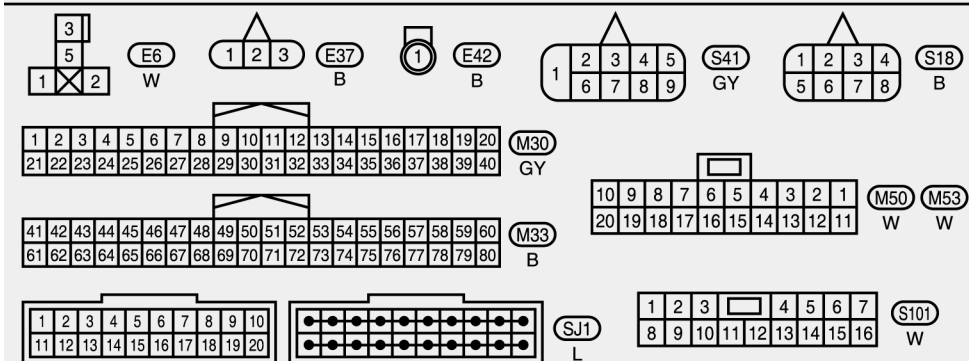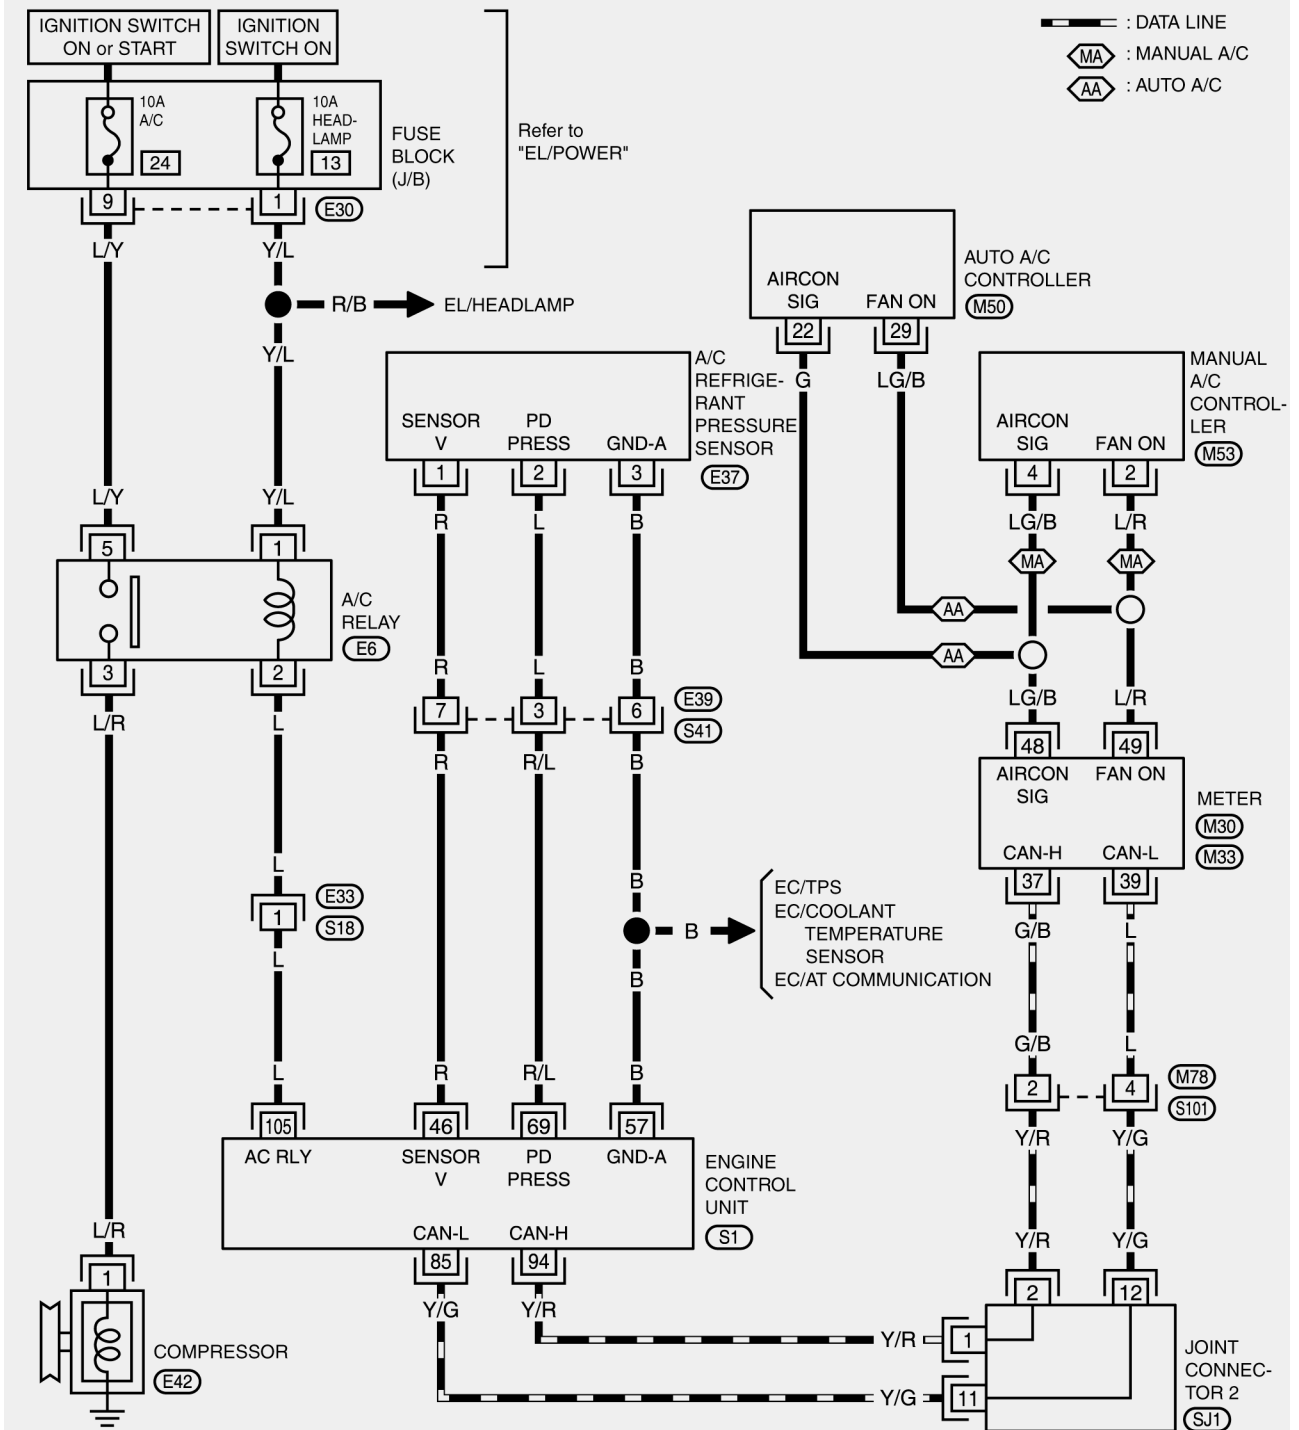

Refer to "FUSE BLOCK (J/B)"

E30



Refer to "ELECTRICAL UNIT"

S1

ENGINE (QG1.6)

Wiring Diagram

EC/Cooling Fan

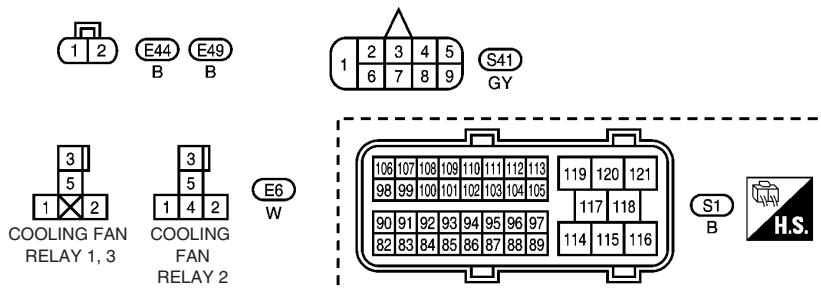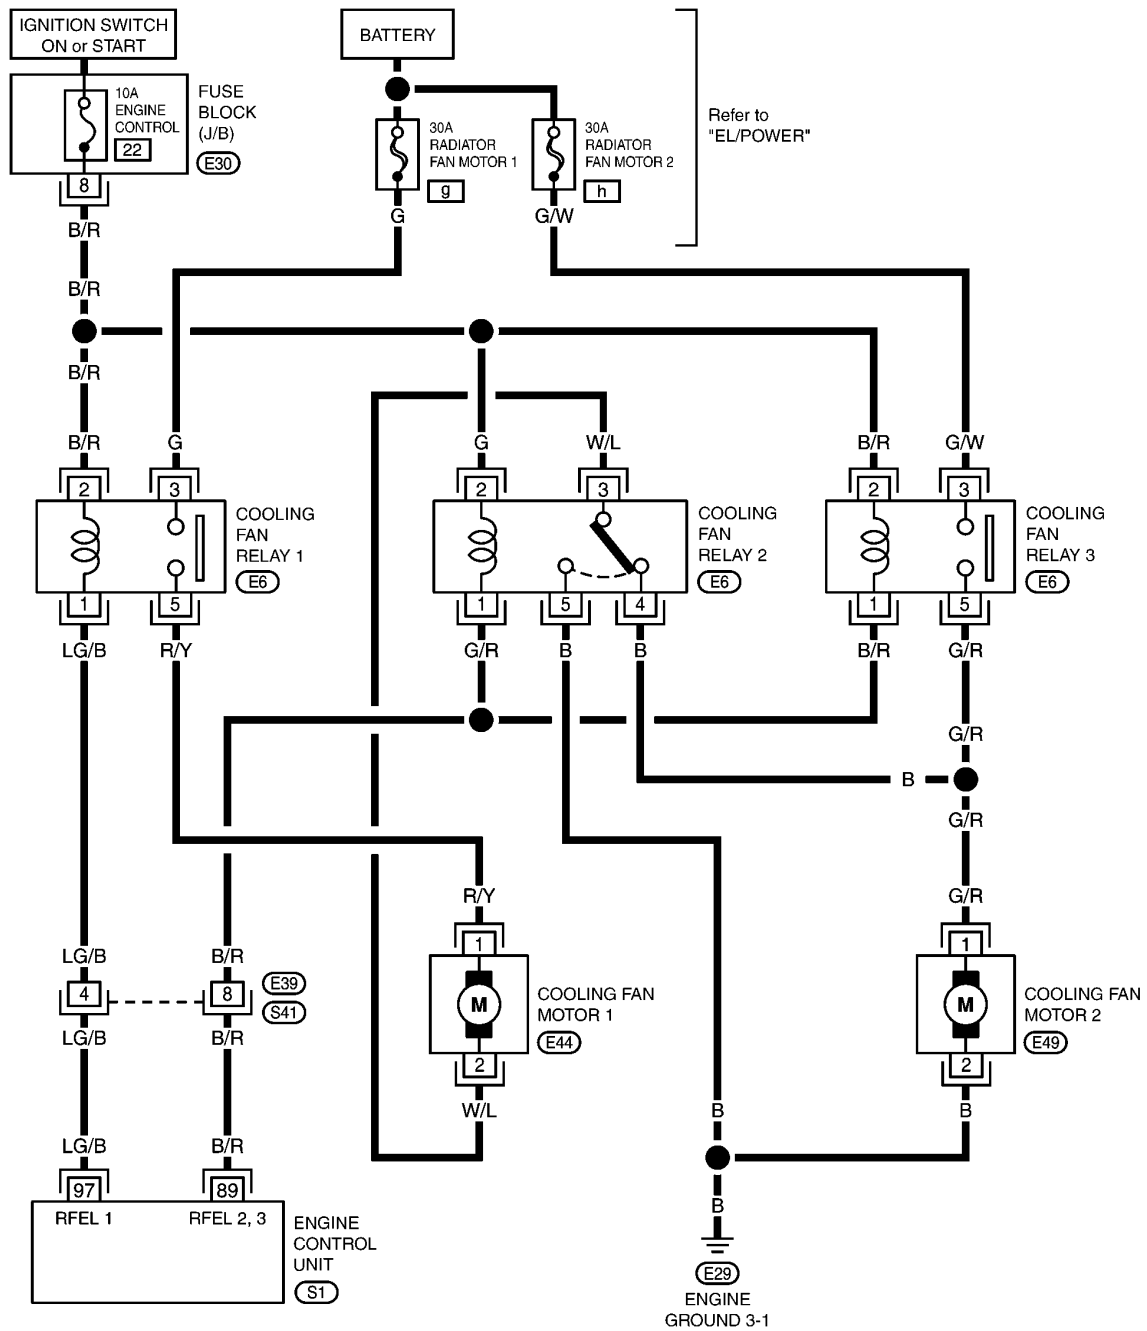









Refer to "FUSE BLOCK (J/B)" (E30)

SEWU024_O1

ENGINE (QG1.6)

Wiring Diagram

      EC/Diagnosis

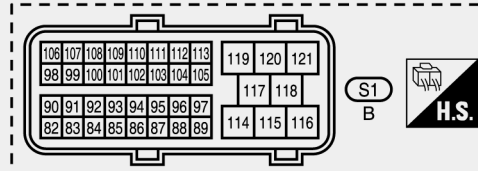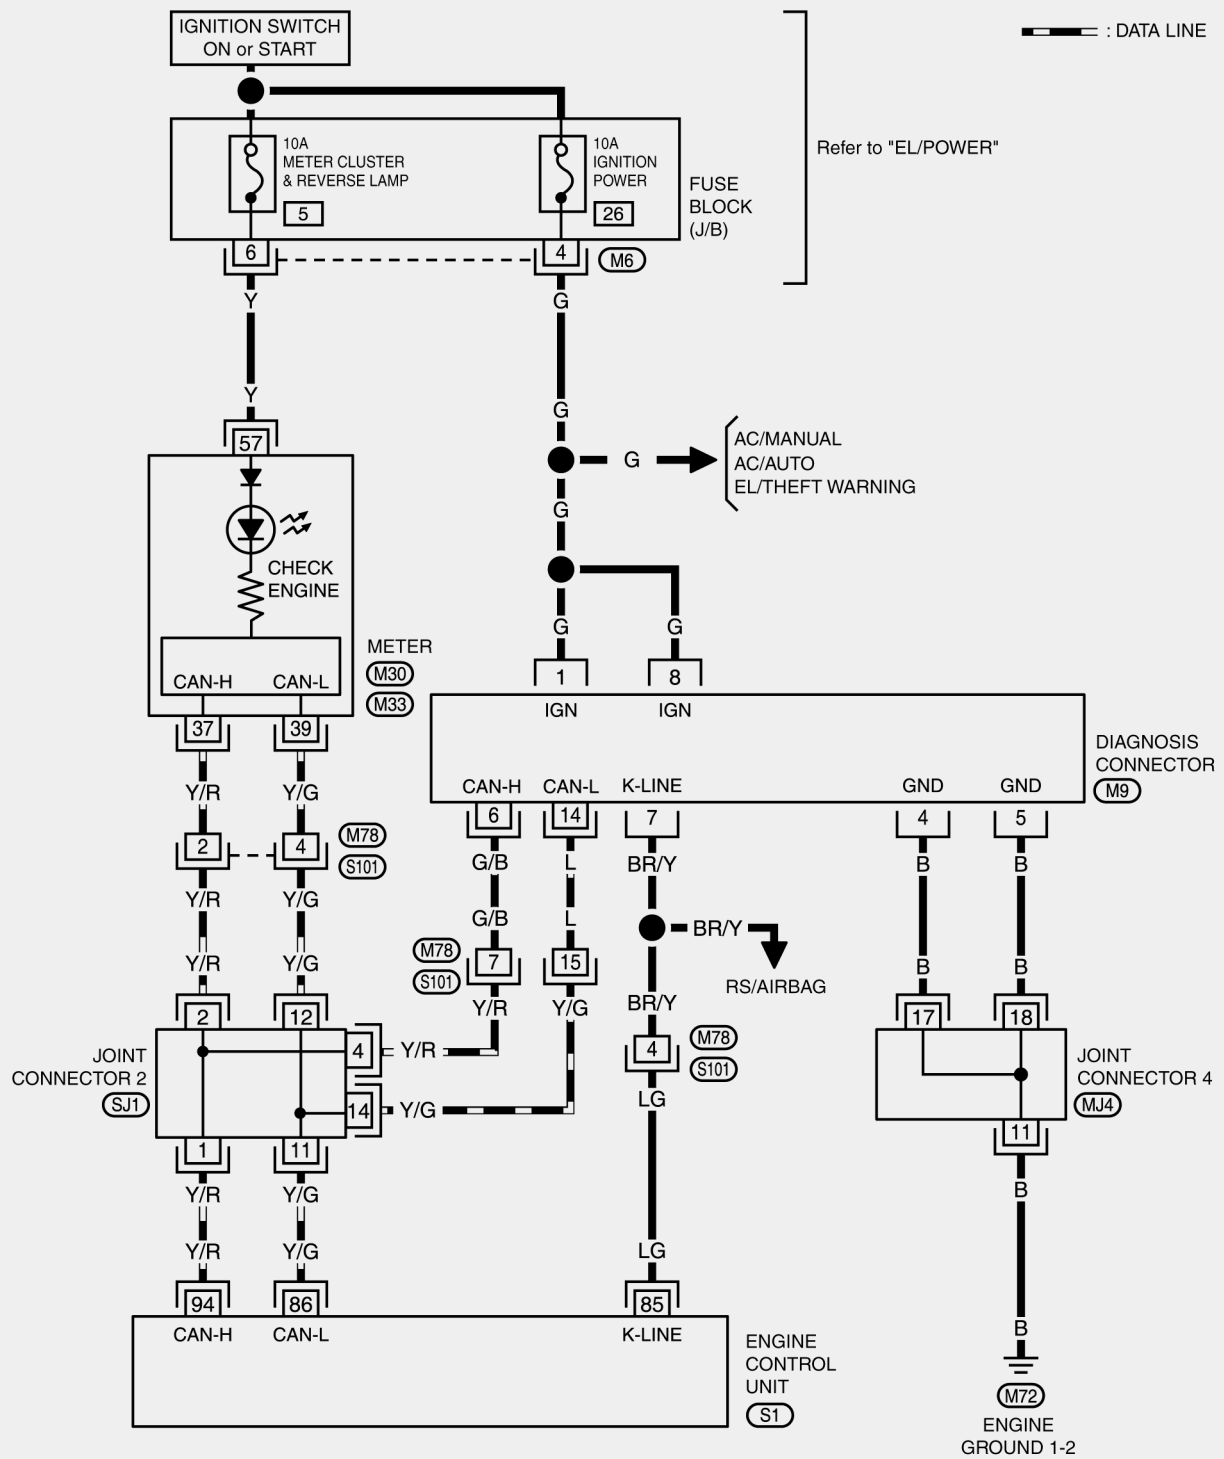


Refer to "FUSE BLOCK (J/B)"

M6

AUTOMATIC TRANSAXLE







Circuit Diagram

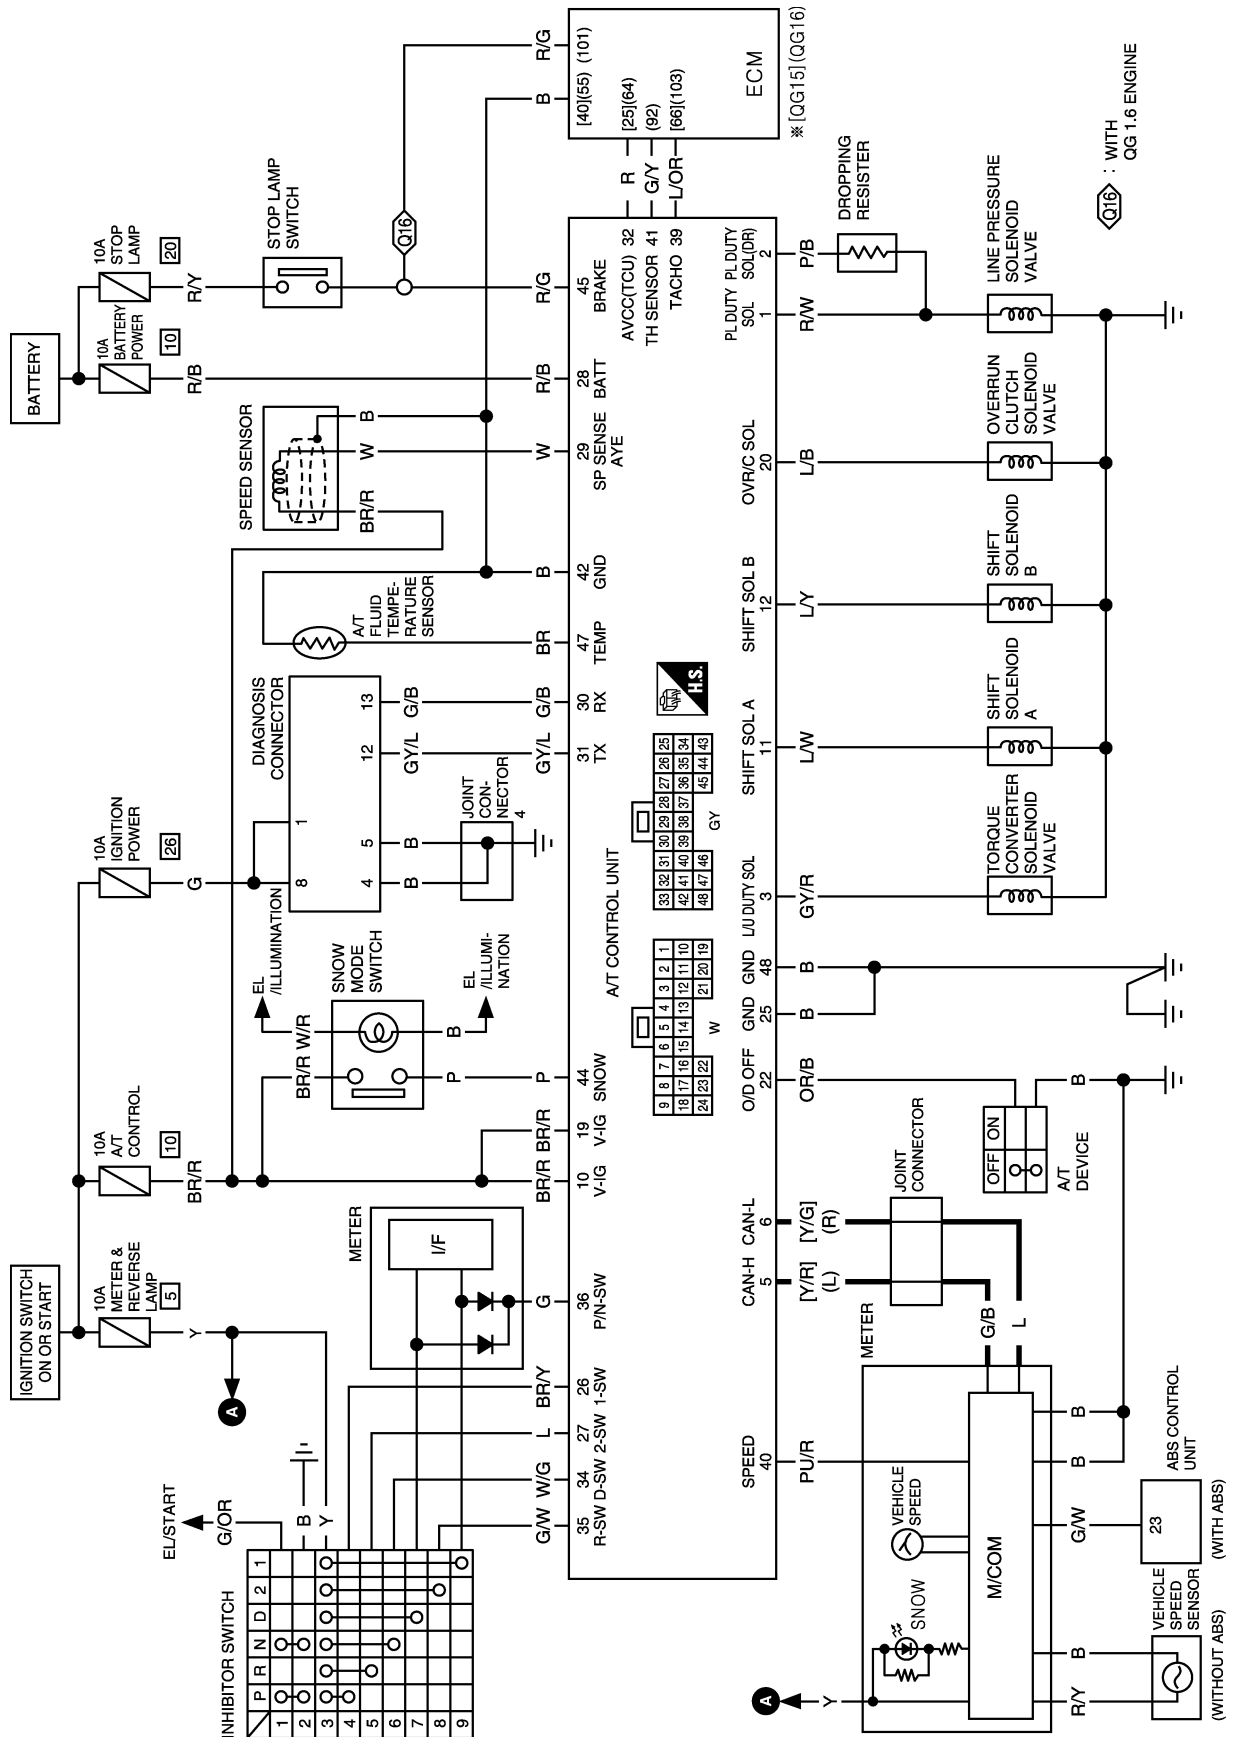

AUTOMATIC TRANSAXLE

Wiring Diagram

    AT/AT-01

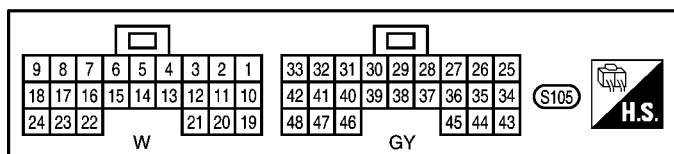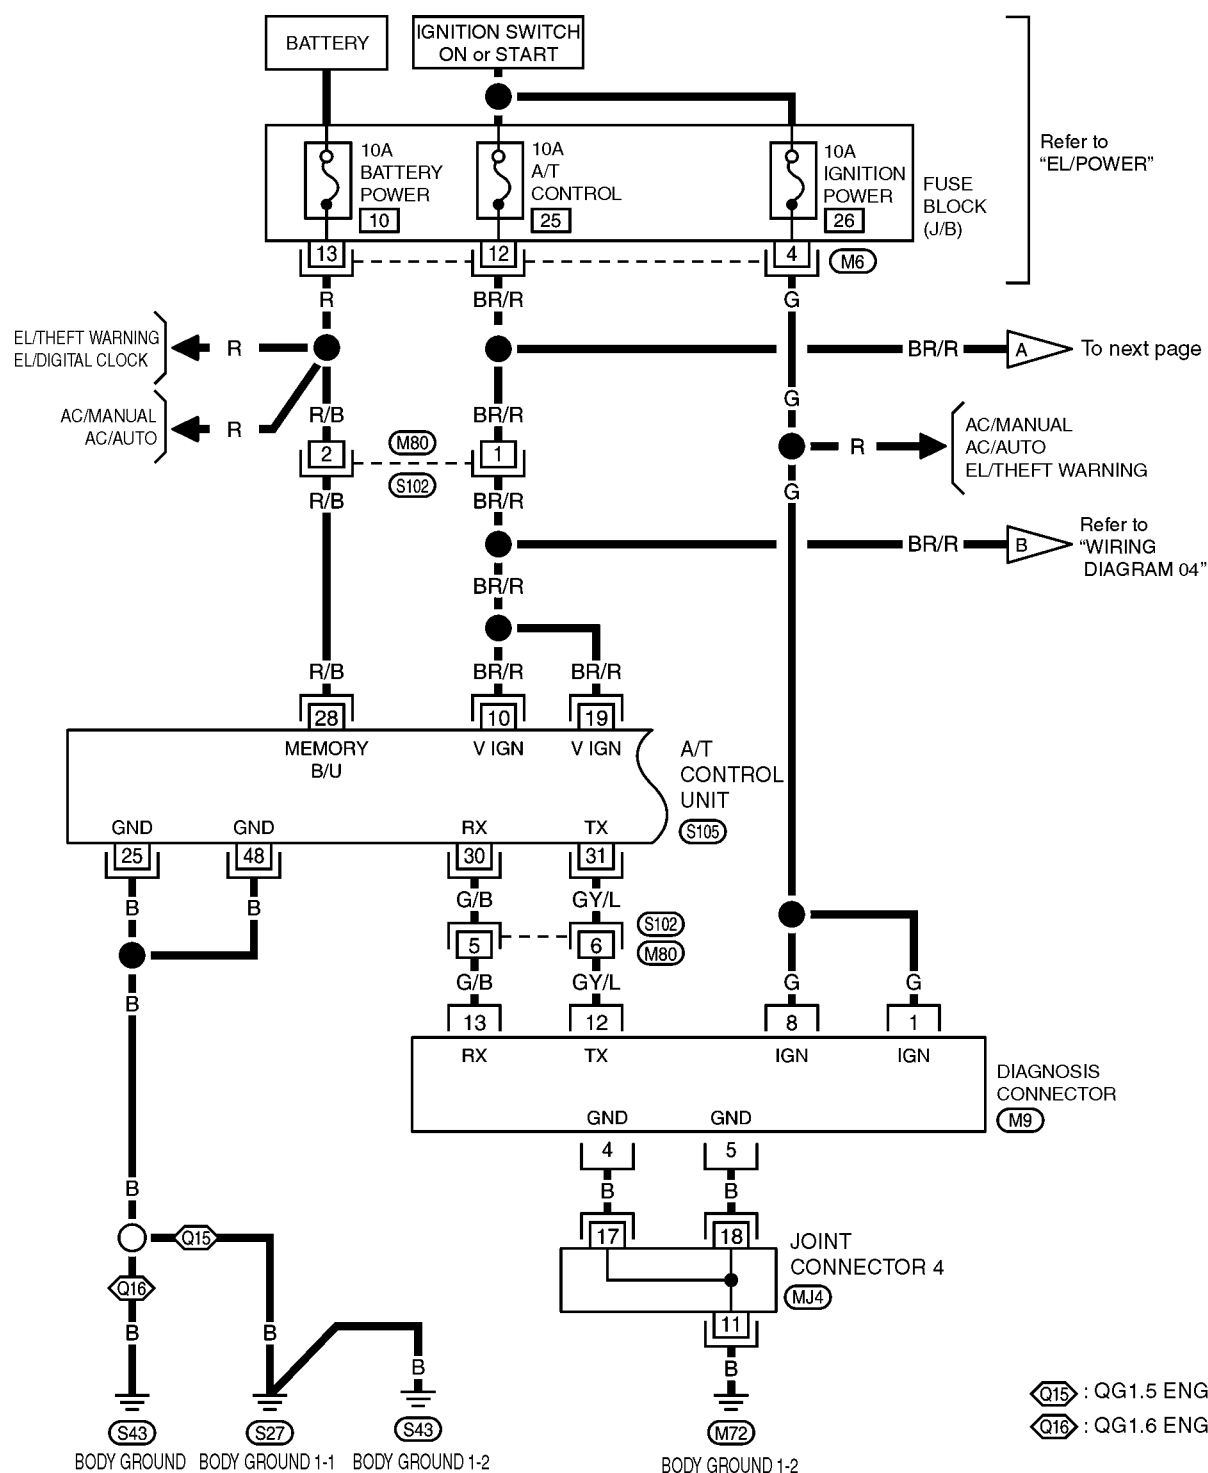


Refer to "FUSE BLOCK (J/B)"

M6


MJ4

L

AT/AT-02

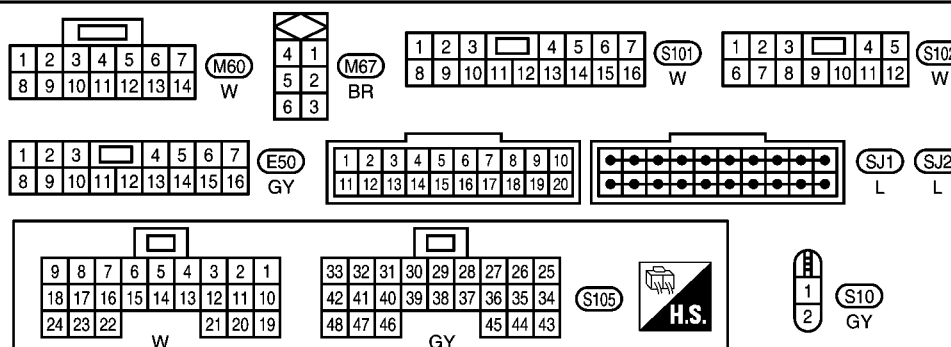

(E54)

 AT/AT-03

AUTOMATIC TRANSAXLE

Wiring Diagram

AT/AT-04

Q15 : QG1.5 Engine

Q16 : QG1.6 Engine

* 1 66 : Q15


 



103 : Q16

* 2 25 : Q15

64 : Q16

* 3 40 : Q15

55 : Q16

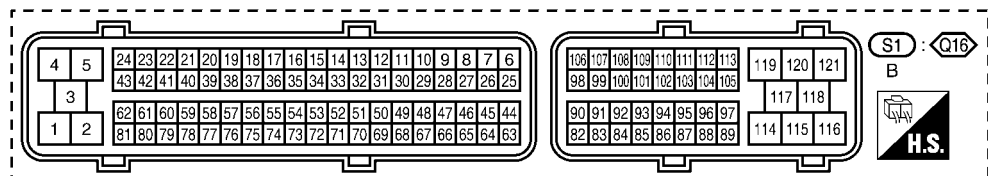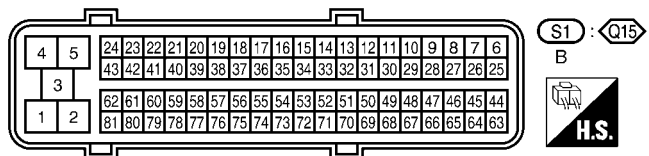
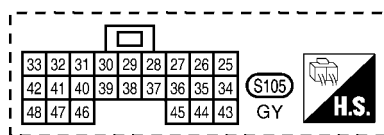
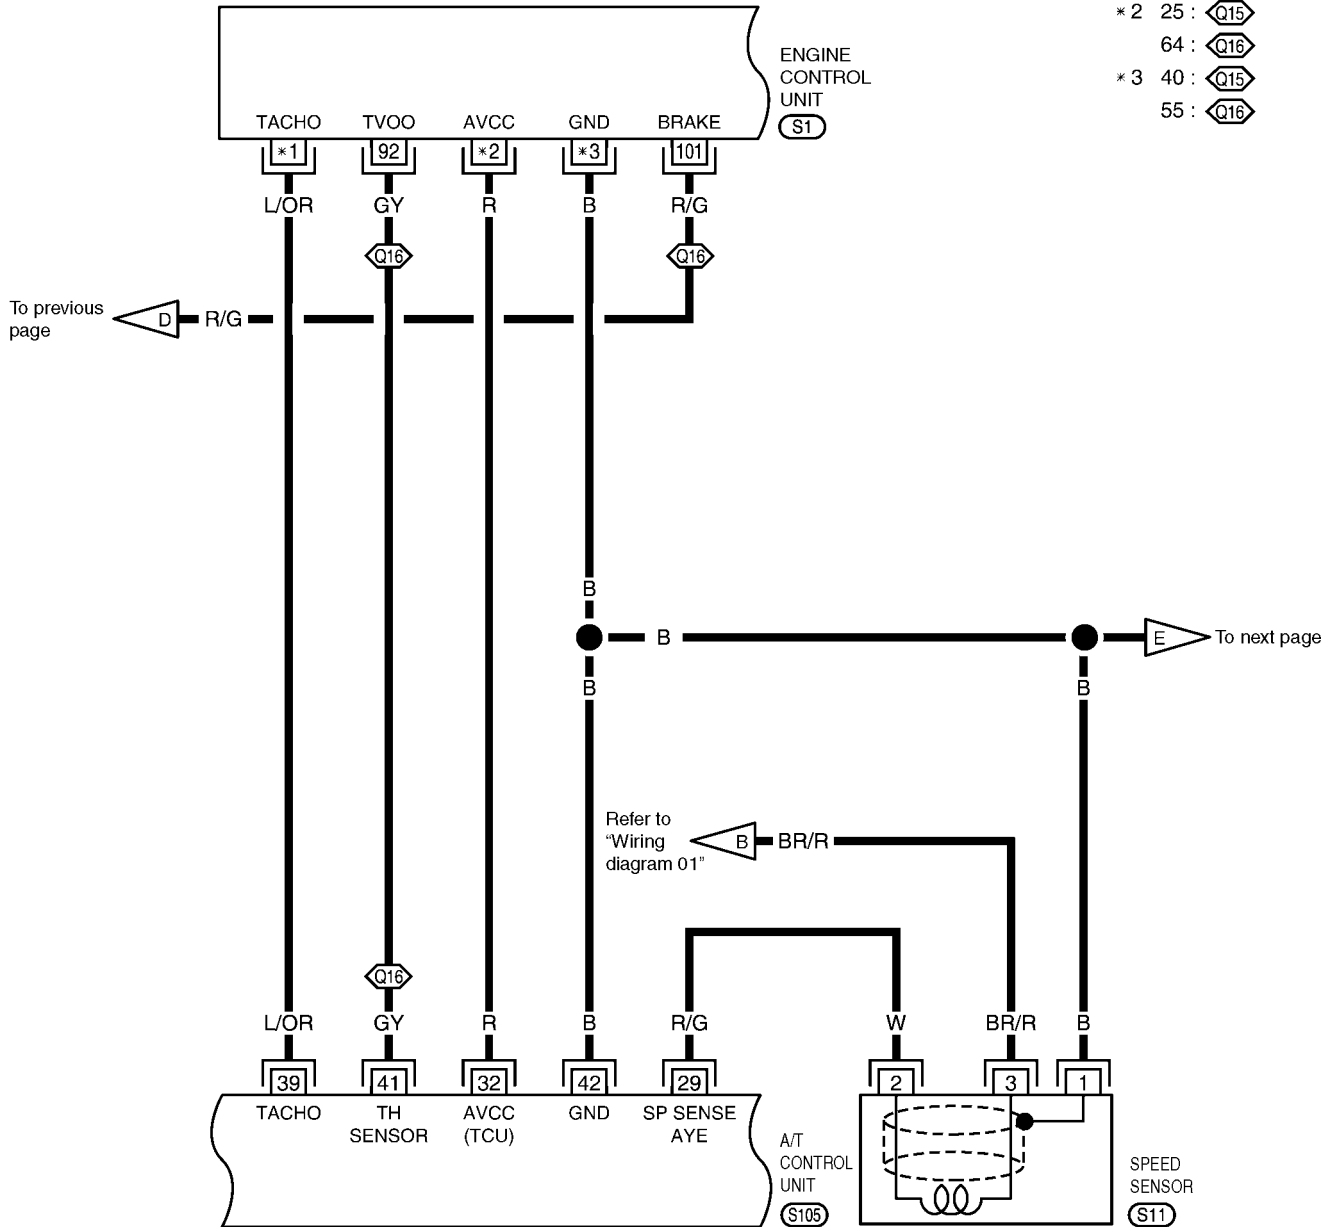


SIWZ004_01

AUTOMATIC TRANSAXLE

Wiring Diagram

AT/AT-05




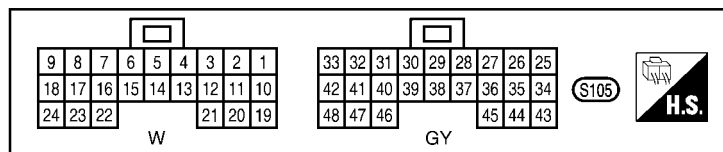
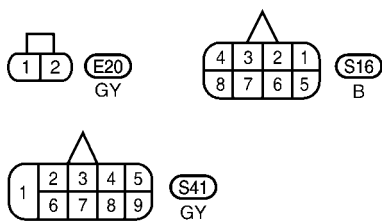
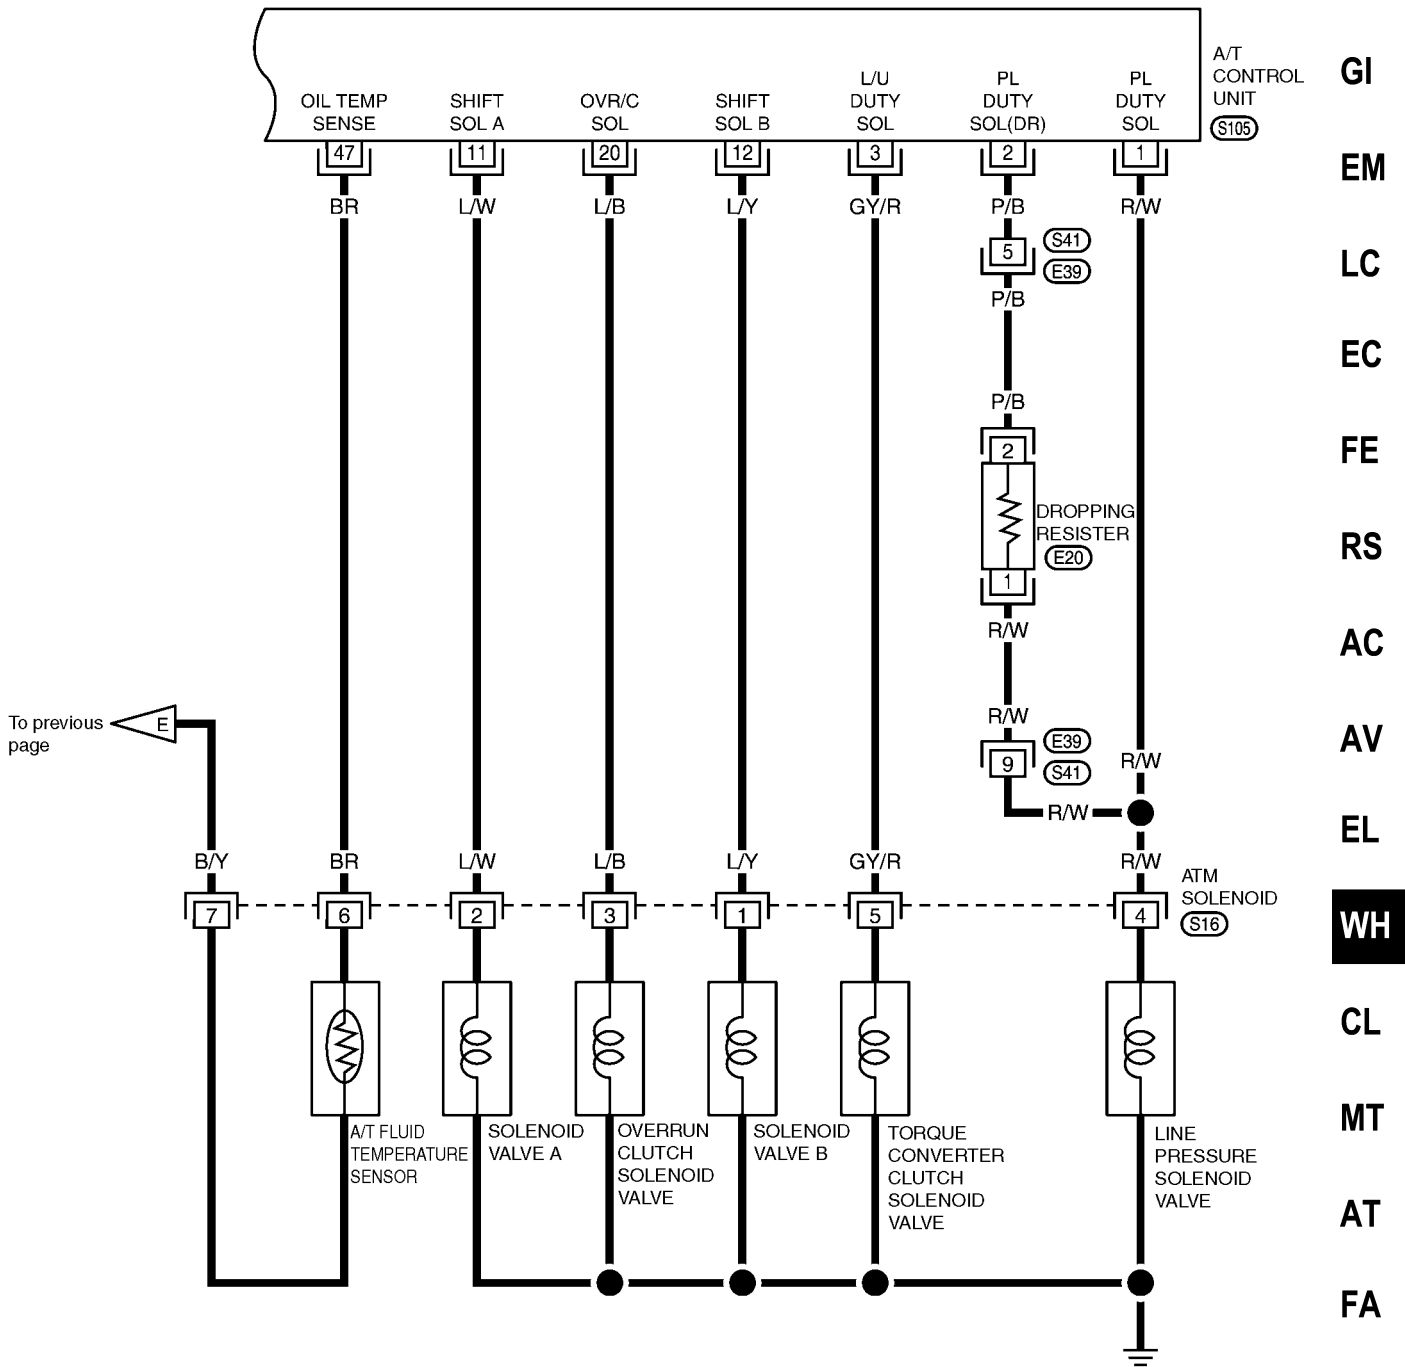


SIWZ005_O1

AUTOMATIC TRANSAXLE

Wiring Diagram

    AT/AT-DEVICE

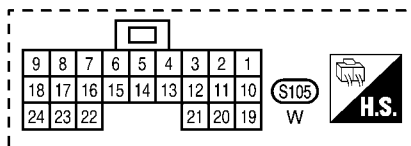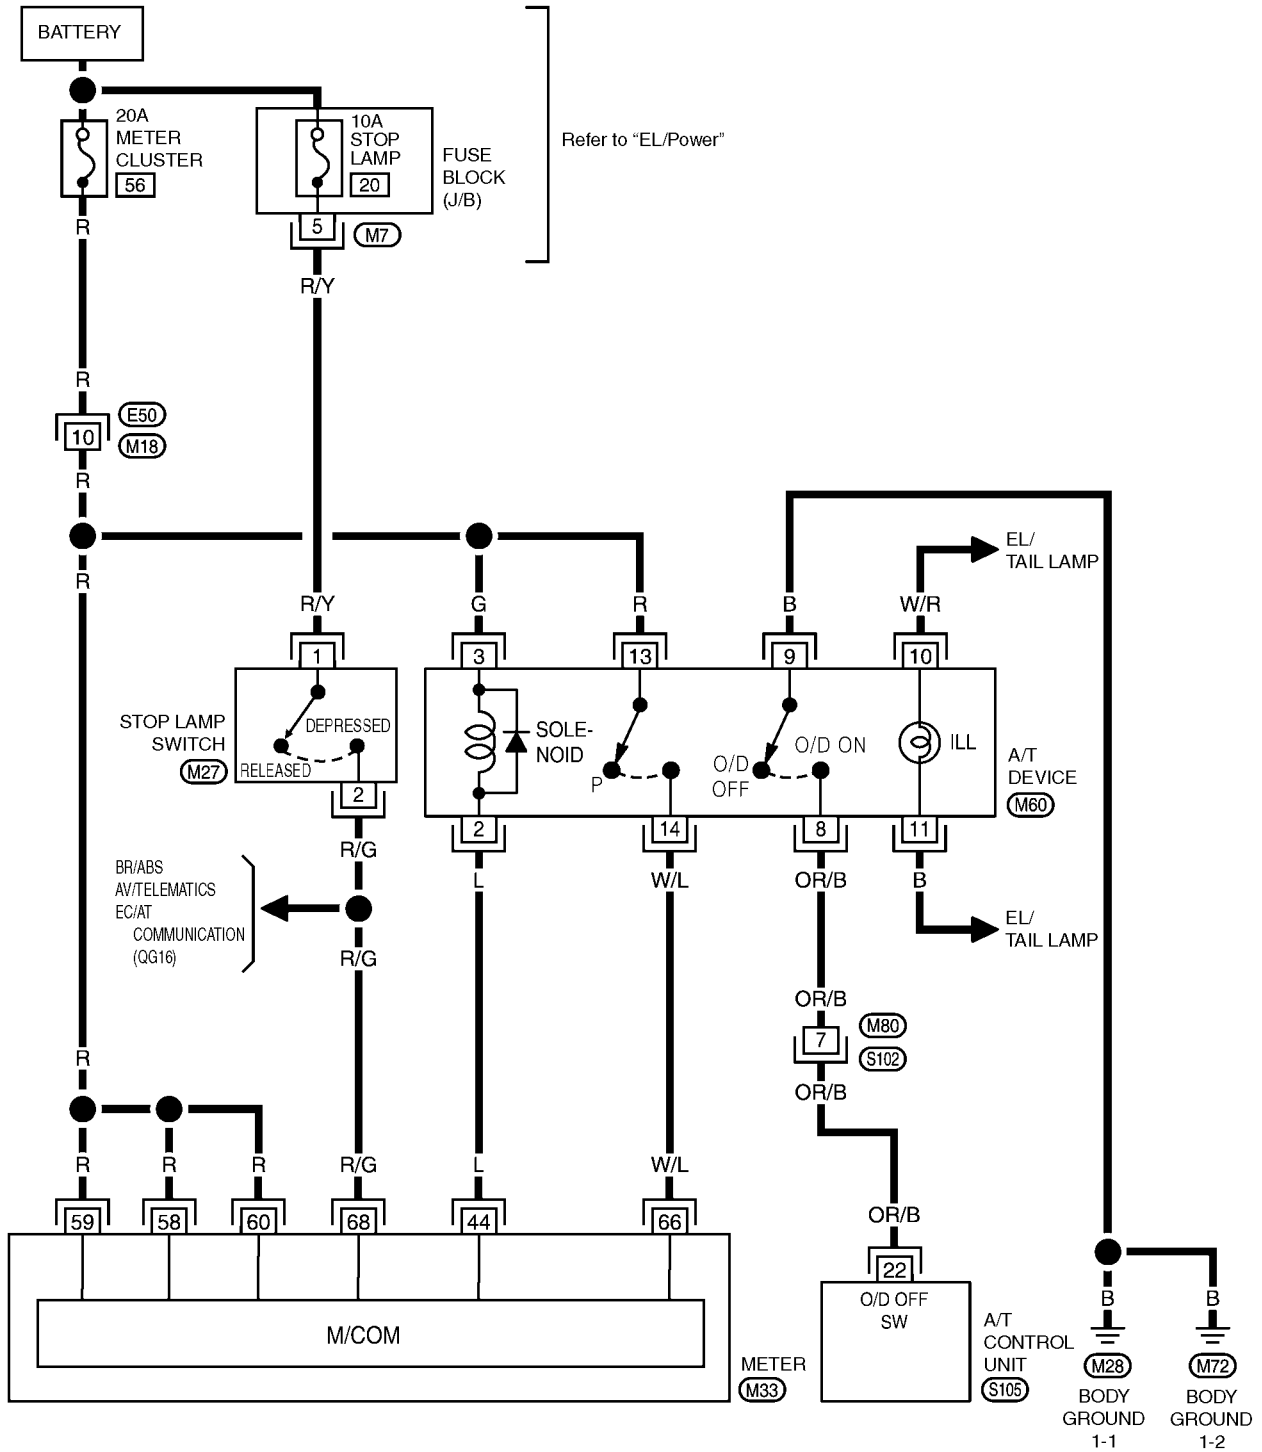

Refer to "FUSE BLOCK (J/B)"

(M7)



Circuit Diagram



ABS SYSTEM

Wiring Diagram

BR/ABS-01

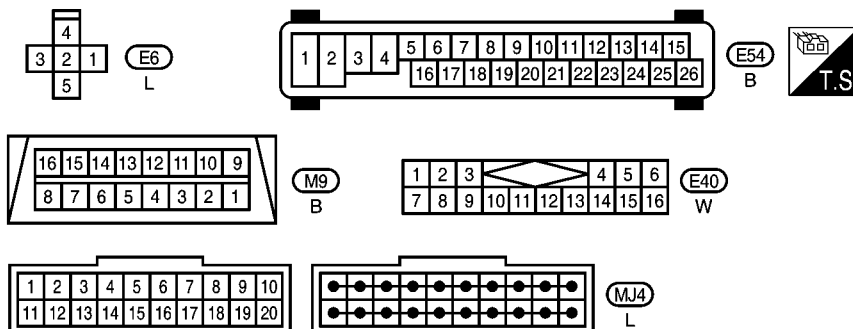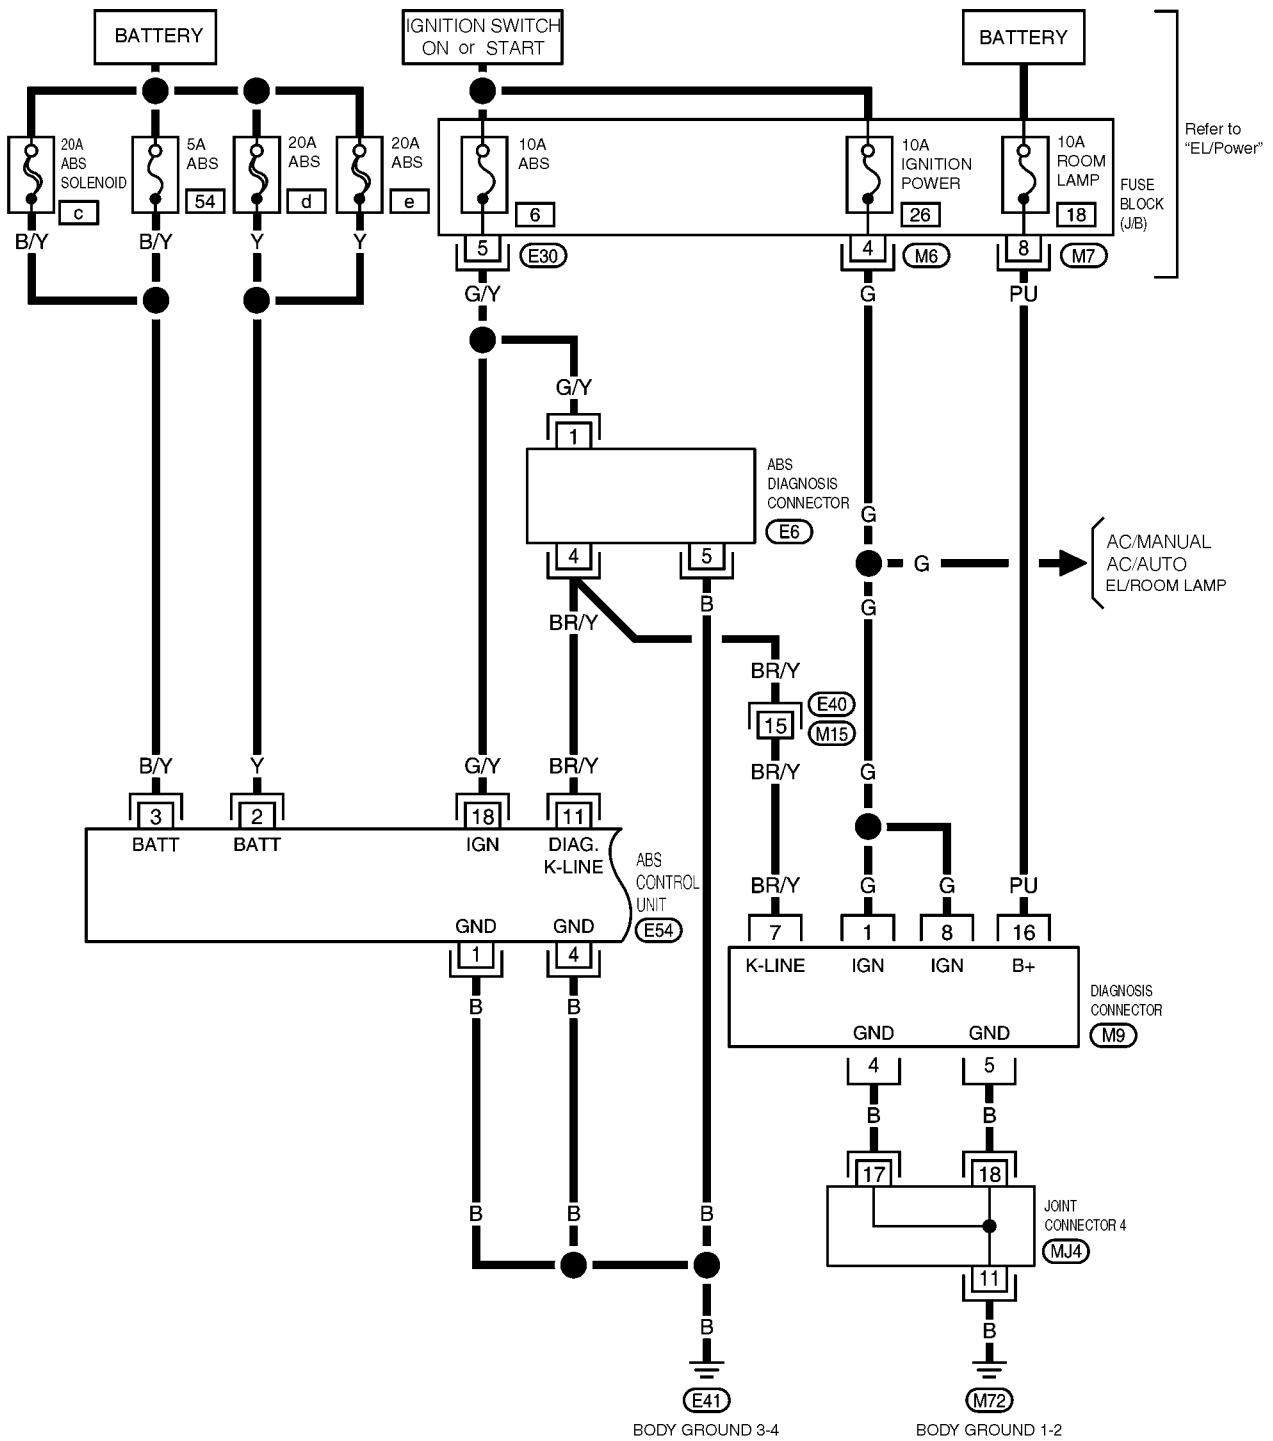



Refer to "FUSE BLOCK (J/B)"

M6 M7
E30

ABS SYSTEM

Wiring Diagram

BR/ABS-02

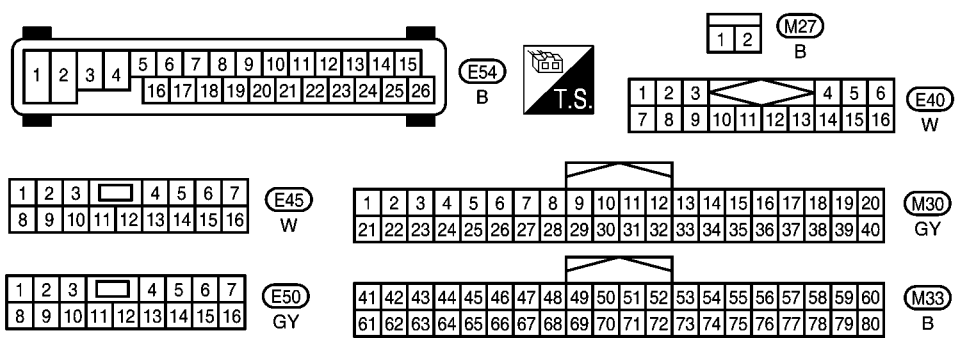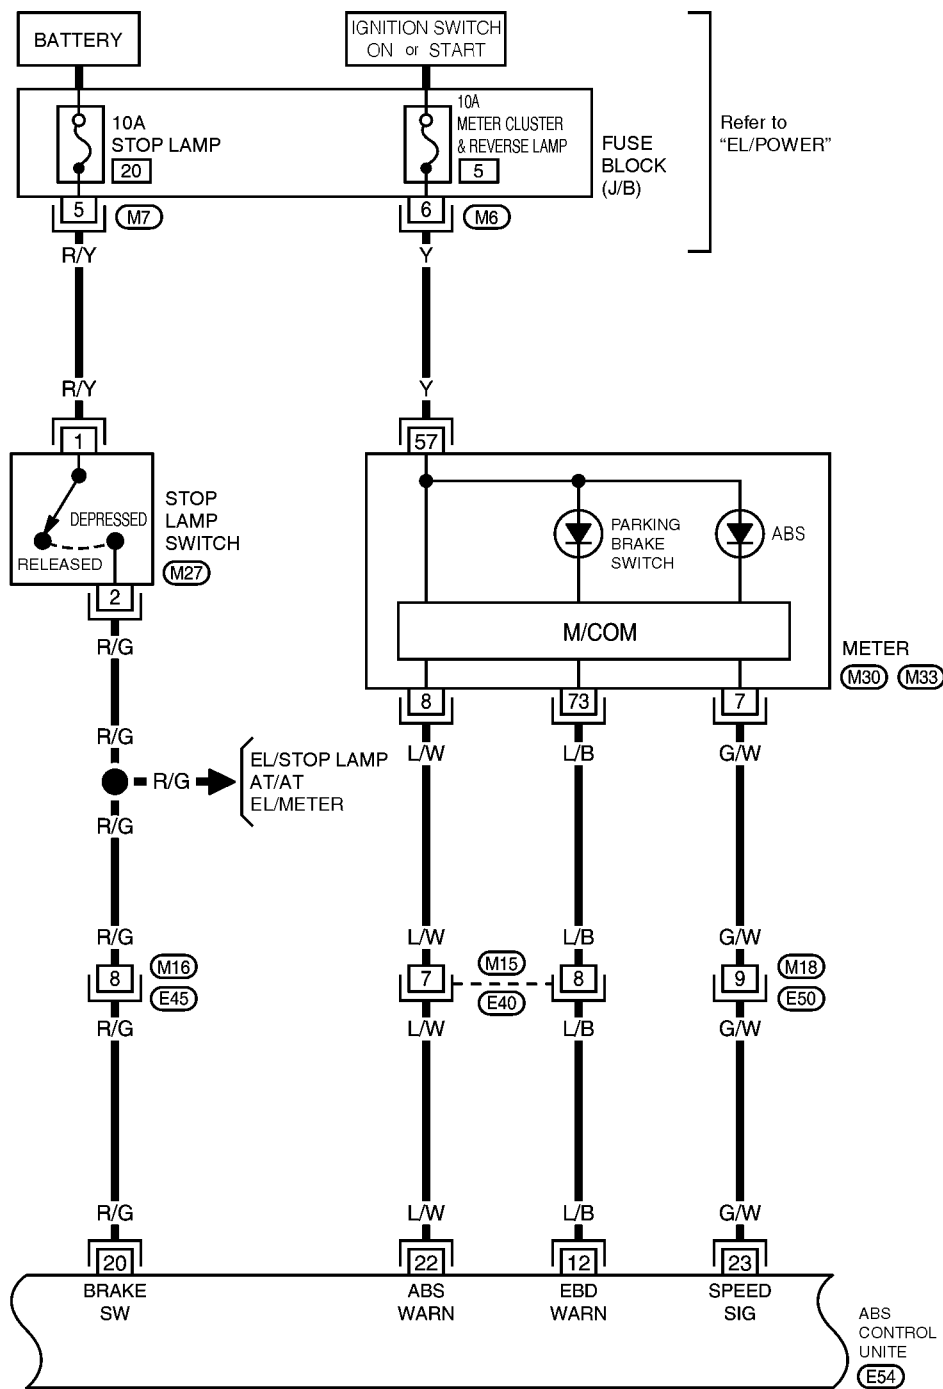





Refer to "FUSE BLOCK (J/B)"

M6 M7

ABS SYSTEM

Wiring Diagram

   
BR/ABS-03

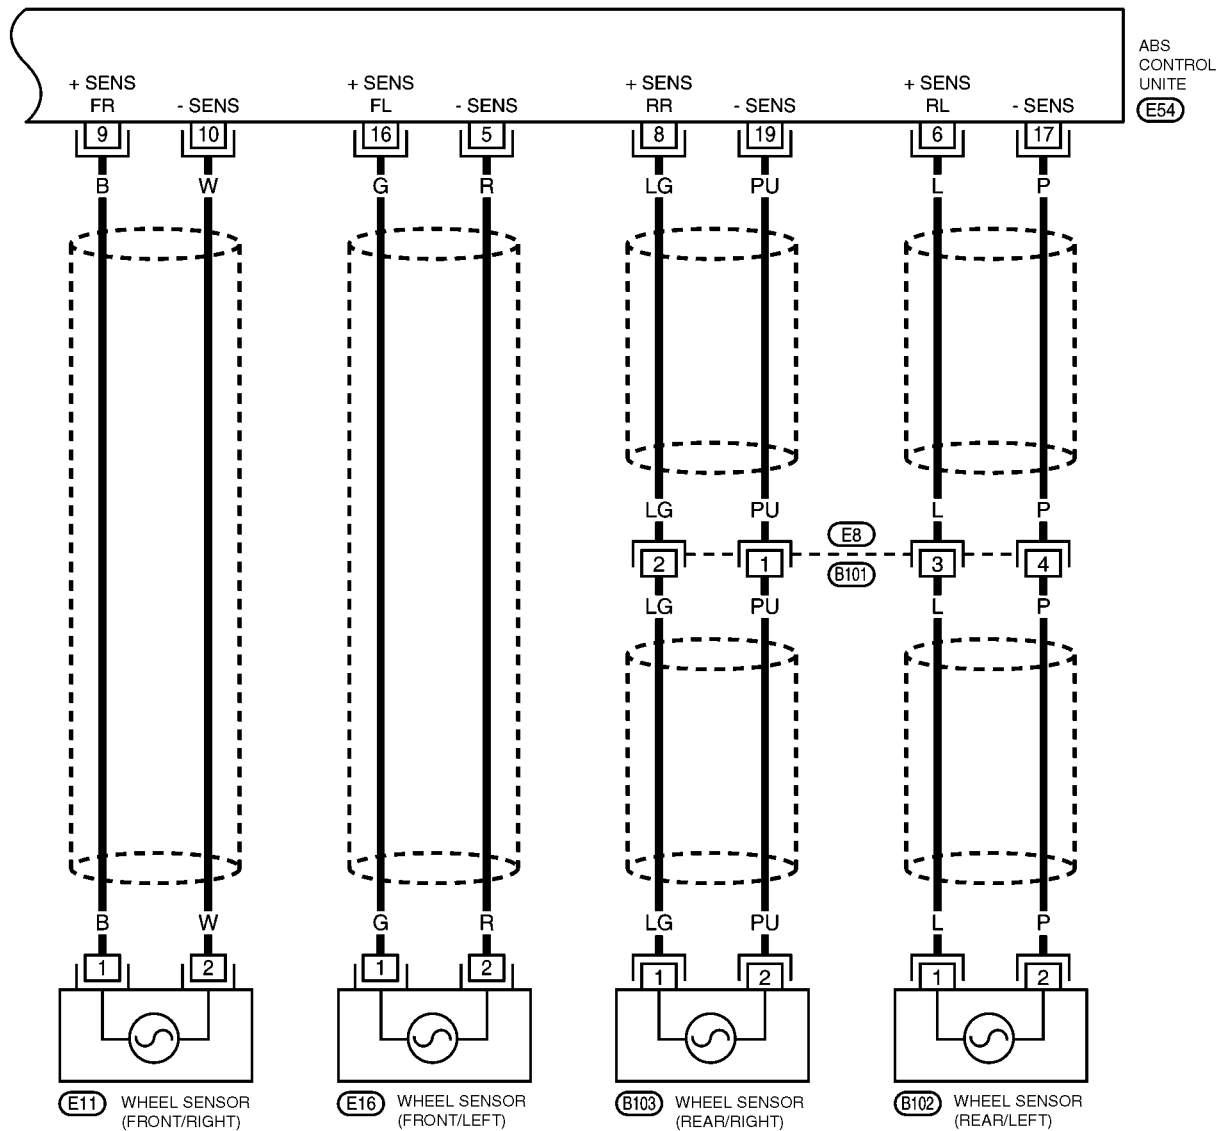


SLWZ003_01

SRS AIRBAG

Circuit Diagram

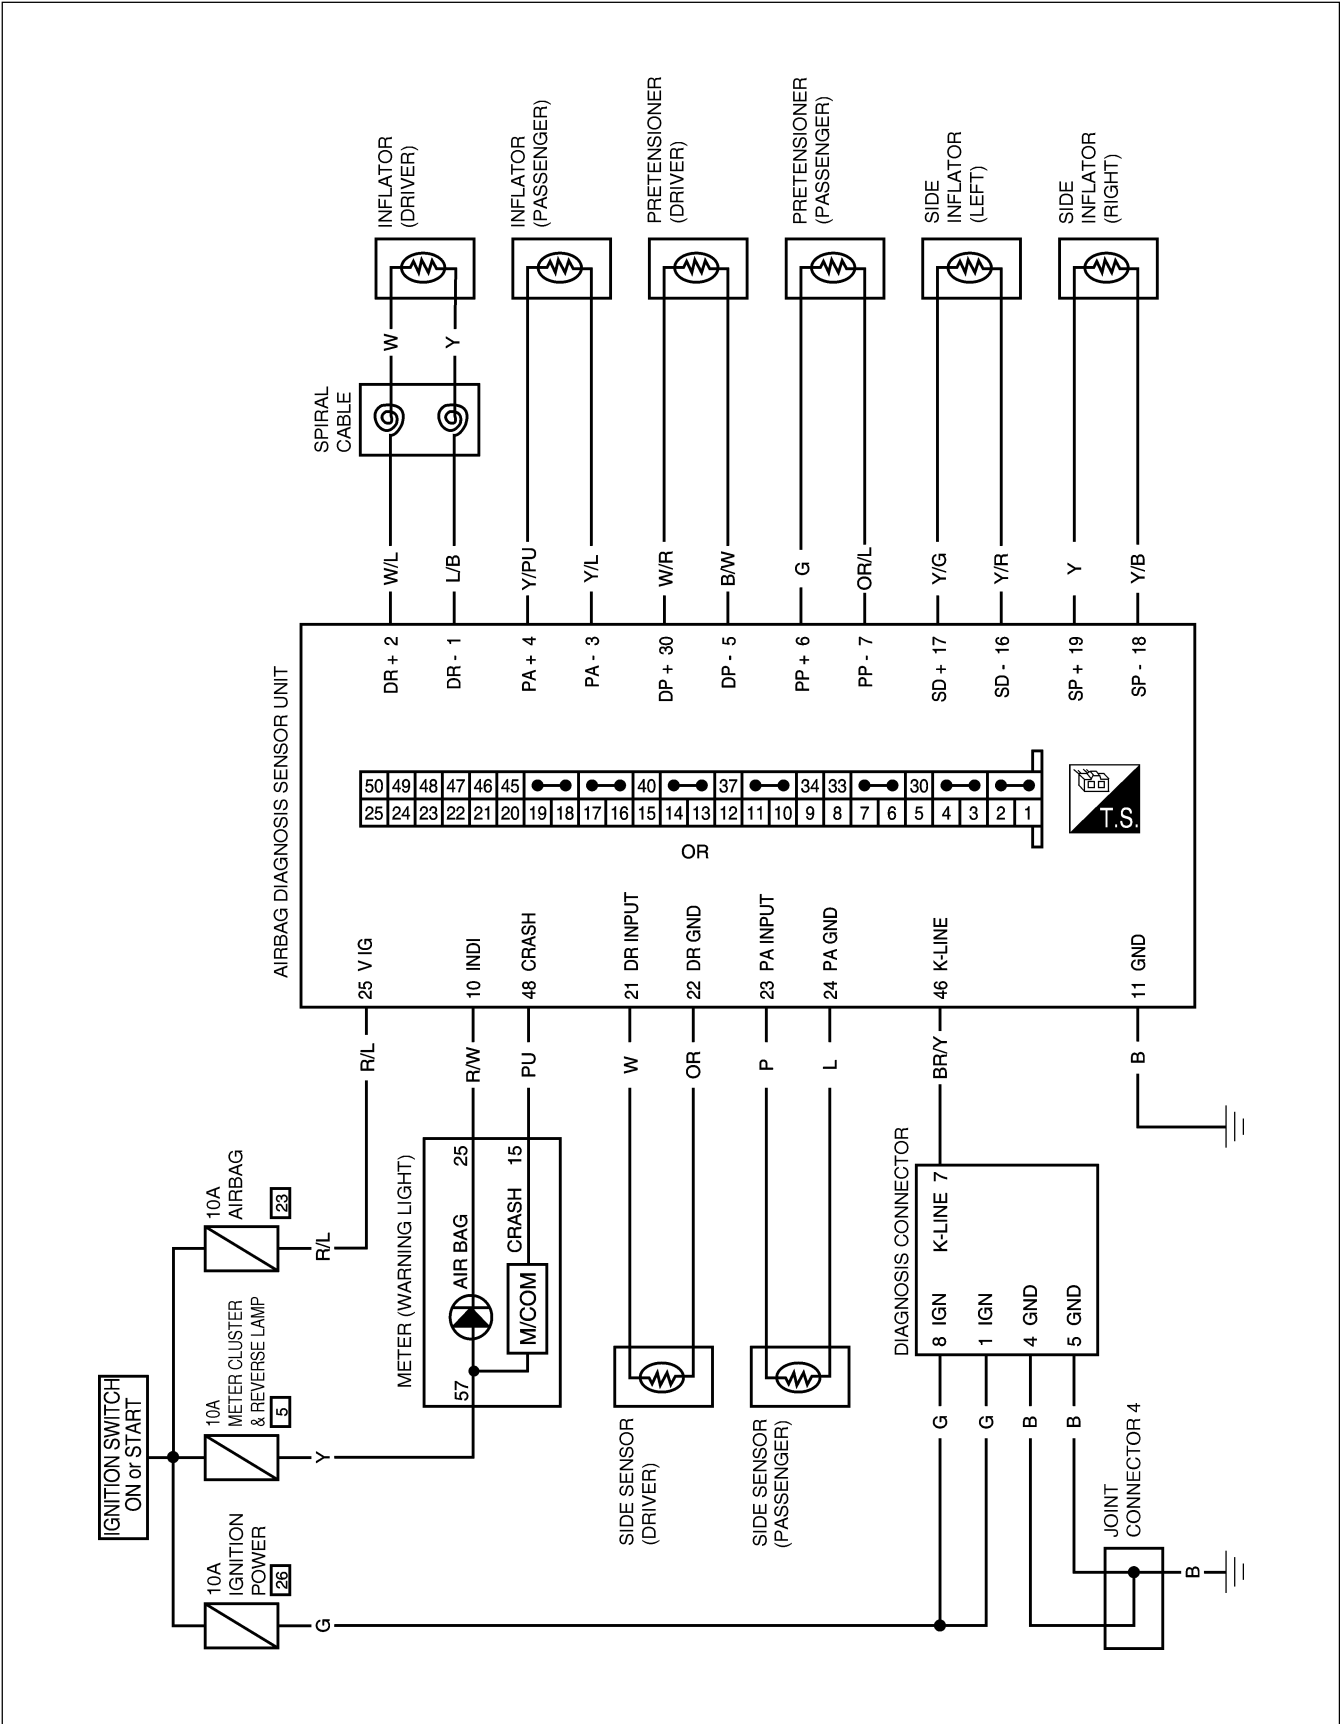

 GI
EM
LC
EC
FE
RS
AC
AV
EL
WH
CL
MT
AT
FA
RA
BR
ST
BT




MANUAL/AUTO AIR CONDITIONER

Circuit Diagram - Manual A/C

MANUAL/AUTO AIR CONDITIONER

Wiring Diagram

 
AC/MANUAL A/C-01



MANUAL/AUTO AIR CONDITIONER

Wiring Diagram


 
AC/MANUAL A/C-03



MANUAL/AUTO AIR CONDITIONER

Wiring Diagram

AC/MANUAL A/C-05

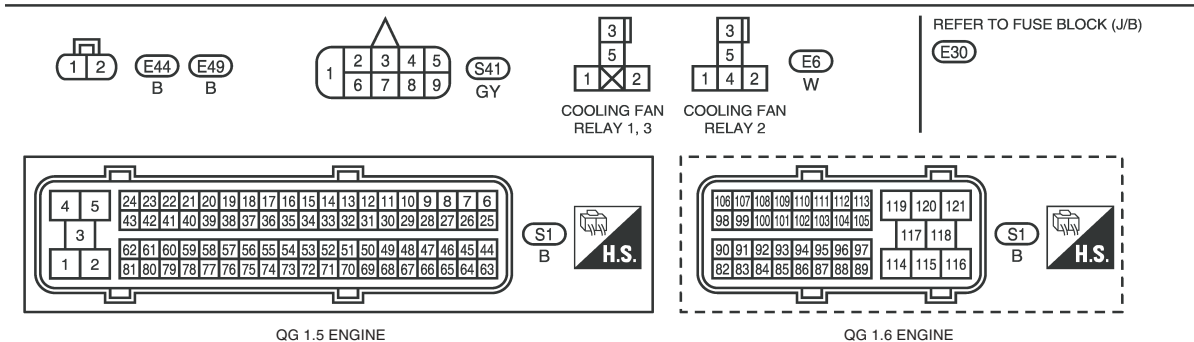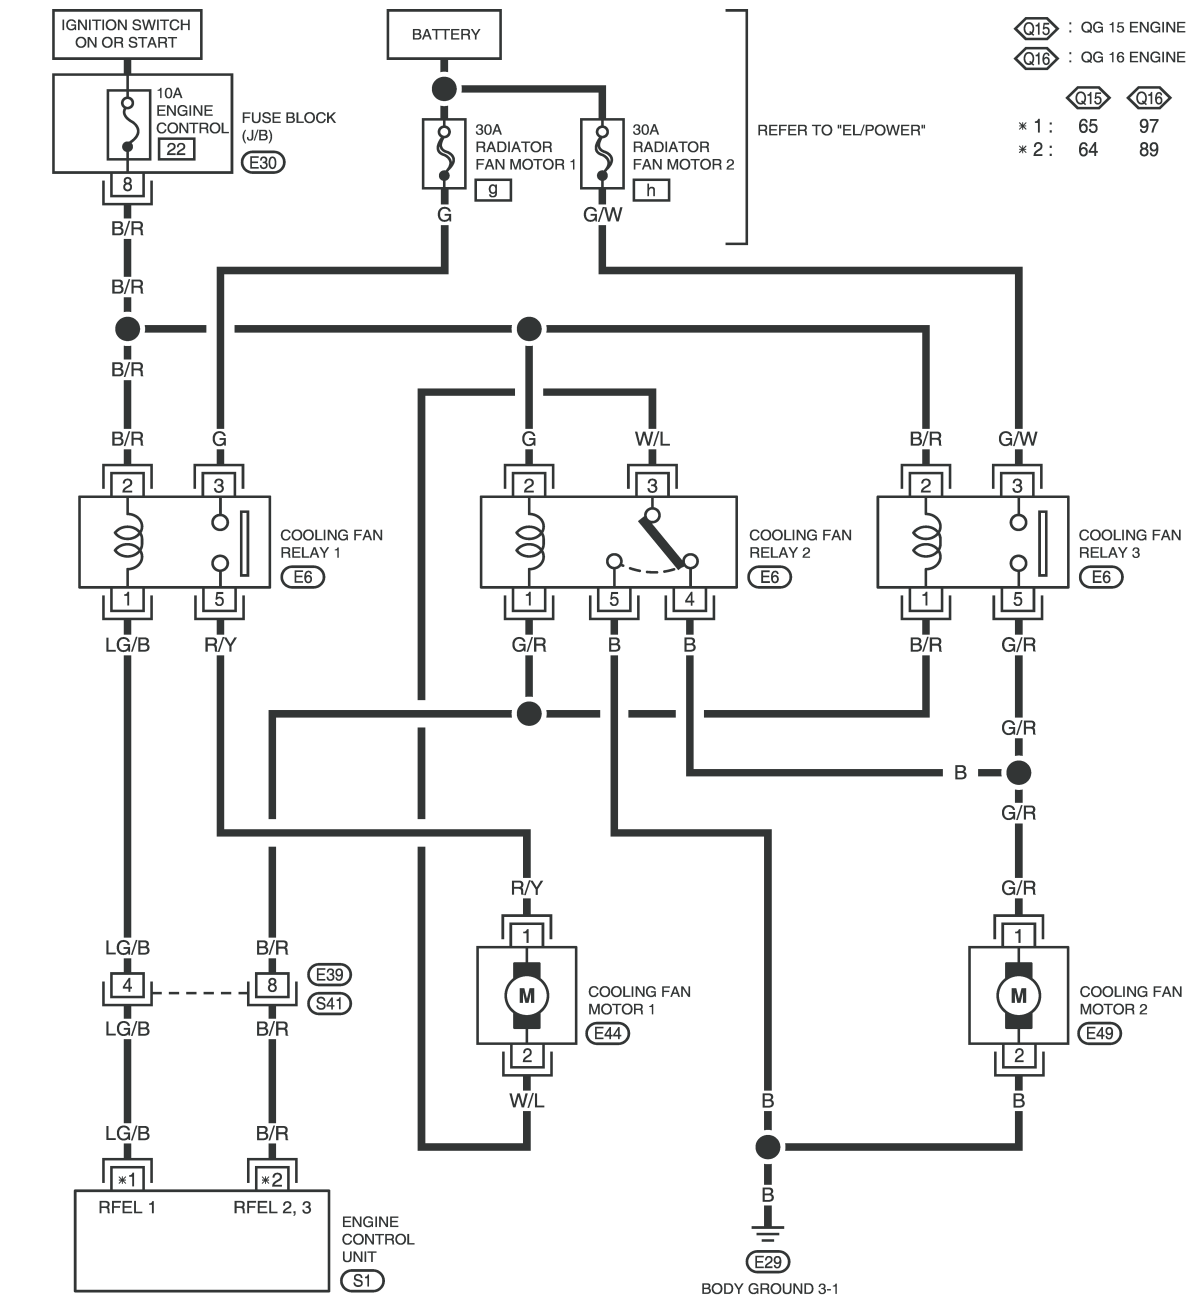

QG 1.5 ENGINE

QG 1.6 ENGINE

SPWZ005_O1

 
MANUAL/AUTO AIR CONDITIONER

Circuit Diagram - Auto A/C

MANUAL/AUTO AIR CONDITIONER

Wiring Diagram

AC/AUTO A/C- 01





MANUAL/AUTO AIR CONDITIONER

Wiring Diagram

AC/AUTO A/C- 05

 


AC/AUTO A/C- 06



AUDIO


Circuit Diagram





COMBINATION METER

Circuit Diagram

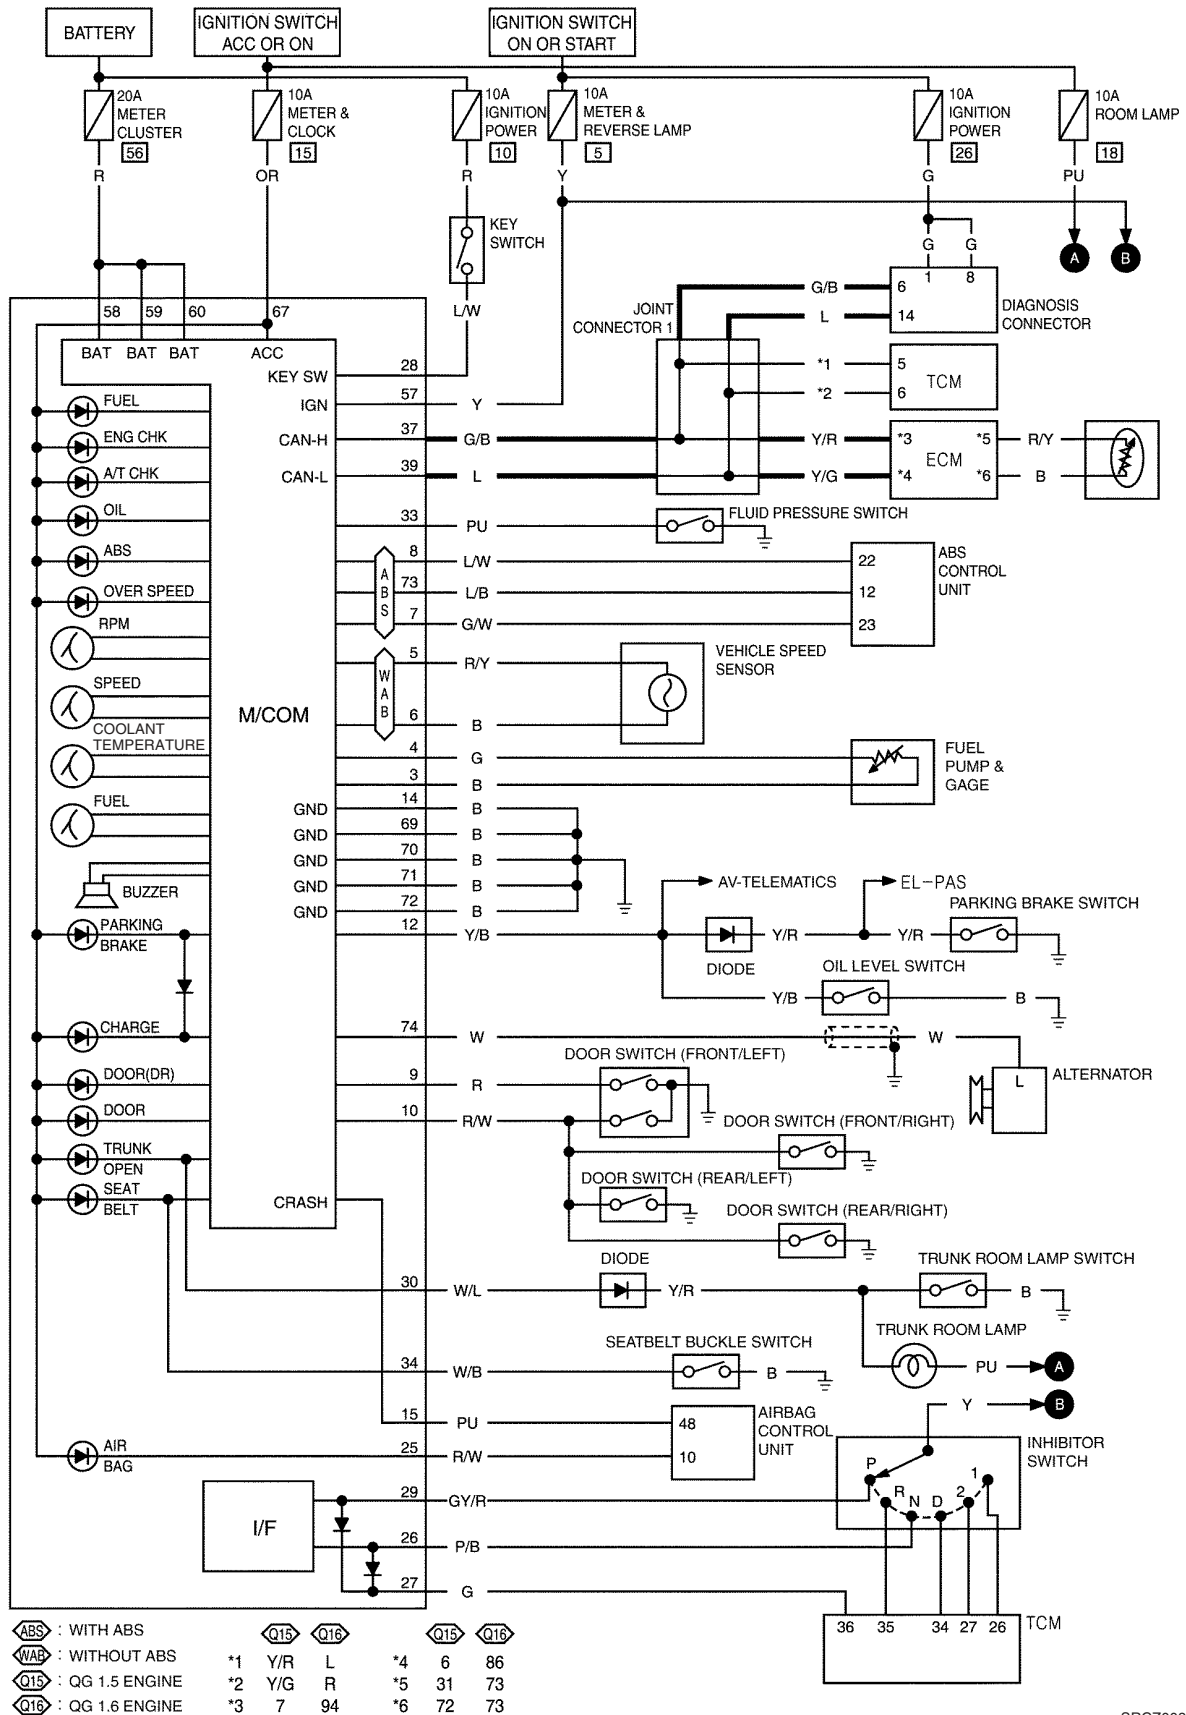


SRCZ008_01

COMBINATION METER

Wiring Diagram

 EL/Warning Light- 01



COMBINATION METER

Wiring Diagram

EL/Warning Light- 02

COMBINATION METER

Wiring Diagram

EL/Warning Light- 03



COMBINATION METER - WARNING LIGHT

Wiring Diagram

EL/Warning Light- 04

COMBINATION METER

Wiring Diagram

EL/Gage- 01





COMBINATION METER

Wiring Diagram

EL/Gage- 02

— : DATA LINE

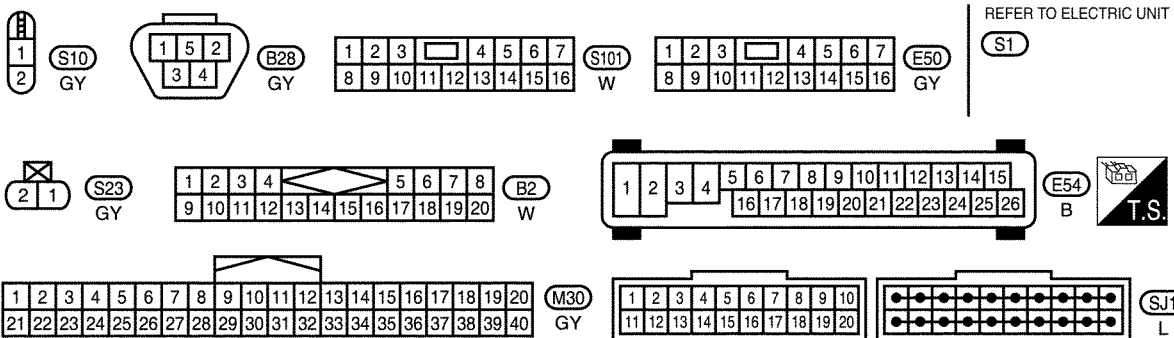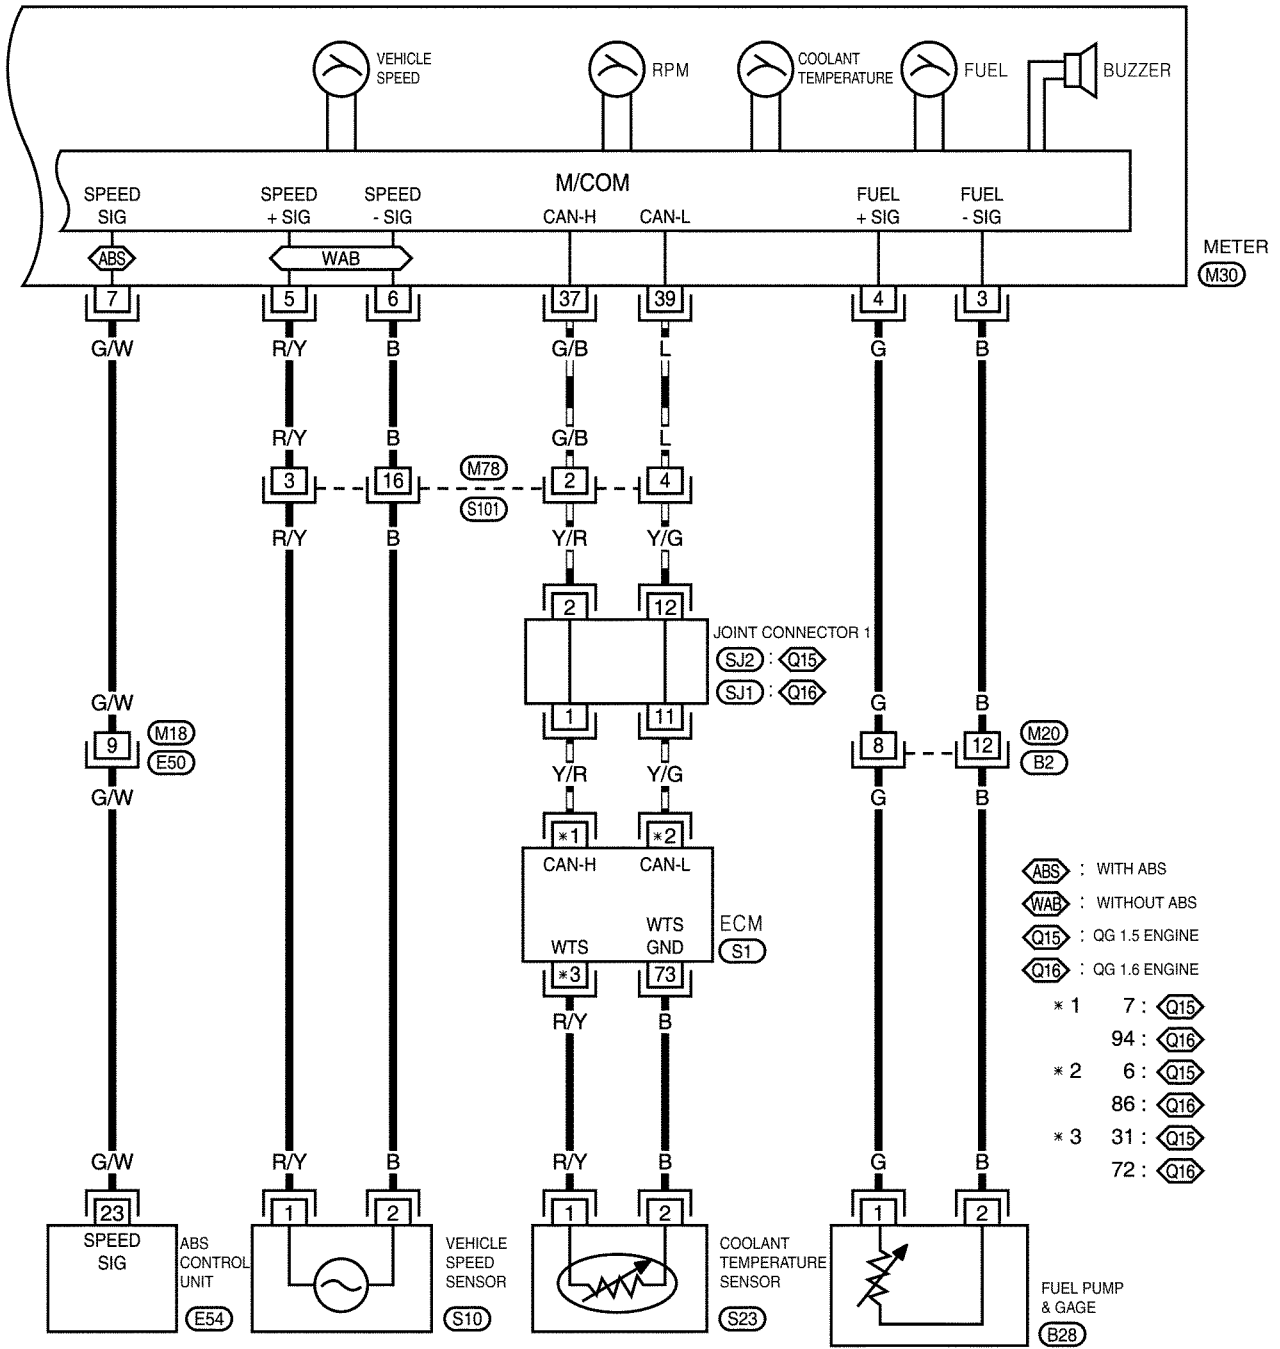

SRWZ015_O1

COMBINATION METER - CHIME

Circuit Diagram



COMBINATION METER - CHIME

 
Wiring Diagram

EL/Warning Light (Buzzer)- 01

COMBINATION METER - CHIME

Wiring Diagram

EL/Warning Light (Buzzer)- 02



COMBINATION METER- CHIME

Wiring Diagram

EL/Meter- 01

COMBINATION METER- CHIME

Wiring Diagram

EL/Meter (Diagnosis)- 02



 
LOCK • UNLOCK

Circuit Diagram

LOCK • UNLOCK

Wiring Diagram EL/Lock-Unlock (Single)- 01

Wiring Diagram EL/Lock-Unlock (Single)- 01





LOCK • UNLOCK

Circuit Diagram - Double



LOCK • UNLOCK

Wiring Diagram



EL/Lock-Unlock (Double)- 02



LOCK • UNLOCK

Wiring Diagram

EL/Lock-Unlock (Double)- 03

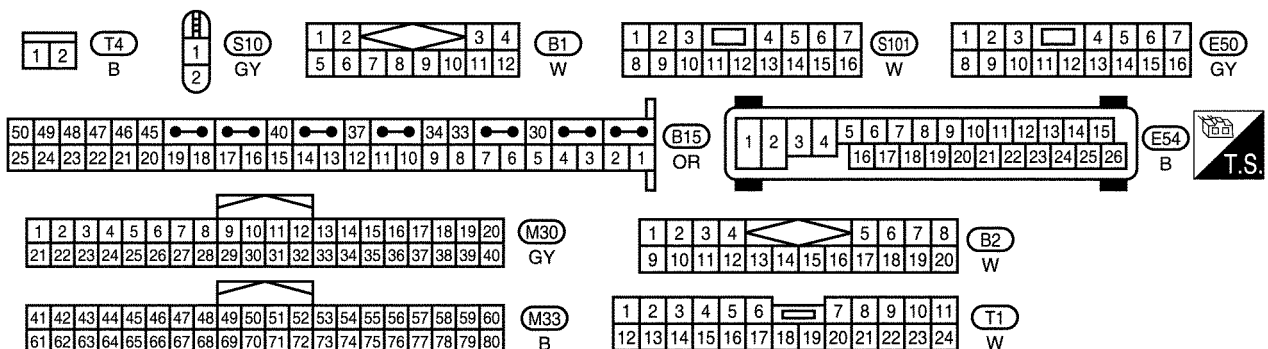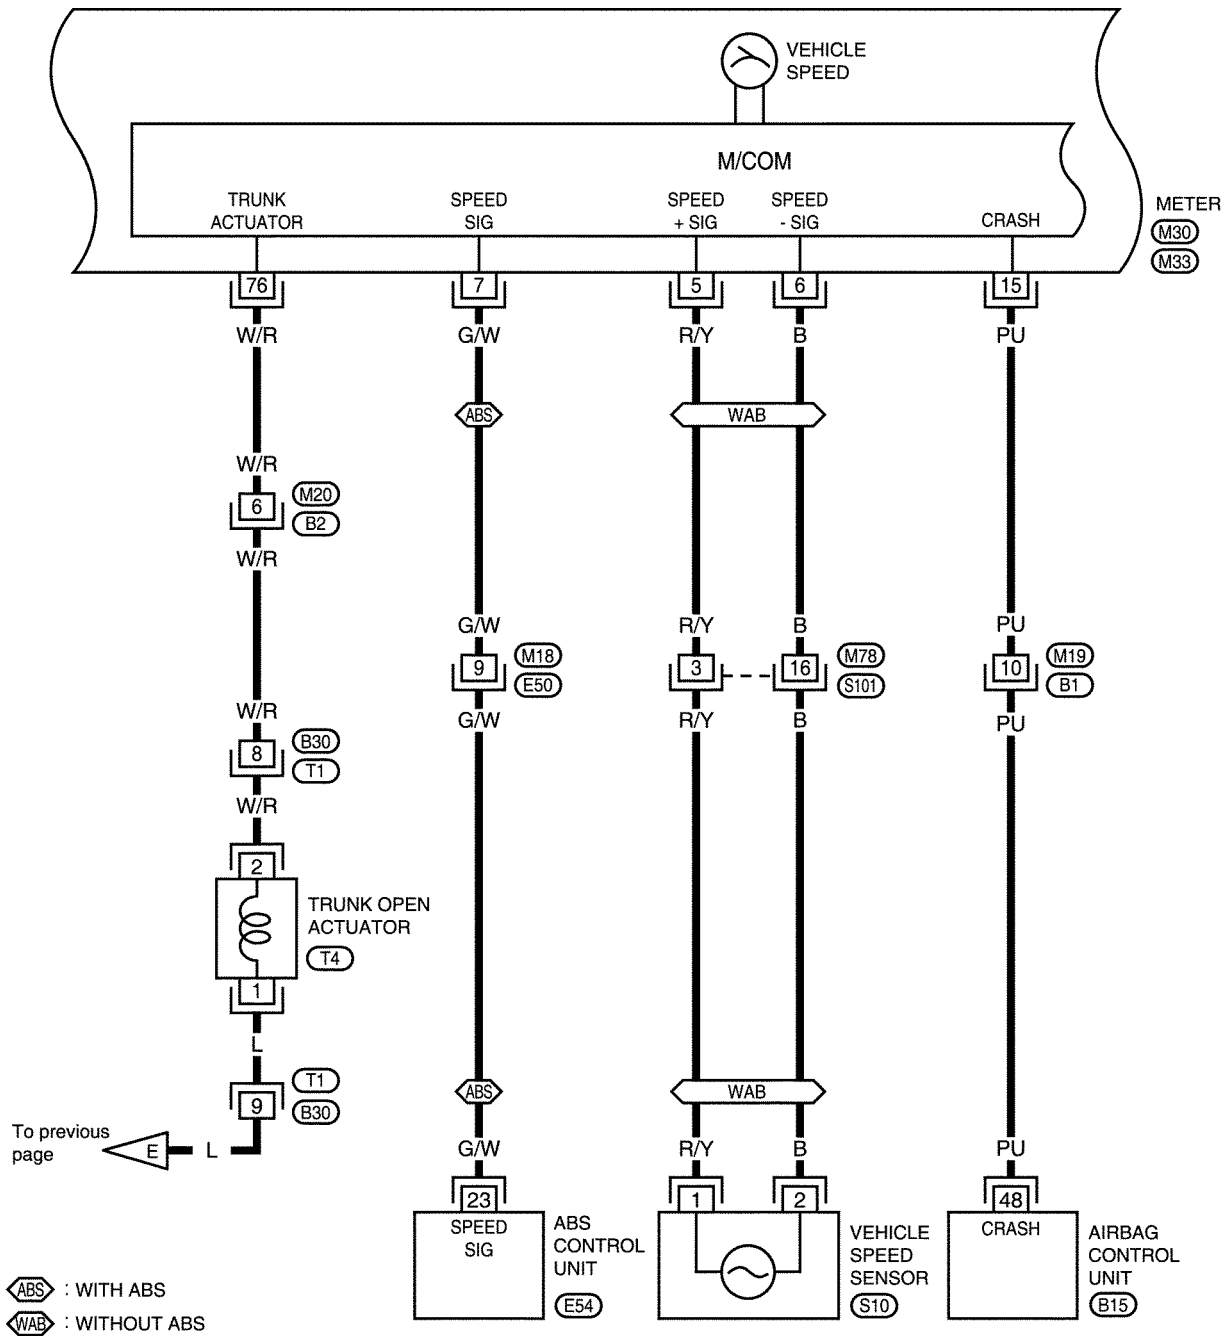



EL/Lock-Unlock (Double)- 04



LOCK • UNLOCK

Wiring Diagram


EL/Lock-Unlock (Double)- 05

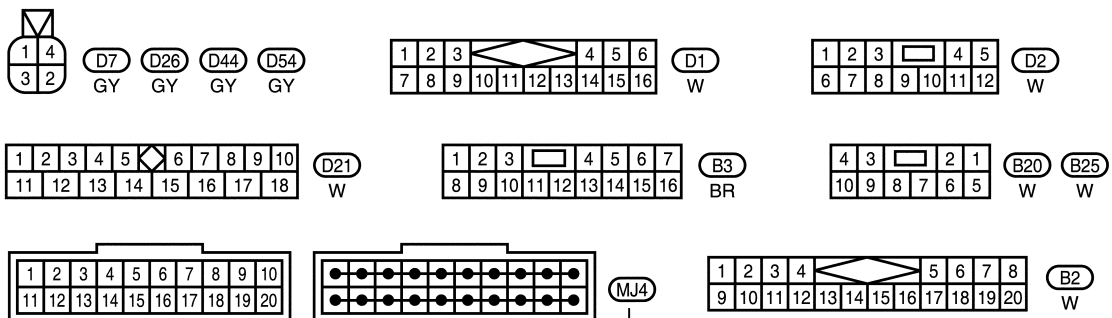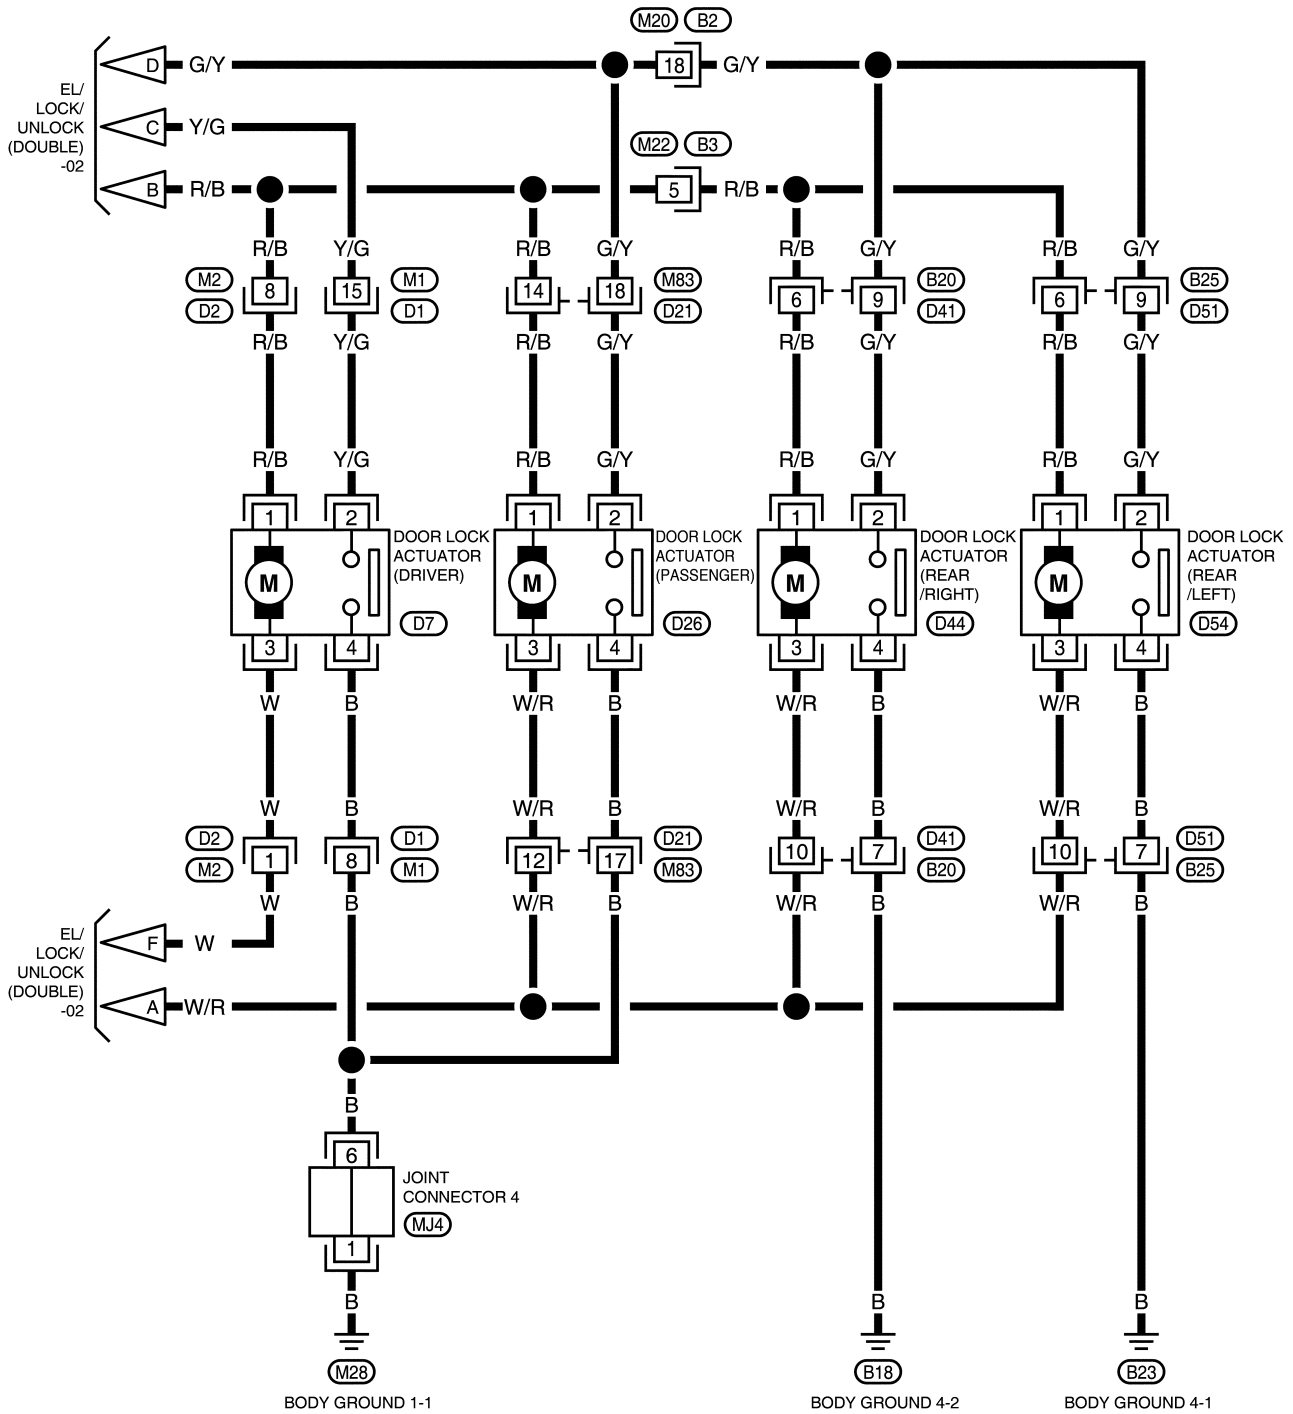

SRWZ081_O1

ANTI-THEFT SYSTEM

Circuit Diagram


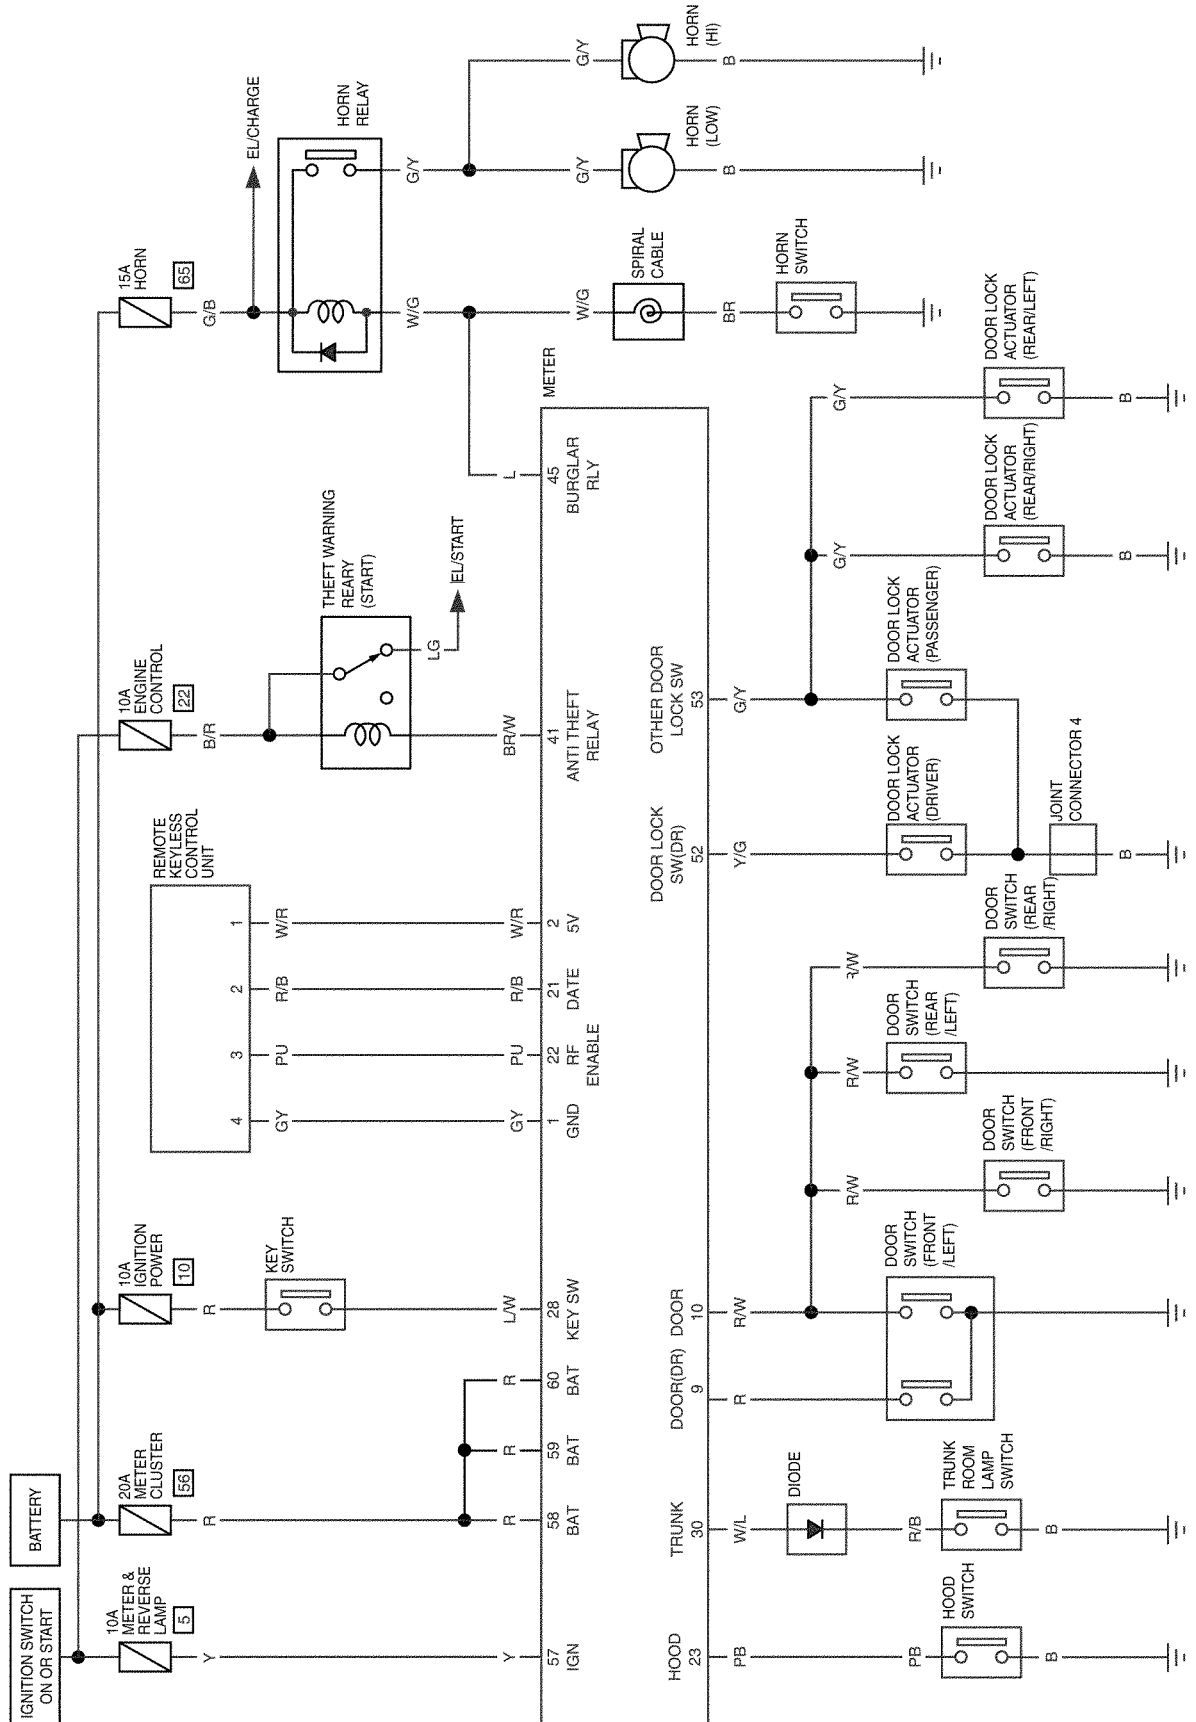


GI
EM
LC
EC
FE
RS
AC
AV
EL
WH
CL
MT
AT
FA
RA
BR
ST
BT

ANTI-THEFT SYSTEM

Wiring Diagram










EL/Anti-Theft- 01

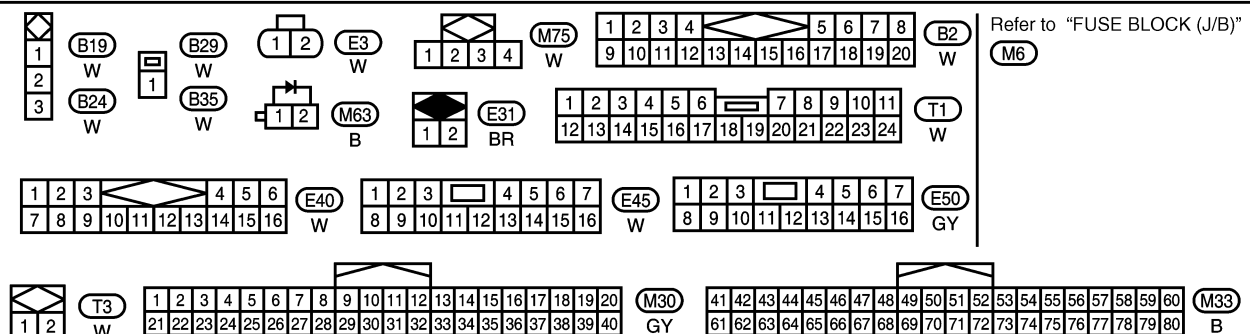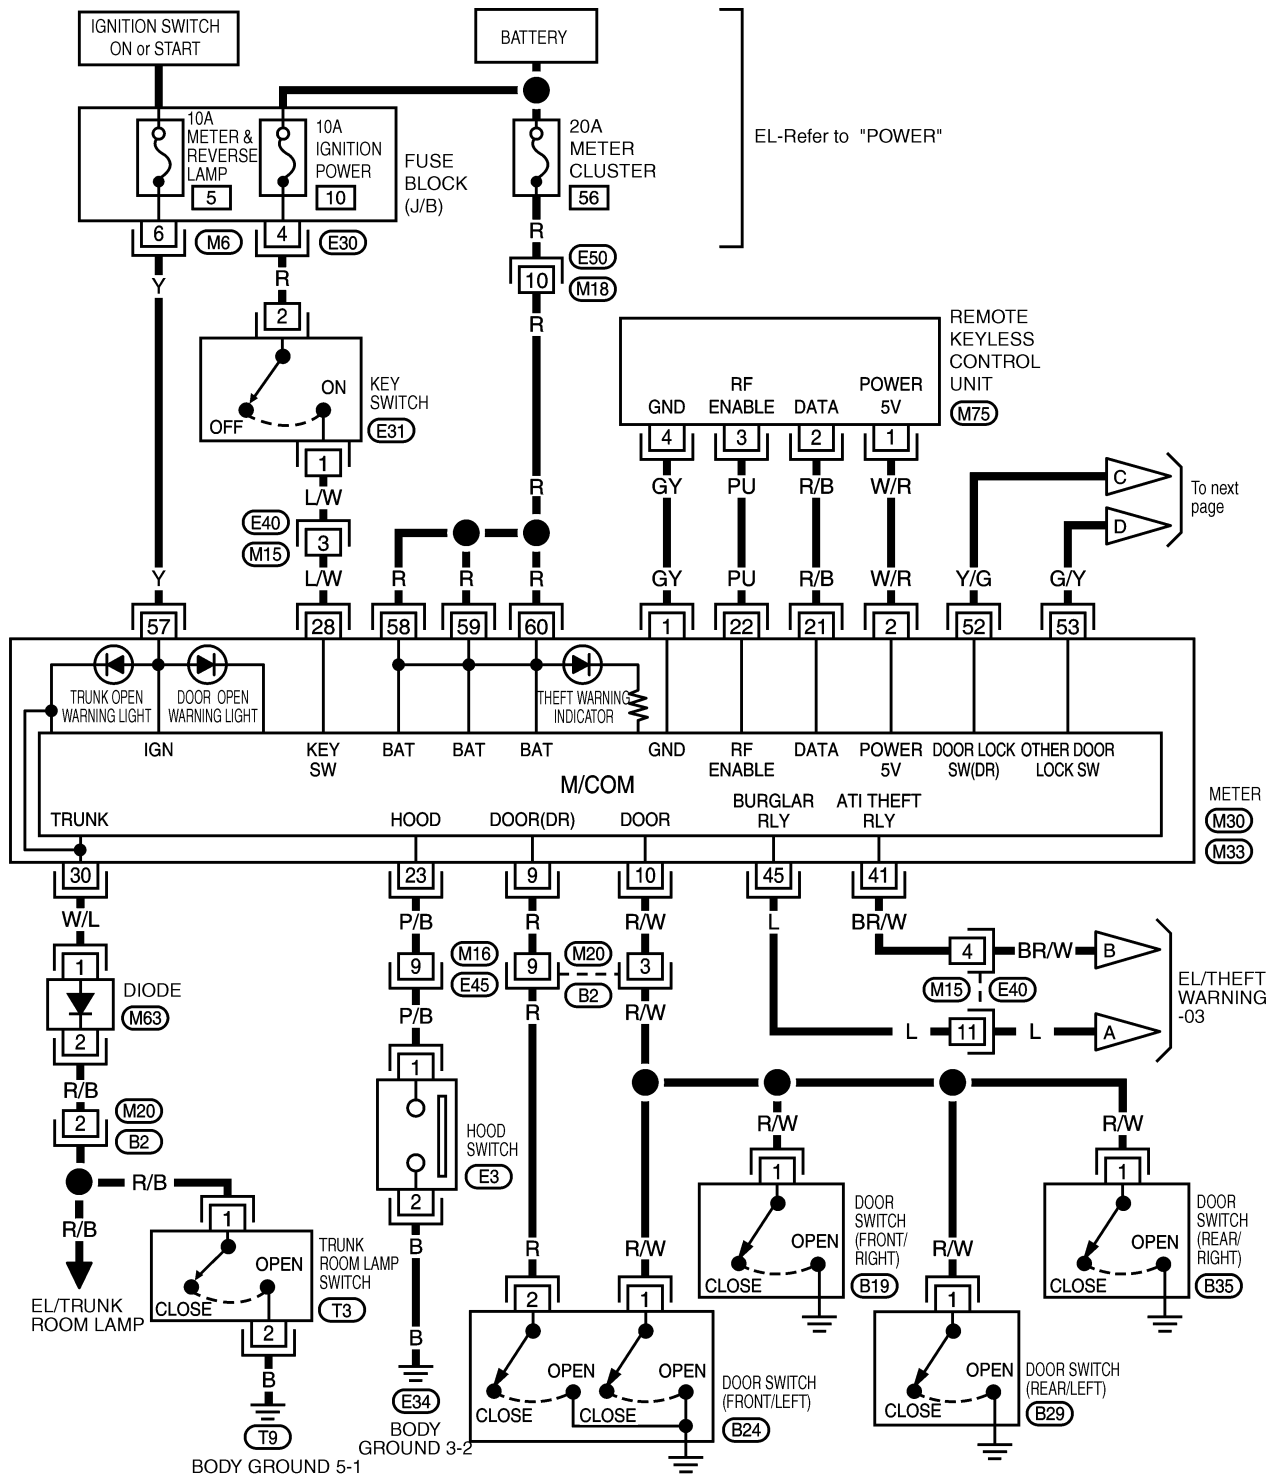

ANTI-THEFT SYSTEM

Wiring Diagram

        EL/Anti-Theft- 02





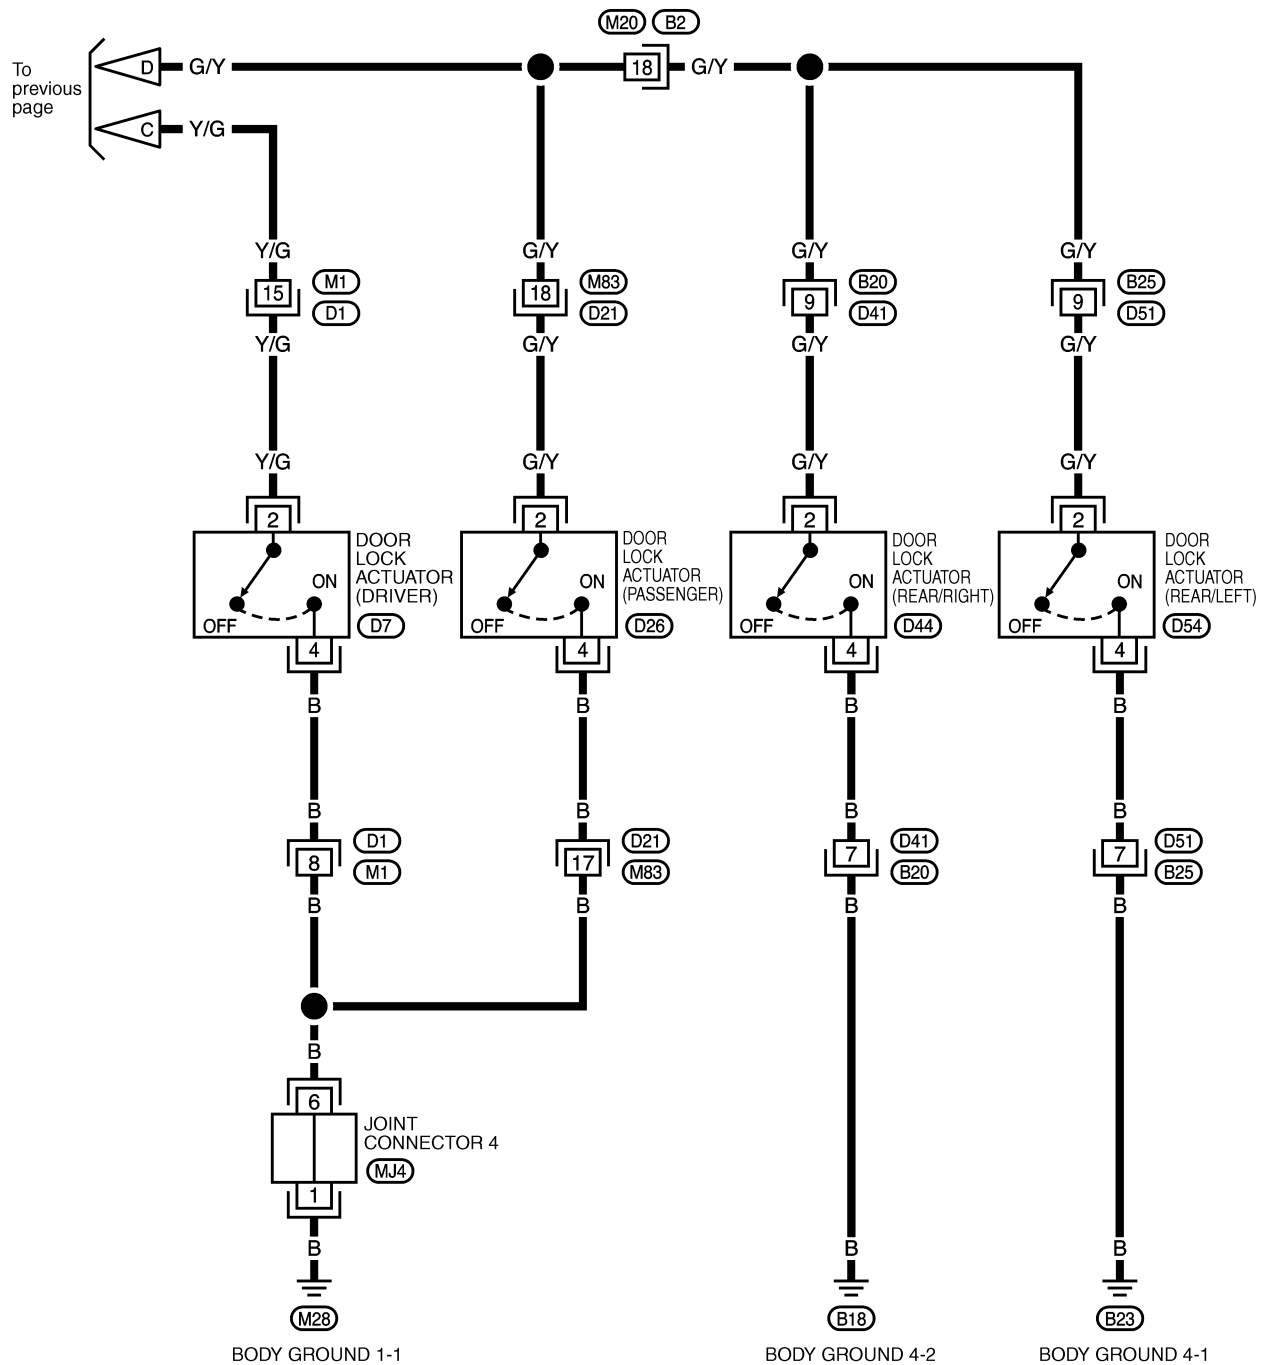


SRWZ069_O1

ANTI-THEFT SYSTEM

Wiring Diagram

    EL/Anti-Theft- 03

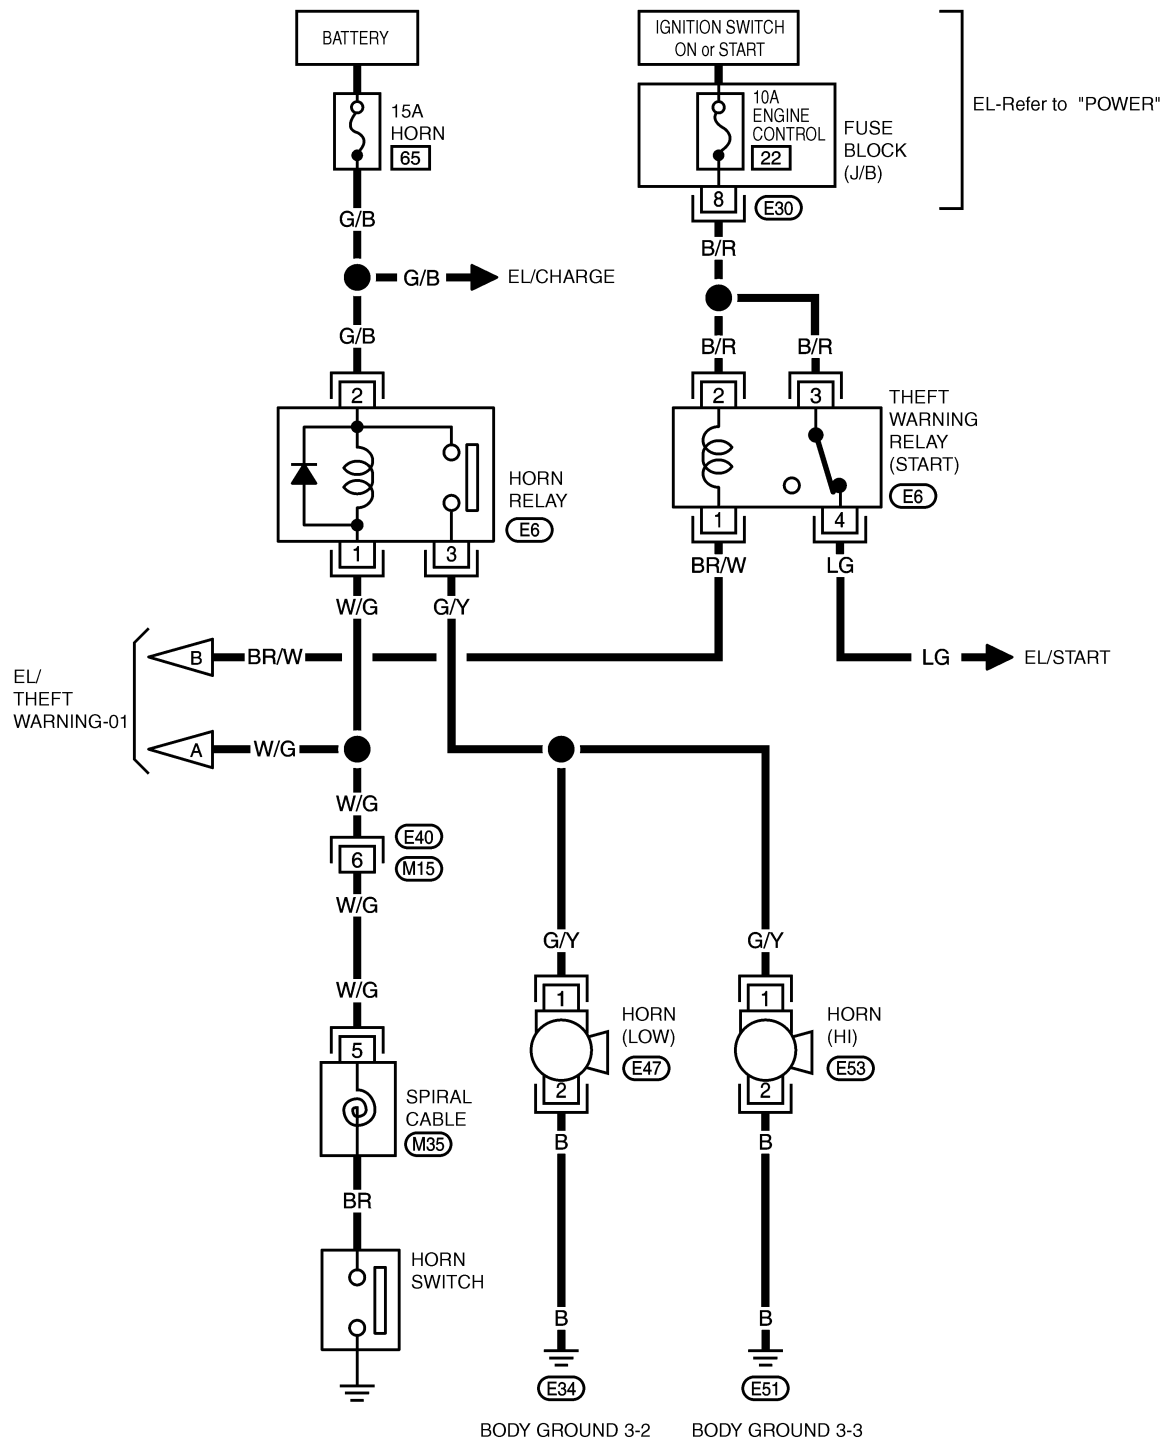


Refer to "FUSE BLOCK (J/B)"
E30


IMMOBILIZER

Wiring Diagram

EL/Immobilizer

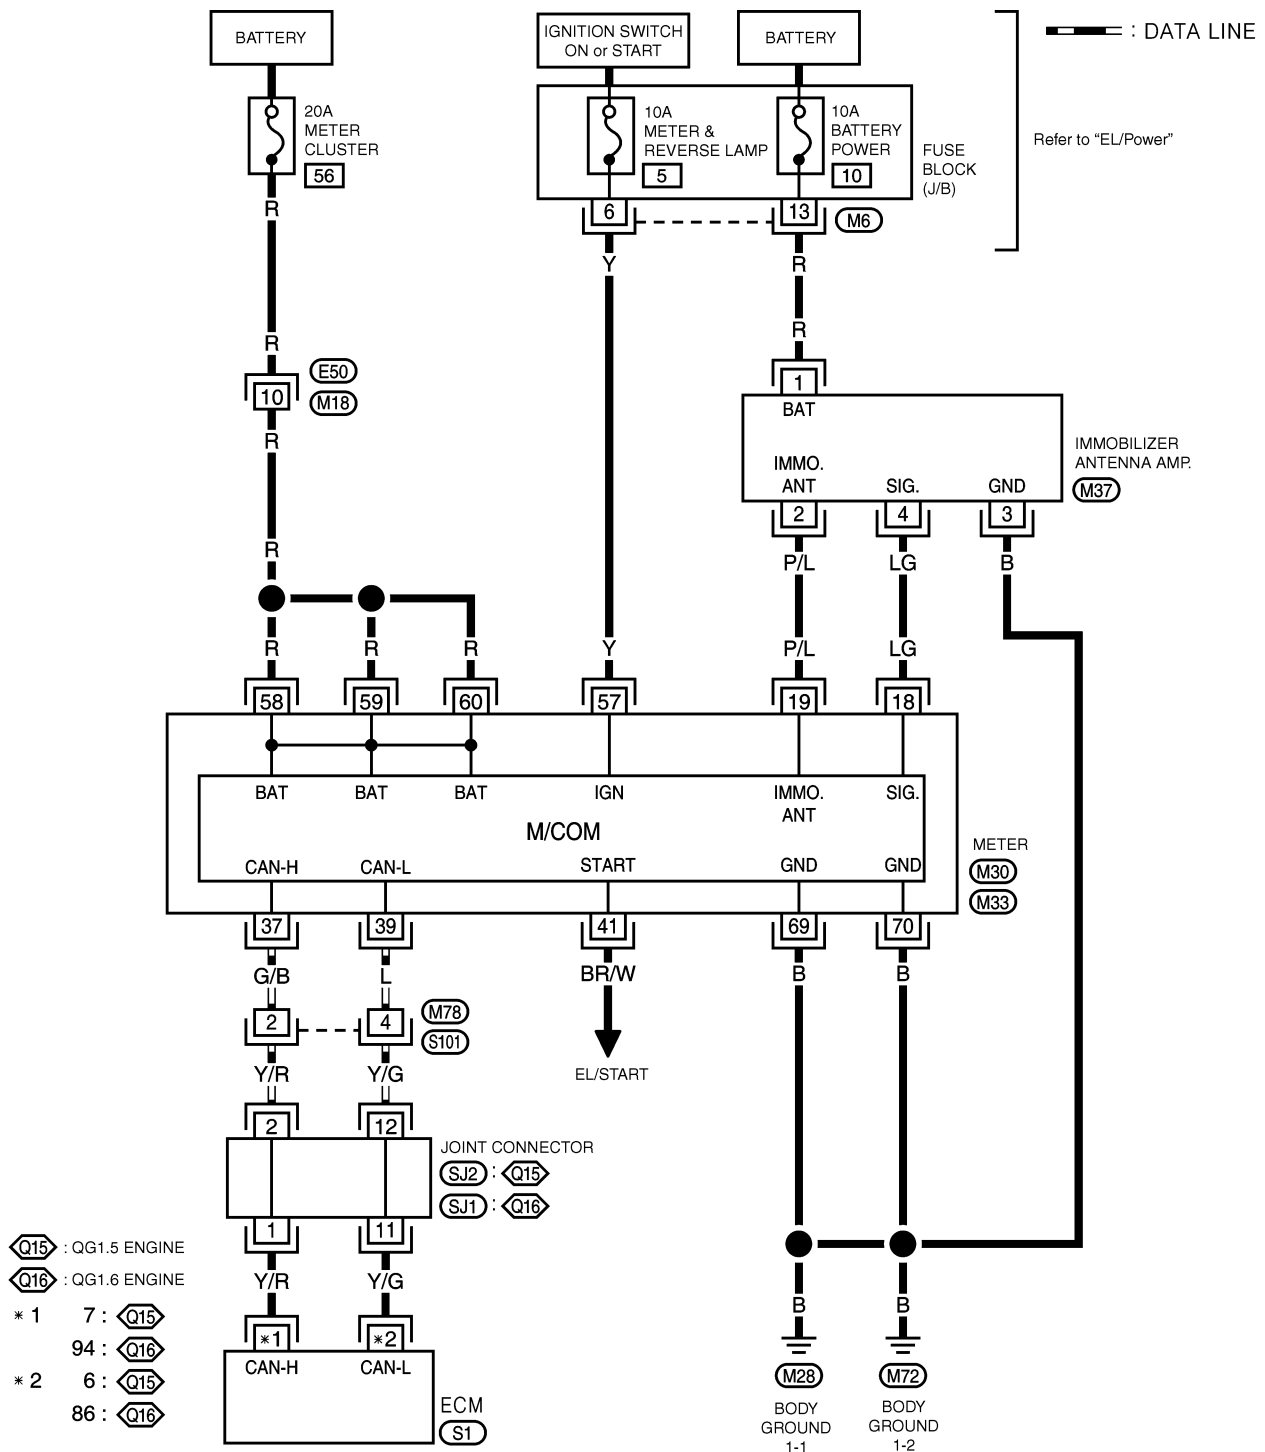


- Q15 : QG1.5 ENGINE
 Q16 : QG1.6 ENGINE
 * 1 7 : Q15
 94 : Q16
 * 2 6 : Q15
 86 : Q16

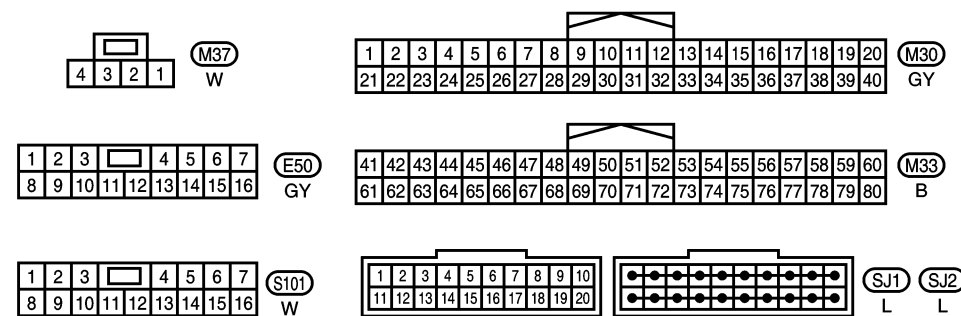

POWER WINDOW SYSTEM


Circuit Diagram

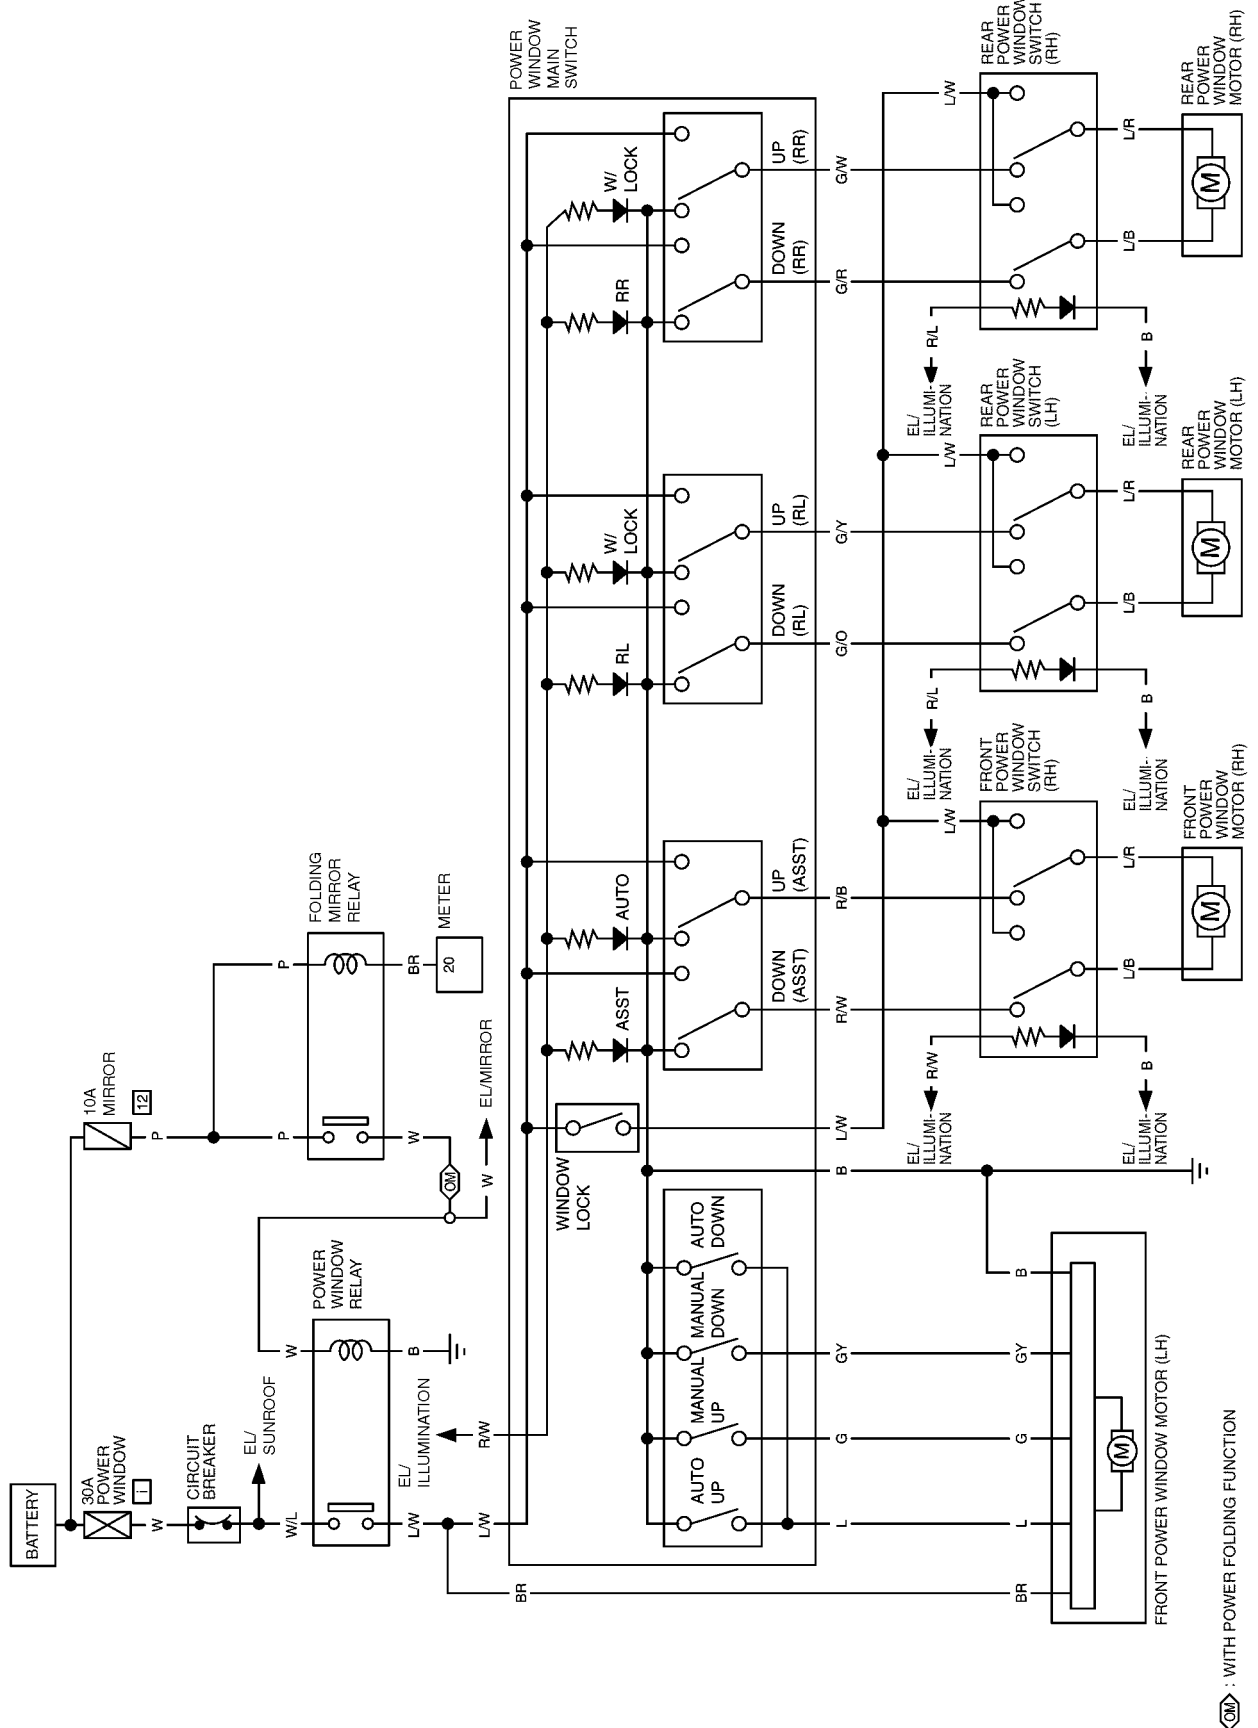

POWER WINDOW SYSTEM

Wiring Diagram

EL/Power Window (4DR)- 01

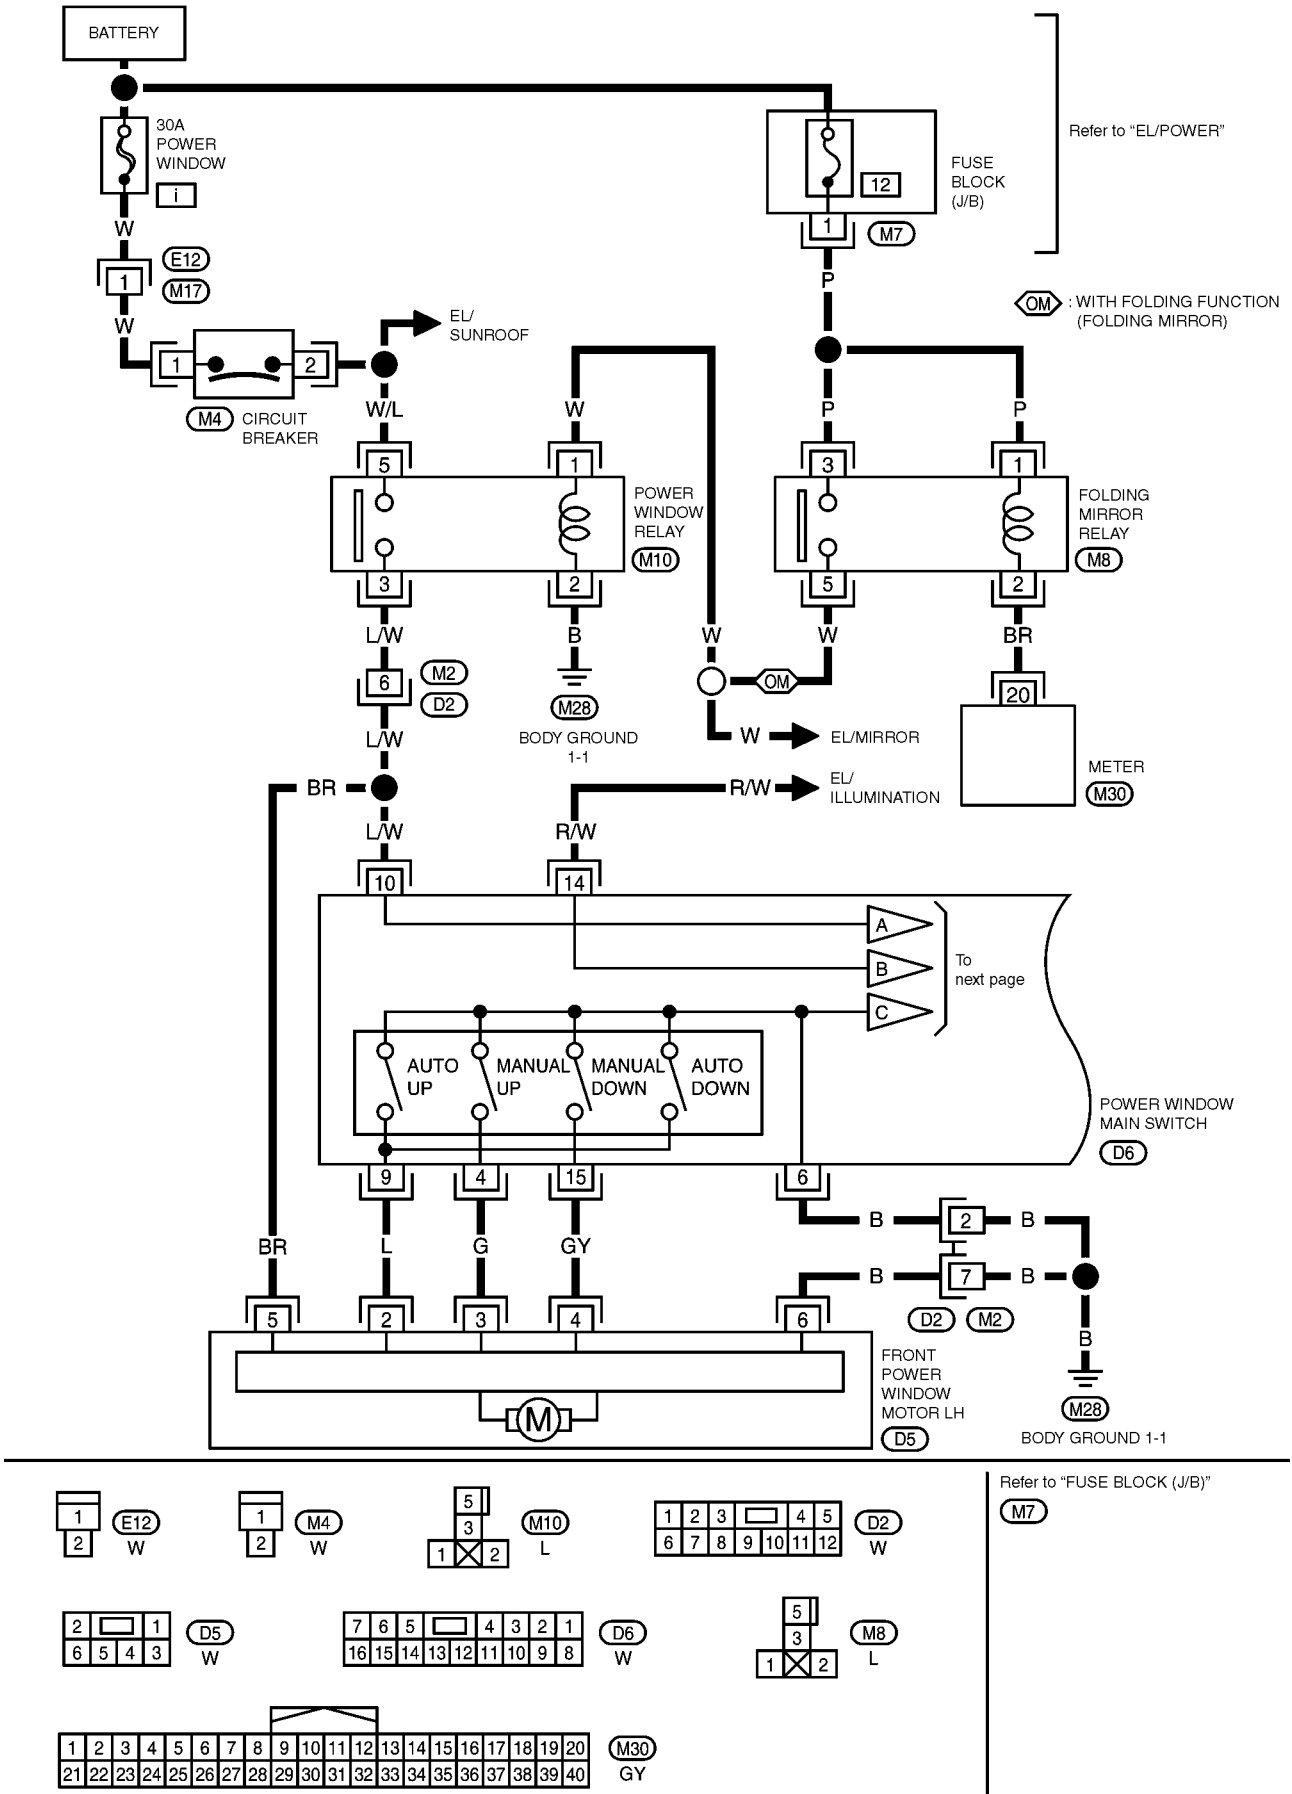


GI
EM
LC
EC
FE
RS
AC
AV
EL
WH
CL
MT
AT
FA
RA
BR
ST
BT

POWER WINDOW SYSTEM

Wiring Diagram

EL/Power Window (4DR)- 03

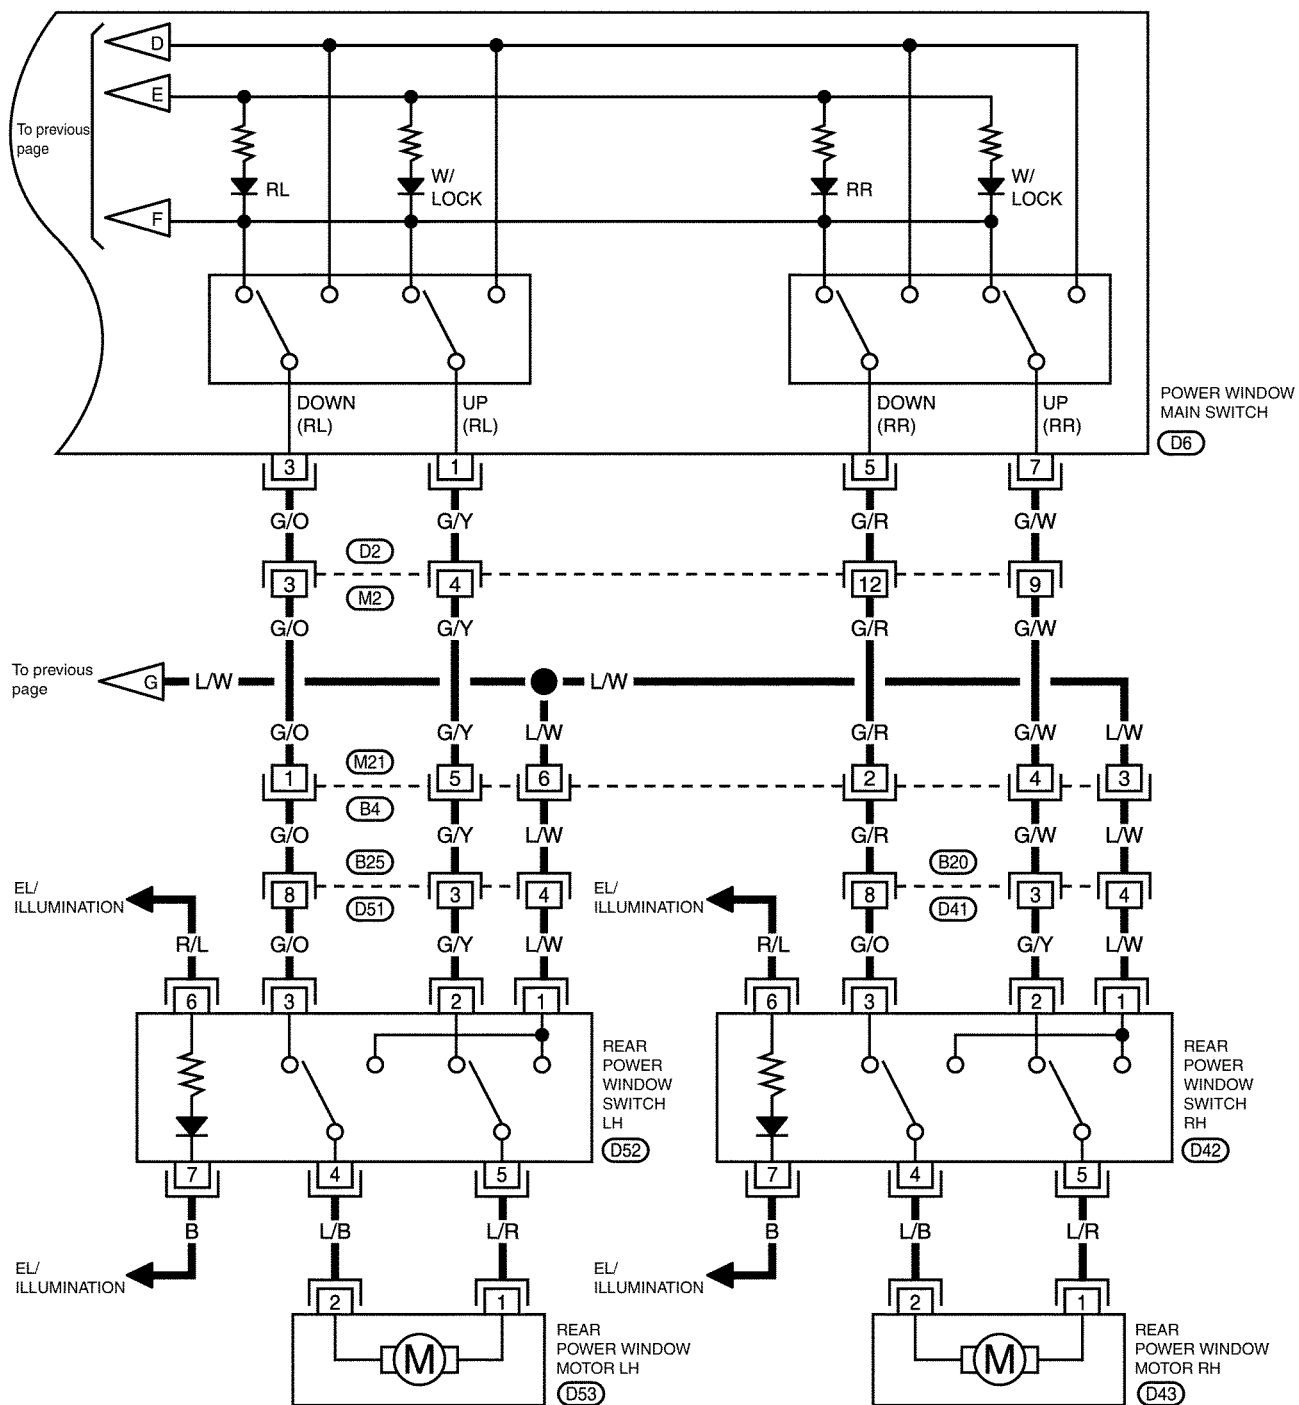

1	2	3	4	5
6	7	8	9	10
11	12			

D2
W

7	6	5	4	3	2	1
16	15	14	13	12	11	10
9	8					

D6
W

4	3	2	1
10	9	8	7
6	5		

B20
W

B25
W

1	2	3
4	5	6

B4
W

6	7	8
3	2	5
4	1	

D42
W

D52
W

1	2
---	---



D43
B

D53
B

POWER WINDOW SYSTEM

Wiring Diagram

EL/Power Window (2DR) - 01

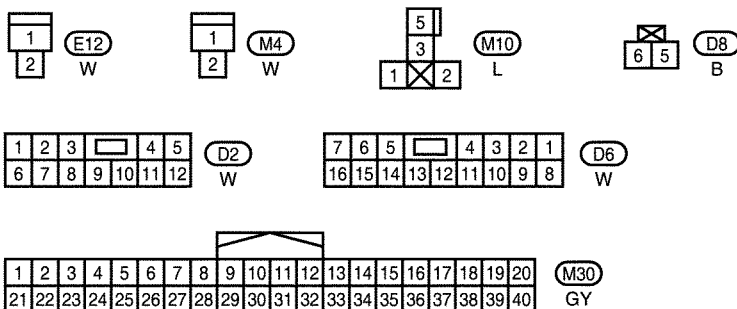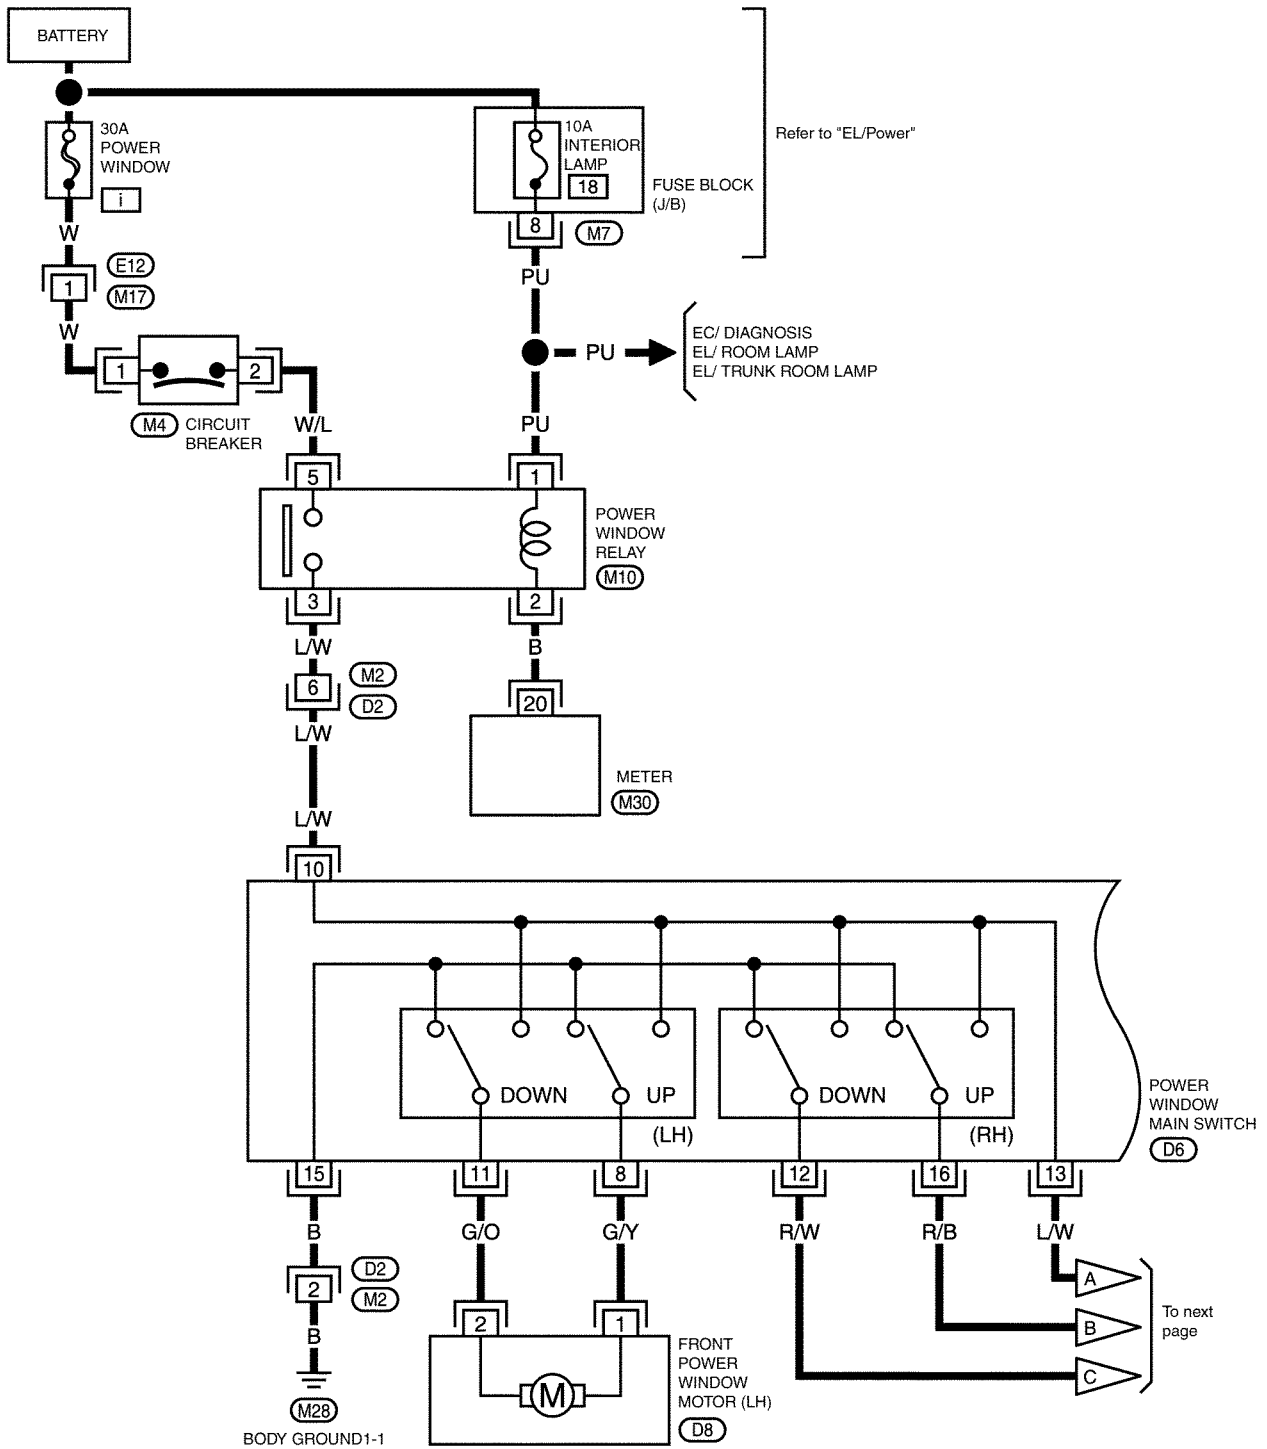






REFER TO FUSE BLOCK (J/B)

(M7)

POWER WINDOW SYSTEM

Wiring Diagram

    

EL/Power Window (2DR)- 02

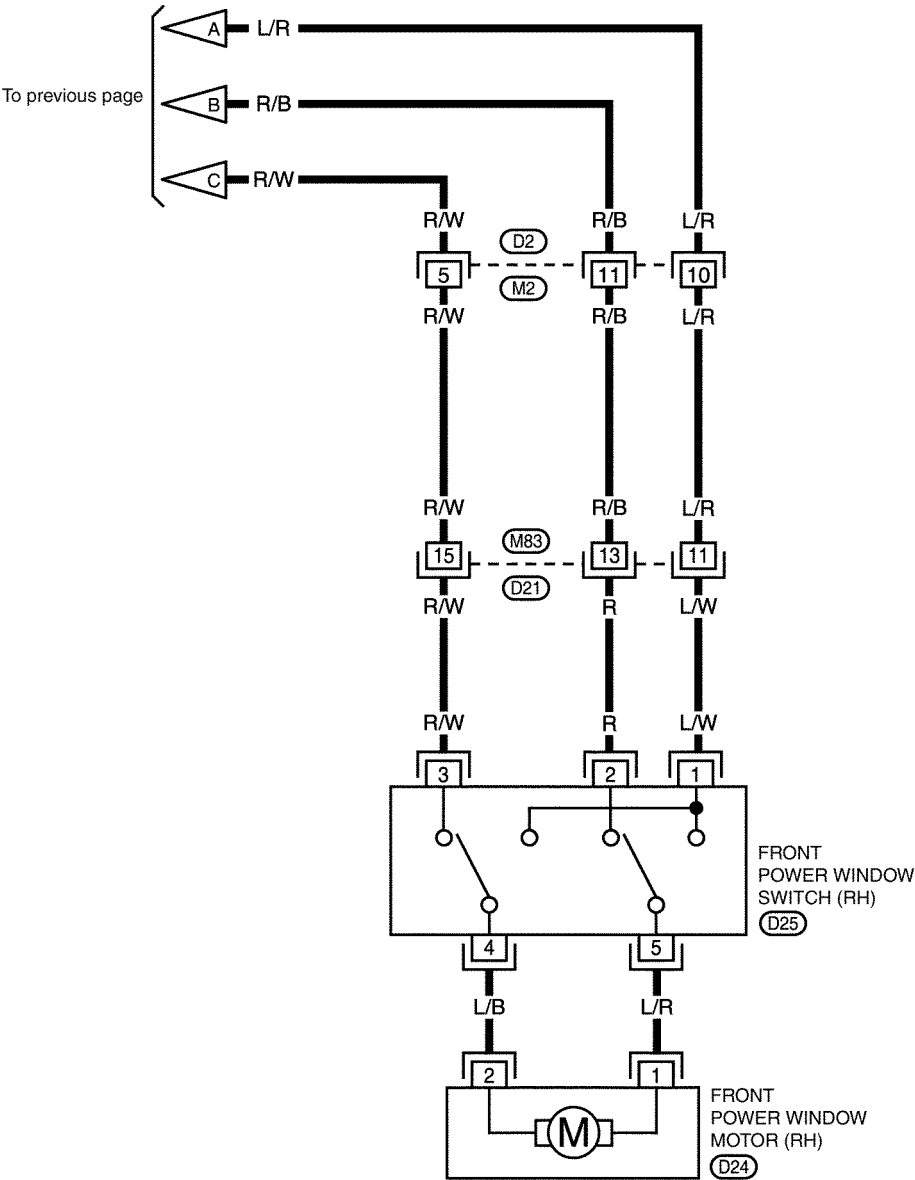

CHARGING SYSTEM

Wiring Diagram



EL/Charge

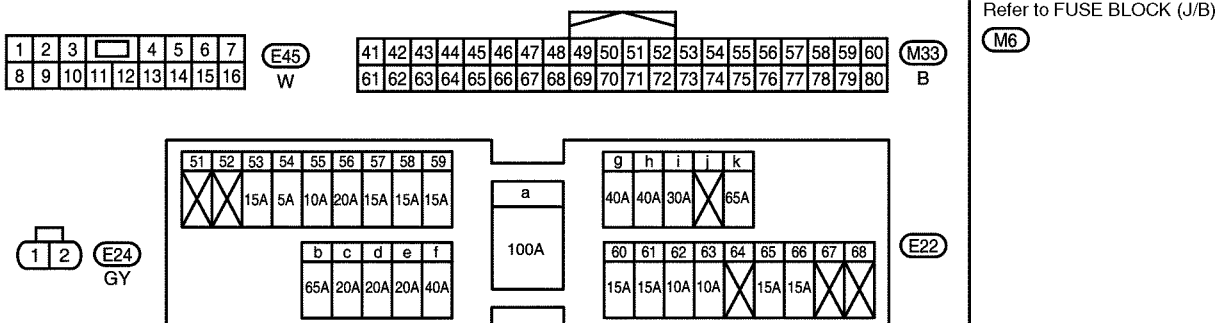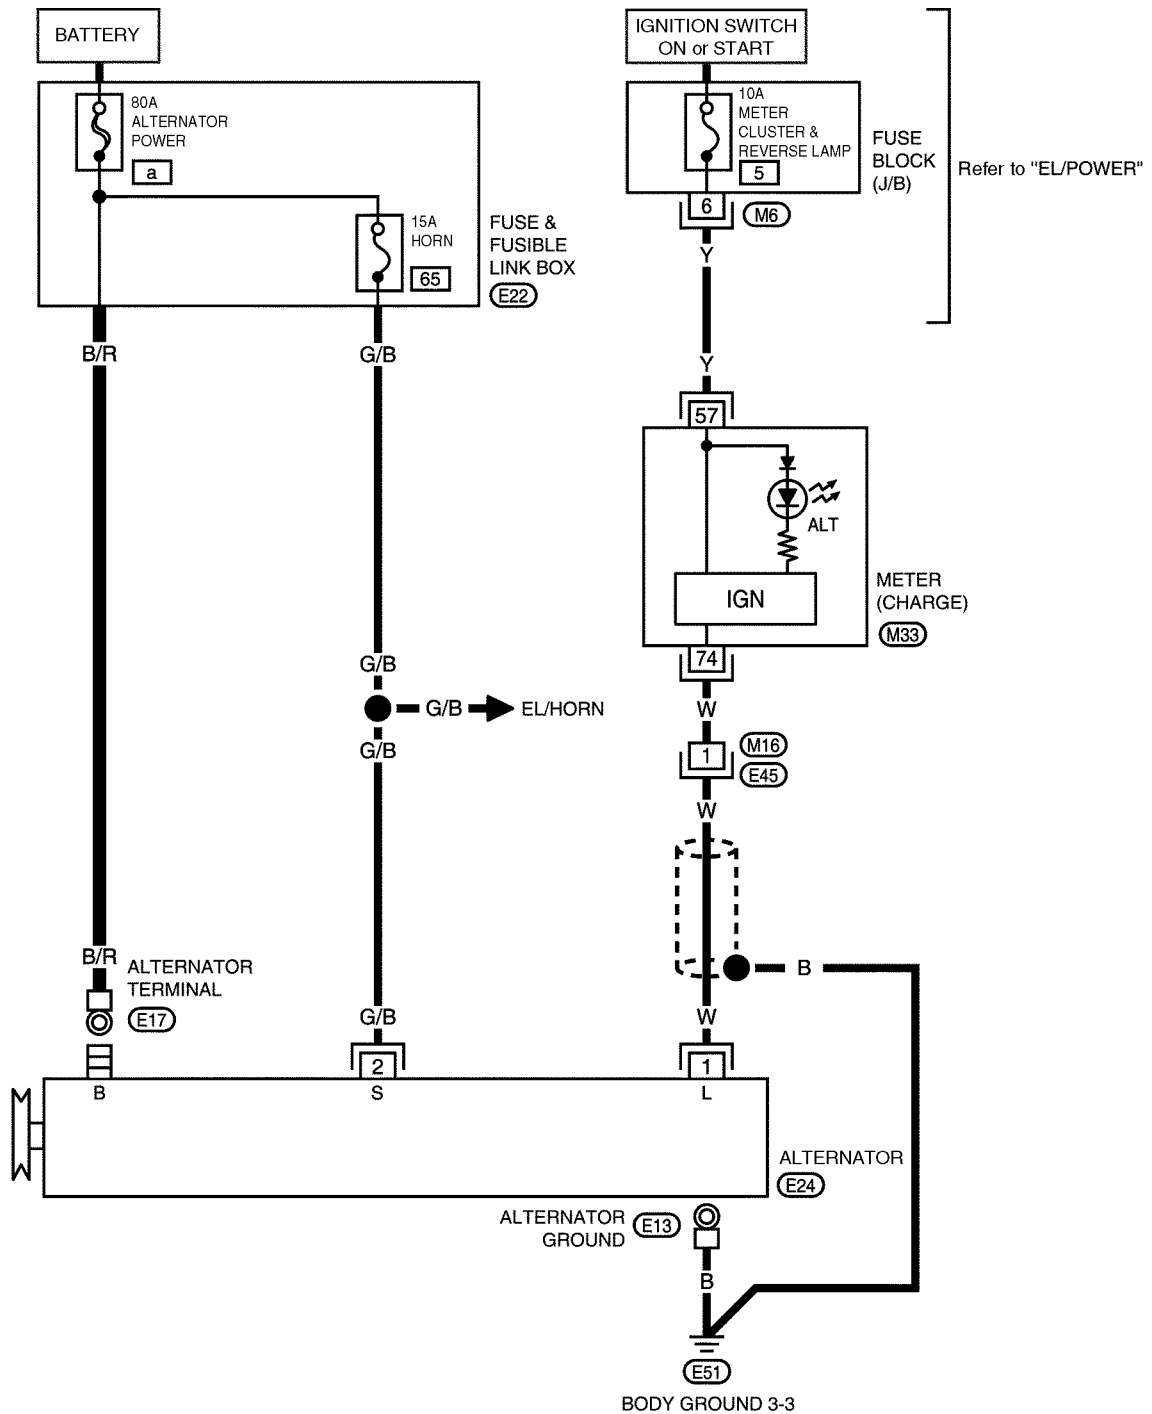

STARTING SYSTEM

Wiring Diagram

EL/Start (M/T)- 01

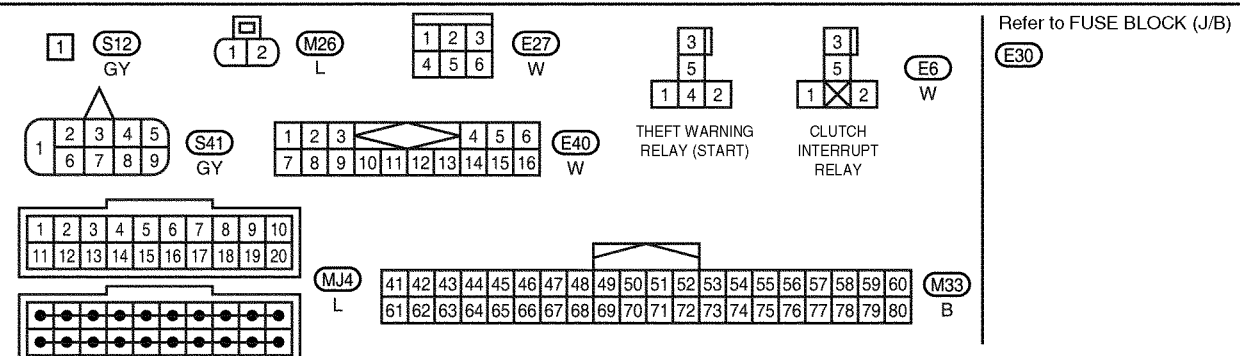
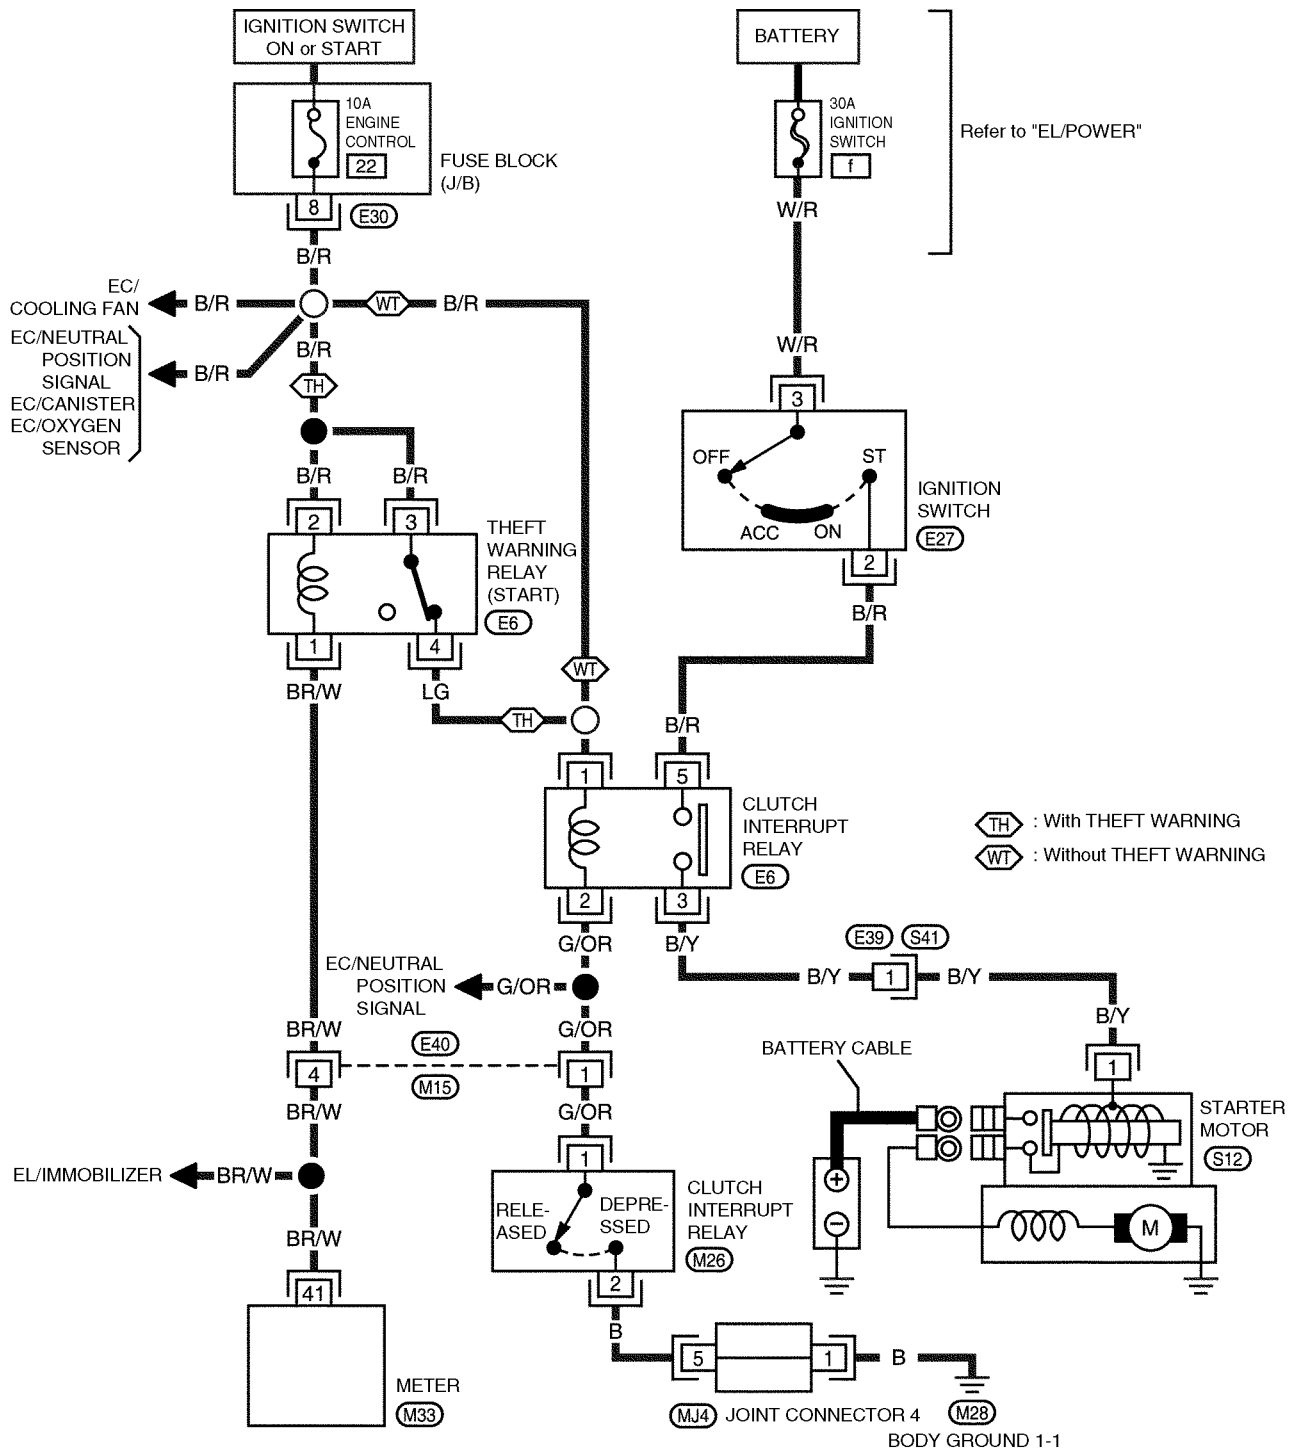


SRWZ007_01

STARTING SYSTEM

Wiring Diagram


EL/Start (A/T)- 02

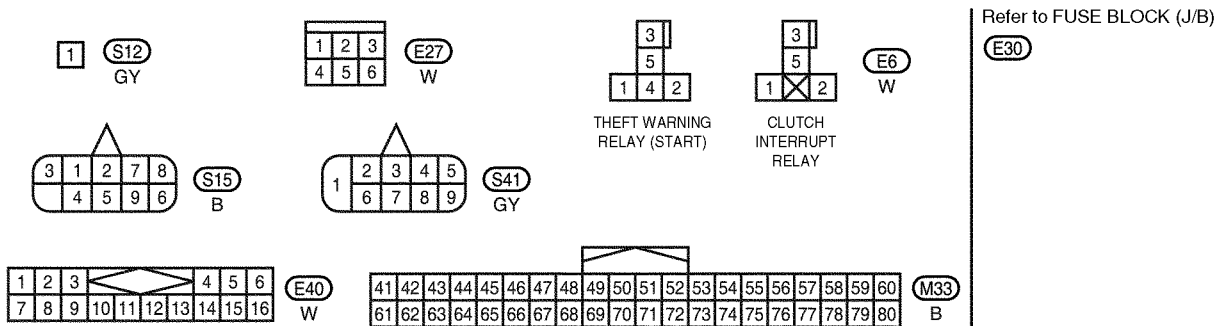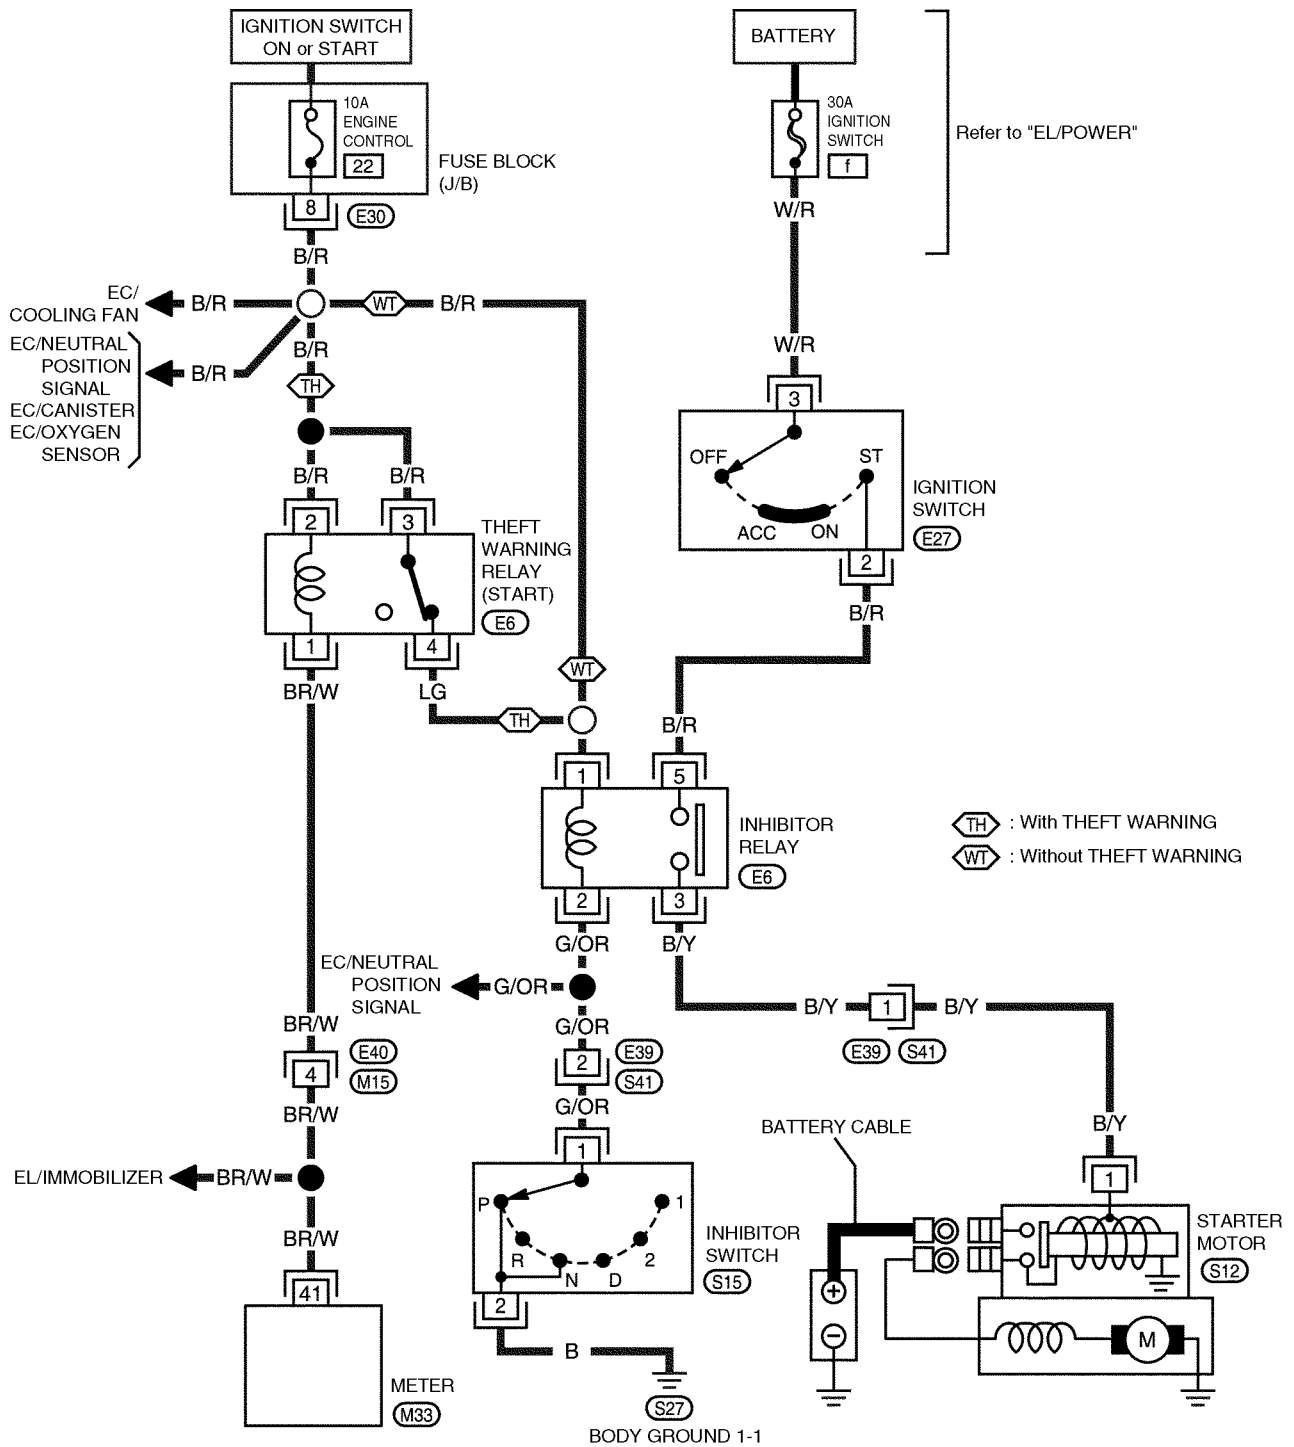







HEADLAMP

Wiring Diagram

EL/Headlamp

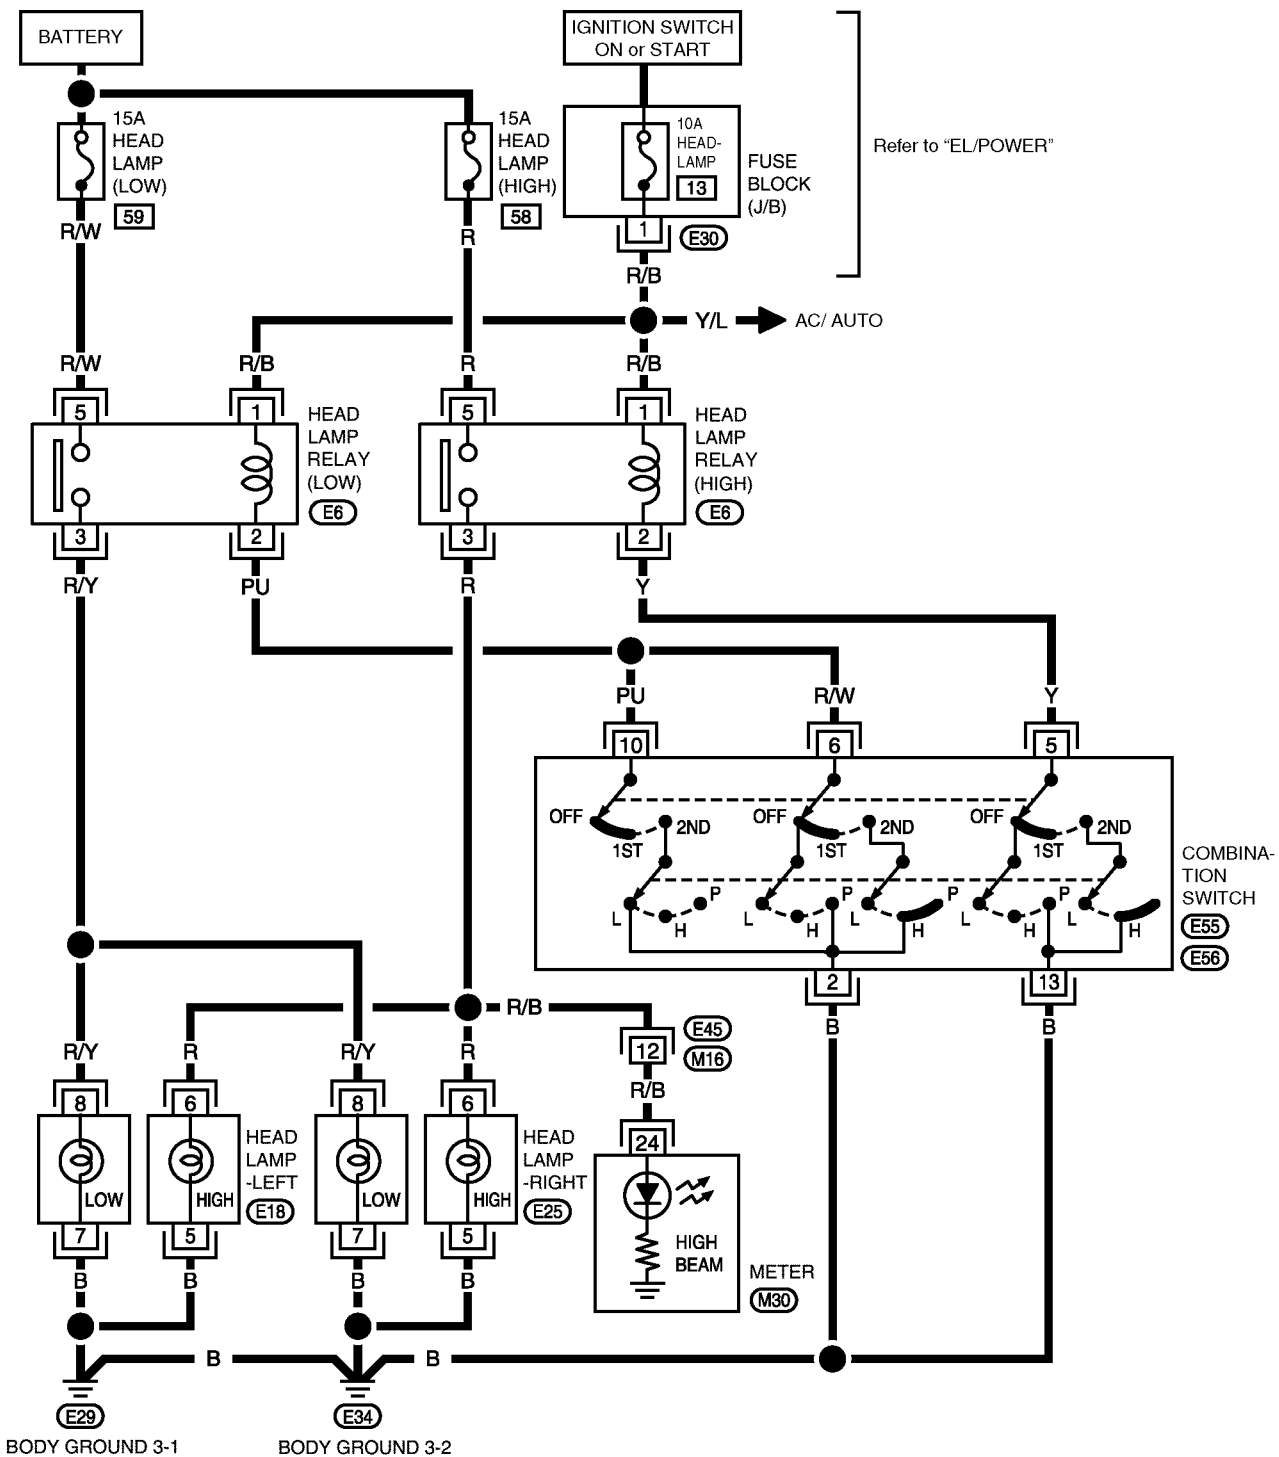

      GI
EM
LC
EC
FE
RS
AC
AV
EL
WH
CL
MT
AT
FA
RA
BR
ST
BT




Refer to "FUSE BLOCK (J/B)"
[E30]

EL-Headlamp Aiming

TAIL LAMP

Circuit Diagram


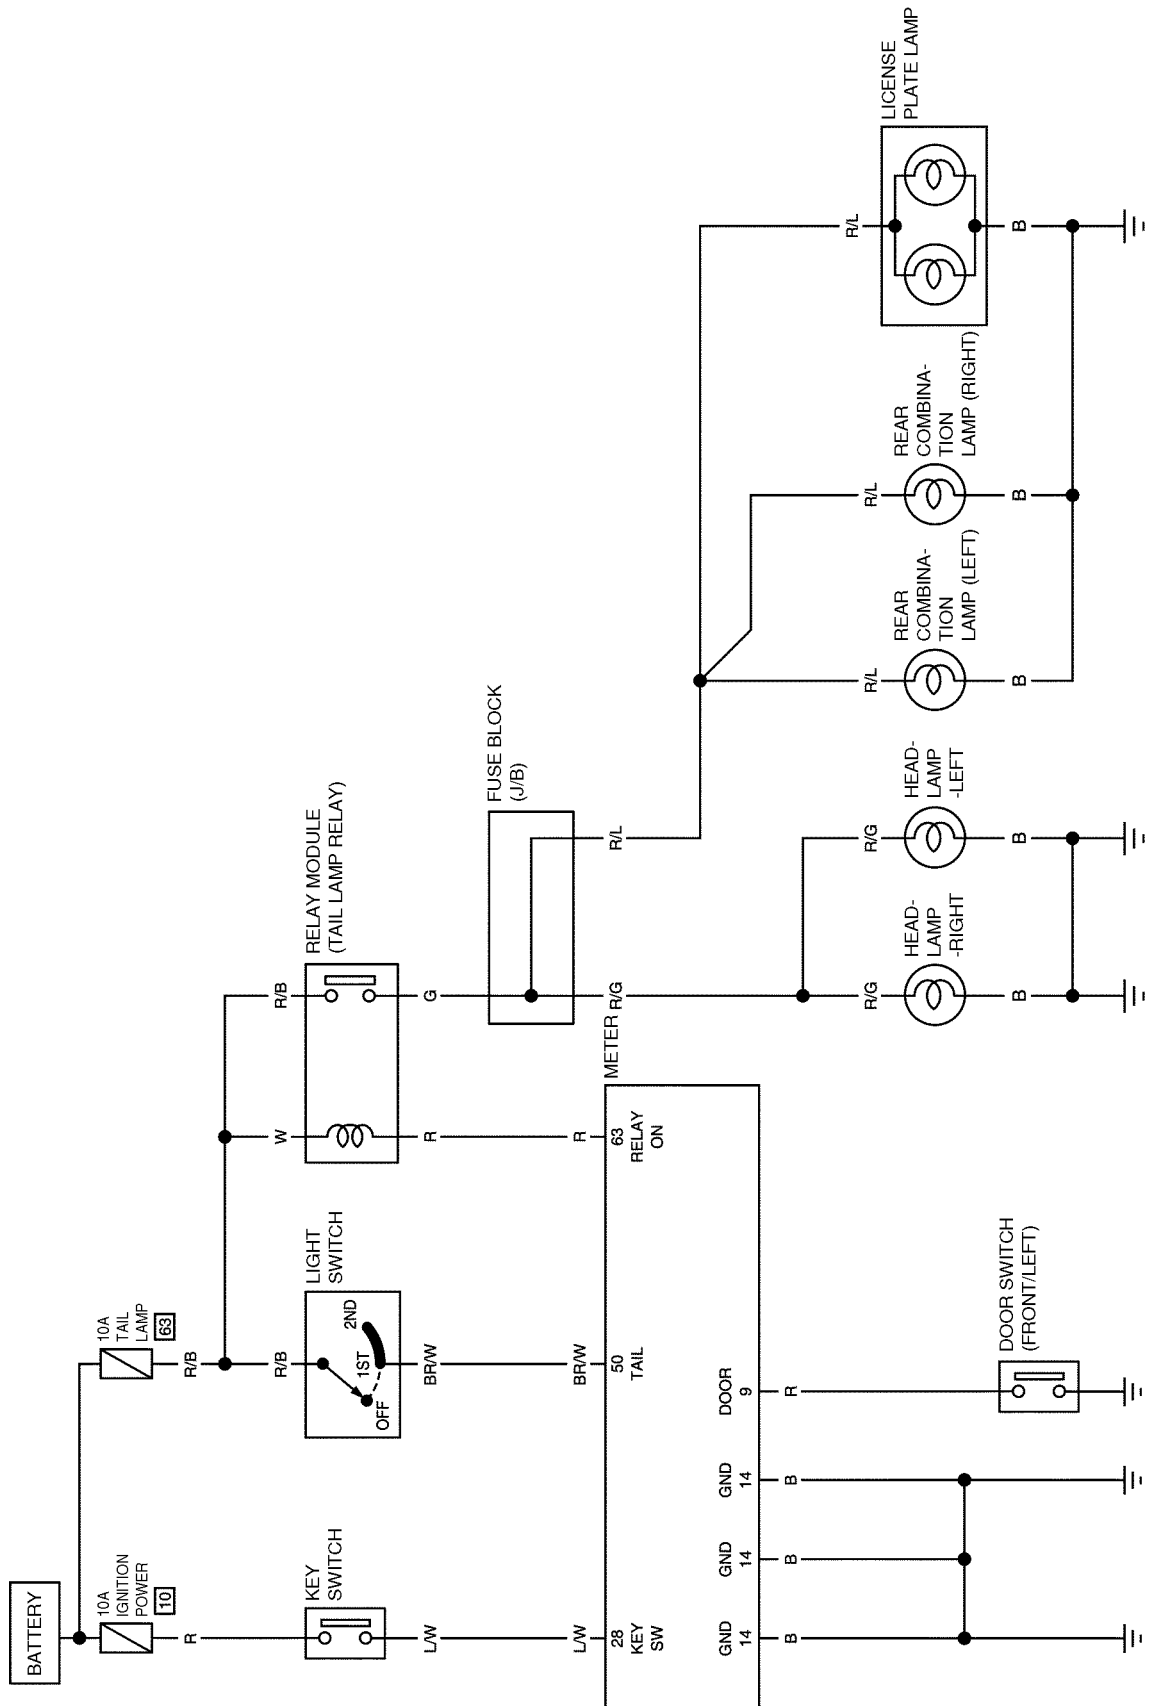


GI
EM
LC
EC
FE
RS
AC
AV
EL
WH
CL
MT
AT
FA
RA
BR
ST
BT

TAIL LAMP

Wiring Diagram






EL/Tail Lamp- 01

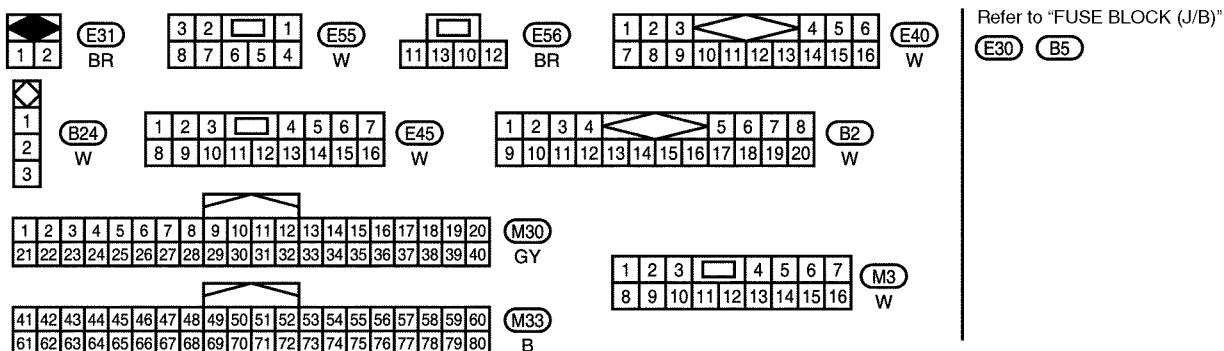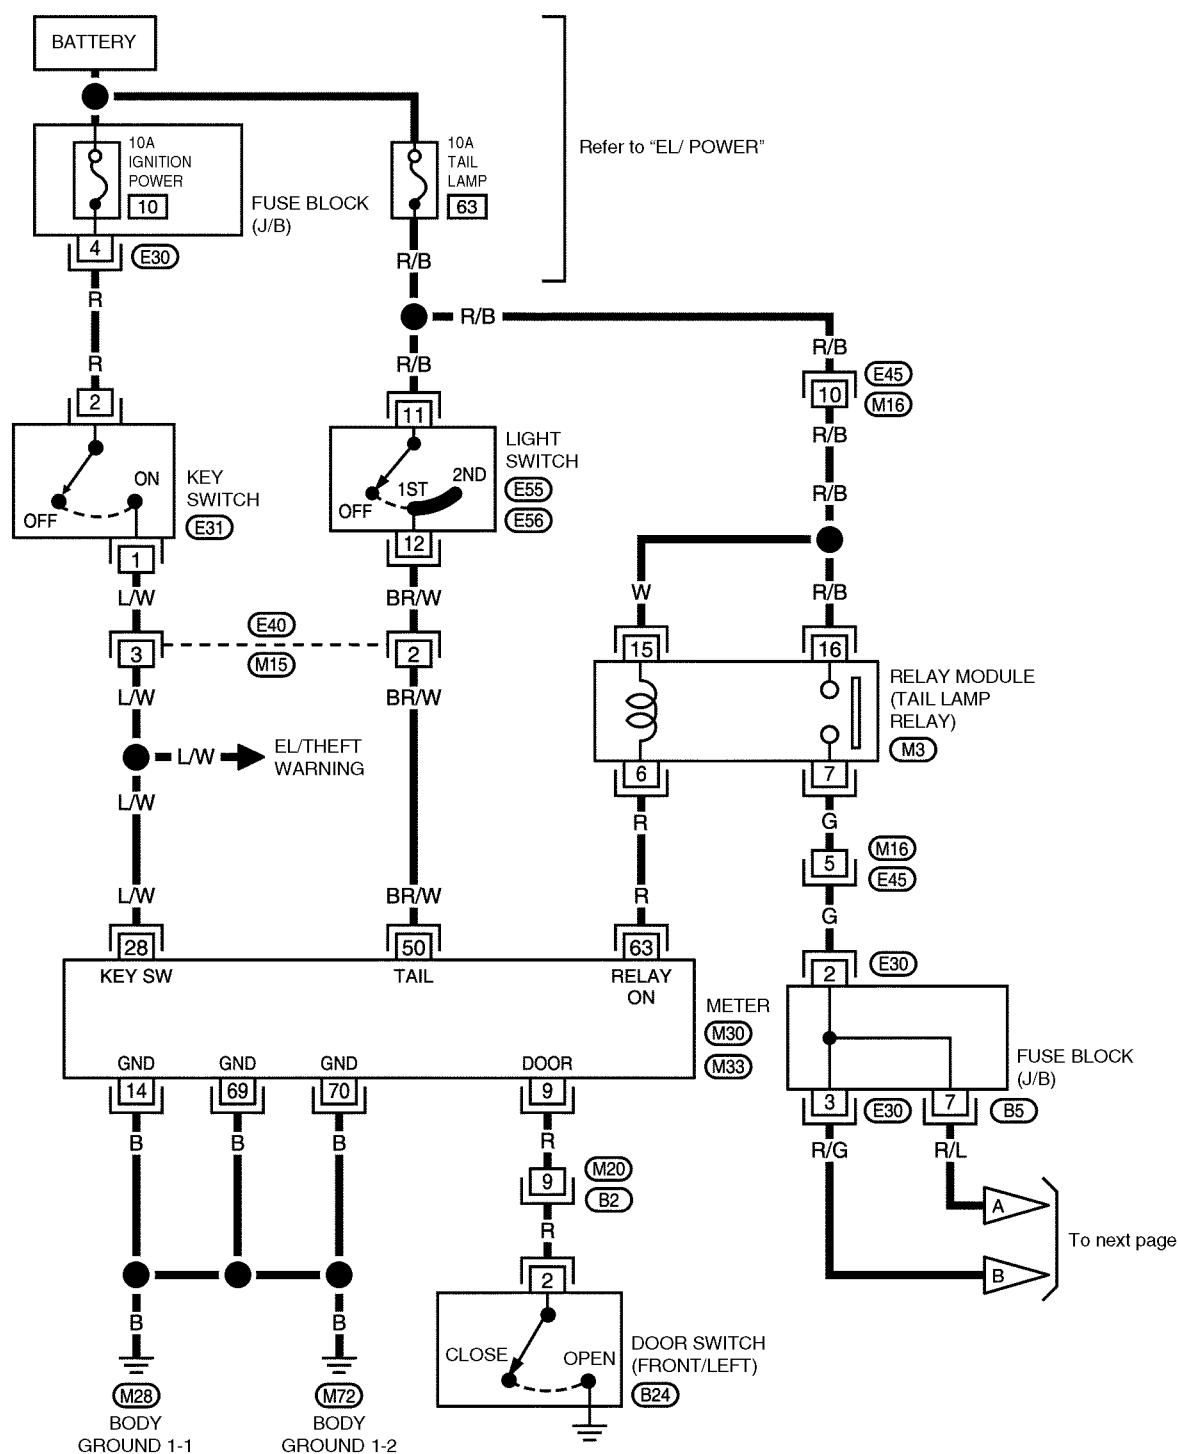

TAIL LAMP

Wiring Diagram

    

EL/Tail Lamp- 02

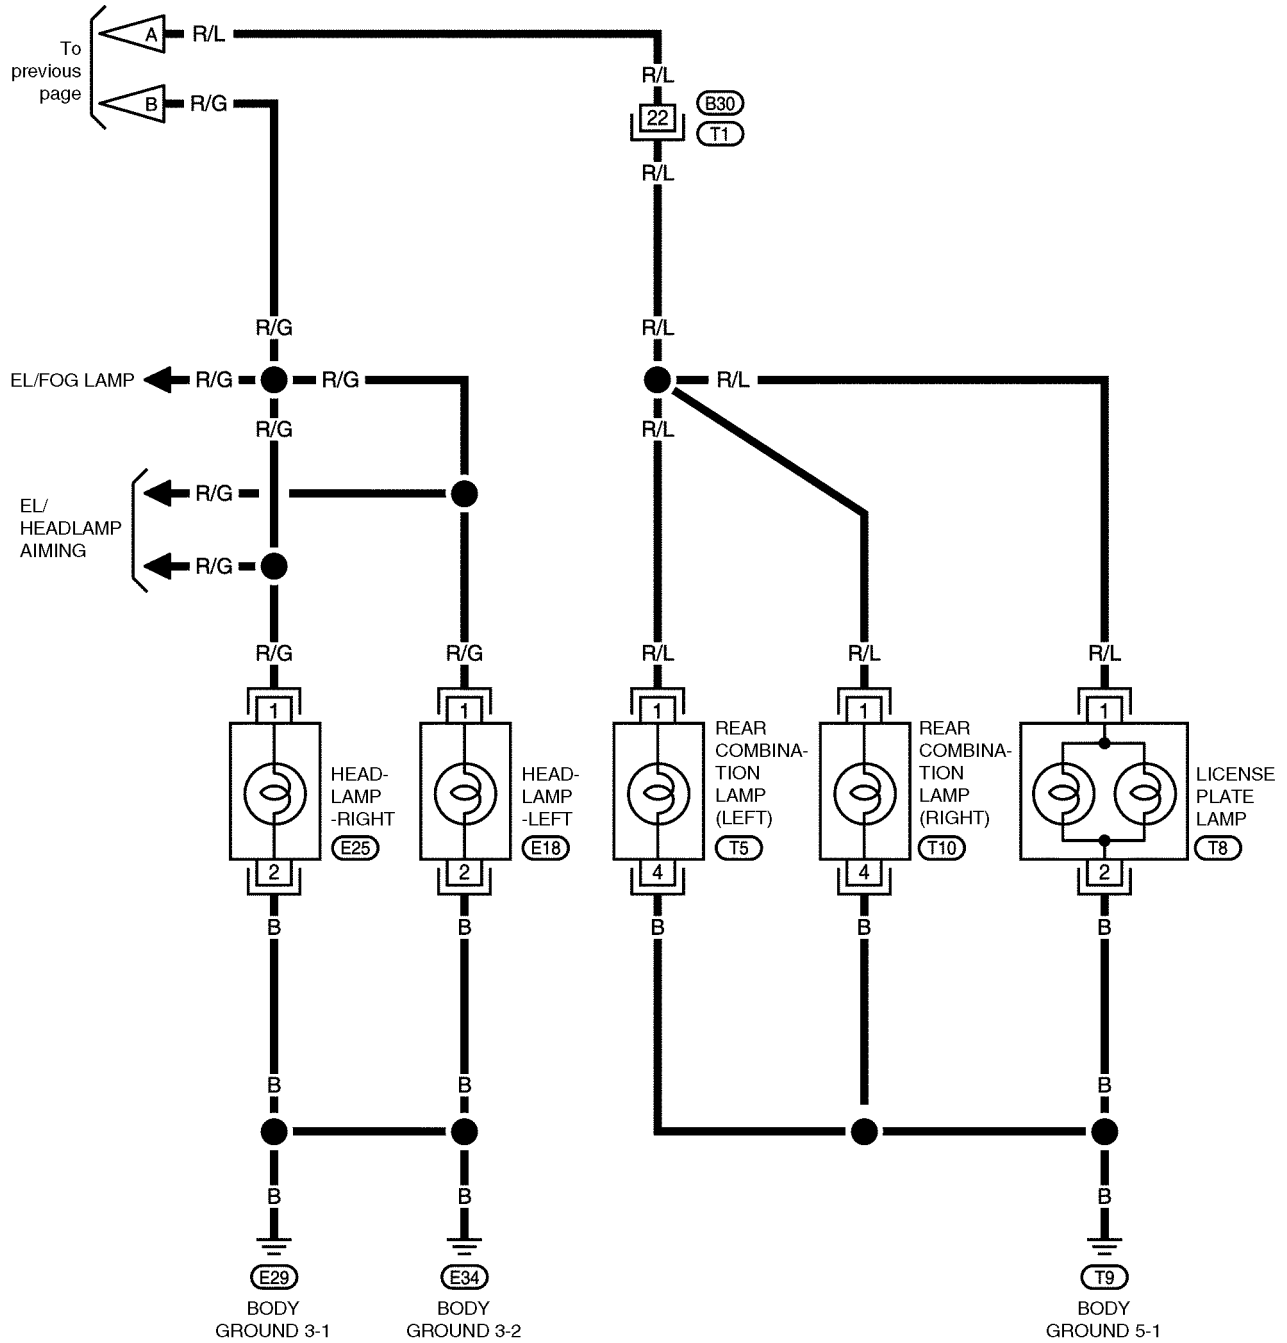

FRONT FOG LAMP

Wiring Diagram






EL/Fog Lamp (FR)

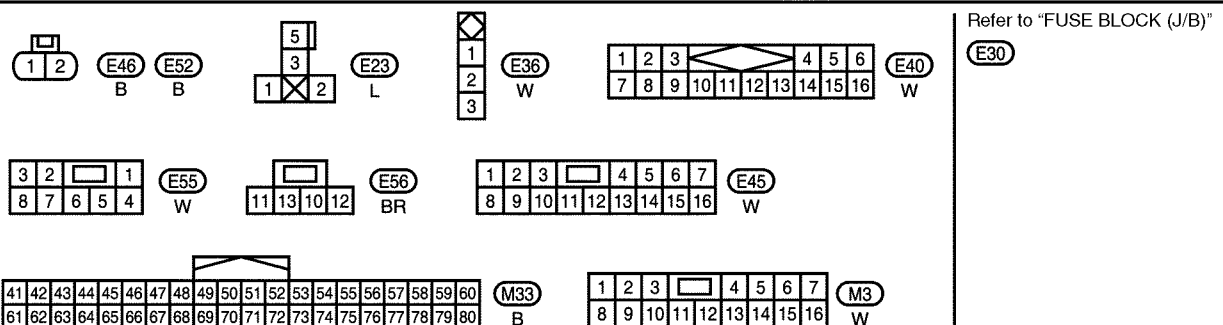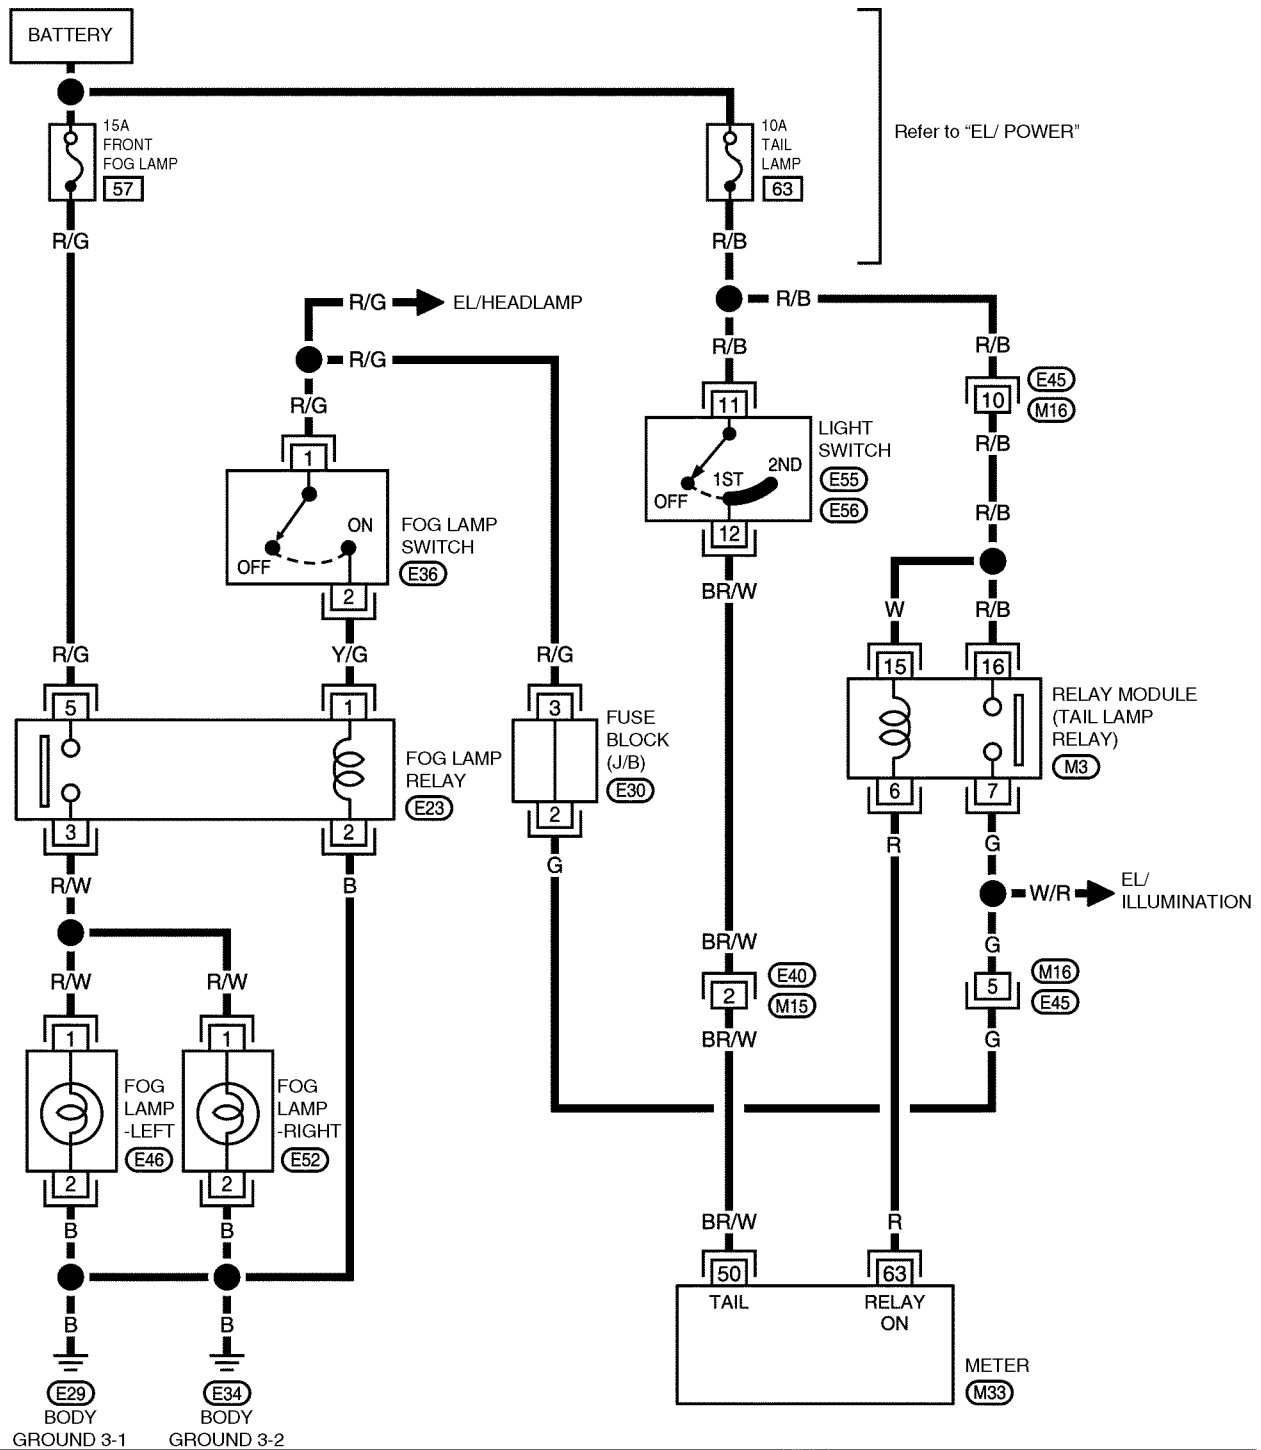

REAR FOG LAMP (EUROPE)





Wiring Diagram

    EL/Fog Lamp (RR)

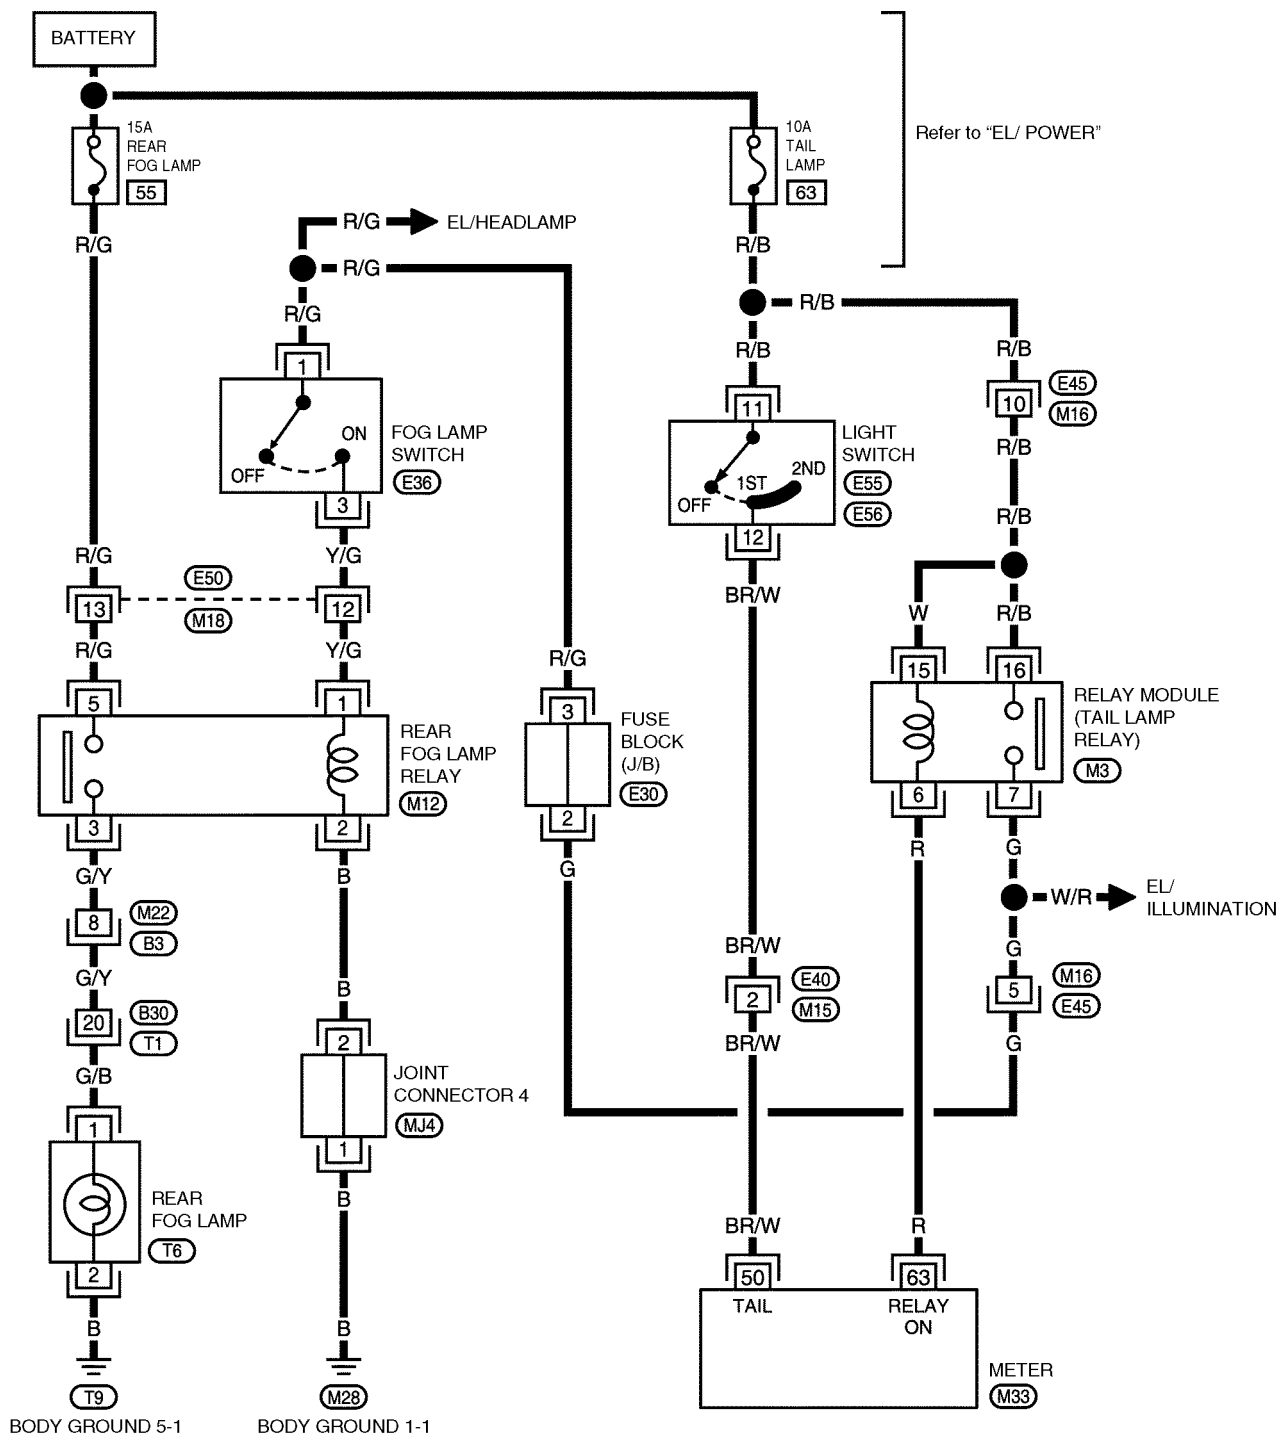


Refer to "FUSE BLOCK (J/B)"

    (E30)





EL/Room Lamp

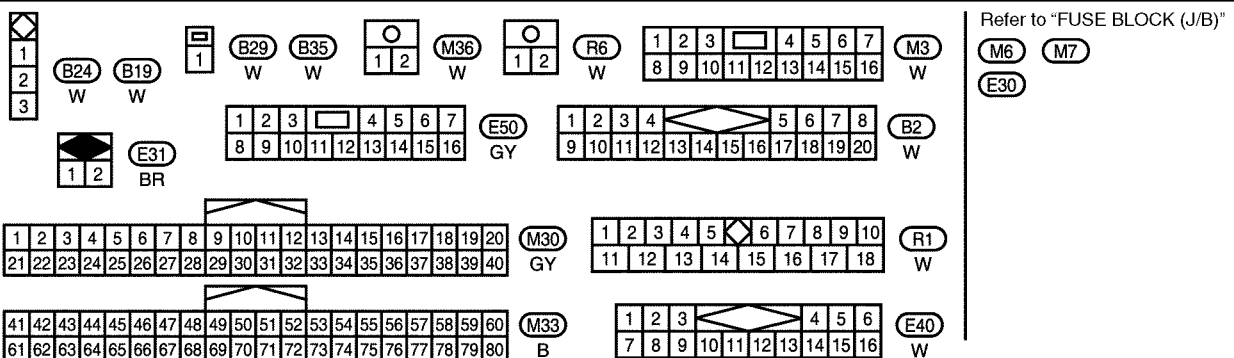

TRUNK ROOM LAMP

Wiring Diagram

EL/Trunk Room Lamp

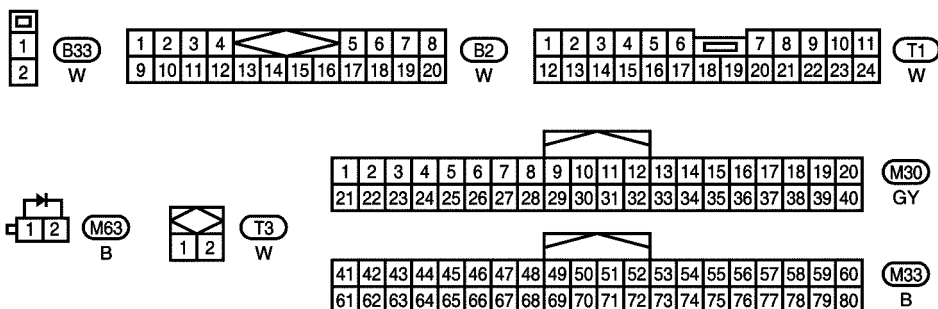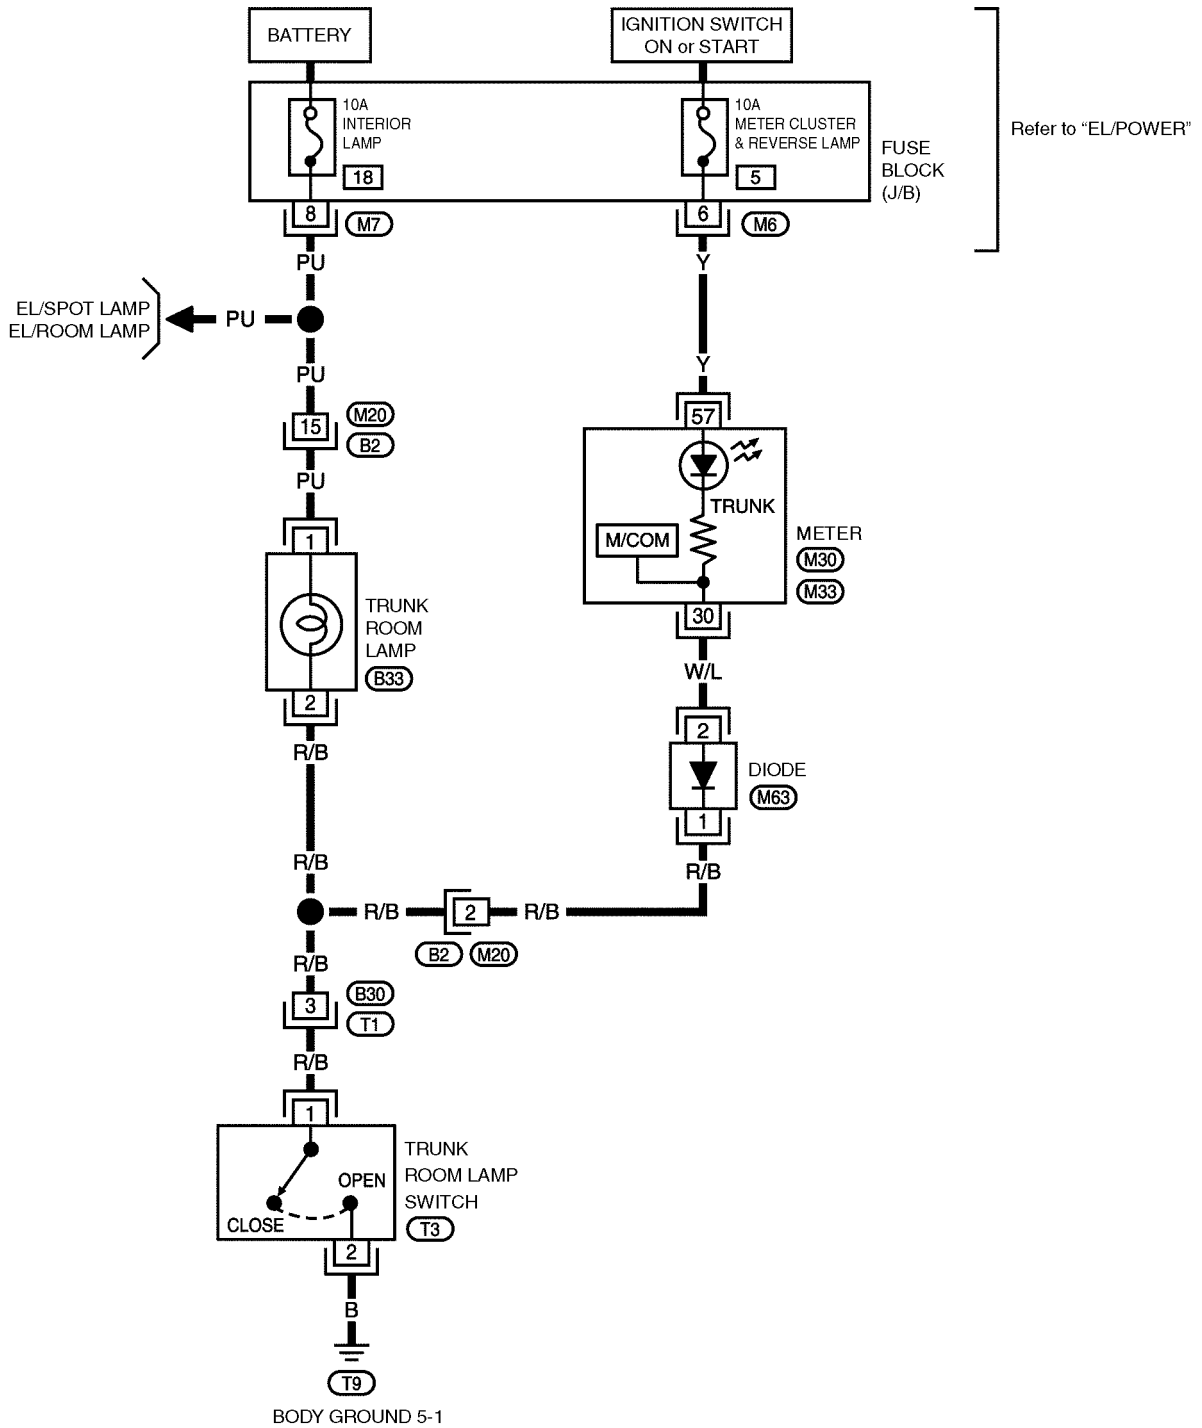







Refer to "FUSE BLOCK (J/B)"

(M6) (M7)

STOP LAMP

Wiring Diagram

     EL/Stop Lamp

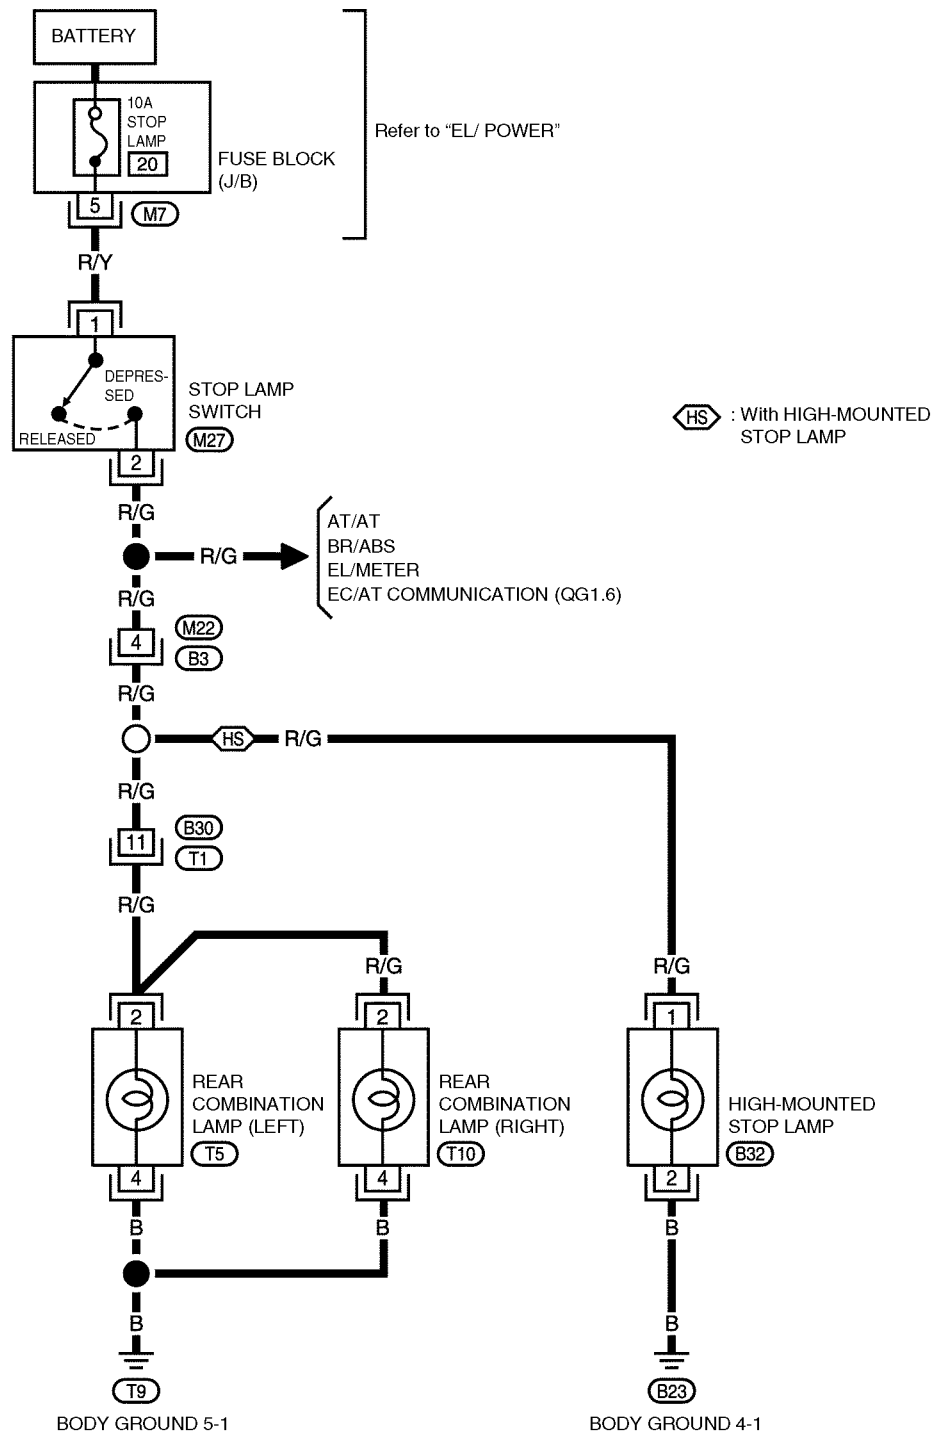



Refer to "FUSE BLOCK (J/B)"

(M7)


REVERSE LAMP

Wiring Diagram

EL/Reverse Lamp

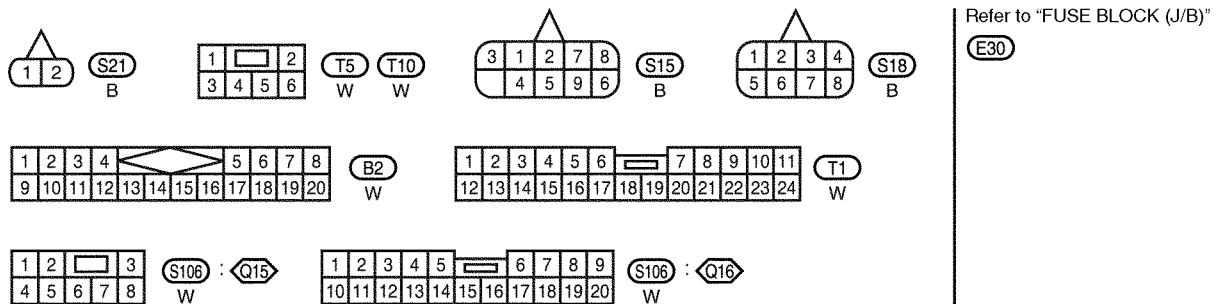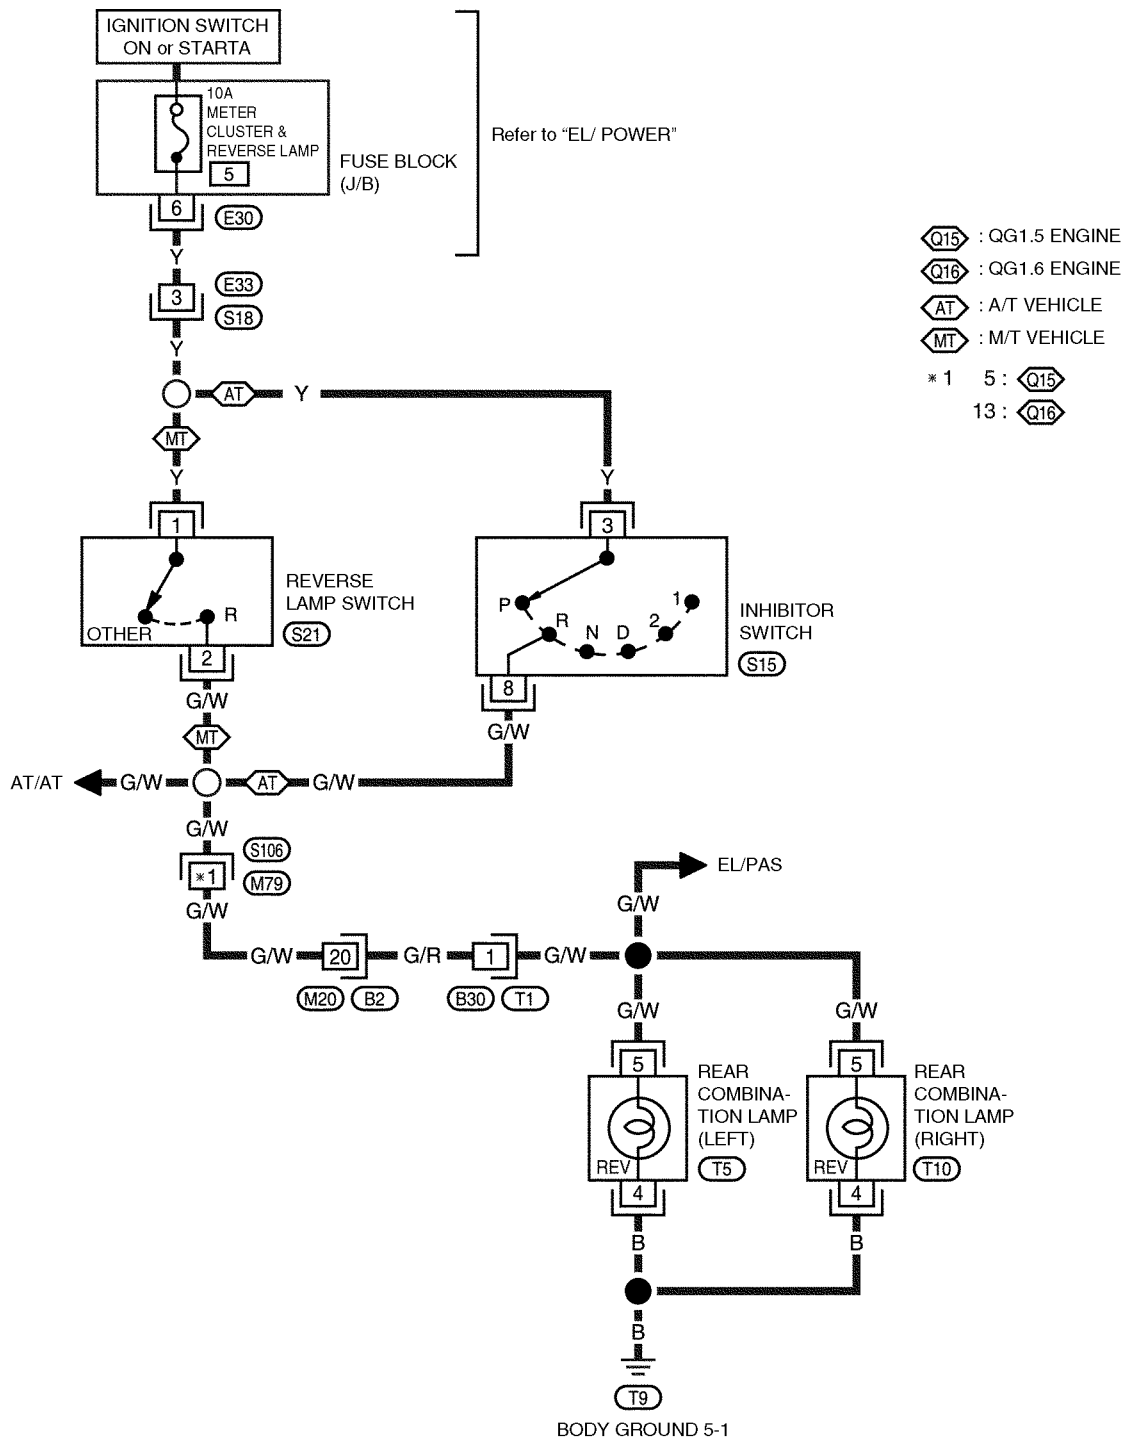


Circuit Diagram

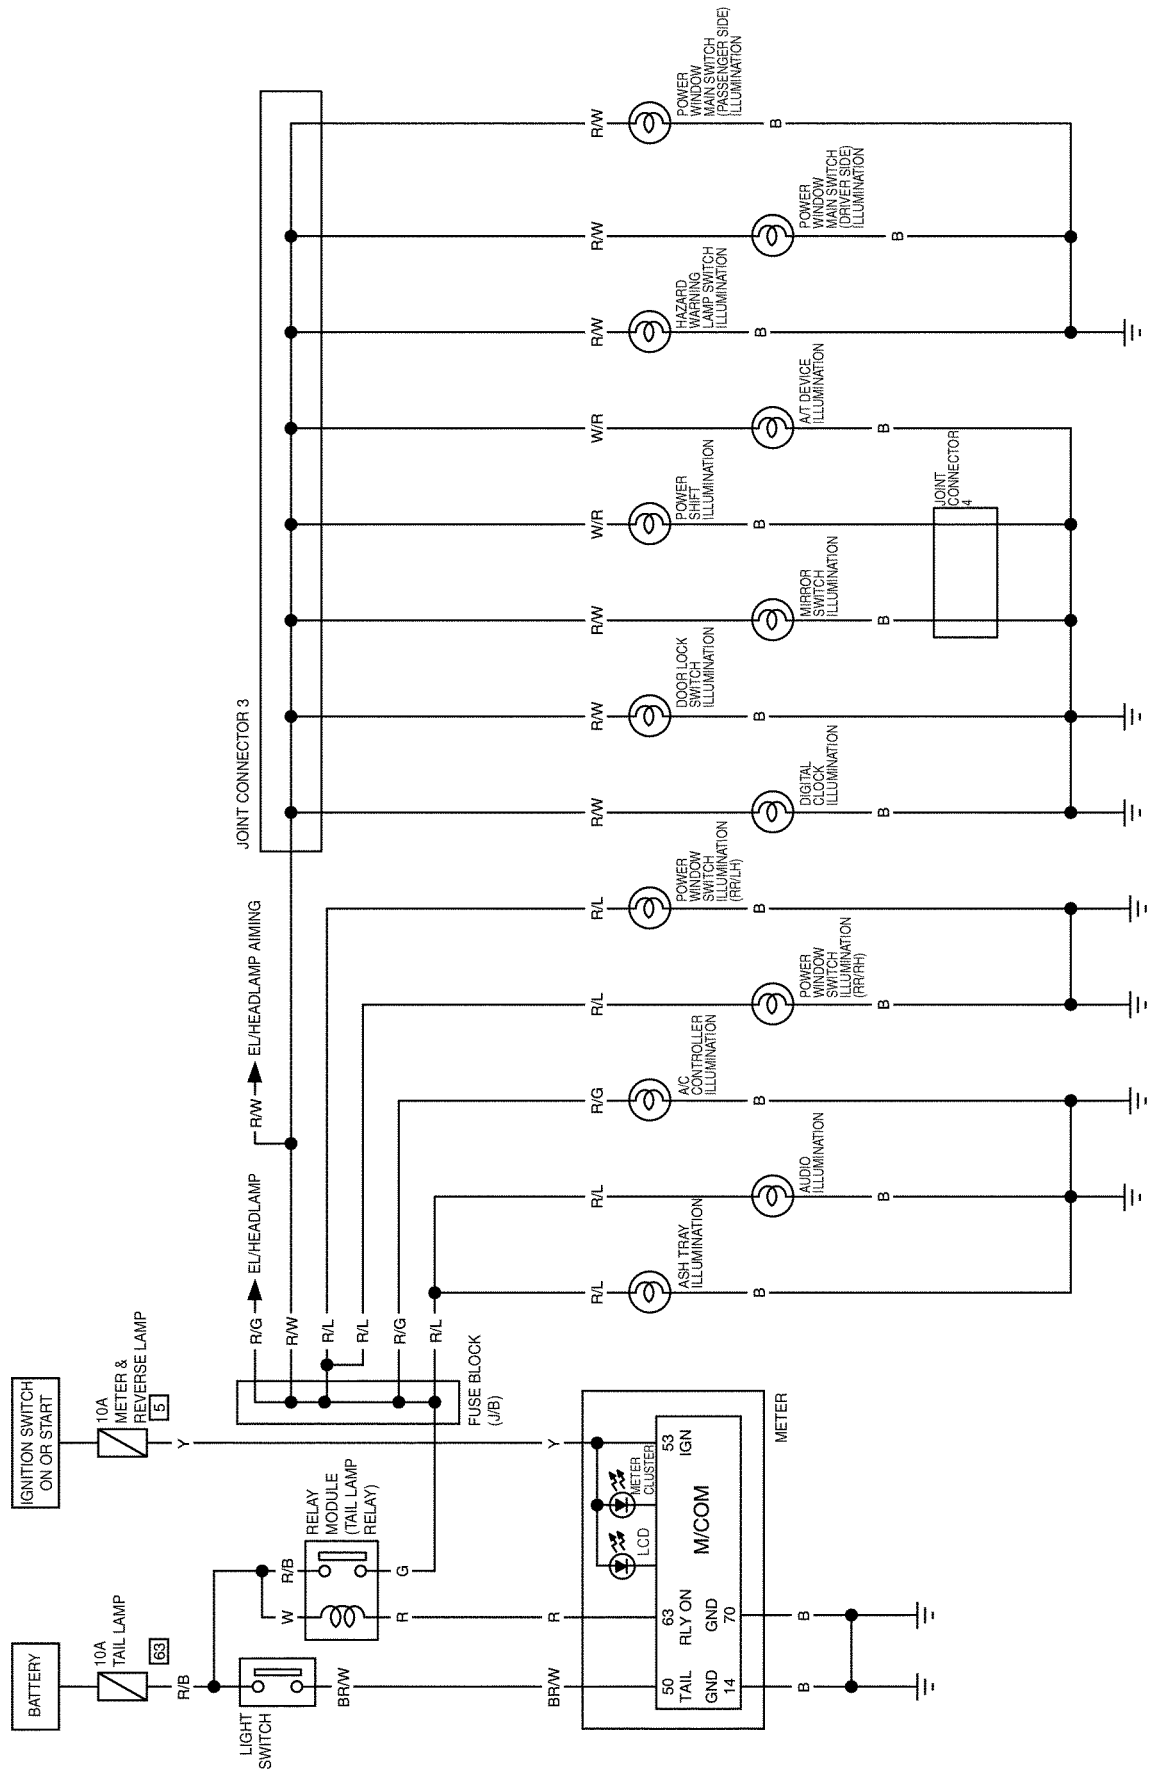

ILLUMINATION

Wiring Diagram

 
EL/Illumination- 01



ILLUMINATION

Wiring Diagram

 EL/Illumination- 03



TURN SIGNAL LAMP • HAZARD LAMP

Circuit Diagram



TURN SIGNAL LAMP • HAZARD LAMP

 
Wiring Diagram

EL/Turn Signal Lamp- 01

TURN SIGNAL LAMP • HAZARD LAMP

Wiring Diagram


EL/Turn Signal Lamp- 02



DIGITAL CLOCK

Wiring Diagram

 EL/Digital Clock



CIGARETTE LIGHTER / POWER SOCKET

Wiring Diagram

EL/Power Socket



HEATER SEAT

 
Wiring Diagram

EL/Heater Seat

TRUNK LID OPENER

TRUNK LID OPENER

TRUNK LID OPENER



DEFOGGER, DE-ICER

Circuit Diagram

DEFOGGER, DE-ICER

Wiring Diagram

 
EL/Defogger- 01



MIRROR

Wiring Diagram

EL/Mirror




CAN COMMUNICATION

Wiring Diagram

EL-CAN Communication

POWER SUPPLY ROUTING

 
Circuit Diagram



POWER SUPPLY ROUTING

Wiring Diagram

 EL/Power- 01



POWER SUPPLY ROUTING

Wiring Diagram

EL/Power- 03



POWER SUPPLY ROUTING

 
Wiring Diagram

EL/Power- 05

POWER SUPPLY ROUTING

Wiring Diagram

EL/Power- 06



POWER SUPPLY ROUTING

Wiring Diagram

EL/Power- 07

POWER SUPPLY ROUTING

Wiring Diagram

EL/Engine Room 01



3000
30000



3000
30000

POWER SUPPLY ROUTING

Wiring Diagram

 
EL/Ground-Engine Room 02



POWER SUPPLY ROUTING

Wiring Diagram

EL/Ground-Engine Room 03



POWER SUPPLY ROUTING

Wiring Diagram

 
EL/Ground-Main 01



POWER SUPPLY ROUTING

Wiring Diagram

EL/Ground-Main 02



POWER SUPPLY ROUTING

Wiring Diagram

 
 
EL/Ground-Main 03



POWER SUPPLY ROUTING

Wiring Diagram

EL/Ground-Main 04



POWER SUPPLY ROUTING

Wiring Diagram

EL/Ground-EGI (QG16)



POWER SUPPLY ROUTING

Wiring Diagram

EL/Ground-EGI (QG15)



POWER SUPPLY ROUTING

Wiring Diagram

 
 
EL/Ground-Body



POWER SUPPLY ROUTING


Wiring Diagram

EL/Ground-Tail




ELECTRICAL UNIT LOCATION

ENGINE ROOM

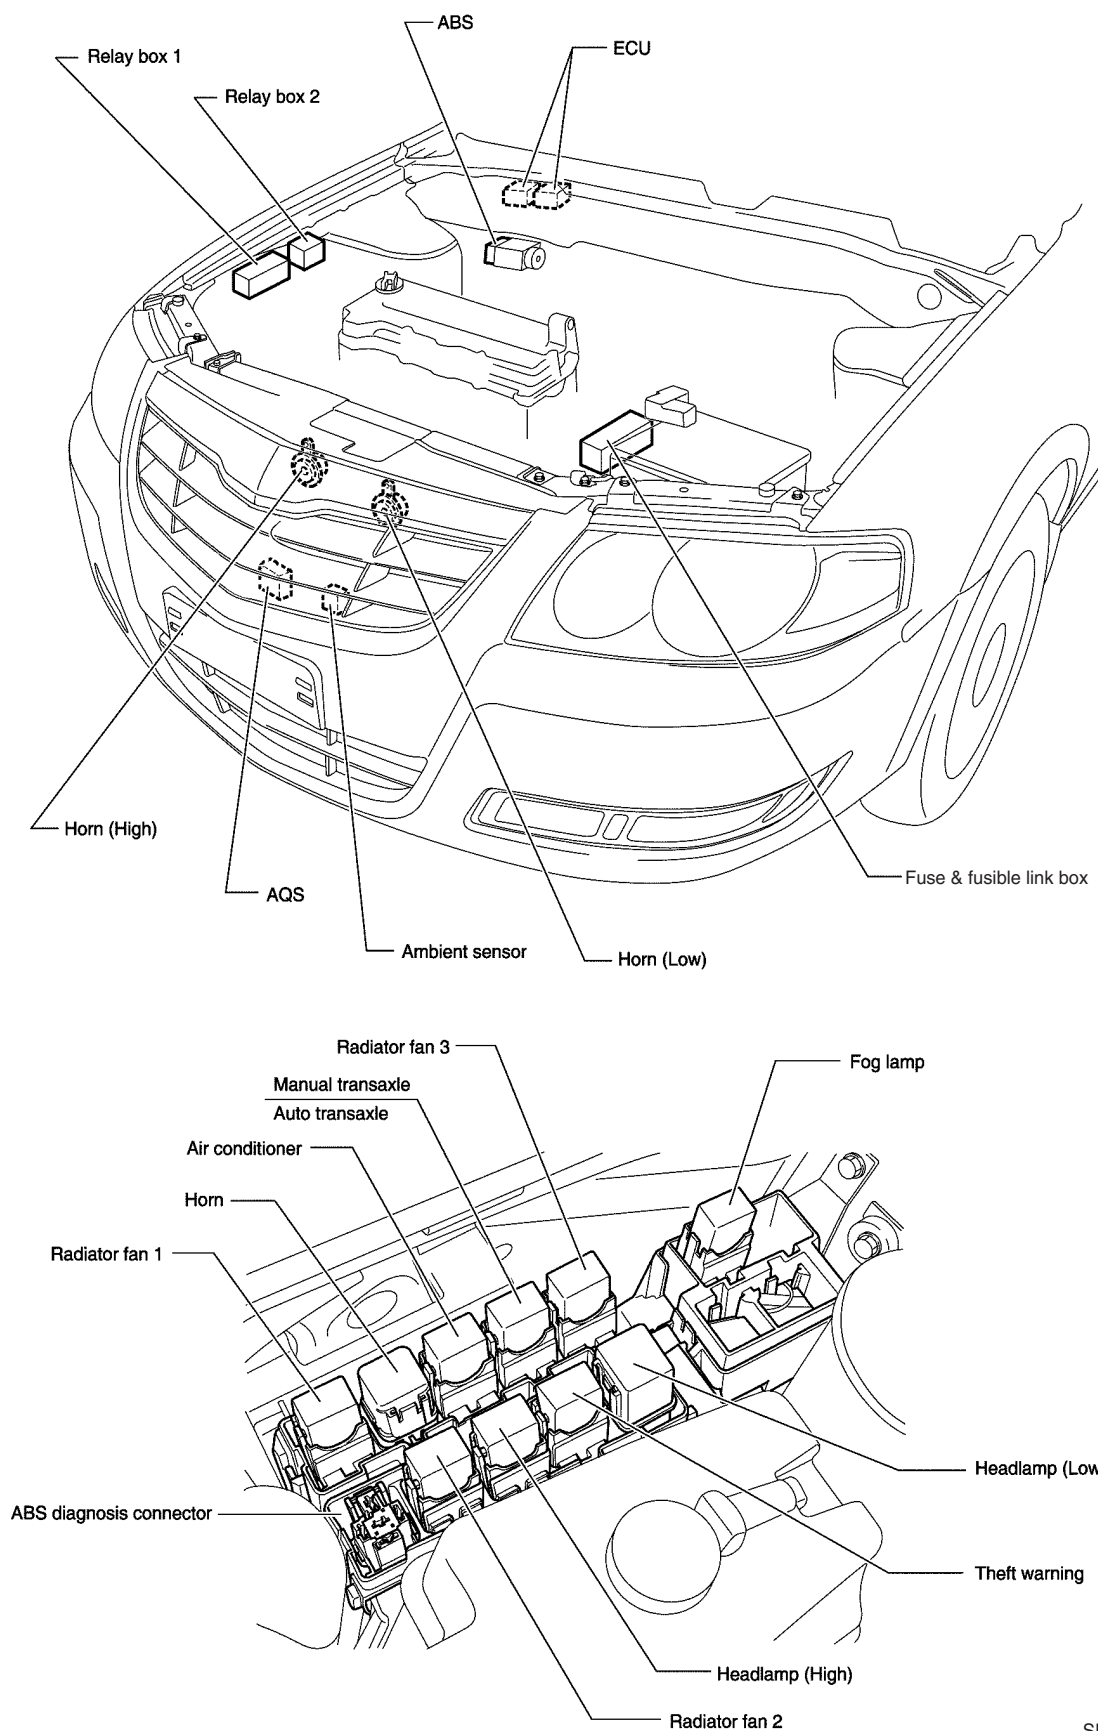


SRIZ001_D1

 INTERIOR



ELECTRICAL UNIT LOCATION


TRUNK ROOM

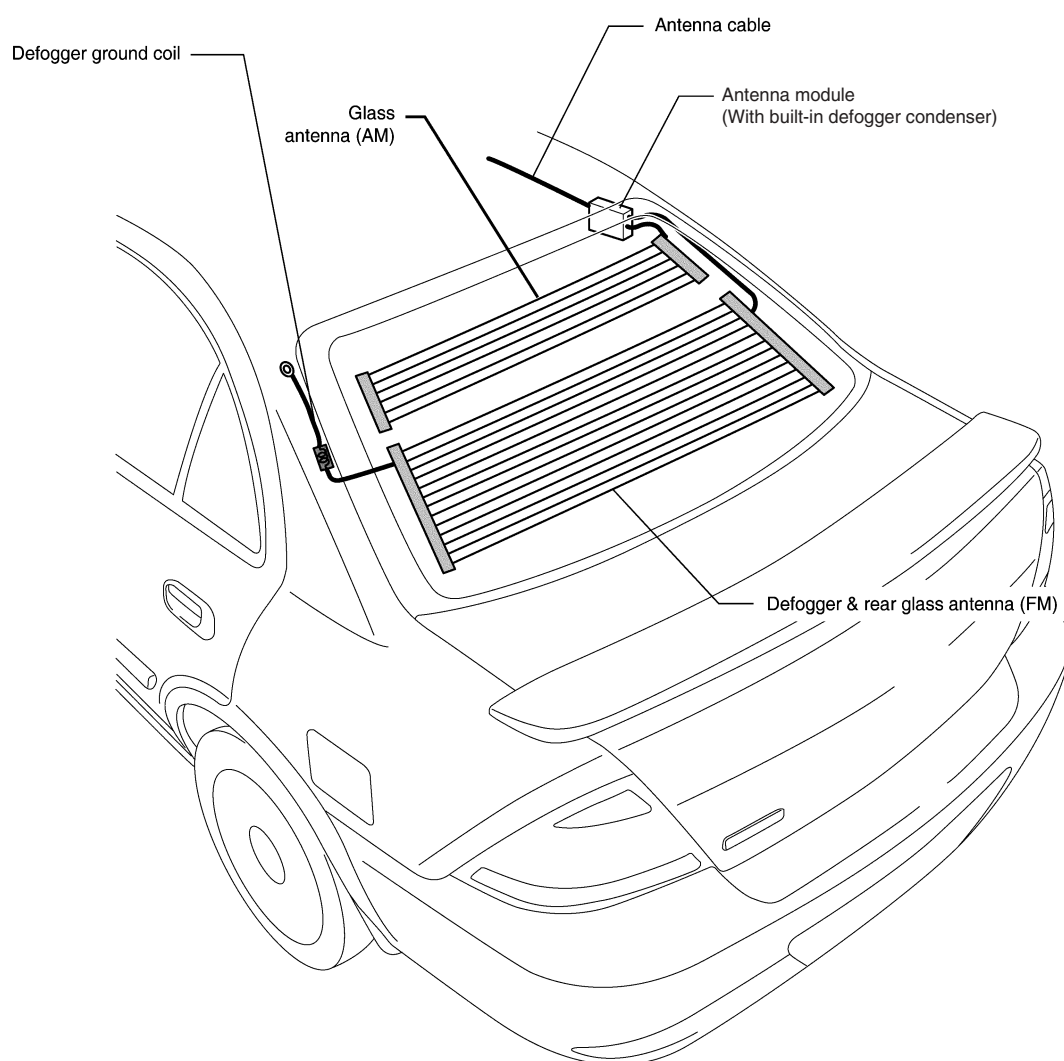

SRIZ003_D1

HARNESS DIAGRAM

OVERALL

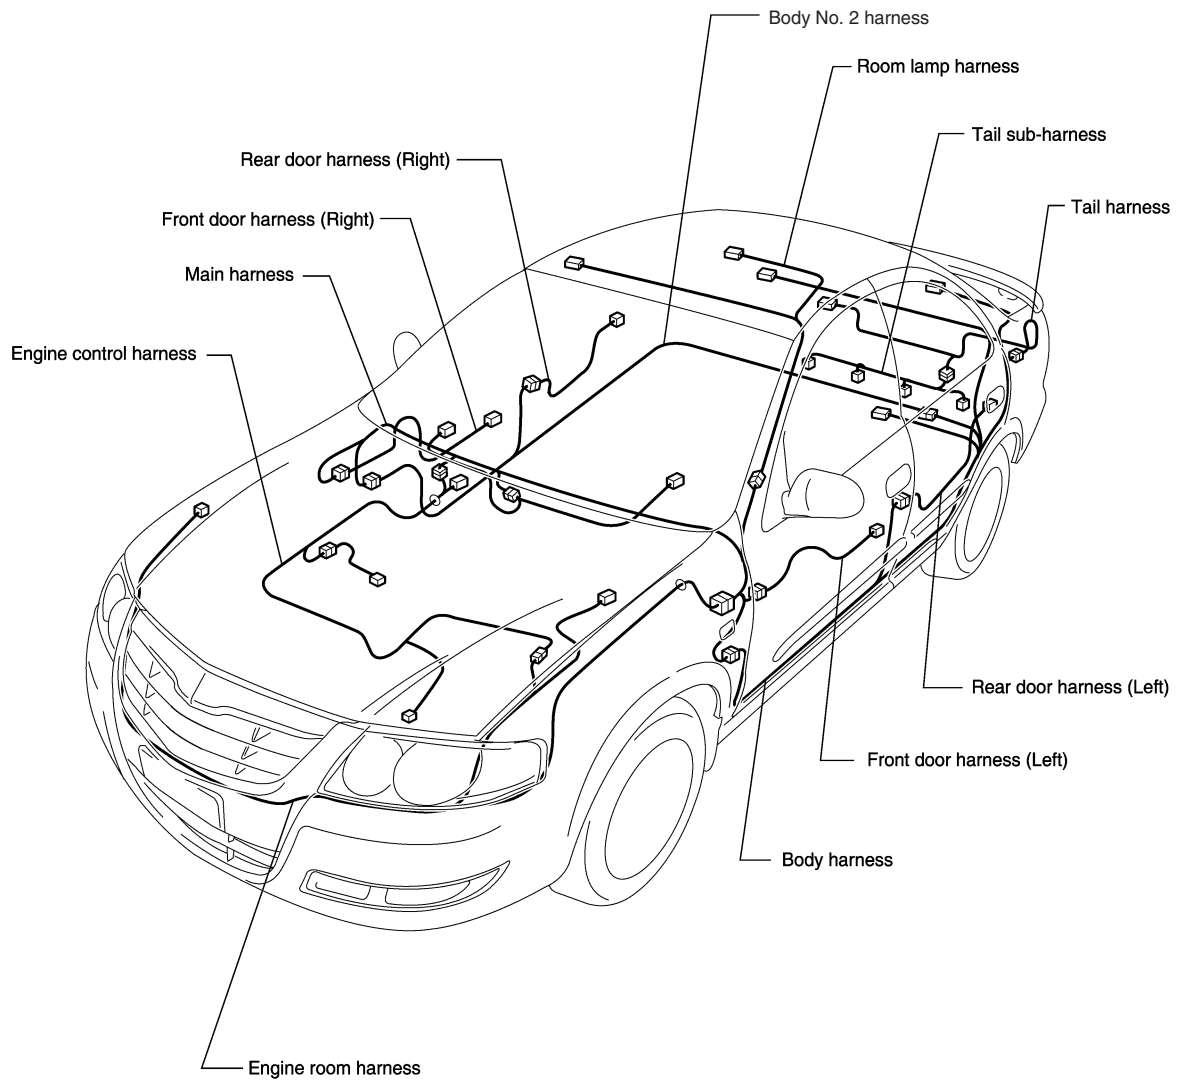


GI
EM
LC
EC
FE
RS
AC
AV
EL
WH
CL
MT
AT
FA
RA
BR
ST
BT

SRIZ004_D1

HARNESS DIAGRAM

How to Read Harness Layout

Example:

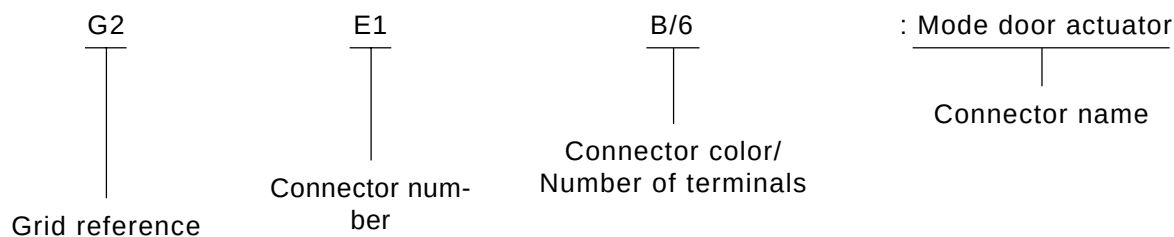

The following harness layouts use a map style grid to help locate connectors on the drawings.

Engine room harness (Engine Compartment)

Main harness

Engine control harness

Body harness, Body No.2 harness, Tail harness

Door harness

TO USE THE GRID REFERENCE

Find the desired connector number on the connector list.

Find the grid reference.

On the drawing, find the crossing of the grid reference letter column and number row.

Find the connector number in the crossing zone.

Follow the line to the connector.

CONNECTOR SYMBOL

Main symbols of connector (in harness layout) are indicated in the below.


Connector type	Male	Female
Number of terminals: Less than 4		
Relay connector		
Number of terminals: 5 - 8		
Number of terminals: More than 9		
Ground terminal or others		

WIRE

■ : Indicates the thickness of the wire is over 5 mm

— : Indicates the thickness of the wire is below 5 mm

Engine Room Harness

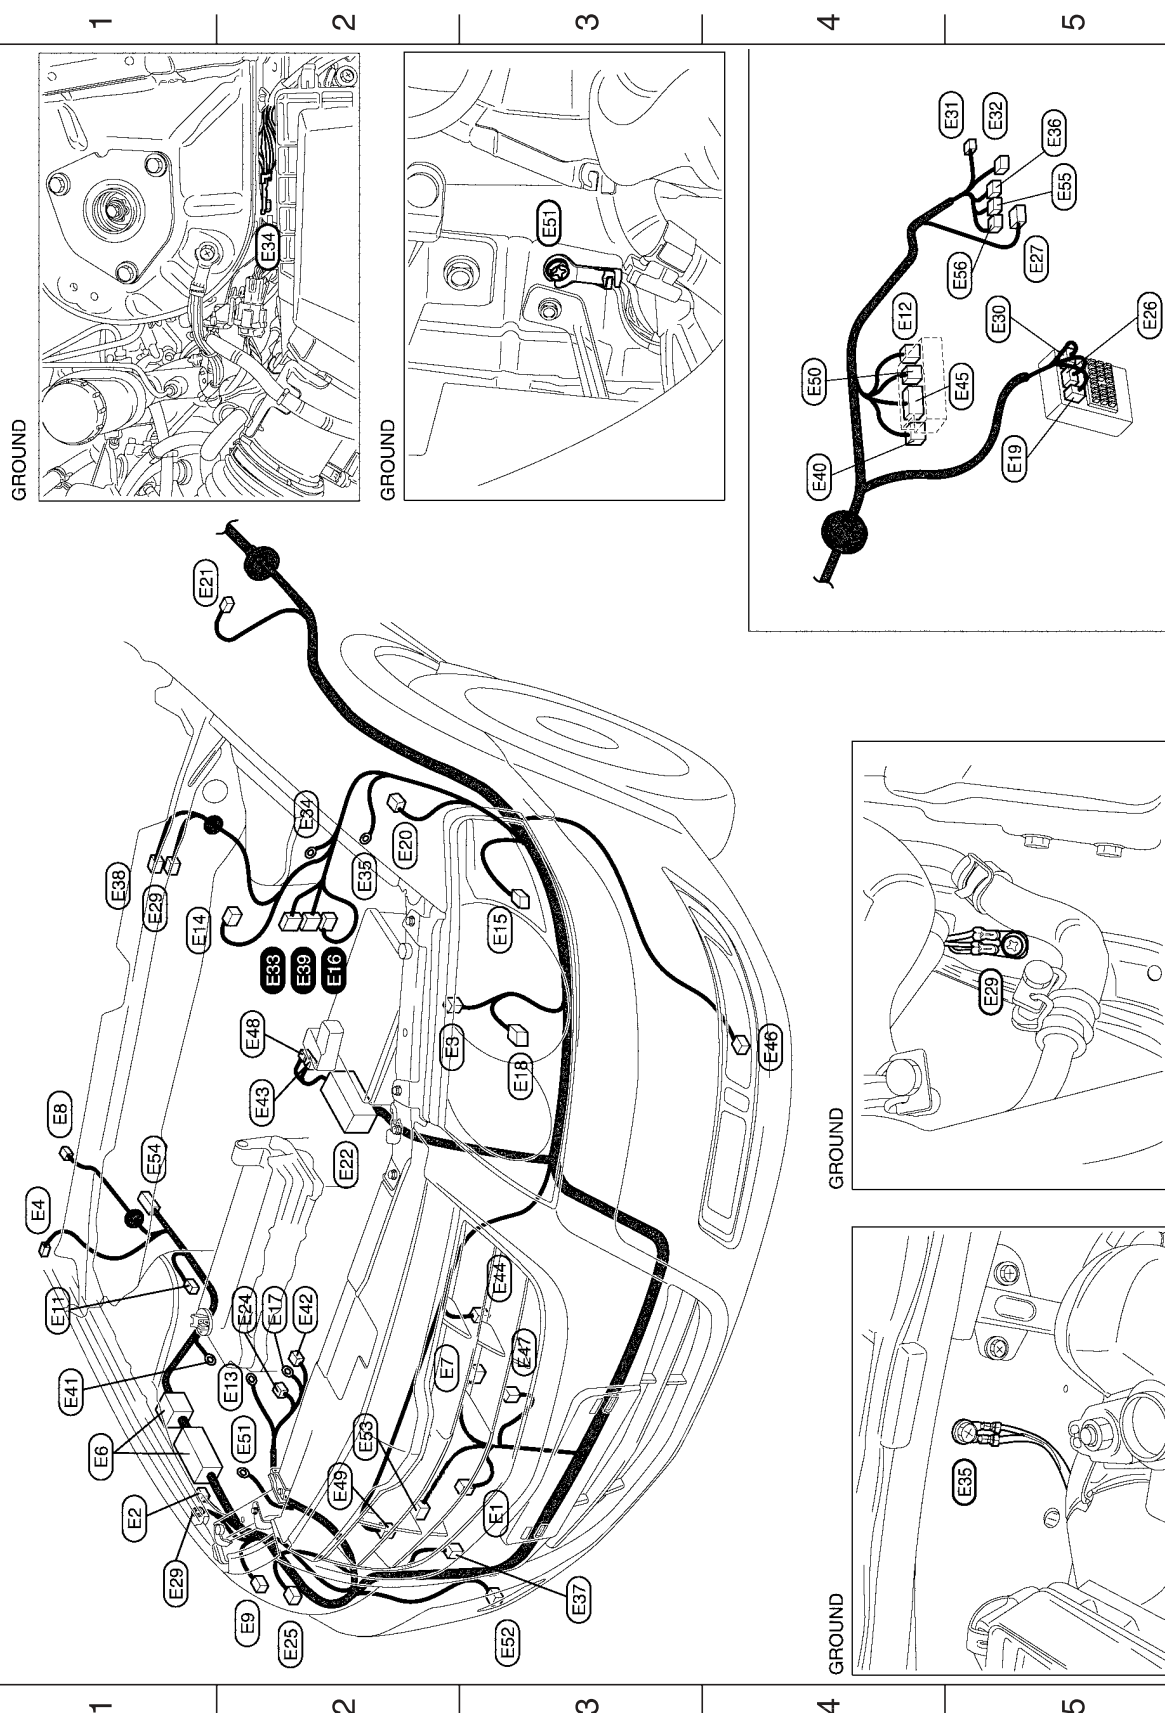

SRIZ006_D1

HARNESS LAYOUT

Engine Room Harness (Continued)

HARNESS LAYOUT

Main Harness

 


HARNESS LAYOUT

Main Harness (Continued)

HARNESS LAYOUT


Engine Control Harness (QG15)



HARNESS LAYOUT

Engine Control Harness (QG15) (Continued)

 Engine Control Harness (QG16)




HARNESS LAYOUT

Engine Control Harness (QG16) (Continued)

HARNESS LAYOUT

 Body, Body No. 2, Tail and Room Lamp Harness



HARNESS LAYOUT


Body, Body No. 2, Tail and Room Lamp Harness (Continued)

HARNESS LAYOUT

Door Harness


FRONT DOOR HARNESS (DRIVER)

- (D1) W/16 : CONNECTED WITH (M19)
- (D2) W/12 : CONNECTED WITH (M12)
- (D3) B/8 : DOOR MIRROR LEFT
- (D4) BR/2 : DOOR SPEAKER LEFT
- (D5) W/6 : POWER WINDOW MOTOR (DRIVER)
- (D6) W/16 : POWER WINDOW MAIN SWITCH
- (D7) GY/4 : DOOR LOCK ACTUATOR (DRIVER)

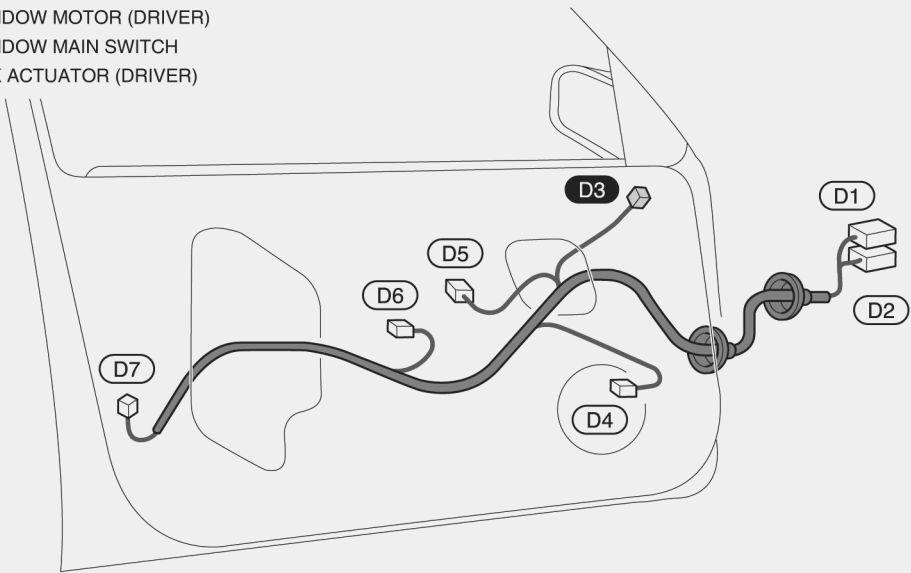

FRONT DOOR HARNESS (PASSENGER)

- (D21) W/18 : CONNECTED WITH (M83)
- (D22) B/8 : DOOR MIRROR RIGHT
- (D23) BR/2 : DOOR SPEAKER RIGHT
- (D24) B/2 : POWER WINDOW MOTOR (PASSENGER)
- (D25) W/8 : POWER WINDOW SWITCH (PASSENGER)
- (D26) GY/4 : DOOR LOCK ACTUATOR (PASSENGER)

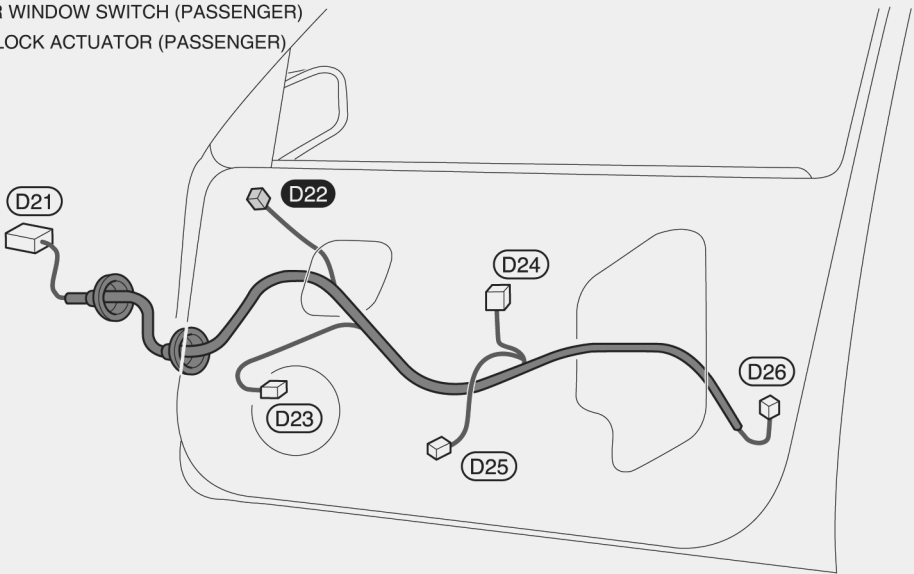


GI
EM
LC
EC
FE
RS
AC
AV
EL
WH
CL
MT
AT
FA
RA
BR
ST
BT

HARNESS LAYOUT

Door Harness


Rear door (LH)

- (D41) W/10 : CONNECTED WITH (B20)
- (D42) W/8 : REAR POWER WINDOW SWITCH LEFT
- (D43) B/2 : REAR POWER WINDOW MOTOR LEFT
- (D44) GY/4 : REAR DOOR LOCK ACTUATOR LEFT

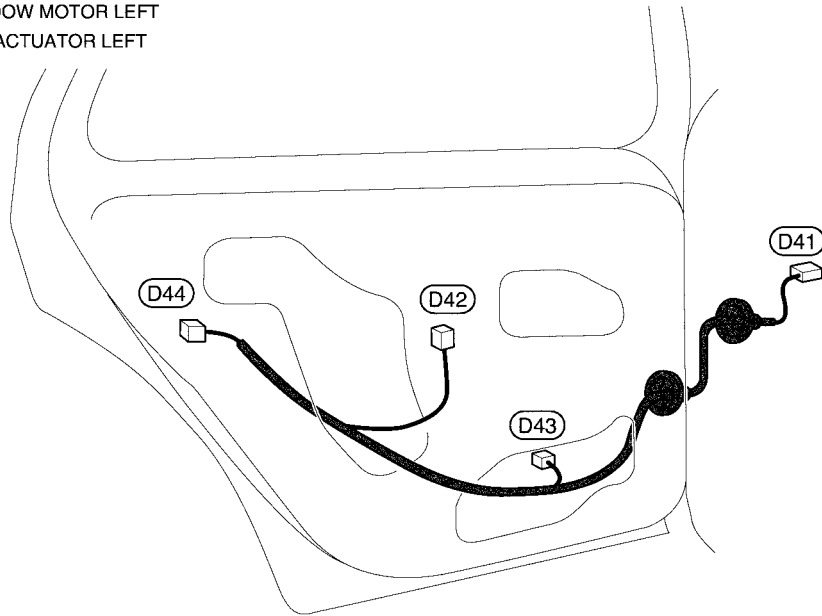

Rear door (RH)

- (D51) W/10 : CONNECTED WITH (B25)
- (D52) W/8 : REAR POWER WINDOW SWITCH RIGHT
- (D53) B/2 : REAR POWER WINDOW MOTOR RIGHT
- (D54) GY/4 : REAR DOOR LOCK ACTUATOR RIGHT






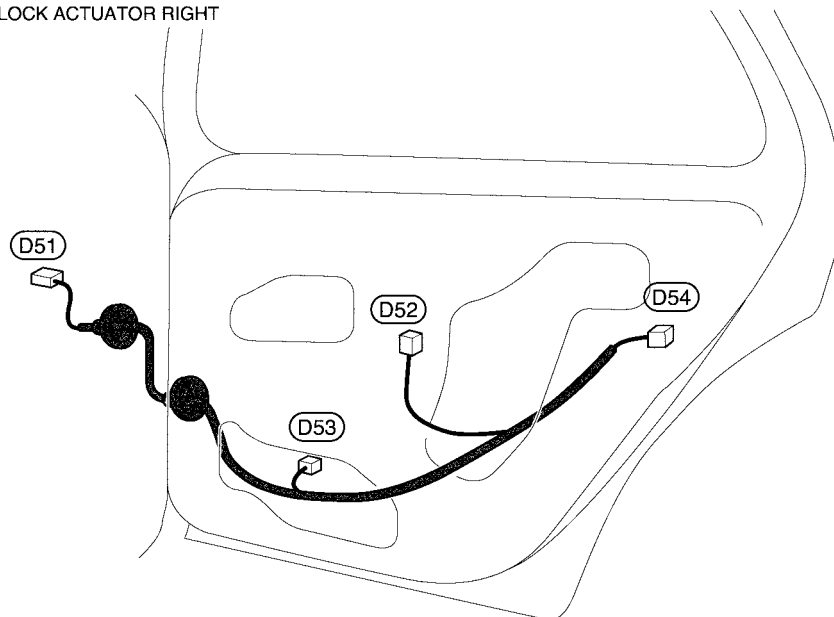


FUSE BLOCK-JUNCTION BLOCK (J/B)

Fuse Block


BATTERY			ACCESSORY	IGNITION 1			IGNITION 1	
10A	15A	10A	10A	10A	10A	10A	10A	10A
INTERIOR LAMP (18)	DOOR LOCK (19)	STOP LAMP (20)	AUDIO (21)	ENGINE CONTROL (22)	AIRBAG (23)	A/C (24)	A/T CONTROL (25)	IGNITION POWER (26)
BATTERY	BATTERY		IGNITION 2		IGNITION 1	ACCESSORY		
10A	20A		10A		10A	10A	15A	10A
BATTERY POWER (10)	REAR DEFOGGER (11)		HEAD LAMP (13)		FUEL INJECTION (14)	METER CLUSTER & CLOCK (15)	CIGARETTE LIGHTER (16)	(OUTSIDE REARVIEW MIRROR) (17)
IGNITION 2		START	IGNITION 1					
15A	15A		10A	10A	10A	20A	10A	15A
BLOWER 1 (1)	BLOWER 2 (2)		TURN SIGNAL LAMP (4)	METER CLUSTER & REVERSE LAMP (5)	(ABS) (6)	WIPER (7)	(HEATER SEAT) (8)	FUEL PUMP (9)

      Connector



FUSE & FUSIBLE LINK BOX

Fuse & Fusible Link Box

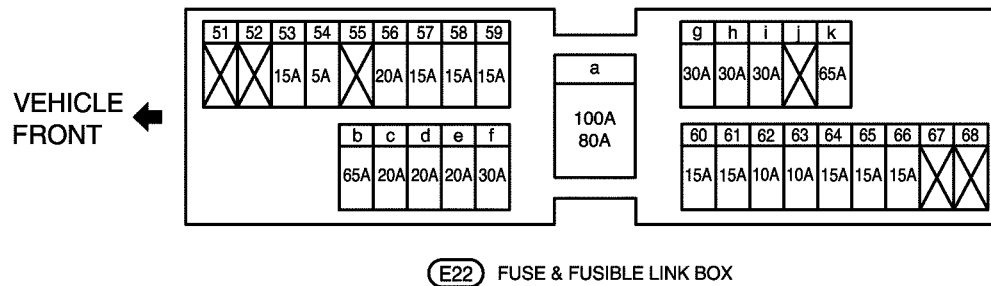


51 : -
 52 : -
 53 : WIPER HEATED - WIRE
 54 : ABS SOLENOID 2
 55 : -
 56 : METER CLUSTER
 57 : FOG LAMP
 58 : HEADLAMP (HIGH)
 59 : HEADLAMP (LOW)
 60 : IGNITION COIL #1
 61 : AUDIO
 62 : ENGINE CONTROL
 63 : TAIL LAMP
 64 : ELECTRICALLY
 CONTROLLED THROTTLE
 65 : HORN
 66 : POWER SOCKET
 67 : -
 68 : -

a : ALTERNATOR POWER
 b : BATTERY & IGNITION 1
 c : ABS SOLENOID 1
 d : ABS MOTOR 1
 e : ABS MOTOR 2
 f : IGNITION SWITCH
 g : RADIATOR FAN MOTOR 1
 h : RADIATOR FAN MOTOR 2
 i : POWER WINDOW
 j : -
 k : BATTERY & IGNITION 2


CONTROL UNIT, JOINT CONNECTOR

Terminal Arrangement


ENGINE CONTROL UNIT : QG 15

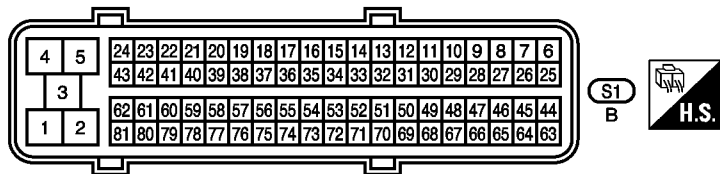


ENGINE CONTROL UNIT : QG 16

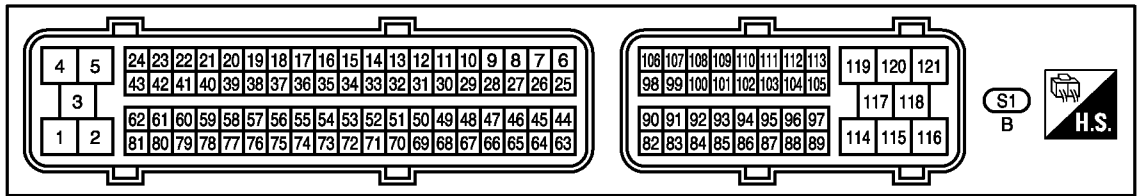


A/T CONTROL UNIT

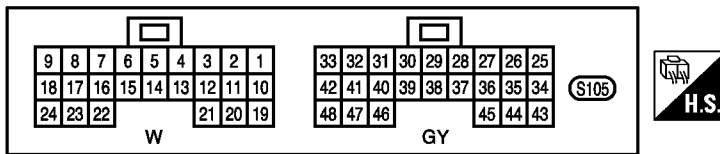


METER

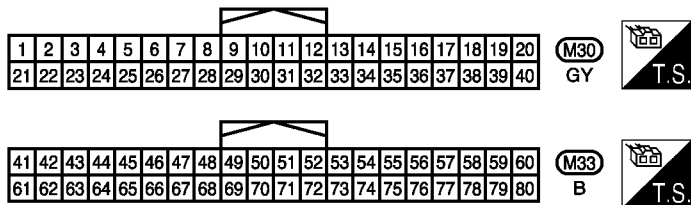

AUTO A/C CONTROLLER

 


AUTO A/C CONTROLLER

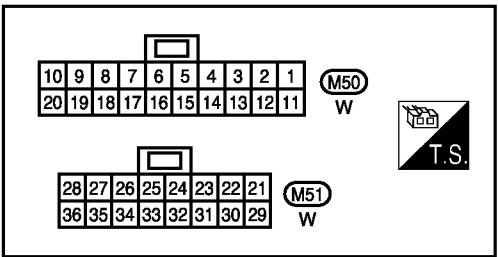


CONTROL UNIT, JOINT CONNECTOR

Terminal Arrangement

 
ABS CONTROL UNIT



AIRBAG CONTROL UNIT

 

AUDIO

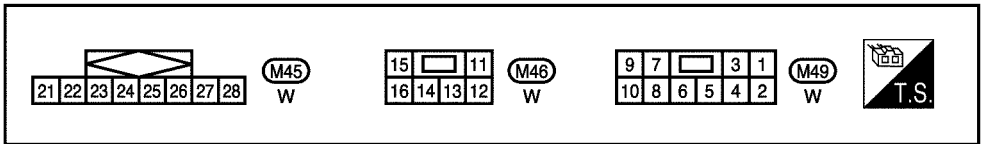

JOINT CONNECTOR

