


Lincoln Continental mk9 1999 – 2002 fuse box diagram

Passenger compartment fuse panel

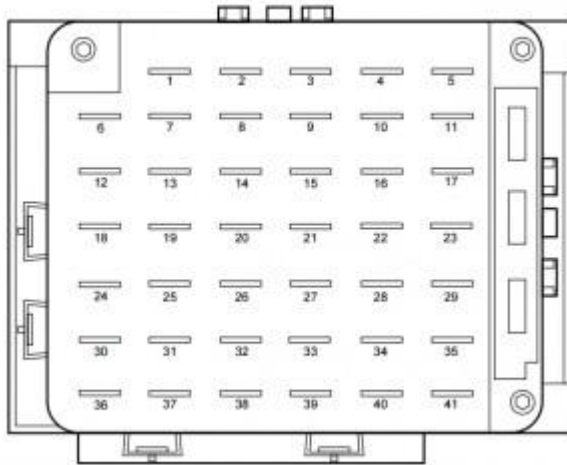

Lincoln Continental mk9 (1999 – 2002) – fuse box – instrument panel


Fuse	Ampere rating [A]	Description
1	5	Lighting Control Module: Anti-Theft Indicator Lamp, PWM Dimming Output, Illumination Lamps for Microphone, RR and LR Door Ashtrays, Heated Seat Switches, Rear Defrost Control Switch, EATC Control Panel, Message Center Switches, Speed Control Switches, Cigar Lighter, Console and Ashtray
2	10	Data Link Connector (DLC), Powertrain Control Module (PCM)
3	15	Multi-Function Switch, Cornering Lamps, High Beam and Turn Signal Input to LCM
4	10	Power Door Locks and Power Windows Switch Backlights, Radio, Mobile Telephone Transceiver, Lighting Control Module, (RUN/ACC Sense), Electronic Day/Night Mirror
5	10	Virtual Image Instrument Cluster, Lighting Control Module (LCM RUN/START Sense), Autolamp Light Sensor

6	10	Virtual Image Instrument Cluster, RF Park/Turn Lamp
7	20	Power Point
8	20	Fuel Filler Door Release Switch, Trunk Lid Relay
9	10	Air Bag Diagnostic Monitor, EATC Module, Blower Motor Relay
10	30	Windshield Wiper Motor, Windshield Wiper Module
11	10	Ignition Coils, Radio Interference Capacitor, PCM Power Relay, Passive Anti-Theft System (PATS) Transceiver
12	10	Lighting Control Module
13	15	Lighting Control Module (LCM): RF Turn Lamp, Right Turn Indicator (VIC), RR Side Marker Lamps, Tail Lamps, License Lamps, LR Stop/Turn Lamps, Clock Illumination
14	20	Cigar Lighter
15	10	ABS Evac and Fill Connector
16	30	Moonroof Switch
17	—	Not Used
18	10	Lighting Control Module
19	10	Lighting Control Module (LCM): Left Headlamp, DRL

20	15	Multi-Function Switch: Flash to Pass, and Hazard Warning Input to LCM
21	—	Not Used
22	—	Not Used
23	10	Digital Transmission Range Sensor
24	10	Virtual Image Cluster-LF Turn Indicator, LF Turn Signal
25	10	Lighting Control Module (LCM): Right Headlamp
26	10	Virtual Image Instrument Cluster, EATC Module
27	—	Not Used
28	10	Shift Lock Actuator, Vehicle Dynamic Module, Virtual Image Instrument Cluster, Rear Window Defrost, Heated Seat Switch Assembly, Low Tire Pressure Module
29	10	Radio
30	10	Heated Mirrors
31	15	Lighting Control Module (LCM): FCU, Electronic Day/Night Mirror, RH and LH Courtesy Lamp, Door Courtesy Lamps, RH and LH Map Lamps, RR and LR Reading Lamps, RH and LH Visor Lamps, Storage Bin Lamps, Trunk Lid Lamp, Glove Box Lamp, Light Sensor Amplifier
32	15	Speed Control DEAC. Switch, Brake On/Off (BOO) Switch
33	—	Not used

34	15	Console Shift Illumination, A/C Clutch Cycling Pressure Switch, A/C Clutch Relay (DTR) Sensor, Intake Manifold Runner Control, Backup Lamps
35	—	Not used
36	—	Not used
37	30	Subwoofer Amplifier, Radio
38	10	Analog Clock, CD Player, Mobile Telephone Transceiver, RESCU
39	10	Power Door Locks, Power Seats, Power Mirrors, Keyless Entry, LF Seat Module, LF Door Module
40	10	Cornering Lamps
41	20	Door Locks

Power distribution box

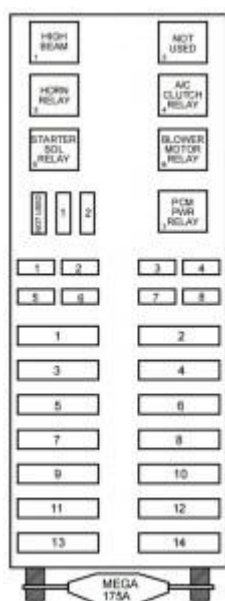

Lincoln Continental mk9 (1999 – 2002) – fuse box – power distribution box

Fuse	Ampere rating [A]	Description
1	—	A/C Diode
2	—	PCM Diode
1	30*	PCM
2	20*	ALT SENSE
3	30*	Right Rear Passenger Window
4	30*	Air Suspension
5	—	Not used
6	20*	Horns
7	15*	High Beam
8	30*	Right Front Passenger Window
1	30**	Driver's Seat Module
2	30**	Passenger's Seat Module
3	40**	Ignition Switch
4	40**	Ignition Switch

5	40**	Driver Window
6	30**	Low Speed Cooling Fan
7	30**	Powertrain Control Module
8	40**	Rear Window Defrost Control
9	60**	I/P Fuse Panel
10	60**	Lighting Control Module
11	60**	Compressor Relay
12	60**	Anti-Lock Brake Control Module
13	40**	Blower Motor
14	60**	High Speed Cooling Fan
—	175	Generator/Voltage Regulator