


Toyota Hilux (1993) fuse box diagram

Year of production: 1993

Engine Compartment

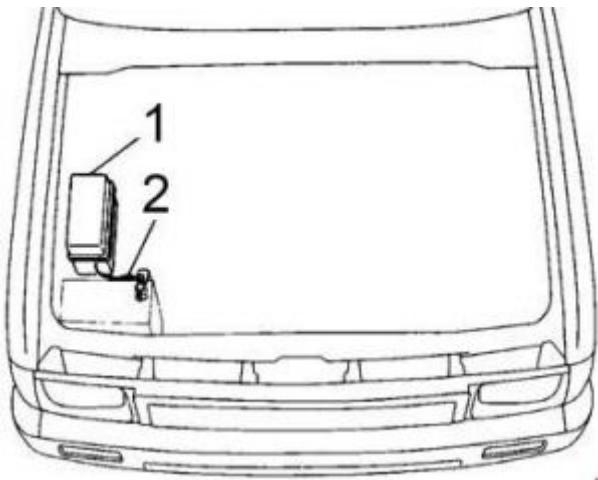


Toyota Hilux – fuse box diagram – engine

compartment

Fuse Description	
1	Fuse Box
2	FL Main (Headlight Control Relay, "AM2", "GEN", "DOME", "HAZ-HORN" fuses)

Engine Compartment Fuse Box

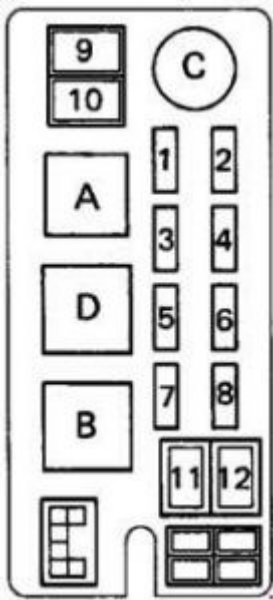


Toyota Hilux – fuse box diagram – engine compartment fuse box

Fuse	Ampere	Circuit
1 CHARGE	7,5	Charging system
DRL	7,5	Daytime Running Light
2 EFI	15	EFI main relay, ECM
3 HAZ-HORN	15	Turn signal flashers, horns

4	DOME	15	Radio, Antenna, Key unlock warning switch, Integration relay, Rome light switch,
5	HEAD (RH)	10	Right-hand headlight
	HEAD LO (RH)	10	Right-hand headlight (low beam)
6	HEAD (LH)	10	Left-hand headlight
	HEAD LO (LH)	10	Left-hand headlight (low beam)
7	HEAD HI (RH)	10	Right-hand headlight (high beam)
8	HEAD HI (LH)	10	Left-hand headlight (high beam)
9	GEN	80	Heater relay, Taillight control relay, "STOP", "AM1" fuses
10	—	—	—
11	AM1	40	Ignition switch, Starting system, "POWER", "REAR ANTI LOCK", "RADIO", "CIG", "WIPER", "TURN", "ECM-IG", "ENGINE" fuses
		60	Ignition switch, Starting system, "POWER", "REAR ANTI LOCK", "RADIO", "CIG", "WIPER", "TURN", "ECM-IG", "ENGINE" fuses
12	AM2	30	Ignition switch, "IGN", "MFI" fuses
RELAY			
A	Dimmer		
B	Headlight Control		
C	EFI		
D	Starter		

Passenger Compartment

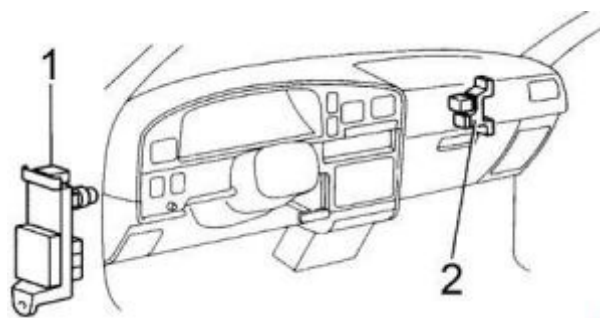


Toyota Hilux – fuse box diagram – passenger

compartment

Number	Description
1	Fuse Box
2	Additional Fuse Box


Passenger Compartment Fuse Box

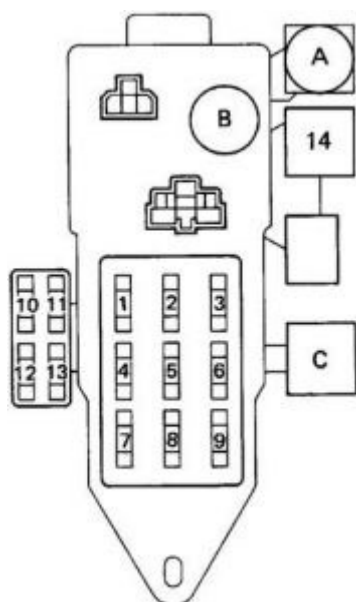

Toyota Hilux – fuse box diagram – passenger compartment fuse box

Fuse	Ampere	Circuit
1 ENGINE	10	Main relay, Cruise control ECU
2 IGN	7,5	EFI main relay, O/D indicator light, Pattern select switch, Oil temp. select switch
3 TAIL	15	Taillight, Integration relay, Light reminder relay, Daytime running light relay
4 WIPER	20	Wiper motor, Washer motor
5 GAUGE	10	Combination meter, Antenna, Cruise control ECU, Cruise control indicator light, Brake warning light, Parking brake warning switch, brake fluid level warning switch, Door lock control relay, Integration relay, Light reminder relay, Daytime running light relay
6 STOP	15	Stop light, Stop light switch, Cruise control ECU
7 RADIO	7,5	Radio, Mirror switch, Light reminder relay
8 CIG	15	Cigarette lighter, Integration relay
9 TURN	10	Turn signal light, Integration relay
10 REAR ANTI LOCK	15	Rear anti lock
11 —	—	—
12 ECM-IG	20	Electronically controlled automatic transmission system
13 —	—	—
14 POWER	30	Door lock control relay, Power window
RELAY		
A	Back Up or Daytime Running Light (DRL No.4)	
B	Taillight Control	
C	Horn	

Additional Fuse Box

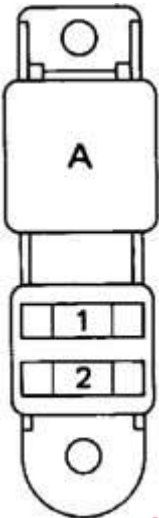

Toyota Hilux – fuse box diagram – additional fuse box

Number	Fuse	Ampere rating [A]	Description
1	A/C	10	Air conditioning system
2	Heater	30	Air conditioning system (Heater)
Relay			
A	Heater		

WARNING: Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market.