




I GROUND POINT

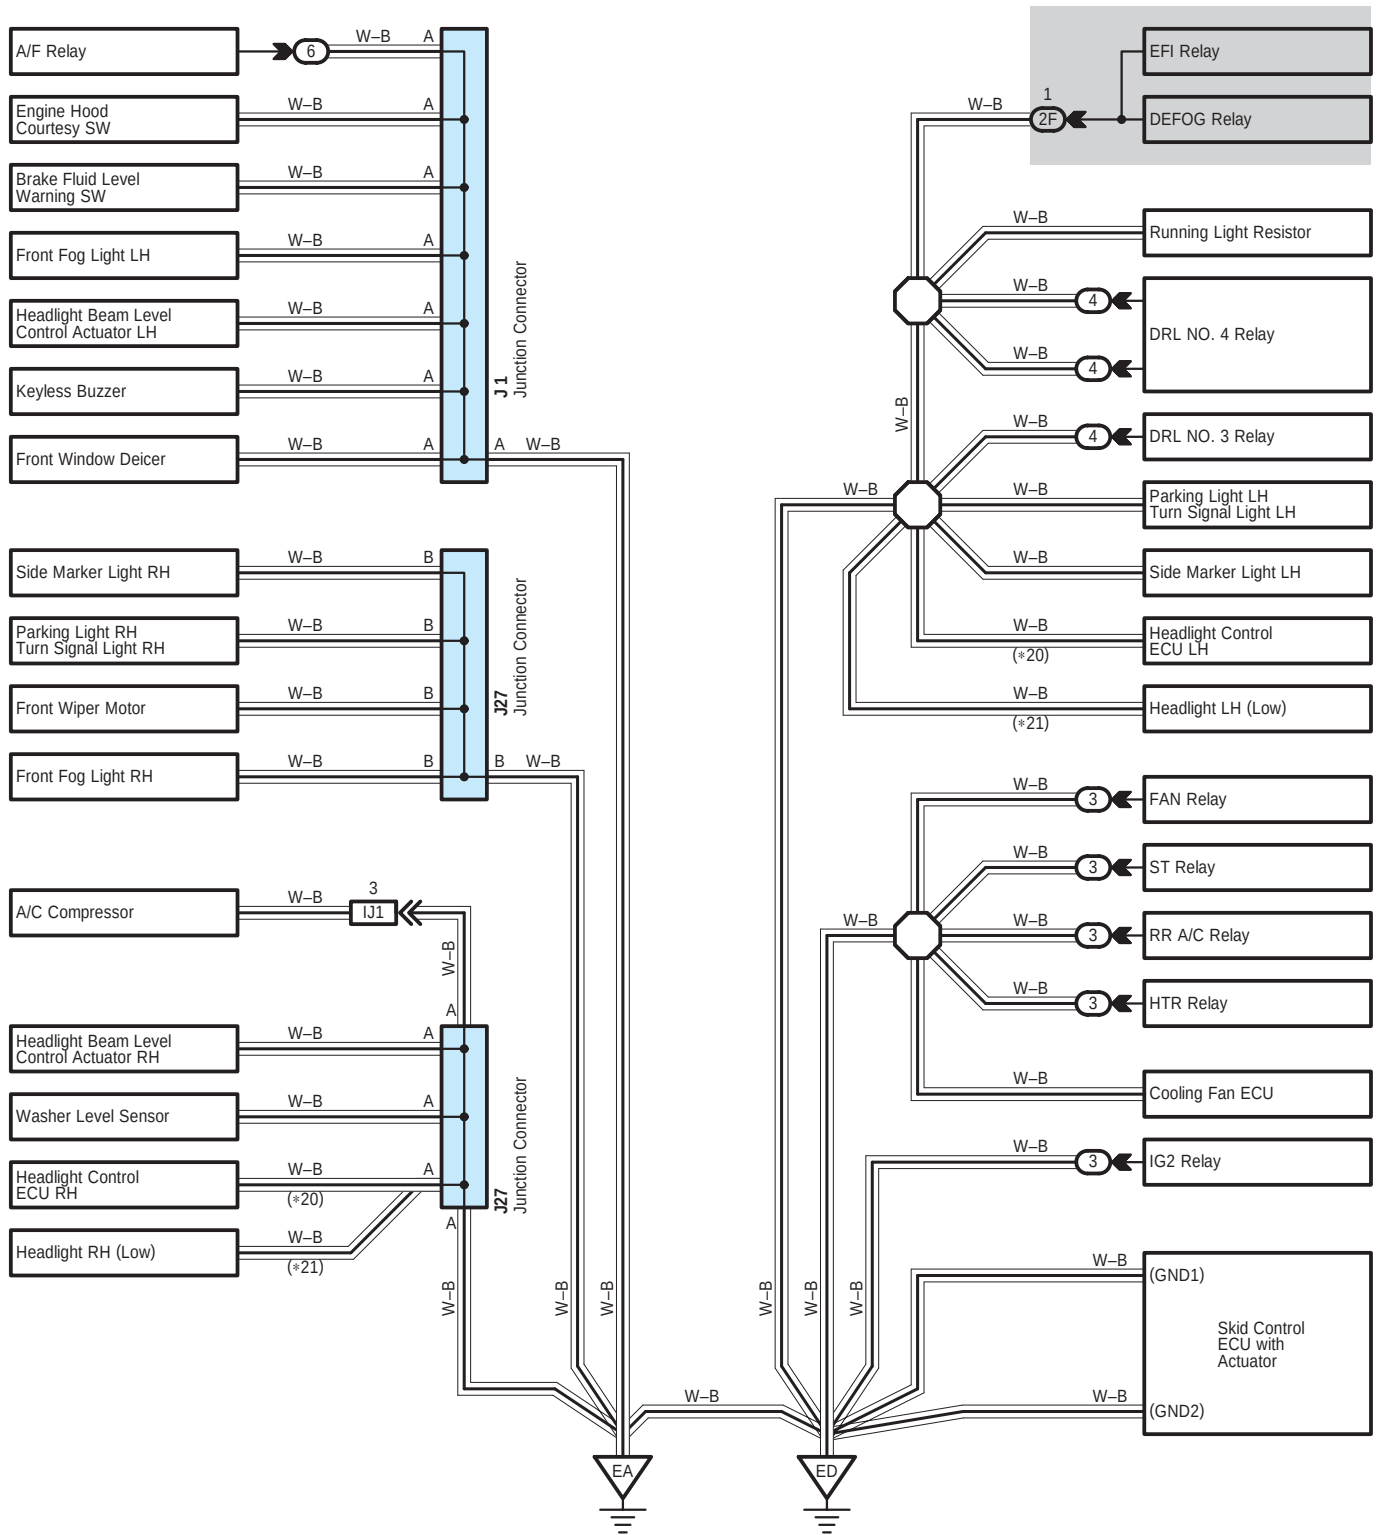


- * 1 : w/ Navigation System
- * 2 : w/o Navigation System
- * 3 : w/ Rear Seat Entertainment System
- * 4 : 6 Speaker w/o Rear Seat Entertainment System
- * 5 : Except *4
- * 6 : Automatic A/C
- * 7 : Manual A/C
- *20 : HID Type
- *21 : Except HID Type

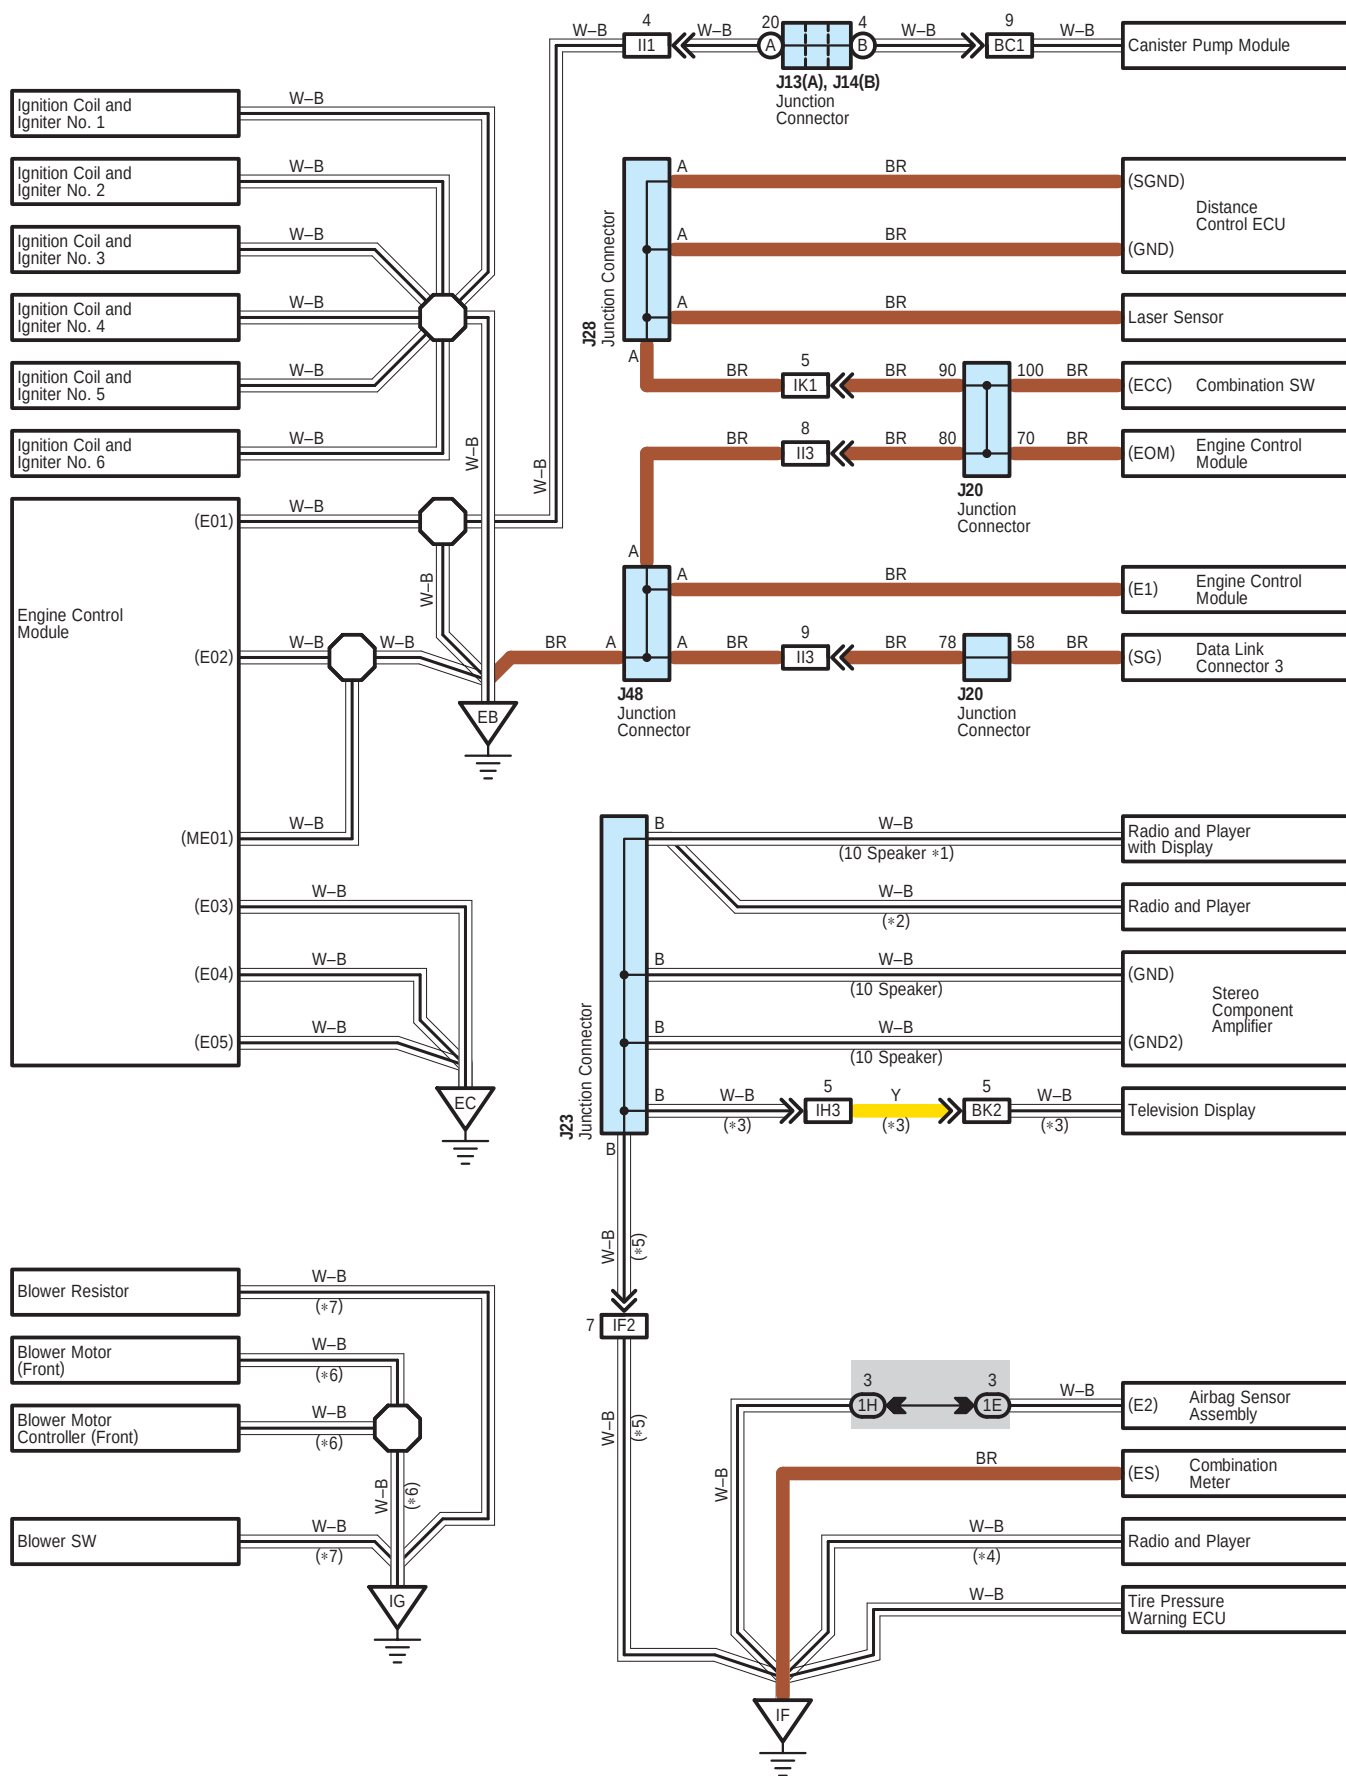


I GROUND POINT

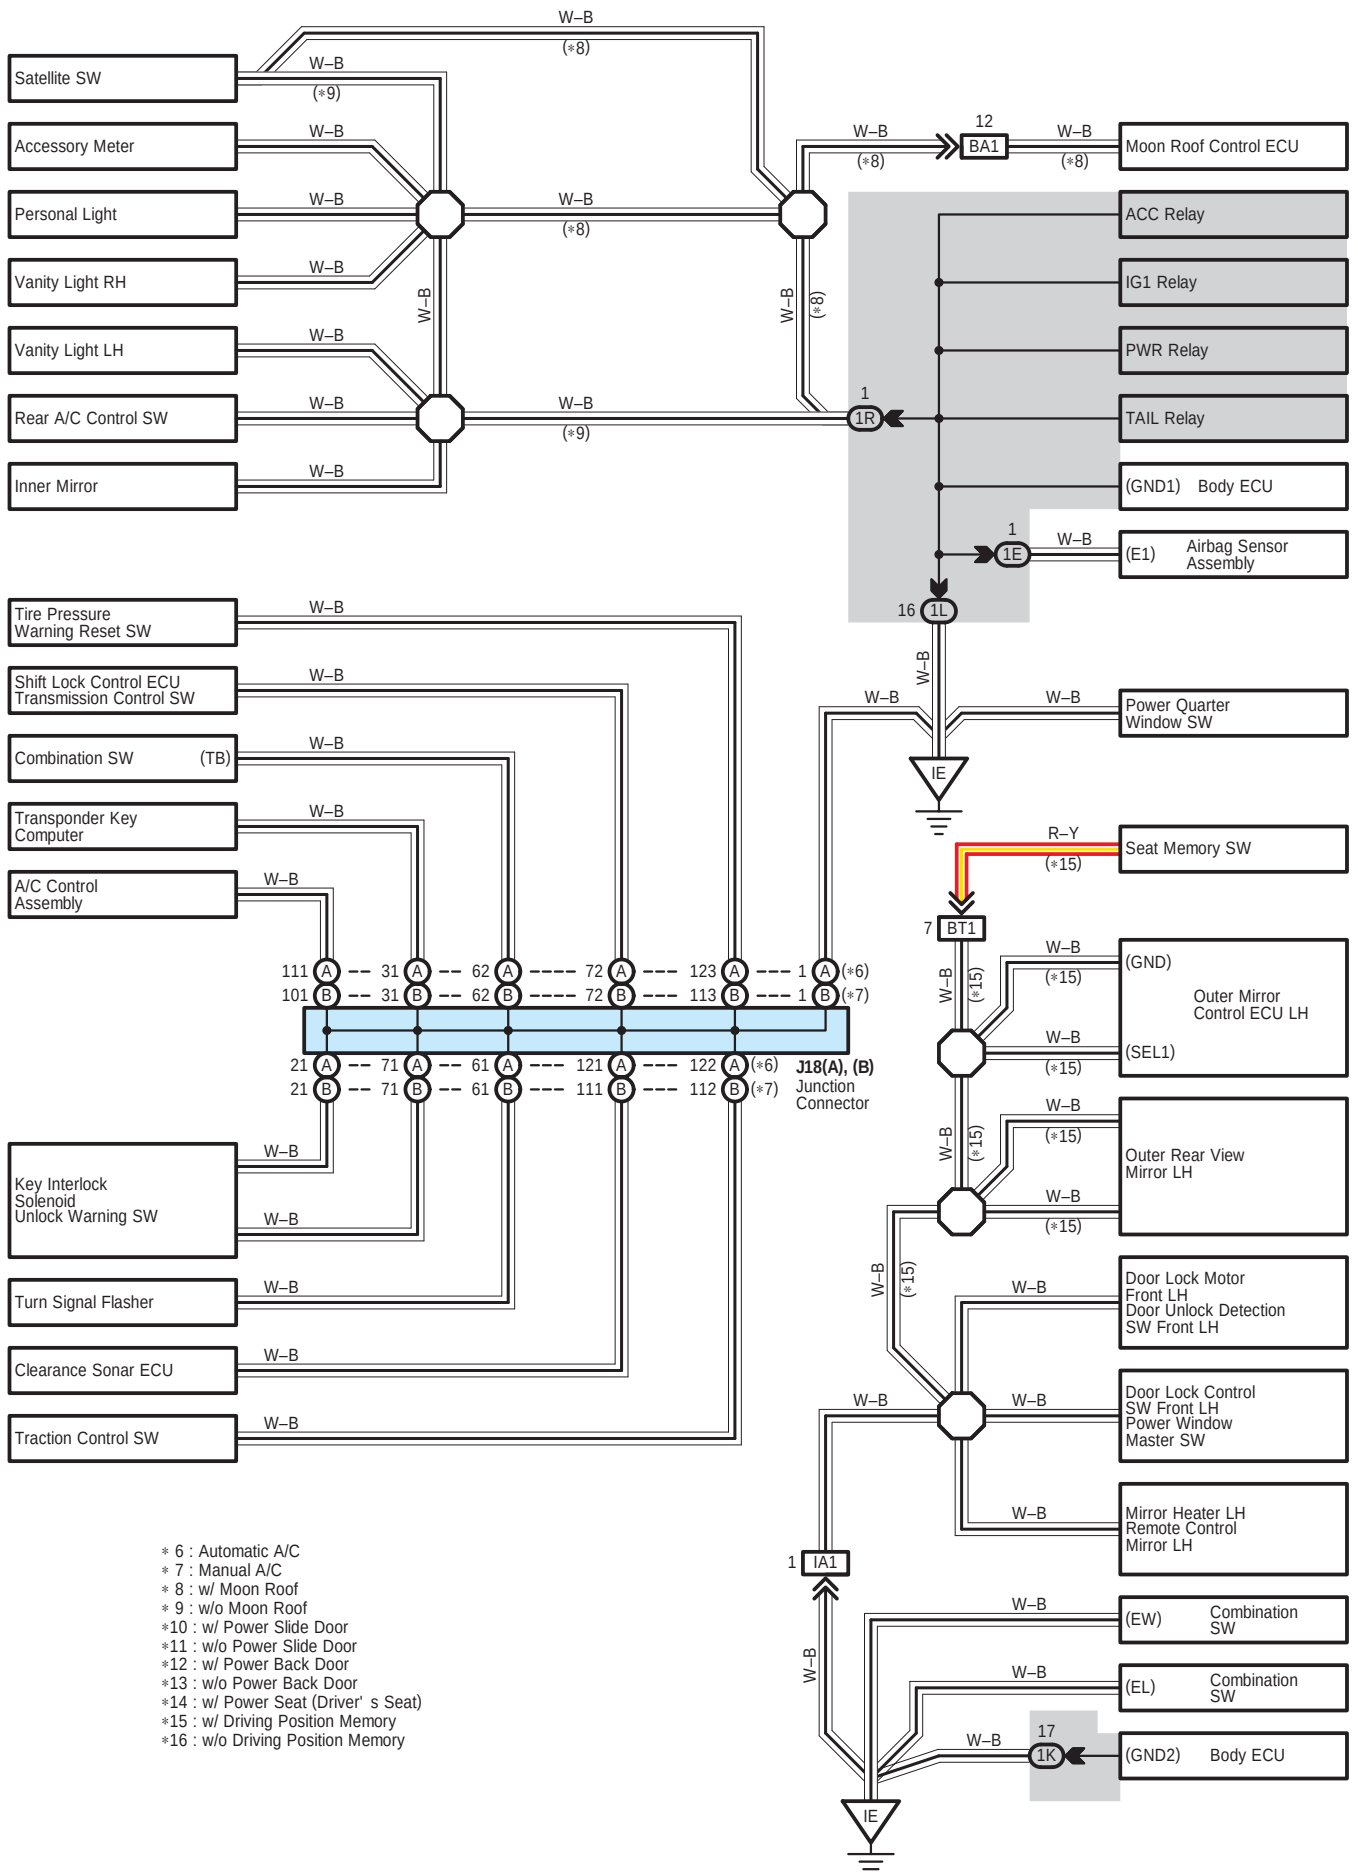


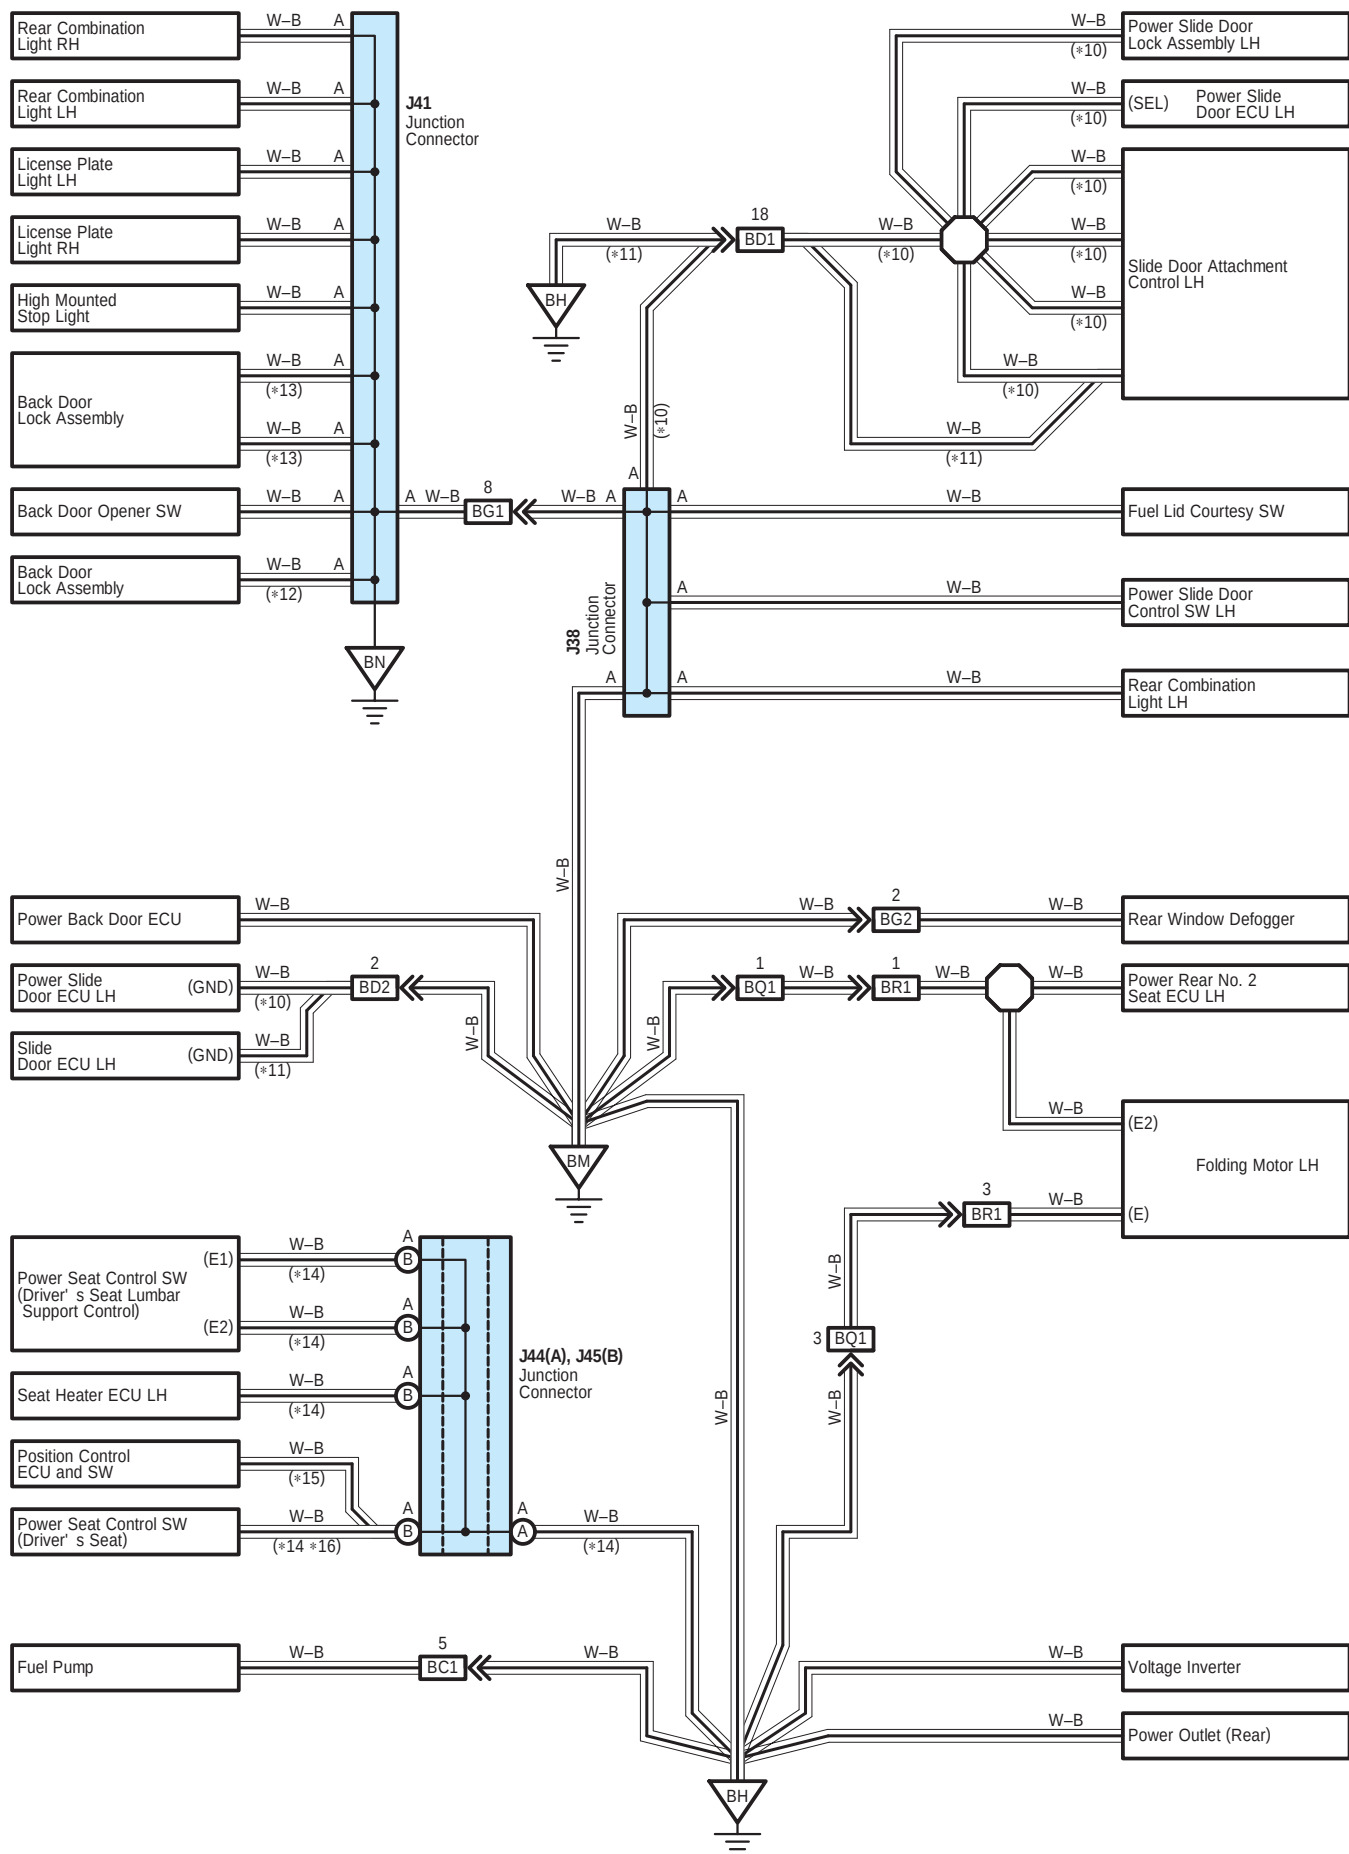

I GROUND POINT

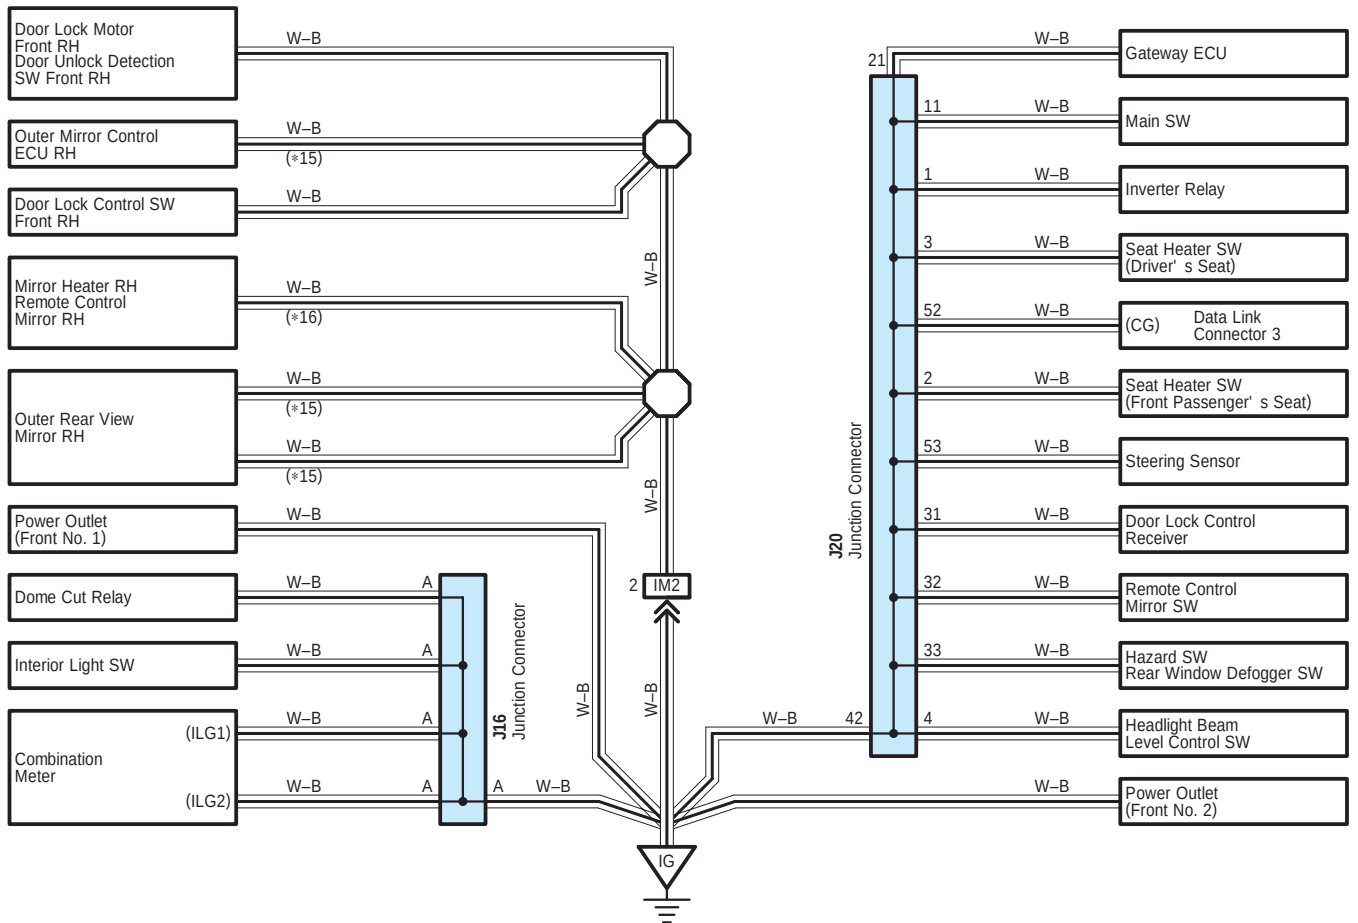

- *10 : w/ Power Slide Door
- *11 : w/o Power Slide Door
- *15 : w/ Driving Position Memory
- *16 : w/o Driving Position Memory
- *17 : w/o Power Seat
- *18 : w/ Power Seat (Front Passenger' s Seat)
- *19 : w/o Power Rear No. 2 Seat with Stowing Function and w/o Power Slide Door

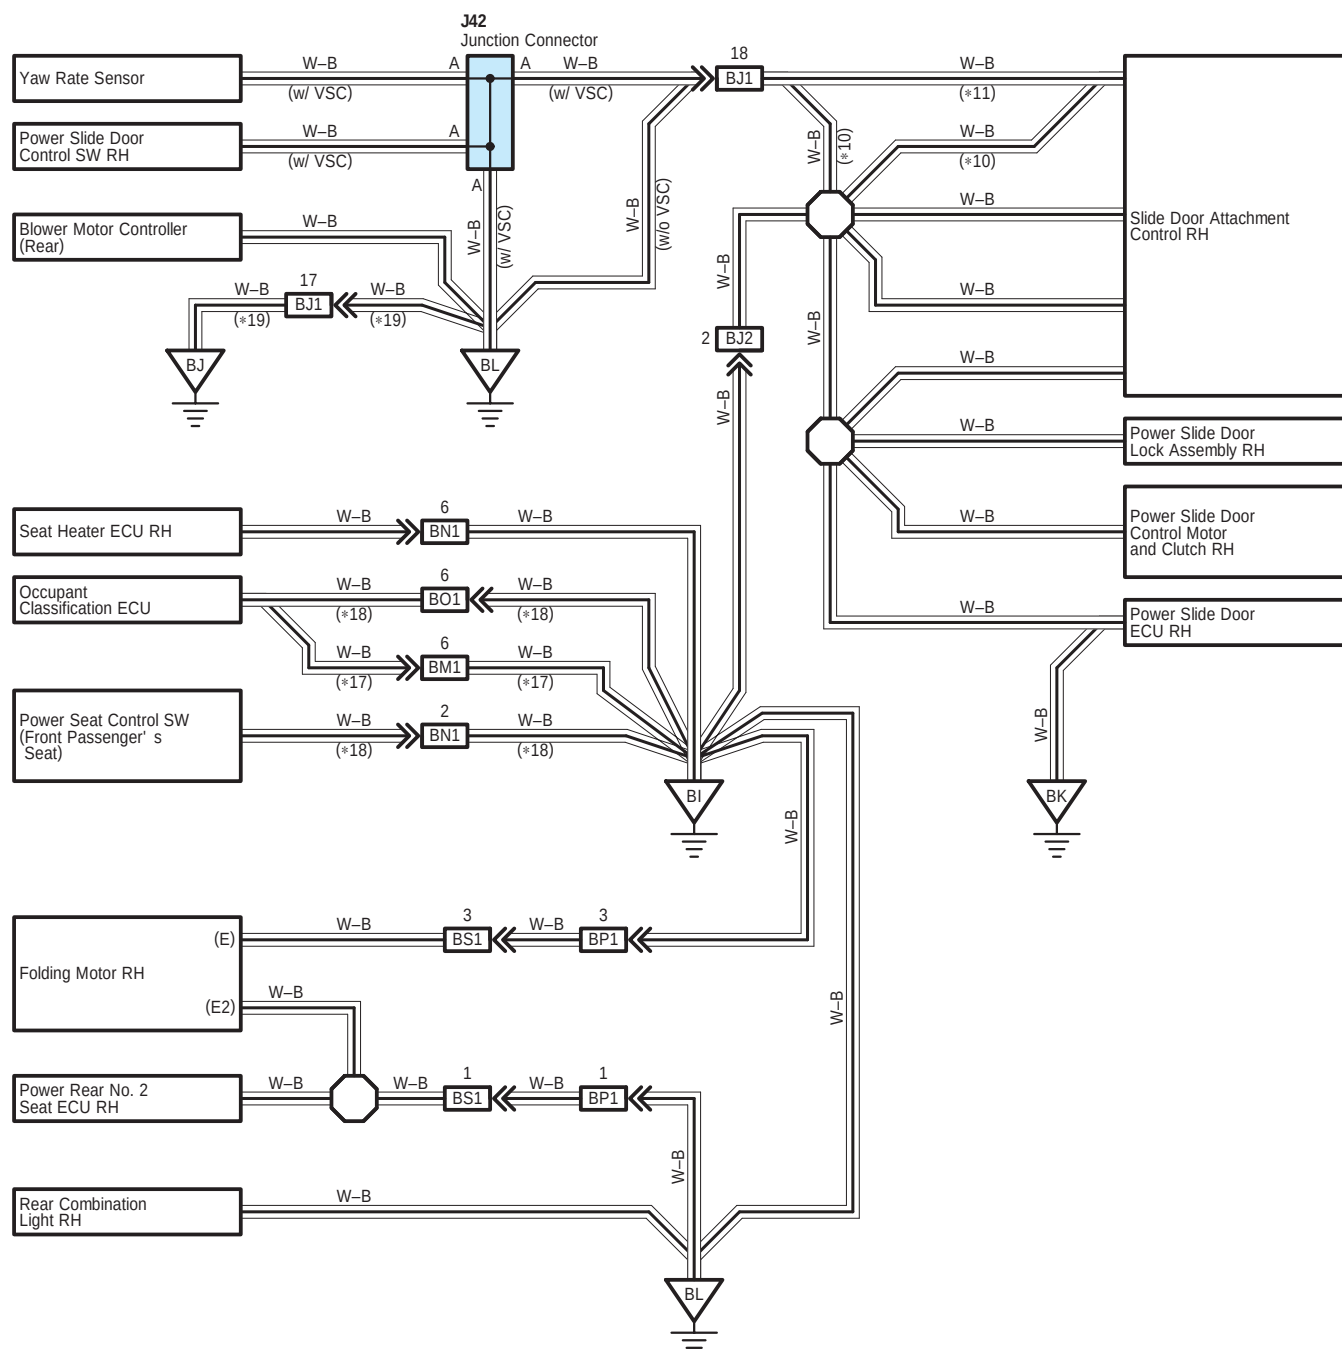

I GROUND POINT

: Parts Location

Code	See Page	Code	See Page	Code	See Page
J1	37	J20	40	J42	43
J13	A 40	J23	40	J44	A 46 (*1)
J14	B 40	J27	40	J45	B 46 (*1)
J16	40	J28	40	J48	40
J18	A 40	J38	43		
J18	B 40	J41	43		

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	26	R/B No.3 (Engine Compartment Left)
4	27	R/B No.4 (Engine Compartment Left)
6	28	R/B No.6 (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1H	30	
1K	31	
1L		
1R	31	Roof Wire and Driver Side J/B (Lower Finish Panel)
2F	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	52	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IF2	52	Instrument Panel Wire and Instrument Panel No.2 Wire (Instrument Panel Center)
IH3	52	Floor No.2 Wire and Instrument Panel No.2 Wire (Instrument Panel Brace RH)
II1	53	Engine Wire and Instrument Panel Wire (Right Kick Panel)
II3		
IJ1	53	Engine Wire and Engine Room Main Wire (Right Kick Panel)
IK1	53	Engine Room Main Wire and Instrument Panel Wire (Right Kick Panel)
IM2	53	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
BA1	54	Roof No.3 Wire and Roof Wire (Front Side of the Roof)
BC1	54	Fuel Gauge Wire and Floor No.1 Wire (Near the Fuel Tank)
BD1	54	Rear Door No.2 Wire and Floor No.1 Wire (On the Left Rear Wheel House)
BD2		
BG1	55	Back Door No.1 Wire and Floor No.1 Wire (Left Rear Quarter Panel)
BG2		
BJ1	55	Rear Door No.1 Wire and Floor No.2 Wire (On the Right Rear Wheel House)
BJ2		
BK2	55	Roof No.2 Wire and Floor No.2 Wire (Right Rear Quarter Panel)
BM1	57 (*2)	Floor No.2 Wire and Seat No.1 Wire (Under the Front Passenger's Seat)
BN1	56 (*1)	
BO1	56 (*1)	Seat No.1 Wire and Floor No.2 Wire (Under the Front Passenger's Seat)
BP1	55	Floor No.4 Wire and Floor No.2 Wire (Right Rear Quarter Panel)
BQ1	55	Floor No.5 Wire and Floor No.1 Wire (Left Rear Quarter Panel)
BR1	55	Rear Seat LH Wire and Floor No.5 Wire (Under the Third Seat LH)
BS1	55	Rear Seat RH Wire and Floor No.4 Wire (Under the Third Seat RH)
BT1	55	Front Door LH Wire and Courtesy Lamp Switch Wire Assembly (Inside Front Door Trim LH)

* 1 : Front Seat w/ Power Seat * 2 : Front Seat w/o Power Seat * 3 : Rear No.2 Seat



: Ground Points

Code	See Page	Ground Points Location
EA	50	Front Side of the Right Fender Apron
EB	50	Rear Bank of Right Cylinder Head
EC	50	Rear Bank of Left Cylinder Head
ED	50	Front Side of the Left Fender Apron
IE	52	Left Kick Panel
IF	52	Instrument Panel Brace LH
IG	52	Right Kick Panel
BH	54	Under the Left Center Pillar
BI	54	Under the Right Center Pillar
BJ	54	Inside of the Slide Door RH
BK		
BL	54	Right Rear Quarter Panel
BM	54	Left Rear Quarter Panel
BN	54	Left Side of the Back Door