


Isuzu Ascender 2004 fuse box diagram

Fuses box

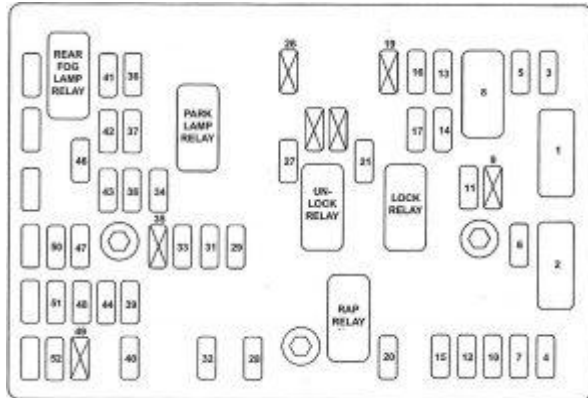

Isuzu Ascender – fuse box diagram

No	Fuse name	A	Description
1	RT DOORS Circuit Breaker	25	Front Passenger Door Module (FPDM), Right Rear Window Switch
2	LT DOORS Circuit Breaker	25	Driver Door Module (DDM), Left Rear Window Switch
3	LGM#2	30	Liftgate Module
4	TBC 3	10	Body Control Module (BCM)
5	RR FOG	10	Rear Fog Lamp
6	—	—	—
7	TBC 2	10	Body Control Module (BCM)


8	SEATS Circuit Breaker	30	Memory Seat Module-Driver, Memory Seat Module – Front Passenger
9	RR WIPER	15	Rear Wiper
10	DDM	10	Driver Door Module (DDM)
11	AMP	20	Audio Amplifier
12	PDM	10	Front Passenger Door Module (FPDM}
13	RR HVAC	30	Blower Motor-Auxiliary, Blower Motor Control Processor -Auxiliary
14	LR PARK	10	License Lamps and Left Tail Lamp
15	—	—	—
16	VEH CHMSL	10	Center High-Mounted Stop Lamp (CHMSL)
17	RR PARK	10	Right Tail Lamp Assembly
19	LGM/DSM	10	Lift Gate Module/ Drivers Door Module
20	VENT WDO	20	RAP (Retained Accessory Power) Relay
21	LOCKS	10	LOCK Relay and UNLOCK Relay
23	—	—	—

25	—	—	—
26	—	—	—
27	ON BATT/ONSTAR	10	Digital Video Disc {DVD} Player, Garage Door Opener, Voice Recorder
28	SUNROOF	20	Sunroof Module
29	RAIN	10	Digital Video Disc {DVD} Player, Outside Moisture Sensor
31	TBC ACC	3	Body Control Module {BCM}
32	TBC 5	10	Body Control Module {BCM}
33	FRT WPR	25	Windshield Wiper Motor
34	VEH STOP	15	Powertrain Control Module (PCM). Tail Lamps, Throttle Actuator Control (TAC) Module
35	—	—	—
36	HVAC B	10	HVAC Control Module~ HVAC Control Module-Auxiliary
37	F PARK	10	Front Park and Turn Signal Lamps, Marker Lamps, Turn Signal/Multifunction Switch

38	LT TURN	10	Driver Door Module (DDM), Instrument Panel Cluster, Marker Lamp-Left, Park/Turn Signal Lamp-LF, Tail Lamp Assembly-Left
39	HVAC I	10	Air Temperature Actuator-Left, Air Temperature Actuator-Right, Conso1e Mode Actuator, Defrost Actuator, HVAC Control Module, Mode Actuator, Recirculation Actuator, Traction Control Switch, Turn Signal/Multifunction Switch
40	TBC 4	10	Body Control Module (BCM)
41	RADIO	15	Radio
42	TR PARK	10	Trailer Connector
43	RT TURN	10	Front Passenger Door Module (FPDM), Instrument Panel Cluster, Marker Lamp-Right, Park/Turn Signal Lamp-RF, Tail Lamp Assembly-Right
44	HVAC	30	HVAC Control Module
46	AUX PWR 1	20	Auxiliary Power Outlet-Console, Auxiliary Power Outlet-Front
47	IGN 0	10	A/T Shift Lock Actuator, Automatic Transmission, Powertrain Control Module (PCM), and (export only with BAE) Theft Deterrent Control Module

48	4WD	15	Automatic Level Control (ALC) Compressor, Front Axle Actuator, Transfer Case Shift Control Switch
49	—	—	—
50	TBC IG	3	Body Control Module (BCM)
51	BRAKE	10	Electronic Brake Control Module (EBCM)
52	TBC RUN	3	Body Control Module (BCM)

Fuse box

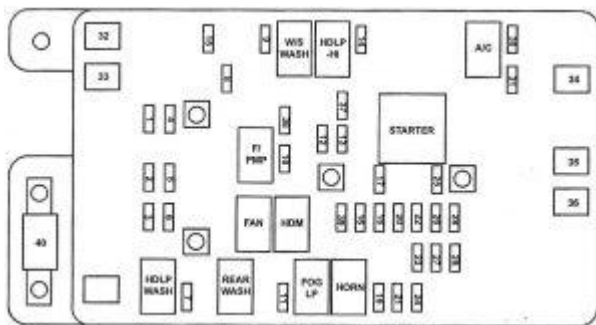

Isuzu Ascender – fuse box diagram

No	Fuse name	A	Description
1	RT DOORS Circuit Breaker	25	Front Passenger Door Module (FPDM), Right Rear Window Switch
2	LT DOORS Circuit Breaker	25	Driver Door Module (DDM), Left Rear Window Switch
3	LGM #2	30	Liftgate Module

4	TBC 3	10	Body Control Module (BCM)
5	RR FOG	10	Rear Fog Lamp
6	—	—	—
7	TBC 2	10	Body Control Module (BCM)
8	SEATS Circuit Breaker	30	Memory Seat Module-Driver, Memory Seat Module – Front Passenger
9	RR WIPER	15	Rear Wiper
10	DDM	10	Driver Door Module (DDM)
14	COILS	10	HDLP-HI Relay, High-beam Headlamps
15	—	—	—
16	TBC IGN 1	10	Body Control Module (BCM)
17	CRANK	10	Powertrain Control Module
18	SIR	10	Inflatable Restraint Sensing and Diagnostic Module (SDM)
19	ELEK BRK	30	Trailer Brake Wiring
20	FAN	10	FAN Relay (Fan Driver Module)

21	HORN	15	HORN Relay
22	IGN E	10	AIC Relay~ Headlamp Leveling Actuators, Headlamp Leveling Switch, IGN 1 Relay, Inside Rearview Mirror, Instrument Panel Cluster, Inverting Driver Module, Park/Neutral Position (PNP) Switch, Stop Lamp Switch, Traction Control Switch, Turn Signal/Multifunction Switch
23	ETC	10	Powertrain Control Module (PCM)
24	IPC/DIC	10	Instrument Panel Cluster (IPC)
25	BTSI	10	Stop Lamp Switch, A/T Shift Lock Actuator
26	ENG I	10	EVAP Canister Purge Solenoid, EVAP Canister Vent Solenoid
27	BACK UP	15	Park/Neutral Position (PNP) Switch
28	PCM I	15	Fuel Injectors, Ignition Coils, Powertrain Control Module (PCM)
29	O2	10	Heated Oxygen Sensors
30	A/C	10	AIC Relay
31	TBC I	10	Body Control Module (BCM), and (BAE Only) Theft Deterrent Alarm and Theft Deterrent Module

32	TRAILER	30	Trailer Connector
33	ABS	60	Electronic Brake Control Module (EBCM)
34	IGN A	40	Starter Relay, Ignition Switch
35	BLOWER	40	Blower Motor Control Processor (CJ2), Blower Motor Resistor Assembly (CJ3)
36	IGN B	40	Ignition Switch
37	TRLR RT TURN	10	Trailer Connector
38	TRLR LT TURN	10	Trailer Connector
39	FLASH	25	Turn Signal/Hazard Flasher Module
40	I/P BATT	125	Fuse Block-Rear