 
 
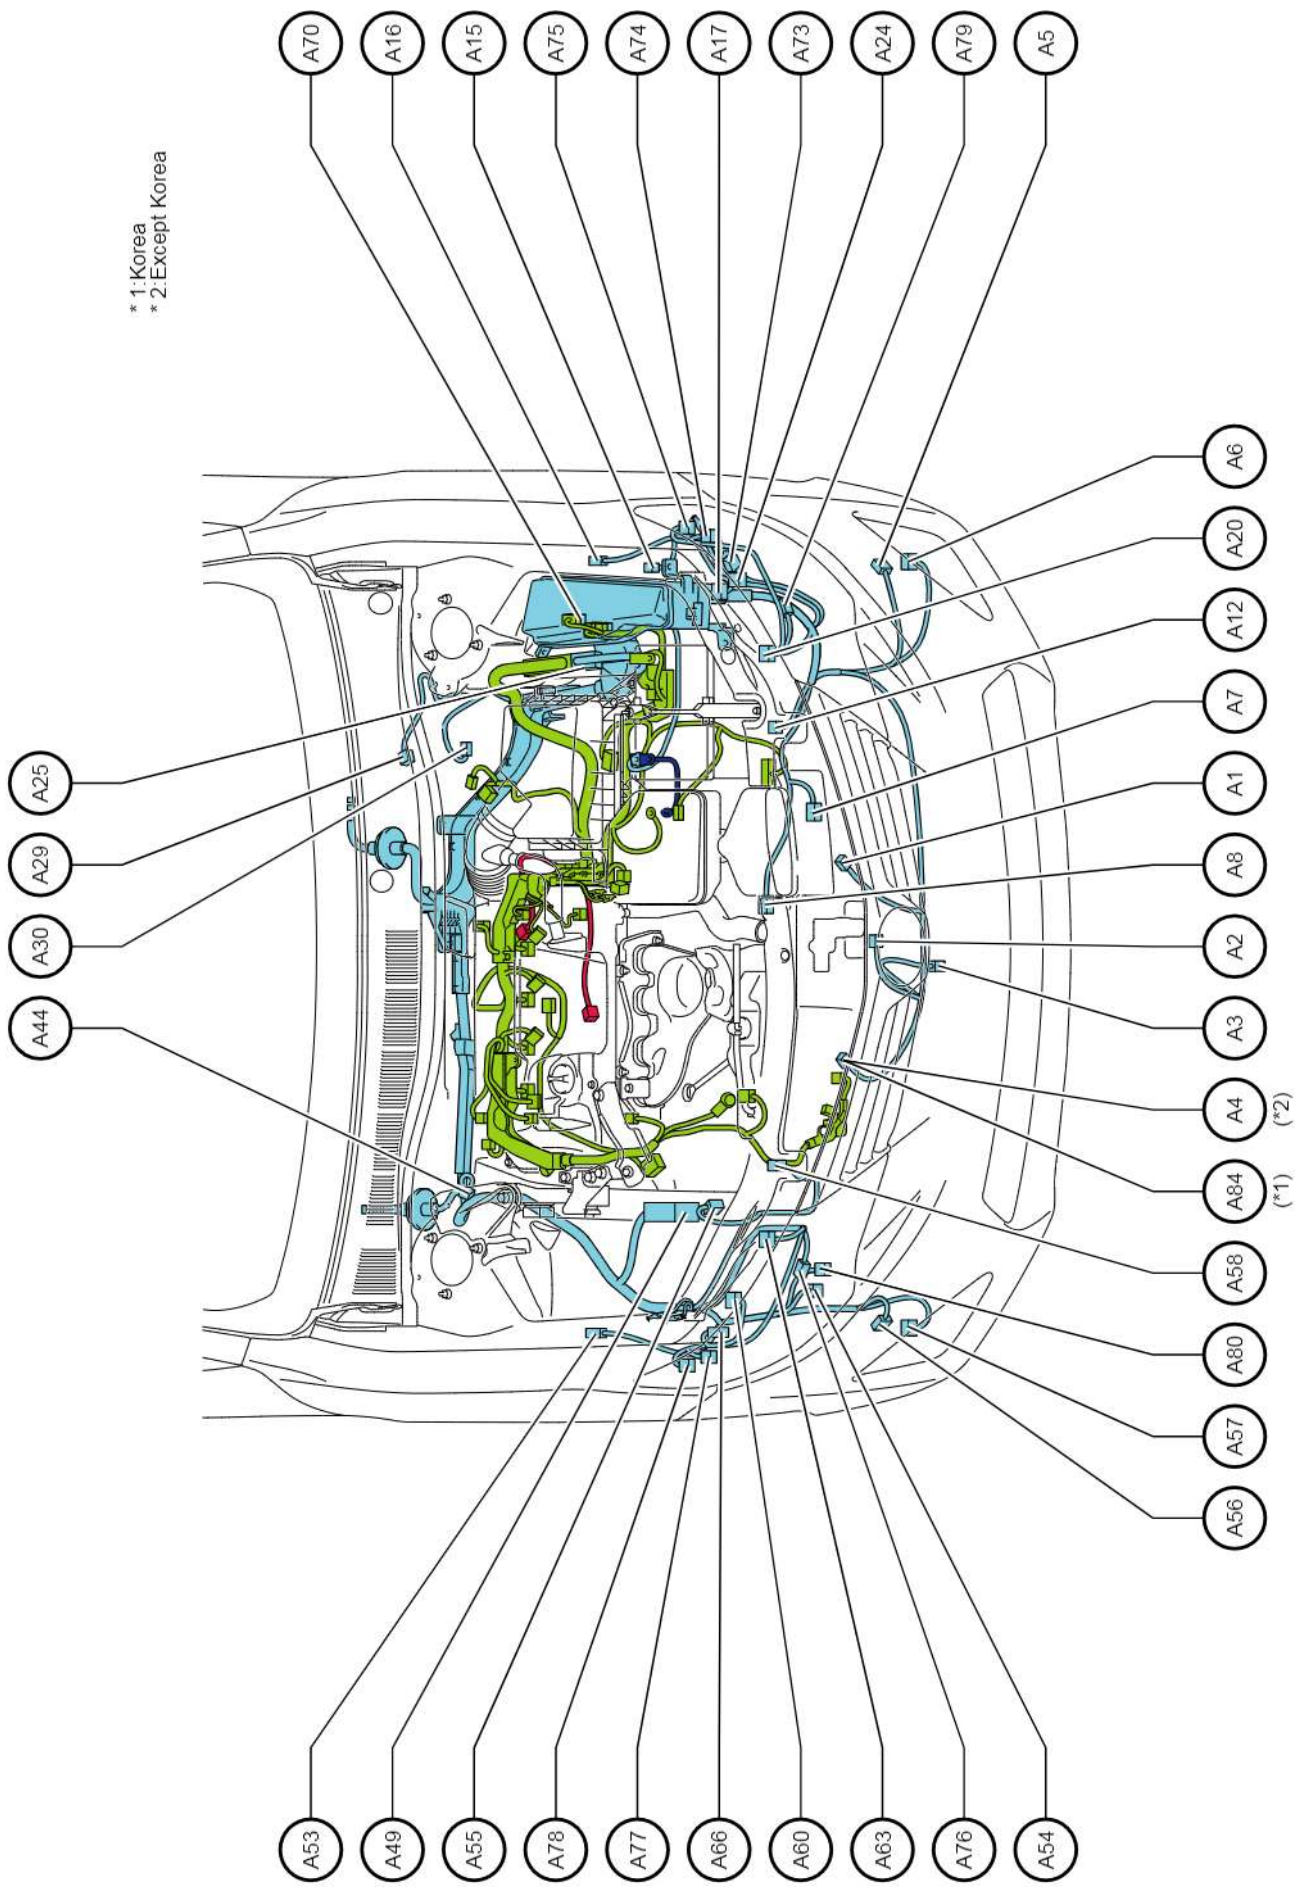 
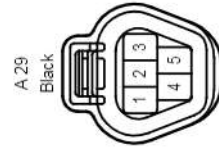 
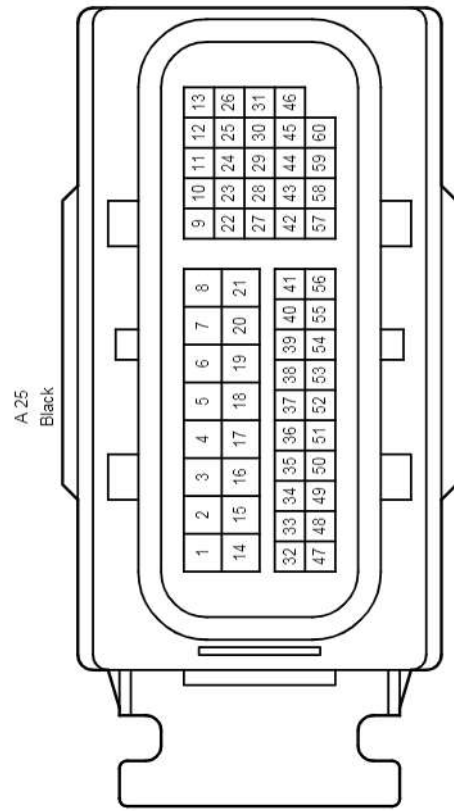 
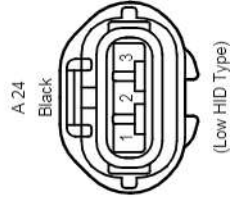 
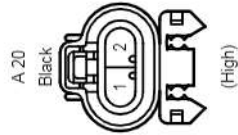 
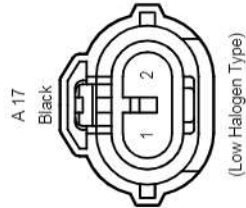 
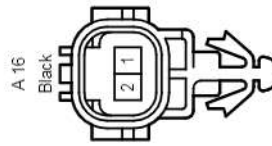 
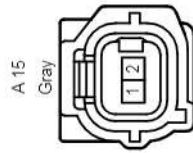 
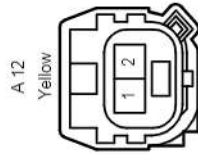 
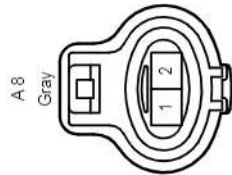 
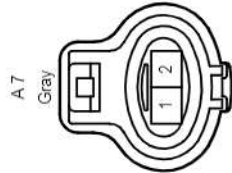 
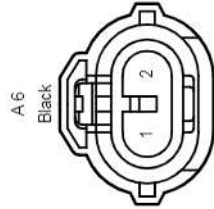 
 


Position of Parts in Engine Compartment <2AR-FE>



A 1	Low Pitched Horn Assembly
A 2	Engine Hood Courtesy Switch (Hood Lock Assembly)
A 3	Ambient Temperature Sensor (Thermistor Assembly)
A 4	High Pitched Horn Assembly
A 5	Front No. 1 Ultrasonic Sensor LH
A 6	Fog Light Assembly LH
A 7	Cooling Fan Motor
A 8	No. 2 Cooling Fan Motor
A 12	Front Airbag Sensor LH
A 15	Wireless Door Lock Buzzer
A 16	Front Speed Sensor LH
A 17	Headlight Assembly LH
A 20	Headlight Assembly LH
A 24	Headlight Assembly LH
A 25	ECM
A 29	Windshield Wiper Motor Assembly
A 30	Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Sub-Assembly)
A 44	Security Horn Assembly
A 49	Brake Actuator Assembly
A 53	Front Speed Sensor RH
A 54	Windshield Washer Motor and Pump Assembly
A 55	A/C Pressure Sensor (A/C Tube & Accessory Assembly)
A 56	Front No. 1 Ultrasonic Sensor RH
A 57	Fog Light Assembly RH
A 58	Front Airbag Sensor RH
A 60	Headlight Assembly RH
A 63	Headlight Assembly RH
A 66	Headlight Assembly RH
A 70	Junction Connector
A 73	Junction Connector
A 74	Headlight Assembly LH
A 75	Headlight Assembly LH
A 76	Headlight Assembly RH
A 77	Headlight Assembly RH
A 78	Headlight Assembly RH
A 79	Headlight Assembly LH
A 80	Level Warning Switch Assembly
A 84	Super Low Pitched Horn Assembly

Position of Parts in Engine Compartment <2AR-FE>

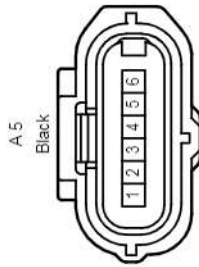 


A 30
Gray


A 44
Black

A 49
Black

Position of Parts in Engine Compartment <2AR-FE>

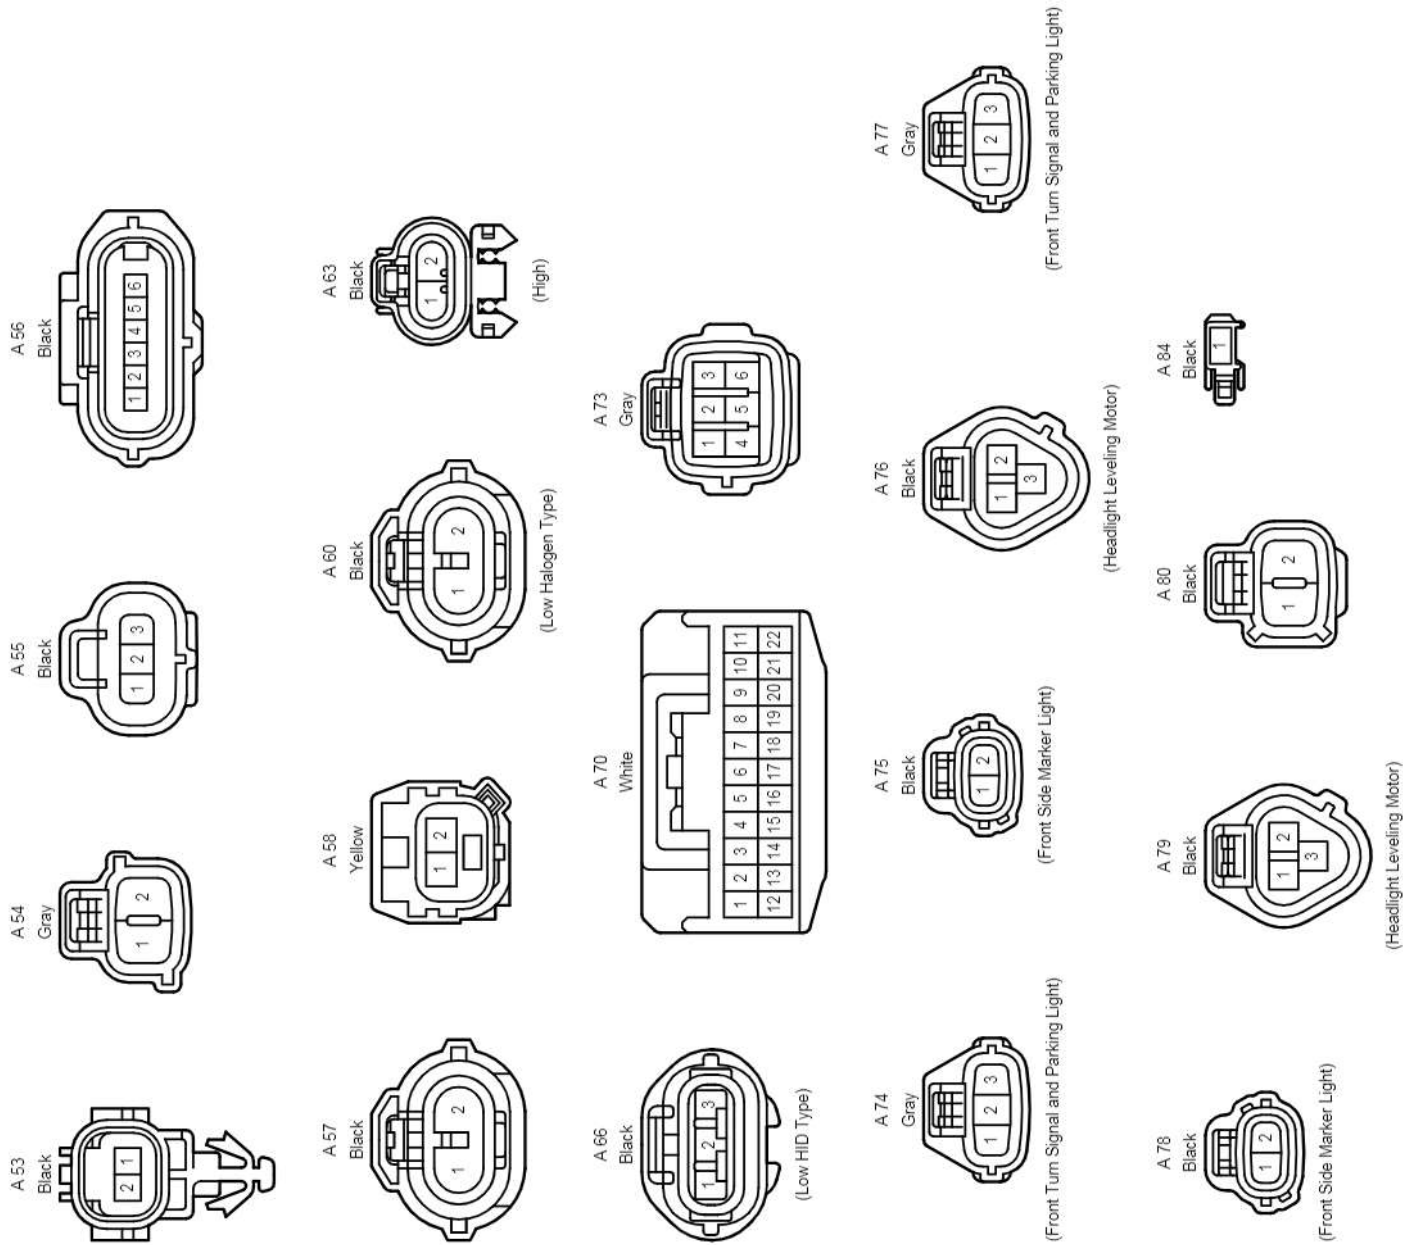


 Position of Parts in Engine Compartment <2AR-FE>





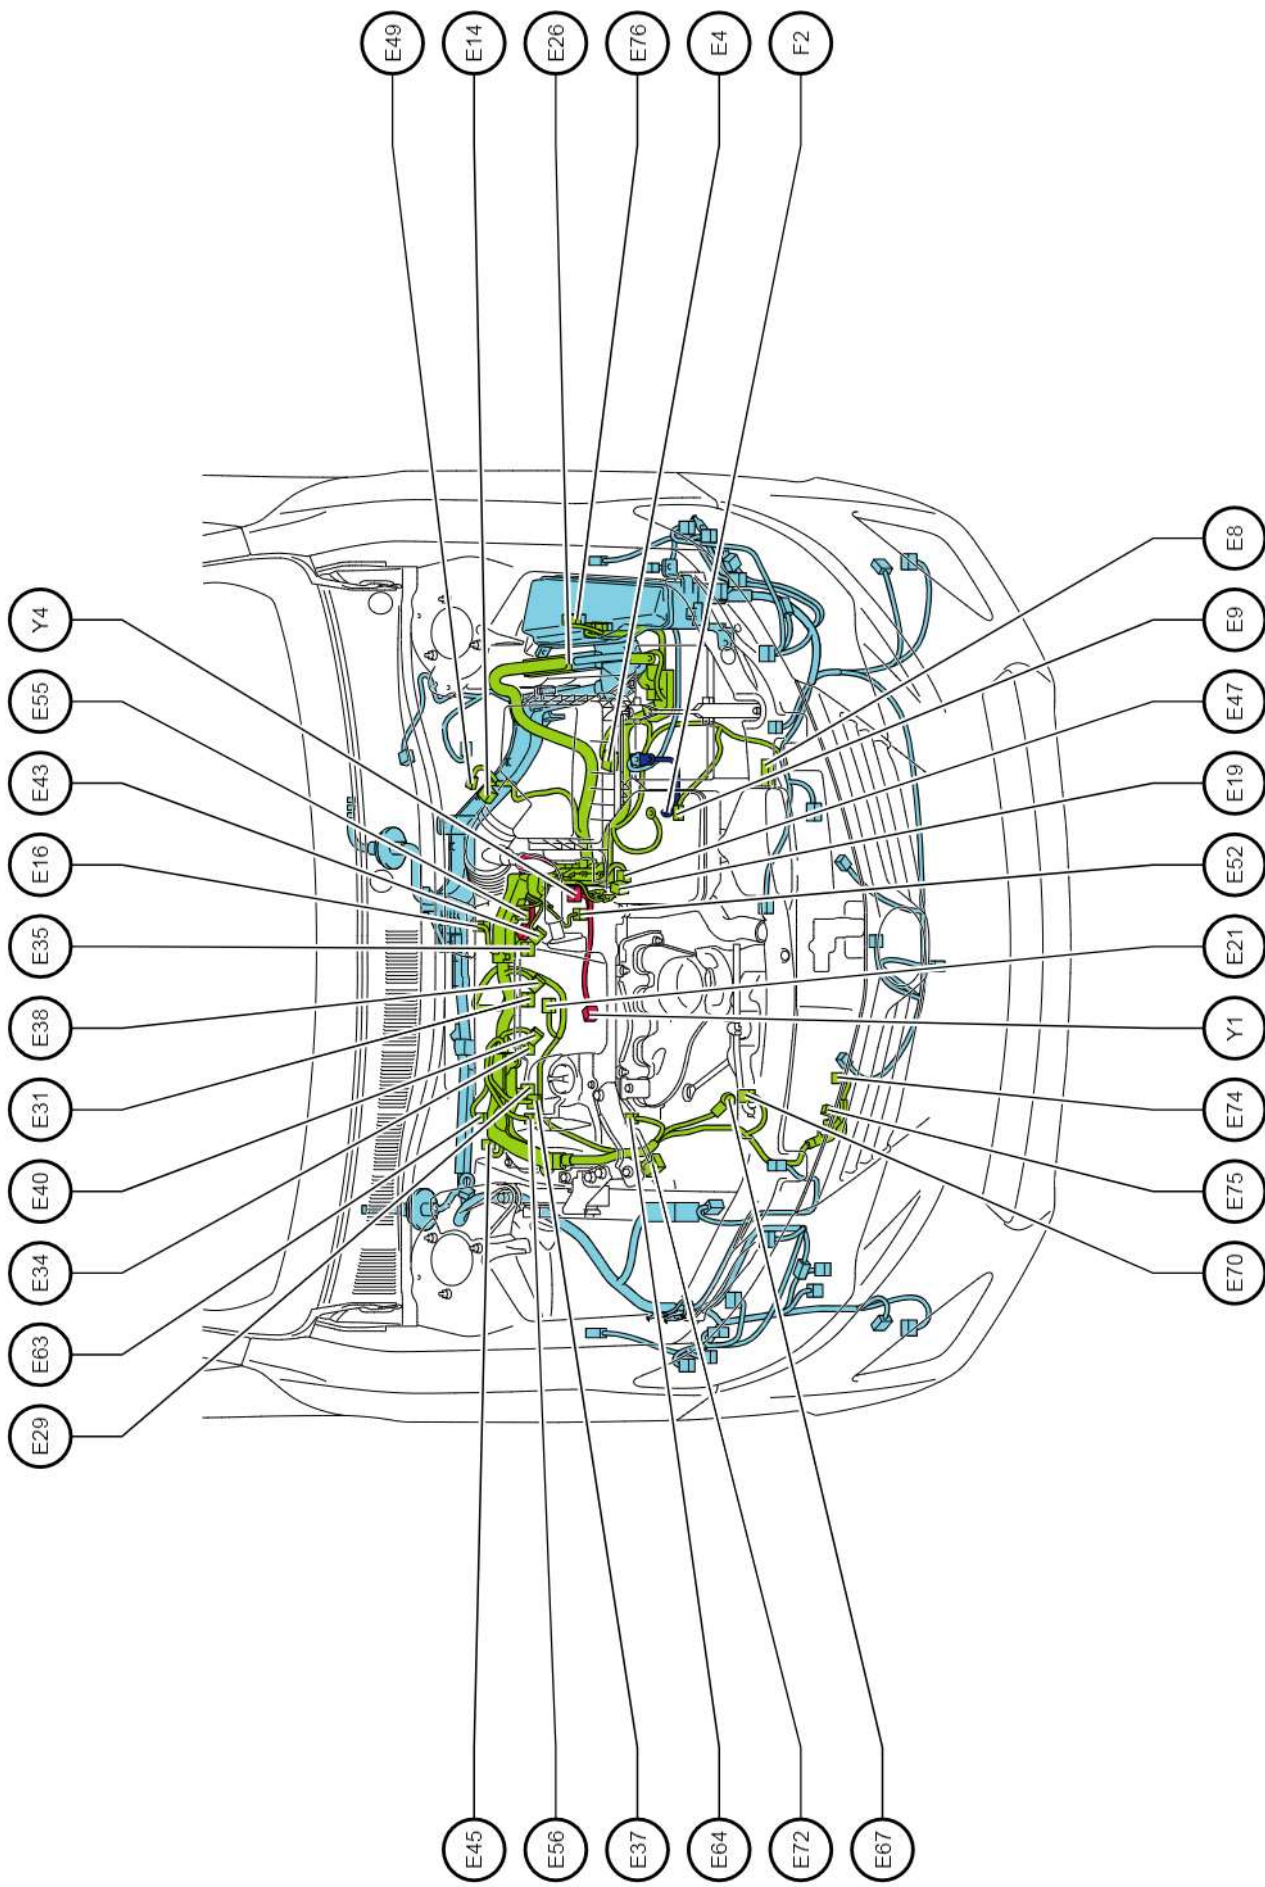


E	4	Park/Neutral Position Switch Assembly
E	8	Electronically Controlled Transmission Solenoid (Transmission Wire)
E	9	Starter Assembly
E	14	Intake Mass Air Flow Meter Sub-Assembly
E	16	Throttle Body Assembly with Motor
E	19	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
E	21	Oxygen Sensor (Bank 1 Sensor 2)
E	26	ECM
E	29	Fuel Injector Assembly No. 1
E	31	Fuel Injector Assembly No. 3
E	34	Fuel Injector Assembly No. 2
E	35	Fuel Injector Assembly No. 4
E	37	Ignition Coil Assembly No. 1
E	38	Ignition Coil Assembly No. 3
E	40	Ignition Coil Assembly No. 2
E	43	Ignition Coil Assembly No. 4
E	45	VSV (ACIS)
E	47	E.F.I. Engine Coolant Temperature Sensor
E	49	Purge VSV
E	52	WT Sensor (Bank 1 Exhaust Side)
E	55	WT Sensor (Bank 1 Intake Side)
E	56	Camshaft Timing Oil Control Valve Assembly (Exhaust Side)
E	63	Camshaft Timing Oil Control Valve Assembly (Intake Side)
E	64	Engine Oil Pressure Switch Assembly
E	67	Generator Assembly
E	70	Generator Assembly
E	72	Crank Position Sensor
E	74	Compressor Assembly with Pulley
E	75	Compressor Assembly with Pulley
E	76	Junction Connector
F	2	Starter Assembly
Y	1	Knock Control Sensor (Bank 1)
Y	4	Intake Air Control Valve Actuator





 
Position of Parts in Engine Compartment <2AR-FE>

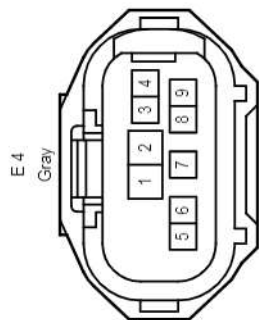













E 8
Black

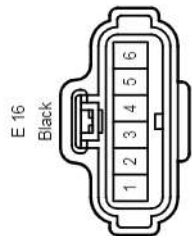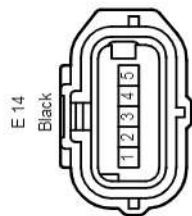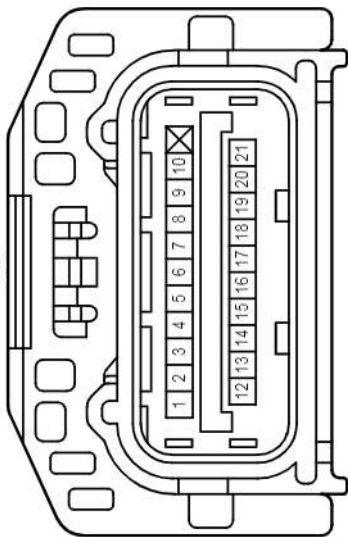     



E 26
Black

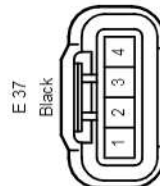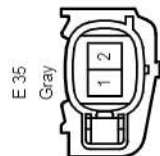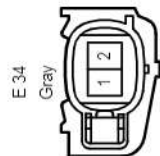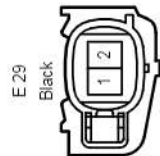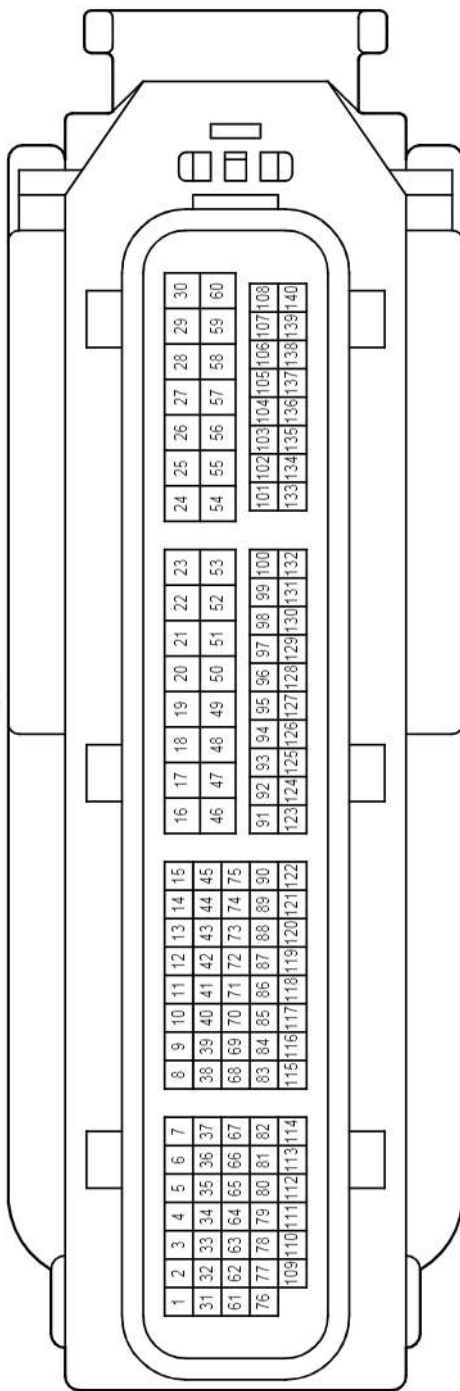     

              
Position of Parts in Engine Compartment <2AR-FE>

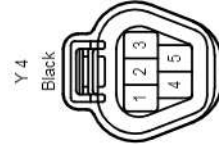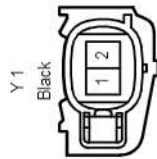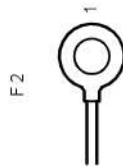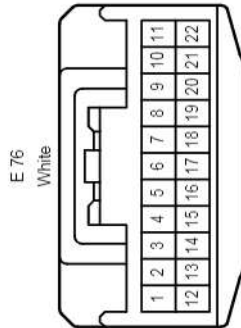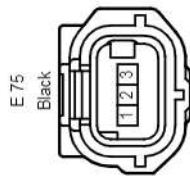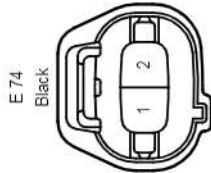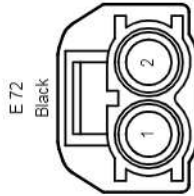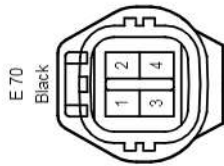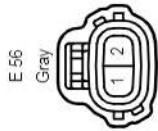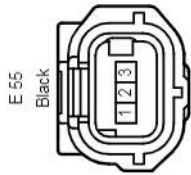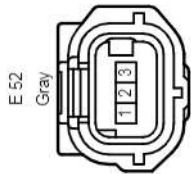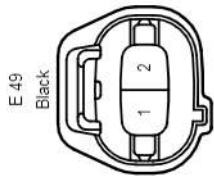

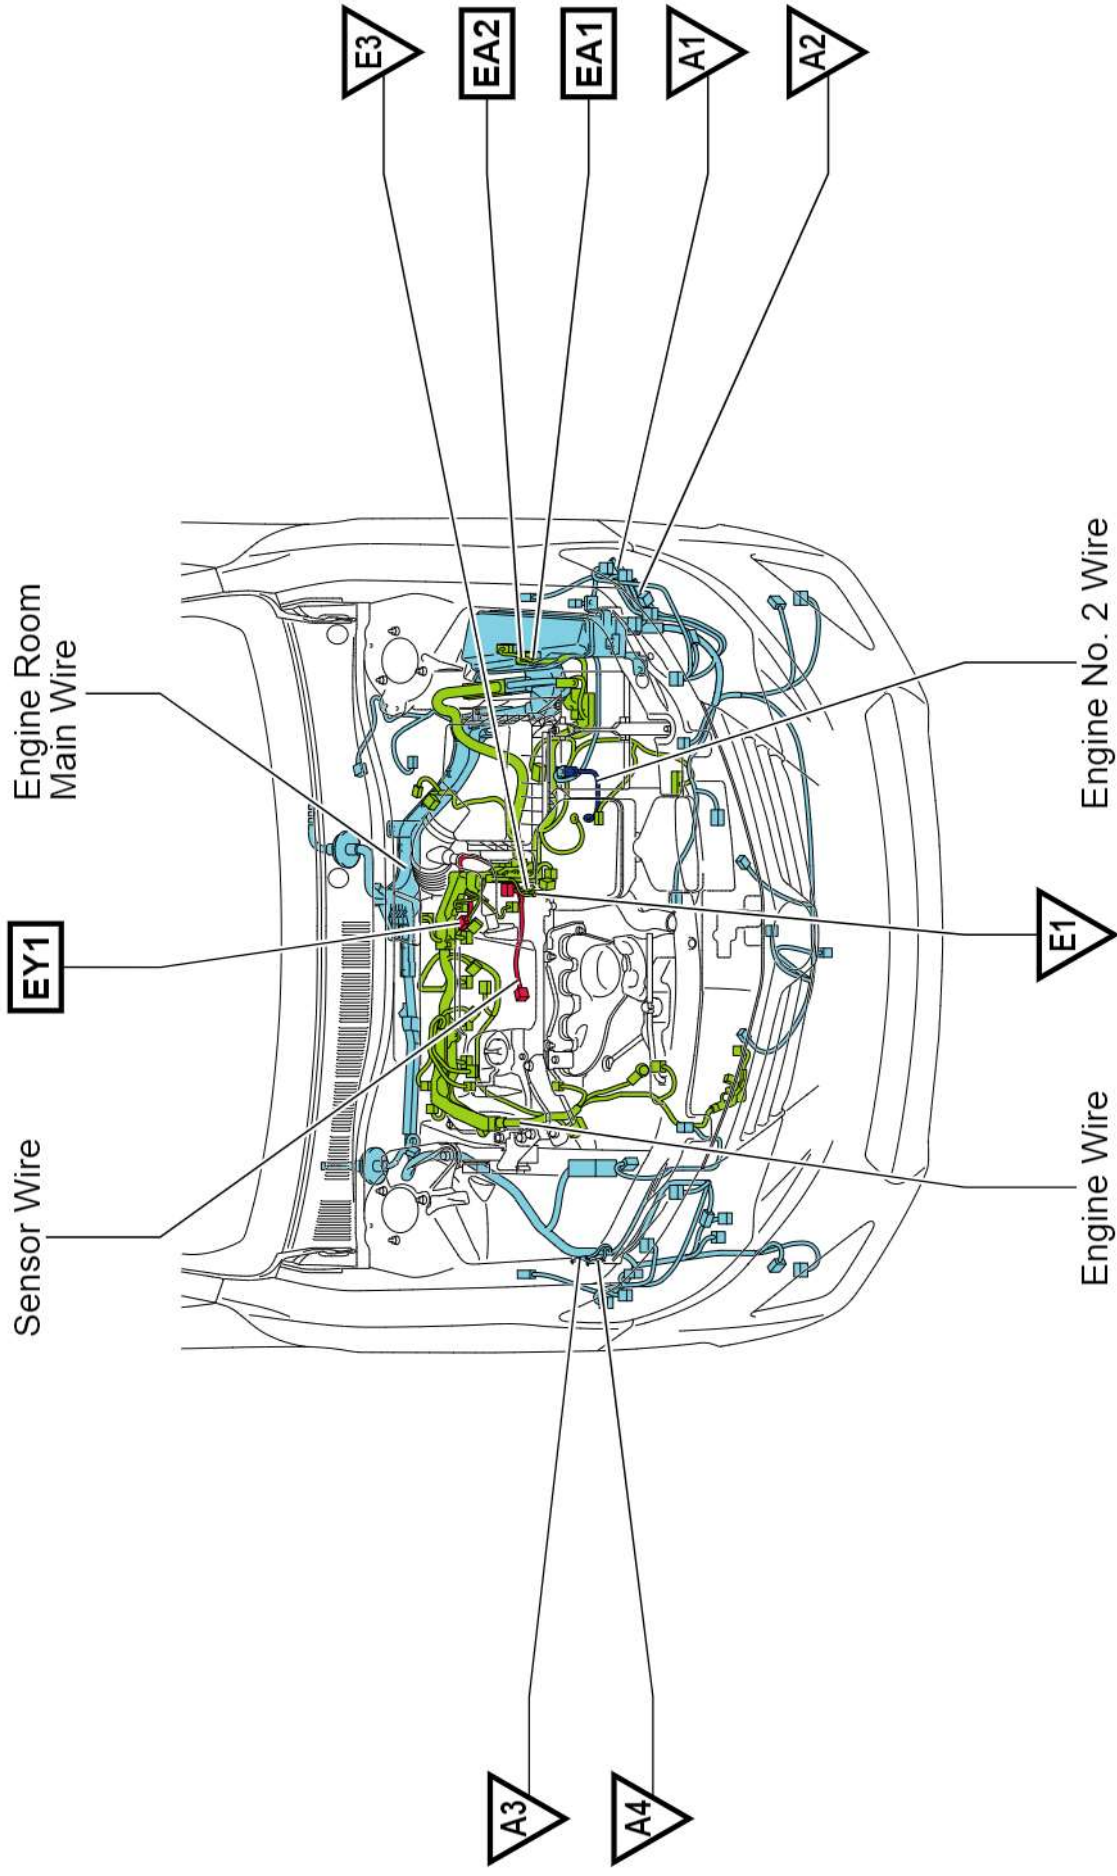














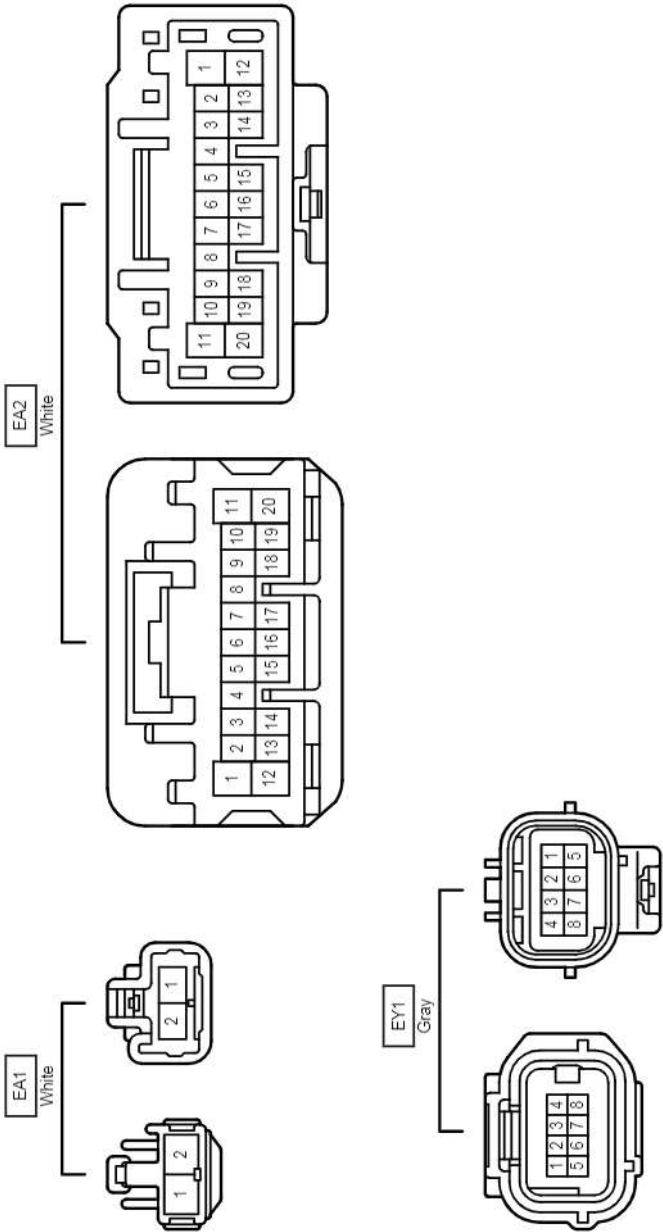


 Position of Parts in Engine Compartment <2GR-FE>

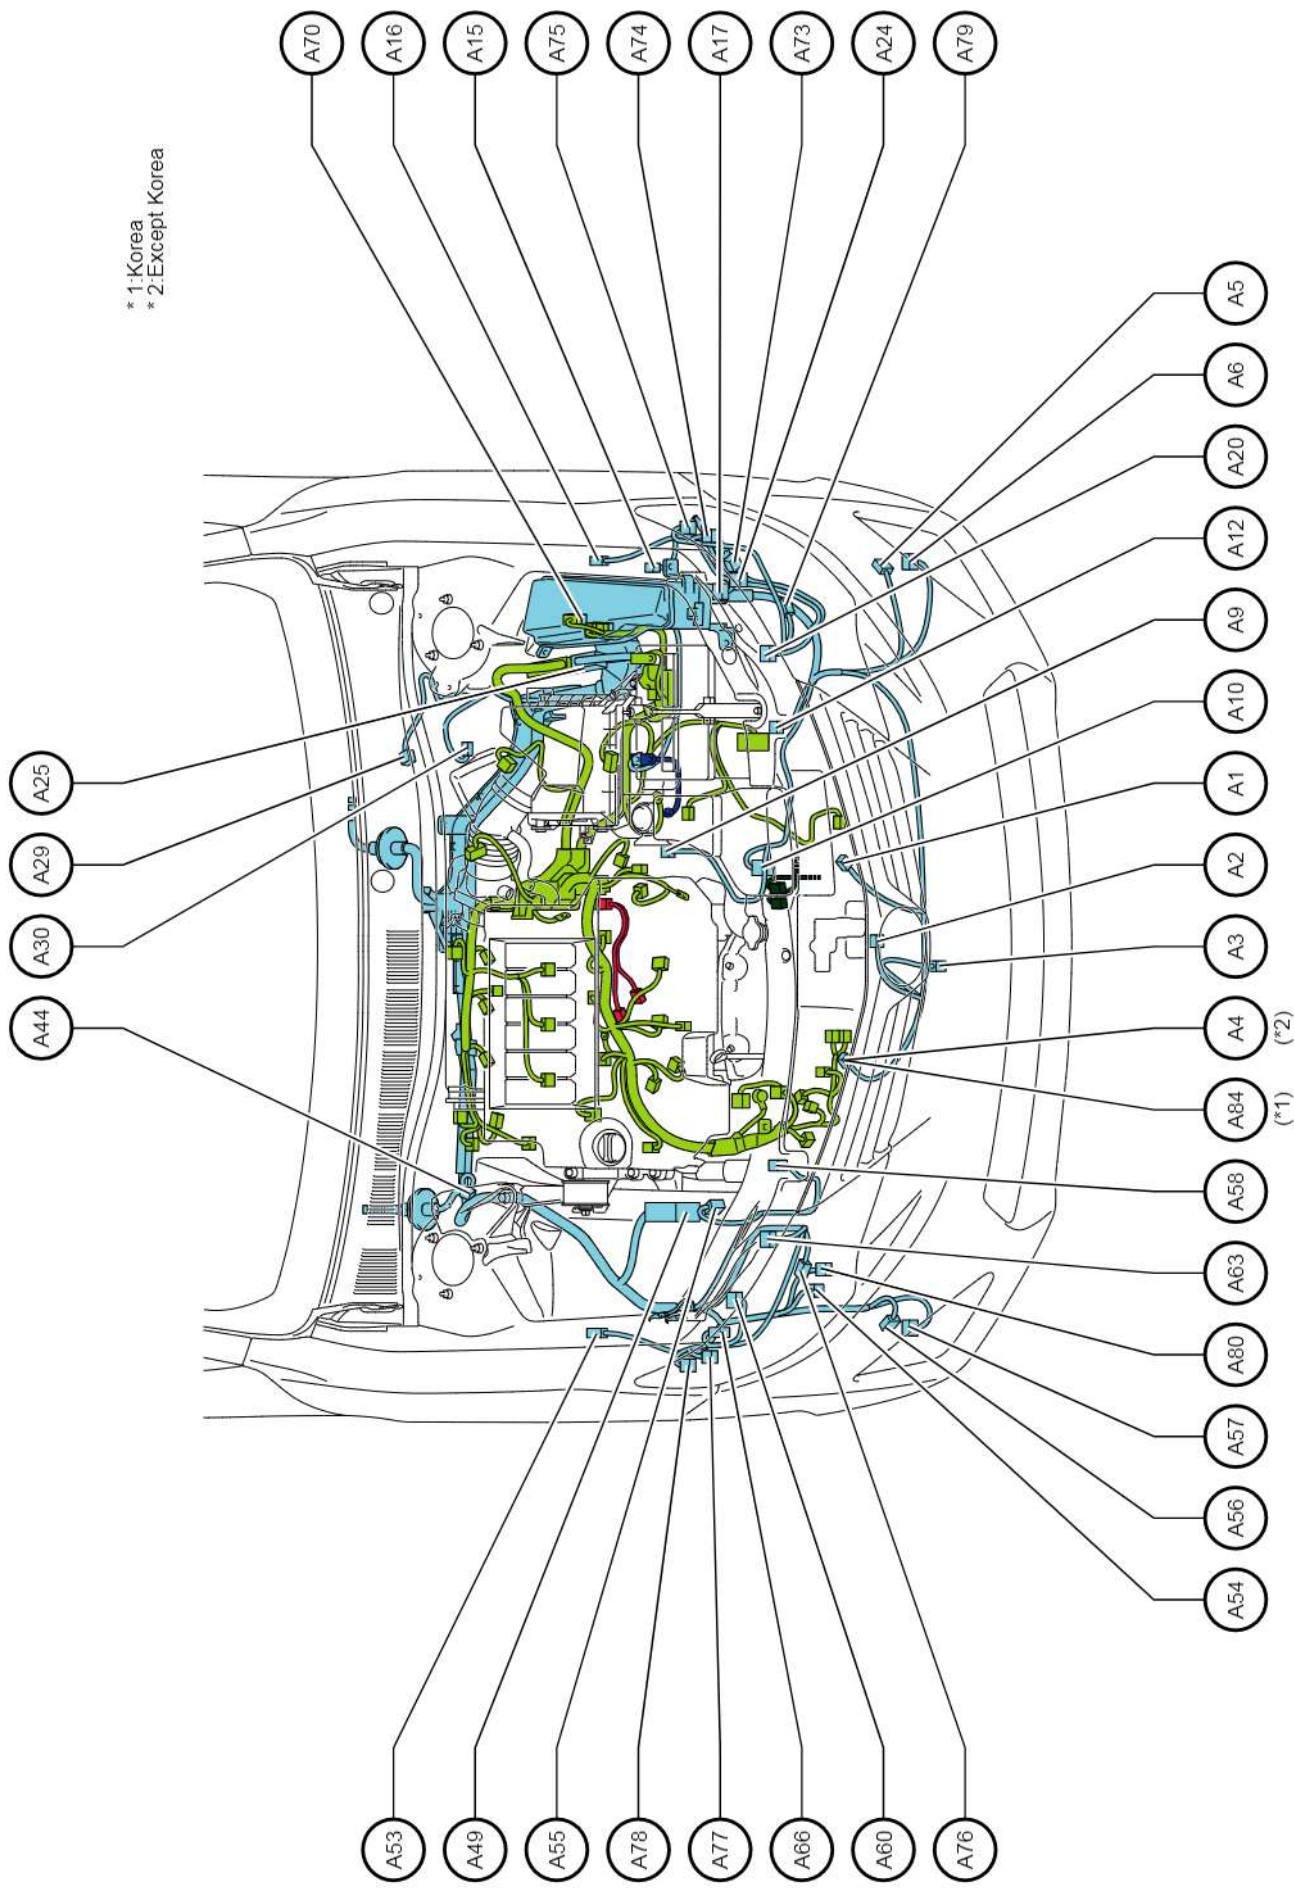






A 1	Low Pitched Horn Assembly
A 2	Engine Hood Courtesy Switch (Hood Lock Assembly)
A 3	Ambient Temperature Sensor (Thermistor Assembly)
A 4	High Pitched Horn Assembly
A 5	Front No. 1 Ultrasonic Sensor LH
A 6	Fog Light Assembly LH
A 9	VSV (Air Intake Control)
A 10	Cooling Fan ECU
A 12	Front Airbag Sensor LH
A 15	Wireless Door Lock Buzzer
A 16	Front Speed Sensor LH
A 17	Headlight Assembly LH
A 20	Headlight Assembly LH
A 24	Headlight Assembly LH
A 25	ECM
A 29	Windshield Wiper Motor Assembly
A 30	Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Sub-Assembly)
A 44	Security Horn Assembly
A 49	Brake Actuator Assembly
A 53	Front Speed Sensor RH
A 54	Windshield Washer Motor and Pump Assembly
A 55	A/C Pressure Sensor (A/C Tube & Accessory Assembly)
A 56	Front No. 1 Ultrasonic Sensor RH
A 57	Fog Light Assembly RH
A 58	Front Airbag Sensor RH
A 60	Headlight Assembly RH
A 63	Headlight Assembly RH
A 66	Headlight Assembly RH
A 70	Junction Connector
A 73	Junction Connector
A 74	Headlight Assembly LH
A 75	Headlight Assembly LH
A 76	Headlight Assembly RH
A 77	Headlight Assembly RH
A 78	Headlight Assembly RH
A 79	Headlight Assembly LH
A 80	Level Warning Switch Assembly
A 84	Super Low Pitched Horn Assembly

              Position of Parts in Engine Compartment <2GR-FE>

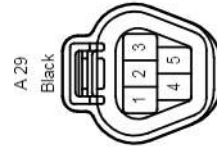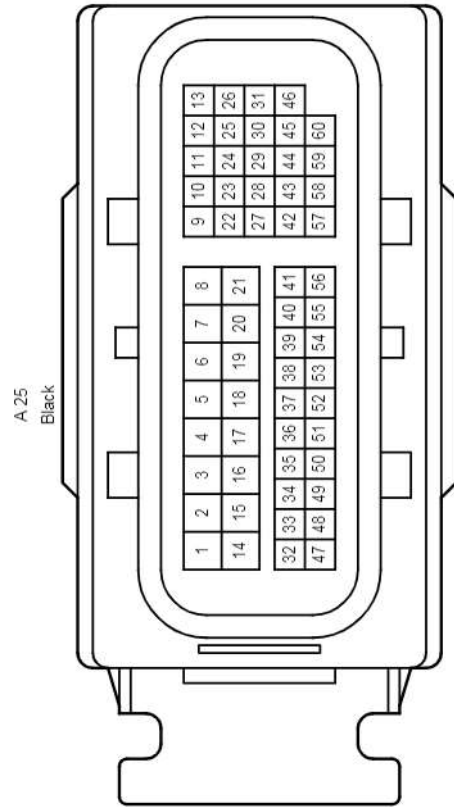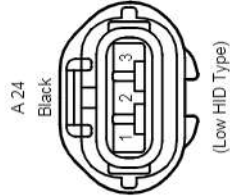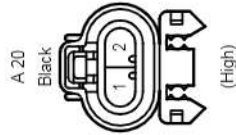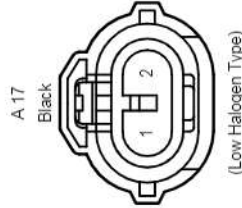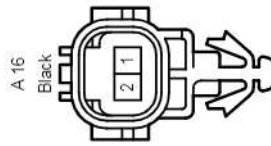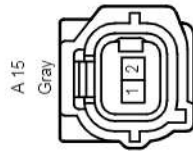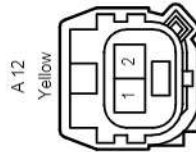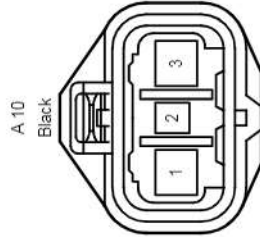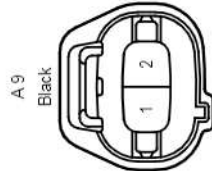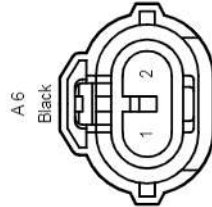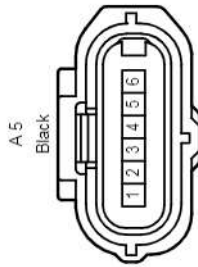


cardiagn.com

     Position of Parts in Engine Compartment <2GR-FE>




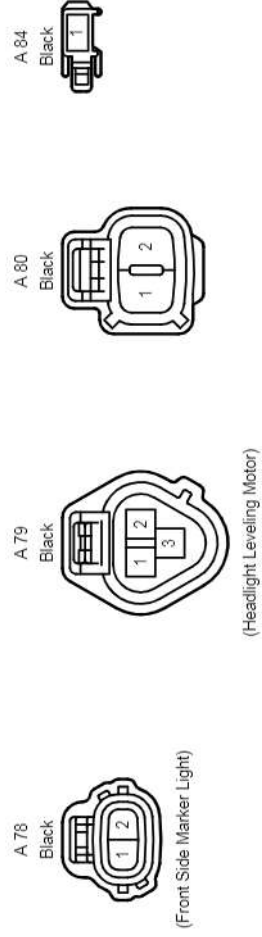
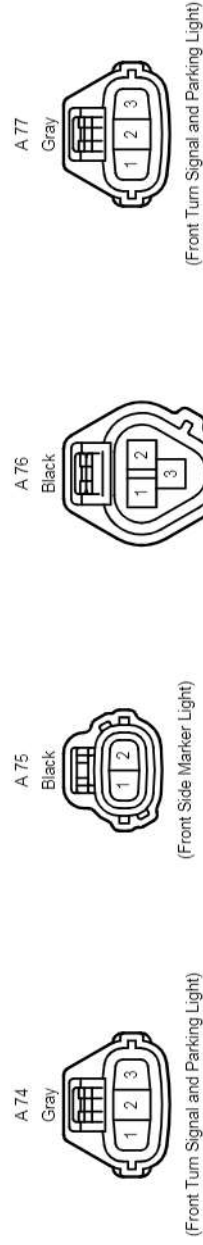
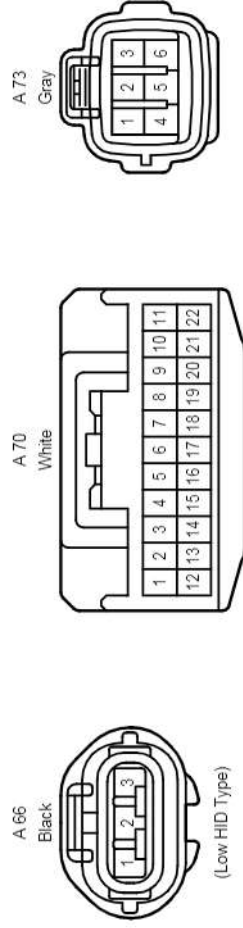
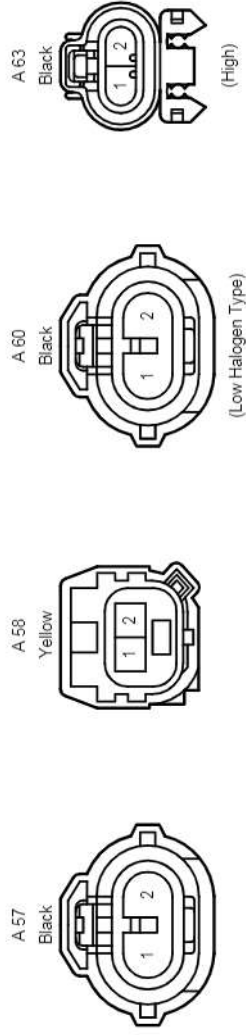
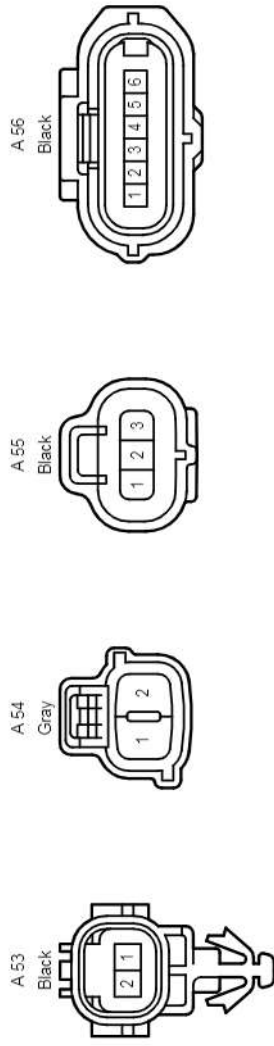


 Position of Parts in Engine Compartment <2GR-FE>

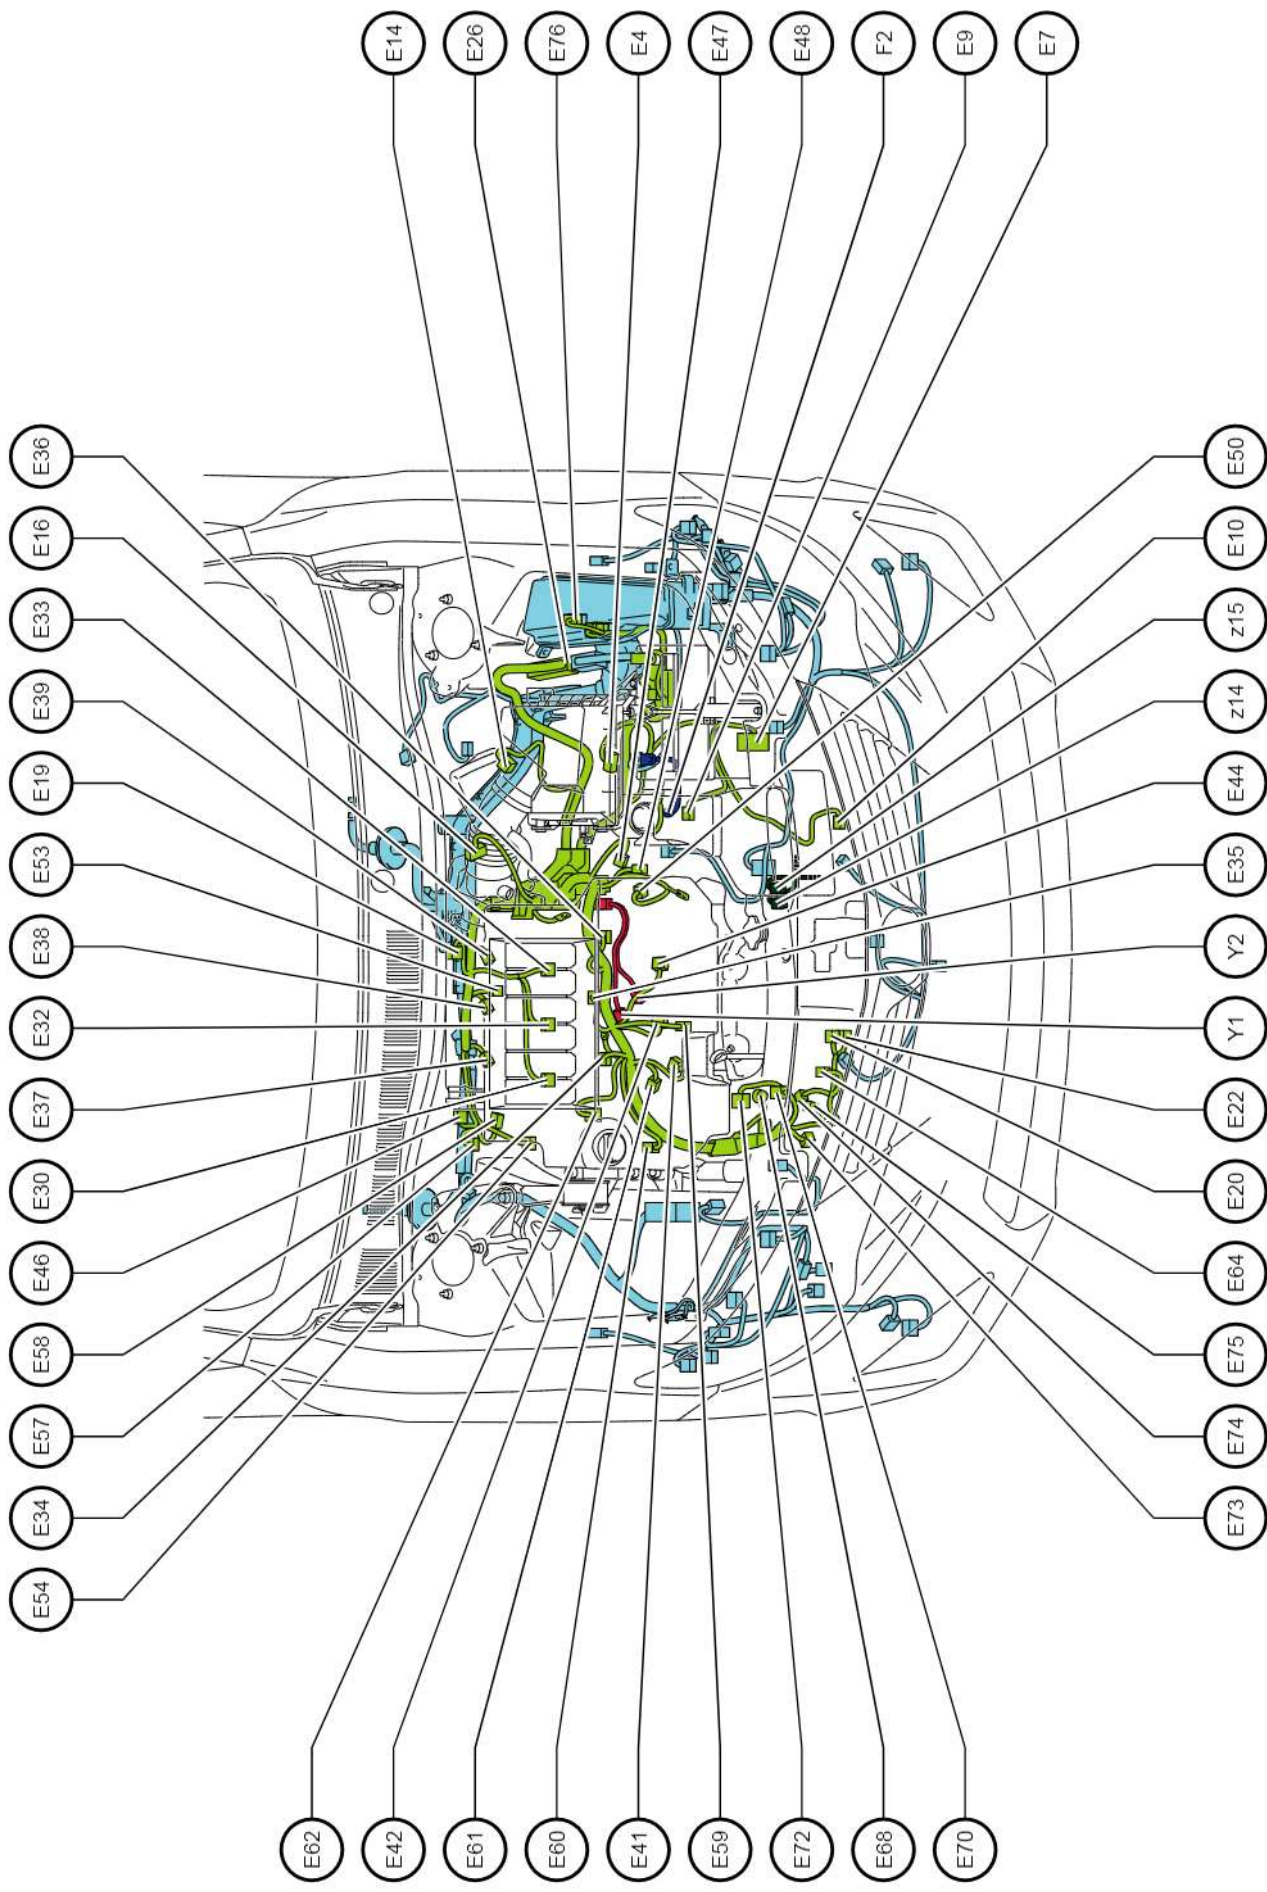


E 4	Park/Neutral Position Switch Assembly
E 7	Transmission Control ECU Assembly
E 9	Starter Assembly
E 10	VSV (ACM)
E 14	Intake Mass Air Flow Meter Sub-Assembly
E 16	Throttle Body Assembly with Motor
E 19	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
E 20	Oxygen Sensor (Bank 2 Sensor 2)
E 22	Oxygen Sensor (Bank 1 Sensor 2)
E 26	ECM
E 30	Fuel Injector Assembly No. 1
E 32	Fuel Injector Assembly No. 3
E 33	Fuel Injector Assembly No. 5
E 34	Fuel Injector Assembly No. 2
E 35	Fuel Injector Assembly No. 4
E 36	Fuel Injector Assembly No. 6
E 37	Ignition Coil Assembly No. 1
E 38	Ignition Coil Assembly No. 3
E 39	Ignition Coil Assembly No. 5
E 41	Ignition Coil Assembly No. 2
E 42	Ignition Coil Assembly No. 4
E 44	Ignition Coil Assembly No. 6
E 46	VSV (ACIS)
E 47	E.F.I. Engine Coolant Temperature Sensor
E 48	Air Fuel Ratio Sensor (Bank 2 Sensor 1)
E 50	Purge VSV
E 53	WT Sensor (Bank 1 Exhaust Side)
E 54	WT Sensor (Bank 1 Intake Side)
E 57	Camshaft Timing Oil Control Valve Assembly (Bank 1 Exhaust Side)
E 58	Camshaft Timing Oil Control Valve Assembly (Bank 1 Intake Side)
E 59	WT Sensor (Bank 2 Exhaust Side)
E 60	WT Sensor (Bank 2 Intake Side)
E 61	Camshaft Timing Oil Control Valve Assembly (Bank 2 Exhaust Side)
E 62	Camshaft Timing Oil Control Valve Assembly (Bank 2 Intake Side)
E 64	Engine Oil Pressure Switch Assembly
E 68	Generator Assembly
E 70	Generator Assembly
E 72	Crank Position Sensor
E 73	Compressor Assembly with Pulley
E 74	Compressor Assembly with Pulley
E 75	Compressor Assembly with Pulley
E 76	Junction Connector

        Position of Parts in Engine Compartment <2GR-FE>

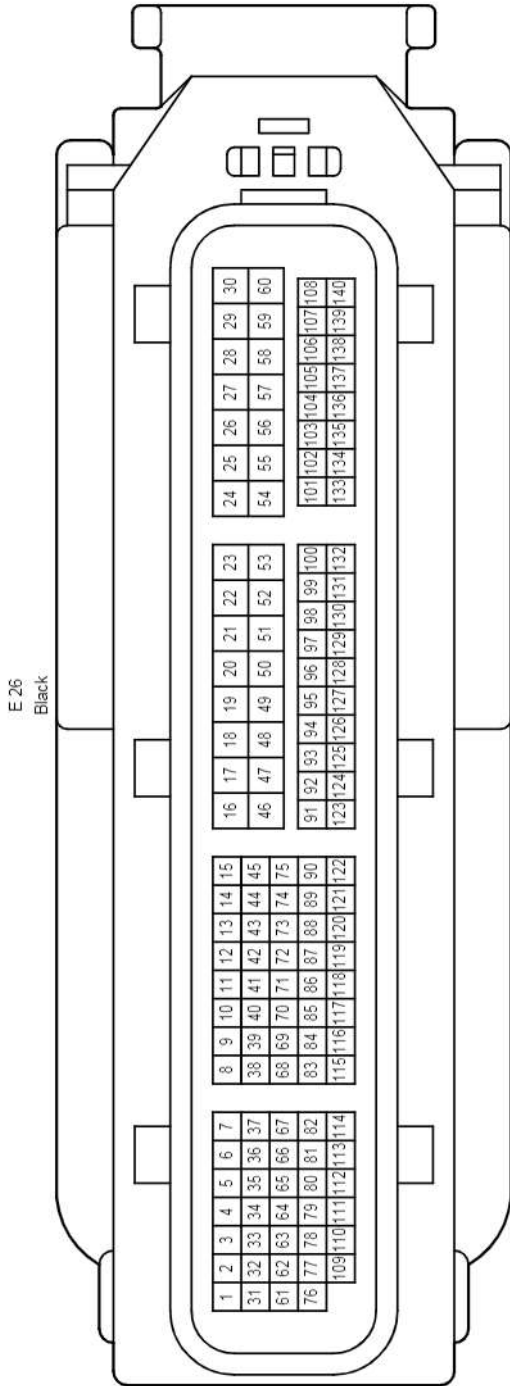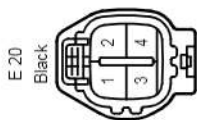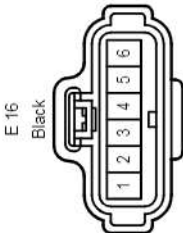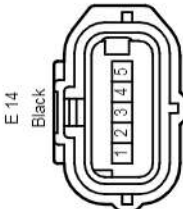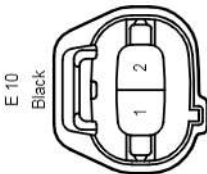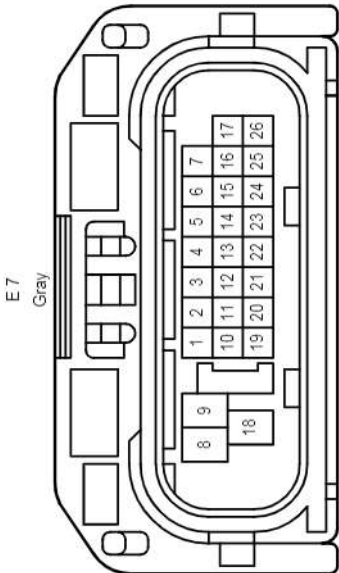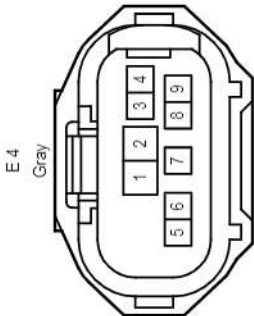


Position of Parts in Engine Compartment <2GR-FE>

 
E 41 Black



E 42 Black

 

E 44 Black

 


E 46 Gray



E 47 Black



 
E 48 Dark Gray

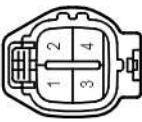


E 50 Black



 E 53 Black

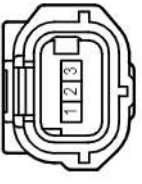

E 54 Black

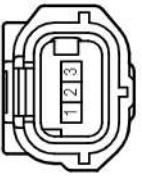 

E 57 Black



 
E 58 Black



E 59 Black



E 60 Black

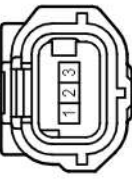

E 61 Black



E 62 Black



 
E 64 Gray



E 68



E 70 Black

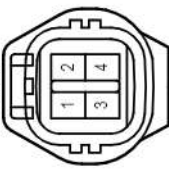

E 72 Black



 
E 73 Gray




E 74 Black



E 75 Black

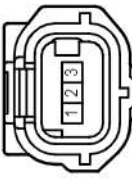

E 76 White

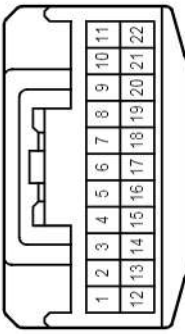 


F 2



Y 1 Black



 Y 2 Gray







z 14 Gray



    z 15 Gray



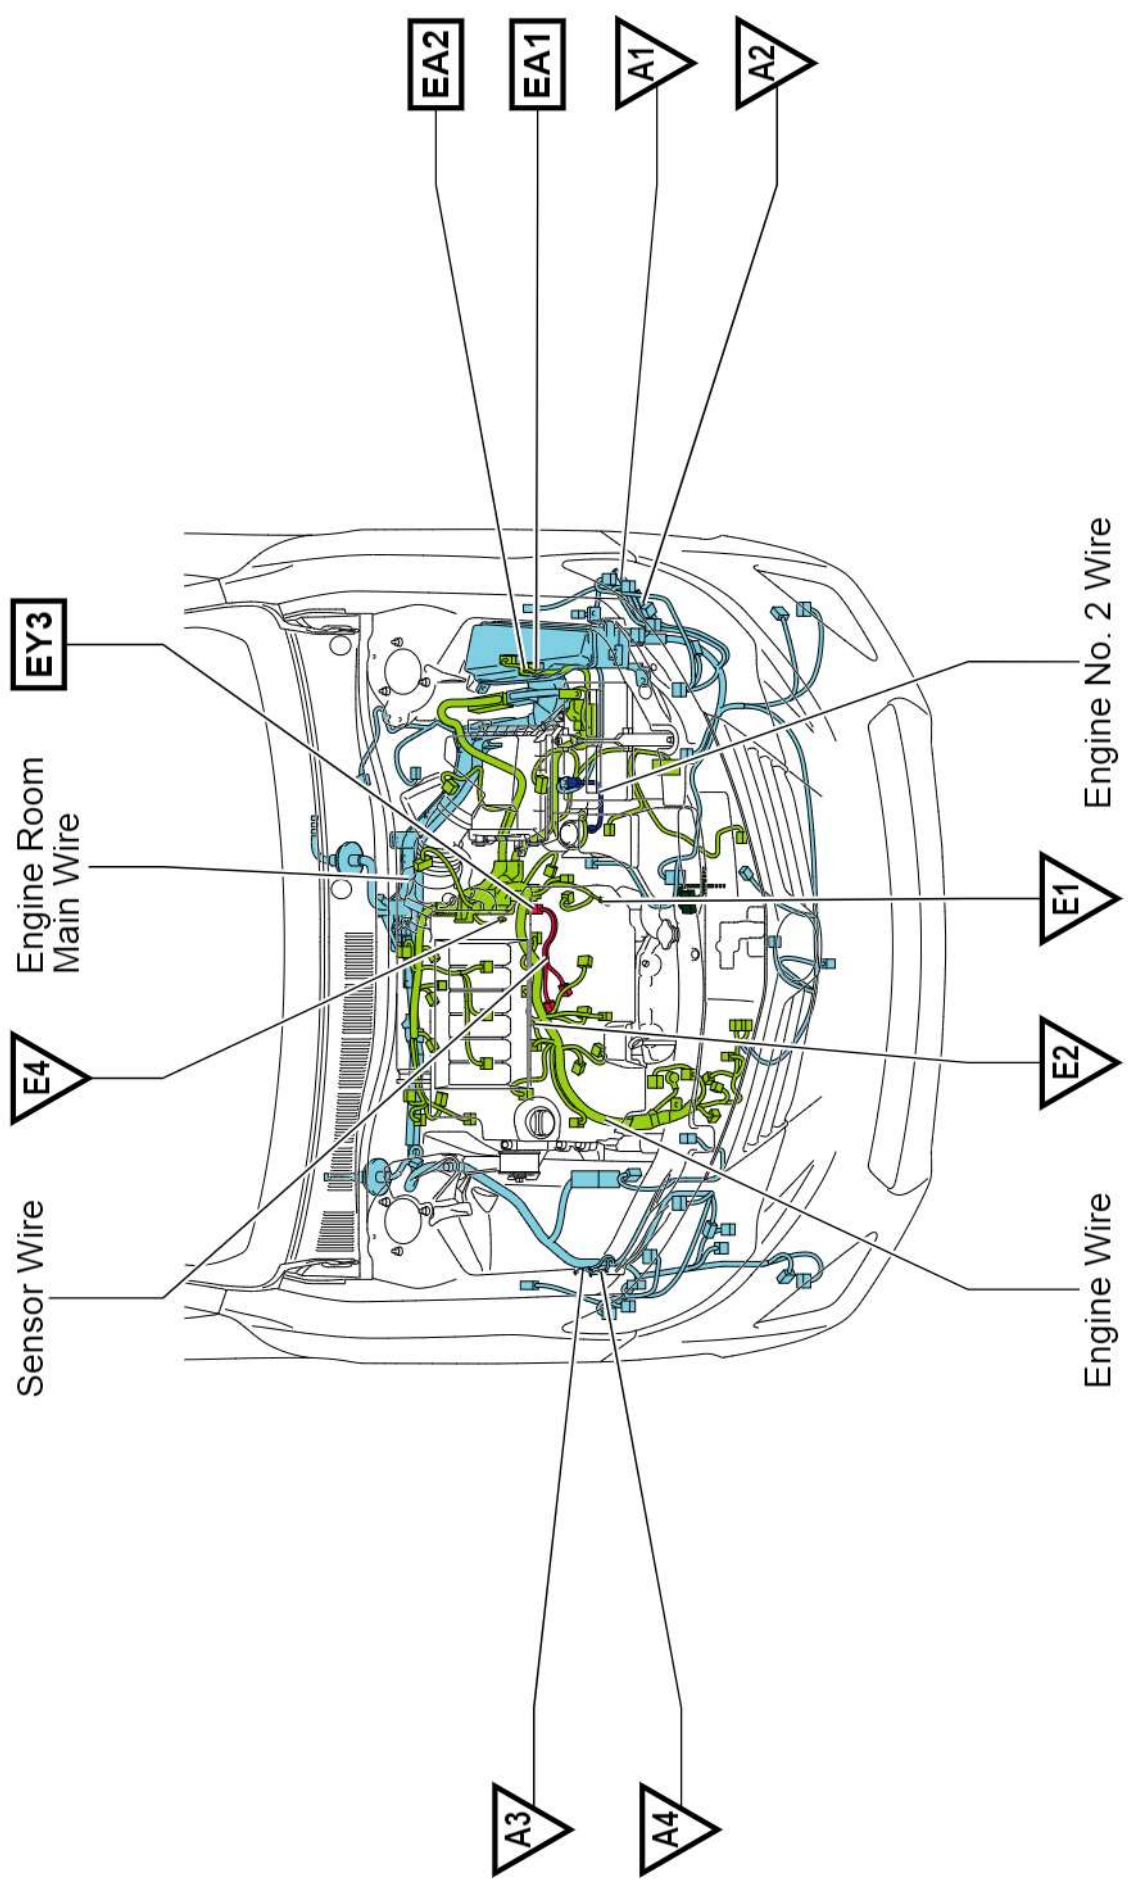

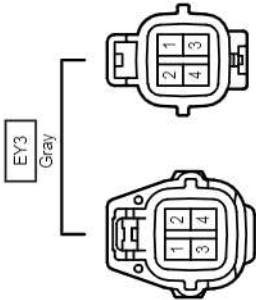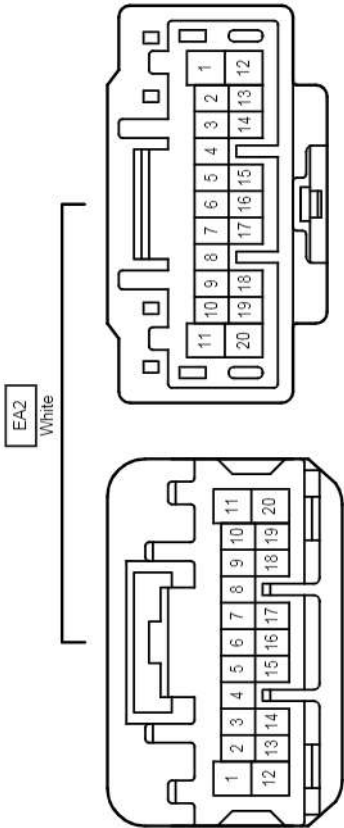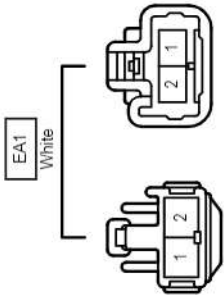

Antenna in Antenna

Navigation Antenna Assembly

 
Roof Antenna Assembly

 
No. 2 Antenna Cord
Sub-Assembly

Amplifier Antenna
Assembly


Antenna Cord
Sub-Assembly

No. 3 Antenna
Cord Sub-Assembly
(Floor No. 2 Wire)

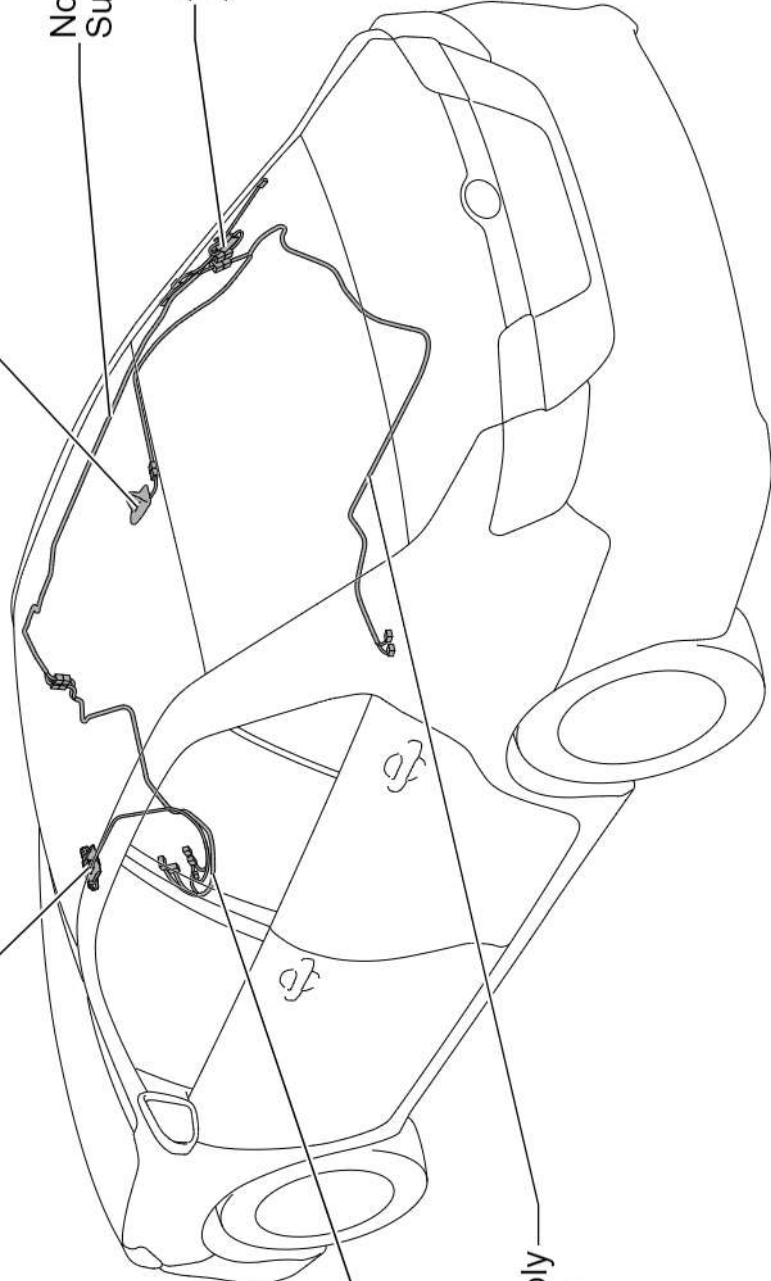

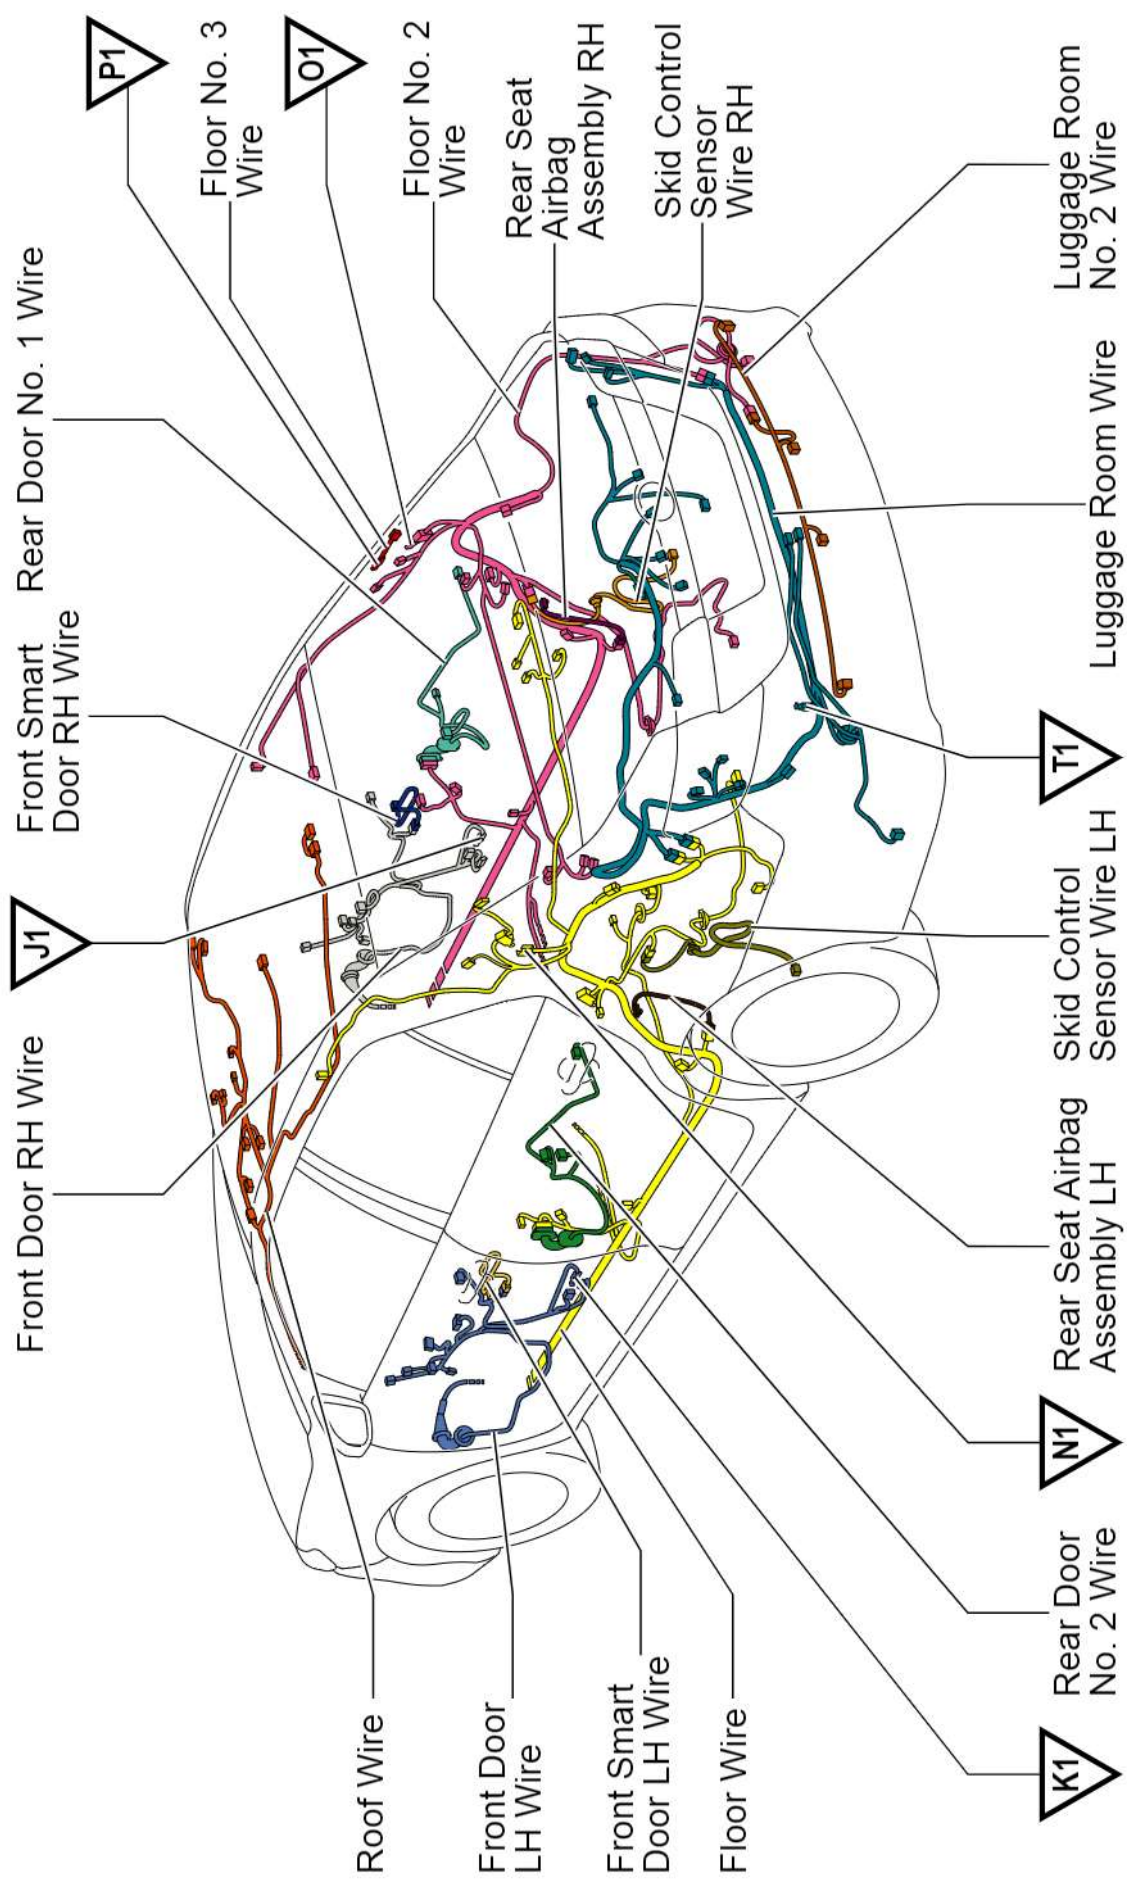























Position of Parts in Body

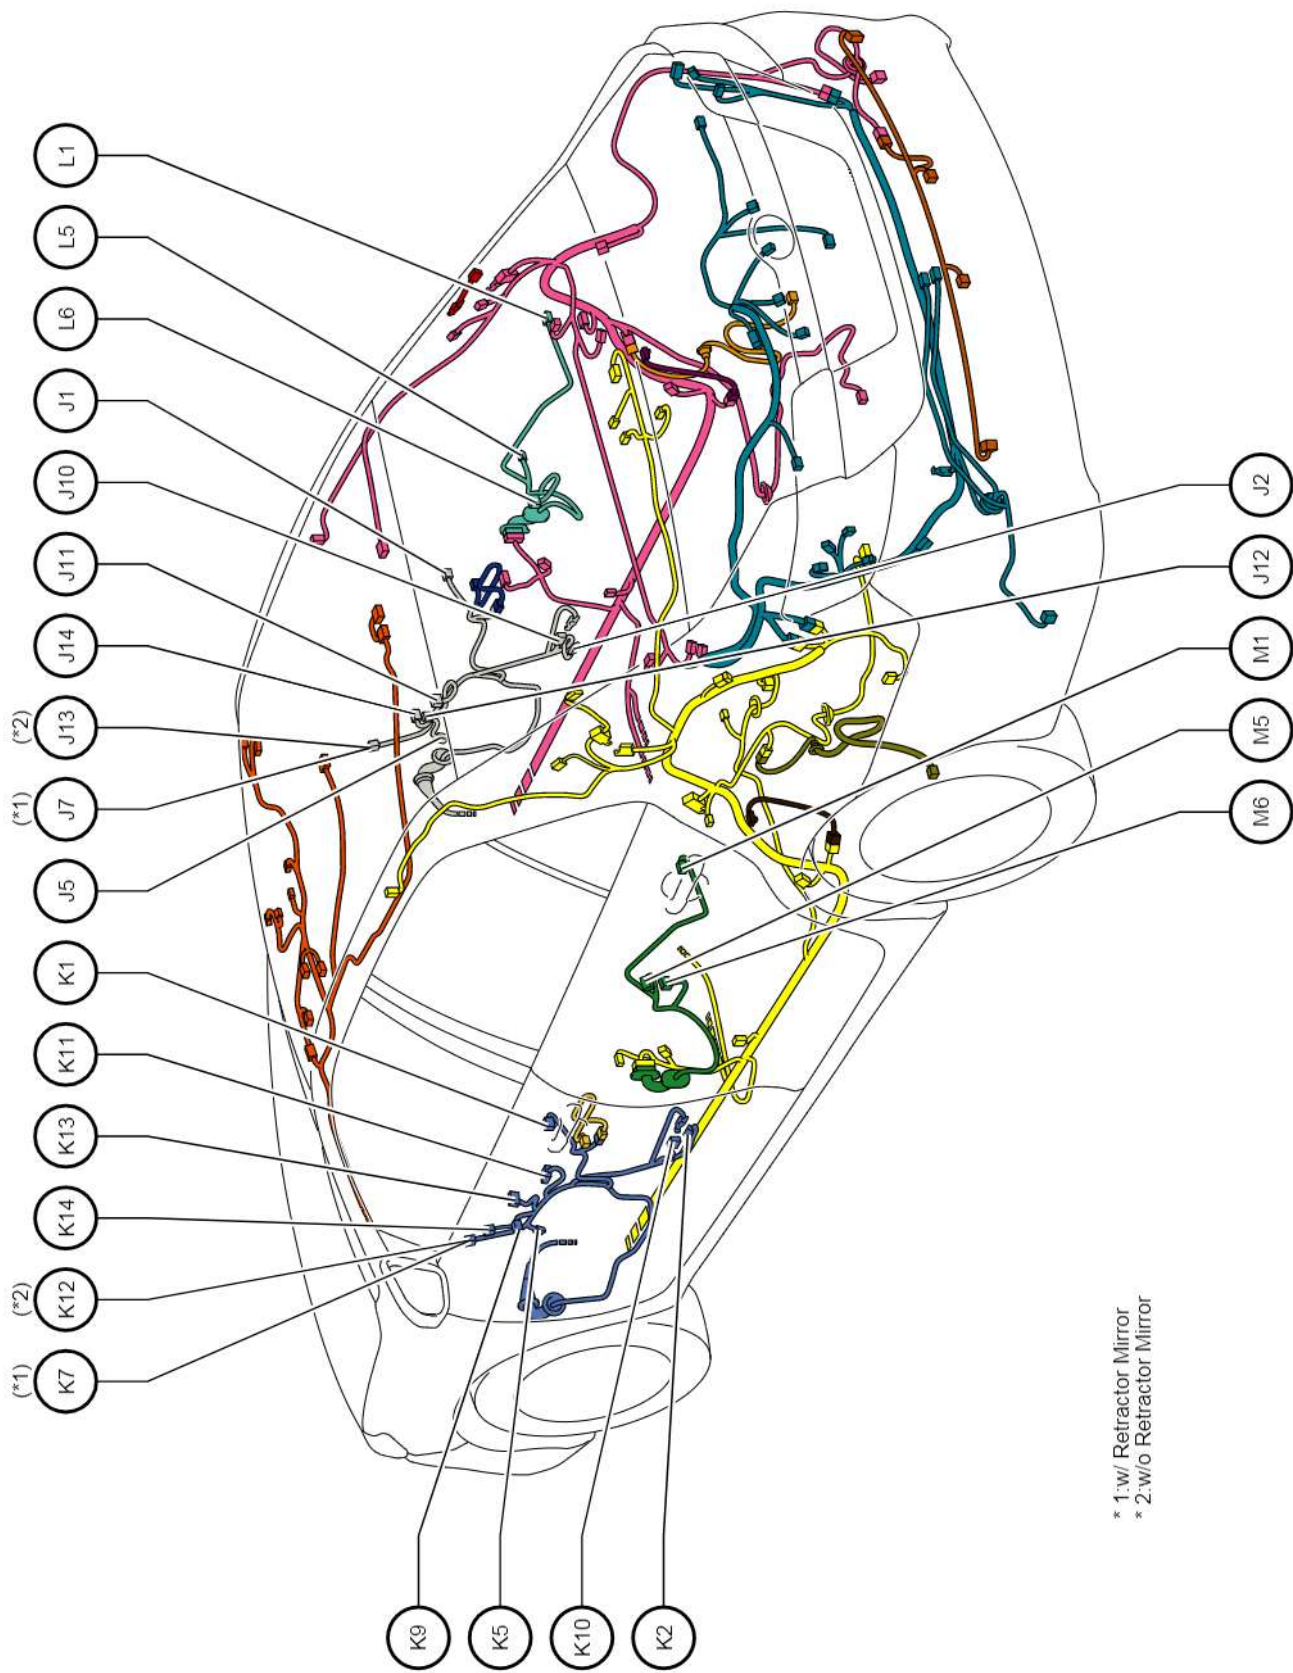 

Position of Parts in Body

J	1	Front Door Lock Assembly with Motor RH
J	2	Front Courtesy Light Assembly RH
J	5	Front No. 1 Speaker Assembly RH
J	7	Outer Rear View Mirror Assembly RH
J	10	Door Side Airbag Sensor RH
J	11	Front Power Window Regulator Switch Assembly RH
J	12	Door Control Switch Assembly
J	13	Outer Rear View Mirror Assembly RH
J	14	Front Power Window Regulator Motor Assembly RH
K	1	Front Door Lock Assembly with Motor LH
K	2	Front Courtesy Light Assembly LH
K	5	Front No. 1 Speaker Assembly LH
K	7	Outer Rear View Mirror Assembly LH
K	9	Front Power Window Regulator Motor Assembly LH
K	10	Door Side Airbag Sensor LH
K	11	Power Window Regulator Master Switch Assembly
K	12	Outer Rear View Mirror Assembly LH
K	13	Outer Mirror Switch Assembly
K	14	Junction Connector
L	1	Rear Door Lock Assembly with Motor RH
L	5	Rear Power Window Regulator Motor Assembly RH
L	6	Rear Power Window Regulator Switch Assembly RH
M	1	Rear Door Lock Assembly with Motor LH
M	5	Rear Power Window Regulator Motor Assembly LH
M	6	Rear Power Window Regulator Switch Assembly LH

                      Position of Parts in Body

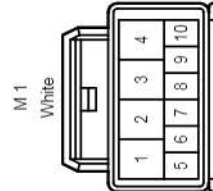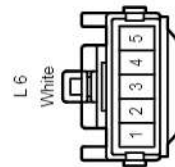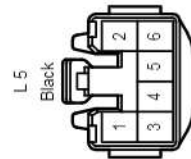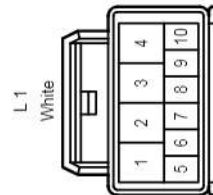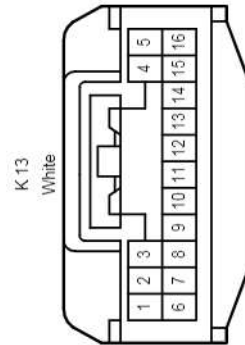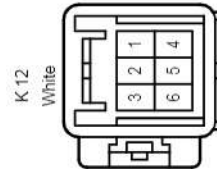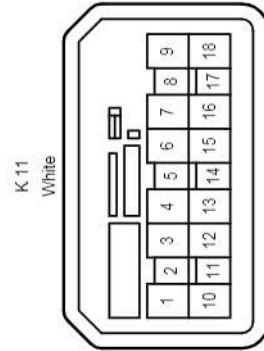
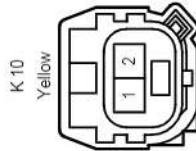
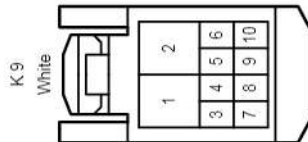
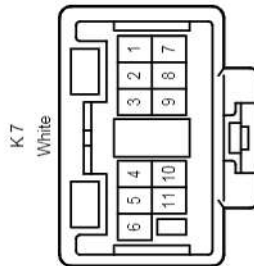


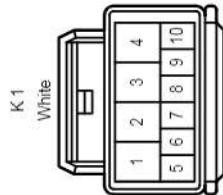
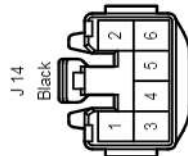
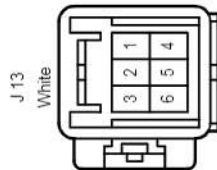
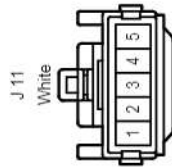
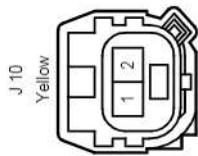
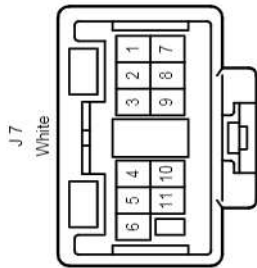


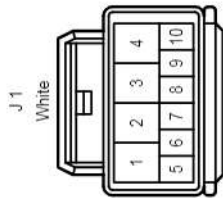


Position of Parts in Body




N 7	Front Door Courtesy Light Switch Assembly LH
N 8	Side Airbag Sensor Assembly LH
N 9	Front Seat Outer Belt Assembly LH
N 10	No. 2 Indoor Electrical Key Antenna Assembly
N 11	Fuel Suction Tube Assembly with Pump & Gage
N 15	Rear Door Courtesy Light Switch Assembly LH
N 23	No. 1 Luggage Compartment Light Assembly
N 26	Radio Setting Condenser (Center Stop Light)
N 27	Curtain Shield Airbag Assembly LH
N 28	Radio Setting Condenser (Rear Window Defogger)
N 29	Rear Window Defogger (Back Window Glass)
N 30	Fuel Pump Control ECU Assembly
N 33	No. 2 Side Airbag Sensor Assembly LH
N 35	Canister Pump Module
N 36	No. 3 Indoor Electrical Key Antenna Assembly
N 37	Center Stop Light Set
N 38	Rear Cross Traffic Alert Buzzer (Blind Spot Monitor Buzzer)
N 41	Tire Pressure Warning ECU and Receiver
N 42	Junction Connector

               Position of Parts in Body

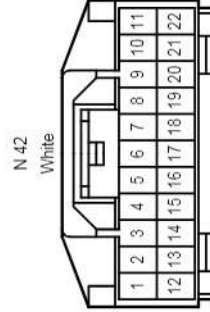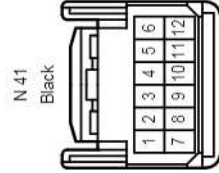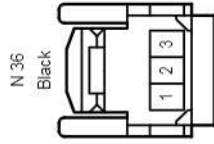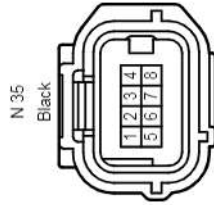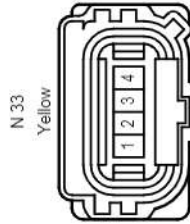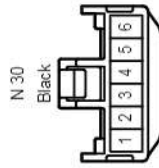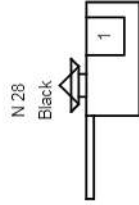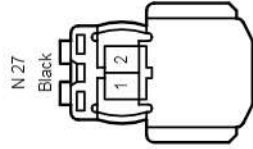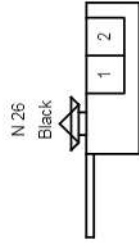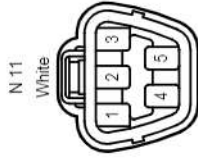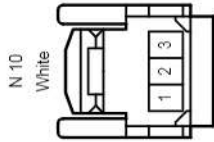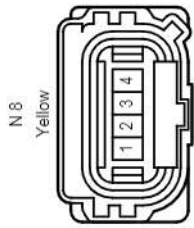

Position of Parts in Body

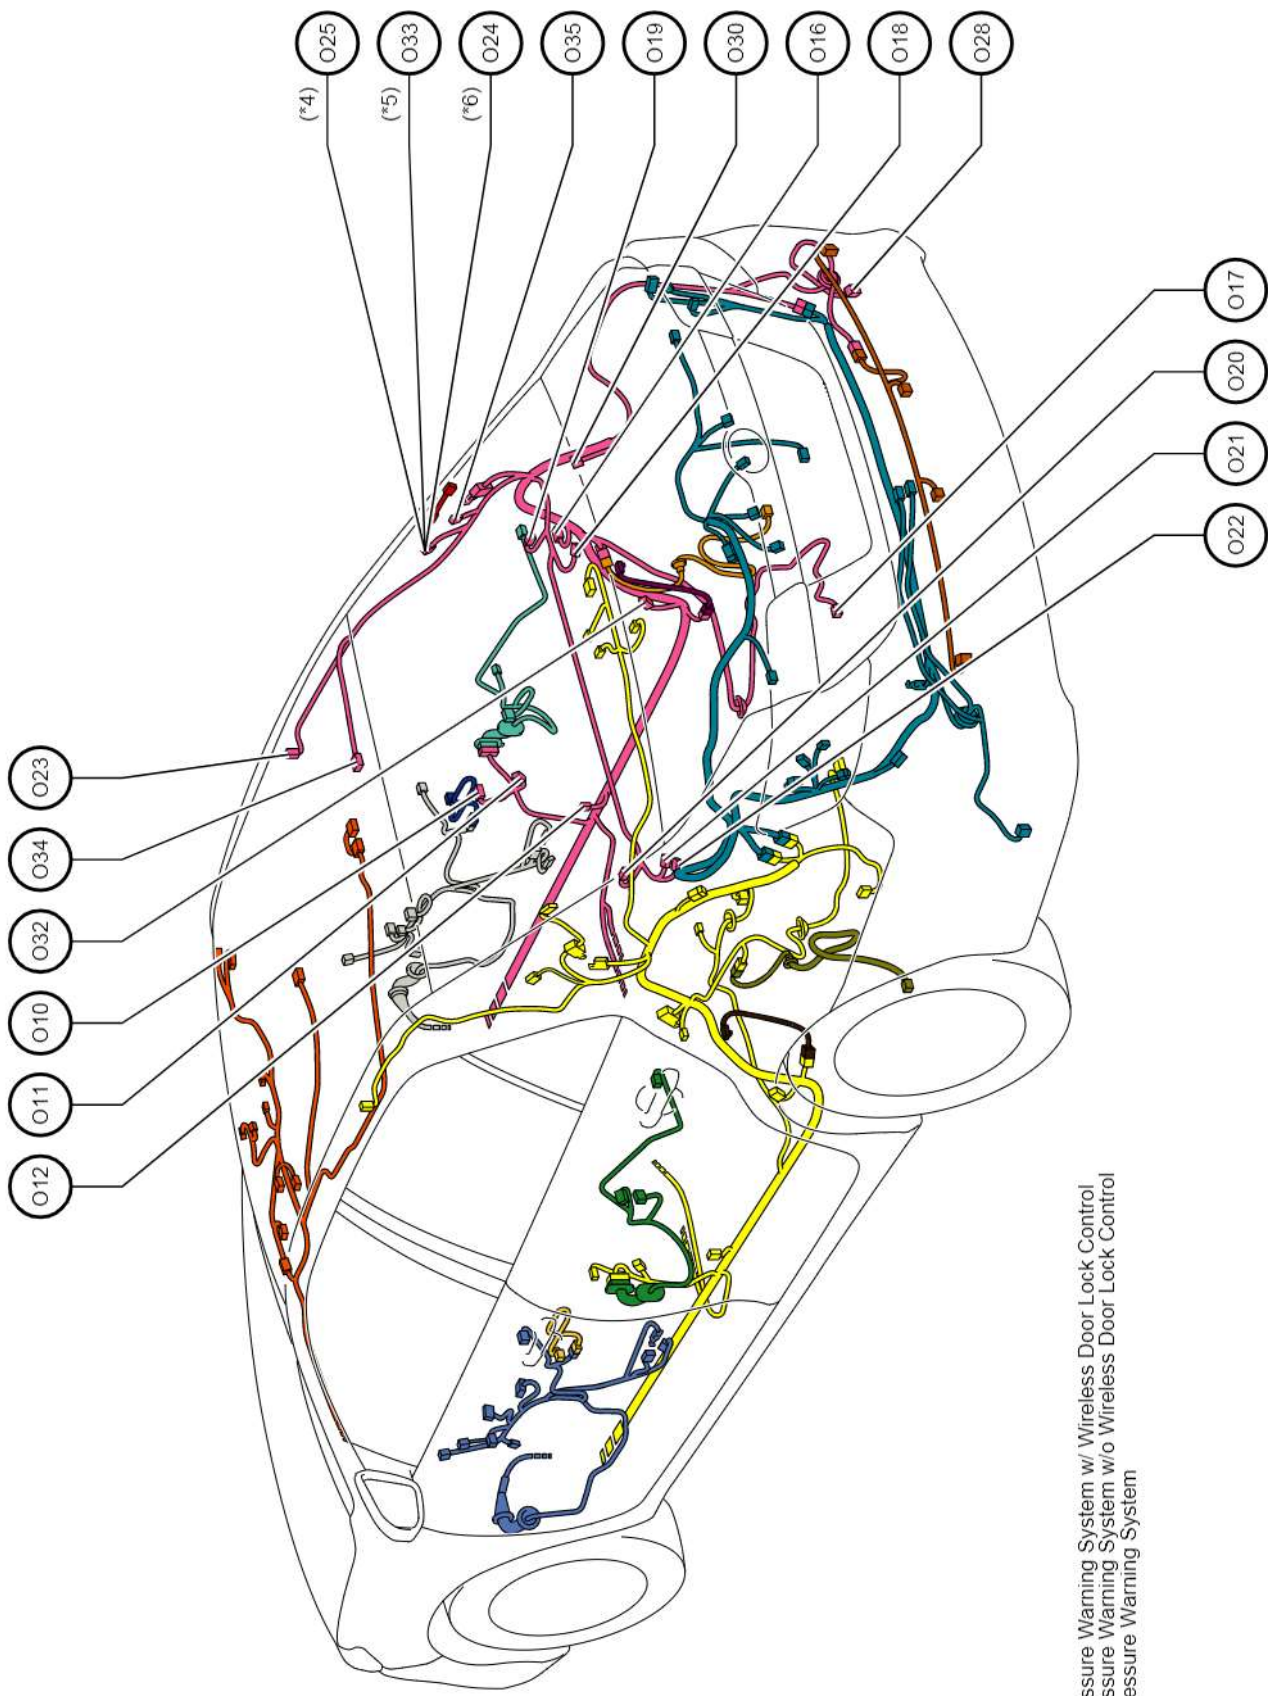 

* 4.w/ Tire Pressure Warning System w/ Wireless Door Lock Control
* 5.w/ Tire Pressure Warning System w/o Wireless Door Lock Control
* 6.w/o Tire Pressure Warning System

Position of Parts in Body

 
- O 10 Front Door Courtesy Light Switch Assembly RH
- O 11 Side Airbag Sensor Assembly RH
- O 12 Front Seat Outer Belt Assembly RH
- O 16 Rear Door Courtesy Light Switch Assembly RH
- O 17 Rear Height Control Sensor Sub-Assembly
- O 18 Rear Speaker Assembly RH
- O 19 Rear No. 2 Speaker Assembly RH
- O 20 Rear No. 2 Speaker Assembly LH
- O 21 Rear Speaker Assembly LH
- O 22 Woofer Speaker (Rear Speaker Assembly)
- O 23 Curtain Shield Airbag Assembly RH
- O 24 Door Control Receiver
- O 25 Tire Pressure Warning ECU and Receiver (Door Control and Tire Pressure Monitoring System Receiver Assembly)
- O 28 Blind Spot Monitor Sensor RH
- O 30 Junction Connector
- O 32 No. 2 Side Airbag Sensor Assembly RH
- O 33 Tire Pressure Warning ECU and Receiver
- O 34 Roof Antenna Assembly
- O 35 No. 3 Antenna Cord Sub-Assembly

Position of Parts in Body


O 10
Black



O 11
Yellow

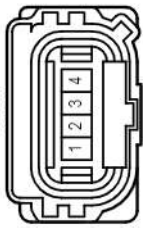


O 12
Black

 


O 16
Black



 
O 17
Black

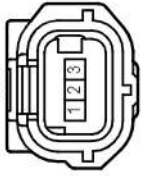


O 18
Black

 


O 19
White

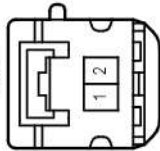 


O 20
White

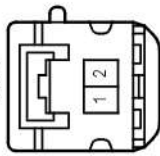 


O 21
Black

 


O 22
Black

 


O 23
Black

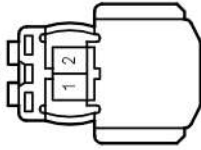 


O 24
White

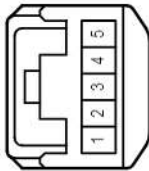 


O 25
White

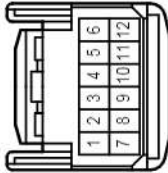 

O 28
Black

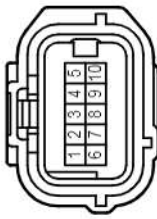 


O 30
Black

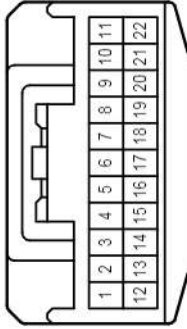 


O 32
Yellow



 
O 33
White

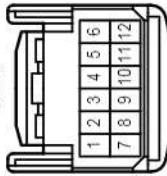

O 34
Blue




















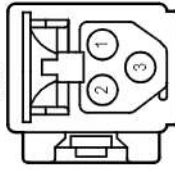 


O 35
Gray





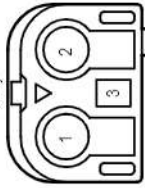 


P	1	Rear Window Defogger (Back Window Glass)
S	4	Sliding Roof Control ECU (Sliding Roof Drive Gear Sub-Assembly)
S	5	Vanity Light Assembly LH
S	6	Visor Assembly LH
S	8	Vanity Light Assembly RH
S	9	Visor Assembly RH
S	12	Roof Console Box Assembly
S	13	No. 1 Room Light Assembly
S	14	Spot Light Assembly LH
S	15	Spot Light Assembly RH
S	16	Option Connector (Automatic Glare-Resistant EC Mirror)
S	17	Inner Rear View Mirror Assembly
S	18	Junction Connector
S	19	Junction Connector
T	2	License Plate Light Assembly RH
T	3	Luggage Compartment Door Lock Assembly
T	4	Luggage Door Opening Switch Assembly
T	5	License Plate Light Assembly LH
T	6	Rear Television Camera Assembly
T	8	Rear Combination Light Assembly LH
T	9	Rear Combination Light Assembly LH
T	10	Blind Spot Monitor Sensor LH
T	11	Rear Electrical Key Antenna
T	12	Rear Combination Light Assembly RH
T	13	Rear Combination Light Assembly RH
T	14	Rear Electrical Key Antenna
T	16	Junction Terminal
T	17	Rear Light Assembly RH
T	18	Rear Light Assembly LH
T	19	Rear Combination Light Assembly LH
T	20	Rear Combination Light Assembly RH
T	21	Junction Connector
T	22	Junction Connector
U	1	Rear No. 1 Ultrasonic Sensor LH
U	2	Rear No. 1 Ultrasonic Sensor Center LH
U	3	Rear No. 1 Ultrasonic Sensor Center RH
U	4	Rear No. 1 Ultrasonic Sensor RH
V	1	Front Door Outside Handle Assembly RH
W	1	Front Door Outside Handle Assembly LH

                    
Position of Parts in Body

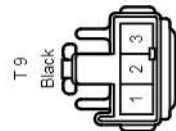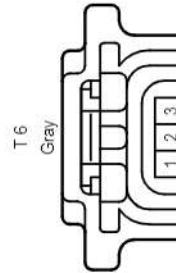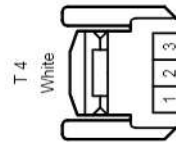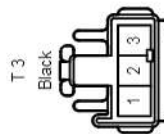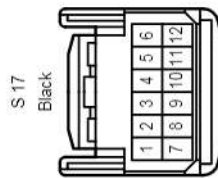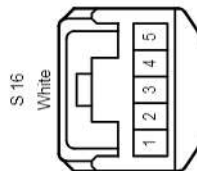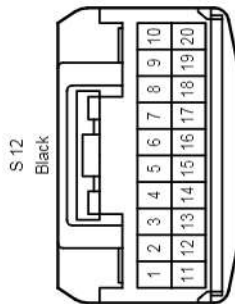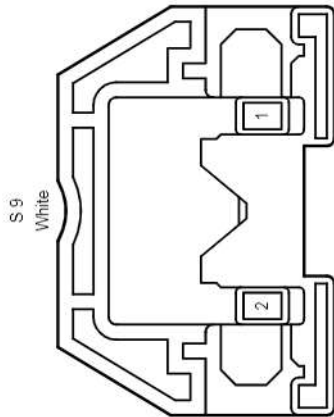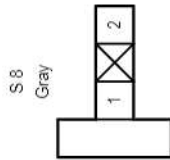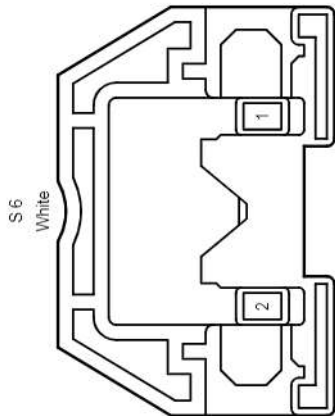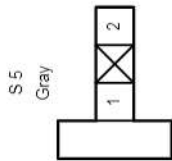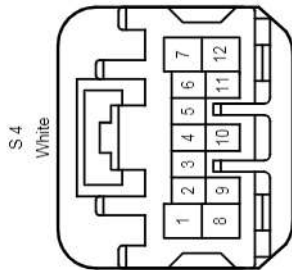

Position of Parts in Body

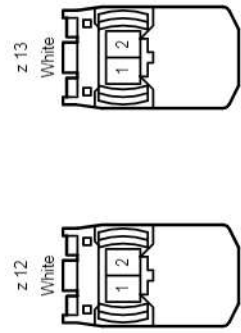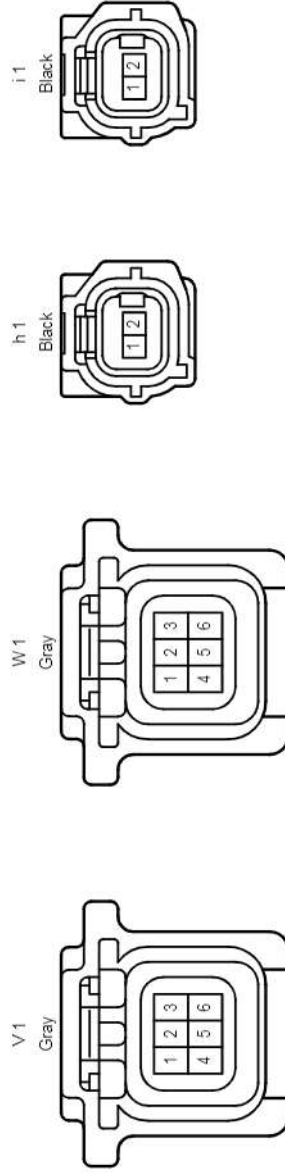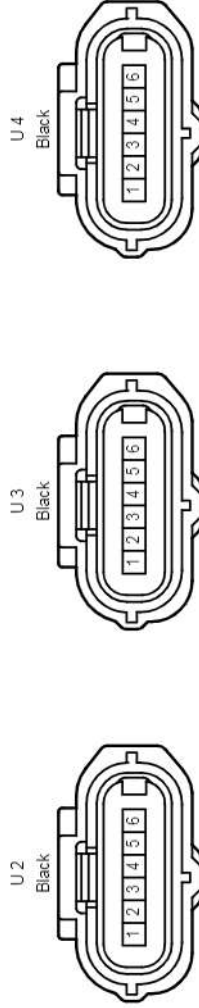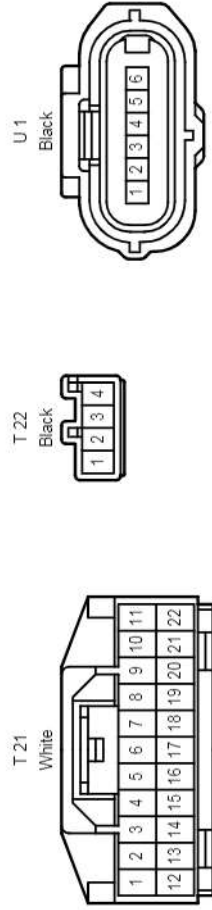    
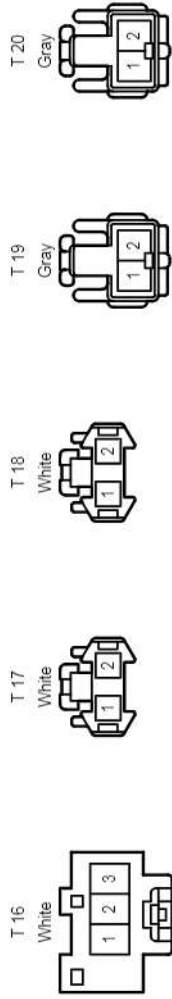 


Wire and Wire in Body


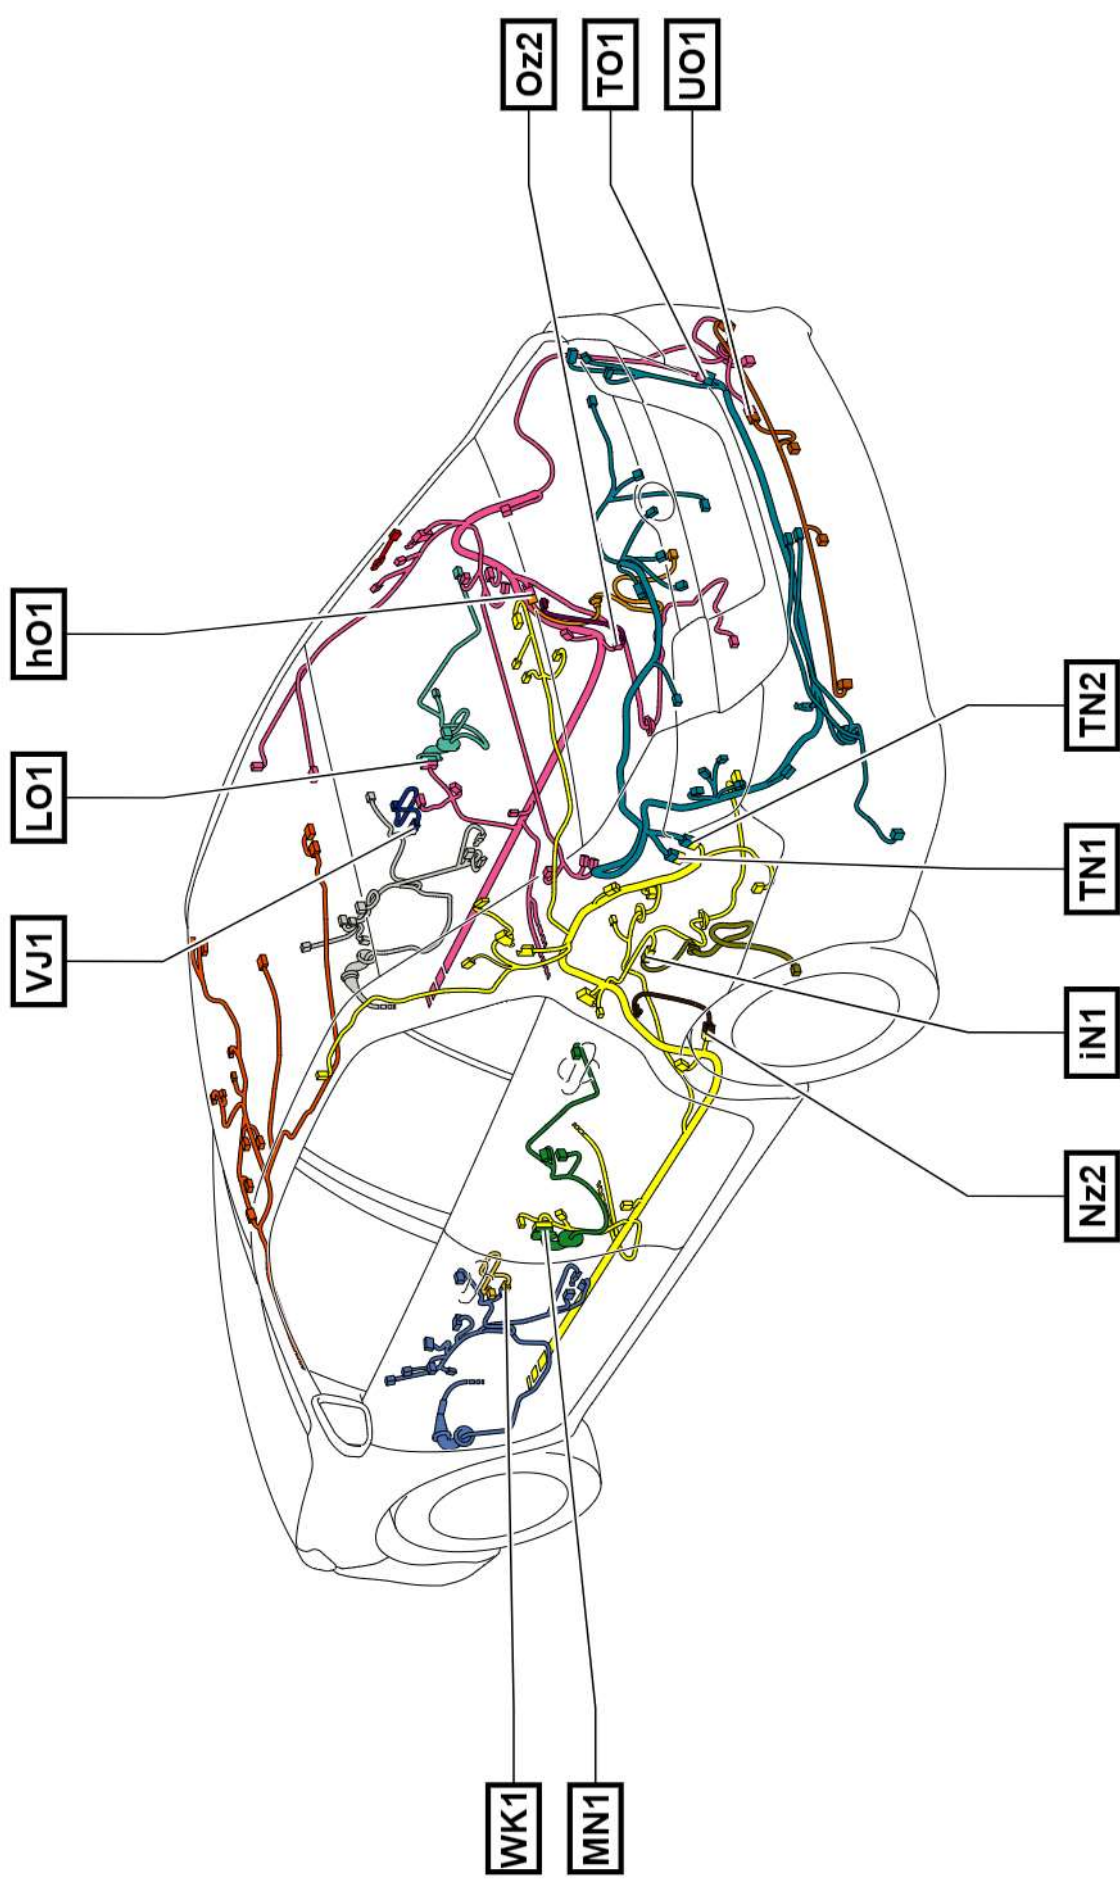 


Wire and Wire in Body

  
LO1
White

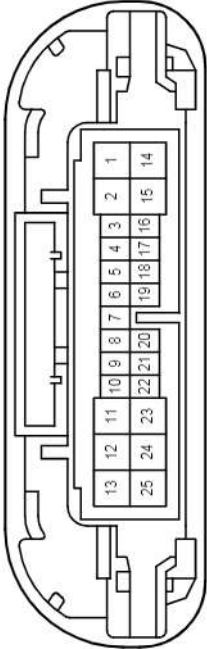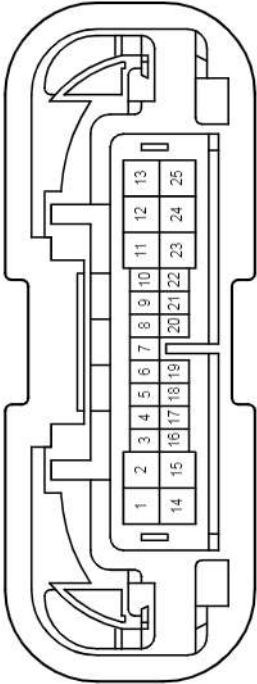

MN1
White

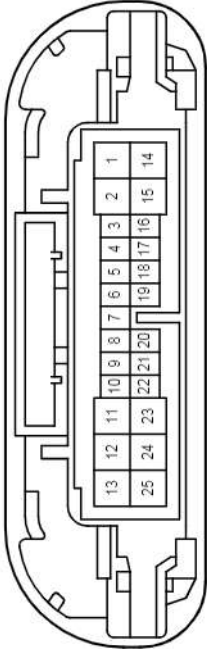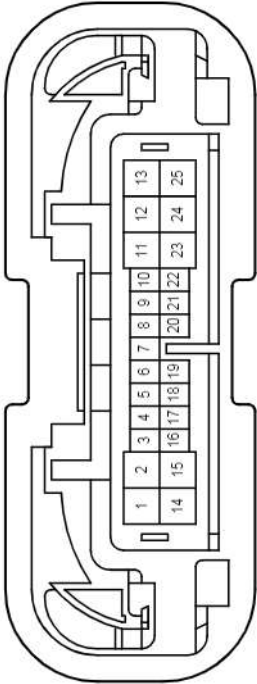  


Nz2
Yellow

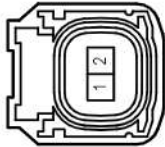 

White




 
Oz2
Yellow

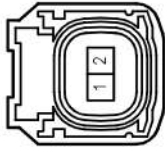



White



  
TN1
White

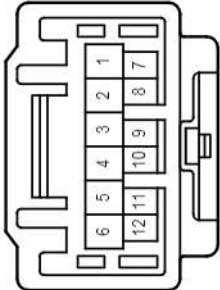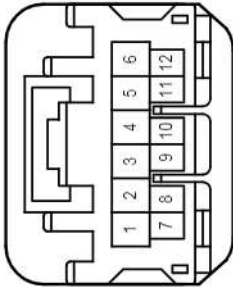



TN2
White

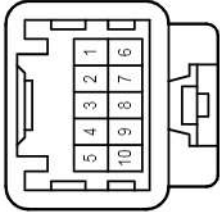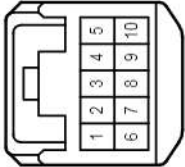  











Wire and Wire in Body
















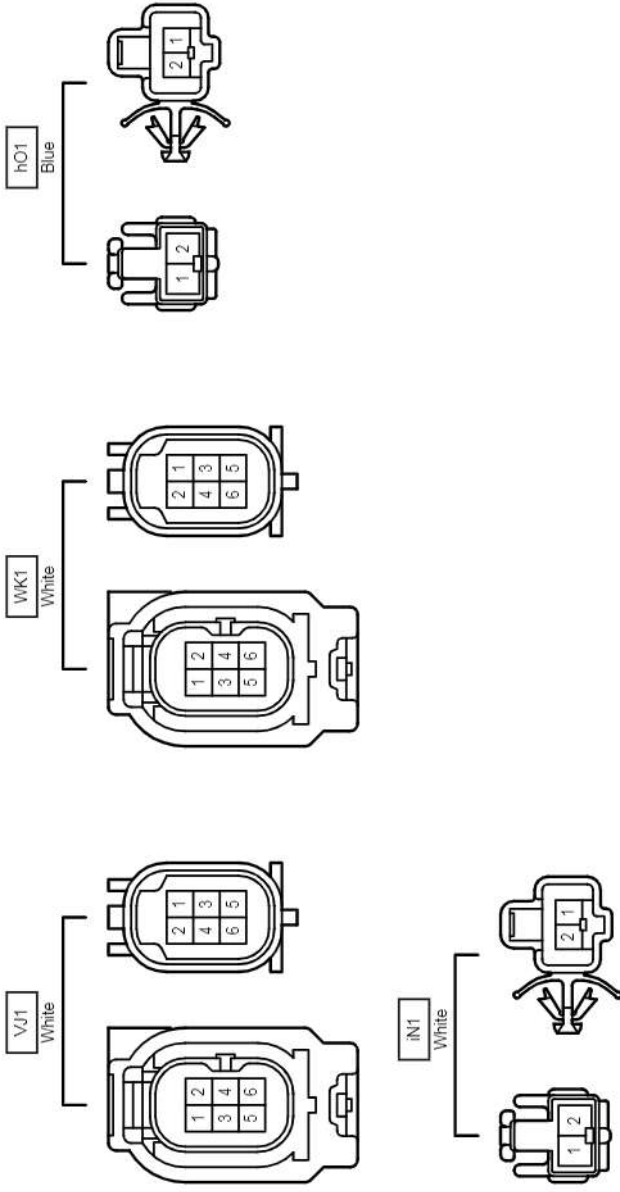 


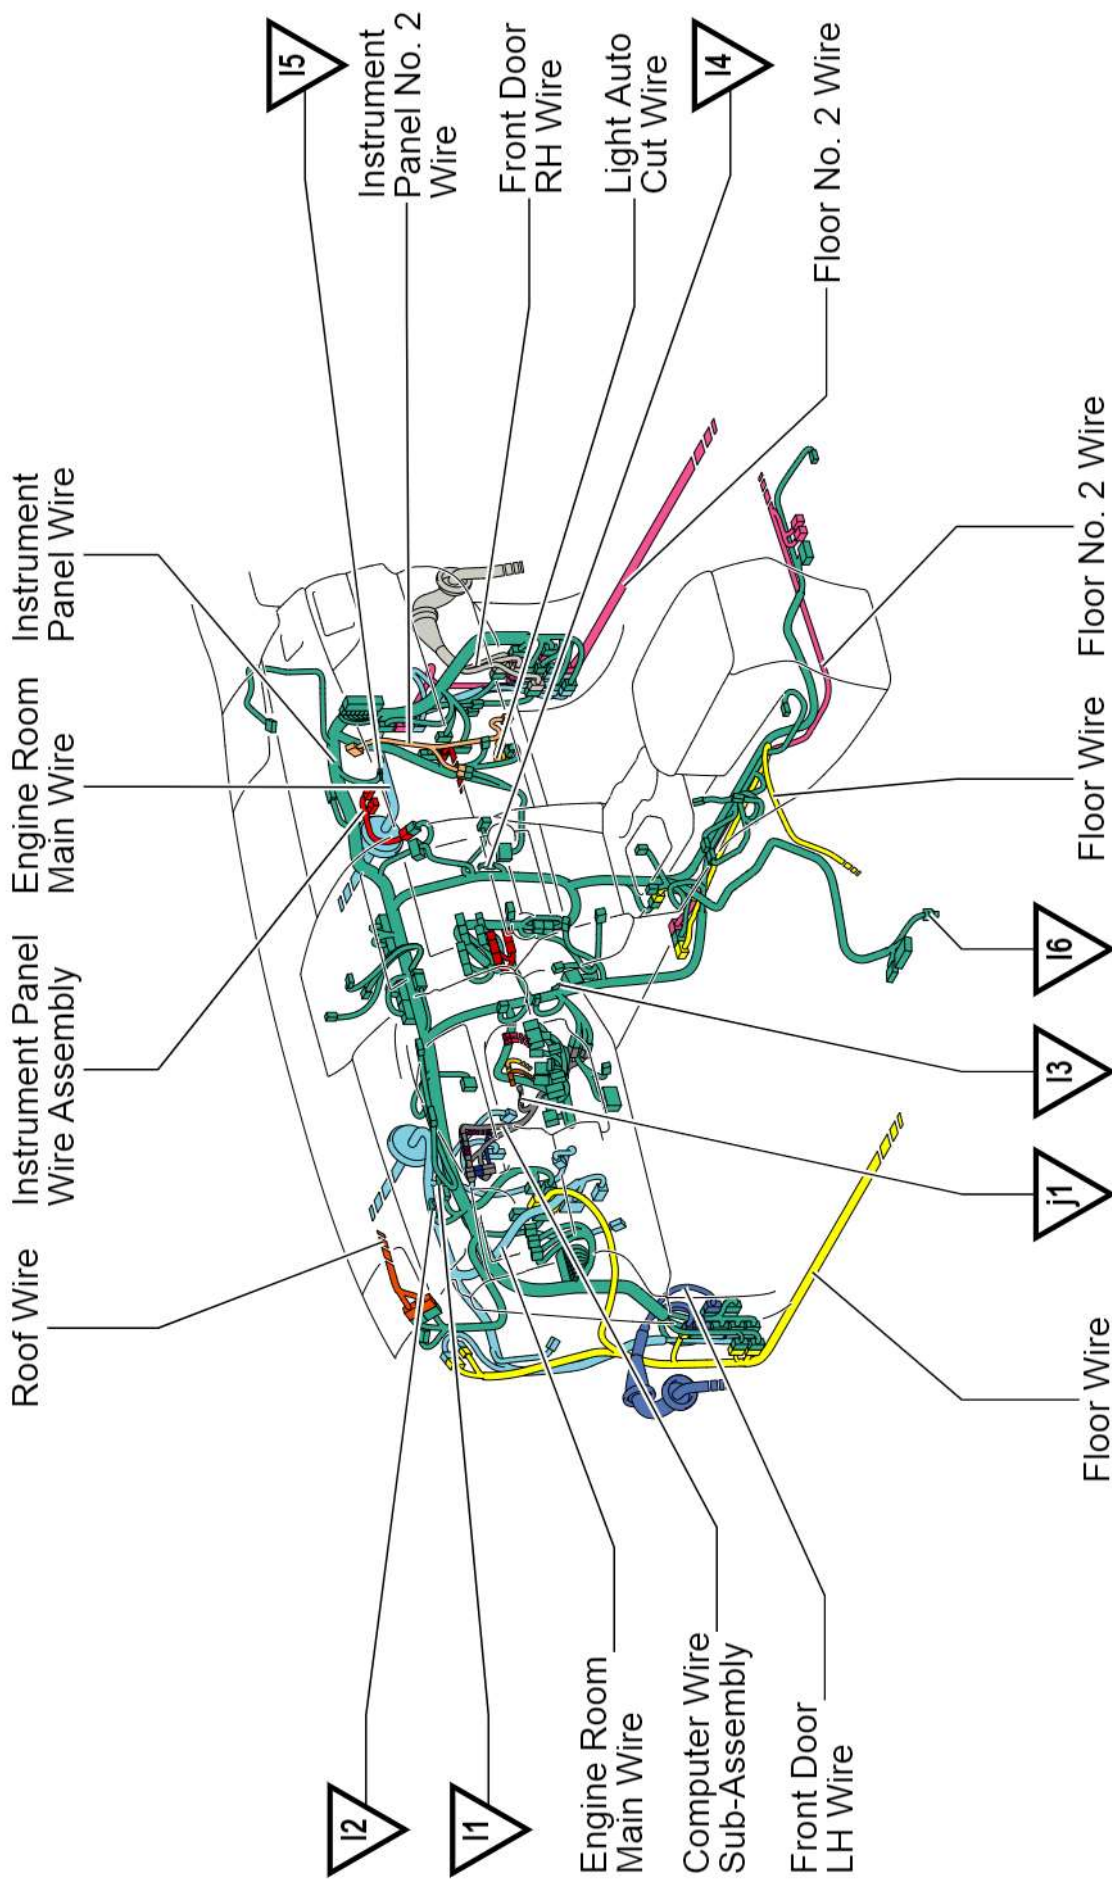 

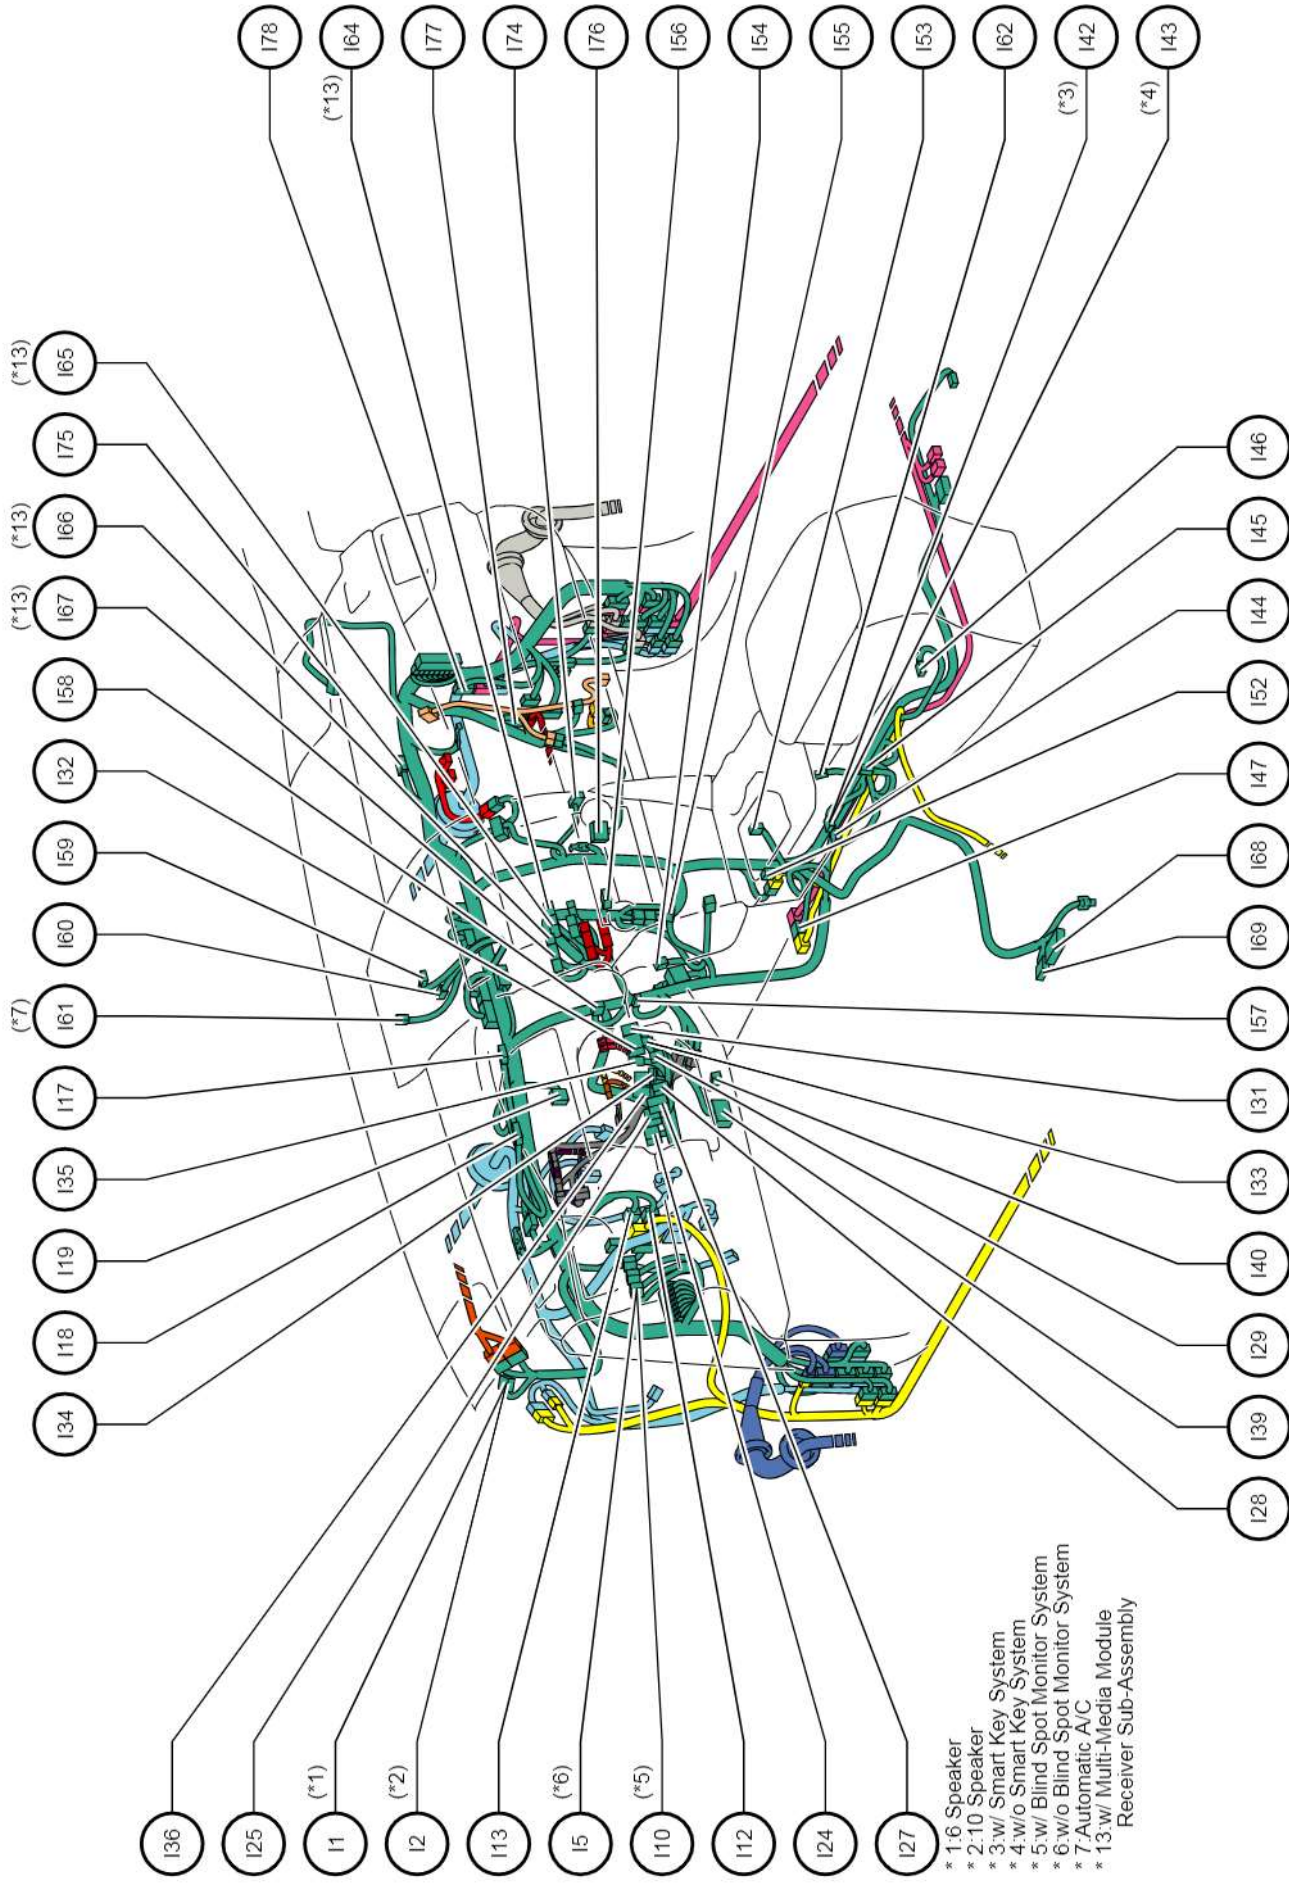 


1	Front No. 2 Speaker Assembly LH
2	Front No. 2 Speaker Assembly LH
5	Back Sonar or Clearance Sonar Switch Assembly
10	Blind Spot Monitor Main Switch (Warning Canceling Switch Assembly)
12	Main Body ECU
13	Main Body ECU
17	Combination Meter Assembly
18	Combination Meter Assembly
19	Transponder Key ECU Assembly
24	Steering Lock Actuator Assembly
25	Headlight Dimmer Switch Assembly
27	Spiral Cable Sub-Assembly
28	Spiral Cable Sub-Assembly
29	Steering Sensor
31	Windshield Wiper Switch Assembly
32	Windshield Wiper Switch Assembly
33	Un-Lock Warning Switch Assembly
34	Transponder Key Amplifier
35	Key Inter Lock Solenoid
36	Ignition or Starter Switch Assembly
39	Data Link Connector 3
40	Lower No. 1 Instrument Panel Airbag Assembly
42	Shift Lock Control ECU (Lower Shift Lever Assembly)
43	Shift Lock Control ECU (Lower Shift Lever Assembly)
44	Transmission Control Switch (Lower Shift Lever Assembly)
45	Rear Power Outlet Socket Assembly
46	No. 1 Indoor Electrical Key Antenna Assembly
47	Airbag Sensor Assembly
52	Seat Heater Switch LH
53	Seat Heater Switch RH
54	No. 1 Clearance Warning Buzzer
55	Front Power Outlet Socket Assembly
56	A/C Control Assembly
57	Cooler (Room Temperature Sensor) Thermistor
58	Engine Switch
59	Clock Assembly
60	Front No. 3 Speaker Assembly
61	Automatic Light Control Sensor
62	Shift Position Indicator (Indicator Light Wire Sub-Assembly)
64	Multi-Media Module Receiver Sub-Assembly
65	Multi-Media Module Receiver Sub-Assembly
66	Multi-Media Module Receiver Sub-Assembly
67	Multi-Media Module Receiver Sub-Assembly
68	Stereo Component Amplifier Assembly

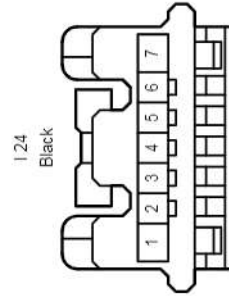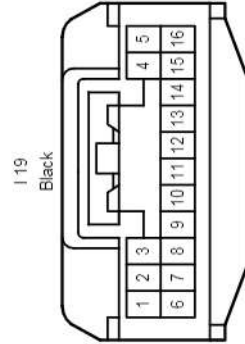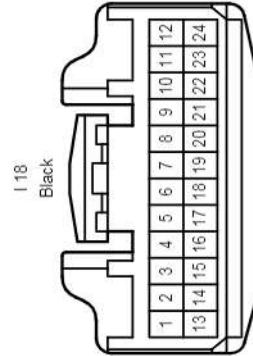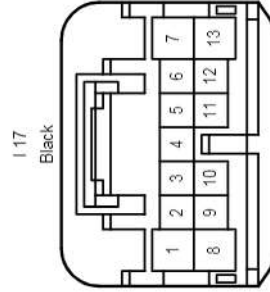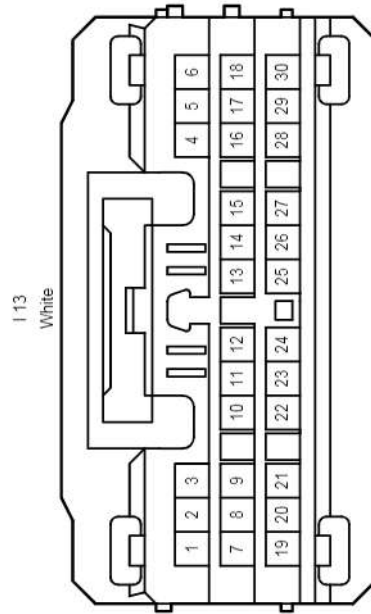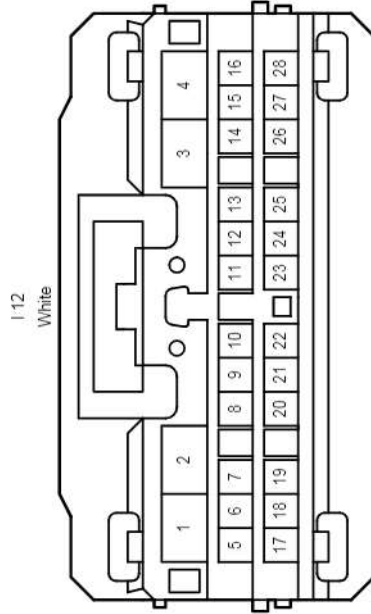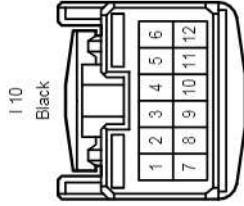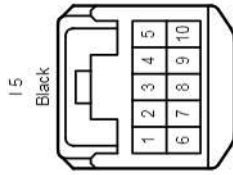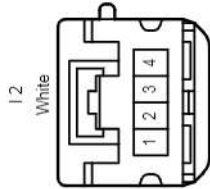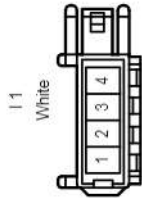          

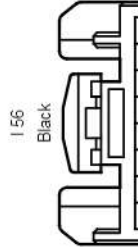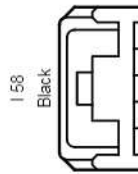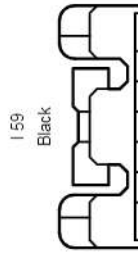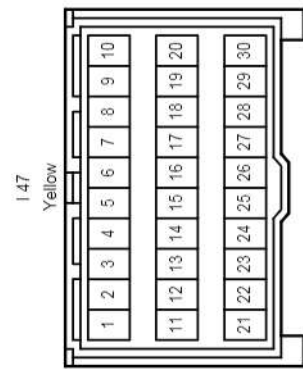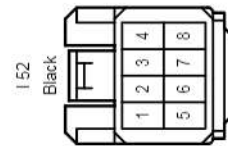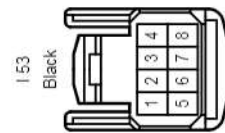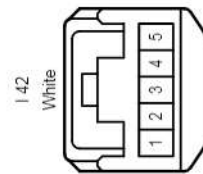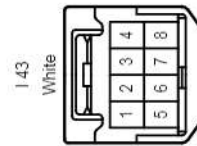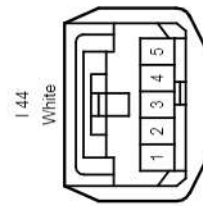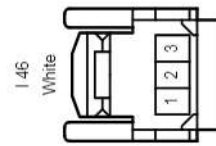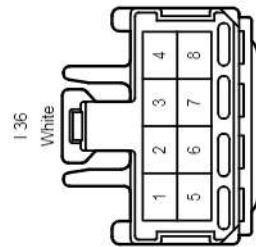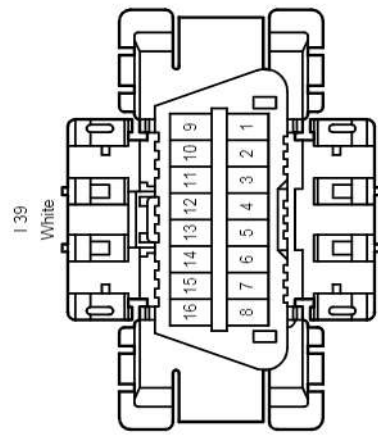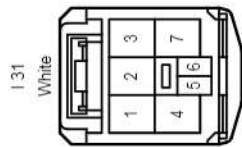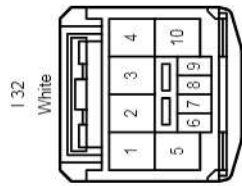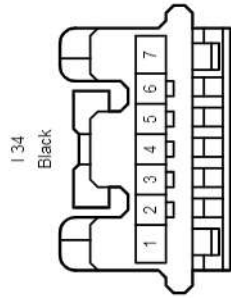                


I 66

 White

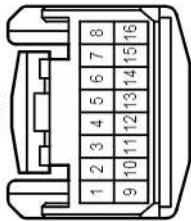


I 67

 White

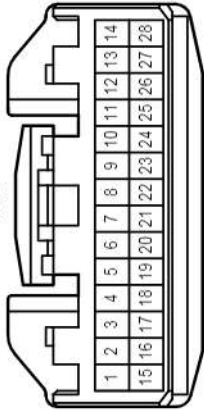


I 68

 White

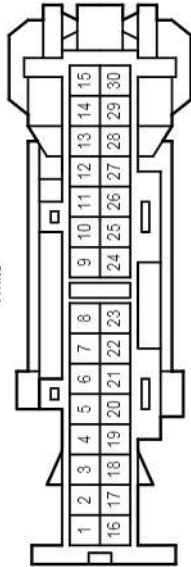


I 69

 White

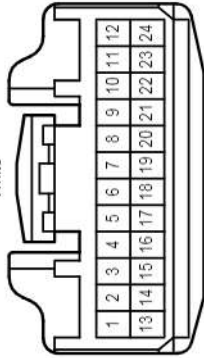

I 74

 Black




I 75

Black




I 76

 Black

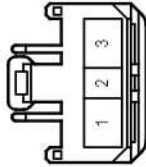


I 77

 White

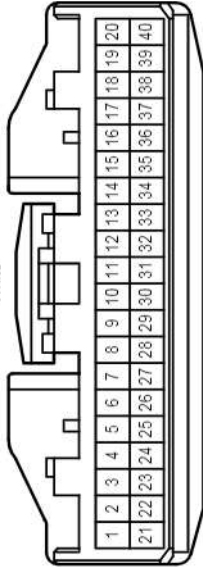


I 78

 White

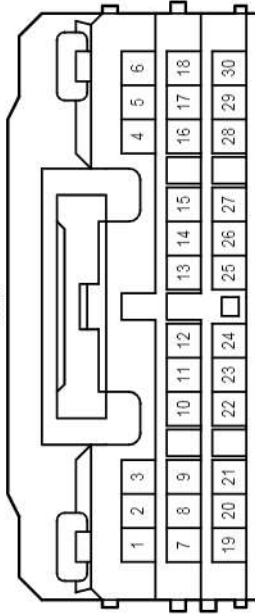


 Position of Parts in Instrument Panel <Before Dec. 2013 Production>

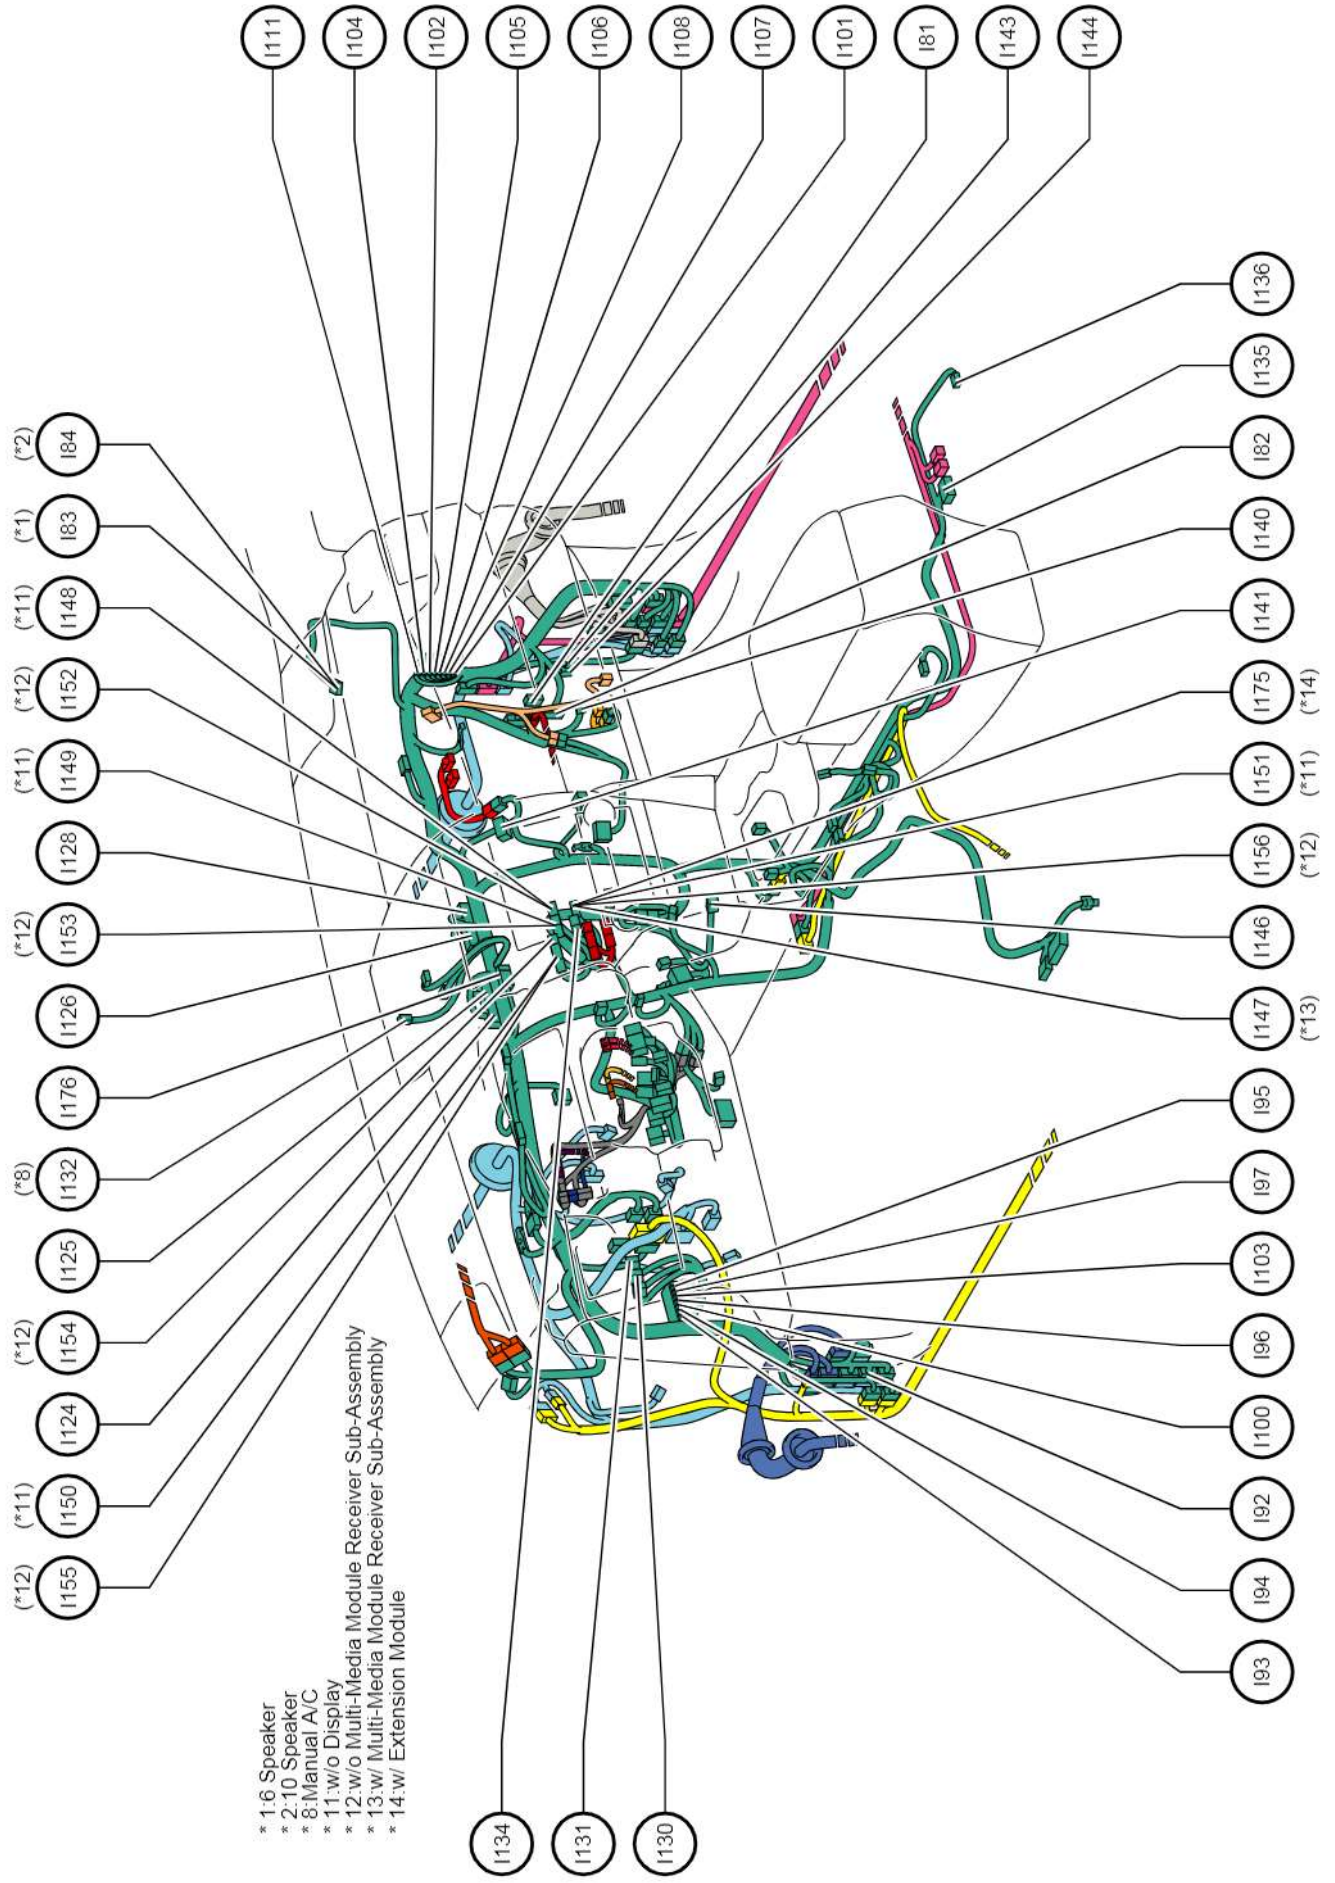


I 81	Network Gateway ECU	
I 82	Clearance Warning ECU Assembly	
I 83	Front No. 2 Speaker Assembly RH	
I 84	Front No. 2 Speaker Assembly RH	
I 92	Junction Connector	
I 93	Junction Connector	
I 94	Junction Connector	
I 95	Junction Connector	
I 96	Junction Connector	
I 97	Junction Connector	
I 100	Junction Connector	
I 101	Junction Connector	
I 102	Junction Connector	
I 103	Junction Connector	
I 104	Junction Connector	
I 105	Junction Connector	
I 106	Junction Connector	
I 107	Junction Connector	
I 108	Junction Connector	
I 111	Junction Connector	
I 124	Junction Connector	
I 125	Junction Connector	
I 126	Junction Connector	
I 128	Junction Connector	
I 130	VSC Off Switch	
I 131	Headlight Leveling Switch	
I 132	Automatic Light Control Sensor	
I 134	Radio & Display Receiver Assembly	
I 135	DCM (Telematics Transceiver)	
I 136	Back-Up Battery (Mayday Battery)	
I 140	Lower No. 2 Instrument Panel Airbag Assembly	
I 141	Remote Engine Starter	
I 143	Check Connector (Remote Engine Starter)	
I 144	Check Connector (Remote Engine Starter)	
I 146	No. 1 Stereo Jack Adapter Assembly	
I 147	Multi-Media Module Receiver Sub-Assembly	
I 148	Radio Receiver Assembly	
I 149	Radio Receiver Assembly	
I 150	Radio Receiver Assembly	
I 151	Radio Receiver Assembly	
I 152	Radio & Display Receiver Assembly	
I 153	Radio & Display Receiver Assembly	
I 154	Radio & Display Receiver Assembly	
I 155	Radio & Display Receiver Assembly	

 I 81
White

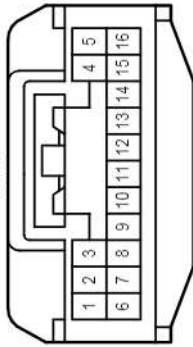


I 82
Black

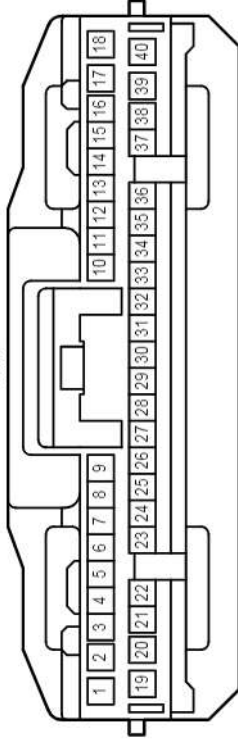 


I 83
White



 
I 84
White

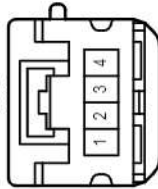

I 92
Gray

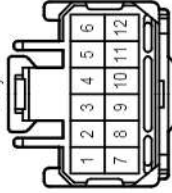 

I 93
White

 


I 94
White




I 95
White



 
I 96
White




I 97
White

 


I 100
White

 

I 101
White

 

I 102
White

 

I 103
White



I 104
White



 
I 105
White




I 106
White




I 107
White




I 108
White

 


I 111
White

 


I 124
White

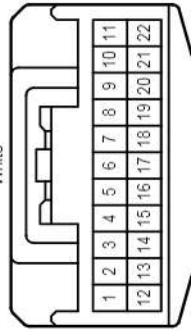 

I 125
Gray

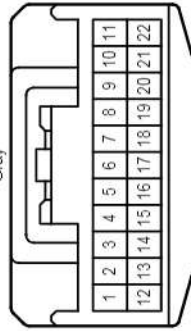 

I 126
White

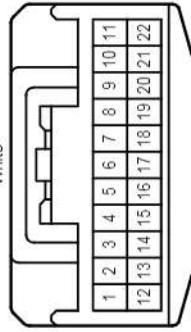 

I 128
White



I 130
Black



 
I 131
Black




I 132
White




I134
White

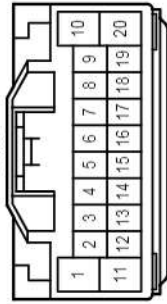


I135
White

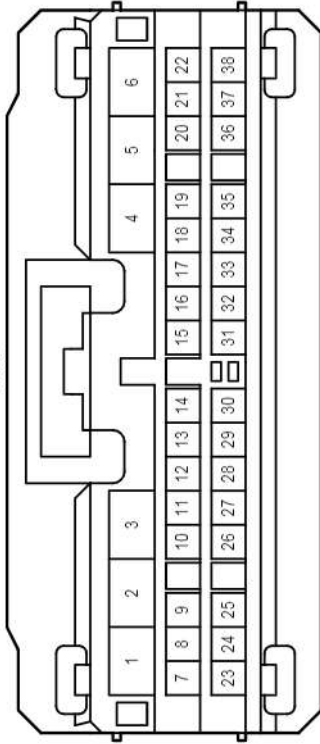 


I136
White

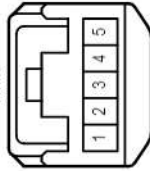 

I140
Black

 

I141
White

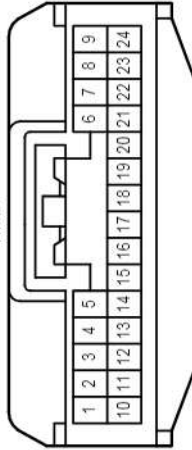 


I143
White




I144
White



 
I145
Black

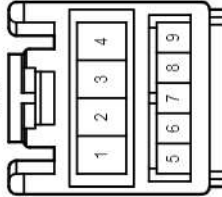

I147
Gray

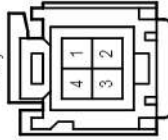 


I148
White

 


I149
White



 I150
White

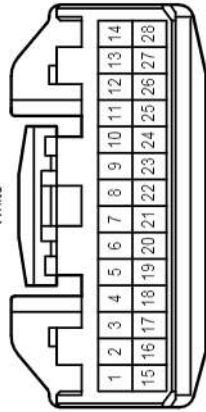


I151
Gray

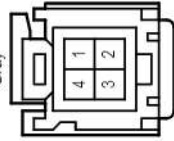 

I152
White



 I153
White

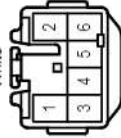

I154
White



I155
White



 
I156
Gray



I175
Gray




Position of Parts in Instrument Panel <Before Dec. 2013 Production>

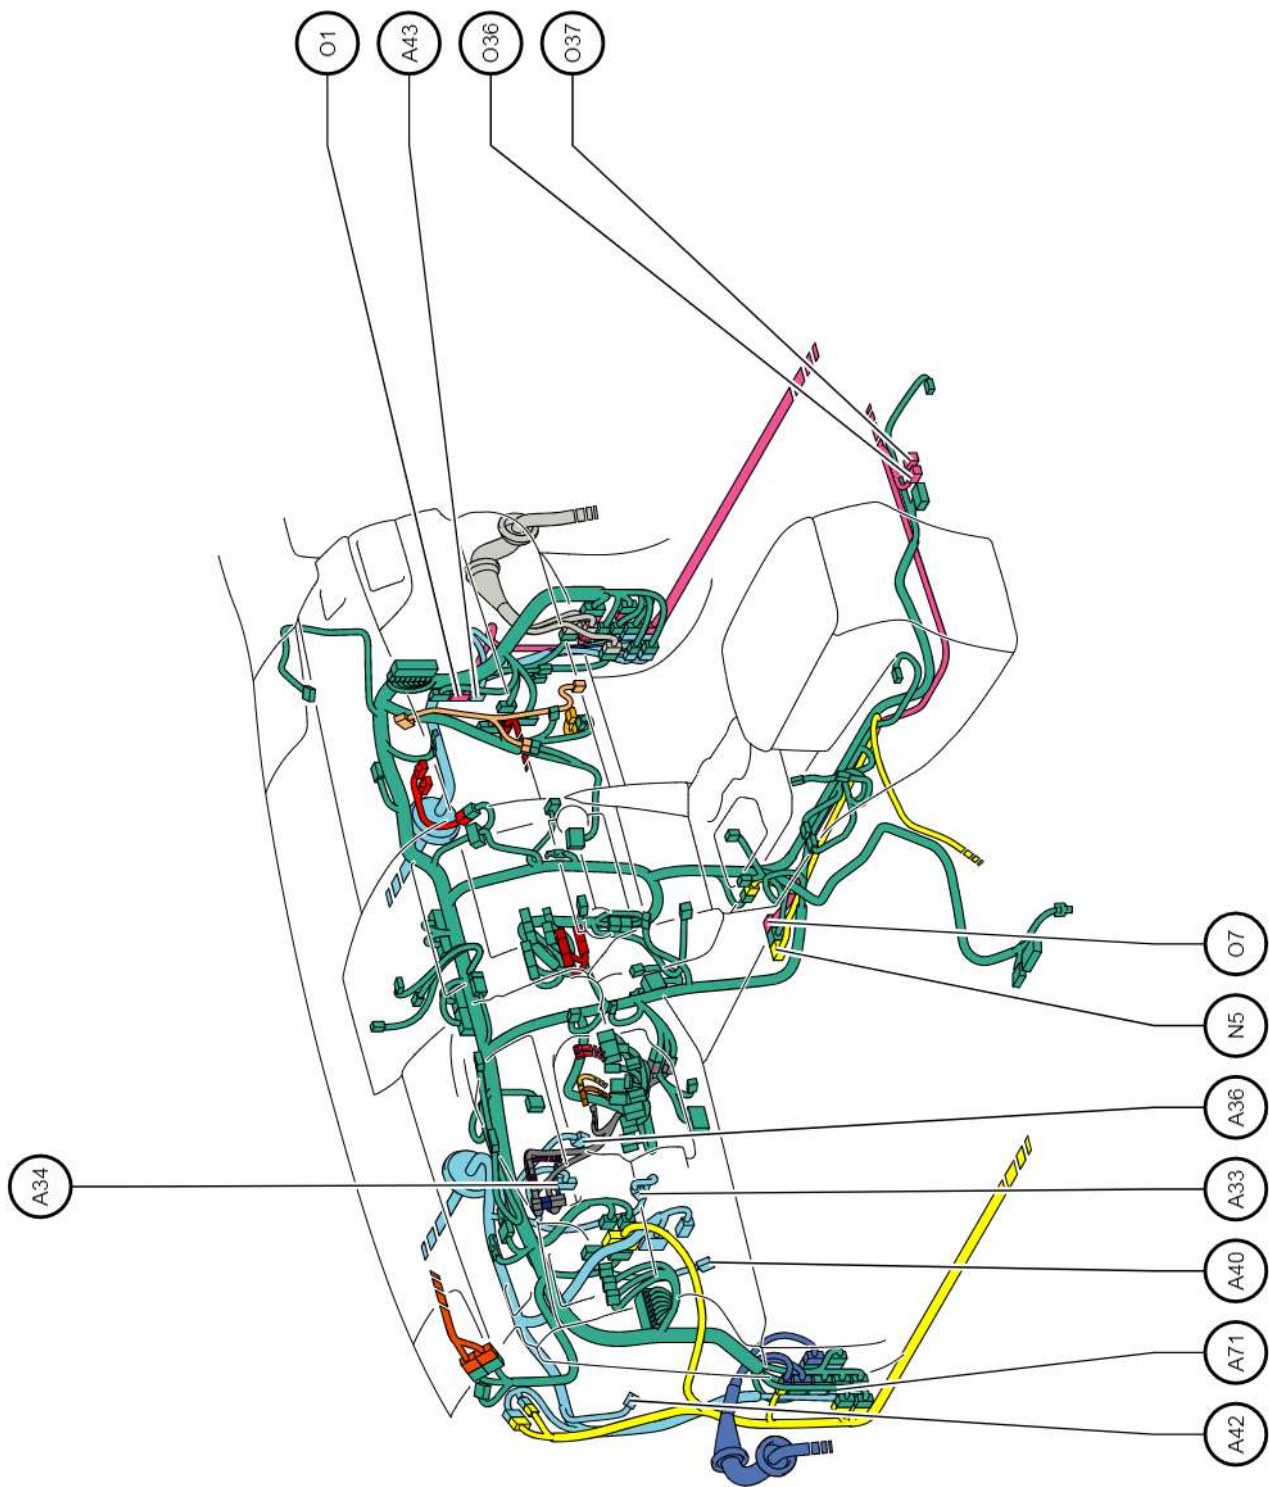


A 33	Stop Light Switch Assembly
A 34	Headlight Leveling ECU Assembly
A 36	Accelerator Pedal Sensor Assembly
A 40	Brake Pedal Load Sensing Switch (Brake Pedal Support Assembly)
A 42	Parking Brake Switch Assembly
A 43	Certification ECU
A 71	Junction Connector
N 5	Airbag Sensor Assembly
O 1	Certification ECU
O 7	Airbag Sensor Assembly
O 36	DCM (Telematics Transceiver)
O 37	DCM (Telematics Transceiver)

 
A 33
White

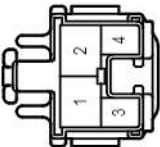


A 34
White

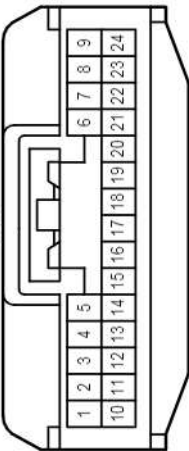 

A 36
Black

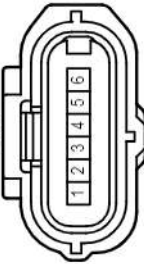 


A 40
Gray

 


A 42
Black



 
A 43
White

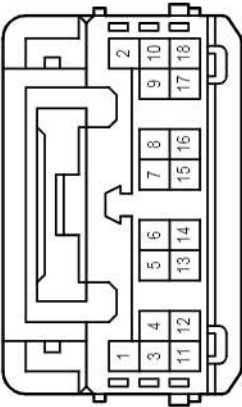


A 71
Gray

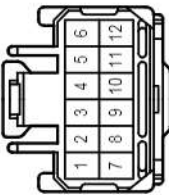 


N 5
Yellow

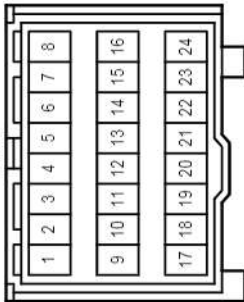 

O 1
White

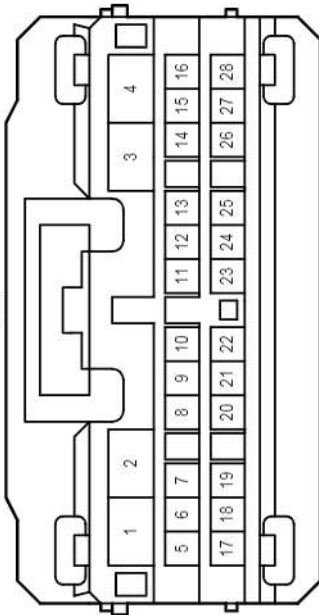 

O 7
Yellow

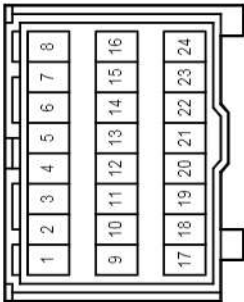 


O 36
Blue












 
O 37
Gray







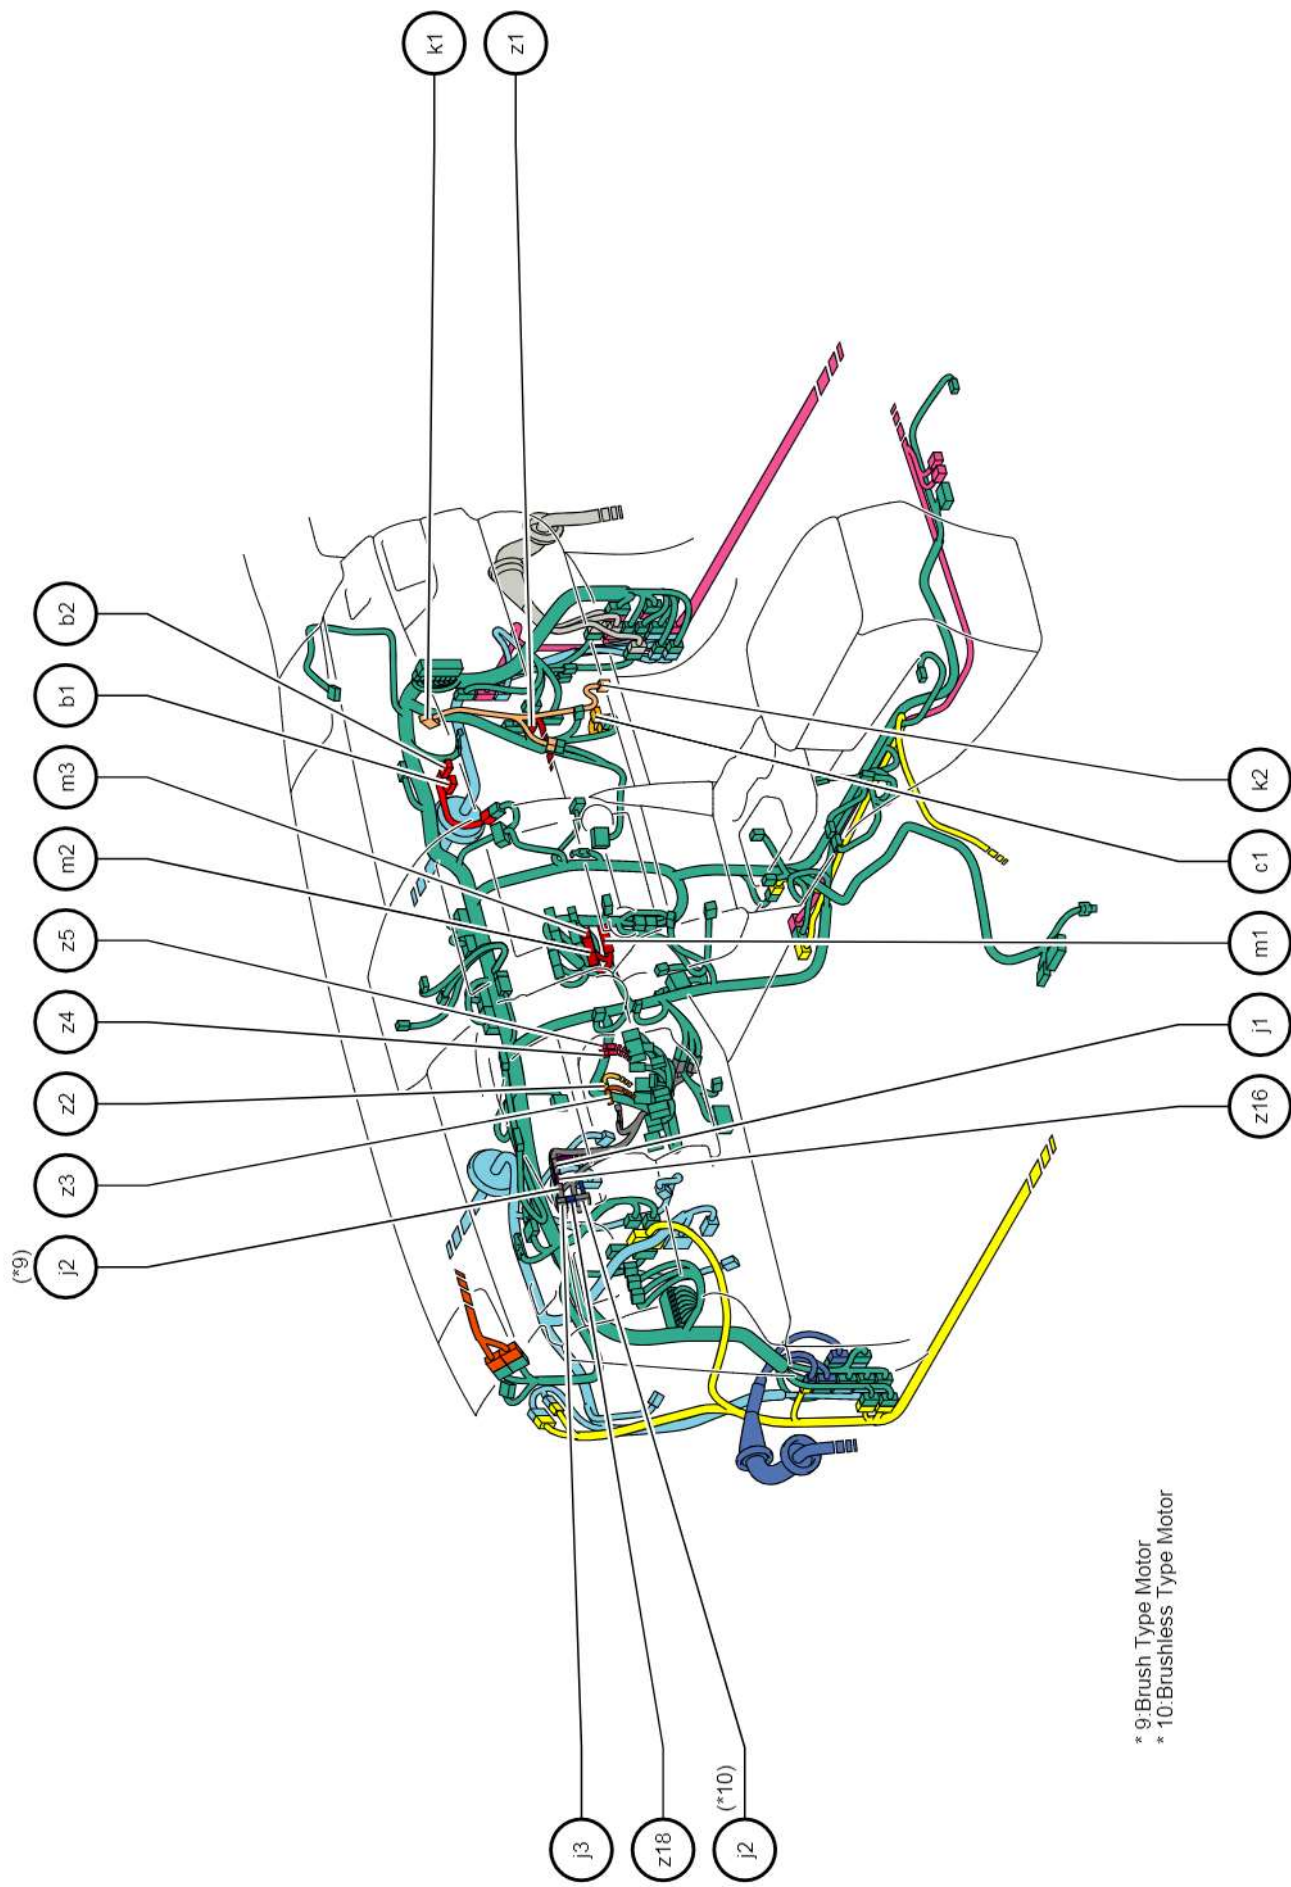



* 9:Brush Type Motor
* 10:Brushless Type Motor


b	1	Instrument Panel Passenger Airbag Assembly without Door
b	2	Instrument Panel Passenger Airbag Assembly without Door
c	1	Light Cut Relay
j	1	Power Steering ECU Assembly
j	2	Power Steering ECU Assembly
j	3	Power Steering ECU Assembly
k	1	Glass Breakage Sensor ECU Assembly
k	2	Glass Breakage Sensor Microphone
m	1	Extension Module
m	2	Radio & Display Receiver Assembly
m	3	Radio & Display Receiver Assembly
z	1	A/C Amplifier Assembly , A/C Unit (A/C Harness Assembly)
z	2	Cruise Control Main Switch , Spiral Cable Sub-Assembly
z	3	Spiral Cable Sub-Assembly , Steering Pad Switch Assembly
z	4	Spiral Cable Sub-Assembly , Driver Side Squib Circuit (Horn Button Assembly)
z	5	Spiral Cable Sub-Assembly , Driver Side Squib Circuit (Horn Button Assembly)
z	16	Electric Power Steering Column Sub-Assembly
z	18	Power Steering Motor Assembly

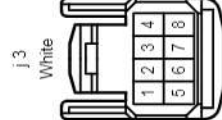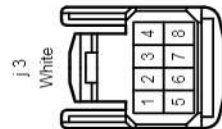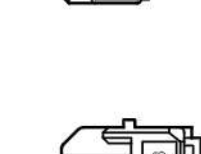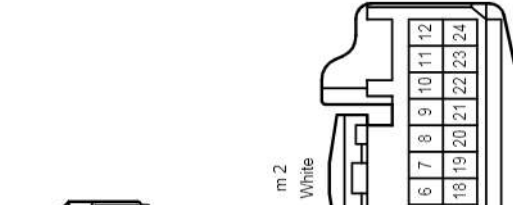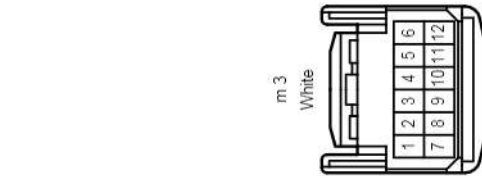       
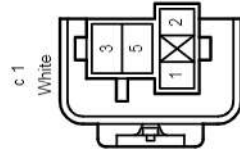 
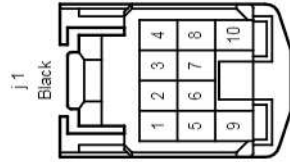 
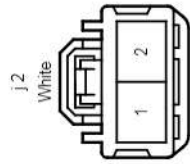 


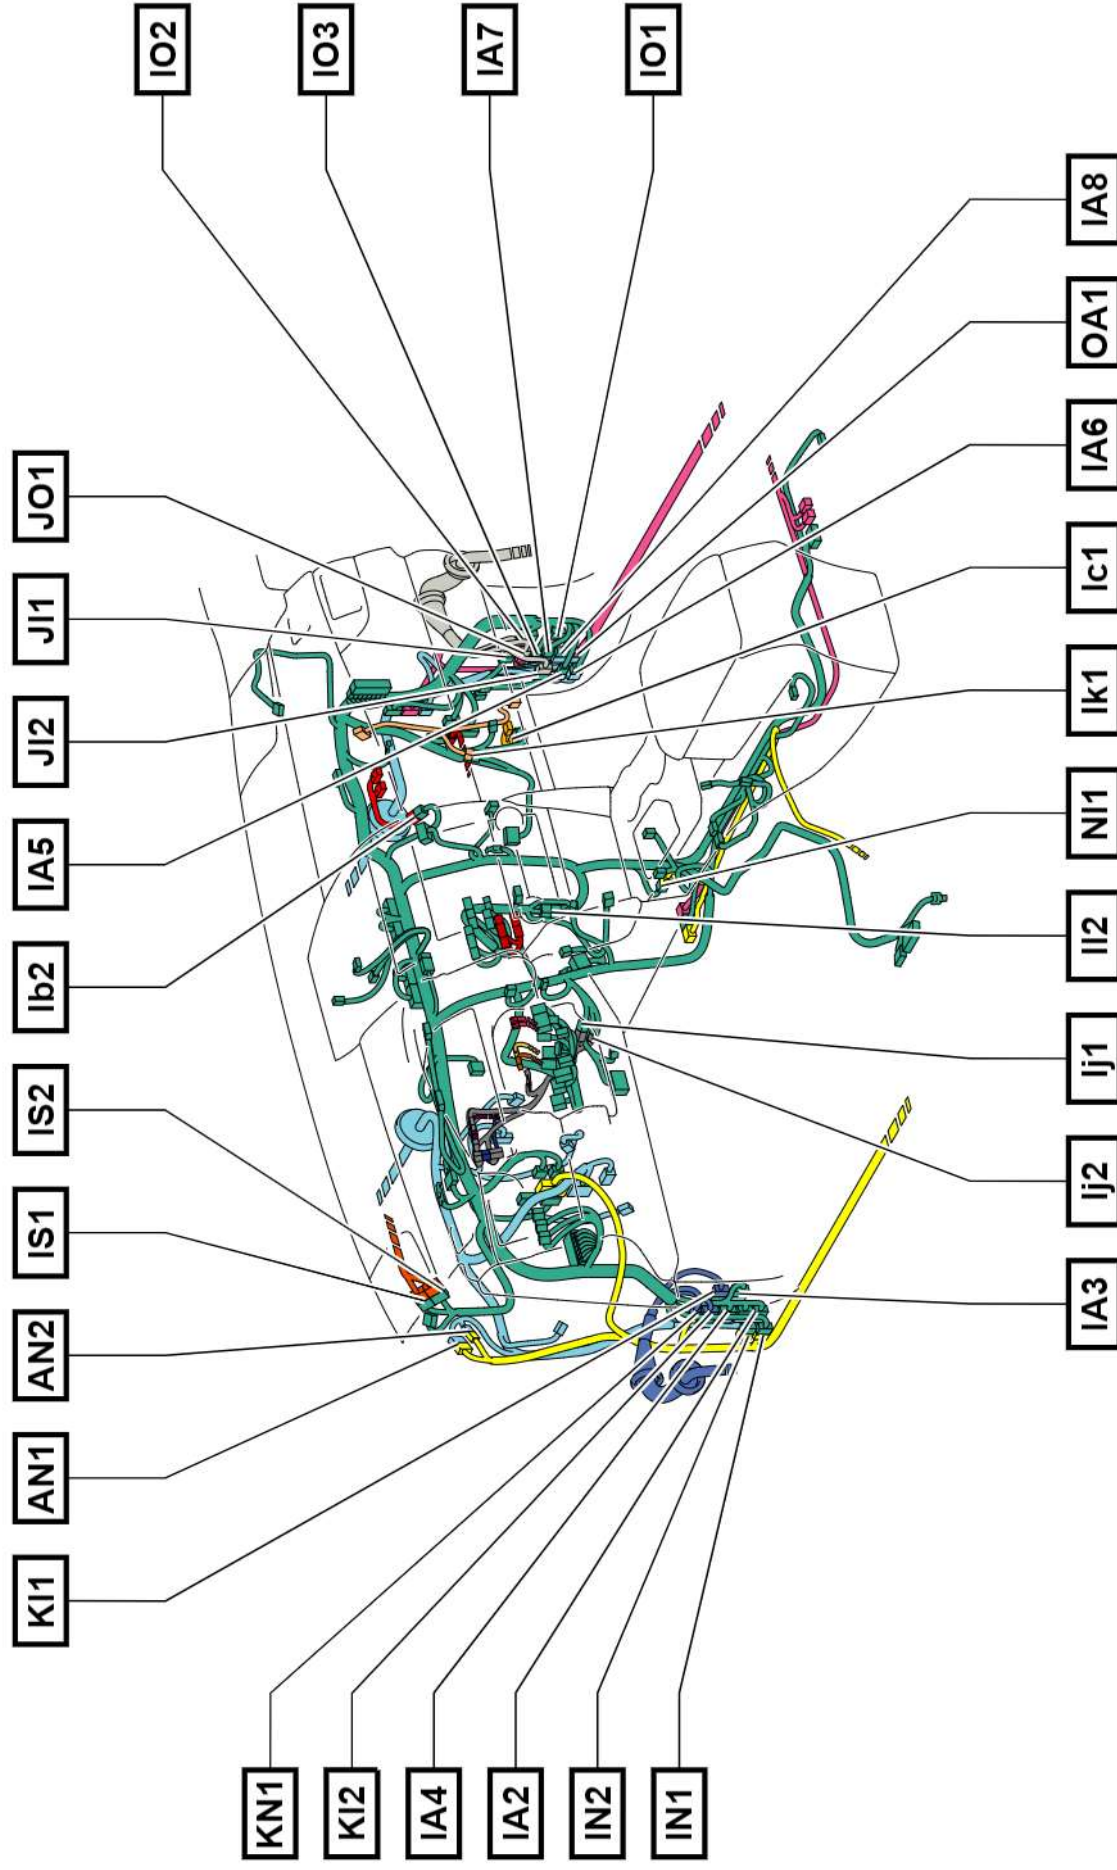 


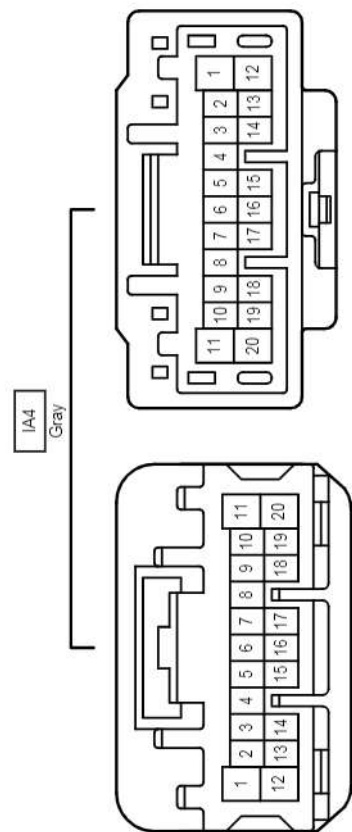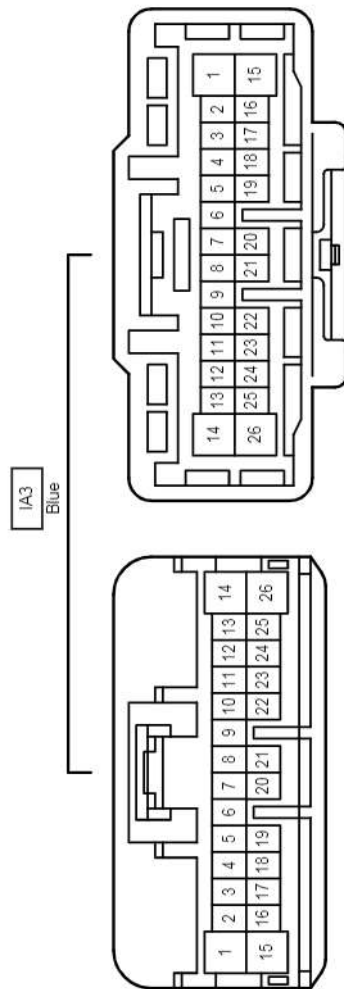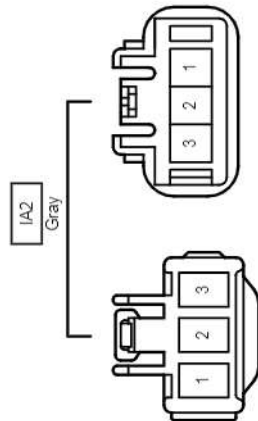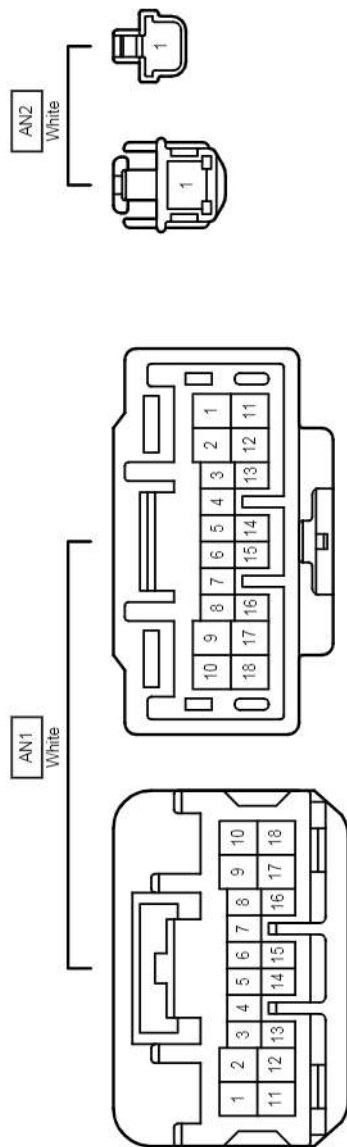    


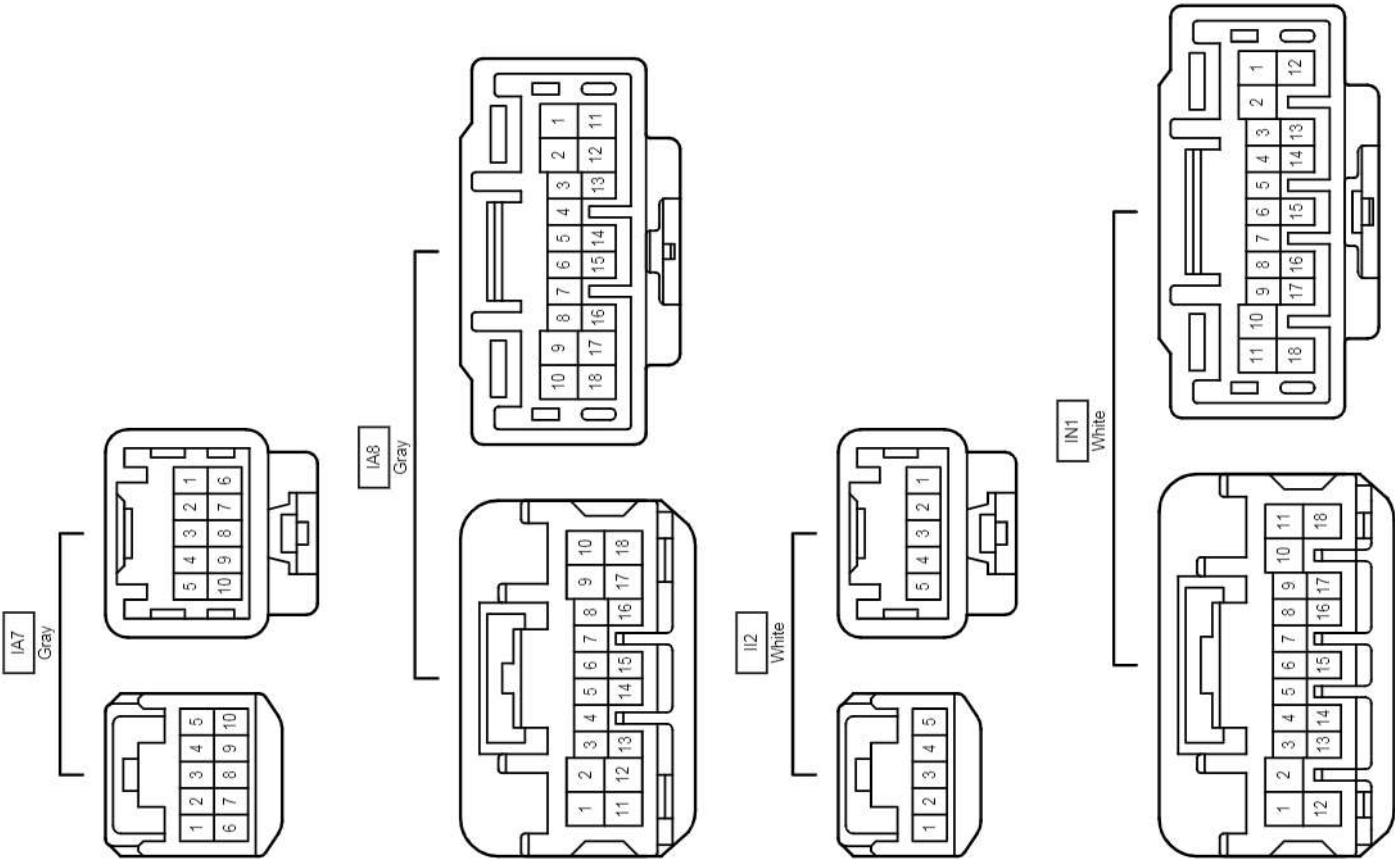 


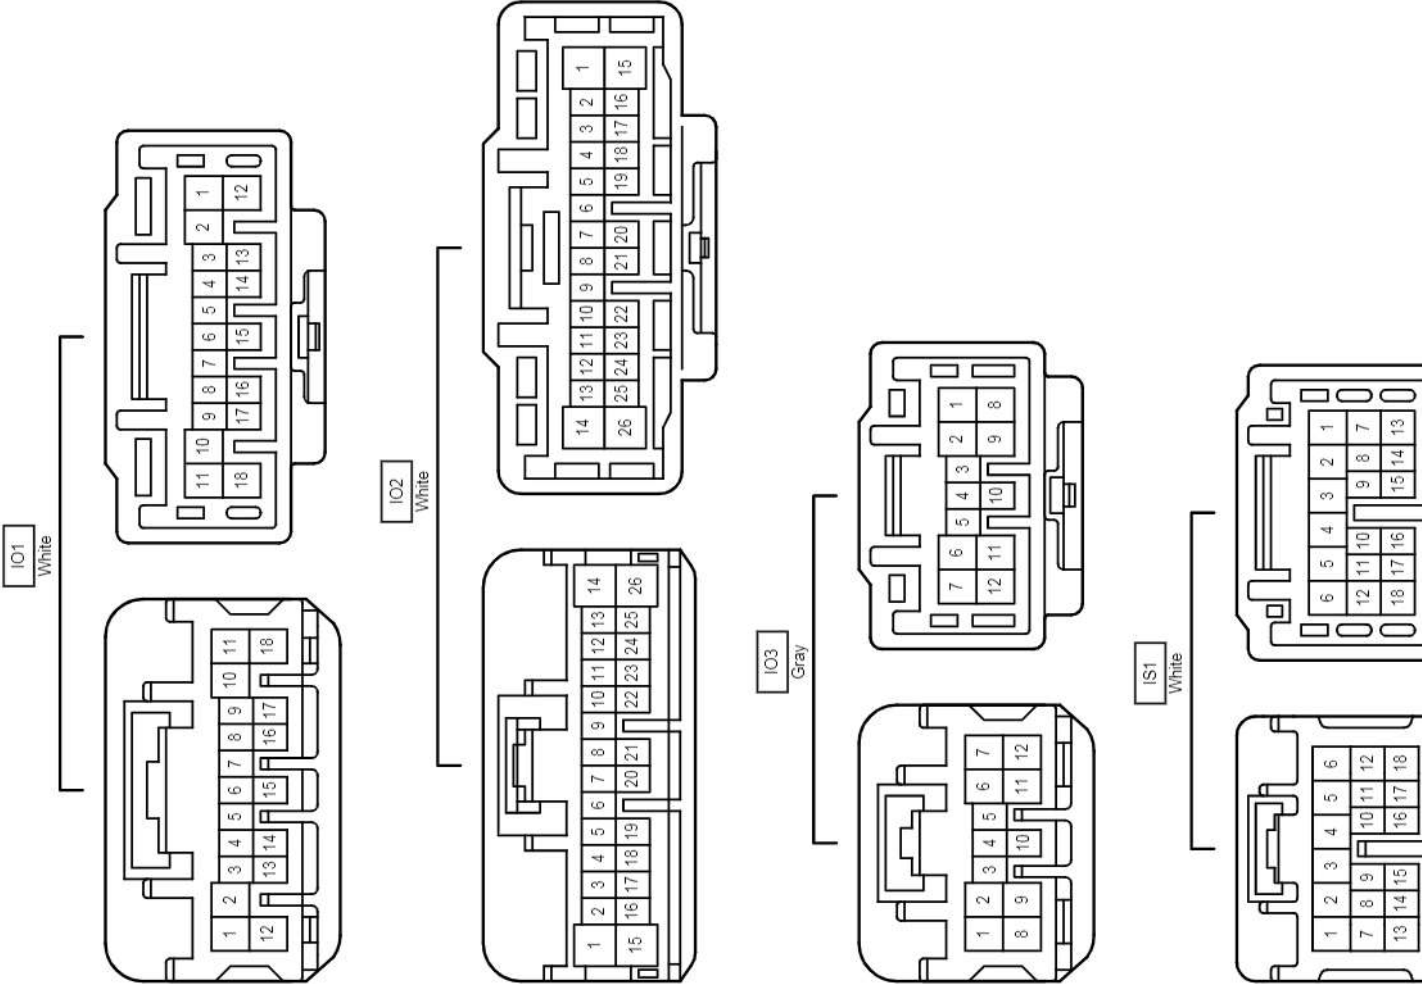        







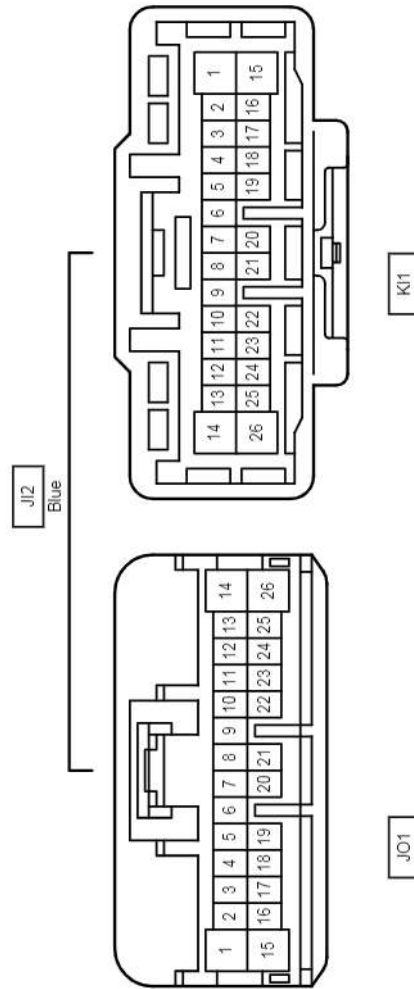
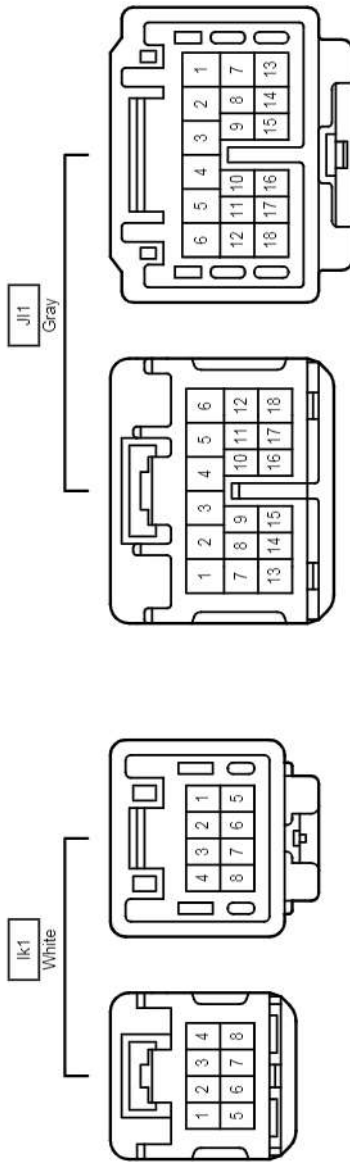
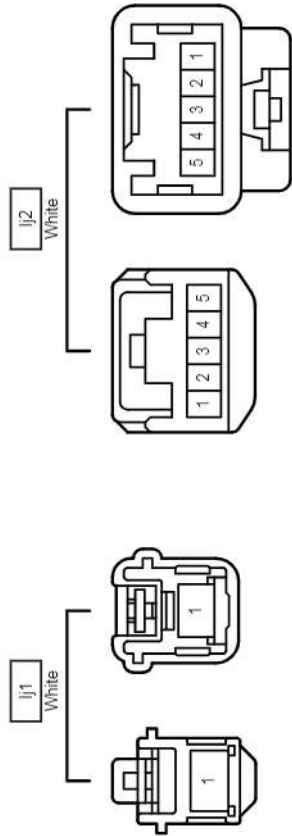
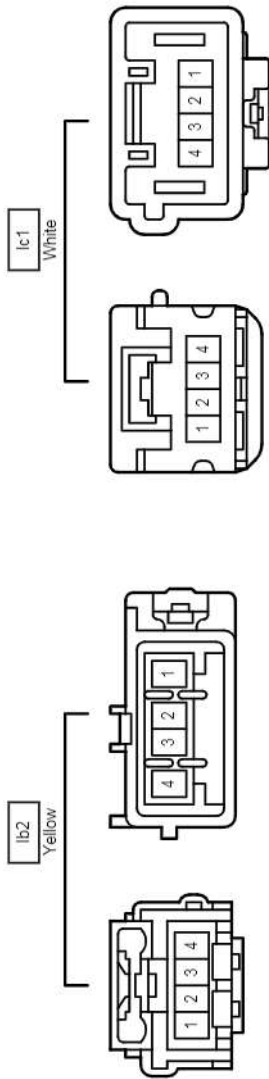


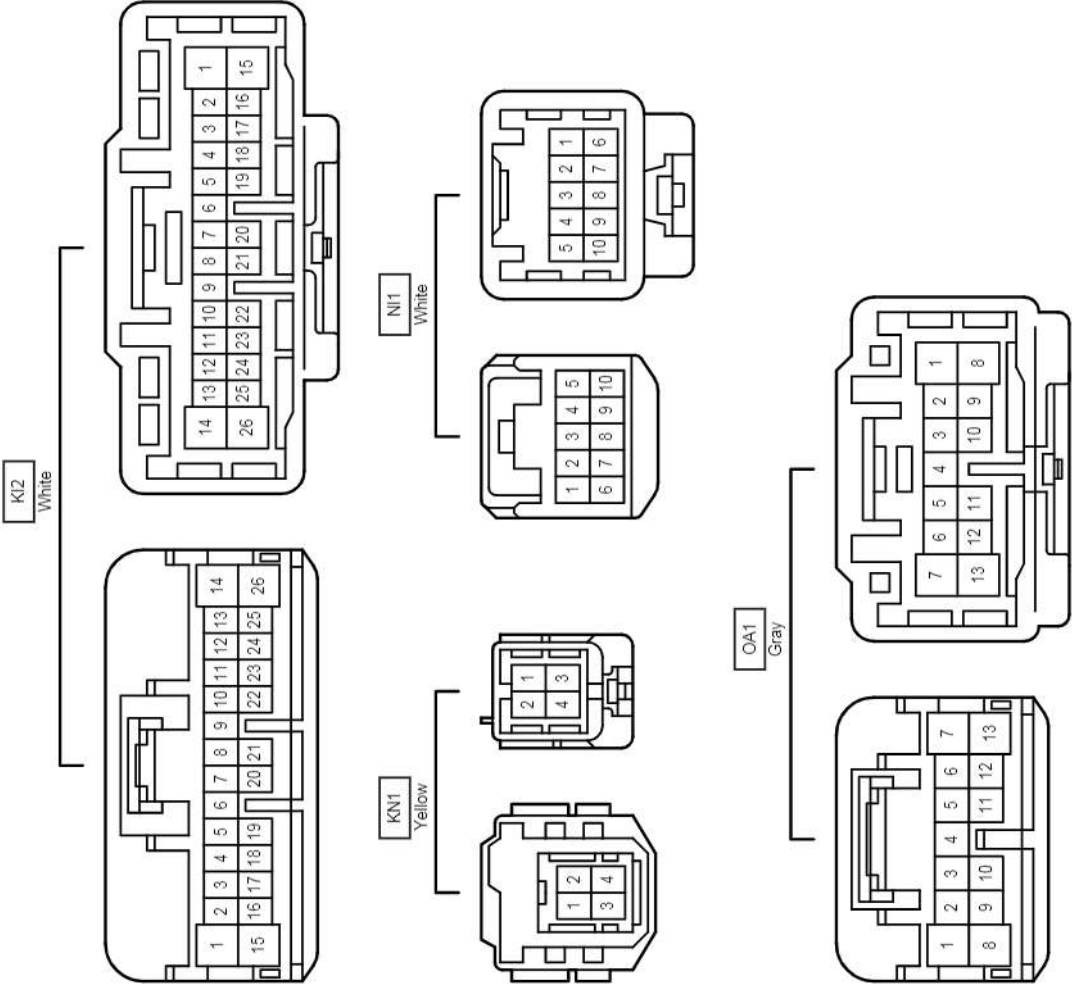

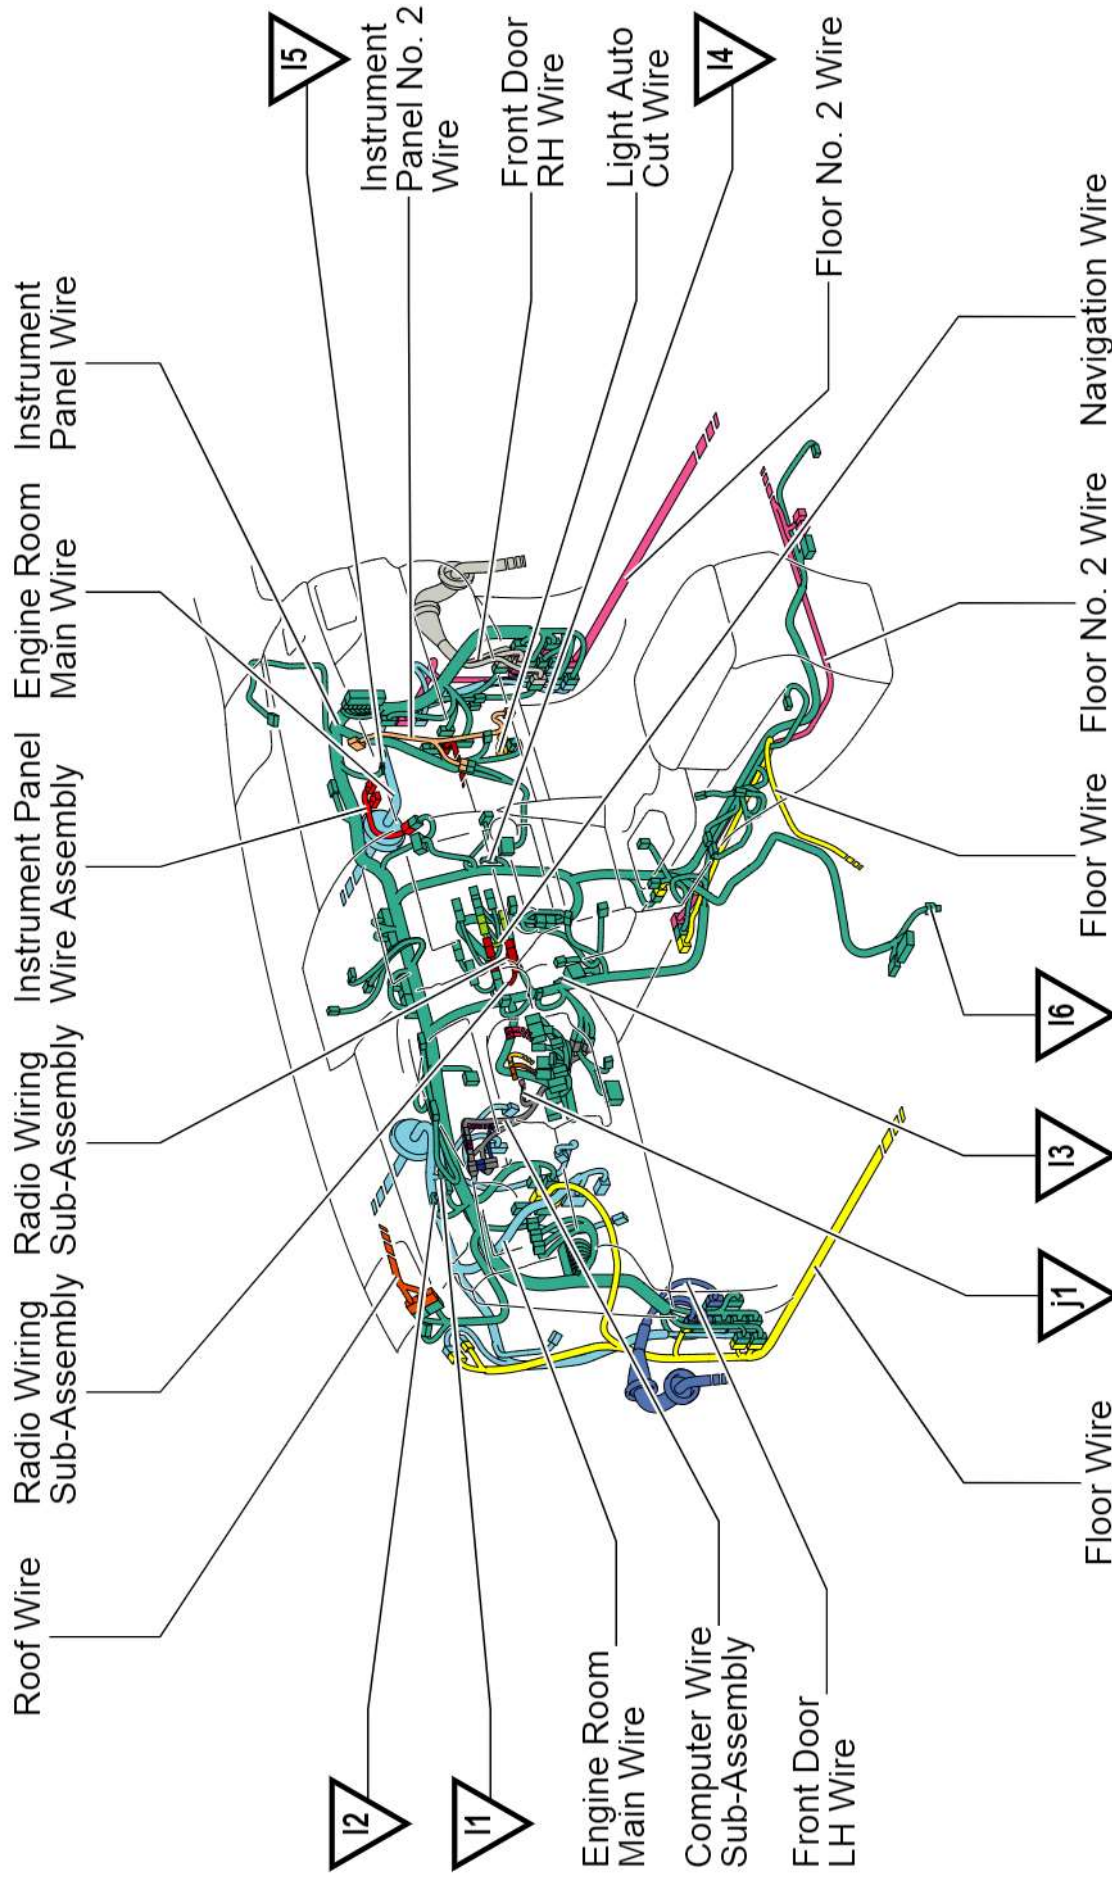

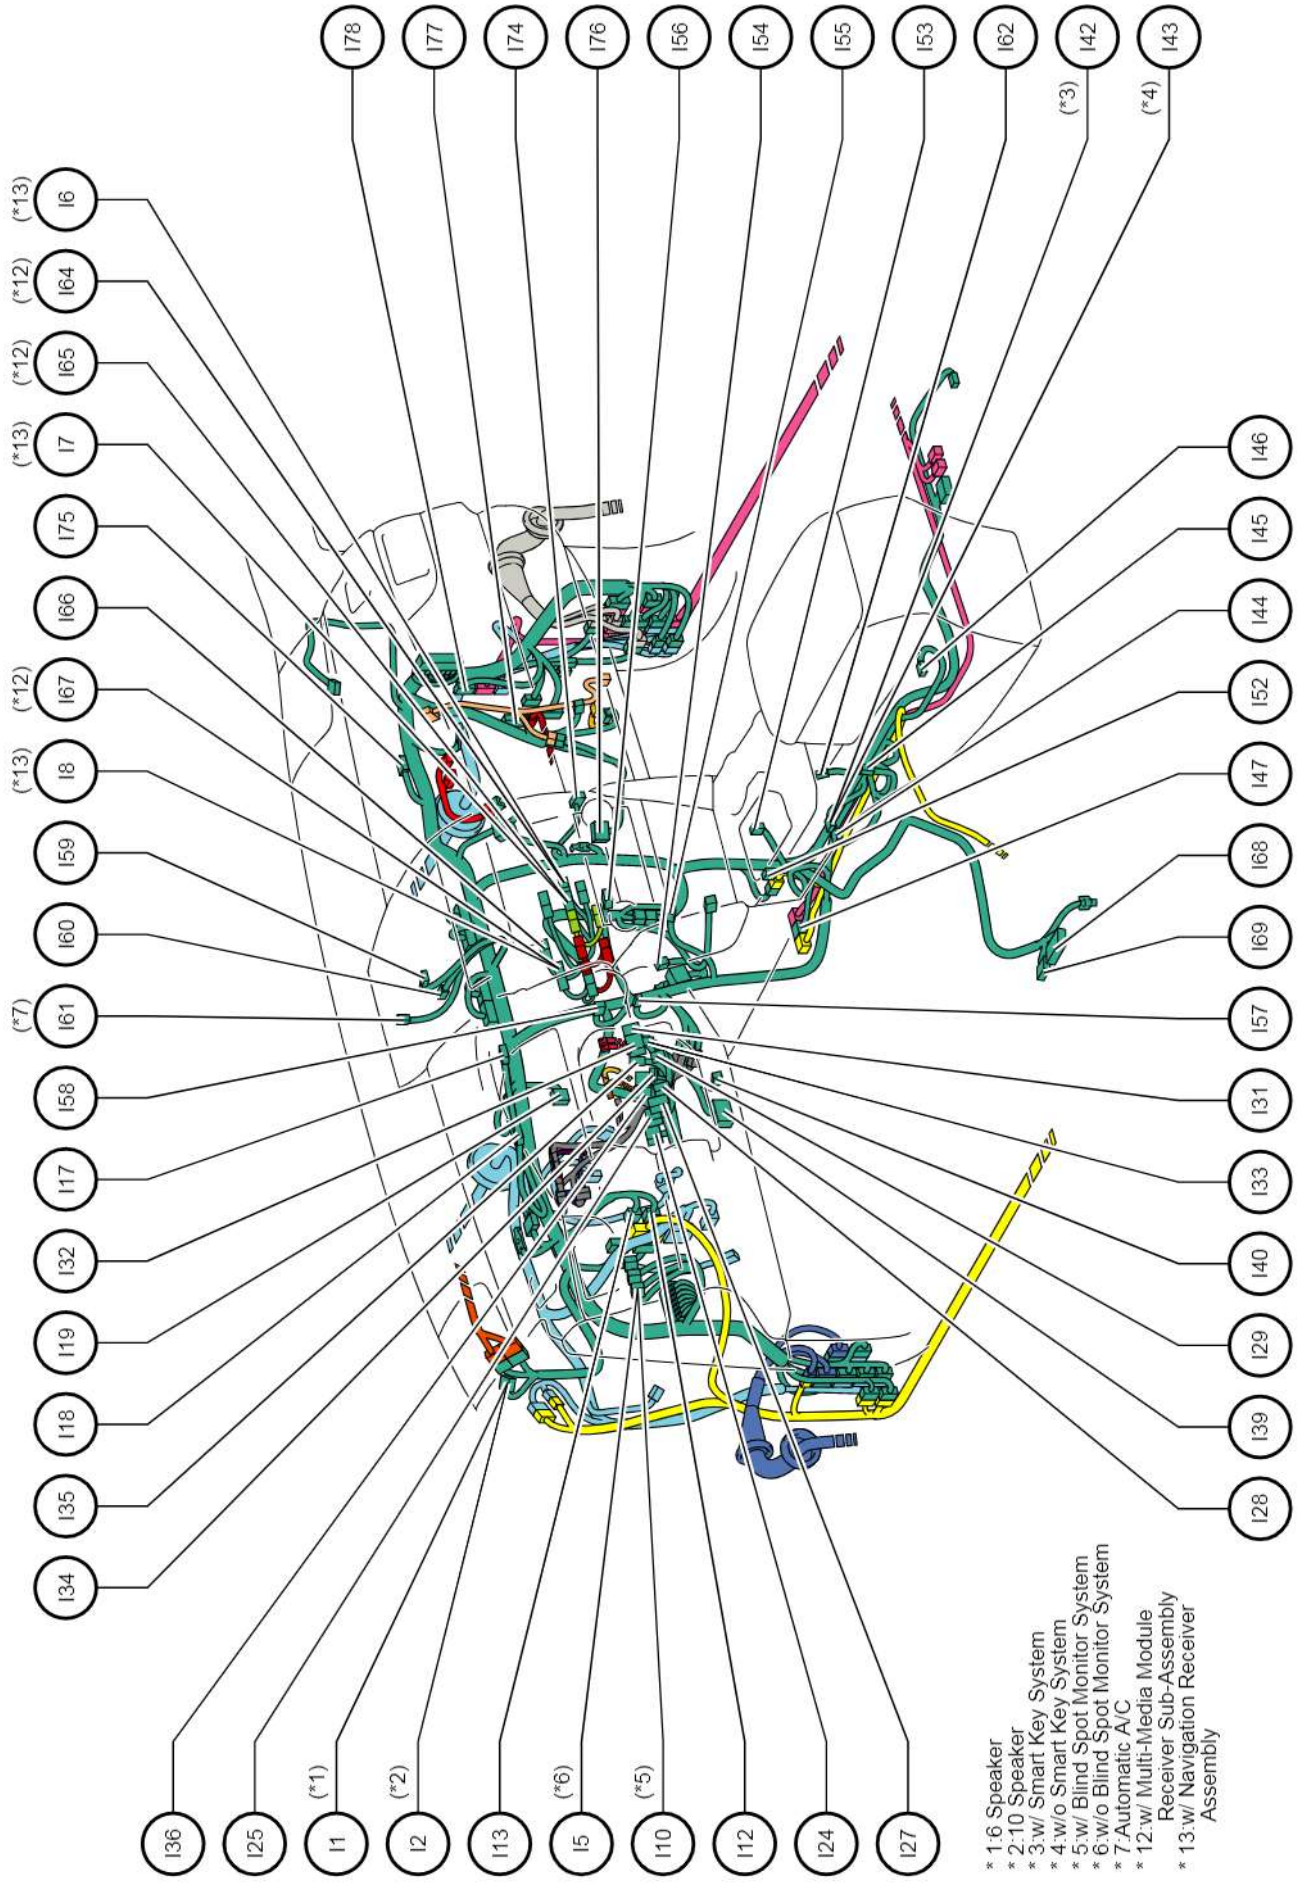


1	Front No. 2 Speaker Assembly LH
2	Front No. 2 Speaker Assembly LH
5	Back Sonar or Clearance Sonar Switch Assembly
6	Navigation Receiver Assembly
7	Navigation Receiver Assembly
8	Navigation Receiver Assembly
10	Blind Spot Monitor Main Switch (Warning Canceling Switch Assembly)
12	Main Body ECU
13	Main Body ECU
17	Combination Meter Assembly
18	Combination Meter Assembly
19	Transponder Key ECU Assembly
24	Steering Lock Actuator Assembly
25	Headlight Dimmer Switch Assembly
27	Spiral Cable Sub-Assembly
28	Spiral Cable Sub-Assembly
29	Steering Sensor
31	Windshield Wiper Switch Assembly
32	Windshield Wiper Switch Assembly
33	Un-Lock Warning Switch Assembly
34	Transponder Key Amplifier
35	Key Inter Lock Solenoid
36	Ignition or Starter Switch Assembly
39	Data Link Connector 3
40	Lower No. 1 Instrument Panel Airbag Assembly
42	Shift Lock Control ECU (Lower Shift Lever Assembly)
43	Shift Lock Control ECU (Lower Shift Lever Assembly)
44	Transmission Control Switch (Lower Shift Lever Assembly)
45	Rear Power Outlet Socket Assembly
46	No. 1 Indoor Electrical Key Antenna Assembly
47	Airbag Sensor Assembly
52	Seat Heater Switch LH
53	Seat Heater Switch RH
54	No. 1 Clearance Warning Buzzer
55	Front Power Outlet Socket Assembly
56	A/C Control Assembly
57	Cooler (Room Temperature Sensor) Thermistor
58	Engine Switch
59	Clock Assembly
60	Front No. 3 Speaker Assembly
61	Automatic Light Control Sensor
62	Shift Position Indicator (Indicator Light Wire Sub-Assembly)
64	Multi-Media Module Receiver Sub-Assembly
65	Multi-Media Module Receiver Sub-Assembly

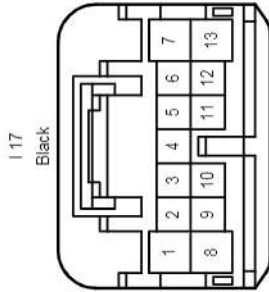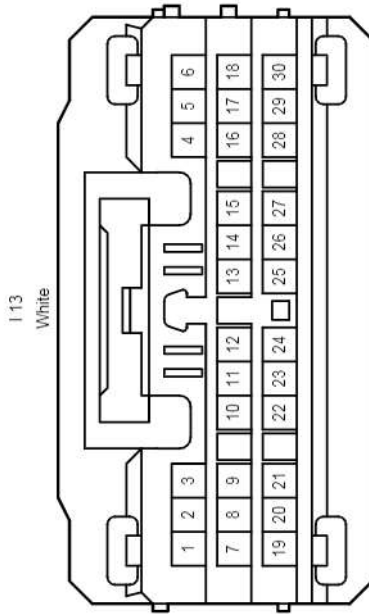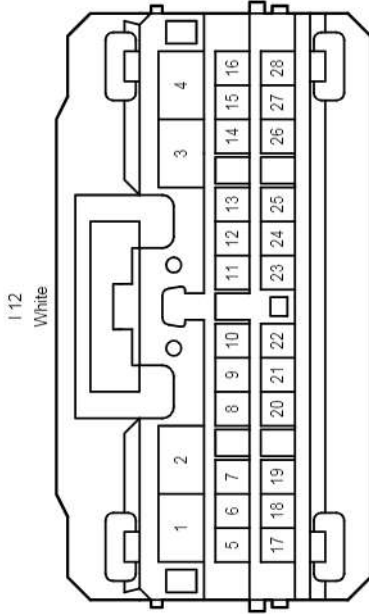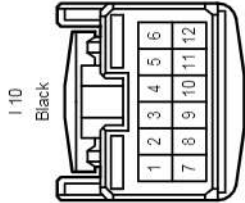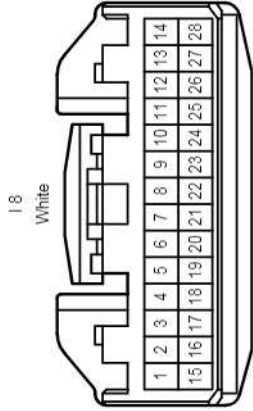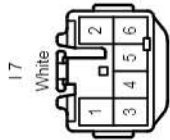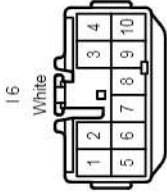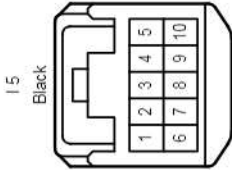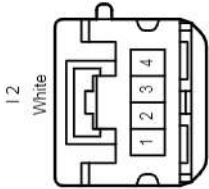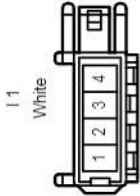          


cardiagn.com

 
I 25
Black

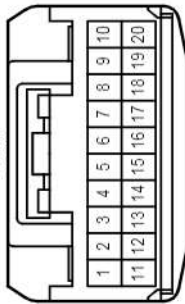


I 27
Yellow

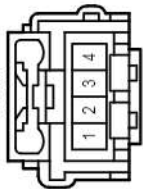 


I 28
Black

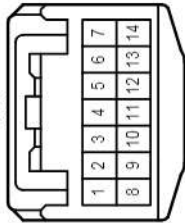 


I 29
Blue

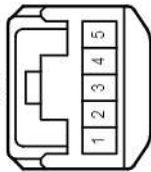 

I 31
White

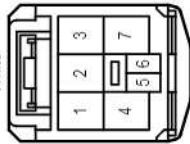 


I 32
White

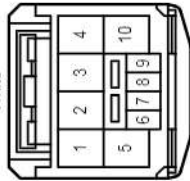 

I 33
White



 
I 34
Black

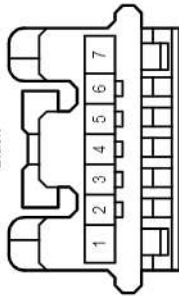


I 35
Black



 
I 36
White

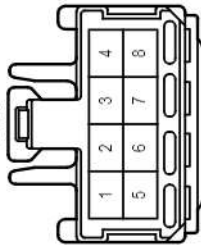


I 39
White

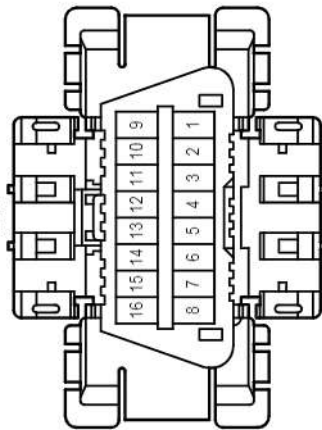 


I 40
Black

 


I 42
White

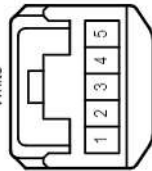 


I 43
White

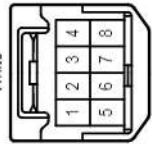 


I 44
White

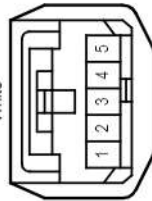 


I 45
White

 


I 46
White

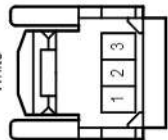 


I 47
Yellow

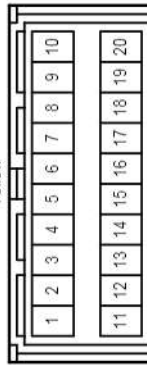 


I 52
Black

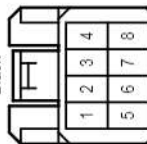 


I 53
Black






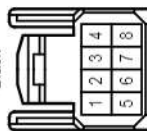 


I 54
Black

 


I 55
White

 

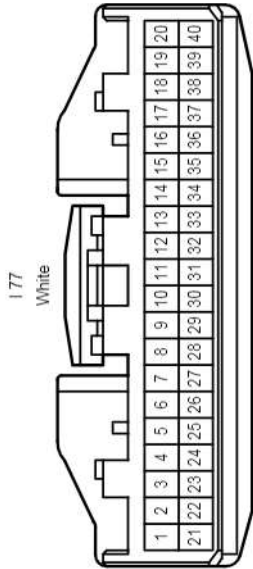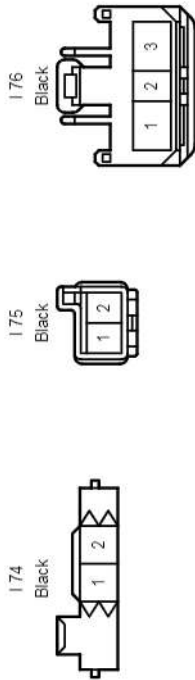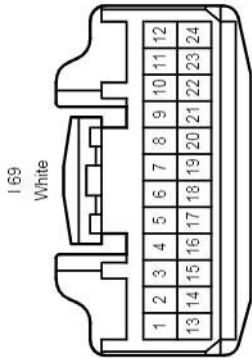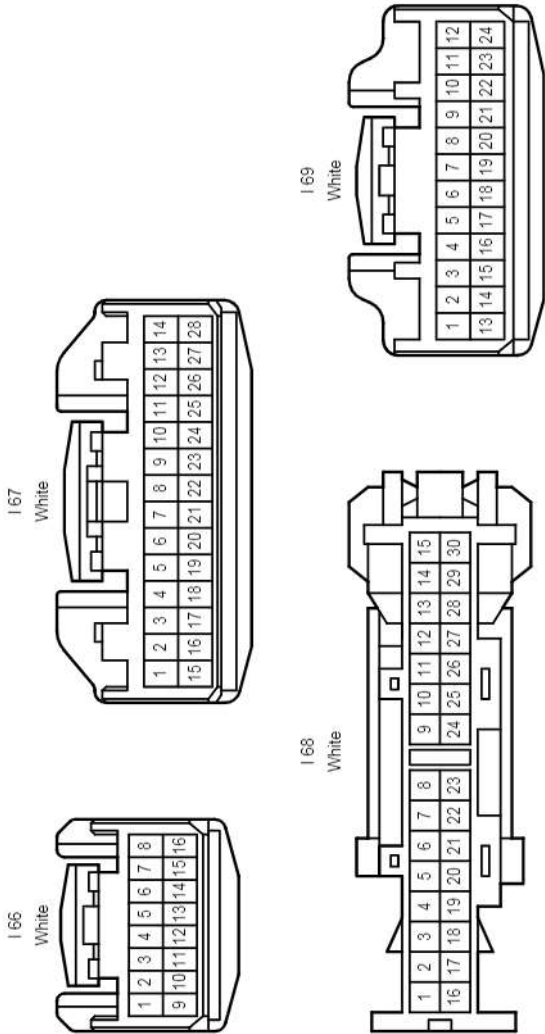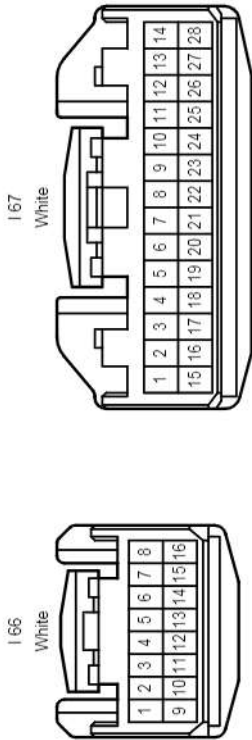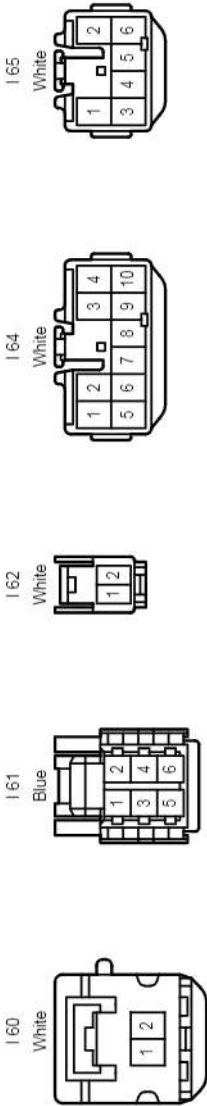      


 Position of Parts in Instrument Panel <From Dec. 2013 Production>

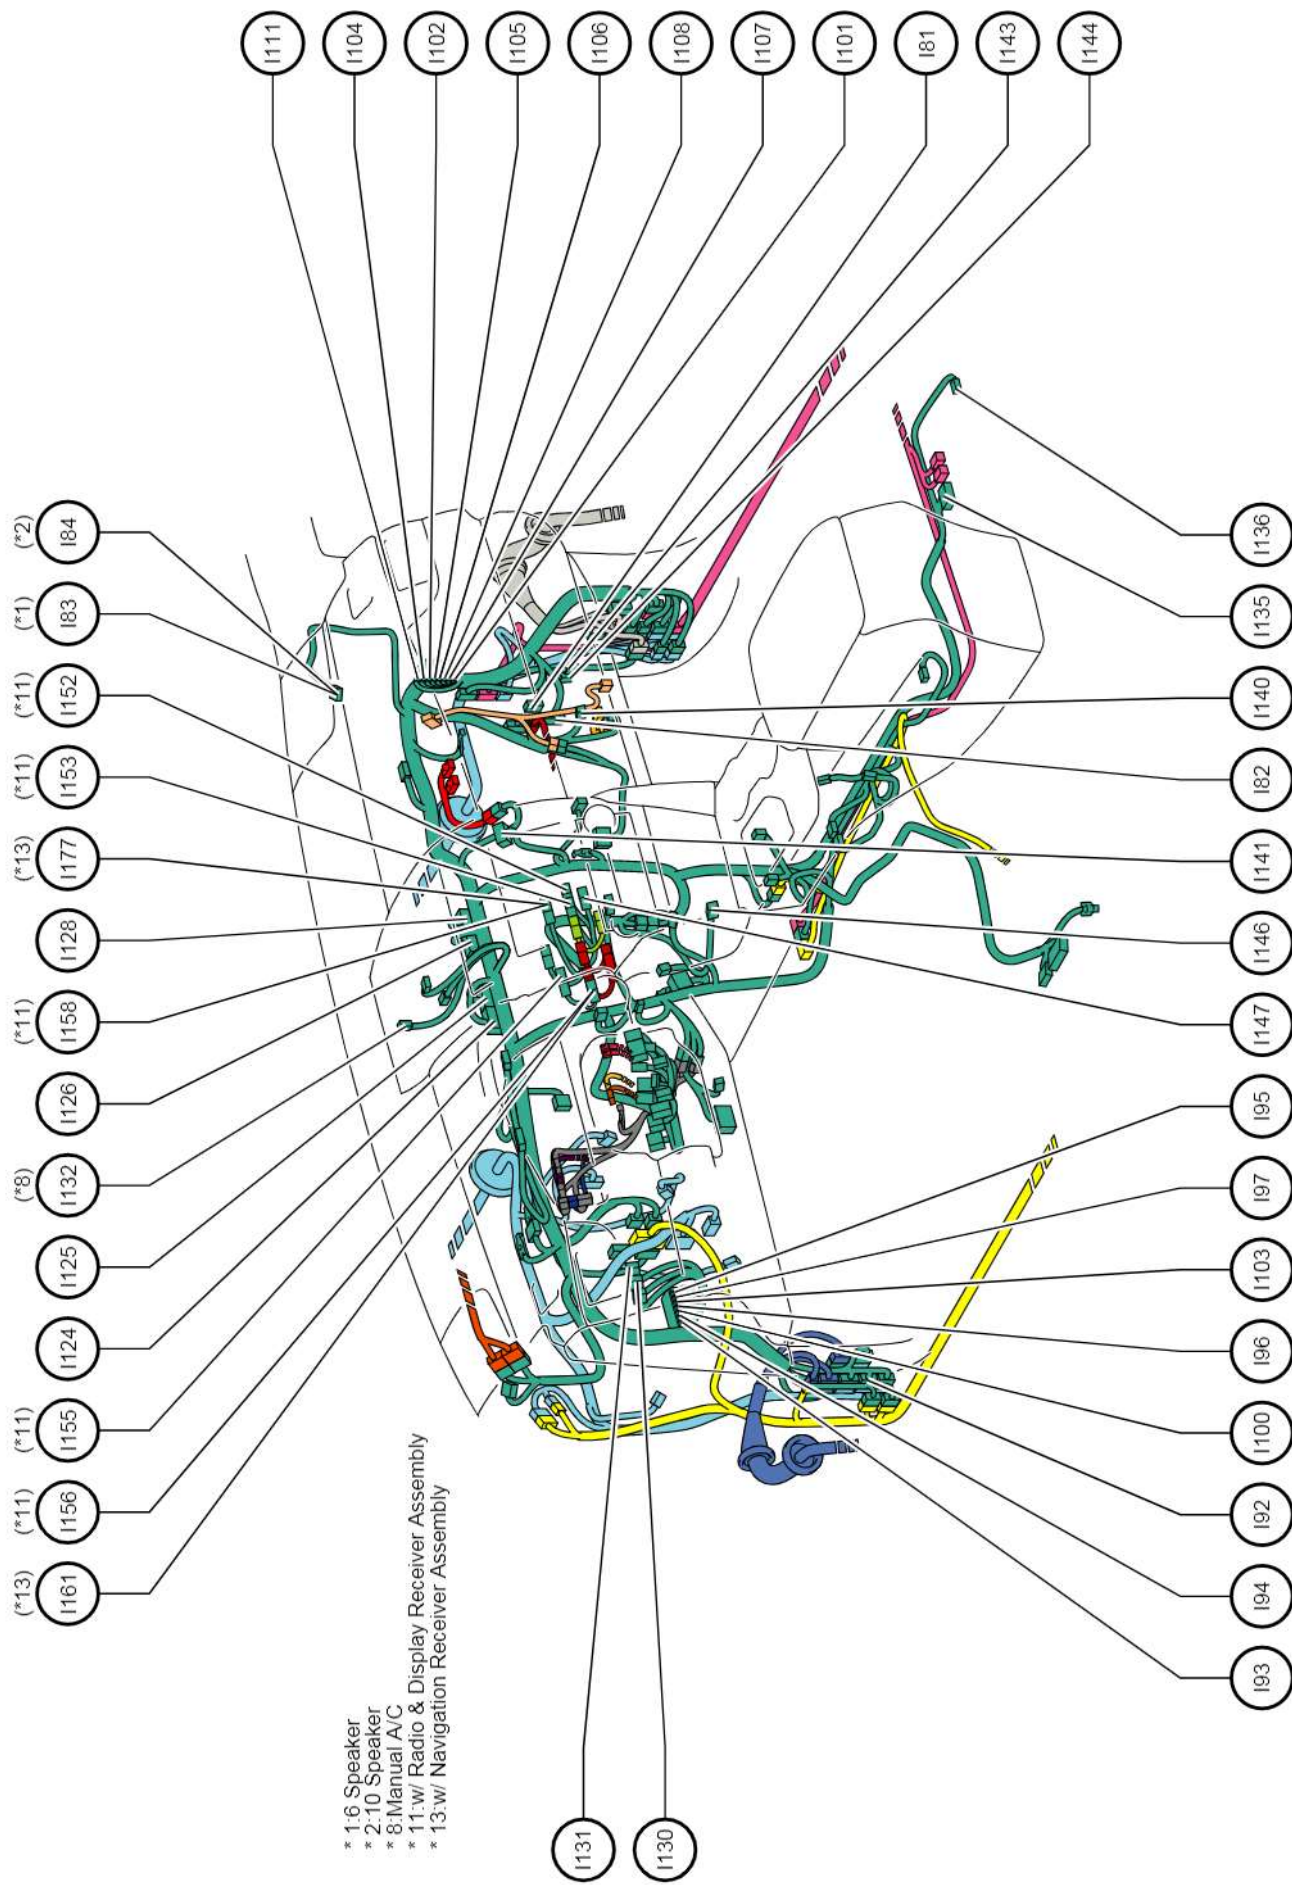


I 81	Network Gateway ECU
I 82	Clearance Warning ECU Assembly
I 83	Front No. 2 Speaker Assembly RH
I 84	Front No. 2 Speaker Assembly LH
I 92	Junction Connector
I 93	Junction Connector
I 94	Junction Connector
I 95	Junction Connector
I 96	Junction Connector
I 97	Junction Connector
I 100	Junction Connector
I 101	Junction Connector
I 102	Junction Connector
I 103	Junction Connector
I 104	Junction Connector
I 105	Junction Connector
I 106	Junction Connector
I 107	Junction Connector
I 108	Junction Connector
I 111	Junction Connector
I 124	Junction Connector
I 125	Junction Connector
I 126	Junction Connector
I 128	Junction Connector
I 130	VSC Off Switch
I 131	Headlight Leveling Switch
I 132	Automatic Light Control Sensor
I 135	DCM (Telematics Transceiver)
I 136	Back-Up Battery (Mayday Battery)
I 140	Lower No. 2 Instrument Panel Airbag Assembly
I 141	Remote Engine Starter
I 143	Check Connector (Remote Engine Starter)
I 144	Check Connector (Remote Engine Starter)
I 146	No. 1 Stereo Jack Adapter Assembly
I 147	Multi-Media Module Receiver Sub-Assembly
I 152	Radio & Display Receiver Assembly
I 153	Radio & Display Receiver Assembly
I 155	Radio & Display Receiver Assembly
I 156	Radio & Display Receiver Assembly
I 158	Radio & Display Receiver Assembly
I 161	Navigation Receiver Assembly
I 177	Navigation Receiver Assembly

 
I 81
White

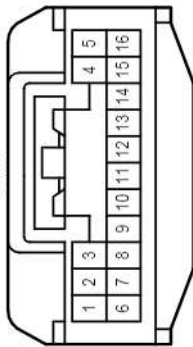


I 82
Black

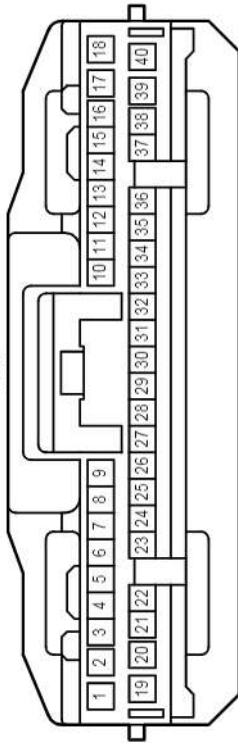 


I 83
White

 

I 84
White

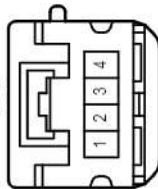 

I 92
Gray

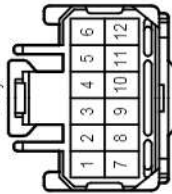 

I 93
White



 
I 94
White




I 95
White




I 96
White



I 97
White

 


I 100
White

 

I 101
White



 I 102
White




I 103
White



I 104
White



 
I 105
White




I 106
White



 
I 107
White




I 108
White

 


I 111
White

 


I 124
White

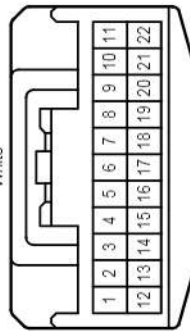 

I 125
Gray

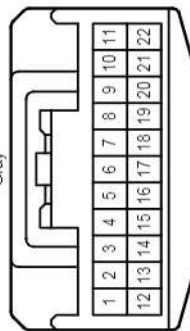 

I 126
White

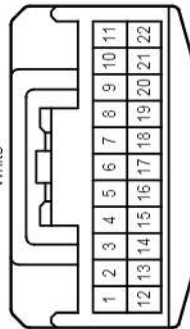 

I 128
White



I 130
Black



 
I 131
Black




I 132
White




I135
White

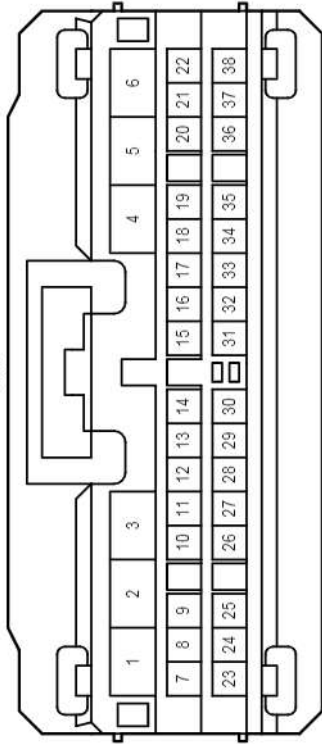


I136
White

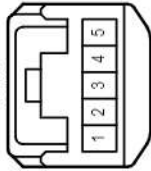 

I140
Black

 

I141
White

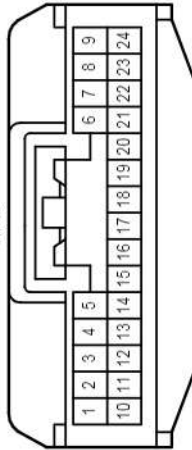 


I143
White




I144
White



 
I146
Black

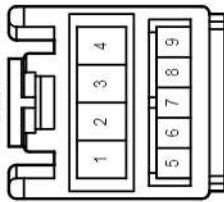


I147
Gray

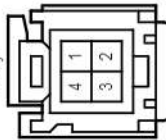 


I152
White

 


I153
White

 


I155
White

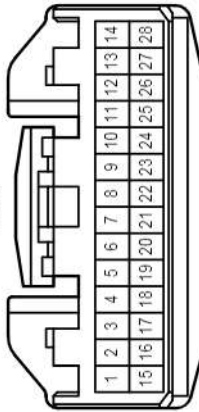 


I156
Gray

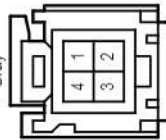 

I158
White

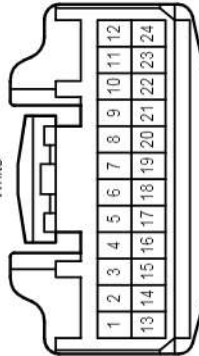 


I161
Gray

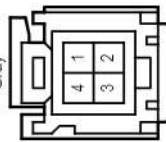 


I177
White



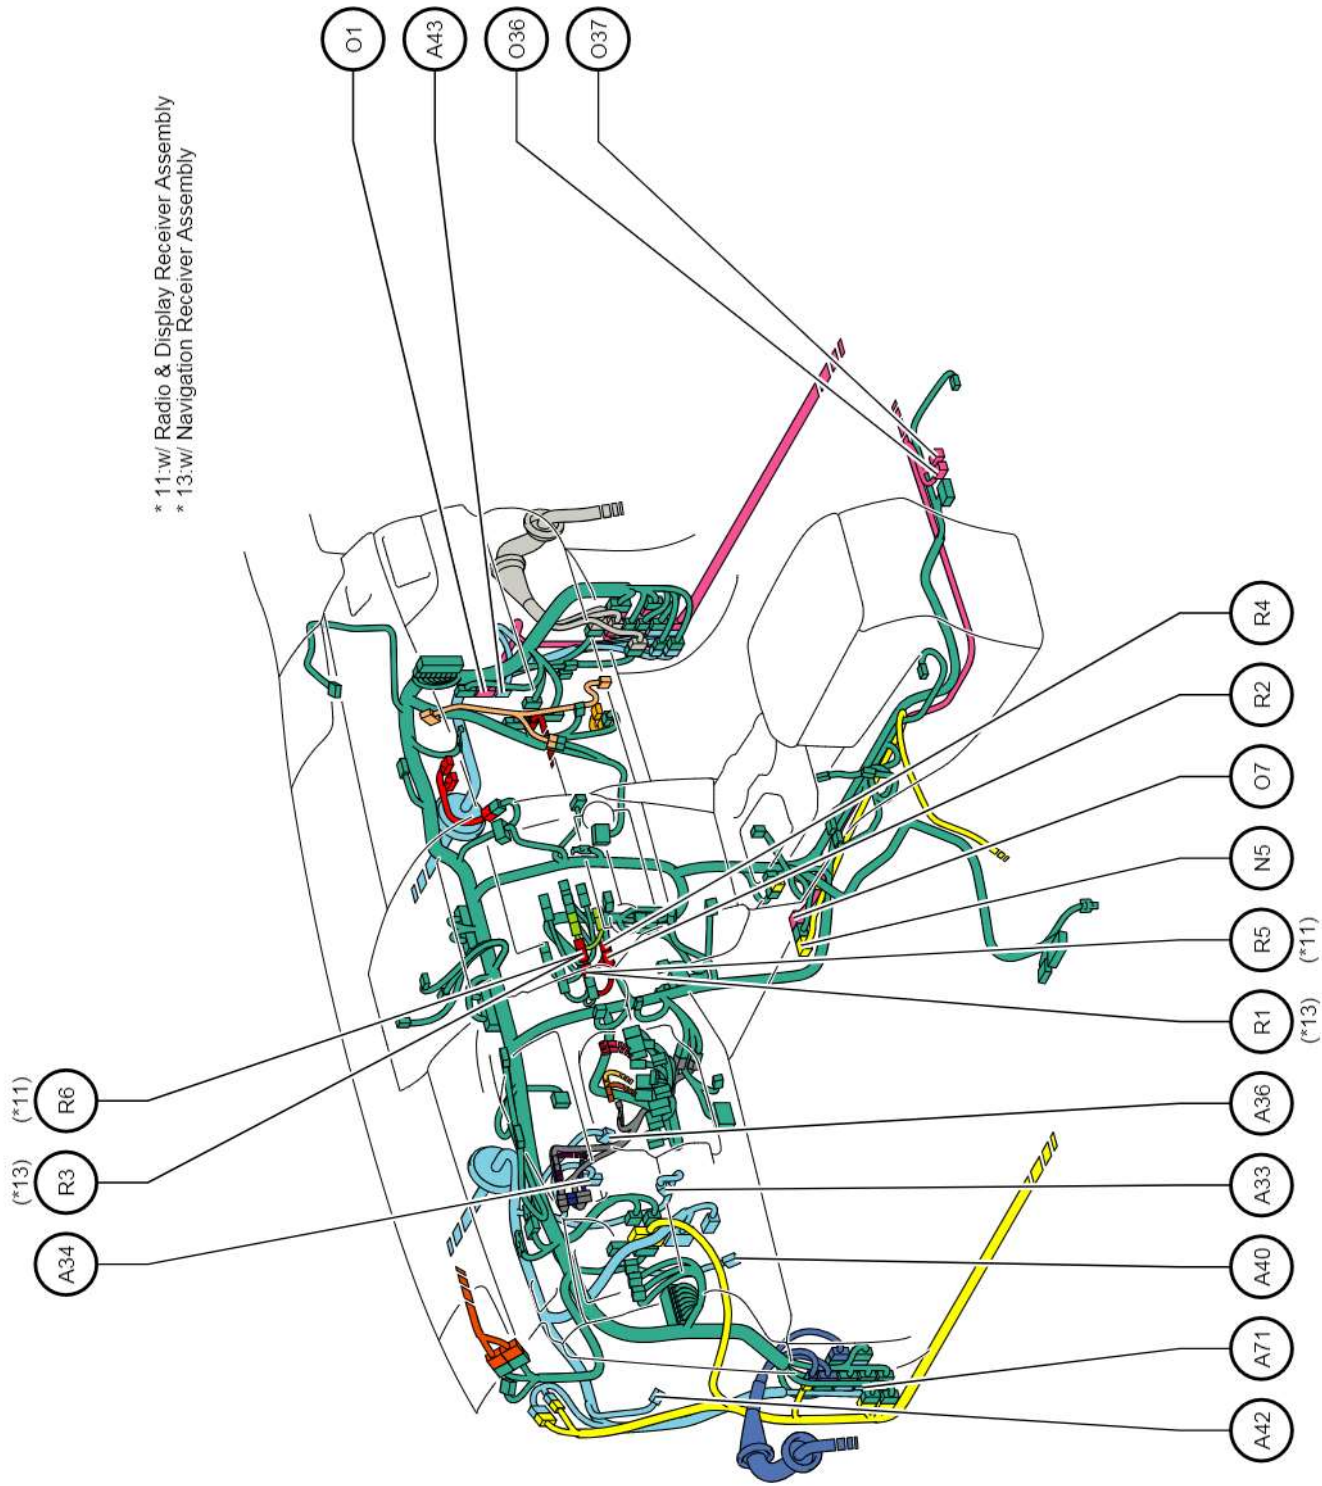 


A	33	Stop Light Switch Assembly
A	34	Headlight Leveling ECU Assembly
A	36	Accelerator Pedal Sensor Assembly
A	40	Brake Pedal Load Sensing Switch (Brake Pedal Support Assembly)
A	42	Parking Brake Switch Assembly
A	43	Certification ECU
A	71	Junction Connector
N	5	Airbag Sensor Assembly
O	1	Certification ECU
O	7	Airbag Sensor Assembly
O	36	DCM (Telematics Transceiver)
O	37	DCM (Telematics Transceiver)
R	1	Navigation Receiver Assembly
R	2	Stereo Component Tuner Assembly
R	3	Navigation Receiver Assembly
R	4	Stereo Component Tuner Assembly
R	5	Radio & Display Receiver Assembly
R	6	Radio & Display Receiver Assembly

 
A 33
White

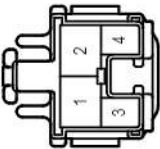


A 34
White

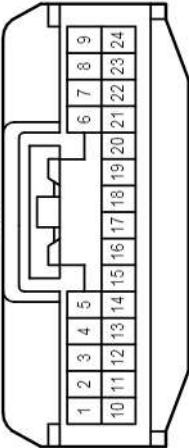 

A 36
Black

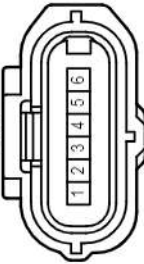 


A 40
Gray

 


A 42
Black



 
A 43
White

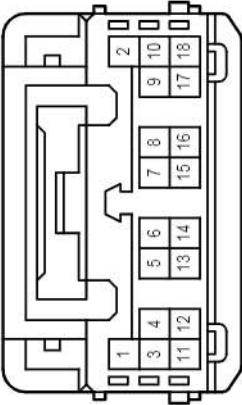


A 71
Gray

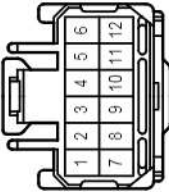 


N 5
Yellow

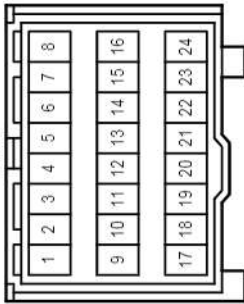 

O 1
White

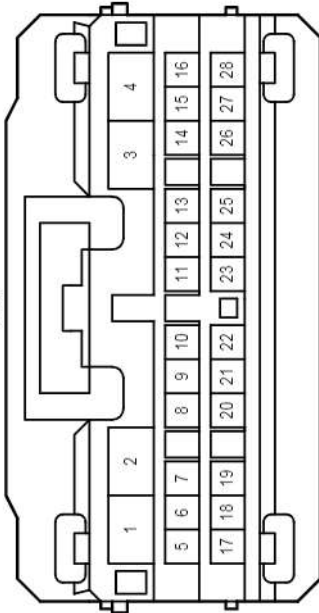 


O 7
Yellow

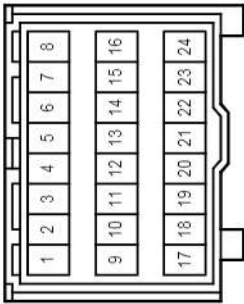 


O 36
Blue



 
O 37
Gray



R 1
Brown

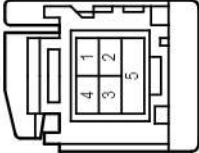 

R 2
Brown

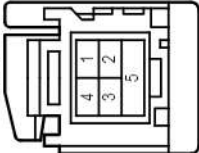 


R 3
White

R 4
White


R 5
Brown


R 6
White




 
Position of Parts in Instrument Panel <From Dec. 2013 Production>

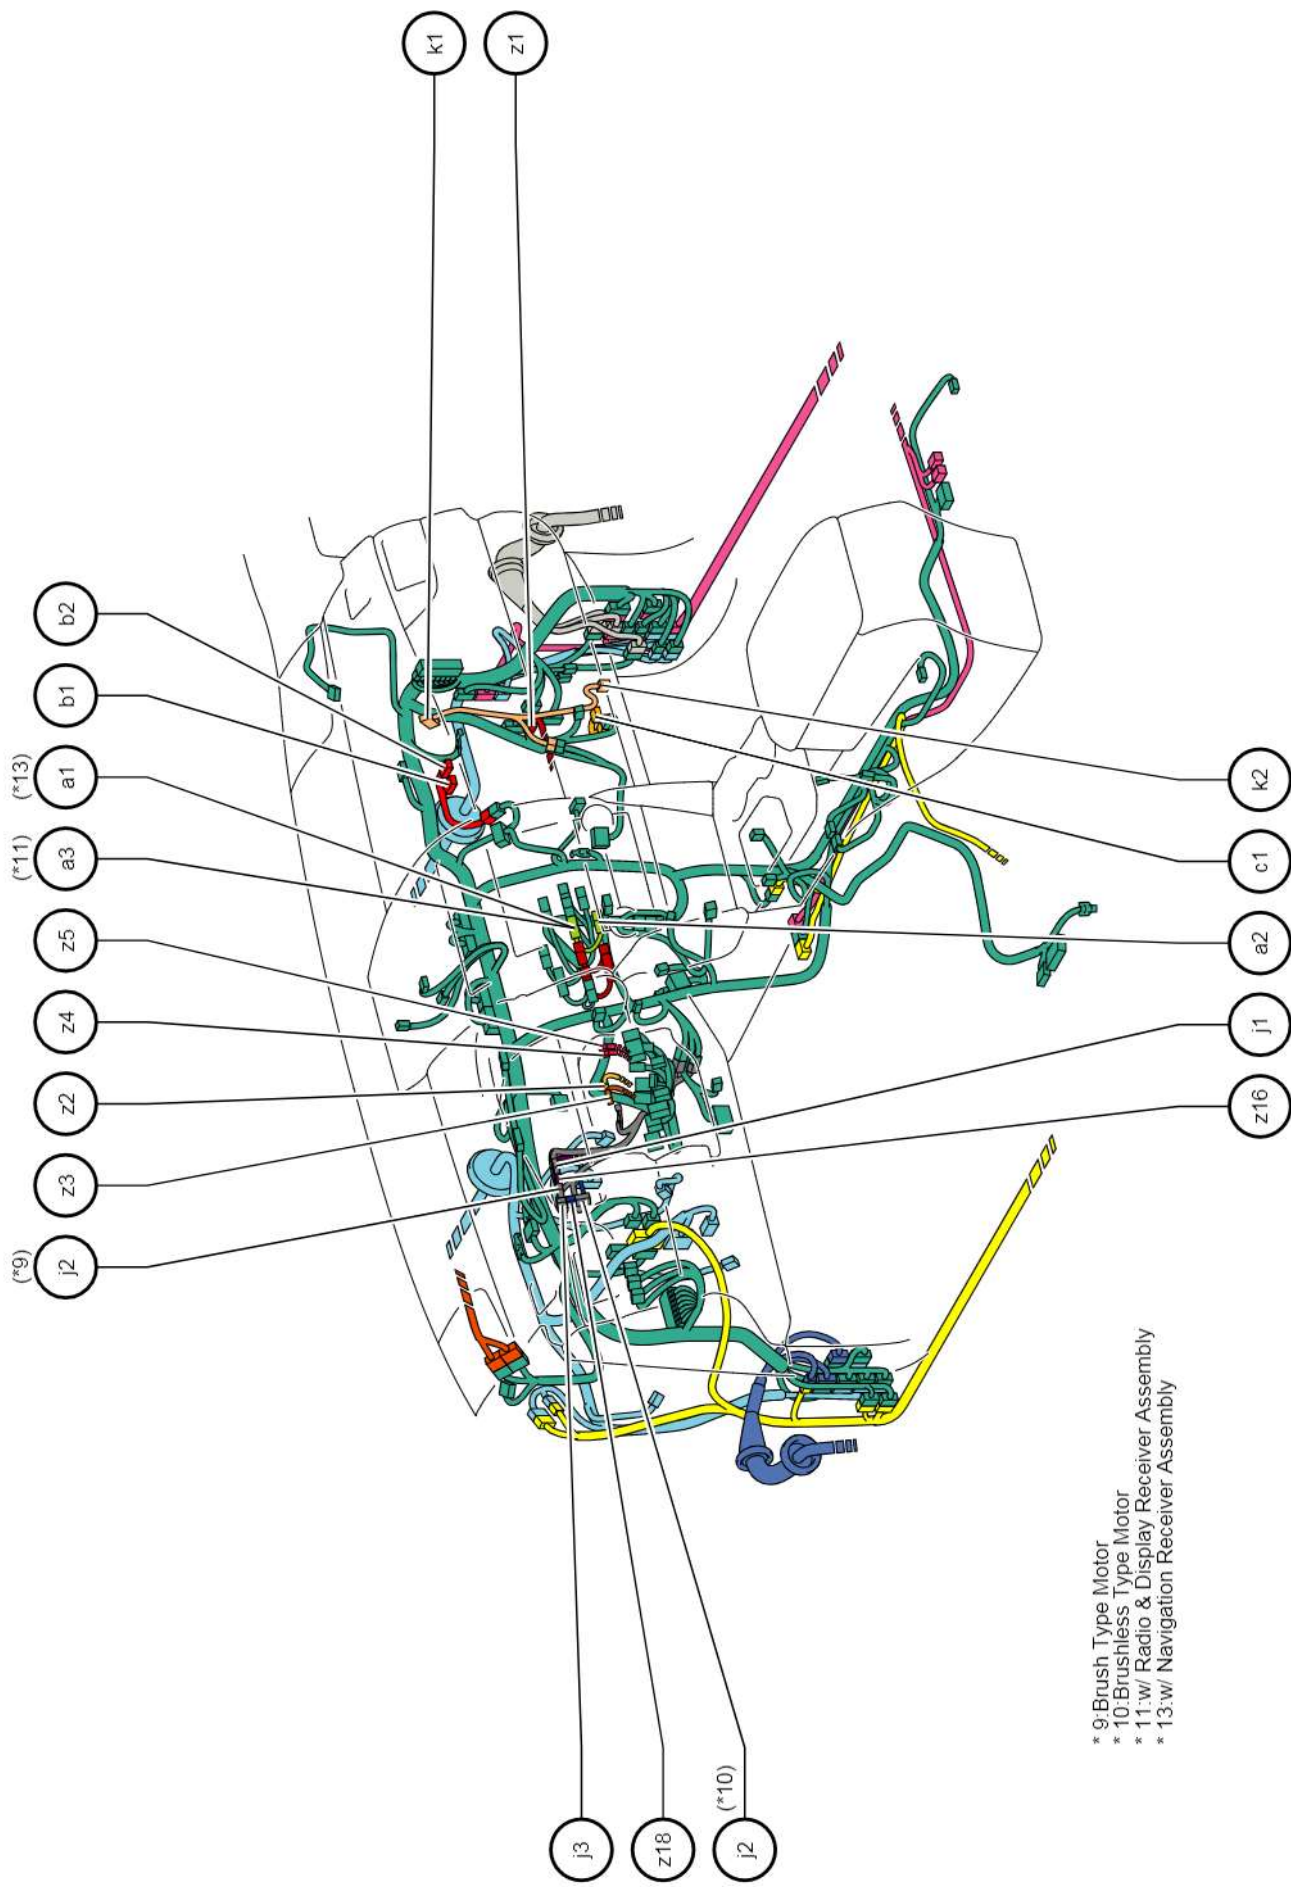



a	1	Navigation Receiver Assembly
a	2	Stereo Component Tuner Assembly
a	3	Radio & Display Receiver Assembly
b	1	Instrument Panel Passenger Airbag Assembly without Door
b	2	Instrument Panel Passenger Airbag Assembly without Door
c	1	Light Cut Relay
j	1	Power Steering ECU Assembly
j	2	Power Steering ECU Assembly
j	3	Power Steering ECU Assembly
k	1	Glass Breakage Sensor ECU Assembly
k	2	Glass Breakage Sensor Microphone
z	1	A/C Amplifier Assembly , A/C Unit (A/C Harness Assembly)
z	2	Cruise Control Main Switch , Spiral Cable Sub-Assembly
z	3	Spiral Cable Sub-Assembly , Steering Pad Switch Assembly
z	4	Spiral Cable Sub-Assembly , Driver Side Squib Circuit (Horn Button Assembly)
z	5	Spiral Cable Sub-Assembly , Driver Side Squib Circuit (Horn Button Assembly)
z	16	Electric Power Steering Column Sub-Assembly
z	18	Power Steering Motor Assembly



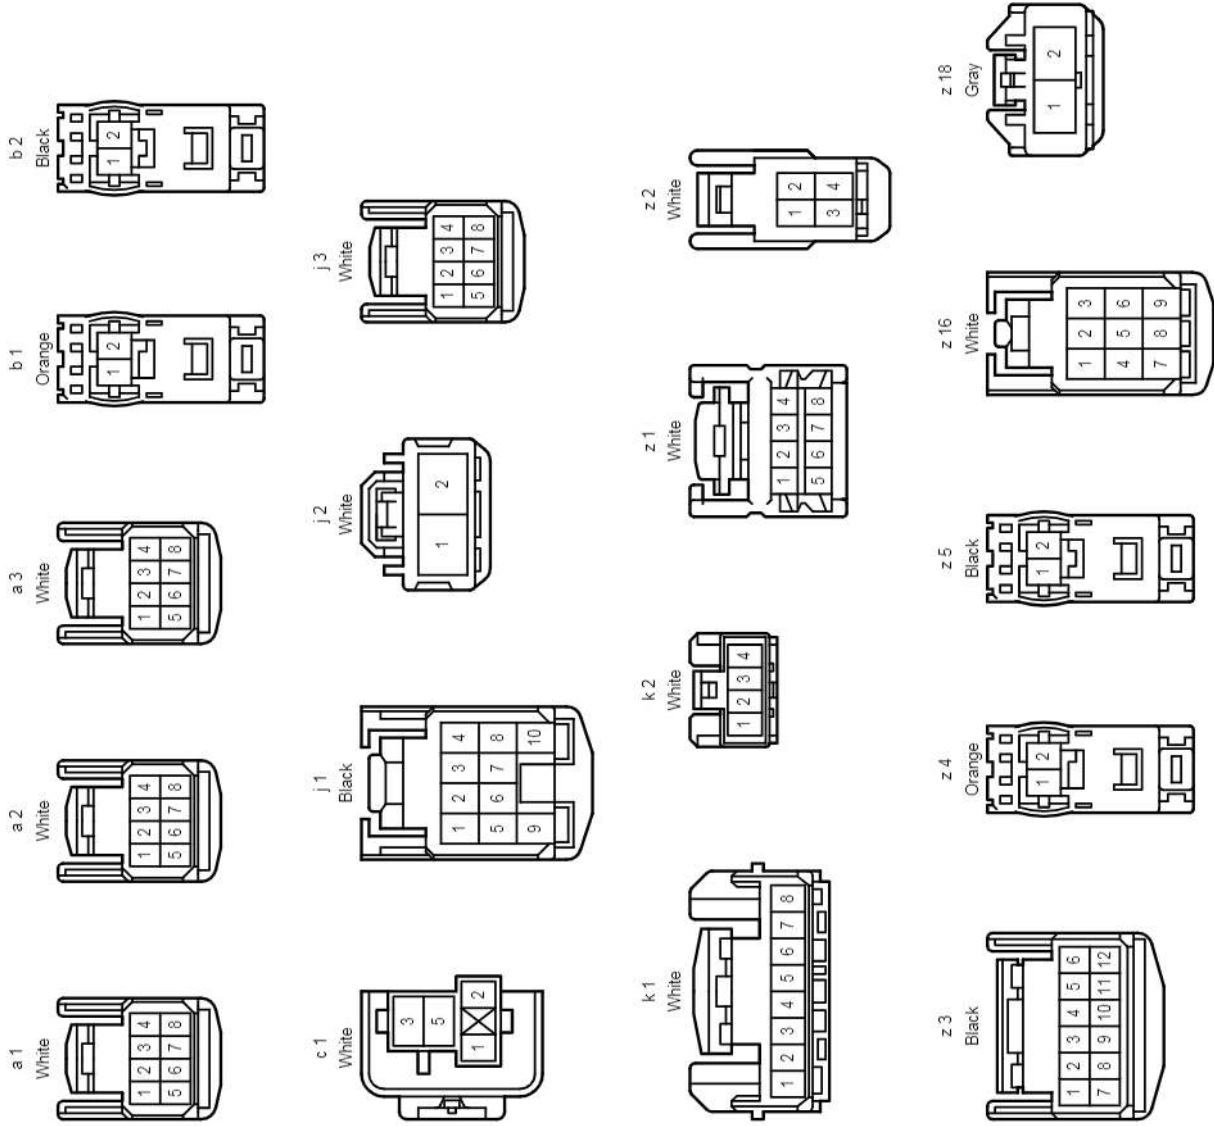 


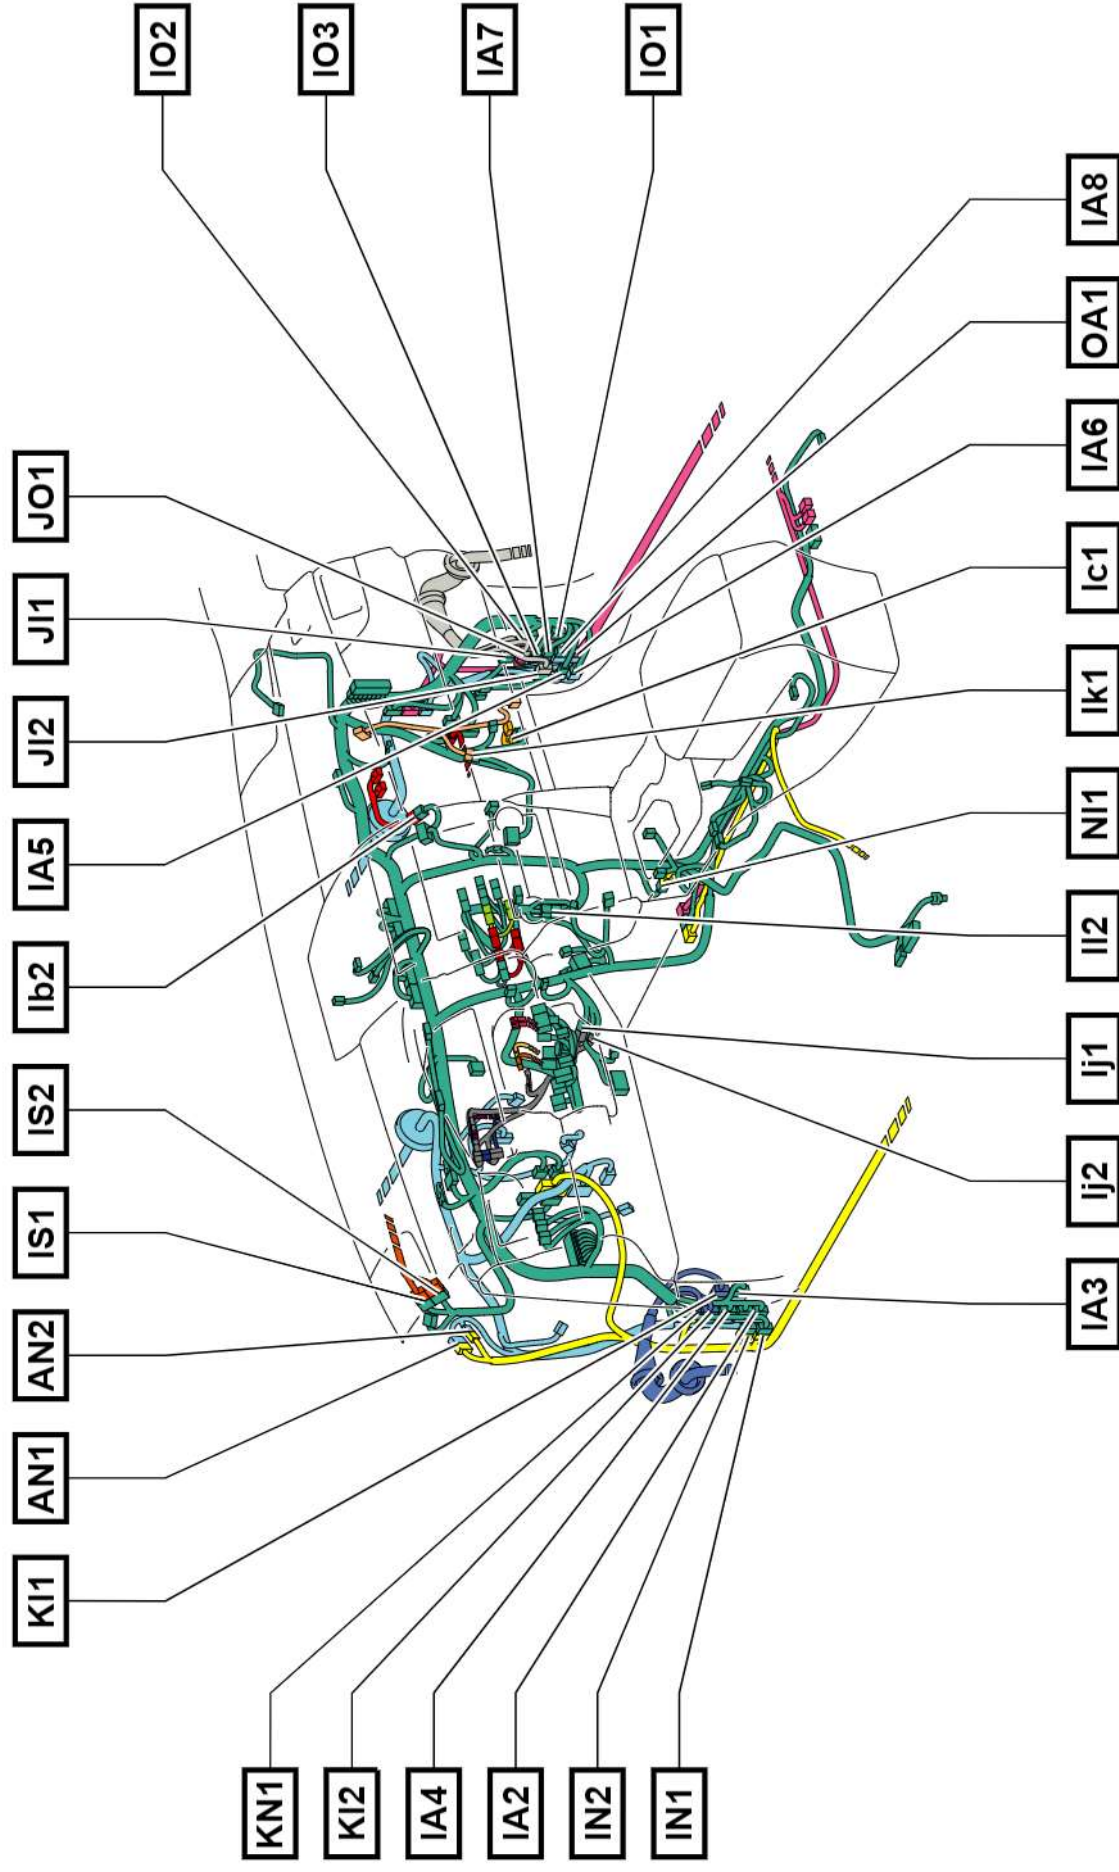 


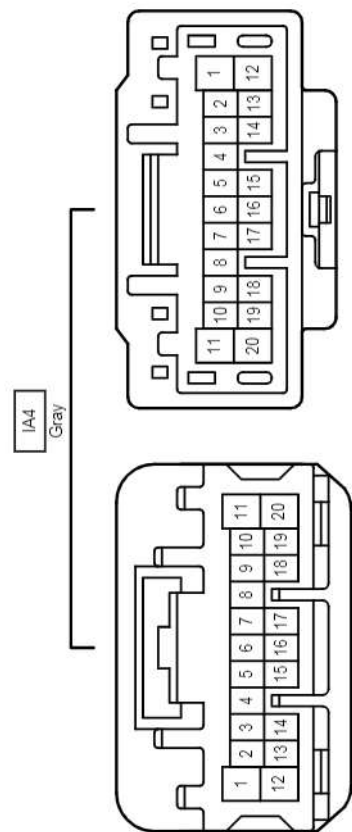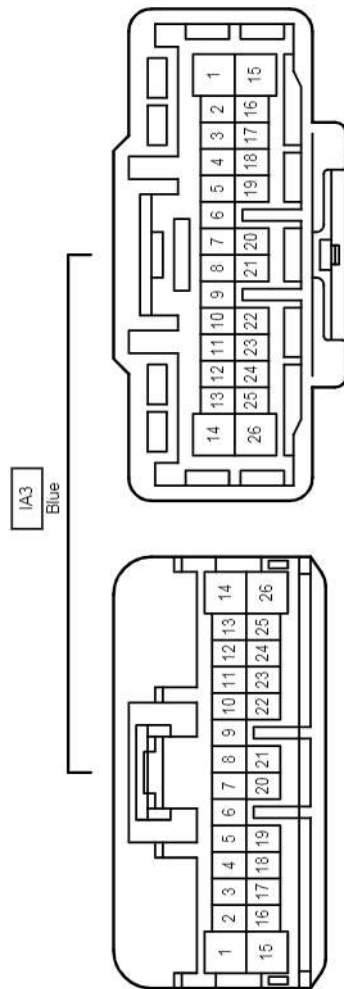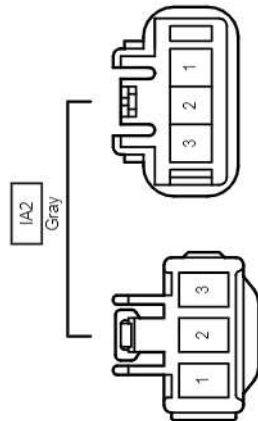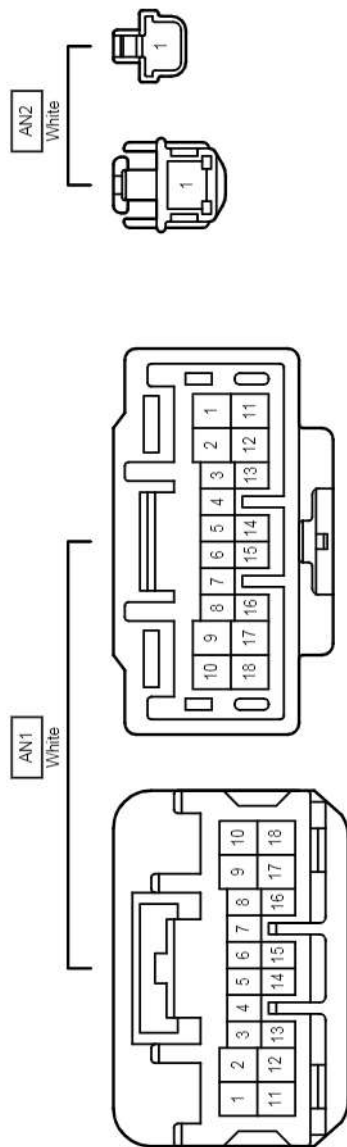    


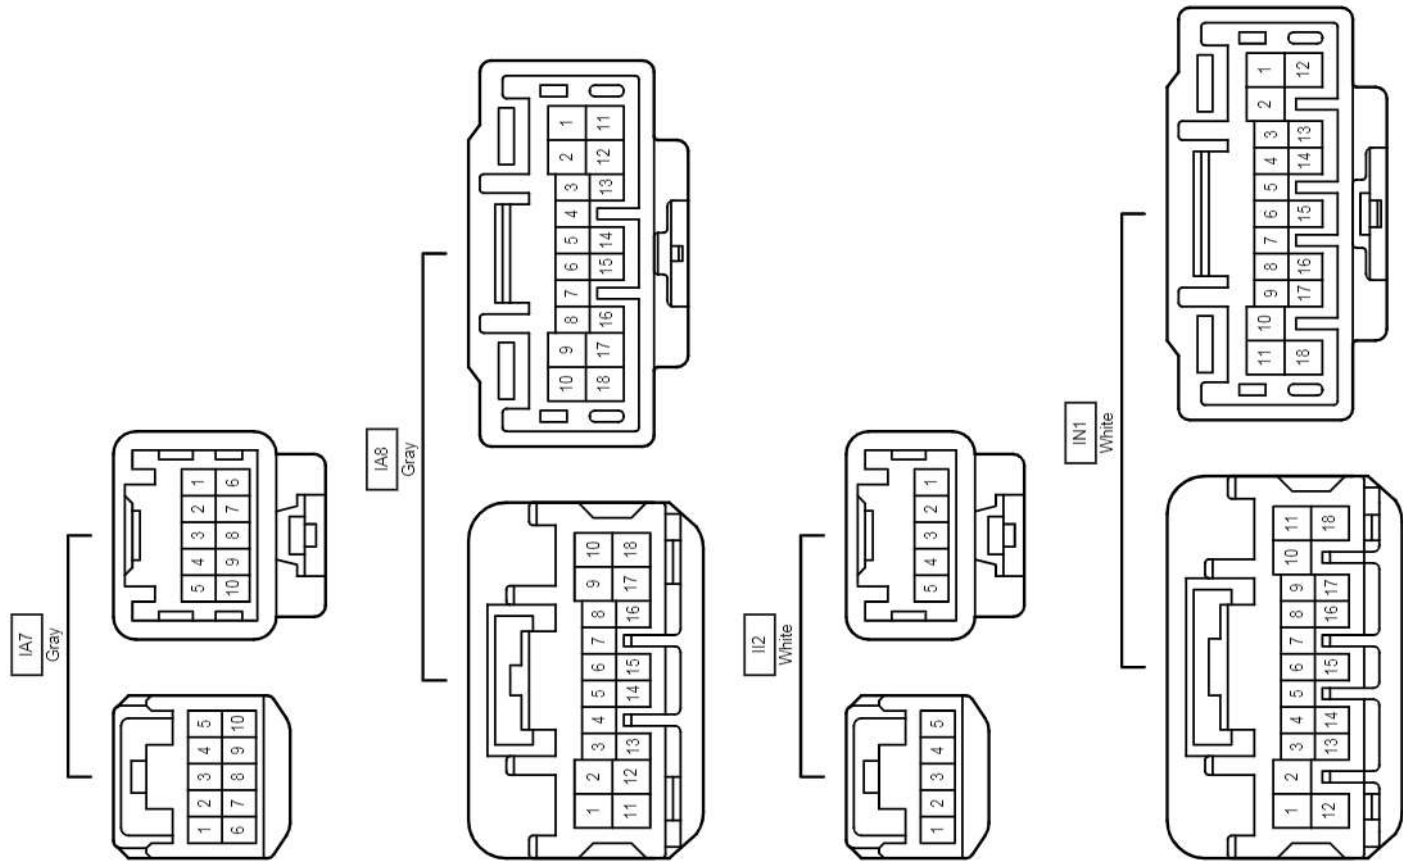 

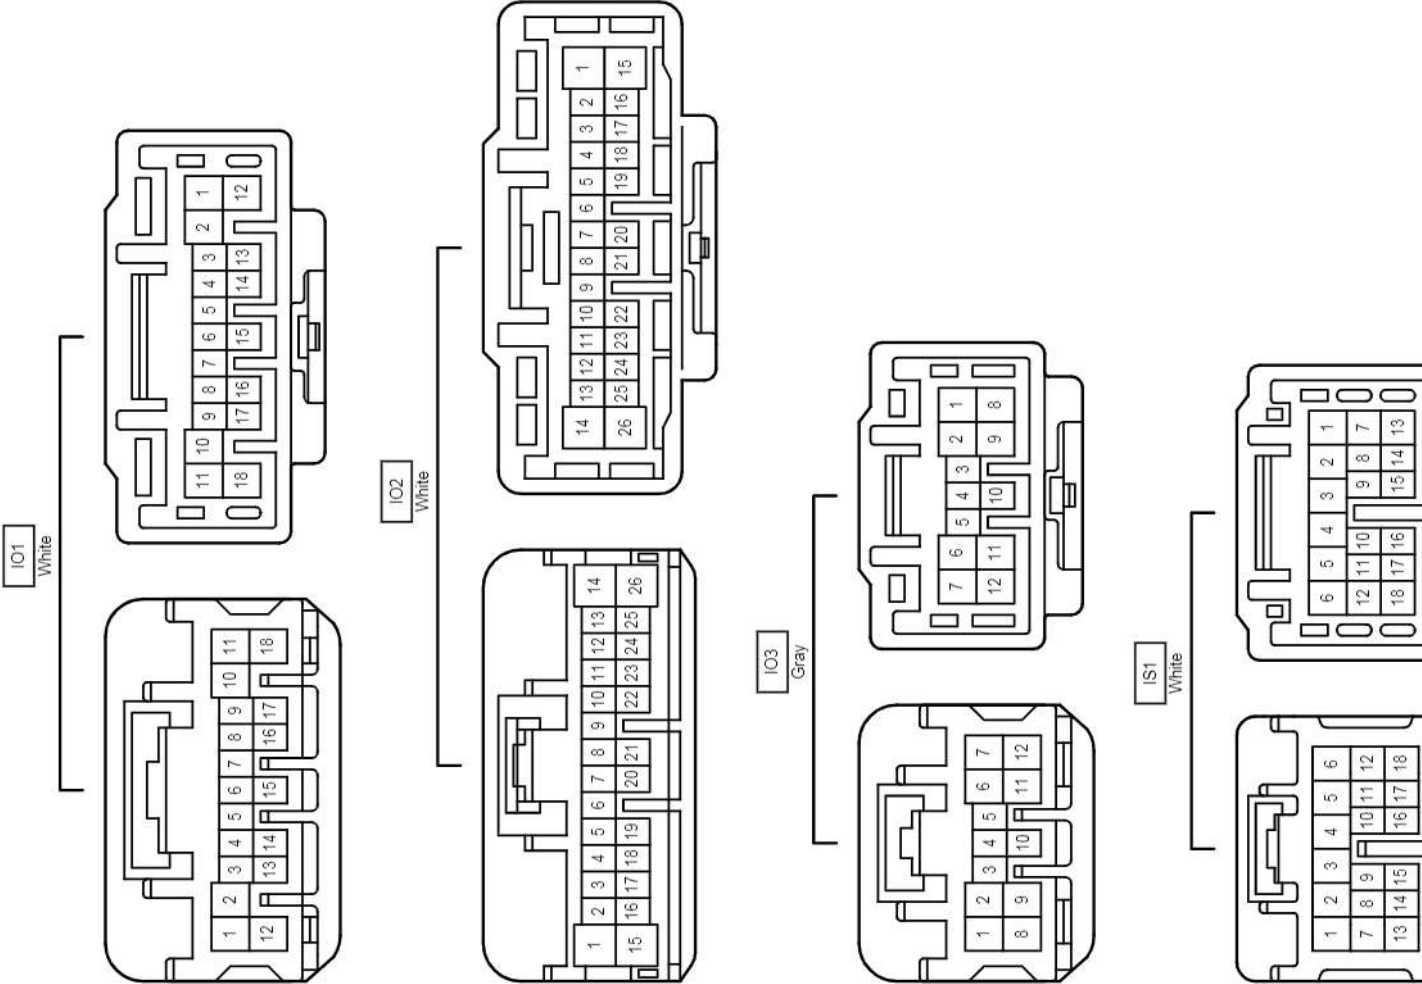      

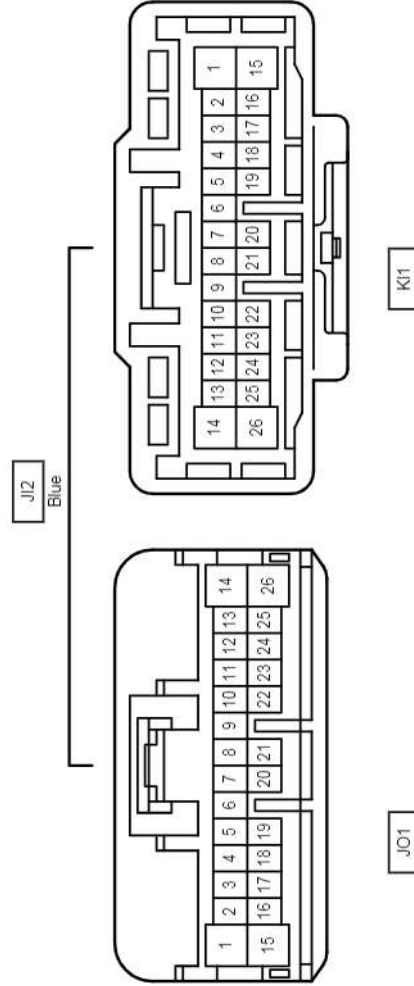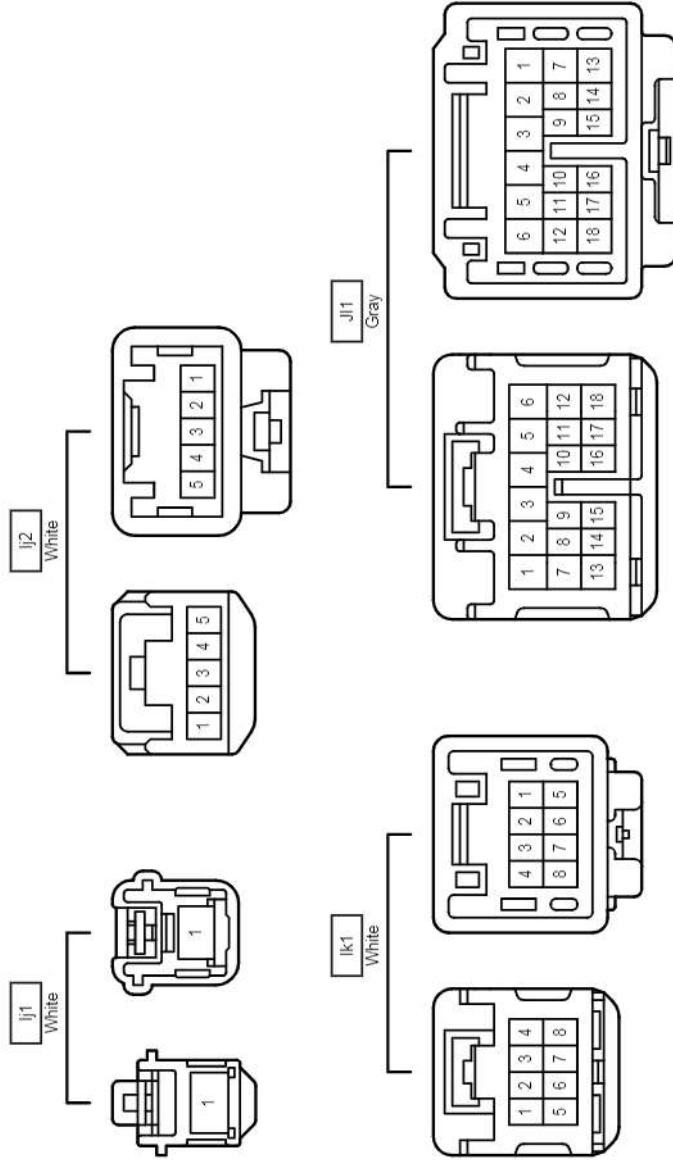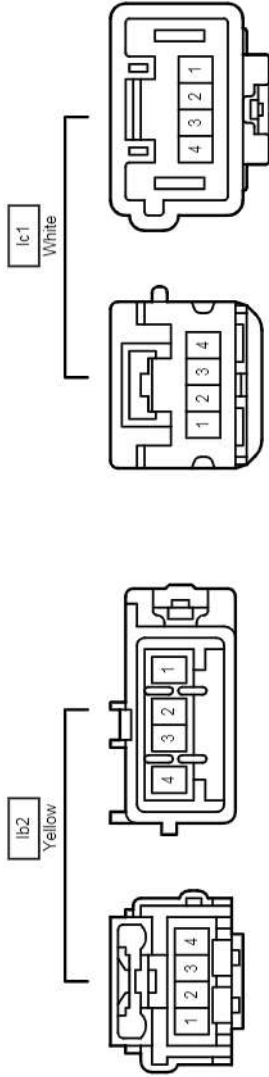


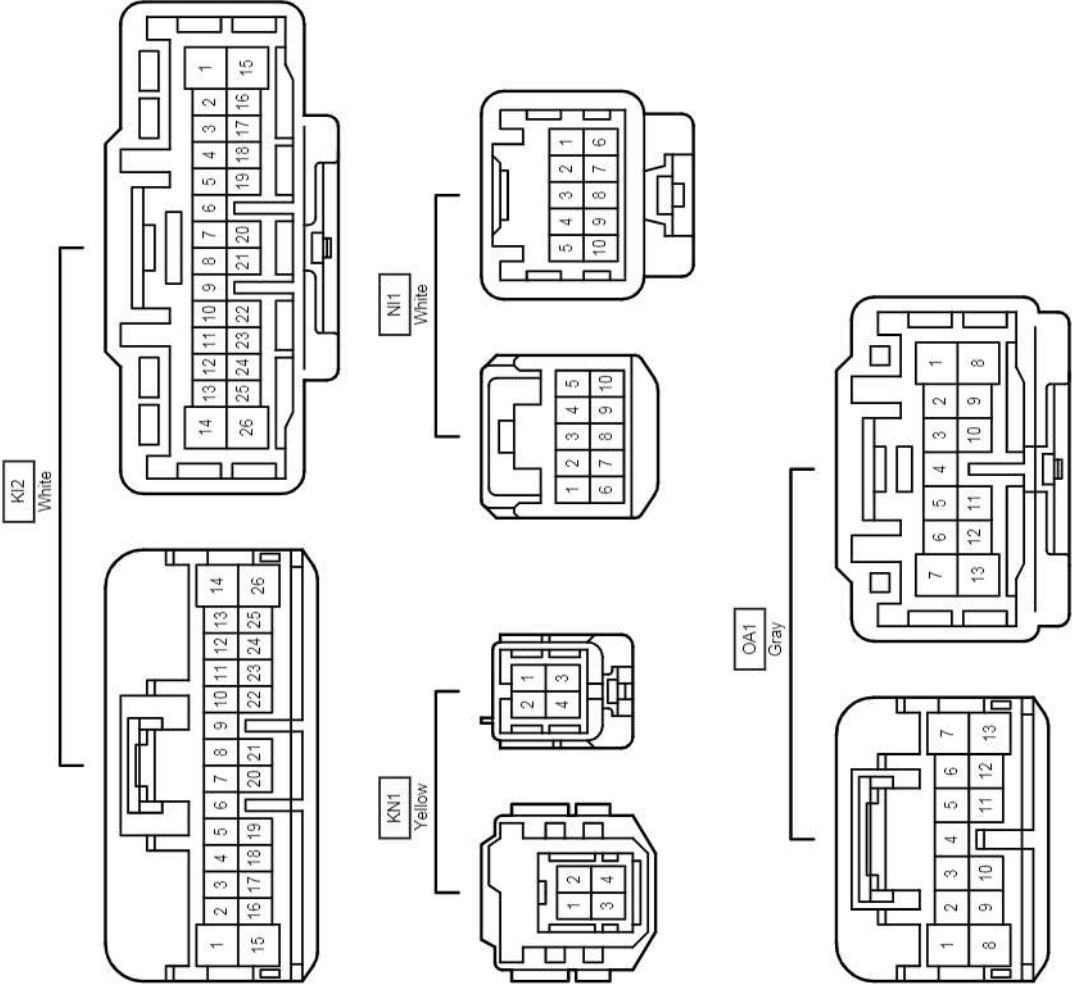


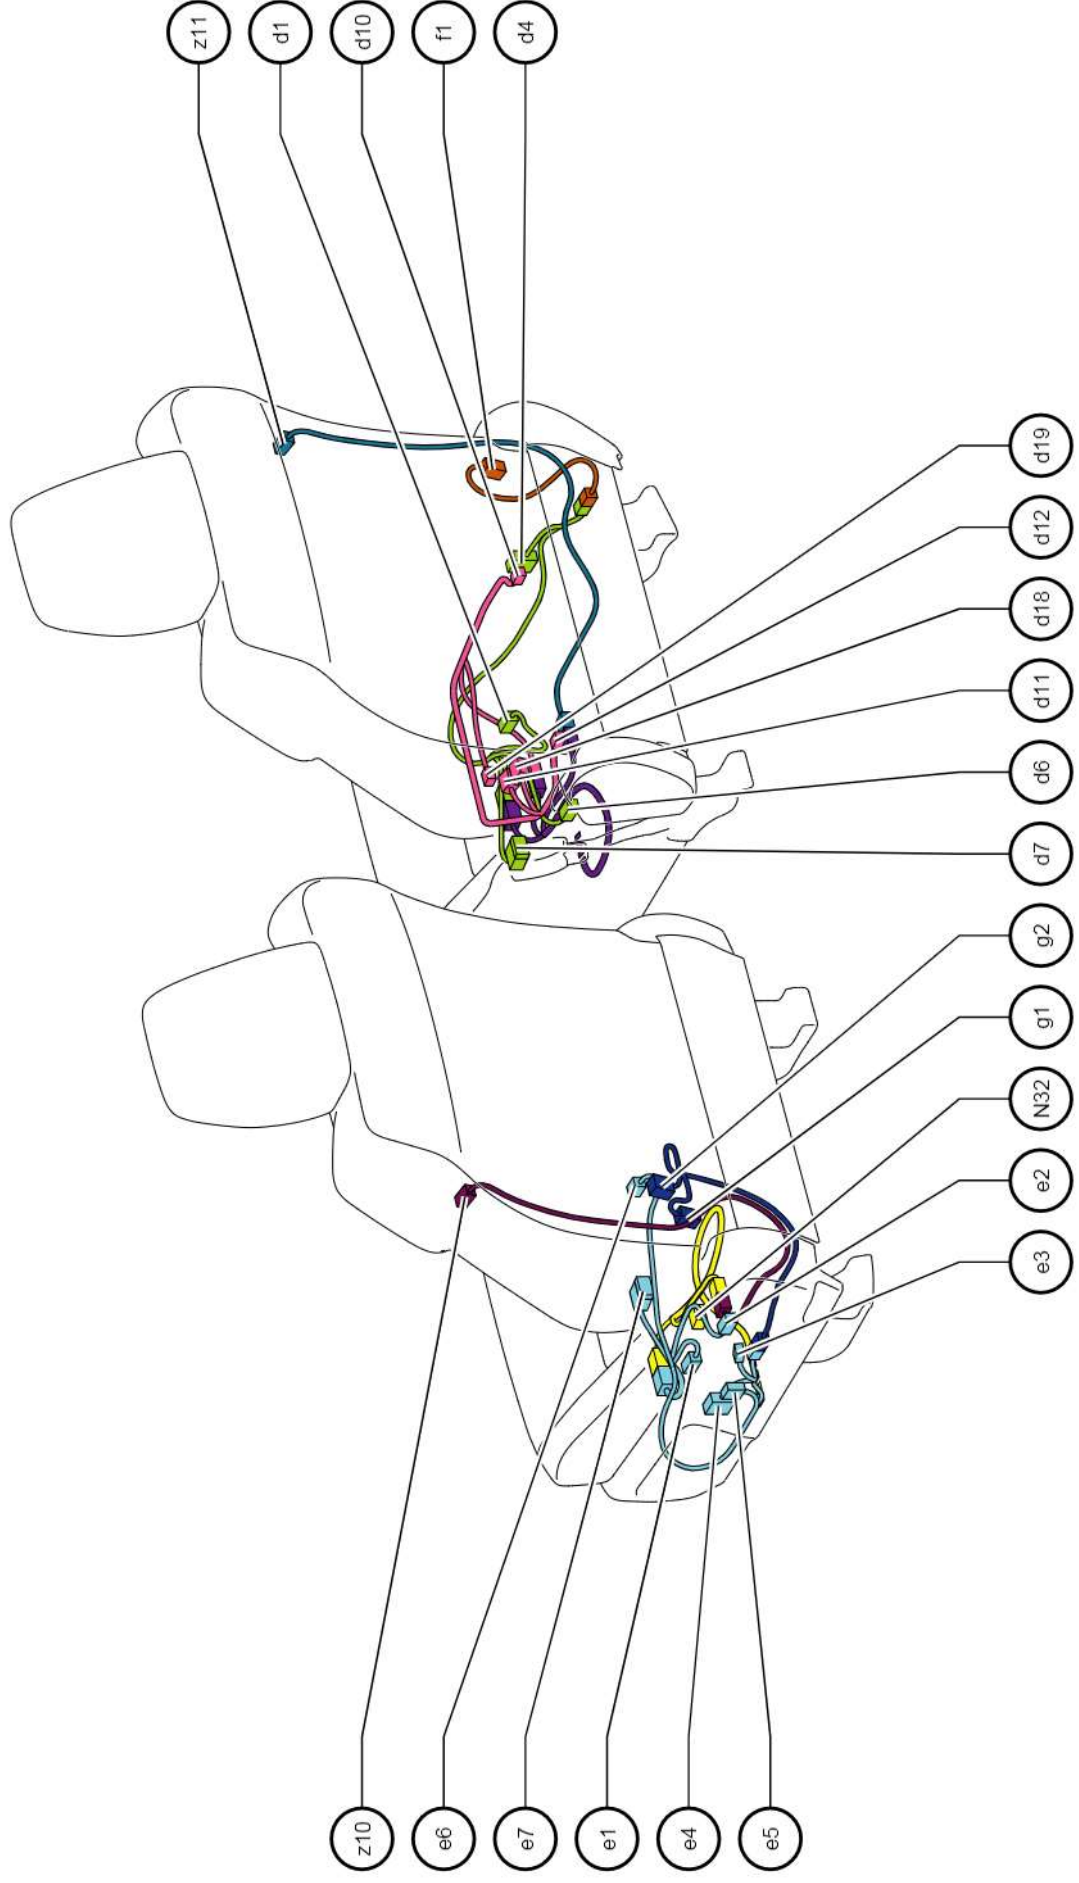


N	32	Front Seat Inner Belt Assembly LH
d	1	Front Power Seat Slide Position Motor RH (Front Seat Frame Assembly with Adjuster RH)
d	4	Front Power Seat Switch RH
d	6	Seat Heater Control Sub-Assembly RH
d	7	Junction Connector
d	10	Rear Occupant Classification Sensor RH
d	11	Occupant Detection ECU
d	12	Rear Occupant Classification Sensor LH
d	18	Occupant Detection ECU
d	19	Front Seat Inner Belt Assembly RH
e	1	Front Power Seat Slide Position Motor LH (Front Seat Frame Assembly with Adjuster LH)
e	2	Front Power Seat Tilt Position Motor LH (Front Seat Frame Assembly with Adjuster LH)
e	3	Front Power Seat Lift Position Motor LH (Front Seat Frame Assembly with Adjuster LH)
e	4	Front Power Seat Switch LH
e	5	Front Power Seat Lumbar Switch
e	6	Seat Heater Control Sub-Assembly LH
e	7	Junction Connector
f	1	Front Power Seat Reclining Position Motor RH (Front Seat Back Frame Sub-Assembly RH)
g	1	Front Power Seat Reclining Position Motor LH (Front Seat Back Frame Sub-Assembly LH)
g	2	Front Power Seat Lumbar Support Motor LH (Lumbar Support Adjuster Assembly LH)
z	10	Front Seat Airbag Assembly LH
z	11	Front Seat Airbag Assembly RH

   Position of Parts in Seat <SIA Made>

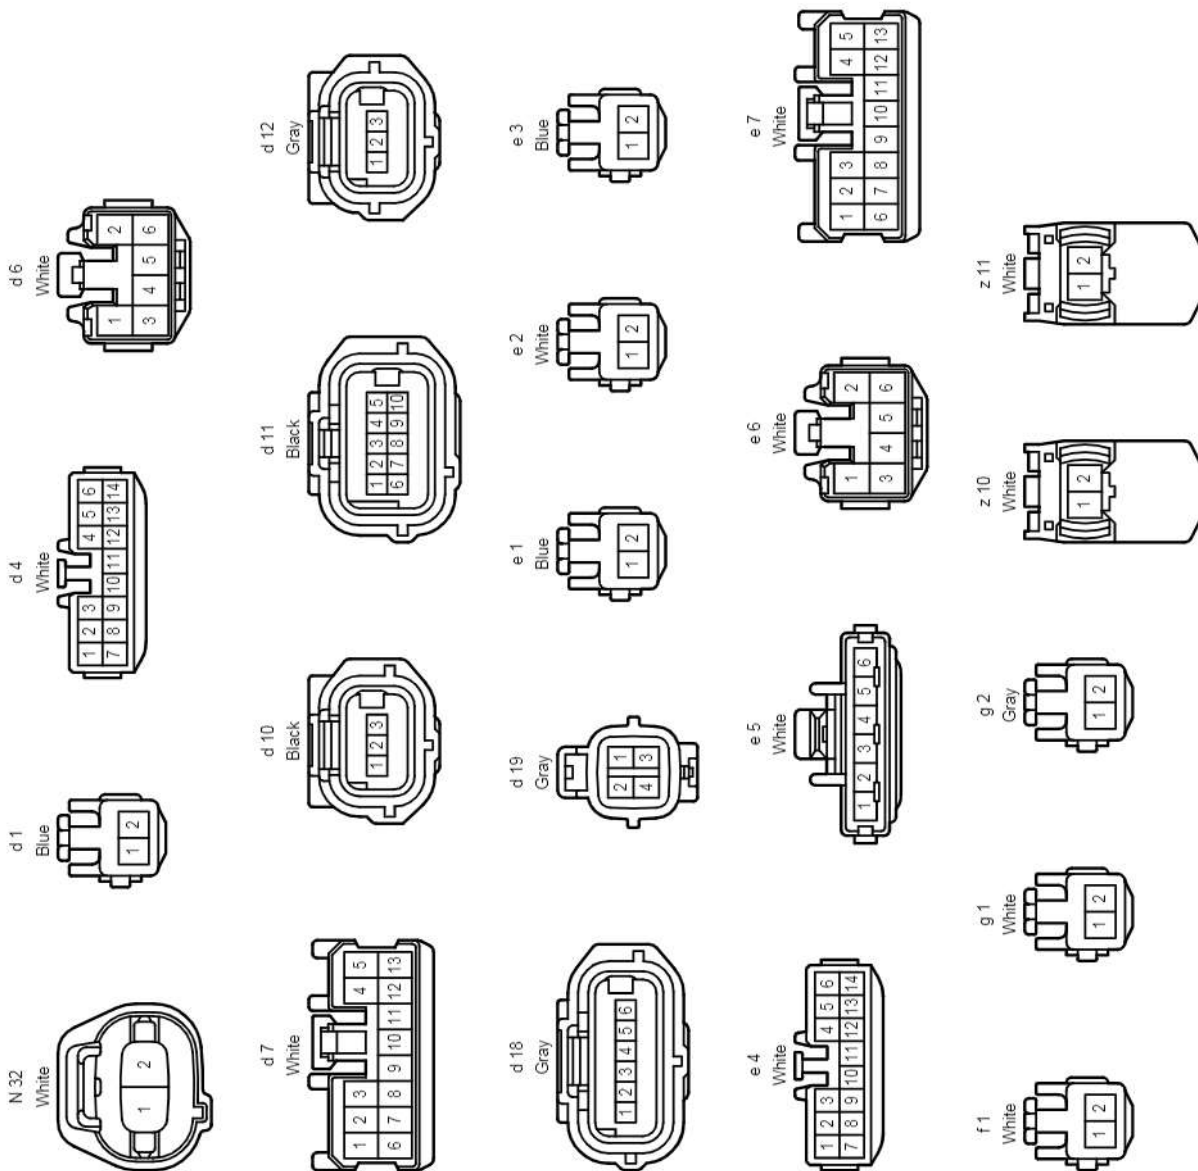


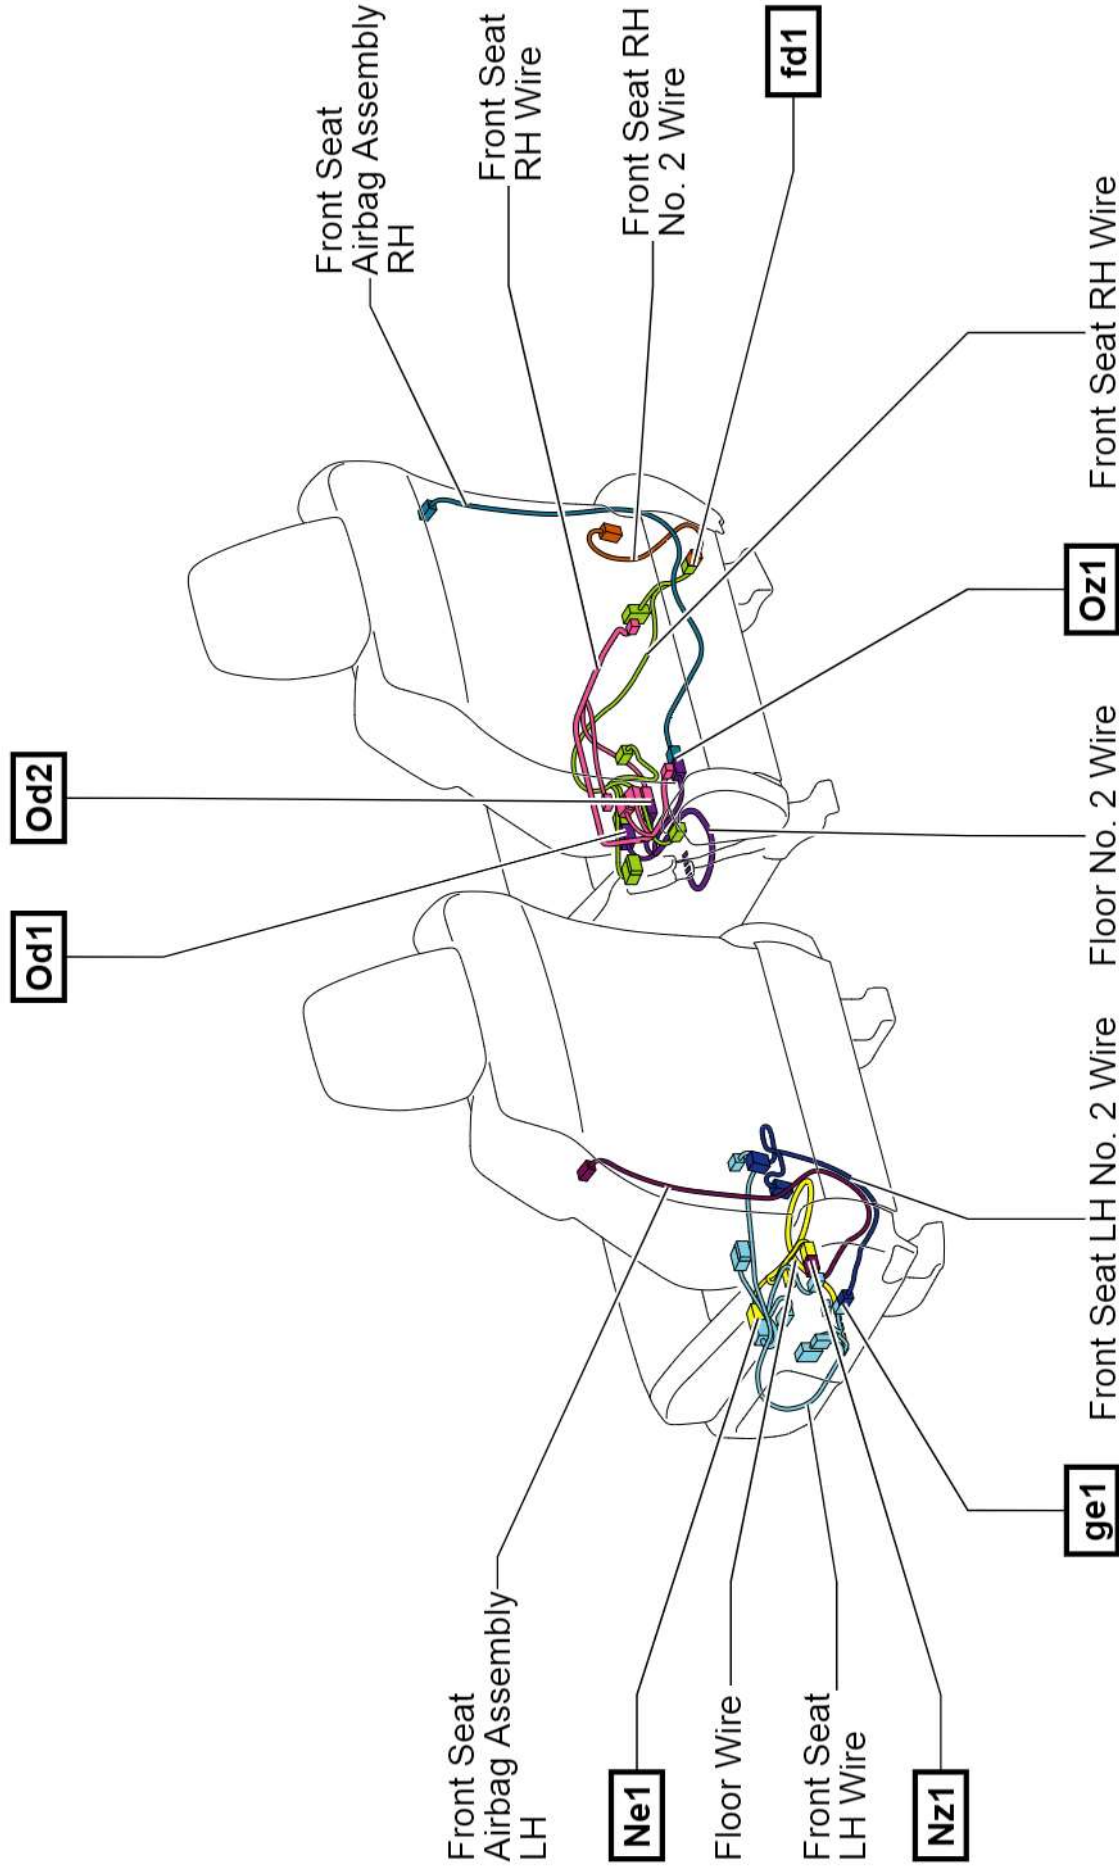

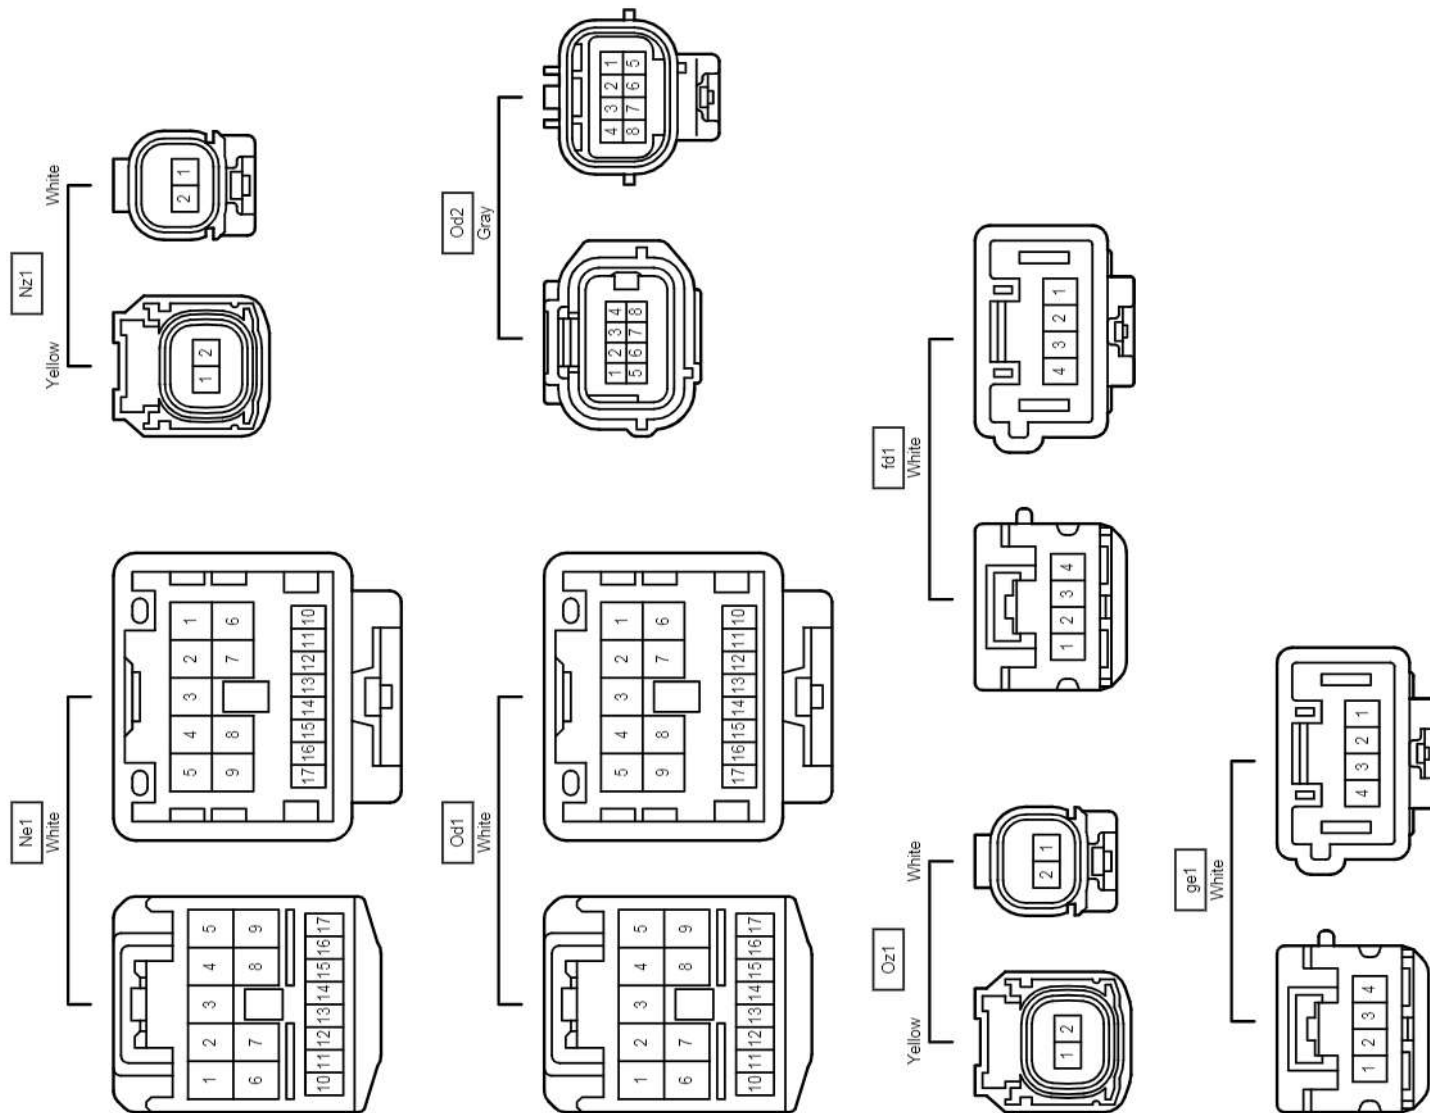

Position of Parts in Seat <TMMK Made>

 * 1.w/ Power Seat
* 2.w/o Power Seat

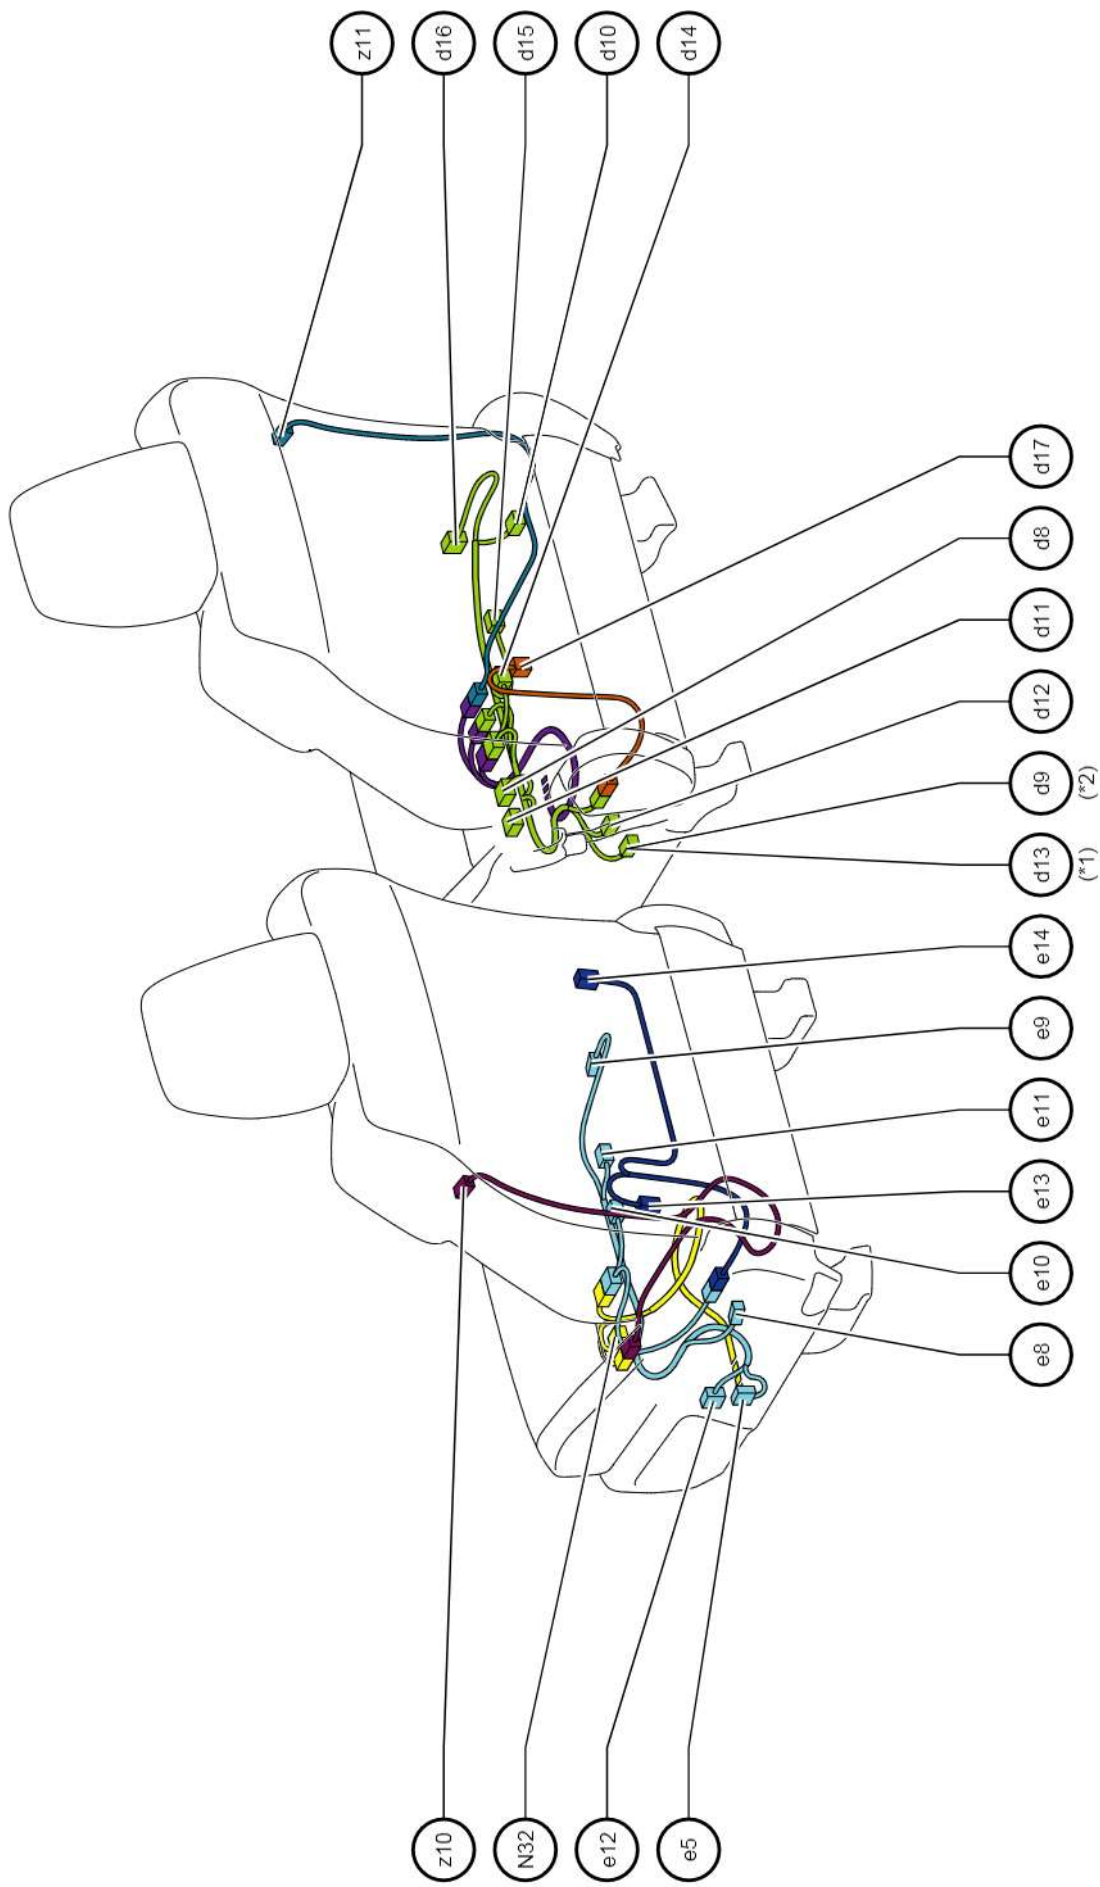

N	32	Front Seat Inner Belt Assembly LH
d	8	Occupant Detection ECU
d	9	Front Seat Inner Belt Assembly RH
d	10	Rear Occupant Classification Sensor RH
d	11	Occupant Detection ECU
d	12	Rear Occupant Classification Sensor LH
d	13	Front Seat Inner Belt Assembly RH
d	14	Front Seat Cushion Heater Assembly RH
d	15	Front Power Seat Slide Position Motor RH (Front Seat Frame Assembly with Adjuster RH)
d	16	Front Power Seat Switch RH
d	17	Front Power Seat Reclining Position Motor RH (Front Seat Back Frame Sub-Assembly RH)
e	5	Front Power Seat Lumbar Switch
e	8	Front Power Seat Lift Position Motor LH (Front Seat Frame Assembly with Adjuster LH)
e	9	Front Power Seat Tilt Position Motor LH (Front Seat Frame Assembly with Adjuster LH)
e	10	Front Seat Cushion Heater Assembly LH
e	11	Front Power Seat Slide Position Motor LH (Front Seat Frame Assembly with Adjuster LH)
e	12	Front Power Seat Switch LH
e	13	Front Power Seat Reclining Position Motor LH (Front Seat Back Frame Sub-Assembly LH)
e	14	Front Power Seat Lumbar Support Motor LH (Lumbar Support Adjuster Assembly LH)
z	10	Front Seat Airbag Assembly LH
z	11	Front Seat Airbag Assembly RH

