


FRONT BUMPER COMPONENTS

7616M-01

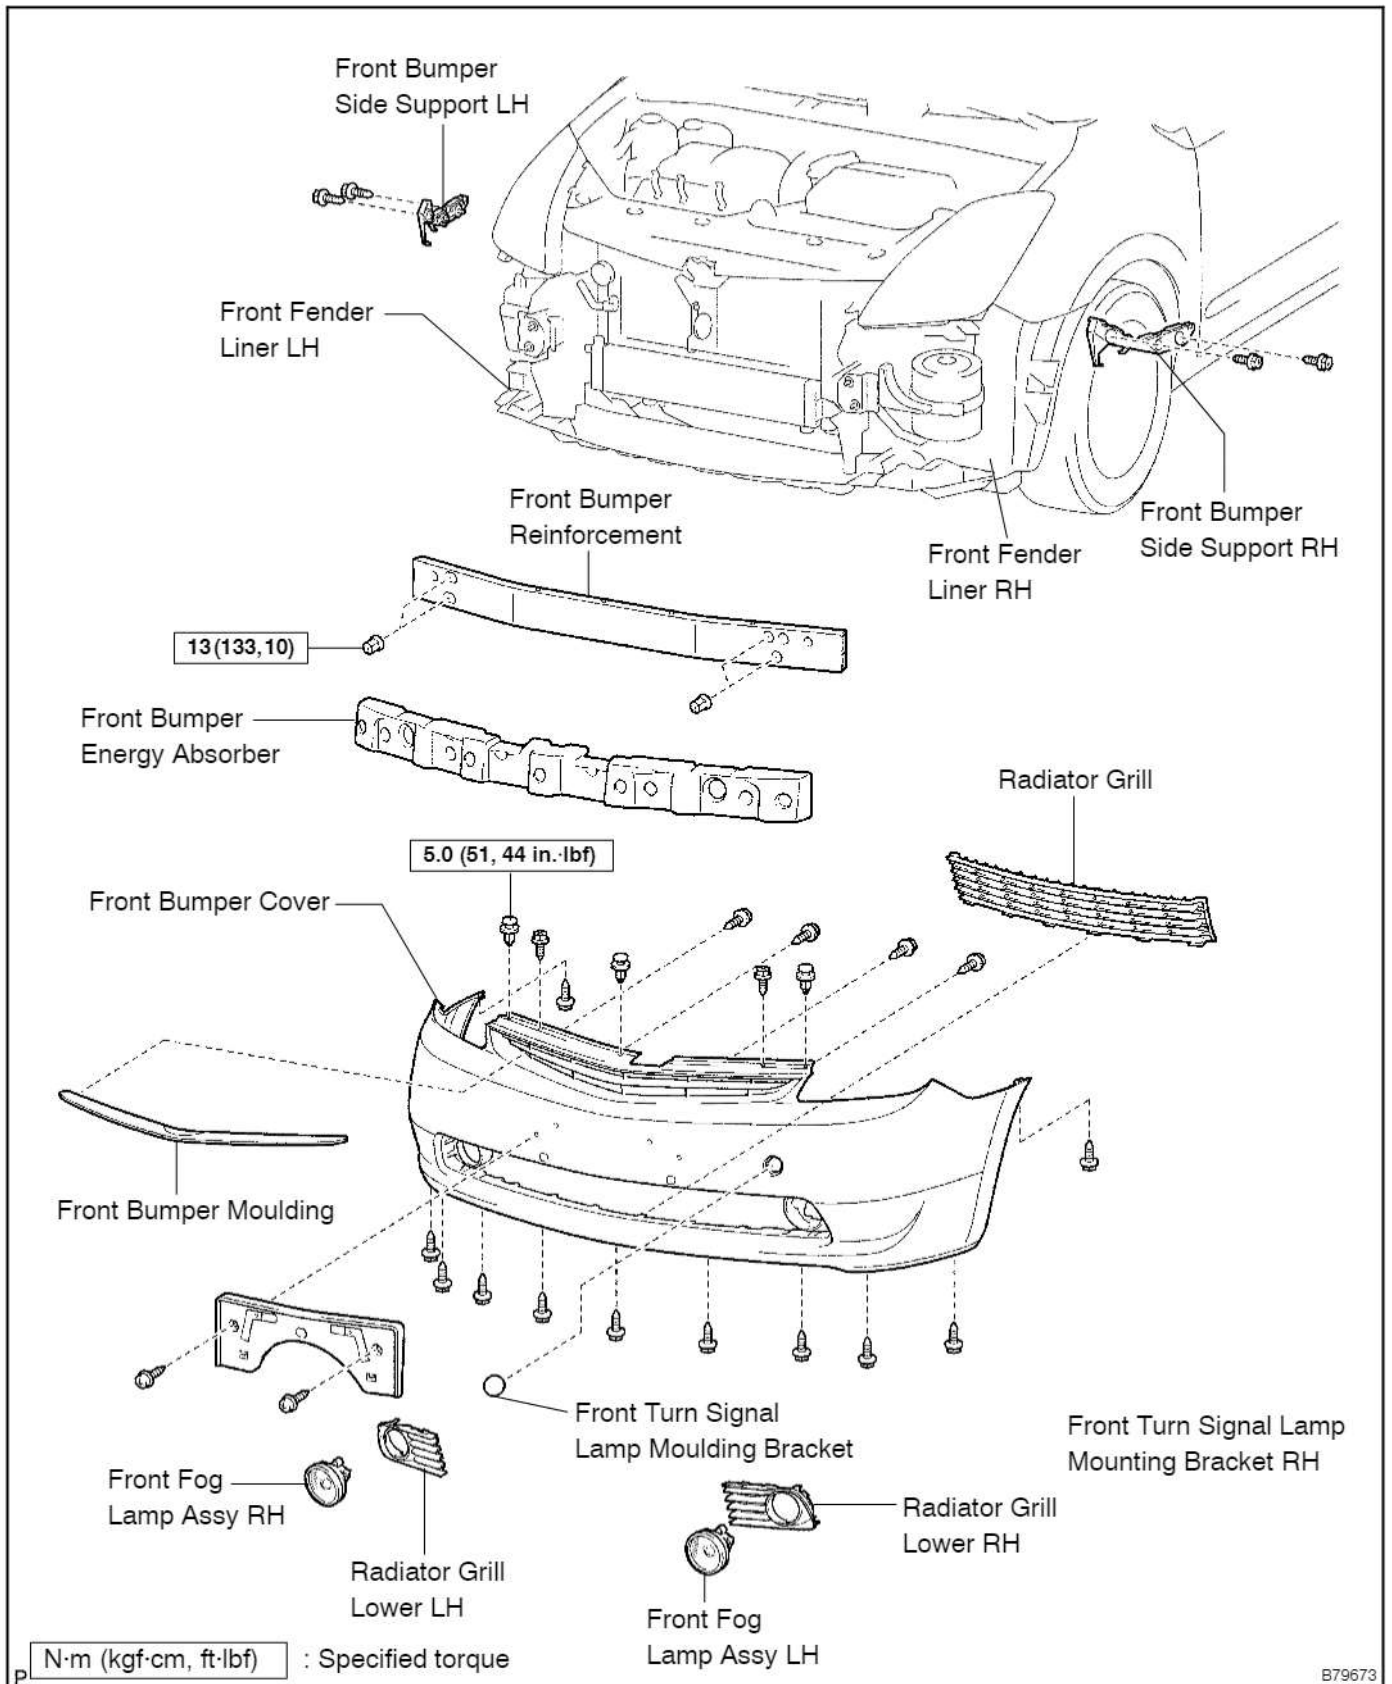


cardiagn.com

REPLACEMENT

HINT:

- The installation procedures are the removal procedures in reverse order.
- A bolt without a torque specification is shown in the standard bolt chart ([see page 03-2](#)).

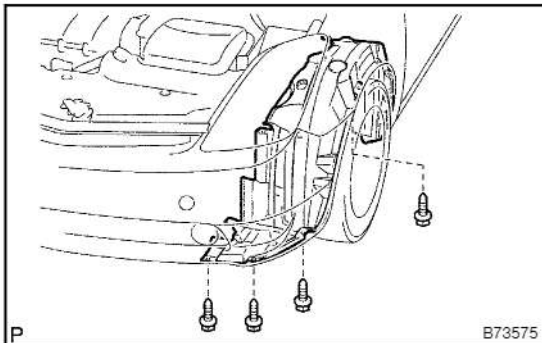

1. REMOVE FRONT FENDER LINER LH

- Remove the 4 screws.
- Partially remove the fender liner.


HINT:

It is not necessary to fully remove the fender liner completely. Partially remove it so that the bumper cover can be removed in step (3).

2. REMOVE FRONT FENDER LINER RH

HINT:

Use the same procedure described for the LH side.

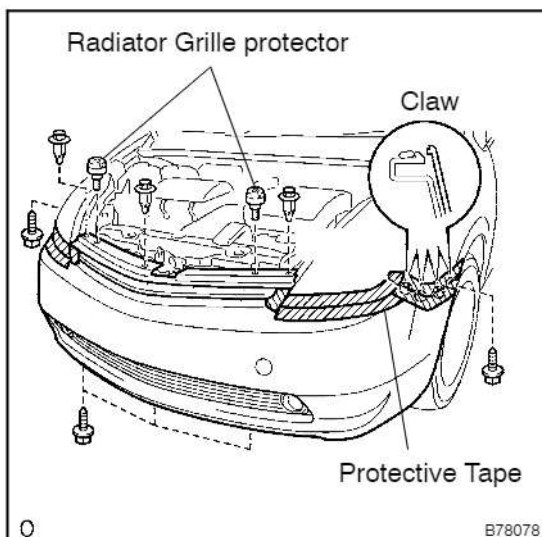


3. REMOVE FRONT BUMPER COVER

- Put protective tape under the front fender.
- Remove the 2 radiator grille protectors and 5 screws.
- Using a screwdriver, disengage the 8 clips.

HINT:

Tape the screwdriver tip before use.

- w/ Fog lamp:
Disconnect the 2 fog lamp connectors.

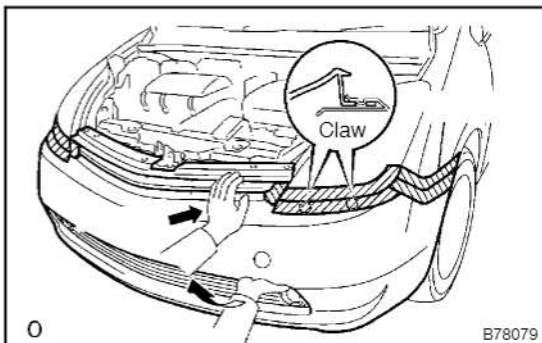

- Engage the 4 claws.
 - Hold the front bumper on its upper and lower parts with your hands as shown in the illustration.
 - Pull up the front bumper's lower part while holding its upper part securely.

NOTICE:

- **Securely hold the front bumper's upper part, otherwise the claw will not be disengaged.**
- **Forcibly pulling up the front bumper will deform the claw.**

4. REMOVE FRONT BUMPER ENERGY ABSORBER**5. REMOVE FRONT BUMPER REINFORCEMENT**

- (a) Using a screwdriver, remove the 4 wire harness clamps.

HINT:

Tape the screwdriver tip before use.


- (b) Remove the 4 nuts and reinforcement.

6. REMOVE FRONT BUMPER SIDE SUPPORT LH

- (a) Remove the 2 screws and side support.

7. REMOVE FRONT BUMPER SIDE SUPPORT RH

- (a) Remove the 2 screws and side support.

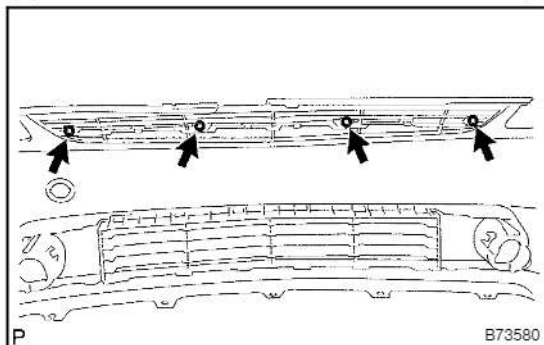
**8. REMOVE FRONT BUMPER MOULDING**

- (a) Remove the 4 screws.

- (b) Using a screwdriver, disengage the 4 claws and moulding.

HINT:

Tape the screwdriver tip before use.

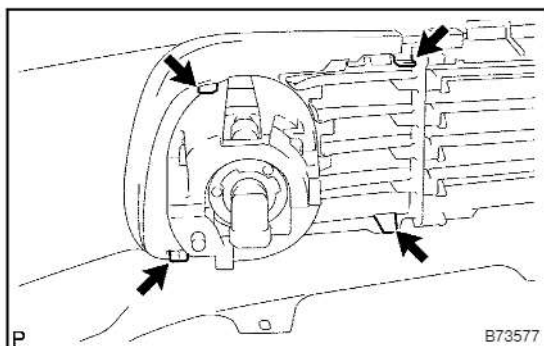9. REMOVE FOG LAMP ASSY LH**10. REMOVE FOG LAMP ASSY RH****11. REMOVE RADIATOR GRILLE LOWER LH**

- (a) Using a screwdriver, disengage the 4 claws and remove the grill lower.


HINT:

Tape the screwdriver tip before use.

12. REMOVE RADIATOR GRILLE LOWER RH

HINT:

Use the same procedure described for the LH side.

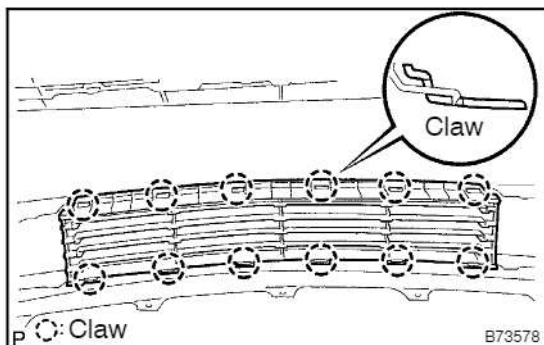**13. REMOVE RADIATOR GRILLE**

- (a) Using a screwdriver, disengage the 12 claws and remove the grill.

HINT:

Tape the screwdriver tip before use.

14. REMOVE FRONT TURN SIGNAL LAMP MOUNTING BRACKET RH

- (a) Using a screwdriver tip before use.

15. INSTALL FRONT BUMPER REINFORCEMENT

- (a) Install the reinforcement with the 6 nuts.


16. INSTALL FRONT BUMPER COVER

- (a) Install the bumper cover with the 2 bolts.

Torque: 5.0 N·m (51, kgf·cm, 44 in·lbf)

REAR BUMPER COMPONENTS

76180-01

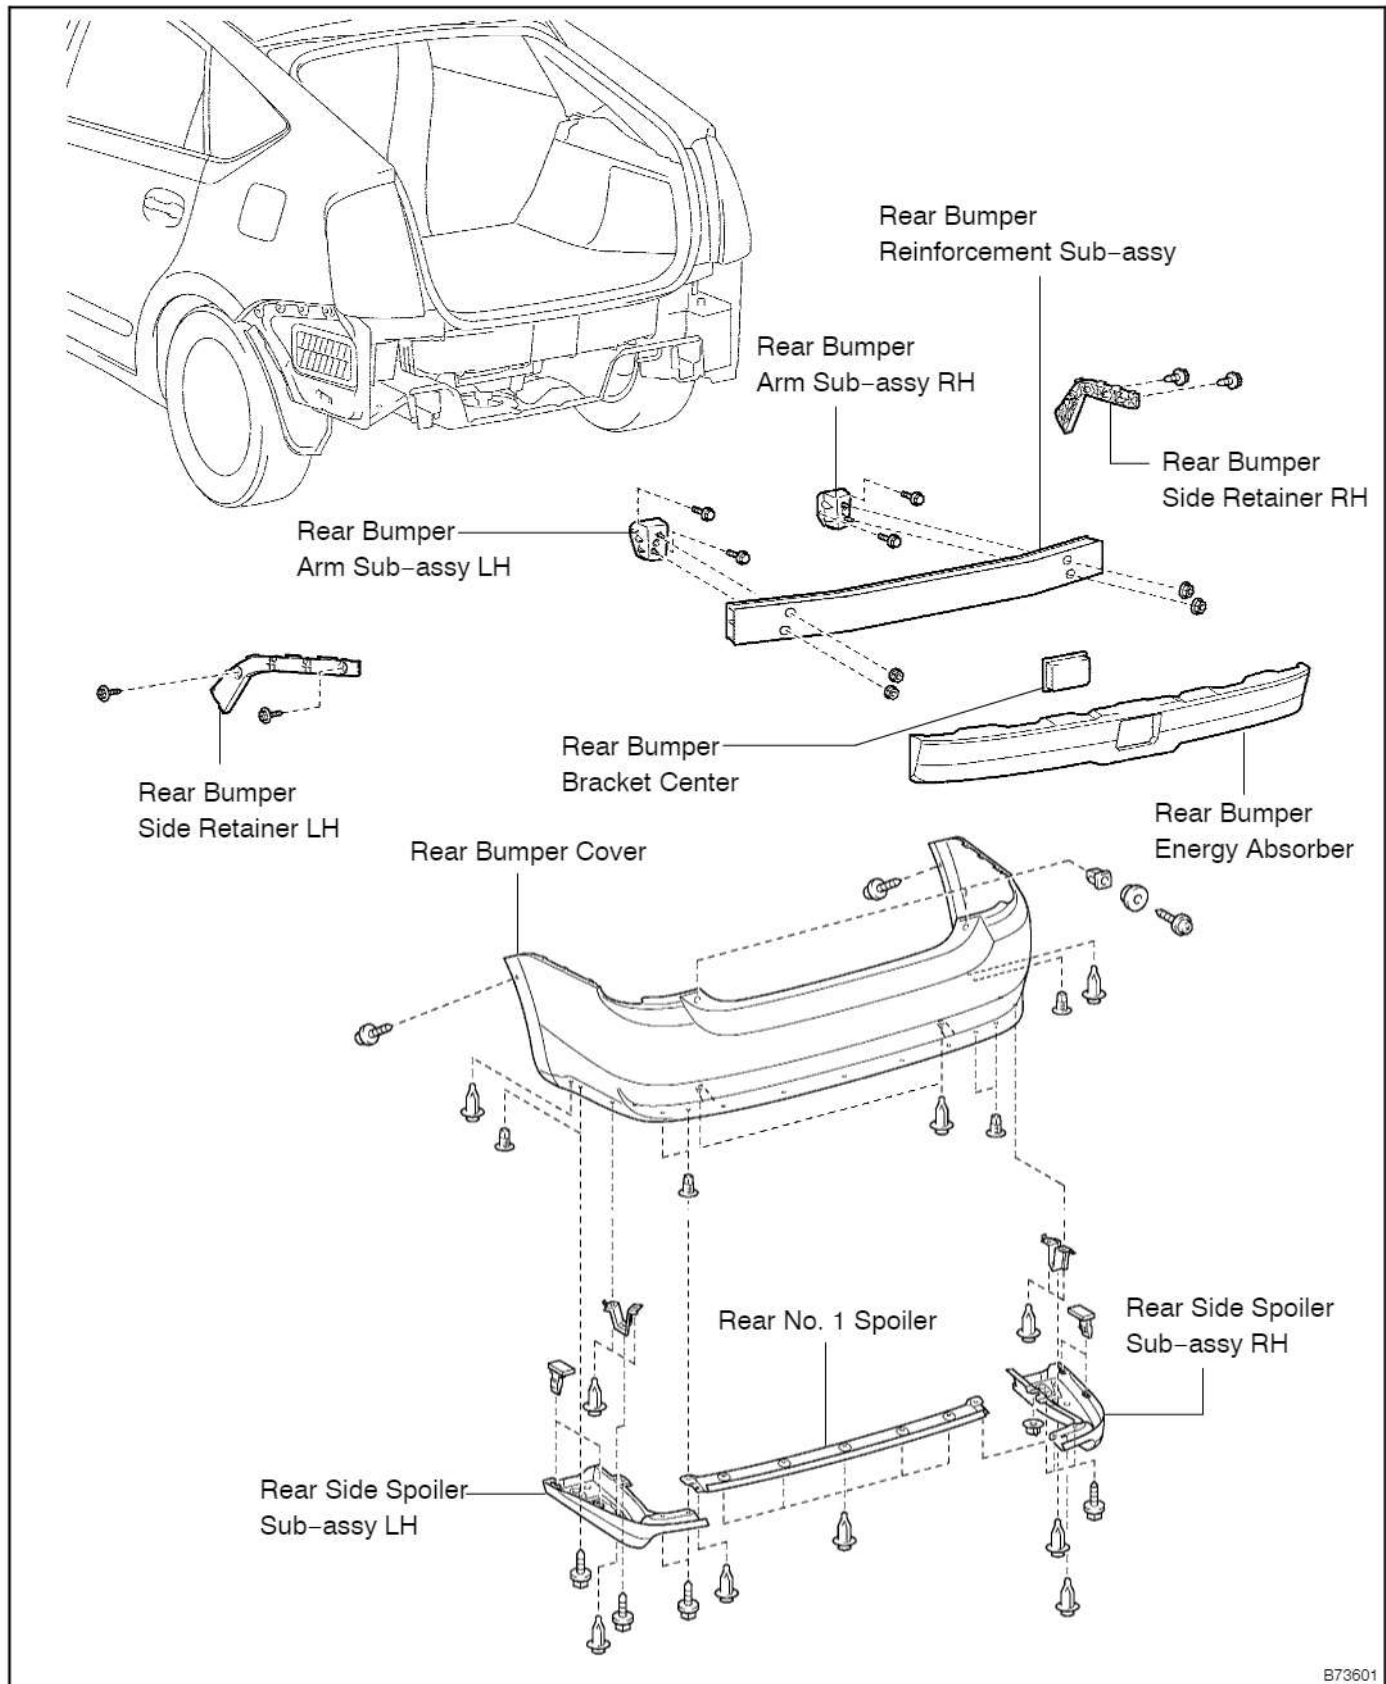

B73601

REPLACEMENT


HINT:

- The installation procedures are the removal procedures in reverse order.
- When replacing the spoiler, heat the body and spoiler using a heat light.

Heating temperature:

Item	Temperature
Spoiler No. 1 Side spoiler	40 to 60°C (104 to 140°F)
Bumper	20 to 30°C (68 to 86°F)

- A bolt without a torque specification is shown in the standard bolt chart (see page 03-2).

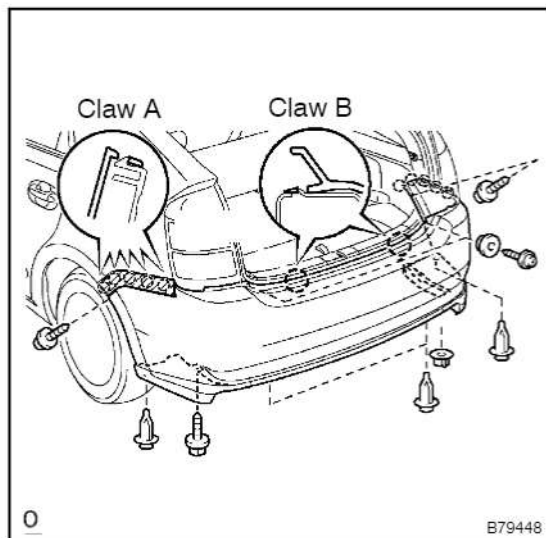


1. REMOVE REAR BUMPER COVER

- Put protective tape under the quarter panel.
- Remove the 2 screws and 2 stoppers.
- Remove the clip, screw and side spoiler LH.
- Remove the nut, clip and side spoiler RH.
- Using a clip remover, remove the 4 clips.
- Disengage the 10 claws labeled A and 2 claws labeled B.

HINT:

Tape the screwdriver tip before use.

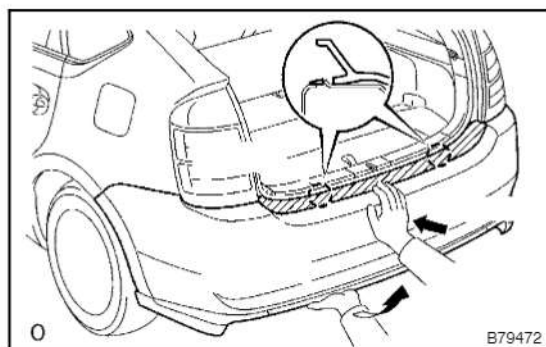

- Engage the claw.
 - Hold the rear bumper on its upper and lower parts with your hands as shown in the illustration.
 - Pull up the rear bumper's lower part while holding its upper part securely.

NOTICE:

- Securely hold the rear bumper's upper part, otherwise the claw will not be disengaged.
- Forcibly pulling up the rear bumper will deform the claw.

2. REMOVE REAR BUMPER ENERGY ABSORBER

3. REMOVE REAR BUMPER BRACKET CENTER

4. REMOVE REAR BUMPER REINFORCEMENT SUB-ASSY

- Remove the 4 nuts and reinforcement.

5. REMOVE REAR BUMPER ARM SUB-ASSY LH

- Remove the 2 bolts and bumper arm.

6. REMOVE REAR BUMPER ARM SUB-ASSY RH


- Remove the 2 bolts and bumper arm.

7. REMOVE REAR BUMPER SIDE RETAINER LH

- Remove the 2 screws and side retainer.

8. REMOVE REAR BUMPER SIDE RETAINER RH

- Remove the 2 screws and side retainer.

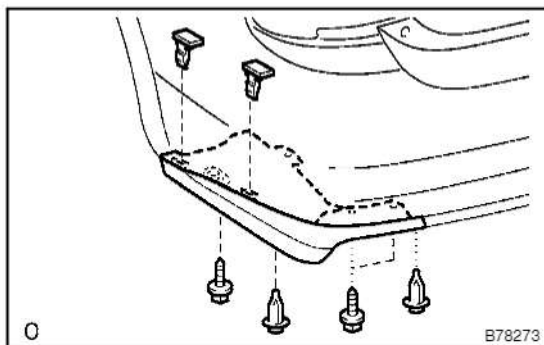


9. REMOVE REAR SIDE SPOILER LH

- (a) Using a screwdriver, remove the 2 retainers.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 2 clips, 3 screws and side spoiler.

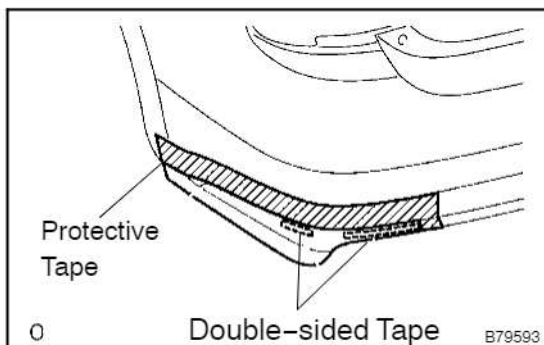

- (c) Put protective tape under the rear bumper.

- (d) Heat the spoiler.

NOTICE:

Do not heat the spoiler excessively.

- (e) Pull off the spoiler No. 1 by cutting the adhesive with a knife.

- (f) Remove the side spoiler.


10. REMOVE REAR SIDE SPOILER RH

- (a) Using a screwdriver, remove the 2 retainers.

HINT:


Tape the screwdriver tip before use.

- (b) Remove the 2 clips and screw, nut and side spoiler.

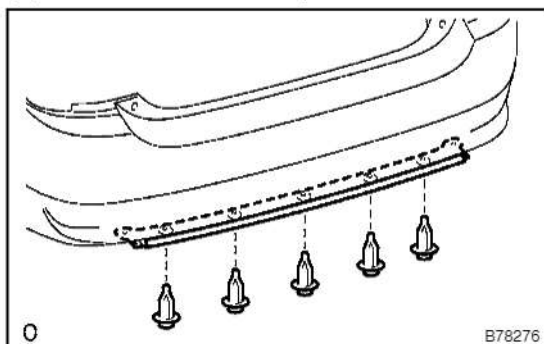

11. REMOVE REAR NO.1 SPOILER

- (a) Using a clip remover, remove the 5 clips and No. 1 spoiler.

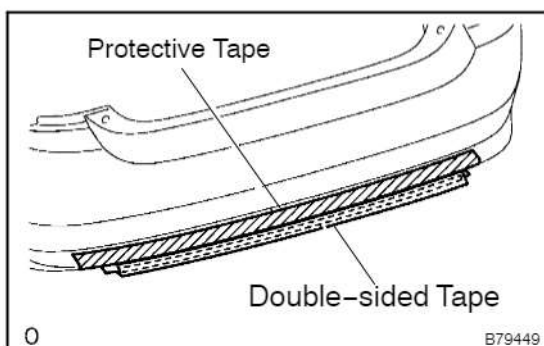

- (b) Put protective tape under the rear bumper.

- (c) Heat the spoiler.

NOTICE:

Do not heat the spoiler excessively.

- (d) Pull off the spoiler No. 1 by cutting the adhesive with a knife.

- (e) Remove the spoiler No.1.


12. INSTALL REAR NO.1 SPOILER

- (a) Clean the bumper surface.
- (1) Using a heat light, heat the bumper surface.
 - (2) Remove the double-sided tape from the bumper.
 - (3) Wipe off the stains with cleaner.

NOTICE:

Do not heat the spoiler excessively.

- (b) If reusing No. 1 spoiler:
Clean the No.1 spoiler.
- (1) Remove the double-sided tape from the No. 1 spoiler.
 - (2) Wipe off the stains with cleaner.
 - (3) Apply new double-sided tape to the No. 1 spoiler, as shown in the illustration.

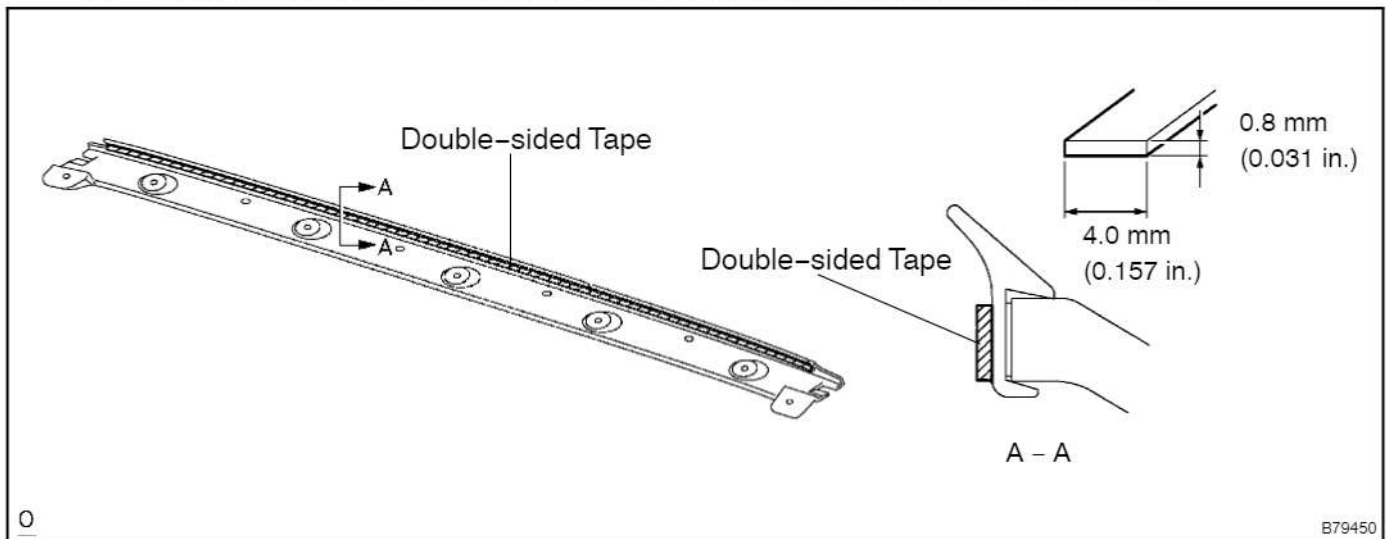

- (c) Install the No. 1 spoiler.
- (1) Using a heat light, heat the bumper and No. 1 spoiler.
 - (2) Remove the peeling paper from the face of the No. 1 spoiler.

NOTICE:

Do not heat the spoiler excessively.

HINT:

After removing the peeling paper, keep the exposed adhesive free from dirt and other contaminants.


13. INSTALL REAR SIDE LH SPOILER

- (a) Clean the bumper surface.
- (1) Using a heat light, heat the bumper surface.
 - (2) Remove the double-sided tape from the bumper.
 - (3) Wipe off the stains with cleaner.

NOTICE:

Do not heat the spoiler excessively.


- (b) If reusing side spoiler:
- (1) Remove the double-sided tape from the No. 1 spoiler.
 - (2) Wipe off the stains with cleaner.
 - (3) Apply new double-sided tape to the side spoiler, as shown in the illustration.

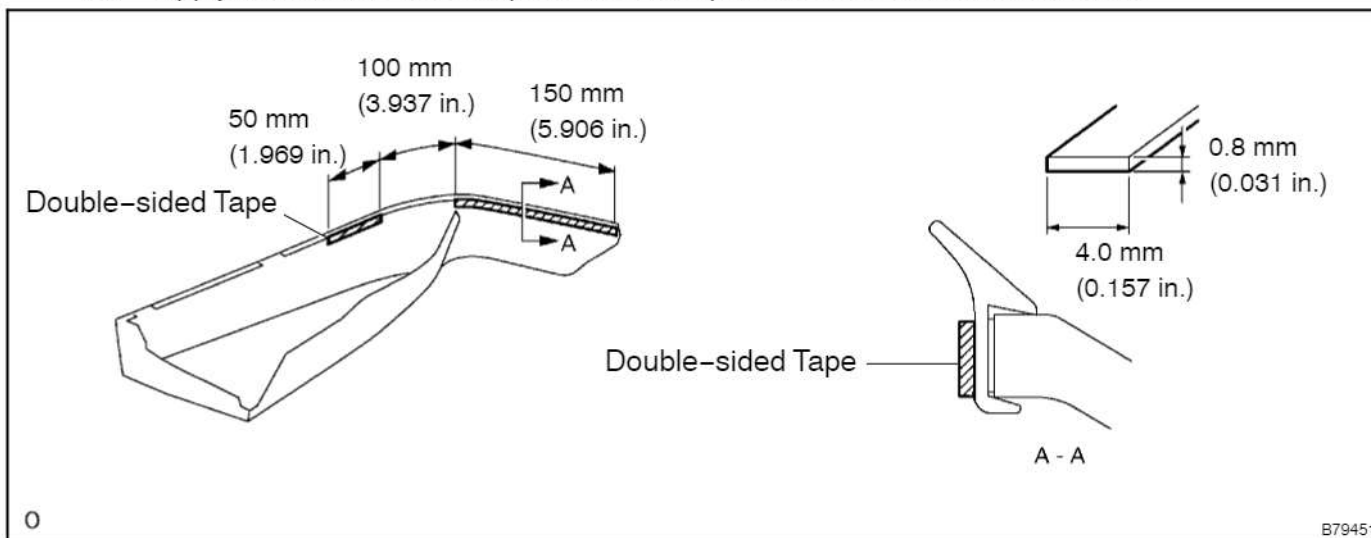

- (c) Install the side spoiler.
- (1) Using a heat light, heat the bumper and side spoiler.
 - (2) Remove the peeling paper from the face of the side spoiler.

NOTICE:

Do not heat the spoiler excessively.

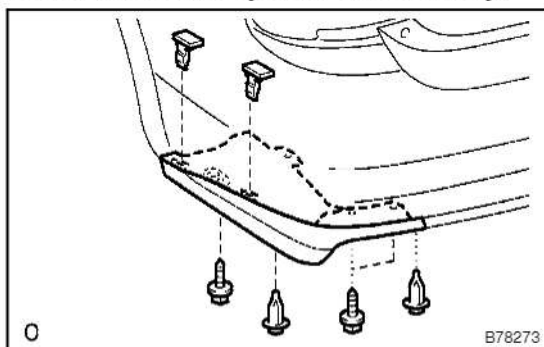

- (3) Install the side spoiler with the 2 retainers, 2 clips and 3 screws.

HINT:

After removing the peeling paper, keep the exposed adhesive free from dirt and other contaminants.

14. INSTALL REAR SIDE RH SPOILER**HINT:**


Use the same procedures described for the LH side.

REAR SPOILER SUB-ASSY REPLACEMENT

7618Q-01

HINT:

- The installation procedures are the removal procedures in reverse order.
 - A bolt without a torque specification is shown in the standard bolt chart ([see page 03-2](#)).
1. **REMOVE REAR WIPER ARM COVER** ([See page 66-22](#))
 2. **REMOVE REAR WIPER ARM ASSY** ([See page 66-22](#))
 3. **REMOVE BACK DOOR TRIM BOARD ASSY** ([See page 75-33](#))
 4. **REMOVE BACK DOOR TRIM BOARD** ([See page 75-33](#))
 5. **REMOVE REAR WIPER MOTOR ASSY** ([See page 66-22](#))

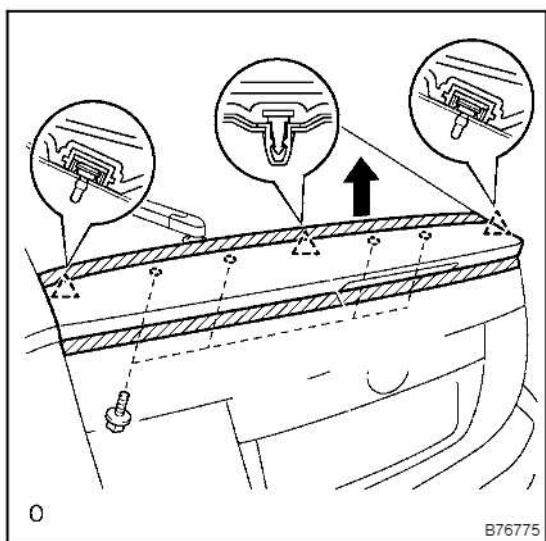

6. REMOVE REAR SPOILER SUB-ASSY

- (a) Put protective tape under the rear spoiler.
- (b) Remove the 4 bolts.
- (c) Using a screwdriver, disengage the 3 clips and rear spoiler.

HINT:

Tape the screwdriver tip before use.

- (d) Disconnect the stop lamp connector.

7. REMOVE CENTER STOP LAMP ASSY

- (a) Remove the 2 screws and stop lamp.

FUEL LID LOCK CONTROL ASSY REPLACEMENT


7618C-01

HINT:

A bolt without a torque specification is shown in the standard bolt chart ([see page 03-2](#)).

1. REMOVE FUEL LID LOCK OPEN LEVER SUB-ASSY


- (a) Remove the front seat ([see page 72-2](#)).
- (b) Remove the rear seat ([see page 72-9](#)).
- (c) Remove the center pillar garnish lower ([see page 76-29](#)).
- (d) Remove the quarter trim panel lower ([see page 76-29](#)).
- (e) Remove the quarter trim panel upper ([see page 76-29](#)).

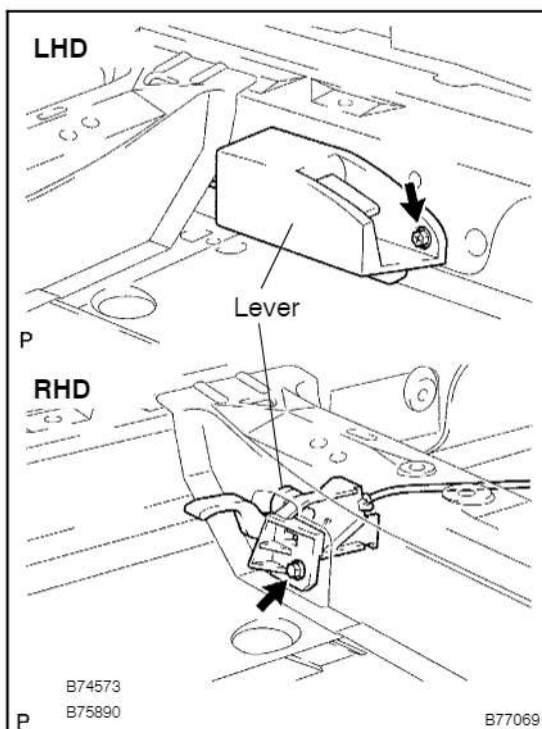


- (f) w/ LHD:
Remove the screw and fuel lever.
- (g) w/ RHD:
Remove the bolt and fuel lever.
- (h) Remove the cable.


2. REMOVE FUEL LID LOCK CONTROL CABLE SUB-ASSY

- (a) Remove the cable from the clamps at the location shown in the illustration.

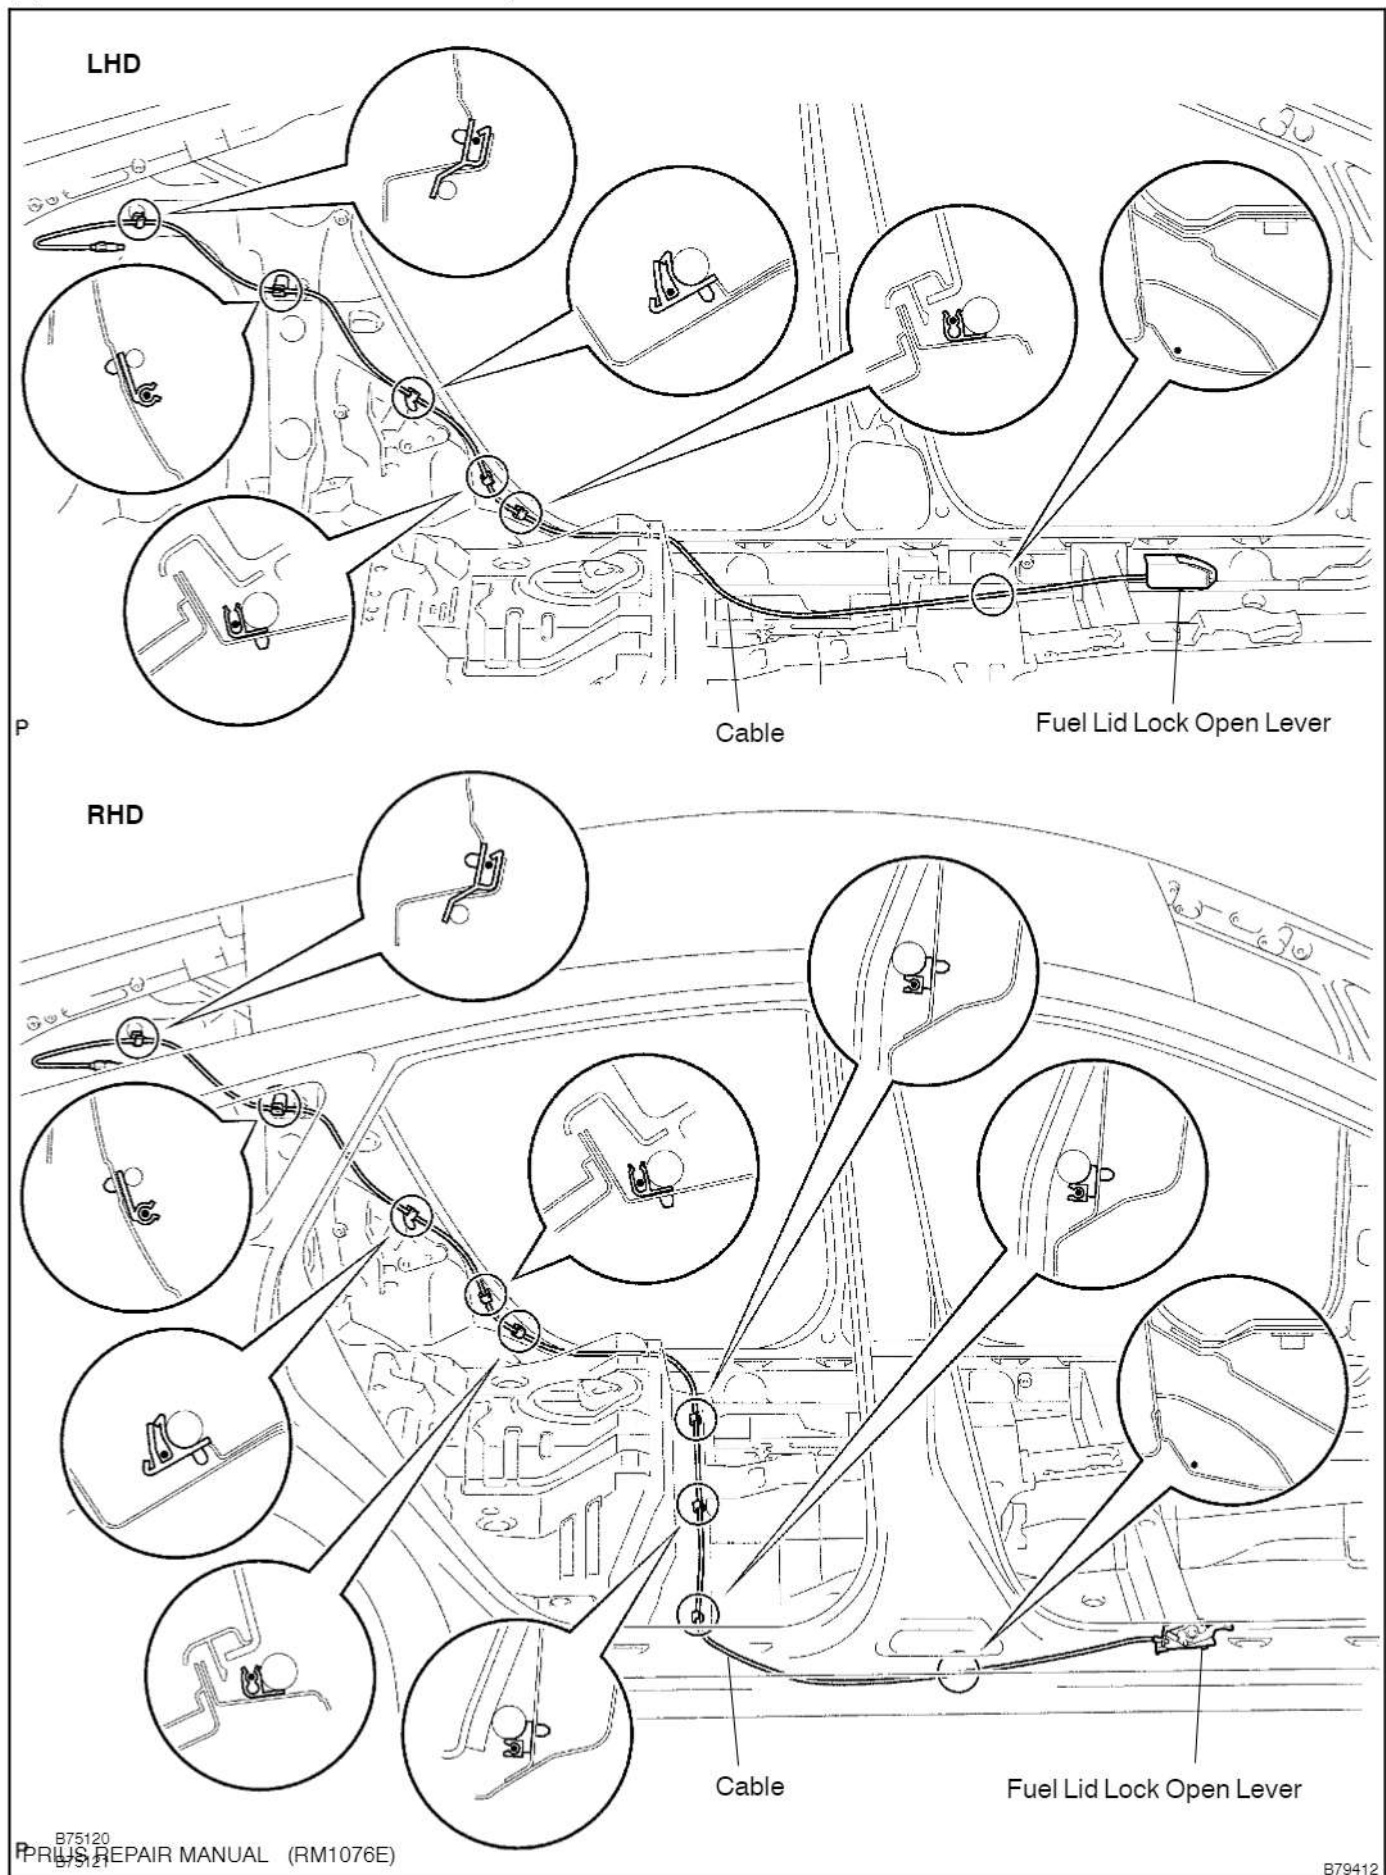

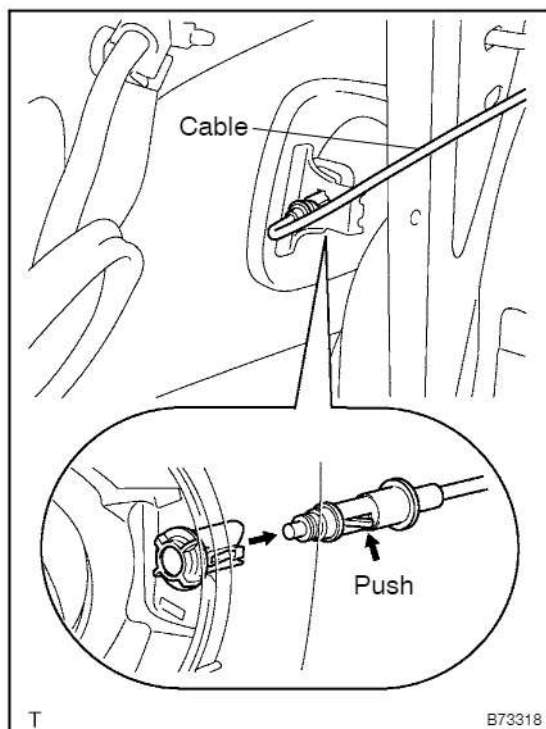


- (b) Disengage the claw and remove the cable.

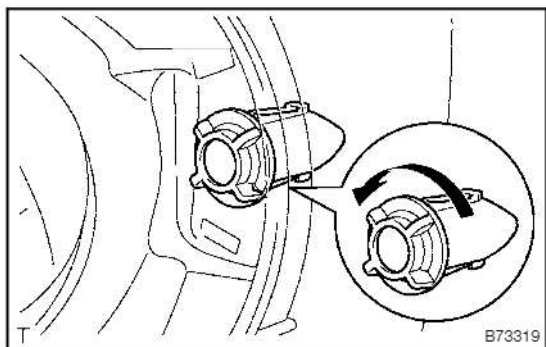


3. REMOVE FUEL FILLER OPENING LID LOCK RETAINER

- (a) Remove the fuel filler opening lock retainer, as shown in the illustration.

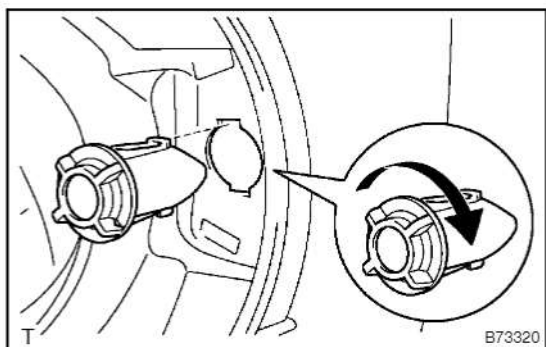

4. INSTALL FUEL FILLER OPENING LID LOCK RETAINER

- (a) Install the fuel filler opening lock retainer, as shown in the illustration.

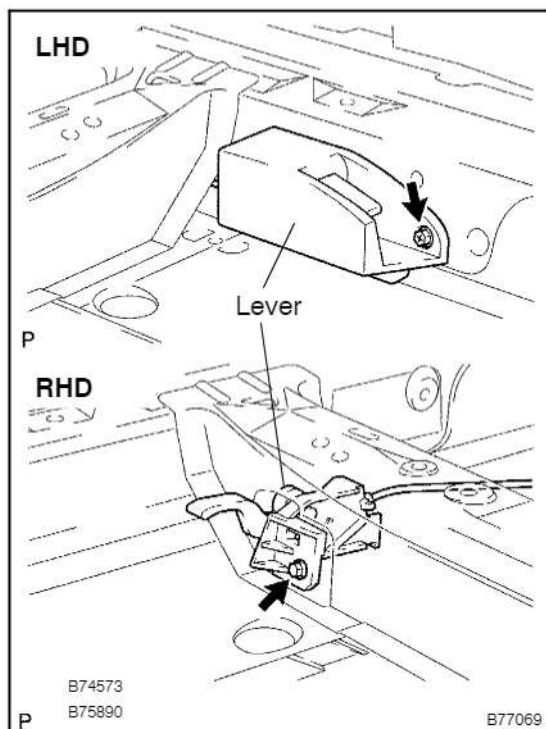


5. INSTALL FUEL LID LOCK OPEN LEVER SUB-ASSY

- (a) Install the cable.
- (b) w/ LHD:
Install the lever with the screw.
- (c) w / RHD:
Install the lever with the bolt.
- (d) Install the quarter trim panel upper ([see page 76-29](#)).
- (e) Install the quarter trim panel lower ([see page 76-29](#)).
- (f) Install the center pillar garnish lower ([see page 76-29](#)).
- (g) Install the rear seat ([see page 72-9](#)).
- (h) Install the front seat ([see page 72-2](#)).




NAME PLATE REPLACEMENT

7615K-01

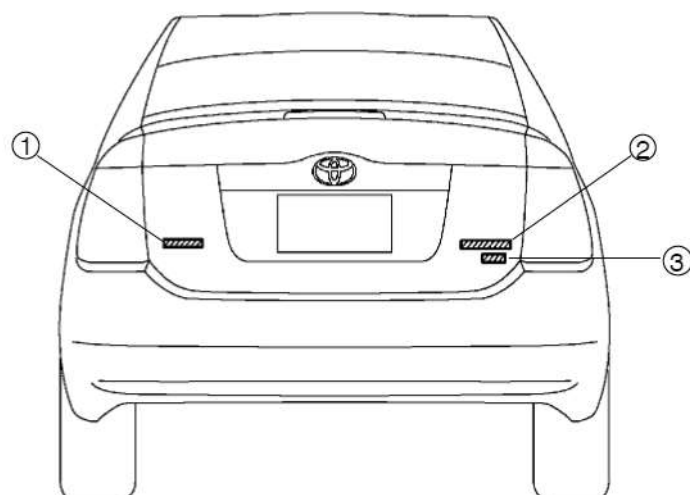

Standard:

A:	74.1 mm (2.917 in.)
B:	48.6 mm (1.913 in.)
C:	114 mm (4.488 in.)
D:	89.1 mm (3.508 in.)
E:	61 mm (2.402 in.)
F:	115.1 mm (4.531 in.)
G:	66.2 mm (2.606 in.)
H:	32 mm (1.62 in.)
I:	99.6 mm (3.921 in.)
J:	36.2 mm (1.425 in.)
K:	36.9 mm (1.453 in.)
L:	64.5 mm (2.54 in.)

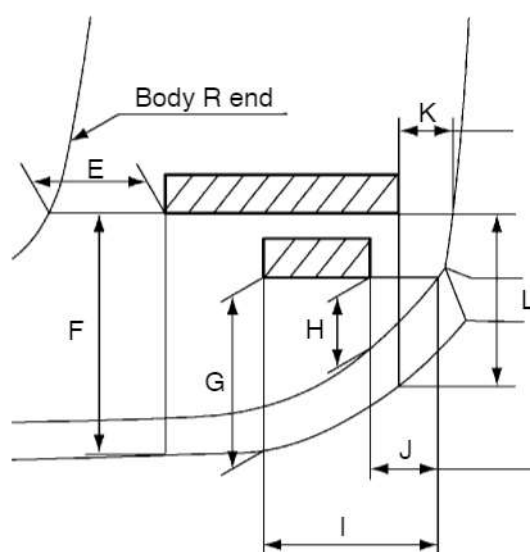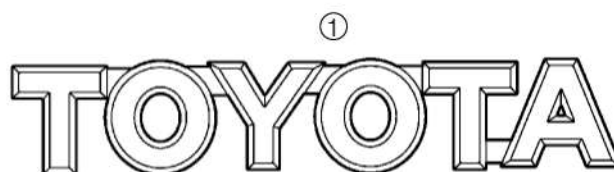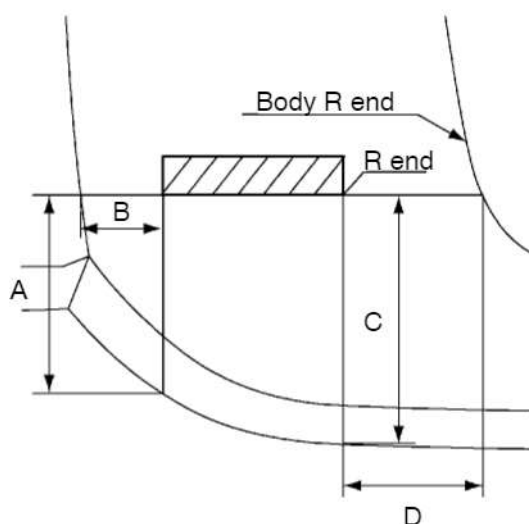


H

B76801

SIDE MUDGUARD COMPONENTS


7615C-01

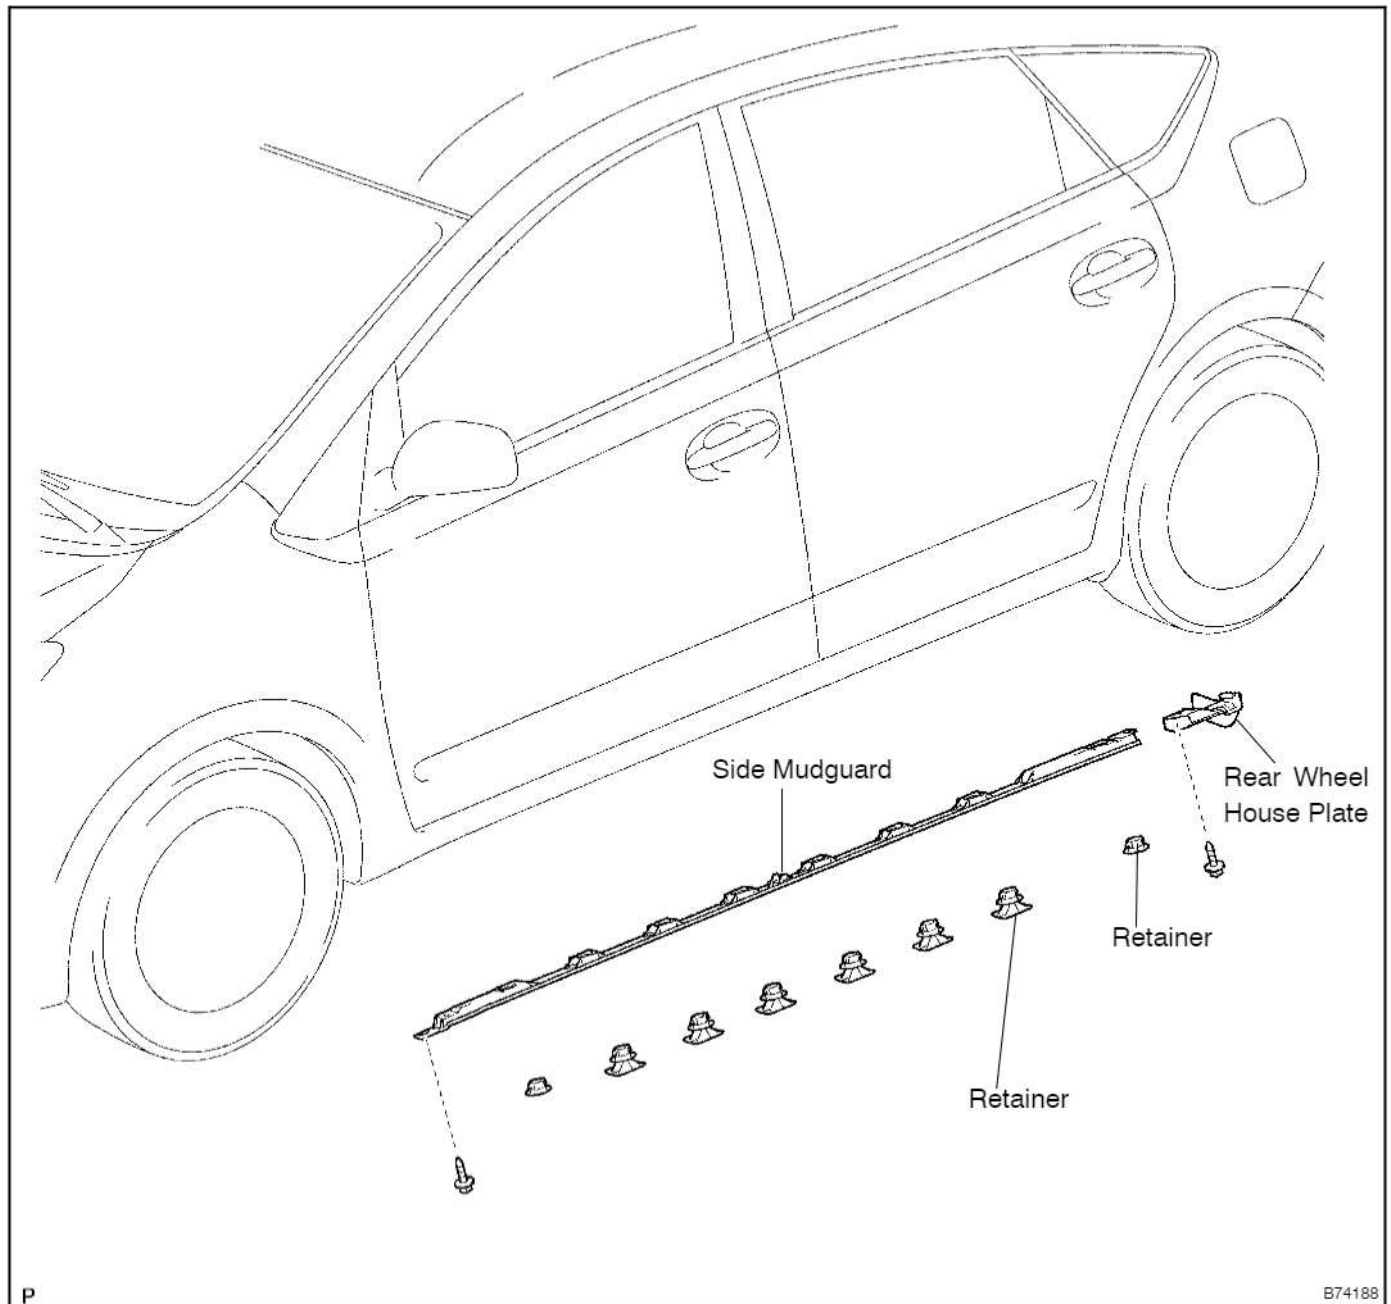

REPLACEMENT

HINT:

- The installation procedures are the removal procedures in reverse order.
- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

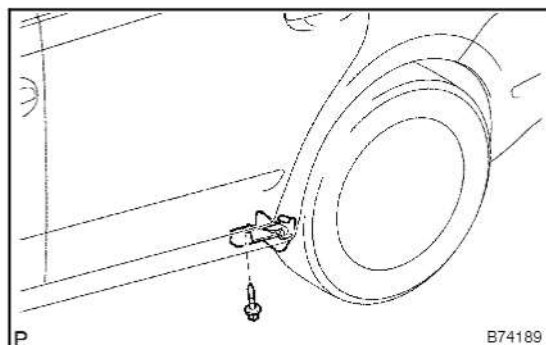


1. REMOVE REAR WHEEL HOUSE PLATE

- (a) Remove the screw and house plate.

2. REMOVE SIDE MUDGUARD

- (a) Remove the screw and 8 retainers.
- (b) Disengage the clip and remove the mudguard.

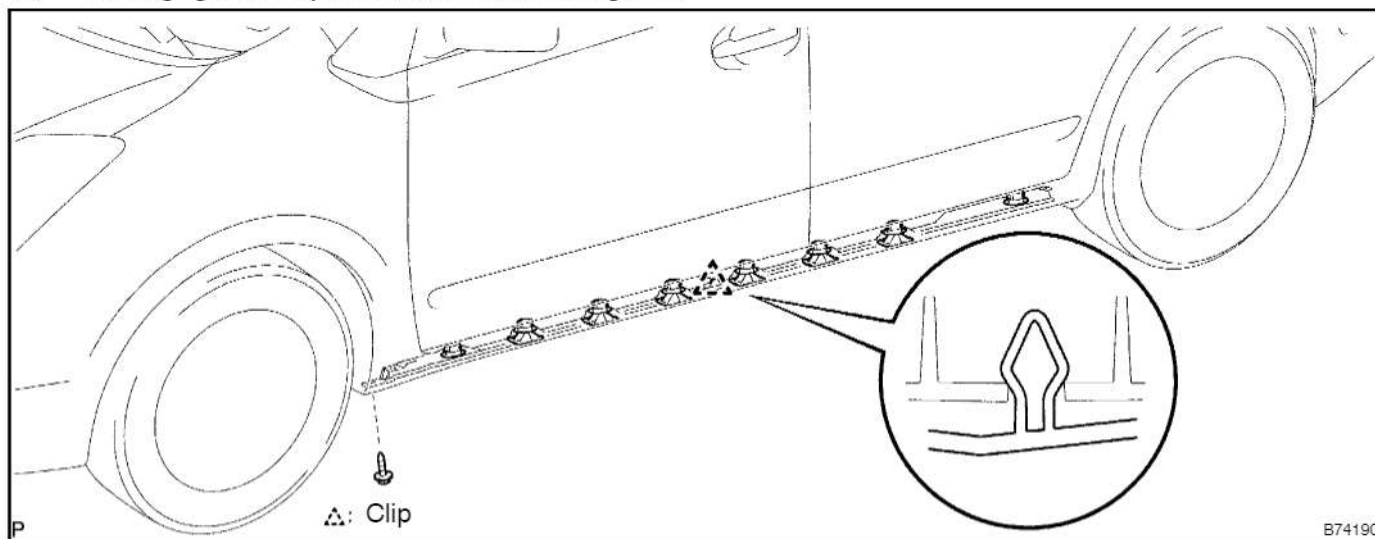

ROOF DRIP SIDE FINISH MOULDING REPLACEMENT

7615E-01

HINT:


- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- When replacing the moulding, heat the body and moulding using a heat light.

Heating temperature:

Item	Temperature
Body	40 to 60°C (104 to 140°F)
Moulding	20 to 30°C (68 to 86°F)

NOTICE:

Do not heat the body and moulding excessively.

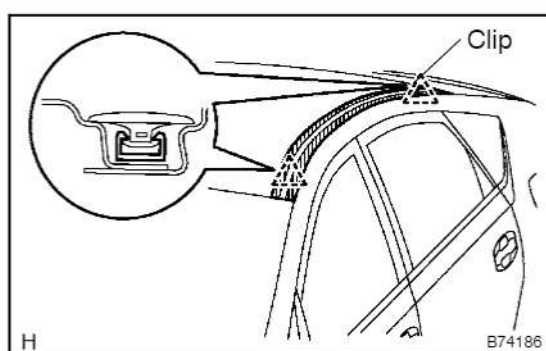


1. REMOVE ROOF DRIP SIDE FINISH MOULDING

- Put protective tape around the edges of the moulding.
- Using a moulding remover, disengage the moulding's front and rear end clips from the vehicle. Remove the moulding.

NOTICE:

- Do not remove the clips from vehicle body.
- If the clips are damaged or removed accidentally, replace them.

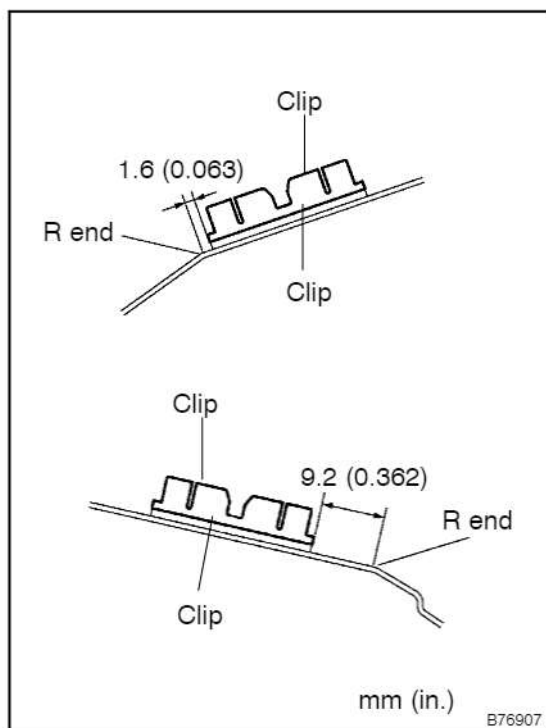

2. INSTALL ROOF DRIP SIDE FINISH MOULDING CLIP

HINT:

Use the following steps (a) to (c) only replacing the clips.


- Remove the tape that remains on the mounting surface of the body, and then clean the surface with white gasoline.
- Heat the clip installation surfaces of the body and moulding.
- Install new clips in the positions shown in the illustration. Press fit the clips by hand.

NOTICE:

After press fitting the clips, wait 30 minutes or more before installing the moulding.

HINT:

- Minimum hardening time: 30 minutes
- Time needed for complete hardening: 24 hours

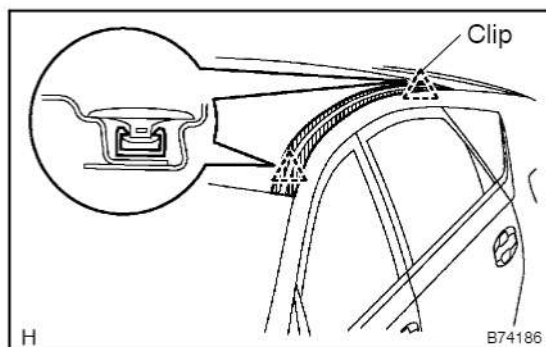**3. INSTALL ROOF DRIP SIDE FINISH MOULDING**

- (a) Install the moulding so that the front and rear ends attach to the vehicle's clips.
- (b) Remove the protective tape from the edge of the moulding.

FRONT DOOR WINDOW FRAME MOULDING REPLACEMENT

7615G-01

HINT:


- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- When replacing the moulding, heat the body and moulding using a heat light.

Heating temperature:

Item	Temperature
Body	40 to 60°C (104 to 140°F)
Moulding	20 to 30°C (68 to 86°F)

NOTICE:

Do not heat the body and moulding excessively.

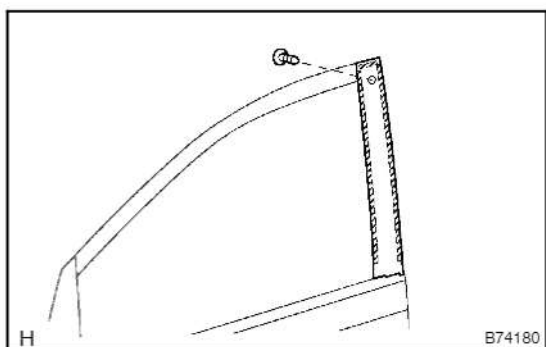


1. REMOVE FRONT DOOR WINDOW FRAME MOULDING

- Remove the screw.
- Using a heat light, heat the moulding.
- Remove the moulding.

NOTICE:

If planning to reuse the moulding, take care not to damage the moulding.

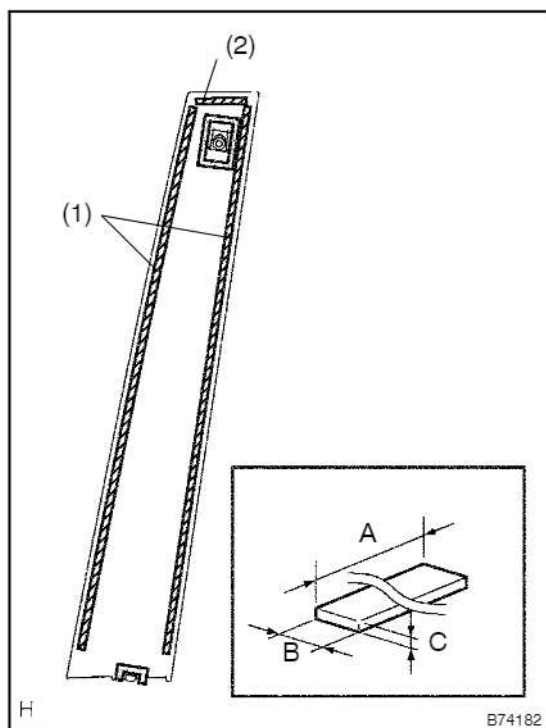

2. INSTALL FRONT DOOR WINDOW FRAME MOULDING

- Using a shop rag, remove the tape from the moulding.
- Clean the contact surface of the body with a shop rag saturated with white gasoline.
- Clean the outer edges of the moulding with white gasoline.
- Apply new double-sided tape to the moulding, as shown in the illustration.

Specification:

Area	Measurement
A	(1) 440 mm (17.32 in.)
	(2) 37 mm (1.46 in.)
B	5.0 mm (0.197 in.)
C	0.8 mm (0.032 in.)

- Using a heat light, heat the body and moulding.
- Remove the peeling paper from the moulding face.
- Install the moulding with a screw.

REAR DOOR WINDOW FRAME MOULDING REPLACEMENT

7615H-01

HINT:


- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- When replacing the moulding, heat the body and moulding using a heat light.

Heating temperature:

Item	Temperature
Body	40 to 60°C (104 to 140°F)
Moulding	20 to 30°C (68 to 86°F)

NOTICE:

Do not heat the body and moulding excessively.

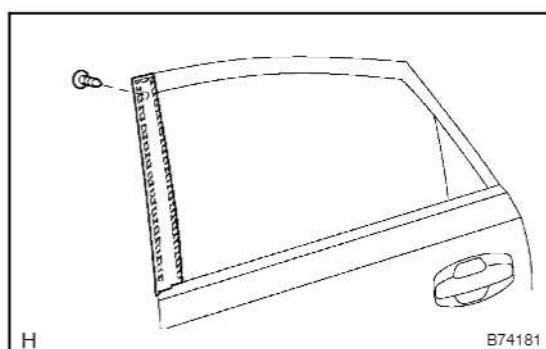


1. REMOVE REAR DOOR WINDOW FRAME MOULDING

- Remove the screw.
- Using a heat light, heat the moulding.
- Remove the moulding.

NOTICE:

If reusing the moulding, take care not to damage the moulding.

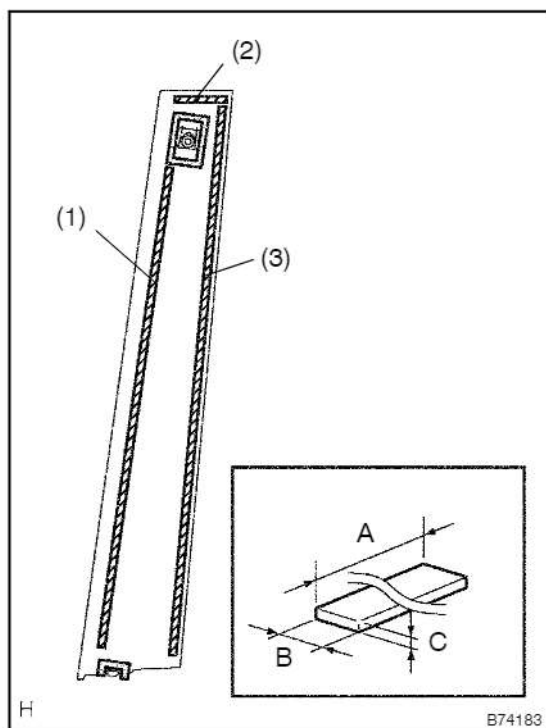

2. INSTALL REAR DOOR WINDOW FRAME MOULDING

- Using a shop rag, remove the tape from the moulding.
- Clean the contact surface of the body with shop rag saturated with white gasoline.
- Clean the outer circumference of the moulding with white gasoline.
- Apply new double-sided tape to the moulding, as shown in the illustration.

Specification:

Area	Measurement
A	(1) 360 mm (14.17 in.)
	(2) 37 mm (1.46 in.)
	(3) 440 mm (17.32 in.)
B	5.0 mm (0.197 in.)
C	(1) 1.2 mm (0.047 in.)
	(2) 0.8 mm (0.032 in.)
	(3) 0.8 mm (0.032 in.)


- Using a heat light, heat the body and moulding.
- Remove the peeling paper from the moulding face.

FRONT DOOR BELT MOULDING REPLACEMENT

7615-01

HINT:

- The installation procedures are the removal procedures in reverse order.
 - Use the same procedures for the RH side and LH side.
 - The procedures listed below are for the LH side.
1. **REMOVE FRONT DOOR INSIDE HANDLE BEZEL LH** (See page 75-9)
 2. **REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH LH** (See page 75-9)
 3. **REMOVE DOOR PULL HANDLE** (See page 75-9)
 4. **REMOVE FRONT ARMREST BASE PANEL UPPER LH** (See page 75-9)
 5. **REMOVE FRONT DOOR TRIM BOARD SUB-ASSY LH** (See page 75-9)
 6. **REMOVE OUTER REAR VIEW MIRROR ASSY LH** (See page 75-9)

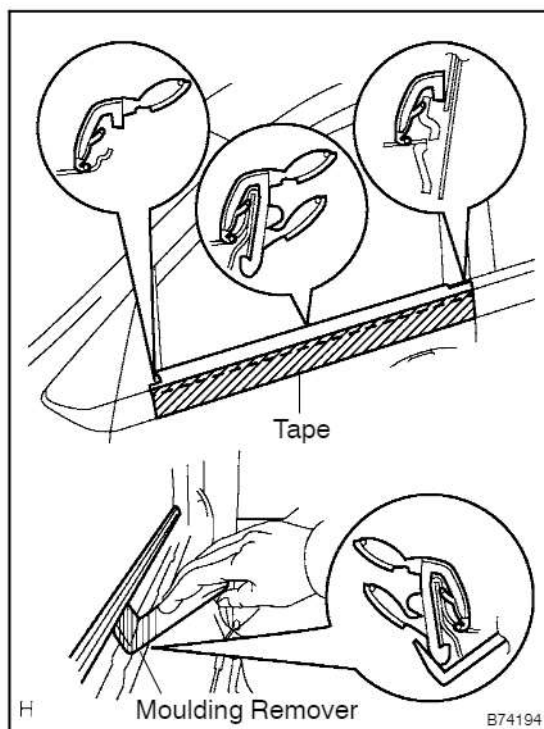

7. REMOVE FRONT DOOR BELT MOULDING

- (a) Put protective tape under the moulding remover.
- (b) Using a moulding remover, pry out the moulding remover as shown in the illustration.

HINT:


Tape the remover tip before use.

REAR DOOR BELT MOULDING REPLACEMENT

7615J-01

HINT:

- The installation procedures are the removal procedures in reverse order.
 - Use the same procedures for the RH side and LH side.
 - The procedures listed below are for the LH side.
1. **REMOVE FRONT DOOR INSIDE HANDLE BEZEL RH** (See page 75-22)
 2. **REMOVE DOOR PULL HANDLE** (See page 75-22)
 3. **REMOVE REAR DOOR ARMREST BASE PANEL UPPER LH** (See page 75-22)
 4. **REMOVE REAR DOOR TRIM BOARD SUB-ASSY RH** (See page 75-22)

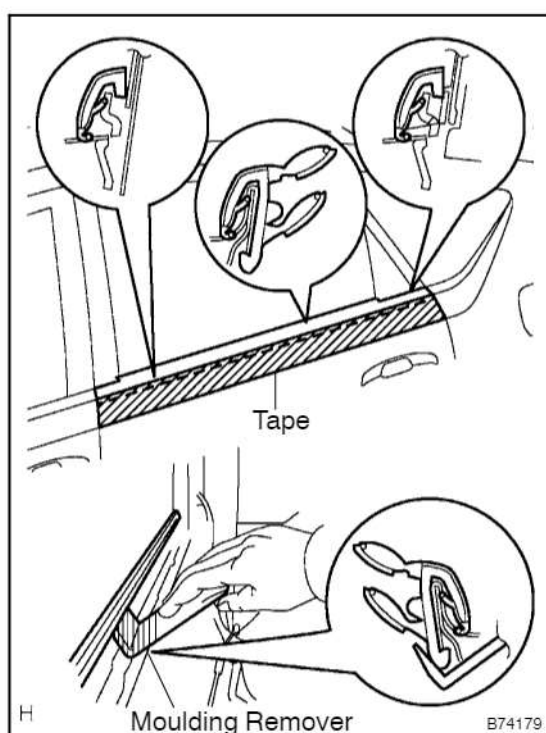

5. REMOVE REAR DOOR BELT MOULDING

- (a) Put protective tape under the weatherstrip.
- (b) Using a moulding remover, pry out the weatherstrip as shown in the illustration.

HINT:



Tape the remover tip before use.

BACK DOOR GARNISH REPLACEMENT

7615L-01

HINT:

- The installation procedures are the removal procedures in reverse order.
 - A bolt without a torque specification is shown in the standard bolt chart ([see page 03-2](#)).
- 1. REMOVE BACK DOOR TRIM BOARD ASSY (See page 75-33)**
 - 2. REMOVE BACK DOOR GARNISH SUB-ASSY OUTSIDE**
 - (a) Disconnect the opener switch connector.
 - (b) Remove the 4 nuts, 2 clips and garnish.

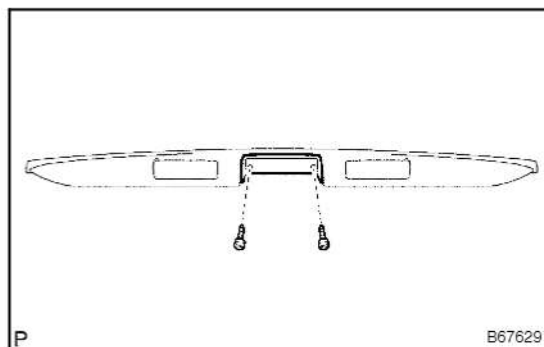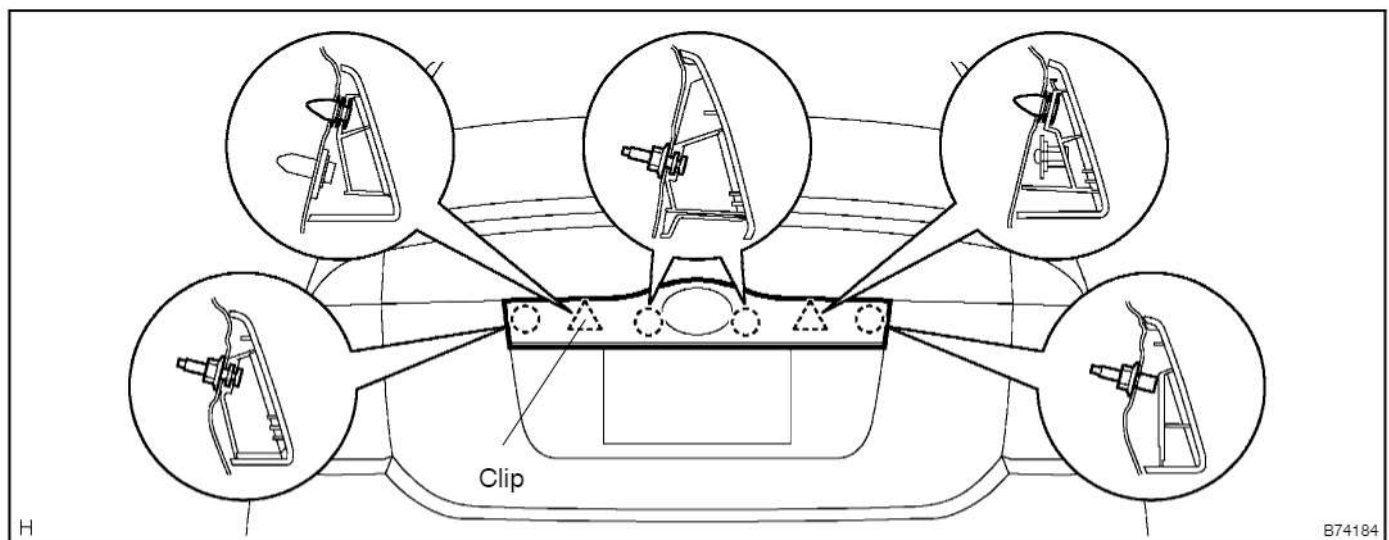

- (c) Remove the 2 screws and back door opener switch from the garnish.


cardiagn.com

FRONT FLOOR FOOTREST REPLACEMENT

7615F-01

HINT:

- The installation procedures are the removal procedures in reverse order.

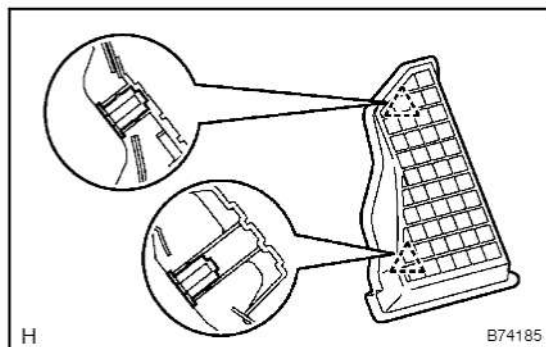

1. REMOVE FRONT FLOOR FOOTREST


- (a) Using a screwdriver, disengage the 2 clips and remove the footrest.

HINT:


Tape the screwdriver tip before use.

ROOF HEADLINING ASSY COMPONENTS

7616R-01

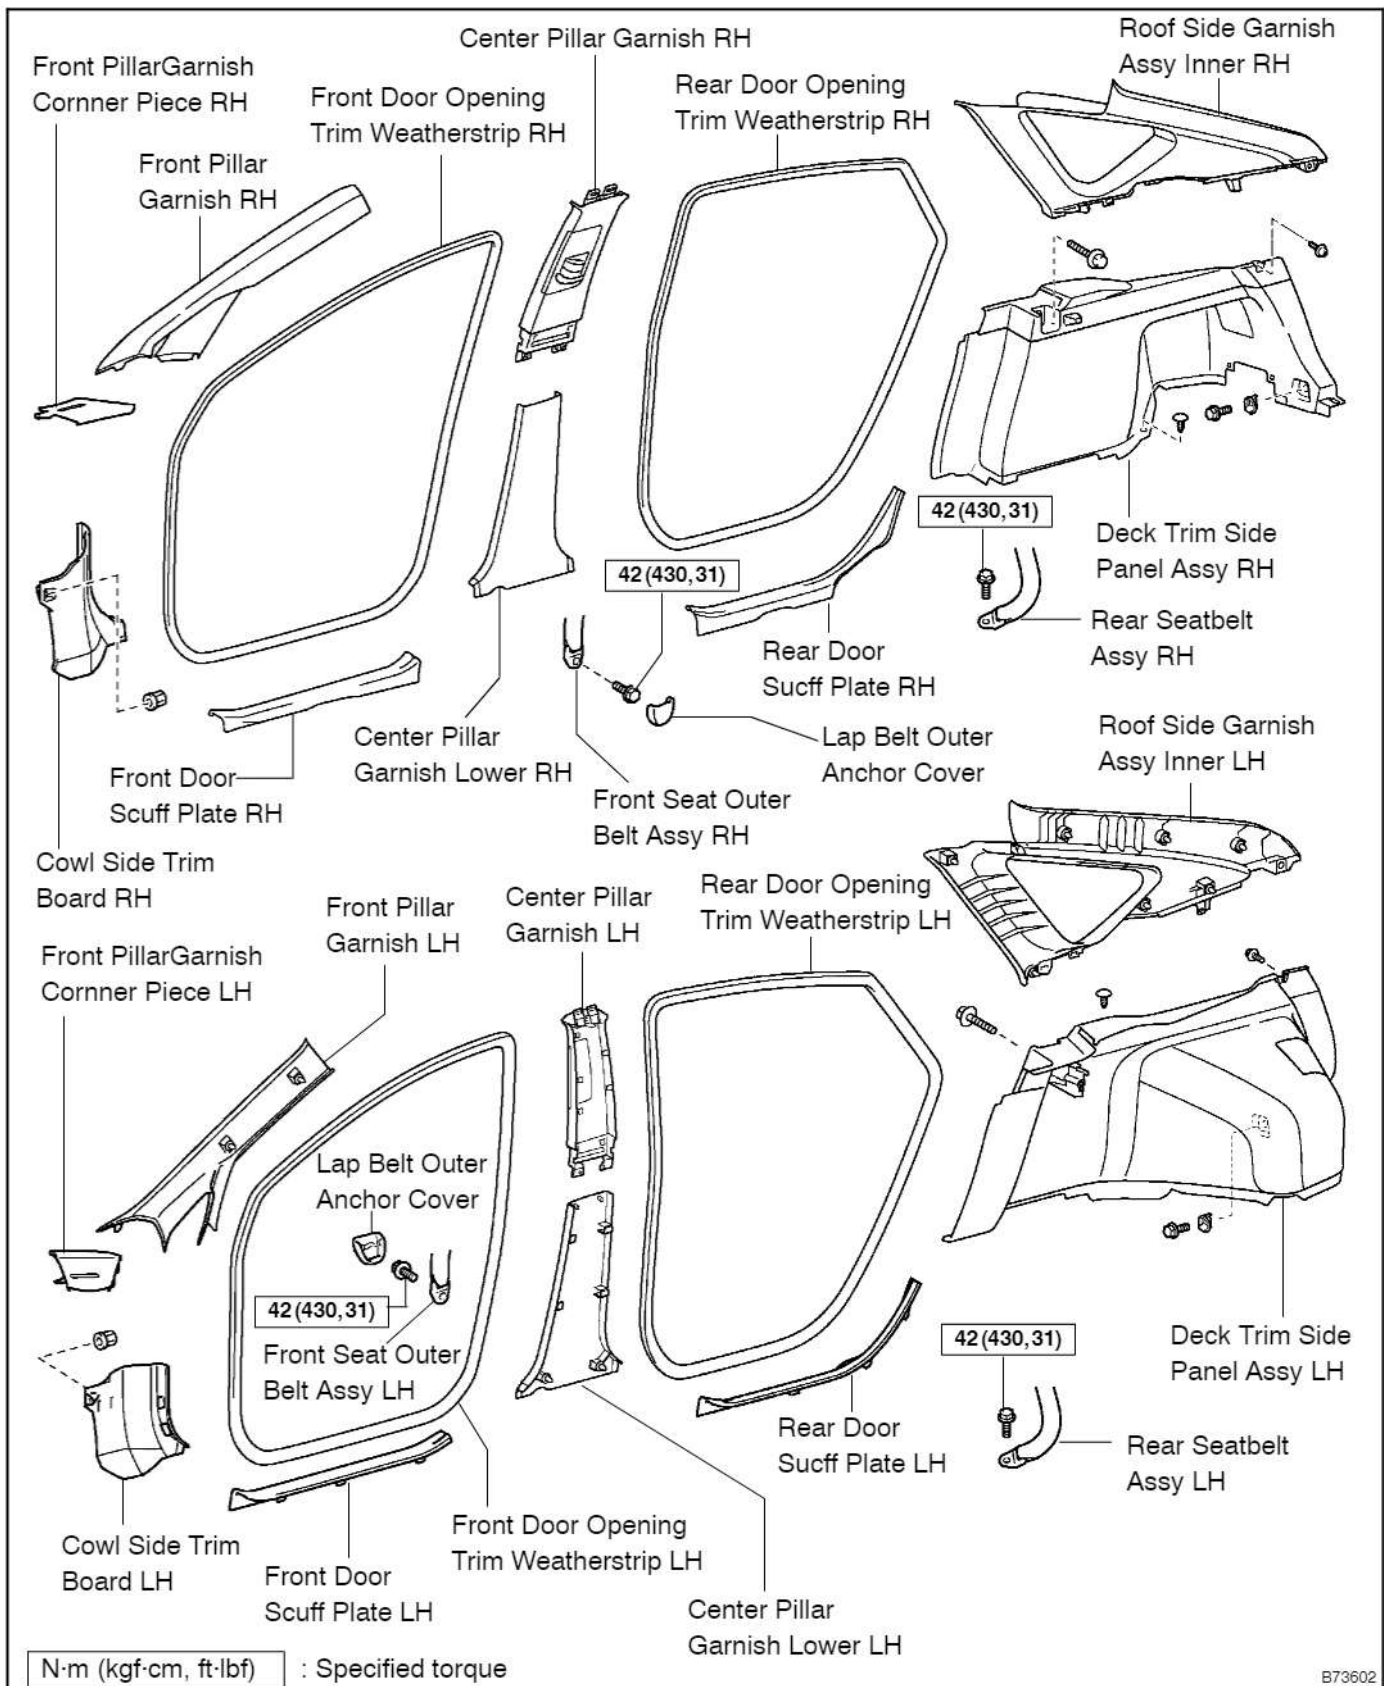


B73602

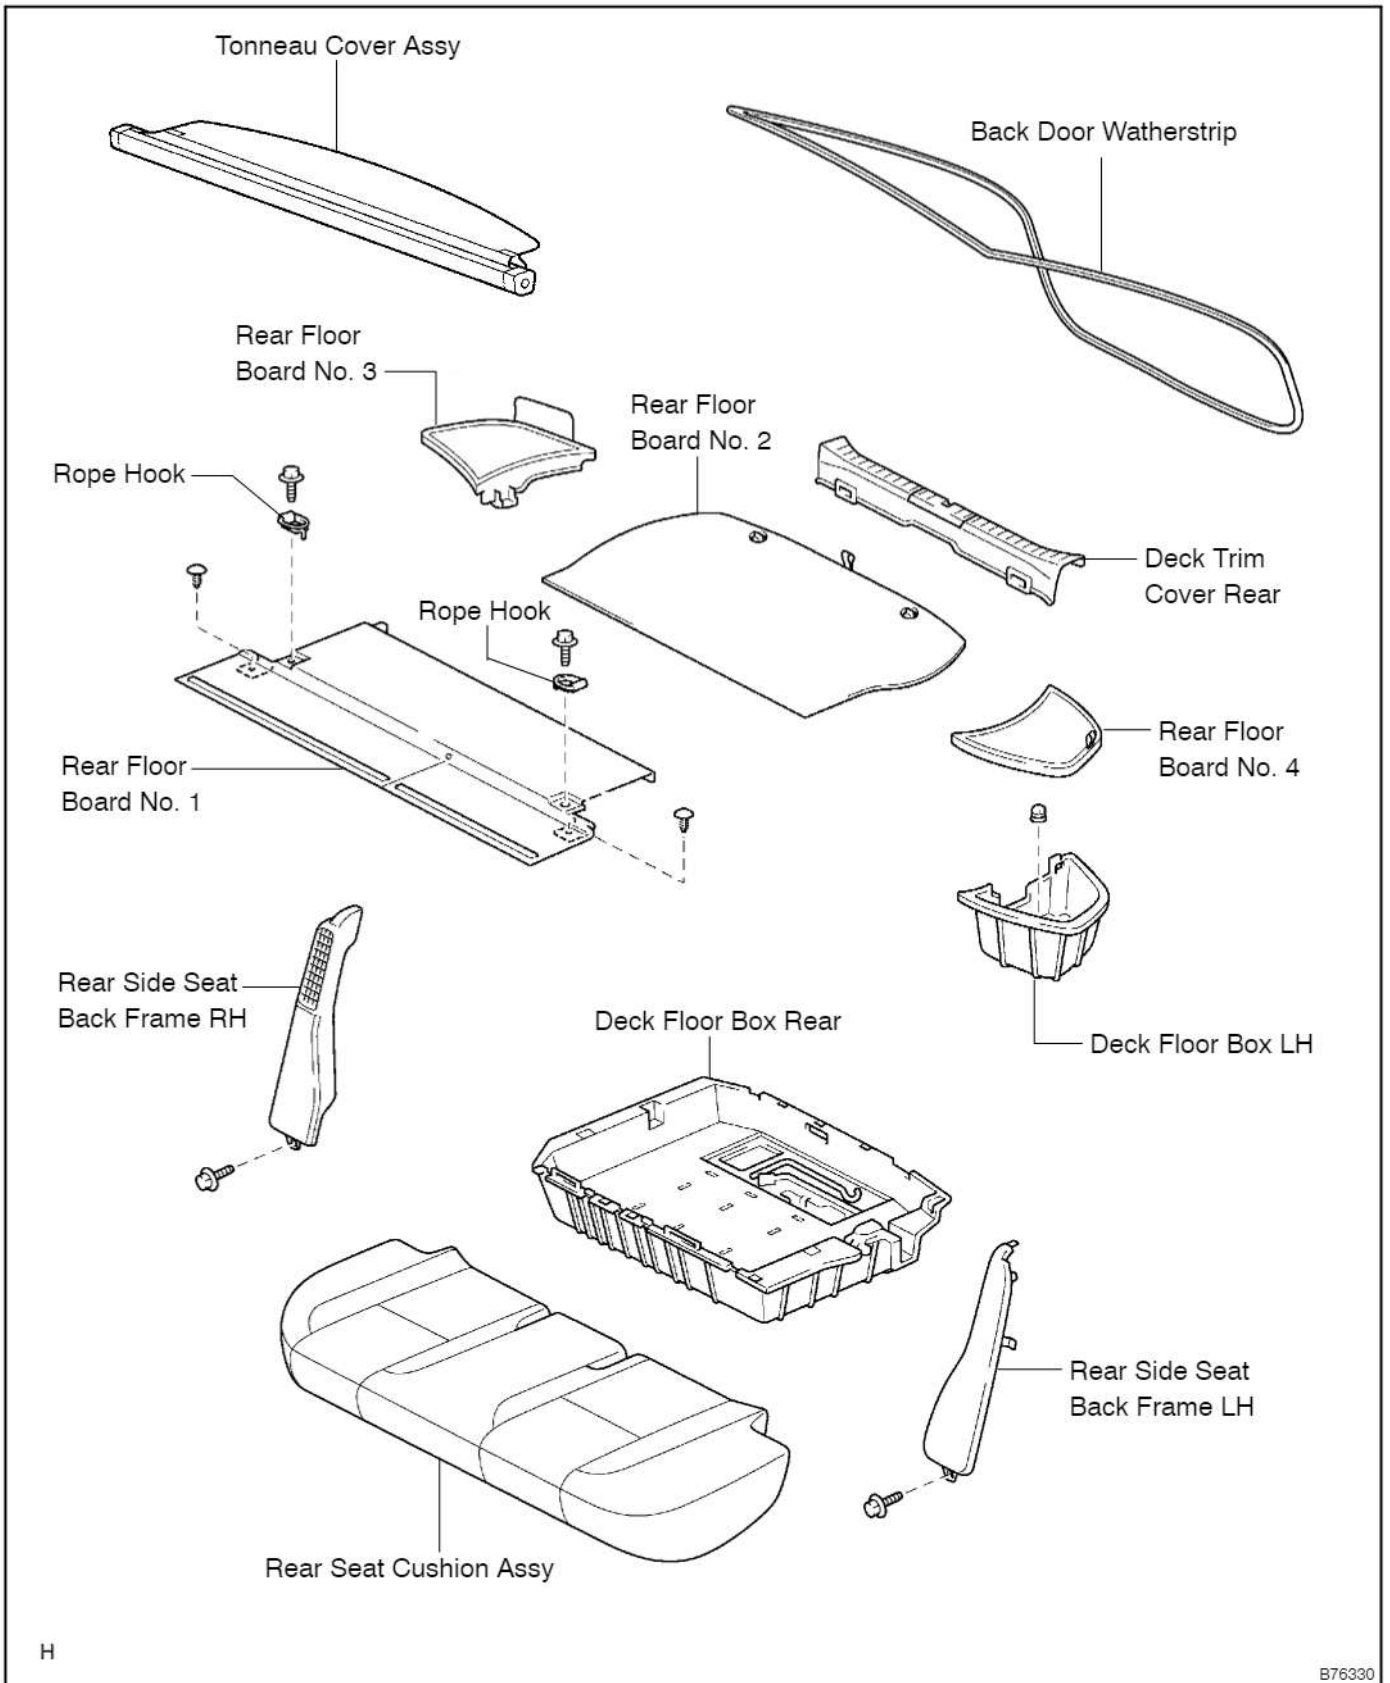

H


B76330

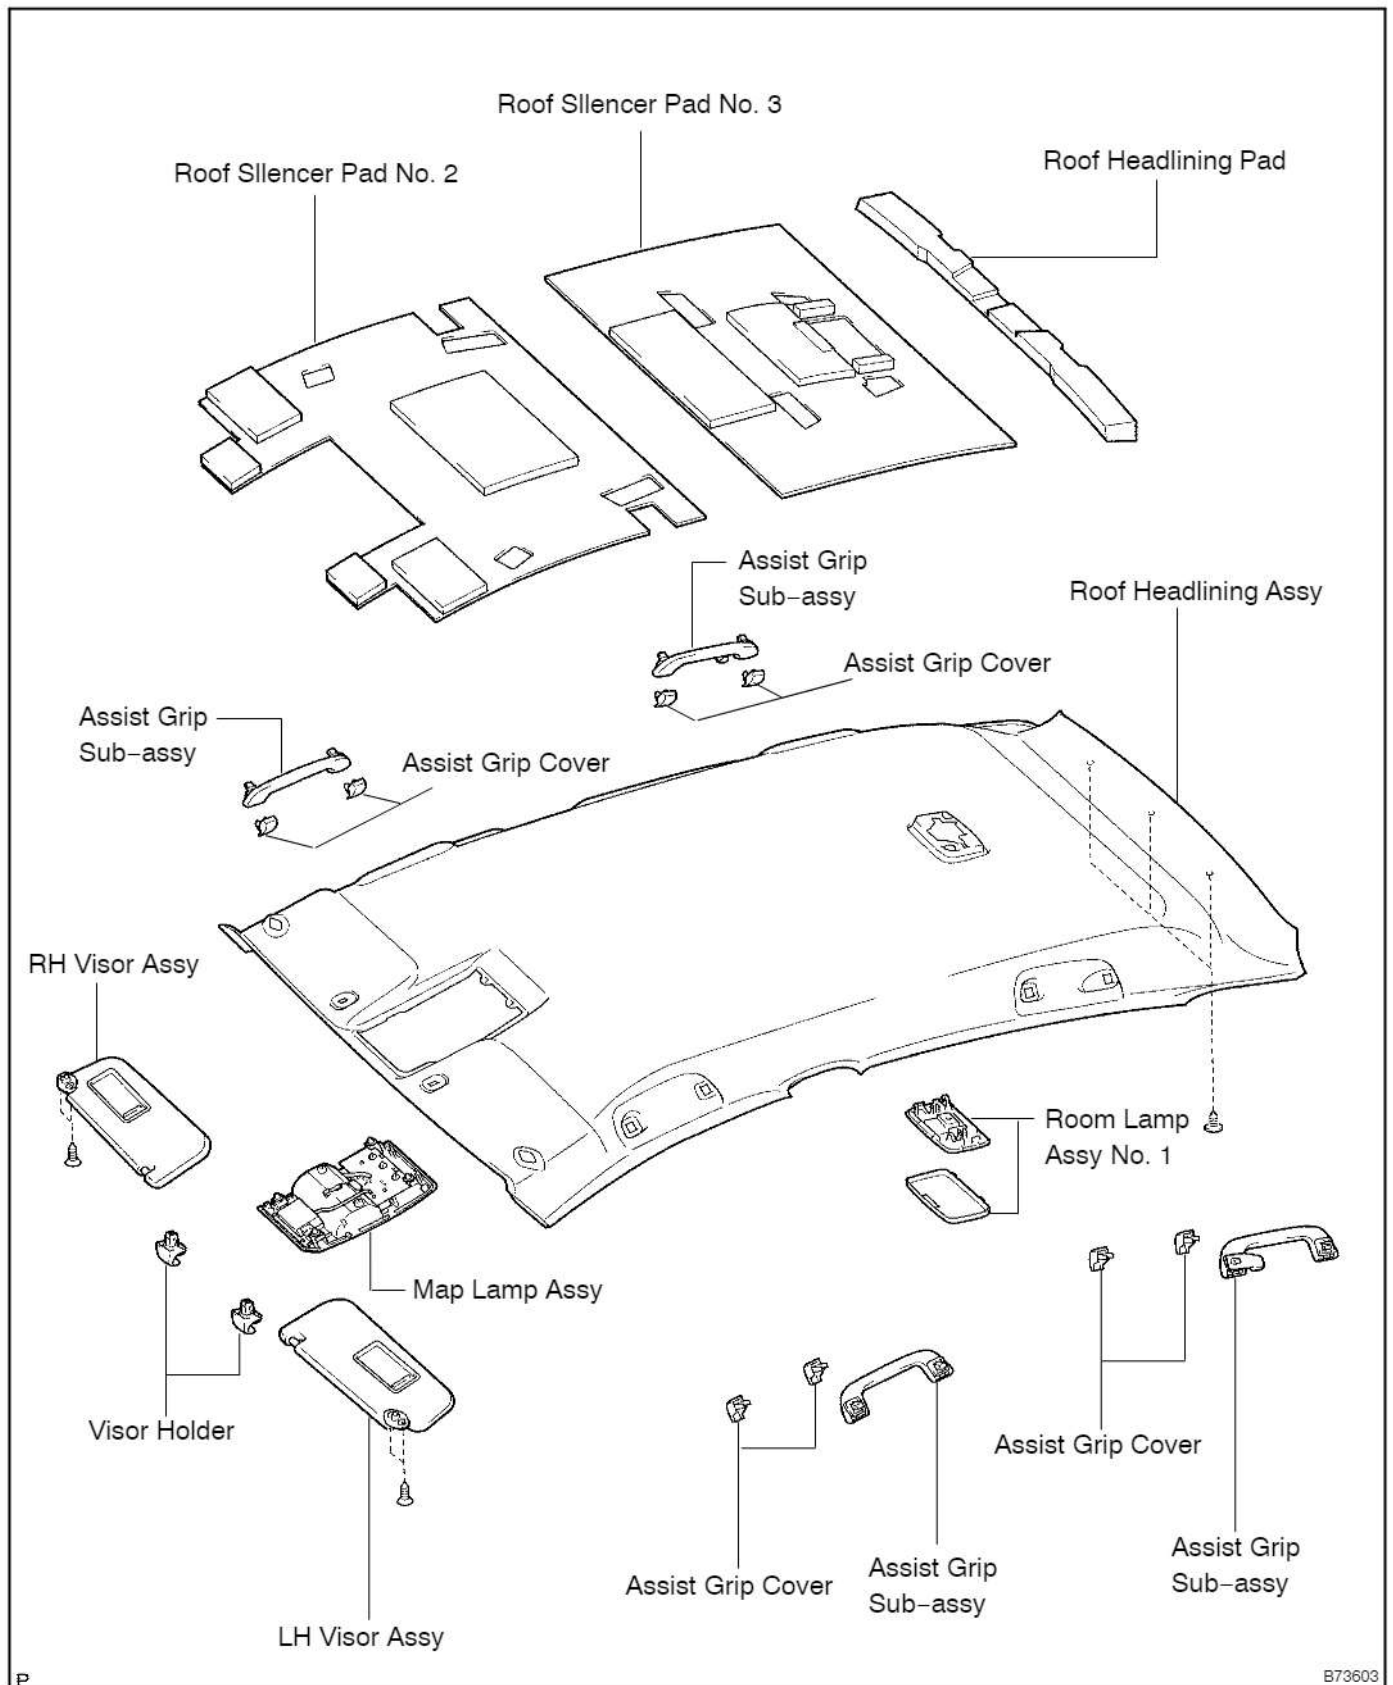

REPLACEMENT

HINT:

- The installation procedures are the removal procedures in reverse order. However, only installation procedures requiring additional information are included.
- A bolt without a torque specification is shown in the standard bolt chart ([see page 03-2](#)).

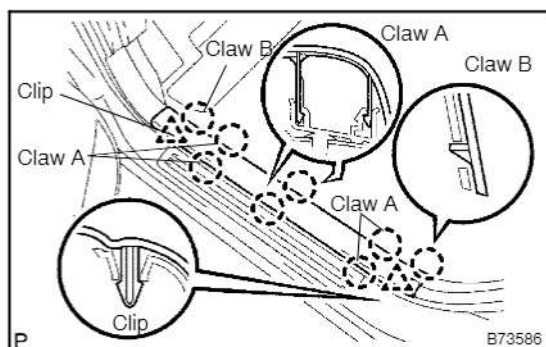

1. REMOVE FRONT DOOR SCUFF PLATE LH

- Using a screwdriver, disengage the 6 claws labeled A and 2 claws labeled B, remove the 2 clips and scuff plate.


HINT:

Tape the screwdriver tip before use.

2. REMOVE FRONT DOOR SCUFF PLATE RH

HINT:

Use the same procedures described for the LH side.

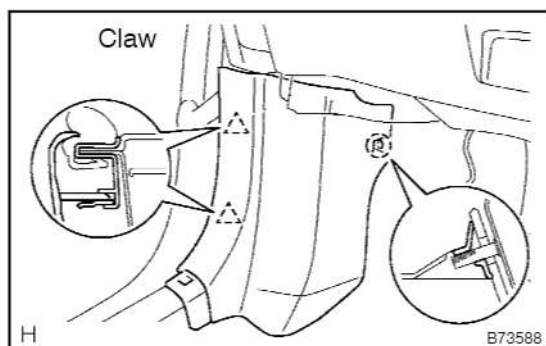

3. REMOVE COWL SIDE TRIM BOARD LH

- Using a screwdriver, disengage the 2 claws and remove the trim board.

HINT:

Tape the screwdriver tip before use.


4. REMOVE COWL SIDE TRIM BOARD RH

HINT:

Use the same procedures described for the LH side.

5. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH

6. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH

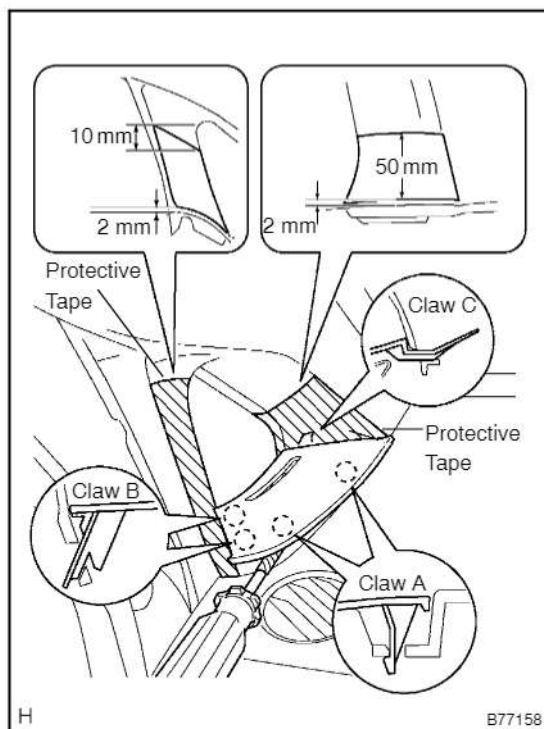

7. REMOVE FRONT PILLAR GARNISH CORNER PIECE LH

- Using a screwdriver, disengage the 2 claws labeled A, 2 claws labeled B and claw labeled C. Remove the corner piece.


HINT:

Tape the screwdriver tip before use.

8. REMOVE FRONT PILLAR GARNISH CORNER PIECE RH

HINT:

Use the same procedures described for the LH side.

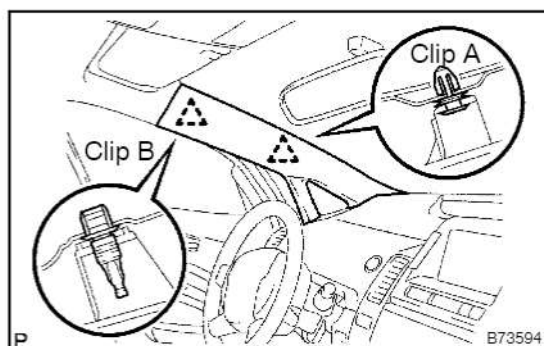


9. REMOVE FRONT PILLAR GARNISH LH

- Using a screwdriver, remove the clip labeled A and clip labeled B and pillar garnish..

HINT:

Tape the screwdriver tip before use.

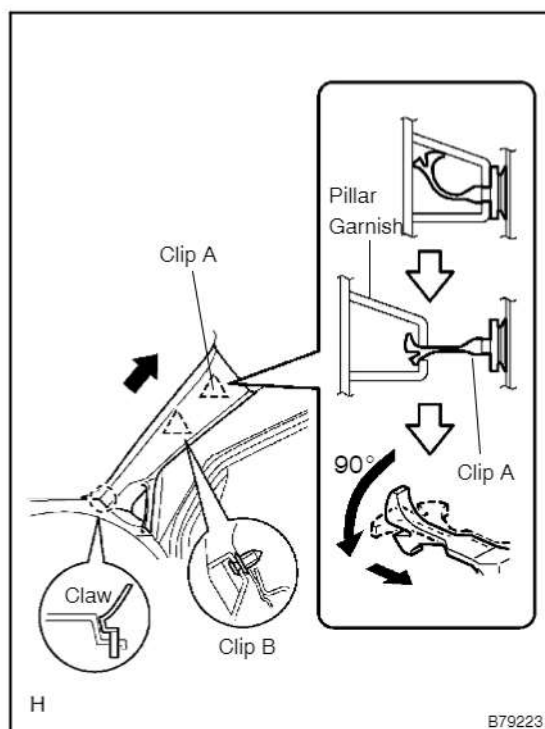

- (b) w/ Curtain shield airbag:
 (1) Using a screwdriver, disengage the clips clip labeled A and clip labeled B.


HINT:

Tape the screwdriver tip before use.

- (c) Remove the pillar garnish.
 (1) Pull the pillar garnish until the clip marked A in the illustration stretches.
 (2) Turn the clip marked A in the illustration 90 degrees and remove the pillar garnish.

HINT:

Use the same procedures described for the LH side.

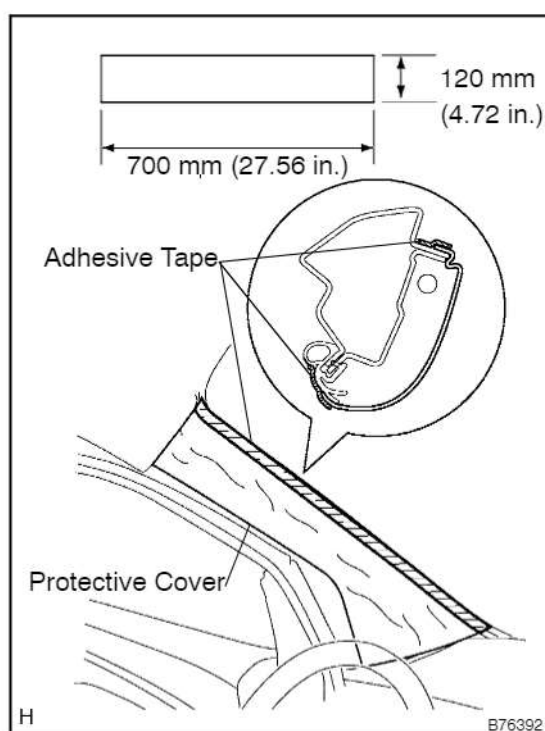

- (d) w/ Curtain shield airbag:
 Protect the curtain shield airbag LH.

- (1) Thoroughly cover the airbag with cloth or nylon of 700 mm (27.56 in.) x 120 mm (4.72 in.) and fix the ends of the cover with adhesive tape, as shown in the illustration.

NOTICE:


Cover the curtain shield airbag with the protection cover as soon as the pillar garnish is removed.

10. REMOVE FRONT PILLAR GARNISH RH

HINT:

Use the same procedures described for the LH side.

11. REMOVE REAR SEAT CUSHION ASSY (See page 72-9)

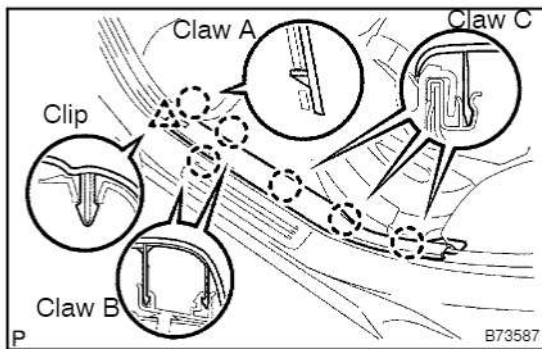**12. REMOVE REAR DOOR SCUFF PLATE LH**

- (a) Using a screwdriver, disengage the claw labeled A, 2 claws labeled B and 3 claws labeled C. Remove the scuff plate.


HINT:

Tape the screwdriver tip before use.

13. REMOVE REAR DOOR SCUFF PLATE RH

HINT:

Use the same procedures described for the LH side.

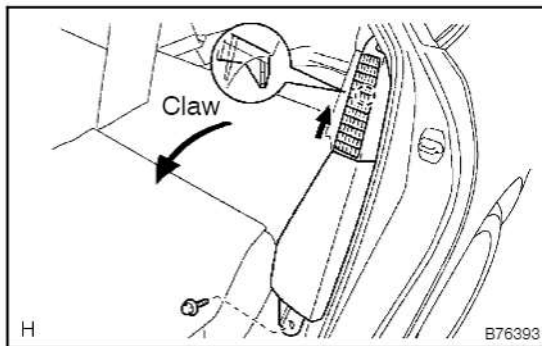
**14. REMOVE REAR SIDE SEAT BACK FRAME LH**

- (a) Remove the bolt.
(b) Disengage the claw and remove the frame.

15. REMOVE REAR SIDE SEAT BACK FRAME RH

HINT:

Use the same procedures described for the LH side.

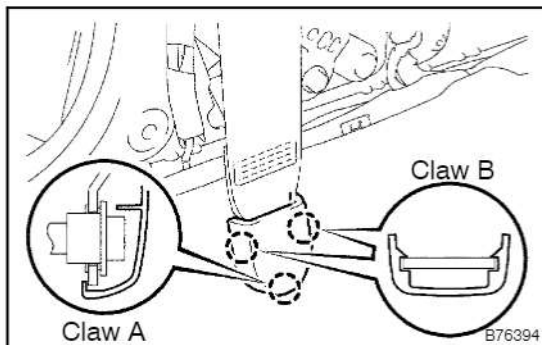16. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH**17. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH****18. REMOVE LAP BELT OUTER ANCHOR COVER**

- (a) Using a screwdriver, disengage the claw labeled A and 2 claws labeled B and remove the anchor cover.

HINT:


Tape the screwdriver tip before use.

19. REMOVE FRONT SEAT OUTER BELT ASSY LH

- (a) Remove the floor anchor bolt.

20. REMOVE FRONT SEAT OUTER BELT ASSY RH

- (a) Remove the floor anchor bolt.

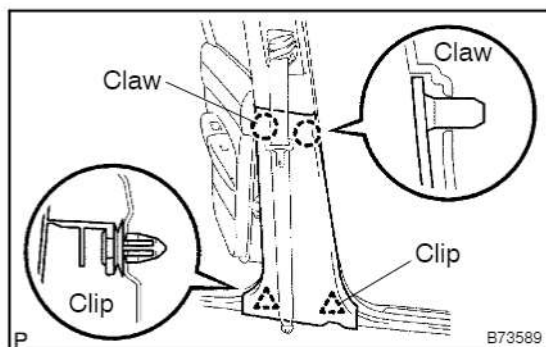**21. REMOVE CENTER PILLAR GARNISH LOWER LH**

- (a) Using a screwdriver, disengage the 2 claws and remove the 2 clips and garnish lower.


HINT:

Tape the screwdriver tip before use.

22. REMOVE CENTER PILLAR GARNISH LOWER RH

HINT:

Use the same procedures described for the LH side.

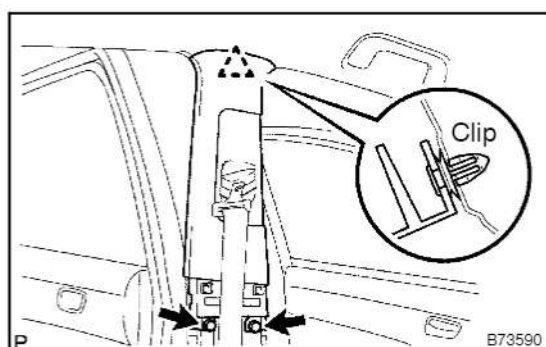**23. REMOVE CENTER PILLAR GARNISH LH**

- (a) Using a screwdriver, remove the clip and 2 screws and pillar garnish.


HINT:

Tape the screwdriver tip before use.


24. REMOVE CENTER PILLAR GARNISH RH

HINT:

Use the same procedures described for the LH side.

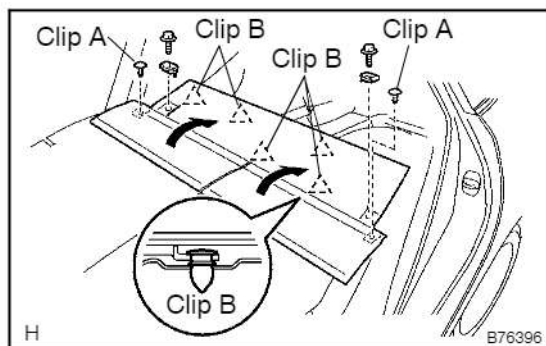25. REMOVE REAR SEAT 3 POINT TYPE BELT ASSY OUTER**26. REMOVE REAR SEAT BELT ASSY OUTER CENTER****27. REMOVE BACK DOOR WEATHERSTRIP****28. REMOVE TONNEAU COVER ASSY****29. REMOVE REAR FLOOR BOARD NO.2****30. REMOVE REAR FLOOR BOARD NO.3****31. REMOVE REAR FLOOR BOARD NO.4****32. REMOVE DECK FLOOR BOX REAR****33. REMOVE DECK FLOOR BOX LH****34. REMOVE REAR FLOOR BOARD NO.1**


- (a) Remove the 2 bolts and 2 clips labeled A.
(b) Remove the 5 clips labeled B and floor board.

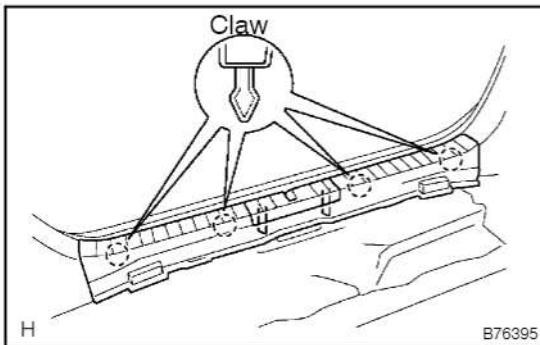**35. REMOVE DECK TRIM COVER REAR**

- (a) Using a screwdriver, disengage the 6 claws and remove the trim cover.

HINT:


Tape the screwdriver tip before use.

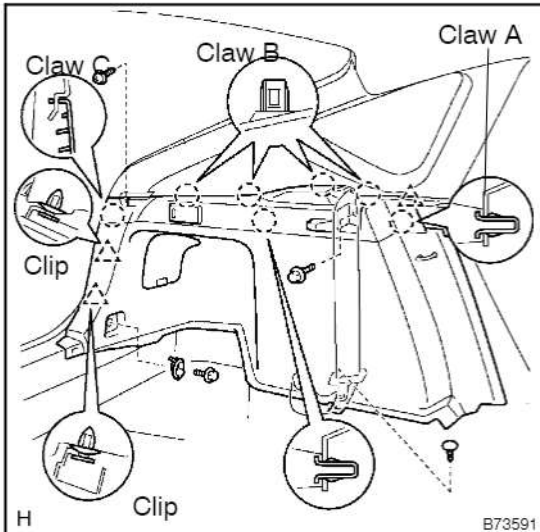**36. REMOVE DECK TRIM SIDE PANEL ASSY LH**

- (a) Remove the screw and 2 bolts.
 (b) Using a screwdriver, disengage the claw labeled A, 4 claws labeled B and claw labeled C. Remove the 2 clips and side panel.

HINT:


Tape the screwdriver tip before use.

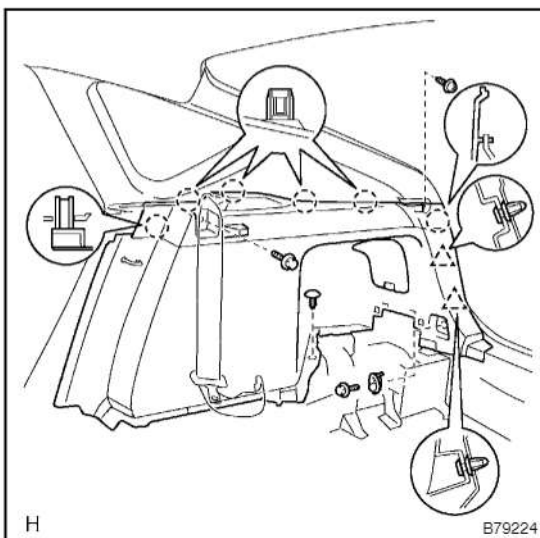**37. REMOVE DECK TRIM SIDE PANEL ASSY RH**

- (a) Remove the screw and 2 bolts.
 (b) Using a screwdriver, disengage the claw labeled A, 4 claws labeled B, claw labeled C, Remove the 2 clips and side panel.

HINT:

Tape the screwdriver tip before use.

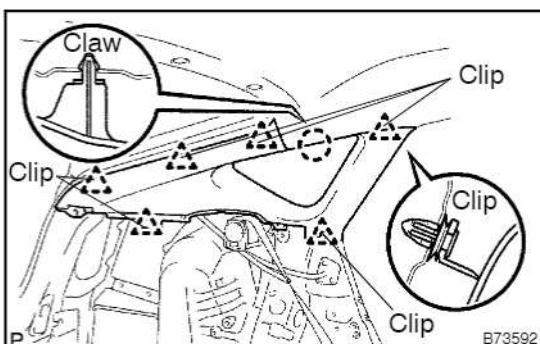**38. REMOVE ROOF SIDE GARNISH ASSY INNER LH**

- (a) Remove the 6 clips.
 (b) Using a screwdriver, disengage the claw and remove the side garnish.


HINT:

Tape the screwdriver tip before use.


39. REMOVE ROOF SIDE GARNISH ASSY INNER RH

HINT:

Use the same procedures described for the LH side.

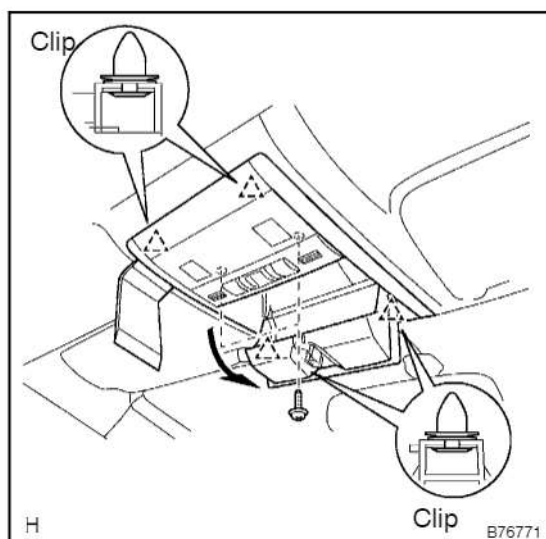**40. REMOVE MAP LAMP ASSY**


- Remove the 2 screws.
- Using a moulding remover, remove the 4 clips and map lamp.
- Disconnect the map lamp connector.

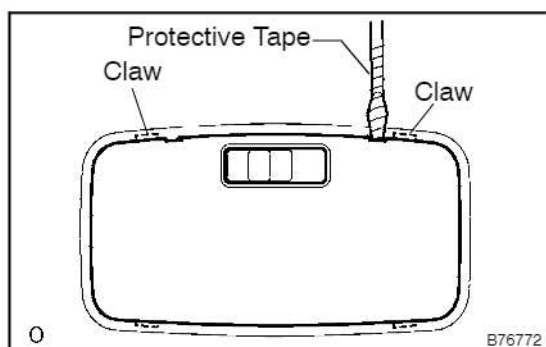**41. REMOVE ROOM LAMP ASSY NO.1**

- Using a screwdriver, remove the map lamp lens.

HINT:

Tape the screwdriver tip before use.

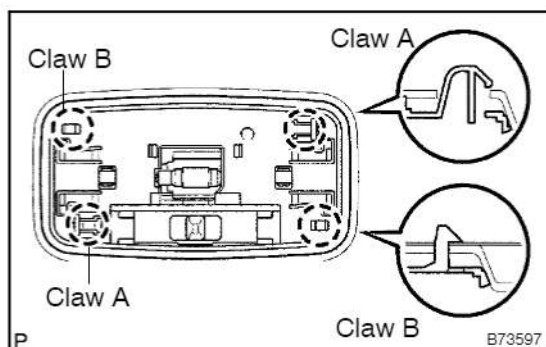


- Using a screwdriver, Disengage the 2 claws labeled A and 2 claws labeled B and remove the map lamp.

HINT:

Tape the screwdriver tip before use.


- Disconnect the map lamp connector.

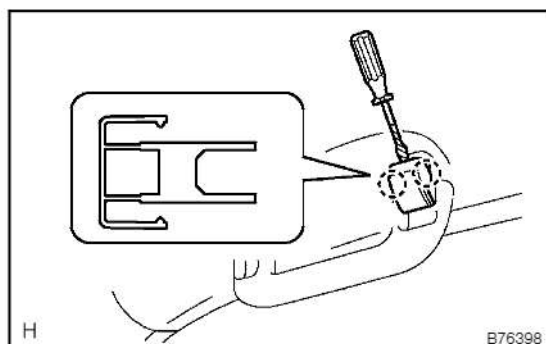**42. REMOVE ASSIST GRIP COVER**

- Using a screwdriver, disengage the 4 claws and remove the 2 covers.

HINT:


Tape the screwdriver tip before use.

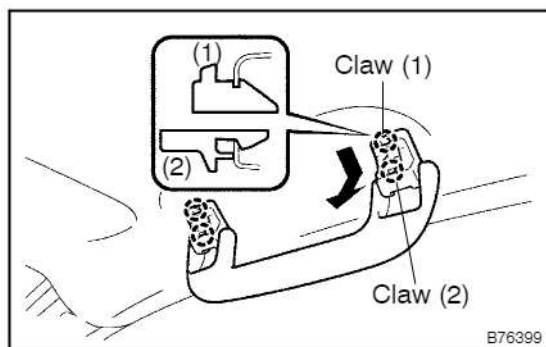**43. REMOVE ASSIST GRIP SUB-ASSY**

- (a) Using a screwdriver, disengage the 4 claws and assist grip.

HINT:

Tape the screwdriver tip before use.

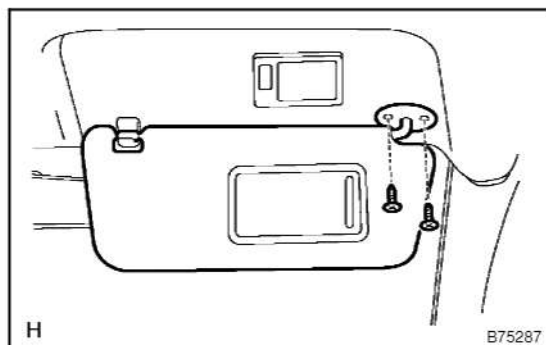
**44. REMOVE LH VISOR ASSY**

- (a) Remove the 2 screws and visor.
(b) Disconnect the connector, remove the visor.


45. REMOVE RH VISOR ASSY

HINT:


Use the same procedures described for the LH side.

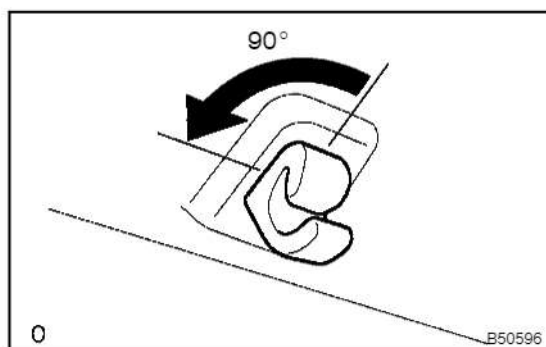**46. REMOVE VISOR HOLDER**

- (a) Remove the visor holder by turning it counterclockwise.

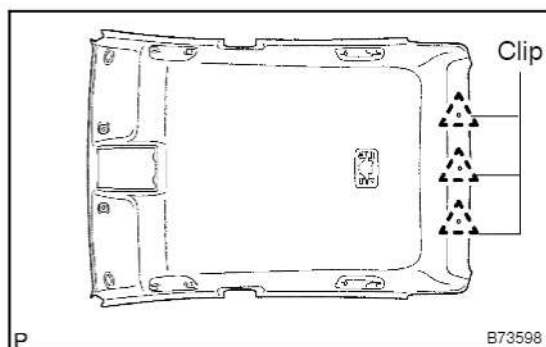**47. REMOVE ROOF HEADLINING ASSY**

- (a) Remove the 3 clips and headlining.
(b) Remove the silencer form the headlining.

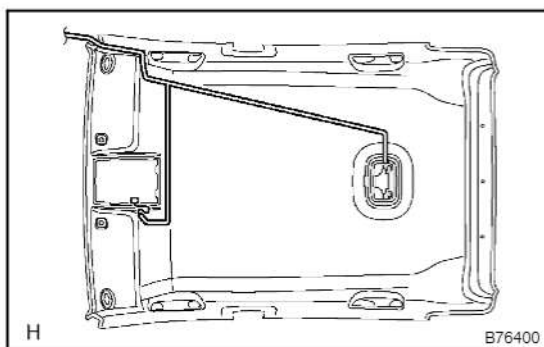**48. INSTALL ROOF HEADLINING ASSY**

- (a) Align the markings, and then install the wire harness with tape.

NOTICE:

Attach the roof wire harness securely.

- (b) Install the roof headlining with the 3 clips.

49. INSTALL REAR SEATBELT ASSY OUT LH

- (a) Install the seatbelt with the bolt.

Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

50. INSTALL REAR SEATBELT ASSY OUT RH

- (a) Install the seatbelt with the bolt.

Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

51. INSTALL FRONT SEAT OUTER BELT ASSY LH

- (a) Install the belt with the bolt.

Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

52. INSTALL FRONT SEAT OUTER BELT ASSY RH

- (a) Install the belt with the bolt.

Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)