


Dodge 1500 2009 – 2011 fuse box diagram

Year of production: 2009, 2010, 2011

Passenger Compartment Fuse Box

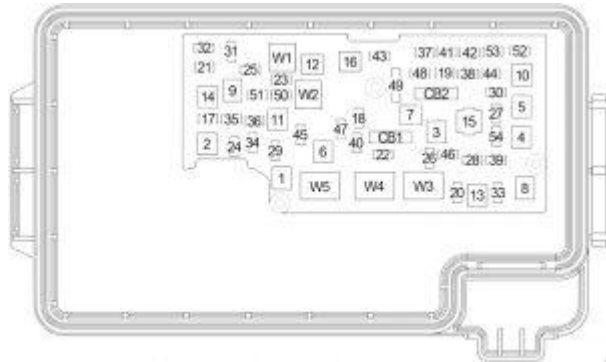

Dodge 1500 – fuse box diagram

No.	A	Protected Component
1	–	–
2	30	Trailer Tow, Storage Left/Right Bin
3	25	Passenger Door Module
4	40	ABS
5	30	ABS
6	–	–
7	25	Driver Door Module
8	30	Drive Train Control Module
9	30	Brake Provision Module
10	–	–

11	–	–
12	40	Starter Relay
13	60	Radiator Fan (High) Relay, Radiator Fan (Low) Relay
14	–	–
15	60	Fuse: “38”, “39”, “41”, “42”
16	–	–
17	25	Sunroof Motor
18	25	Powertrain Control Module, Transmission Solenoid/TRS Assembly, Line Pressure Sensor/Variable Force Solenoid Assembly, Transmission Solenoid/Pressure Switch Assembly, Transmission Range Sensor
19	5	Window/Door Lock Switch – Passenger Side, Sunroof Motor
20	25	Front Wiper On/Off Relay
21	25	Wiper High Speed
22	20	Wiper Park
23	–	–
24	–	–
25	10	Data Link Connector, Window/Door Lock Switch – Driver Side
26	10	Wireless Ignition Node

27	15	Stop Lamp Switch, Brake Lamp Activation Relay
28	–	
29	–	
30	25	Inverter Module
31	20	Power Outlet – Instrument Panel, Power Outlet – Console
32	20	Washer Windshield Pump
33	15	Powertrain Control Module
34	15	Steering Control Module, Cluster, Upper Switch Bank, Lower Switch Bank
35	20	Heated Seats Module,
36	20	Heated Seats Module, Heated Rear Seats Switch
37	10	Horn
38	20	Cluster, Multi-Function Switch
39	30	Radio, Amplifier
40	–	–
41	15	Hands-Free Module, Compass Module, Video Screen Module, Satellite Video Module
42	10	Heating and Air Conditioning Control, Underhood Lamp

43	10	Horn
44	10	Occupant Restraint Controller Module
45	10	Occupant Restraint Controller Module
46	–	–
47	10	Heating and Air Conditioning Control, Infrared Sensor, Park Assist Module
48	20	Cigar Lighter, Cigar Lighter – Center Console
49	20	Power Outlet – Rear
50	25	Powertrain Control Module, Ignition Coils, Ignition Capacitor, Fuel Injector,
51	20	3.7L.: Short Runner Valve Solenoid
52	10	Drive Train Control Module, Front Axle Disconnect Module
53	15	Multifunction Switch, Steering Control Module, Inside Rearview Mirror, Cluster, Transfer Case Selector Switch
54	–	–
CB 1	25	Driver/Passenger Seat Switch, Seat Memory Module, Driver/Passenger Seat Lumbar Adjuster Switch
CB 2	25	Window/Door Lock Switch – Driver Side, Power Sliding Backlite Switch, Fuse: “19”
Relay		
W1		

W2		
W3		
W4		
W5		