

# Citroen DS3 (2009 – 2013) – fuse box diagram

Year of production: 2009, 2010, 2011, 2012, 2013

Fuse box under dashboard

The fusebox is located inside the glove box.

| Fuse | Ampere rating [A] | Functions          |
|------|-------------------|--------------------|
| FH36 | 5                 | Trailer relay unit |
| FH3  | —                 | Not used           |
| FH38 | 20                | Hi-Fi amplifier    |
| FH39 | 20                | Not used           |
| FH40 | 30                | Trailer relay unit |

| Fuse | Ampere rating [A] | Functions                                                                                                                           |
|------|-------------------|-------------------------------------------------------------------------------------------------------------------------------------|
| F1   | 15                | Rear wiper                                                                                                                          |
| F2   | —                 | Not used                                                                                                                            |
| F3   | 5                 | Airbags and pretensioners control unit                                                                                              |
| F4   | 10                | Air conditioning, clutch switch, electrochromatic mirror, particle filter pump (Diesel), diagnostic socket, airflow sensor (Diesel) |
| F5   | 30                | Electric windows panel, passenger's electric window control, front electric window motor                                            |
| F6   | 30                | Driver's electric window motor                                                                                                      |
| F7   | 5                 | Courtesy lamp                                                                                                                       |
| F8   | 20                | Multifunction screen, audio system, navigation radio, alarm control unit, alarm siren                                               |
| F9   | 30                | 12 V socket, portable navigation support supply                                                                                     |
| F10  | 15                | Steering wheel controls                                                                                                             |
| F11  | 15                | Ignition, diagnostic socket, automatic gearbox control unit                                                                         |
| F12  | 15                | Rain/brightness sensor, trailer relay unit                                                                                          |

|     |    |                                                                                                                         |
|-----|----|-------------------------------------------------------------------------------------------------------------------------|
| F13 | 5  | Main stop switch, engine relay unit                                                                                     |
| F14 | 15 | Parking sensors control unit, airbag control unit, instrument panel, digital air conditioning, USB Box, Hi-Fi amplifier |
| F15 | 30 | Locking                                                                                                                 |
| F16 | —  | Not used                                                                                                                |
| F17 | 40 | Rear screen and door mirrors demisting/defrosting                                                                       |
| SH  | —  | PARC shunt                                                                                                              |

## Fuse box in engine compartment

The fusebox is placed in the engine compartment near the battery (left-hand side).

| Fuse | Ampere rating [A] | Functions                                                                                                                        |
|------|-------------------|----------------------------------------------------------------------------------------------------------------------------------|
| F1   | 20                | Engine control unit supply, cooling fan unit control relay, multifunction engine control main relay, injection pump (Diesel)     |
| F2   | 15                | Horn                                                                                                                             |
| F3   | 10                | Front/rear wash-wipe                                                                                                             |
| F4   | 20                | LED lamps                                                                                                                        |
| F5   | 15                | Diesel heater (Diesel), particle filter additive pump (Diesel), air flow sensor (Diesel), blow-by heater and electrovalves (VTi) |
| F6   | 10                | ABS/ESP control unit, secondary stop switch                                                                                      |
| F7   | 10                | Electric power steering, automatic gearbox                                                                                       |
| F8   | 25                | Starter control                                                                                                                  |
| F9   | 10                | Switching and protection unit (Diesel)                                                                                           |
| F10  | 30                | Fuel heater (Diesel), blow-by heater (Diesel), fuel pump (VTi), injectors and ignition coils (petrol)                            |
| F11  | 40                | Heater blower                                                                                                                    |
| F12  | 30                | Windscreen wipers slow/fast speed                                                                                                |
| F13  | 40                | Built-in systems interface supply (ignition positive)                                                                            |
| F14  | 30                | Valvetronic supply (VTi)                                                                                                         |
| F15  | 10                | Right-hand main beam headlamps                                                                                                   |

|     |    |                                                                                              |
|-----|----|----------------------------------------------------------------------------------------------|
| F16 | 10 | Left-hand main beam headlamps                                                                |
| F17 | 15 | Left-hand dipped beam headlamps                                                              |
| F18 | 15 | Right-hand dipped beam headlamps                                                             |
| F19 | 15 | Oxygen sensors and electrovalves (VTi), electrovalves (Diesel), EGR electrovalve (Diesel)    |
| F20 | 10 | Pumps, electronic thermostat (VTi), timing electrovalve (THP), water in fuel sensor (Diesel) |
| F21 | 5  | Fan assembly control supply, ABS/ESP, turbo pump (THP)                                       |

Table of maxi-fuses

| Fuse | Ampere rating [A] | Functions                               |
|------|-------------------|-----------------------------------------|
| MF1  | 60                | Fan assembly                            |
| MF2  | 30                | ABS/ESP pump                            |
| MF3  | 30                | ABS/ESP electrovalves                   |
| MF4  | 60                | Built-in Systems Interface (BSI) supply |
| MF5  | 60                | Built-in Systems Interface (BSI) supply |
| MF6  | 20                | Additional cooling fan unit (THP)       |
| MF7  | —                 | Dashboard fusebox                       |
| MF8  | —                 | Not used                                |

**WARNING:** Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market.