 


Cadillac DeVille 1996 fuse box diagram

Engine compartment fuse block

The fuse block is located next to the air filter on the driver’s side of the engine

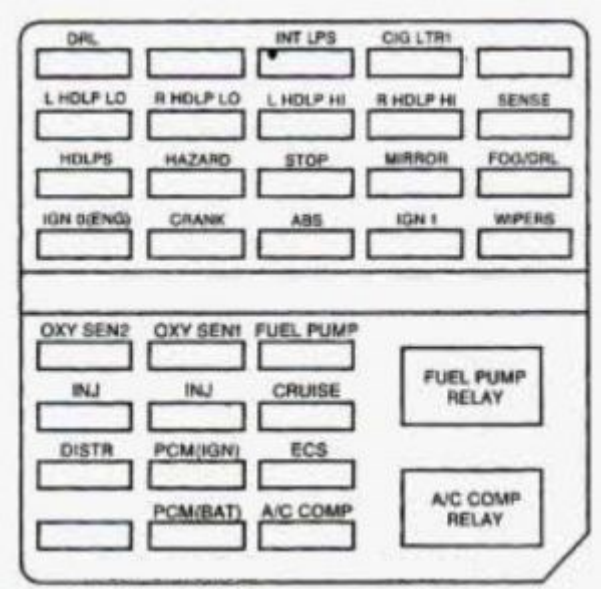

Cadillac DeVille – fuse box diagram – engine

compartment


Fuse name	Usage
DRL	Daytime Running Lamps
INT LPS	Trunk Lamp, Courtesy Lamps, Front Vanity Lamps, Glove Box Lamp, Garage Door Opener, Courtesy Lamp Rela
CIG LTR 1	Front Cigarette Lighter (Console Only), Rear Lighter
CIG LTR 2	Right and Left Rear Cigarette Lighter
L HDLP LO	Left Low-Beam Headlamp
R HDLP LO	Right Low-Beam Headlamp, Light Emitting Diode (LED) on Headlamp Switch
L HDLP HI	Left High-Beam Headlamp
R HDLP HI	Right High-Beam Headlamp
SENSE	Heated Windshield Control (Optional)
HDLPS	Headlamp Switch and Relay, High/Low Beam Control Relay, Right and Left Low Beam @-Beam), Right and Left High Beam

HAZARD	Electronic Flasher Module, Turn/Hazard Module, Right and Left Turn Lamps, Back-up Lamps, Right and Left Front Turn Lamps, Right and Left Repeater Lamps (Export
STOP	Stoplamp Switch, Centered High-Mounted Stoplamp (CHMSL), Turn Hazard Switch, ABS Controller, Stepper Motor Cruise Control, Right and Left Rear Stoplamps
MIRROR	Inadvertent Power Relay, Outside Rearview Mirror, Data Line Connector (DLC), Flash-to-Pass Module
FOG/DRL	Daytime Running Lamp (DRL) Relay (Domestic Only), Fog Lamp Relay (Optional), Headlamp Switch, Right and Left Front Fog Lamps (Optional
IGN (ENG)*	Powertrain Control Module (PC1
CRANK	Sensing and Diagnostic Module (SDM
ABS	Anti-Lock Brake System/Anti-Slip Regulation-5 (ABS/ASR-5) Controller
IGN 1	Rear Ignition- 1 Relay, Front Fog Lamp Relay, Rear Lamp Relay (Export), Controlled Power Back-up Relay, DRL Relay (Domestic Only)
WIPERS	Accessory Relay, Wiper Switch, Cluster, Wiper Motor, wiper Pump
OXY SEN2*	02 Sensor Rear, Catalytic Converter (CAT) Rear 09 Sensor
OXY SEN1*	02 Sensor Front, CAT Front 02 Sensor
FUEL PUMP*	Engine Oil Pressure Indicator, PCM, Fuel Pump Relay, Fuel Pump
INJ*	Injectors 2,3,5,8
INJ*	Injectors 1,4,6,7
CRUISE	Stepper Motor Cruise Control, Park-Neutral Position Switch, Back-up Lamps, Electrochromatic Mirror, Brake-Transaxle Shift Interlock (BTSI)
DISTR*	Electronic Ignition Control
PCM (IGN)*	Powertrain Control Module (PCM)
ESC*	Transaxle Shift Solenoids, Mass Airflow, Low Refrigerant Cutoff Switch, Canister Purge, PCM, Linear Exhaust Gas Recirculation (EGR), Power Steering Press Switch, Front Ignition- 1 Relay
PCM (BAT)*	PCM

A/C COMP	AC Compressor Relay, Cooling Fan Relays 1,2,3, Compressor
* Do not alter OBD II related fuses or circuit breakers	

MaxiFuse/Relay Center

 The MaxiFuses and relays are located next to the engine compartment fuse block on the driver's side of the engine

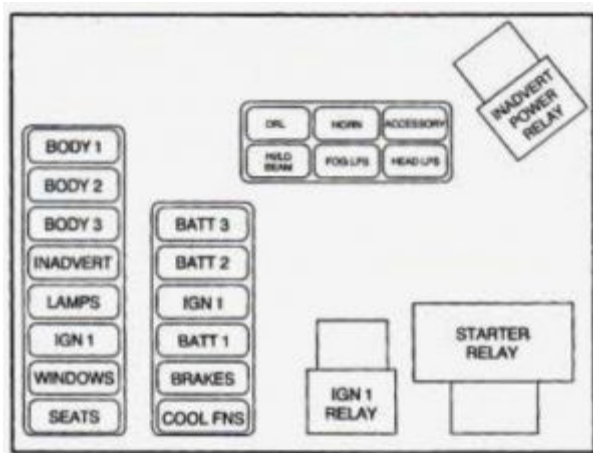


Cadillac DeVille – fuse box diagram – maxi fuse/relay center

Fuse	Usage
BODY 1	Real Tie Dampening (RTD) Fuse, Convenience Fuse, BATT Fuse, Headlamp Wash Fuse (Export), Antenna Fuse, Park Lamp Relay, Right and Left Park Fuse
BODY 2	Defog Relay, Pull-Down Fuse, Right and Left Heated Seat Fuse, Electronic Level Control (ELC) Fuse, Rear Defog Fuse, Heated Mirror Fuse
BODY 3	Controlled Power Relay, Controlled Power Back-up Relay Mirror Fuse, Platform Zone Module (PZM) Fuse, Radiophone Fuse, Cluster Fuse, AMP Fuse Comfort Fuse
INADVERT	Inadvertent Power Relay, Brushless Blower Motor, Interior Lamps Fuse, Cigarette Lighter- 1 Fuse, Cigarette Lighter-2 Fuse
LAMPS	High/Low Beam Relay, Headlamp Relay, Fog LampDRL Fuse, Hazard Fuse, Mirror Fuse, Headlamp Fuse, Right and Left High Beam Fuse, Right and Left Low Beam Fuse, Stop Fuse
IGN 1	Rear Ignition- 1 Relay, Wiper Fuse, Relay Ignition-1 Fuse, Supplemental Inflatable Restraint (SIR) Fuse
WINDOWS	Delayed Accessory Bus (DAB) Relay
SEATS	Horn Relay, Driver and Passenger Lumbar In/Out Relays, Driver and Passenger Up/Down Relays, Memory Seat Module, Driver and Passenger Power Seat Switch

BATT 3	Ignition 0-Body Fuse, RTD Fuse, Ignition 0-Engine Fuse, Anti-Lock Brake System (ABS) Fuse, Turn Fuse, Console
BATT 2	Starter Enable Relay, Park-Neutral Position Switch, Crank Fuse, Injector 1 and 2 Fuse, Engine Control System (ECS) Fuse, PCM Fuse, DIS Fuse, Ignition-1 Fuse, ACC Fuse
IGN 1*	Front Ignition- 1 Relay, Oxygen Sensor 1 and 2 Fuse, Fuel Fuse, Cruise Fuse
BATT 1	Starter Relay, PCM Fuse, AC Compressor Fuse
BRAKES	ABS Brake Modulator
COOL FNS	Cooling Fan Relays 1,2,3
* Do not alter OBD II related fuses or circuit breaker	

 Rear Compartment Fuse Block

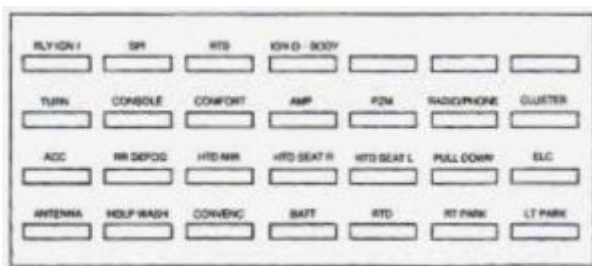

Cadillac DeVille – fuse box diagram – rear

compartment

Fuse	Usage
RLY IGN 1	SDM, Cluster, Cruise in Stalk, Brake Switch, PZM, Fuel Level Sensor, Catalytic Converter Overtemp Amplifier (Export)
SIR	SDM
RTD	RTD
IGN 0-BODY	PRNDL, Heated Windshield (Optional), PZM, Cluster, Air Control Module (ACM), Upper and Lower Zone Motor, HVAC Solenoids, Climate Control Panel (Optional), Rear Defog Relay, ELC Relay
TURN	Cornering Lamp Switch, Right and Left Cornering Lamps, Electronic Flasher Module, Turn/Hazard Switch, Right and Left Rear Turn Signal Lamps, Right and Left Front Turn Signal Lamps, Repeater Lamps (Expor
CONSOLE	Cellular Phone Portable Docking Station, Washer Circuit Boars, Heated Seat Switch, Rear Zone Blower, Right and Left Heated Seat Switches, Headlamp Wash Relay
COMFORT	CD Player, Remote Function Actuator (RFA), Controlled Power Relay, Air Control Module (ACM), PZM

AMP (Optional)	Right and Left Hand Bose Relay, Right Front and Rear Speaker (On Door), Left Front and Rear Speaker (On Door)
PZM	PZM
RADIO/PHONE	Radio Receiver, Radio Interface Module (RIM)(Bose Only), Phone, DAB Relay, Trunk Release Relay, Fuel Door Release Relay, High Beam Rel
CLUSTER	Steering Wheel Controls, Clust
ACC	EM, Electrwhromic Minor, Rain Sensor (Optional), Accessory Relay
RR DEFOG	Rear Defog
HTD MIR	Right and Left Outside Heated Mirror
HTD SEAT R	Passenger Heated Seat Relay
HTD SEAT L	Driver Heated Seat Rel
PULL DOWN	Trunk Pull-Down Motor
ELC	ELC Relav and Motor
ANTENNA	Power Mast Antenna
HDLP WASH	Headlamp Wash Relay (Export), Headlamp Wash Motor
CONVENC	Trunk Release Relay, Trunk Release Solenoid, Fuel Door Release Relay, Fuel Filler Door Release Solenoid, Door Lock Relay, Right and Left Front Door Motors, Right and Left Rear Door Motors, Door Unlock Rel
BATT	Driver and Passenger Seat Lumbar Switch, Lumbar Switch (Driver Seat Only), Memory Seat Modu
RTD	RTD Module
RT PARK	Front and Rear Park Lamps, Right Front and Rear Sidemarkers Lamps, Headlamp Switch (Export), Rear Fog Lamp Relay (Export), HeadlamD Switch
LT PARK	Left Front and Rear Sidemarkers Lamps, Right and Left Parking Lamps,
* Do not alter OBD II related fuses or circuit breakers	