



Suzuki SX4 S-Cross 2014 – present fuse box diagram

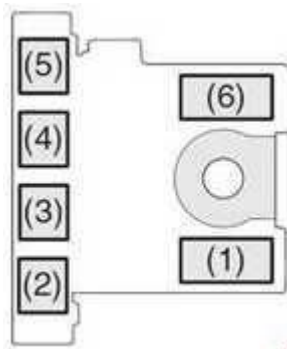

. Suzuki S4 S-Cross – fuse box diagram – engine compartment

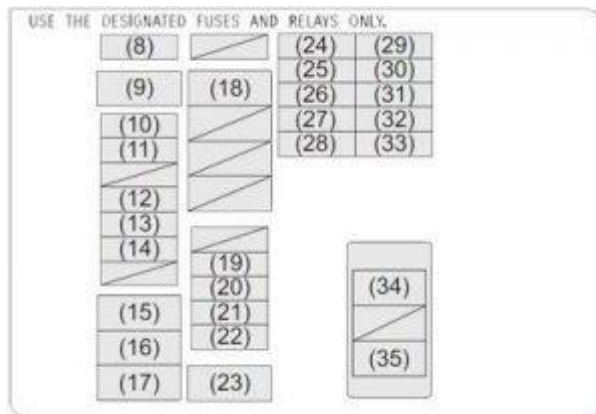

. Suzuki S4 S-Cross – fuse box diagram –


engine compartment

No.	A	Function/component
1	60	FL7
2	80	FL6
3	100	FL5
4	80	FL4
5	100	FL3
6	100	FL2

7	120	FL1
8	7.5	Ignition-1 signal 2 (D16AA)
9	30	Radiator fan 2
10	20	Front fog light
11	7.5	Headlight 2
12	25	ABS control module
13	25	Headlight
14	30	Back up
15	40	Ignition switch
16	40	ABS motor
17	30	Starting motor
18	30	Radiator fan
19	30	FI main
20	20	Fuel pump
21	10	Air compressor

22	7.5	ECM (D13A)
23	30	Blower fan
24	10	FI 2 (D13A)
25	20	INJ DRV (D13A)
26	7.5	Starting signal
27	15	Headlight (Left)
28	15	Headlight high (Left)
29	7.5	FI 2 (D16AA)
30	20	INJ DRV (D16AA)
31	15	FI 3 (D16AA)
32	15	Headlight (Right)
33	15	Headlight high (Right)
34	50	Ignitbn switch 2
35	50	Battery

Fuses under the Dash Board

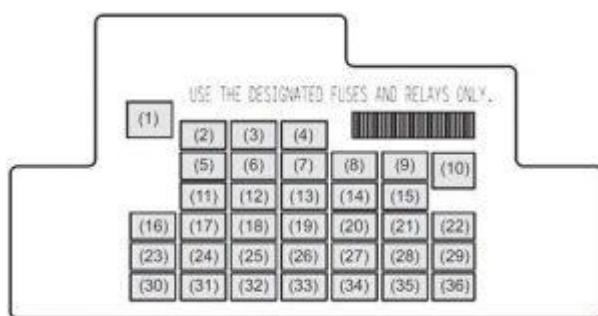

Suzuki S4 S-Cross – fuse box diagram –

dashboard

No.	A	Function/component
1	–	Not used
2	20	Power window timer
3	15	Steering lock
4	20	Rear defogger
5	20	Sunroof
6	10	DRL
7	10	Heated mirror
8	7.5	Starting signal
9	15	Accessory socket 2
10	30	Power window
11	10	Hazard

12	7.5	BCM
13	15	Ignition coil
14	10	ABS control module
15	15	Accessory socket
16	10	A-STOP controller
17	15	Horn
18	10	Stop light
19	10	Air bag
20	10	Back-up light
21	15	Wiper / Washer
22	30	Front wiper
23	10	Dome light
24	15	4WD
25	7.5	RR fog lamp
26	–	Not used

27	7.5	Ignition-1 signal
28	15	Radio 2
29	10	Accessory socket 3
30	15	Radio
31	10	Taillamp
32	20	D/L
33	7.5	Cruise control
34	10	Meter
35	7.5	Ignition-2 signal
36	20	Seat heater