


Alfa Romeo 155 1992 – 1998 fuse box diagram

Fuse Panel

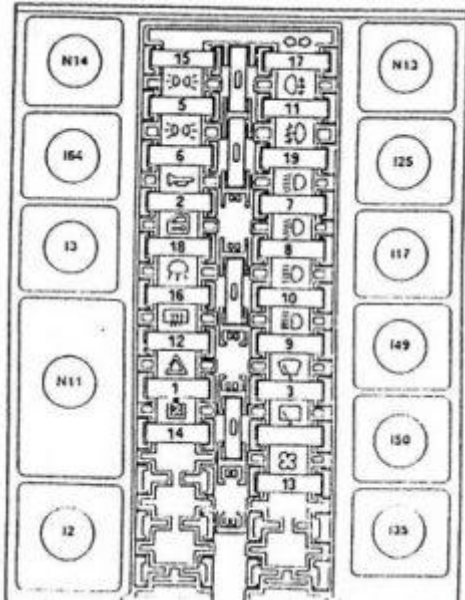


Alfa Romeo 155 – fuse box diagram

Fuse	A	Circuit protected
1	10	Hazard warning lights
2	20	Horns, Cigar lighters, Stoplights, Boot release, Radio
3	20	Windscreen wipers
4	20	Roof light timer
5	10	Control lighting, Rear left and front right sidelights, RH numberplate light
6	10	Control lighting, Rear right and front left sidelights, LH numberplate light

7	10	RH dipped beam headlight
8	10	LH dipped beam headlight
9	10	RH main beam headlight
10	10	LH main-beam headlight (+ warning lamp)
11	7,5	Rear foglamp (+ warning lamp)
12	30	Heated rear window (+ warning lamp), Door mirror defrosters
13	20	Heating/air conditioning fan, Seat warming, Rear and front power windows, Radio
14	20	Engine cooling fan (6V)
	25	Electric fan for radiator cooling
15	10	Dashboard, Check Panel, Windscreen washers, Headlight washers, Reversing lights, Controlled damping suspension solenoid valves, Air conditioning compressor control, Engine electric fan control
16	7,5	Interior lights, Clock, Air conditioning control unit
17	7,5	Direction indicators, Door mirror adjustment, Controlled damping suspension
18	20	Door locks

19	20	Front foglamps (+ warning lamp)
Relay		
N11	Door locking control unit	
N13	Hazard warning lights and direction indicators intermittence	
N14	Electronic windscreen wiper intermittence	
I2	Heated rear window relay	
I3	Horn relay	
I17	Fog-light relay	
I25	Rear fog light relay	
I35	Key-operated supply relay	
I49	Dipped beam headlight	
I50	Main beam headlight	
I64	Sidelights relay	

Auxiliary Fusebox

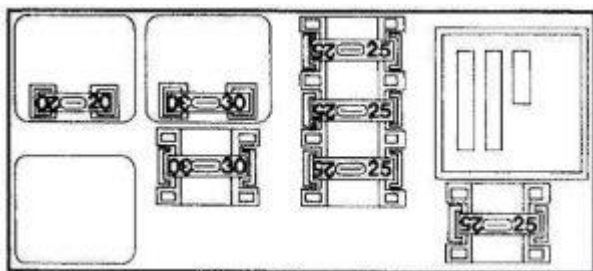


Alfa Romeo 155 – fuse box diagram –

auxiliary fuse box

A	Color	Circuit protected
20	Black	Headlight washer intermittence
25	Brown	Passenger side power window
10	Red	ABS
25	Blue	Rear power windows
30	Green	Electric seat adjustment
30	Red	Boot release
20	Brown	Controlled damping suspension
30	White	Sunroof
	Black	Timer for headlight washer
	Green	Relay for radiator fan (only for TS model)

1.8-2.0 TS Model

The following fuses are housed on a bracket located between the battery and the air-flow meter.

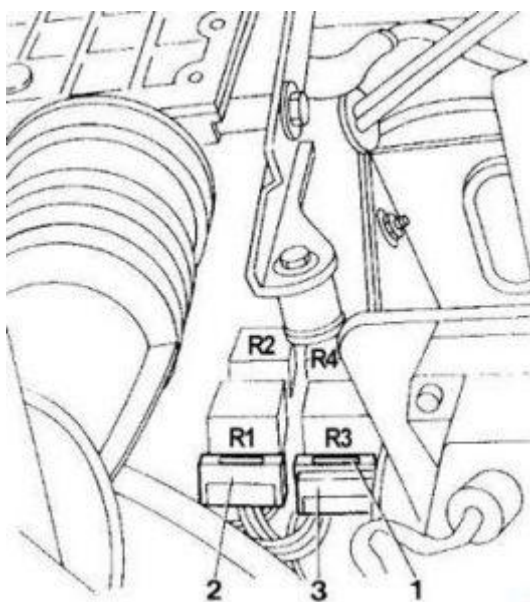


Alfa Romeo 155 – fuse box diagram – 1.8 –

2.0 TS Model

Number	Circuit protected
1	Control unit power supply
2	Lambda probe (for vehicles equipped with catalytic converter)
3	Fuel pump
Relay	
R1	Fuel pump relay
R2	Main relay
R3	Timing variator relay
R4	Relay for services

2.4 V6 model

The following fuses are located in a box located on the rear wall of the engine compartment next to the tank

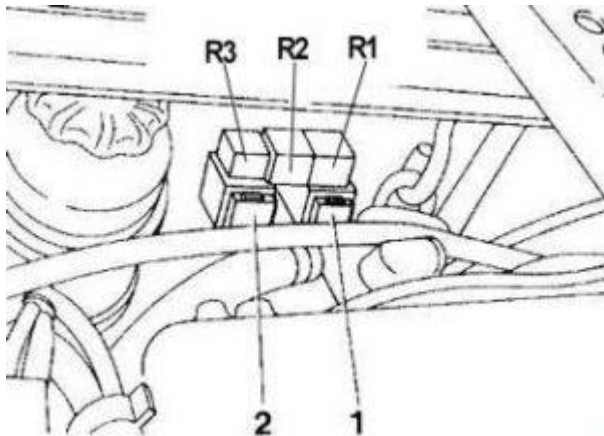


Alfa Romeo 155 – fuse box diagram – 2.4

V6 model

Number	Fuse component
1	Lambda probe (for vehicles equipped with catalytic converter)
2	Fuel pump
Relay	
R1	Fuel pump relay
R2	Main relay
R3	Relay for services

Heating-Ventilation System


For vehicles equipped with a heating-ventilation system, the fuses relating to the specific parts are housed in a container located on the front wall of the engine compartment.

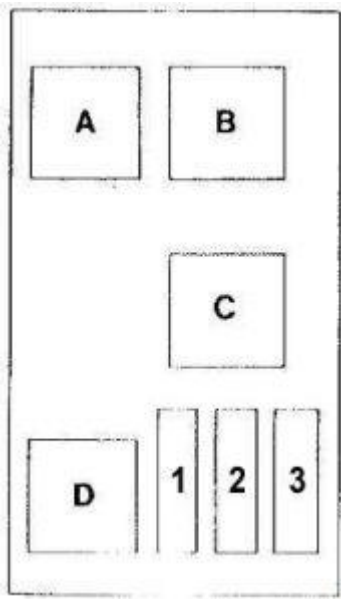

Alfa Romeo 155 – fuse box diagram – heating-ventilation system

No.	A	Fuse component
1	30	Passenger compartment electric fan
2	40	Engine cooling liquid radiator electric fan (only for 2.4 V6 model)
3	15	Air conditioning system compressor
Relay		
A	Relay for engine cooling liquid radiator fan (only for 2.4 V6 model)	
B	Slug for engine cooling liquid radiator fan	
C	Relay for air conditioning compressor cut-in	
D	Supplementary relay	

The following fuses are housed in the rear left-hand part of the engine compartment next to the brake-clutch fluid reservoir.

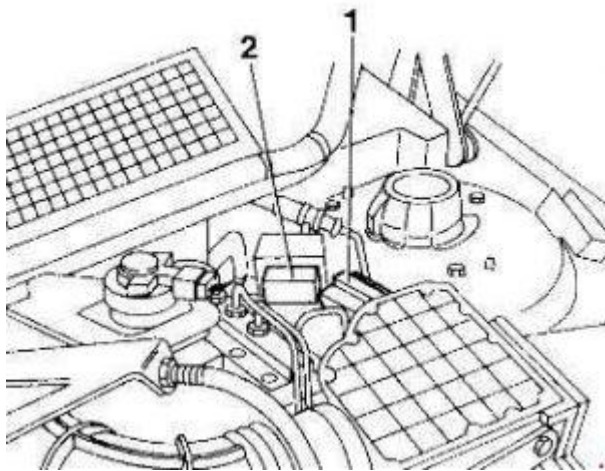

Alfa Romeo 155 – fuse box diagram – heating-ventilation system

No.	A	Fuse component
1	50	Heating-ventilatton system control unit
2	40	Engine cooling liquid radiator fan (only for 1.8 – 2.0 TS model