


Fiat Doblo 2010 – present fuse box diagrams

Year of production: 2010, 2011, 2012, 2013, 2014, 2015, 2016, 2017, 2018

Engine compartment fuse box

The box is located on the right-hand side of the engine, next to the battery.

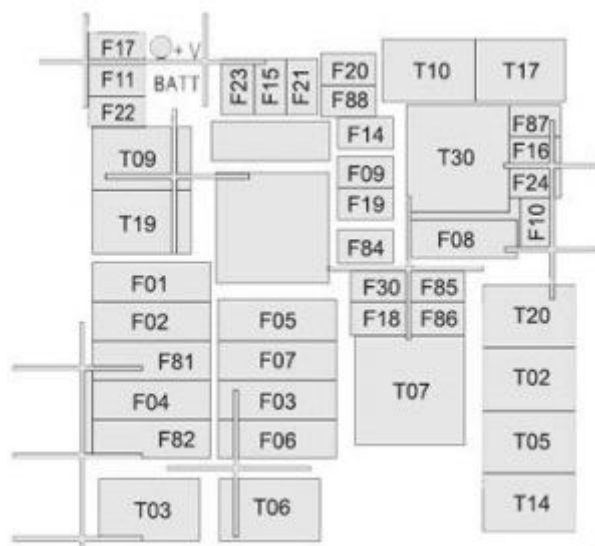


Fiat Doblo – fuse box diagram – engine

compartment

Function/component	No.	A
Remote control switch for opening swing door (Cargo version)	F09	10
Single tone horn	F10	10
Main beams	F14	15
Additional heater PTC1 (diesel engines)	F15	30
Climate control compressor	F19	7.5
Heated rear window	F20	30
Fuel pump on tank	F21	15
Fog lights	F30	15
Methane system solenoid valves	F84	10
Passenger compartment socket, rear socket	F85	30
Cigarette lighter , heated seats	F86	30
IBS Battery charge status sensor for Start&Stop system	F87	5
Wing mirror defrosters	F88	7.5

The instrument panel fuse panel

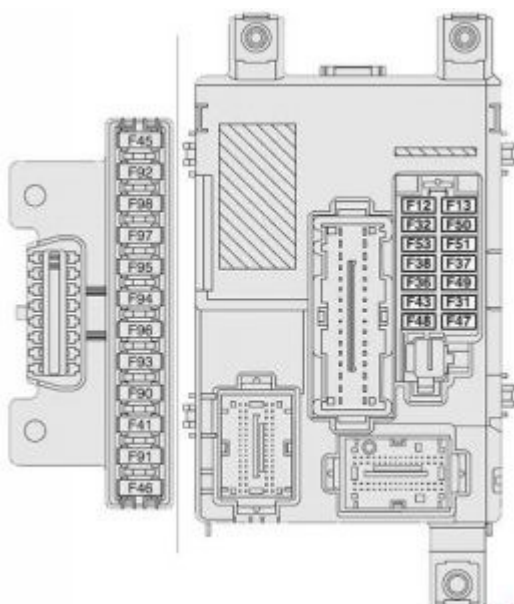

Fiat Doblo – fuse box diagram – instrument panel

Function/component	No.	A
Right low beam	F12	7.5
Front courtesy light, rear courtesy light lights on sun visors, door clearance lights, boot light	F32	7.5
Instrument panel	F53	5
Door lock/unlock motors, dead lock actuator motors, tailgate lock motor	F38	20
Power + battery for EOBD diagnostic socket automatic climate control unit alarm siren, sound system, convergence control unit Blue&Me tyre pressure detector control unit	F36	10
Windscreen/rear window washer pump	F43	15
Window winder motor for front door passenger side	F48	20
Left low beam, headlight corrector	F13	7.5
Int. power for brake pedal switch, clutch pedal switch, interior heater, convergence control unit Blue&Me™, sound system set-up	F51	7.5
Int. power for instrument panel, brake pedal switch, third brake light	F37	5
Int. power for control panel lights, parking control unit tyre pressure detector control unit electric door mirror motor. rain sensor, electric top control unit My-port infotainment socket	F49	5
Int. power for engine fusebox relay coils and body computer relay coils	F31	5
Window winder motor for front door driver's side	F47	20
Rear socket	F94	15
Cigarette lighter/Passenger compartment socket	F95	15
Cigarette lighter/Passenger compartment socket	F96	15
Heated driver seat	F97	10
Heated passenger seat	F98	10

WARNING: Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market.

