
ALPHABETICAL INDEX



A

	Page
ABBREVIATIONS USED IN THIS MANUAL (TERMS) .	IN-5
AUTOMATIC TRANSAXLE (PREPARATION)	PP-1
AUTOMATIC TRANSAXLE (SERVICE SPECIFICATIONS)	SS-4
AUTOMATIC TRANSAXLE SYSTEM	AX-1

C

COMPONENT PARTS	AX-3
---------------------------	------

D

DIFFERENTIAL CASE	AX-102
DIRECT CLUTCH	AX-59

F

FORWARD CLUTCH	AX-65
--------------------------	-------

G

GENERAL INFORMATION (HOW TO USE THIS MANUAL)	IN-1
GENERAL INFORMATION (REPAIR INSTRUCTIONS)	IN-3

H

HOW TO USE THIS MANUAL	IN-1
----------------------------------	------

L

LOWER VALVE BODY	AX-98
----------------------------	-------

O

OIL PUMP	AX-55
--------------------	-------

R

REPAIR INSTRUCTIONS	IN-3
-------------------------------	------

S

SECOND BRAKE	AX-72
STANDARD BOLT (SERVICE SPECIFICATIONS)	SS-1

T

TERMS	IN-5
TRANSFER	AX-118

U

UNDERDRIVE CLUTCH	AX-81
UNDERDRIVE PLANETARY GEAR	AX-76
UPPER VALVE BODY	AX-94

V

VALVE BODY	AX-87
----------------------	-------