

F RELAY LOCATIONS

① : Engine Room R/B Assembly

○ : Engine Room J/B Assembly

Front Fender Apron LH (See Page 20)

- * 1:H-LP LH/H-LP LO LH
- * 2:H-LP RH/H-LP LO RH
- * 3:30A HTR SUB1 (for High Current)
- * 4:30A RDI (for High Current)
- * 5:40A HTR (for High Current)
- * 6:50A ABS1/VSC1 (for High Current)
- * 7:50A EPS (for High Current)
- * 8:40A HTR SUB2 (for High Current)
- * 9:FAN NO.2 Relay
- * 10:ST Relay



