

Last Modified: 11-27-2007		1.6 T
Service Category: Vehicle Interior	Section: Meter/Gauge/Display	
Model Year: 2008	Model: LX570	Doc ID: RM000003E2T000X
Title: METER / GAUGE / DISPLAY: METER / GAUGE SYSTEM: PROBLEM SYMPTOMS TABLE (2008 LX570)		

PROBLEM SYMPTOMS TABLE

HINT:

Use the table below to help determine the cause of problem symptoms. If multiple suspected areas are listed, the potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.

Malfunction System

SYMPTOM	SUSPECTED AREA	SEE PAGE
Entire Combination Meter does not Operate	CAN communication system	INFO
	Combination meter assembly	INFO
	Fuses (ECU-B1, MET)	INFO
	Harness or connector	INFO
ODO/TRIP Switch Malfunction	Combination meter assembly	INFO
	Light control rheostat	INFO
	Harness or connector	INFO
Operating Light Control Rheostat does not Change	Combination meter assembly	INFO
	Light control rheostat	INFO
	Harness or connector	INFO
Meter Illumination is Always Dark	CAN communication system	INFO
	Lighting system	INFO
	Combination meter assembly	INFO
	Main body ECU (Cowl side junction block LH)	INFO
Meter Illumination does not Dim at Night	CAN communication system	INFO
	Lighting system	INFO
	Combination meter assembly	INFO
Multi-information Display does not Change Using DISP	Inspect steering pad switch	INFO
	Inspect spiral cable	INFO
	Perform Active Test (Meter display 1)	INFO
	Replace combination meter assembly	INFO
Multi-information Display is Missing Dots	Perform Active Test (Meter display 1)	INFO
	Replace combination meter assembly	INFO

Meter Gauges

SYMPTOM	SUSPECTED AREA	SEE PAGE
Speedometer Malfunction	CAN communication system	INFO
	Combination meter assembly	INFO
	Vehicle stability control system	INFO
Tachometer Malfunction	CAN communication system	INFO
	Combination meter assembly	INFO
	SFI system	INFO
Fuel Receiver Gauge Malfunction	Fuel sender gauge (DTC B1500)	INFO
	Combination meter assembly	INFO
Engine Coolant Temperature Receiver Gauge Malfunction	CAN communication system	INFO
	Combination meter assembly	INFO
	SFI system	INFO
Oil Pressure Receiver Gauge Malfunction	CAN communication system	INFO
	Combination meter assembly	INFO
	Oil pressure sensor	INFO
	Wire harness	INFO
Voltage Meter Malfunction	Fuse (MET)	INFO
	Combination meter assembly	INFO
	Harness or connector	INFO

Warning/Indicator Lights

SYMPTOM	SUSPECTED AREA	SEE PAGE
BEAM indicator light does not come on	CAN communication system	INFO
	Lighting system	INFO
	Perform Active Test (Indicat. Lamp Beam)	INFO
	Replace combination meter assembly	INFO
FRONT FOG indicator light does not come on	CAN communication system	INFO
	Lighting system	INFO
	Perform Active Test (Indicat. Lamp Fr FOG)	INFO
	Replace combination meter assembly	INFO
SRS warning light does not come on	CAN communication system	INFO
	Airbag system	INFO
	Perform Active Test (Indicat. Lamp Airbag)	INFO
	Replace combination meter assembly	INFO
DOOR indicator light does not come on	CAN communication system	INFO

SYMPTOM	SUSPECTED AREA	SEE PAGE
	Lighting system	INFO
	Perform Active Test (Indicat. Lamp Doors All Open)	INFO
	Replace combination meter assembly	INFO
Driver side seat belt warning light does not come on	CAN communication system	INFO
	Seat belt warning system	INFO
	Perform Active Test (Driver Side Seat Belt)	INFO
	Replace combination meter assembly	INFO
Brake warning light does not come on	CAN communication system	INFO
	Vehicle stability control system	INFO
	Perform Active Test (Indicat. Lamp Brake)	INFO
	Replace combination meter assembly	INFO
CHARGE warning light does not come on	Perform Active Test (Indicat. Lamp Charge)	INFO
	Replace combination meter assembly	INFO
4LO indicator light does not come on	CAN communication system	INFO
	Transfer system	INFO
	Perform Active Test (Indicat. 4LO)	INFO
	Replace combination meter assembly	INFO
ABS warning light does not come on	CAN communication system	INFO
	Vehicle stability control system	INFO
	Perform Active Test (Indicat. Lamp ABS)	INFO
	Replace combination meter assembly	INFO
MIL does not come on	SFI system	INFO
	Replace ECM	INFO
	Replace combination meter assembly	INFO
	Harness or connector	-
FUEL warning light does not come on	Perform Active Test (Indicat. Lamp fuel)	INFO
	Replace combination meter assembly	INFO
	Harness or connector	-
SECURITY warning light does not come on	Theft deterrent system	INFO
	Replace combination meter assembly	INFO
	Harness or connector	-
ACCESS MODE indicator light does not come on	CAN communication system	INFO
	Suspension control system	INFO
	Perform Active Test (Indicat. Ride mode)	INFO

SYMPTOM	SUSPECTED AREA	SEE PAGE
	Replace combination meter assembly	INFO
SLIP indicator light does not come on	CAN communication system	INFO
	Vehicle stability control system	INFO
	Perform Active Test (Indicat. Lamp Slip)	INFO
	Replace combination meter assembly	INFO
CRUISE main indicator light does not come on	CAN communication system	INFO
	Cruise control system	INFO
	Perform Active Test (Indicat. Lamp Cruise)	INFO
	Replace combination meter assembly	INFO
HEAD indicator light does not come on*1	CAN communication system	INFO
	Lighting system	INFO
	Perform Active Test (Indicat. Lamp Head)	INFO
	Replace combination meter assembly	INFO
TAIL indicator light does not come on*2	CAN communication system	INFO
	Lighting system	INFO
	Perform Active Test (Indicat. Lamp Tail)	INFO
	Replace combination meter assembly	INFO
A/T P warning light does not come on	CAN communication system	INFO
	Transfer system	INFO
	Perform Active Test (Indicat. A/T P)	INFO
	Replace combination meter assembly	INFO
Turn signal indicator light does not come on	Lighting system	INFO
	Replace combination meter assembly	INFO
RSCA OFF indicator light does not come on	Airbag system	INFO
	Replace combination meter assembly	INFO
Tire pressure warning light does not come on	CAN communication system	INFO
	Tire pressure warning system	INFO
	Perform Active Test (Indicat. Lamp Tire Press)	INFO
	Replace combination meter assembly	INFO
Master warning light does not come on	CAN communication system	INFO
	Perform Active Test (Indicat. Lamp Master warning)	INFO
	Replace combination meter assembly	INFO
CRAWL indicator light does not come on	CAN communication system	INFO
	Vehicle stability control system	INFO

SYMPTOM	SUSPECTED AREA	SEE PAGE
	Perform Active Test (Indicat. CRAWL)	INFO
	Replace combination meter assembly	INFO
ECT PWR indicator light does not come on	CAN communication system	INFO
	Automatic transmission system	INFO
	Perform Active Test (Indicat. lamp ECT PWR)	INFO
	Replace combination meter assembly	INFO
2nd START indicator light does not come on	CAN communication system	INFO
	SFI system	INFO
	Perform Active Test (Indicat. 2nd START)	INFO
	Replace combination meter assembly	INFO
Center differential lock indicator light does not come on	CAN communication system	INFO
	Transfer system	INFO
	Perform Active Test (Indicat. Ctr DIFF LOCK)	INFO
	Replace combination meter assembly	INFO
CLEARANCE SONAR indicator light does not come on*3	CAN communication system	INFO
	Intuitive parking assist system	INFO
	Parking assist ECU	INFO
	Perform Active Test (Indicat. INTUITIVE P/A LCD)	INFO
	Replace combination meter assembly	INFO
AFS OFF indicator light does not come on	CAN communication system	INFO
	Lighting System	INFO
	Headlight swivel ECU assembly	INFO
	Perform Active Test (Indicat. AFS)	INFO
	Replace combination meter assembly	INFO
PCS indicator light does not come on*4	CAN communication system	INFO
	Pre-collision system	INFO
	Perform Active Test (Indicat. Precrash)	INFO
	Replace combination meter assembly	INFO

*1: for U.S.A.

*2: except U.S.A.

*3: w/ Intuitive Parking Assist System

*4: w/ Pre-Collision System

Multi-information Display

SYMPTOM	SUSPECTED AREA	SEE PAGE
"CHECKING" multi-information display malfunction	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"CURRENT" multi-information display malfunction	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"AFTER REFUELING" multi-information display malfunction	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"CRUISING RANGE " multi-information display malfunction	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"AFTER START" multi-information display malfunction	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"TIRE PRESSURE" multi-information display malfunction	Tire pressure warning system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"Tire Pressure Test Mode" multi-information display malfunction	Tire pressure warning system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"Check Tire Pressure System" multi-information display malfunction	Tire pressure warning system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"Tire Pressure Reset Proceeding" multi-information display malfunction	Tire pressure warning system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"NORMAL" multi-information display malfunction*1	Dynamic radar cruise control system	INFO
	Distance control ECU	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"RADAR READY" multi-information display malfunction*1	Dynamic radar cruise control system	INFO
	Distance control ECU	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"CRUISE OFF" multi-information display malfunction*1	Dynamic radar cruise control system	INFO
	Distance control ECU	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO

SYMPTOM	SUSPECTED AREA	SEE PAGE
"Clean Radar Sensor" multi-information display malfunction*1	Dynamic radar cruise control system	INFO
	Distance control ECU	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"Cruise not available" multi-information display malfunction*1	Dynamic radar cruise control system	INFO
	Distance control ECU	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"Check Cruise System" multi-information display malfunction*1	Dynamic radar cruise control system	INFO
	Distance control ECU	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"Radar Cruise Beam Axis Adjustment" multi-information display malfunction*1	Dynamic radar cruise control system	INFO
	Distance control ECU	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"CRAWL has been deactivated" multi-information display malfunction	Vehicle stability control system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"CRAWL is activated" multi-information display malfunction	Vehicle stability control system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"CRAWL not available" multi-information display malfunction	Vehicle stability control system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"BRAKE!" multi-information display malfunction*2	Pre-collision system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"Check PCS System" multi-information display malfunction*2	Pre-collision system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"PCS Not available now" multi-information display malfunction*2	Pre-collision system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO

SYMPTOM	SUSPECTED AREA	SEE PAGE
"Key is not detected" multi-information display malfunction	Smart access system with push-button start (for Entry Function)	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"Low Key Battery" multi-information display malfunction	Smart access system with push-button start (for Entry Function)	INFO
	Replace transmitter battery	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"Shift to P position" multi-information display malfunction	Smart access system with push-button start (for Start Function)	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"P" does not display on multi-information display	SFI system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"R" does not display on multi-information display	SFI system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"N" does not display on multi-information display	SFI system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"D" does not display on multi-information display	SFI system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"S" does not display on multi-information display	SFI system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"S1" does not display on multi-information display	SFI system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"S2" does not display on multi-information display	SFI system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"S3" does not display on multi-information display	SFI system	INFO
	Perform Active Test (Meter Display 1)	INFO

SYMPTOM	SUSPECTED AREA	SEE PAGE
	Replace combination meter assembly	INFO
"S4" does not display on multi-information display	SFI system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"S5" does not display on multi-information display	SFI system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"S6" does not display on multi-information display	SFI system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"Check Steering Lock System" multi-information display malfunction	Steering lock system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"Steering Lock is still active" multi-information display malfunction	Steering lock system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"Depress the brake pedal, and touch the engine switch with the key" multi-information display malfunction	Smart access system with push-button start (for Start Function)	INFO
	Engine immobiliser system	INFO
	Steering lock system	INFO
	SFI system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"To start, depress the brake pedal, and push the engine switch" multi-information display malfunction	Smart access system with push-button start (for Start Function)	INFO
	Engine immobiliser system	INFO
	Steering lock system	INFO
	SFI system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"Moon Roof Opened" multi-information display malfunction	Sliding roof system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"Theft Sensor ON" multi-information display malfunction	Theft deterrent system	INFO
	Perform Active Test (Meter Display 1)	INFO

SYMPTOM	SUSPECTED AREA	SEE PAGE
	Replace combination meter assembly	INFO
"Theft Sensor OFF" multi-information display malfunction	Theft deterrent system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"3rd Seat" multi-information display malfunction*3	Rear power seat control system	INFO
	Fold seat control ECU LH	INFO
	Fold seat control ECU RH	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"Driver's door Open" multi-information display malfunction	Lighting system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"Front Passenger's Door Open" multi-information display malfunction	Lighting system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"Right Rear Door Open" multi-information display malfunction	Lighting system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"Left Rear Door Open" multi-information display malfunction	Lighting system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"Back Door Open" multi-information display malfunction	Lighting system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"Check Sonar" multi-information display malfunction*4	Intuitive parking assist system	INFO
	Parking assist ECU	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"Clean Sonar" multi-information display malfunction*4	Intuitive parking assist system	INFO
	Parking assist ECU	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"Release the Parking Brake" multi-information display malfunction	Parking brake system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO

SYMPTOM	SUSPECTED AREA	SFF
	Vehicle stability control system	INFO INFO
"Check VSC System" multi-information display malfunction	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"VSC Test Mode" multi-information display malfunction	Vehicle stability control system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"VSC OFF" multi-information display malfunction	Vehicle stability control system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"High transmission Fluid Temperature" multi-information display malfunction	Automatic transmission system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"Low Engine Oil Level" multi-information display malfunction	Oil level sensor	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"Low Washer Fluid" multi-information display malfunction	Wiper and washer system	INFO
	Windshield washer jar and tank	-
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"Low Fuel" multi-information display malfunction	Fuel system	INFO
	Inspect fuel sender gauge assembly	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"Check Fuel System" multi-information display malfunction	Fuel system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"Oil Maintenance Req'd Soon" multi-information display malfunction	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"Oil Maintenance Req'd" multi-information display malfunction	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"Oil Maintenance Req'd Reset" multi-information display malfunction	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"Oil Maintenance Req'd Reset UNFINISHED" multi-information display malfunction	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"DIAG VSC" multi-information display malfunction	Vehicle stability control system	INFO
	Perform Active Test (Meter Display 1)	INFO

SYMPTOM	SUSPECTED AREA	SEE PAGE
	Replace combination meter assembly	INFO
"Check VGRS System" multi-information display malfunction	Variable gear ratio steering system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"VGRS Test Mode" multi-information display malfunction	Variable gear ratio steering system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"DIAG VGRS" multi-information display malfunction	Variable gear ratio steering system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"Check 4-WHEEL AHC System" multi-information display malfunction	Suspension control system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"4-WHEEL AHC Test Mode" multi-information display malfunction	Suspension control system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"DIAG 4-WHEEL AHC" multi-information display malfunction	Suspension control system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO
"OUTSIDE TEMP" multi-information display malfunction	Air conditioning system	INFO
	Perform Active Test (Meter Display 1)	INFO
	Replace combination meter assembly	INFO

*1: w/ Dynamic Radar Cruise Control System

*2: w/ Pre-Collision System

*3: w/ Rear Power Seat Control System

*4: w/ Intuitive Parking Assist System

Buzzer

SYMPTOM	SUSPECTED AREA	SEE PAGE
Driver seat belt warning buzzer (buzzer that sounds intermittently, and then sounds 5 times) does not sound	CAN communication system	INFO
	Seat belt warning system	INFO
	Replace combination meter assembly	INFO
Smart key buzzer (buzzer that sounds intermittently) does not sound	CAN communication system	INFO
	Smart access system with push-button start (for Entry Function)	INFO

SYMPTOM	SUSPECTED AREA	
		SEE INFO PAGE
Immobliser confirmed buzzer (buzzer that sounds once) does not sound	Replace combination meter assembly	INFO
	CAN communication system	INFO
	Theft deterrent system	INFO
	Replace combination meter assembly	INFO
Multi-display warning buzzer (buzzer that sounds once) does not sound	Replace combination meter assembly	INFO
Smart key buzzer (buzzer that sounds once) does not sound	CAN communication system	INFO
	Smart access system with push-button start (for Entry Function)	INFO
	Replace combination meter assembly	INFO
Seat belt warning LEVEL 1 buzzer (buzzer that sounds continuously) does not sound	CAN communication system	INFO
	Seat belt warning system	INFO
	Replace combination meter assembly	INFO
Seat belt warning LEVEL 2 buzzer (buzzer that sounds continuously) does not sound	CAN communication system	INFO
	Seat belt warning system	INFO
	Replace combination meter assembly	INFO
Smart key buzzer (buzzer that sounds continuously) does not sound	CAN communication system	INFO
	Smart access system with push-button start (for Entry Function)	INFO
	Replace combination meter assembly	INFO
PKB-ON running buzzer (buzzer that sounds intermittently) does not sound	CAN communication system	INFO
	Replace combination meter assembly	INFO
Door ajar running warning buzzer (buzzer that sounds once) does not sound	CAN communication system	INFO
	Replace combination meter assembly	INFO
Sports shift reject buzzer (buzzer that sounds twice) does not sound	CAN communication system	INFO
	Automatic transmission system	INFO
	Replace combination meter assembly	INFO
Light reminder buzzer (buzzer that sounds continuously) does not sound	CAN communication system	INFO
	Lighting system	INFO
	Replace combination meter assembly	INFO
Sliding roof buzzer (buzzer that sounds once) does not sound	Sliding roof system	INFO
	Replace combination meter assembly	INFO
Four wheel drive buzzer (buzzer that does not sound, sounds intermittently, and then sounds 3 times) does not sound	CAN communication system	INFO
	Transfer system	INFO
	Replace combination meter assembly	INFO
Radar cruise canceled by low speed buzzer (buzzer that sounds twice) does not sound*1	CAN communication system	INFO
	Dynamic radar cruise control system	INFO

SYMPTOM	SUSPECTED AREA	SEE PAGE
Radar cruise warning buzzer (buzzer that sounds once) does not sound*1	Distance control ECU	INFO
	Replace combination meter assembly	INFO
	CAN communication system	INFO
	Distance control ECU	INFO
	Dynamic radar cruise control system	INFO
	Replace combination meter assembly	INFO

*1: w/ Dynamic Radar Cruise Control System

