

10. Clear Memory Mode

A: OPERATION

Clear the DTC stored in the airbag control module after repairing the airbag system and occupant detection system. (After the breakdown is recovered, the breakdown code for completed recoveries are read out when the next breakdown occurs if the memory clear work is not performed.)

- 1) Select {Each System Check} in «Main Menu».
- 2) On the «System Selection Menu» display screen, select the {Airbag System}.
- 3) On the «Airbag System» display screen, select the {Clear Memory}.
- 4) When the «Clear Memory»? is shown on the screen, select the [OK].
- 5) When «Done» is displayed, terminate the Subaru Select Monitor and turn the ignition switch to OFF.

NOTE:

For details concerning the operation procedure, refer to the “PC Application Help for Subaru Select Monitor”.