

8. Read Diagnostic Trouble Code (DTC)

A: OPERATION

- 1) Using the Subaru Select Monitor, on the «Main Menu», select {Each System Check}.
- 2) On the «System Selection Menu», select {Airbag System}.
- 3) After {Airbag System} is displayed, select [OK].
- 4) Select the {Diagnostic Code(s) Display} in «Airbag System».
- 5) Record the displayed DTC.

NOTE:

- For details concerning the operation procedure, refer to the “PC Application Help for Subaru Select Monitor”.
- For details concerning DTCs, refer to the List of Diagnostic Trouble Code (Airbag system, Occupant detection system). <Ref. to AB(diag)-40, List of Diagnostic Trouble Code (DTC).> <Ref. to OD(diag)-22, List of Diagnostic Trouble Code (DTC).>