


Isuzu Hombre 1996 fuse box diagram

Fuse box diagram

Front View

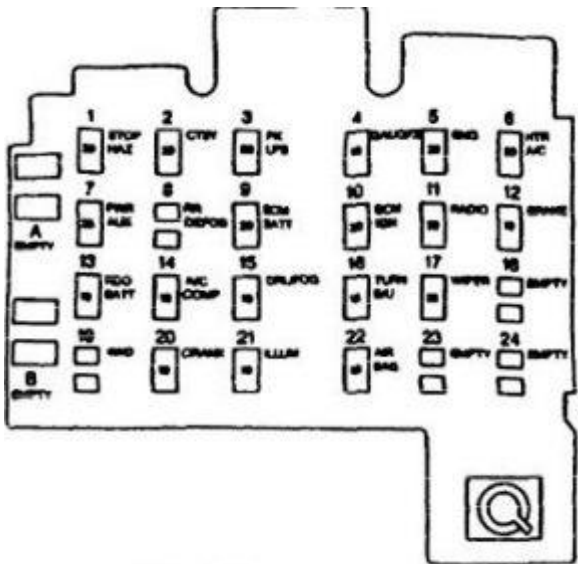


Front View

Isuzu Hombre – fuse box diagram – front

view

Rear View

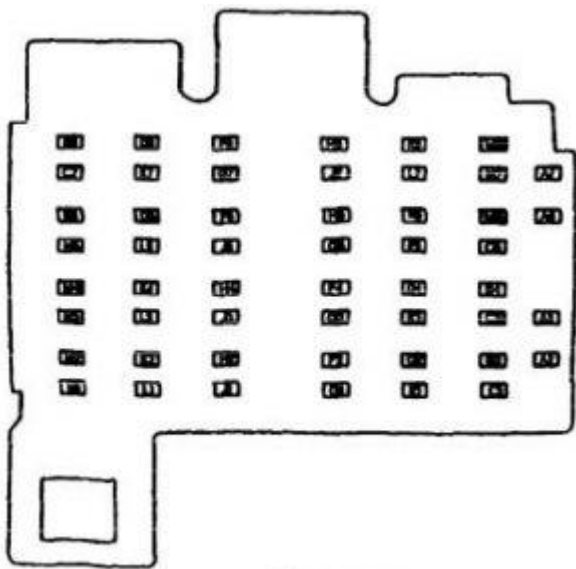

Rear View

Isuzu Hombre – fuse box diagram – rear

view

Number	Fuse name		Function	A

1	STOP HAZ	140	AUDIO ALARM MODULE, STOPLAMP SWITCH	20
2	CTSY	40	LH COURTESY LAMP, CIGARETTE LIGHTER, I/P COMPARTMENT BOX LAMP, HORN RELAY, RH COURTESY LAMP, DOME LAMP	20
3	PK LPS	240	HEADLAMP SWITCH, UNDERHOOD LAMP	20
4	GAUGES	39	INSTRUMENT CLUSTER, AUDIO ALARM MODULE, A/C COMPRESSOR CLUTCH RELAY, DERM, DRL RELAY, DRL MODULE	10
5	ENG	539	LINEAR EGR SOLENOID VALVE, EVAPORATIVE EMISSIONS CANISTER PURGE SOLENOID, EVAPORATIVE EMISSIONS CANISTER VENT VALVE, POST CONVERTER OXYGEN SENSOR HEATER, POWERTRAIN CONTROL MODULE (PCM)	20
6	HTR A/C	141	HVAC SELECT SWITCH, OUTSIDE AIR VALVE ACTUATOR	20
7	PWR AUX	840	DATA LINK CONNECTOR (DLC), CIGARETTE LIGHTER	25
8	EMPTY	—	—	—
9	ECM	440	FUEL PUMP OIL PRESSURE SWITCH, POWERTRAIN CONTROL MODULE (PCM)	20

10	ECM IGN	439	POWERTRAIN CONTROL MODULE (PCM), DISTRIBUTORLESS IGNITION CONTROL MODULE, FUEL INJECTORS	20
11	RADIO	43	RADIO	20
12	BRAKE	441	BRAKE PRESSURE MODULATOR VALVE, STOPLAMP SWITCH	10
13	RDO BATT	1140	RADIO	10
14	AC COMP	1240	A/C COMPRESSOR CLUTCH RELAY	10
15	FOG-DRL	340	DAYTIME RUNNING LAMPS RELAY	10
16	TURN B/U	139	TURN SIGNAL FLASHER, BACKUP LAMP SWITCH	15
17	WIPER	143	WINDSHIELD WIPER/WASHER SWITCH, WINDSHIELD WIPER MOTOR AND MODULE	25
18	EMPTY	—	—	—
19	EMPTY	—	—	—
20	CRANK	806	CLUTCH PEDAL POSITION SWITCH	10

21	ILLUM	8	AUDIO ALARM MODULE, INSTRUMENT CLUSTER, HVAC CONTROL ILLUMINATION LAMP, RADIO	10
22	AIR BAG	1139	ARMING SENSOR. DERM	10
23	EMPTY	—	—	—
24	EMPTY	—	—	—
A	EMPTY	—	—	—
B	EMPTY	—	—	—