

SUPPLEMENT FOR 6 CYLINDER
ENGINE MODEL

This service manual has been prepared to provide SUBARU service personnel with the necessary information and data for the correct maintenance and repair of SUBARU vehicles.

This manual includes the procedures for maintenance, disassembling, reassembling, inspection and adjustment of components and diagnostics for guidance of experienced mechanics.

Please peruse and utilize this manual fully to ensure complete repair work for satisfying our customers by keeping their vehicle in optimum condition. When replacement of parts during repair work is needed, be sure to use SUBARU genuine parts.

All information, illustration and specifications contained in this manual are based on the latest product information available at the time of publication approval.

FUJI HEAVY INDUSTRIES LTD.

FOREWORD	FW
HOW TO USE THIS MANUAL	HU
SPECIFICATIONS	SPC
PRECAUTION	PC
NOTE	NT
IDENTIFICATION	ID
RECOMMENDED MATERIALS	RM
PRE-DELIVERY INSPECTION	PI
PERIODICAL MAINTENANCE	PM

SUPPLEMENT FOR 6 CYLINDER
ENGINE MODEL

FUEL INJECTION (FUEL SYSTEMS)	FU(H6)
EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)	EC(H6)
INTAKE (INDUCTION)	IN(H6)
MECHANICAL	ME(H6)
EXHAUST	EX(H6)
COOLING	CO(H6)
LUBRICATION	LU(H6)
SPEED CONTROL SYSTEMS	SP(H6)
IGNITION	IG(H6)
START/CHARGING SYSTEMS	SC(H6)
ENGINE (DIAGNOSTICS)	EN(H6)
REAR SUSPENSION	RS
WIRING SYSTEM	WI

WIRING SYSTEM



	Page
1. Basic Diagnostics Procedure	3
2. Working Precautions	13
3. Super Multiple Junction (SMJ)	14
4. Power Supply Routing.....	17
5. Ground Distribution	32
6. Airbag System	41
7. Air Conditioning System.....	45
8. Anti-lock Brake System	66
9. A/T Control System	73
10. Audio System	95
11. Charging System.....	100
12. Combination Meter	101
13. Cruise Control System	107
14. Door Lock System.....	120
15. Engine Coolant Temperature Gauge System	124
16. Engine Electrical System	125
17. Fuel Gauge System	181
18. Full-Time Dual-Range System	184
19. Front Accessory Power Supply System.....	185
20. Headlight Beam Leveler System.....	186
21. Horn System.....	187
22. Immobilizer System	188
23. Keyless Entry System	192
24. Back-up Light System	198
25. Clearance Light and Illumination Light System	199
26. Front Fog Light System.....	206
27. Headlight System	209
28. In Compartment Light System.....	211
29. Stop Light System	217
30. Turn Signal Light and Hazard Light System.....	219
31. Oil Pressure Warning Light System.....	223
32. Outside Temperature Display System.....	224
33. Parking Brake and Brake Fluid Level Warning System.....	225
34. Pneumatic (Air) Suspension System	226
35. Power Seat System.....	234
36. Power Window System	235
37. Radiator Fan System	244
38. Rear Accessory Power Supply System	247
39. Rear Fog Light System	248
40. Rear Window Defogger System.....	249
41. Remote Controlled Rearview Mirror System	250
42. Seat Belt Warning System	252
43. Seat Heater System.....	254
44. Starter System.....	255

GENERAL DIAGNOSTIC TABLE

Wiring System

45.	Sunroof System.....	256
46.	Vehicle Dynamic Control System.....	257
47.	Wiper and Washer System (Front)	273
48.	Wiper and Washer System (Rear).....	275
49.	Wiper Deicer System	277
50.	Overall Systems	278
51.	Front Wiring Harness	282
52.	Bulkhead Wiring Harness (In Engine Room).....	288
53.	Bulkhead Wiring Harness (In Compartment).....	296
54.	Engine Wiring Harness and Transmission Cord.....	305
55.	Instrument Panel Wiring Harness	309
56.	Rear Wiring Harness.....	313
57.	Door Cord.....	321
58.	Rear Wiring Harness and Trunk Lid Cord	325
59.	Rear Wiring Harness and Rear Gate Cord.....	327

PNEUMATIC (AIR) SUSPENSION SYSTEM

Wiring System

34. Pneumatic (Air) Suspension System


S903479

A: SCHEMATIC

S903479A21



1. LHD MODEL

S903479A2101

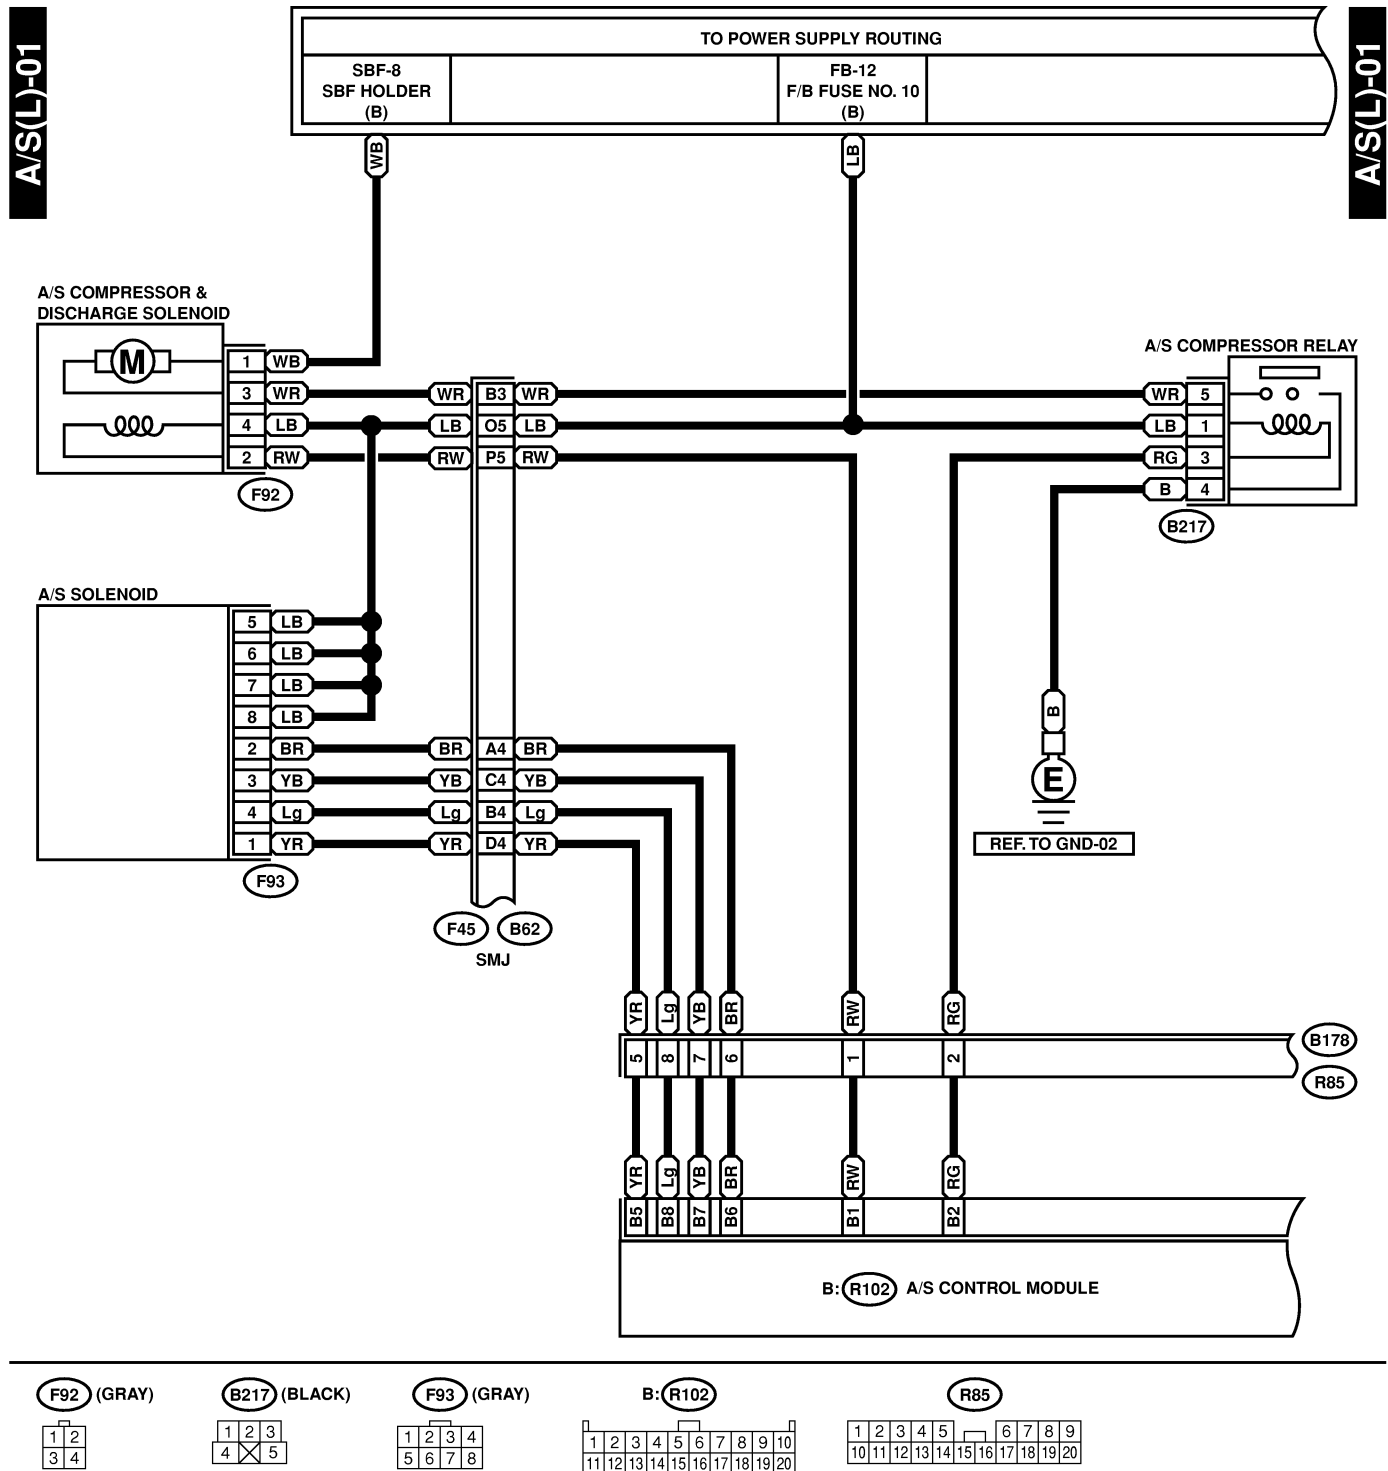


PNEUMATIC (AIR) SUSPENSION SYSTEM

Wiring System

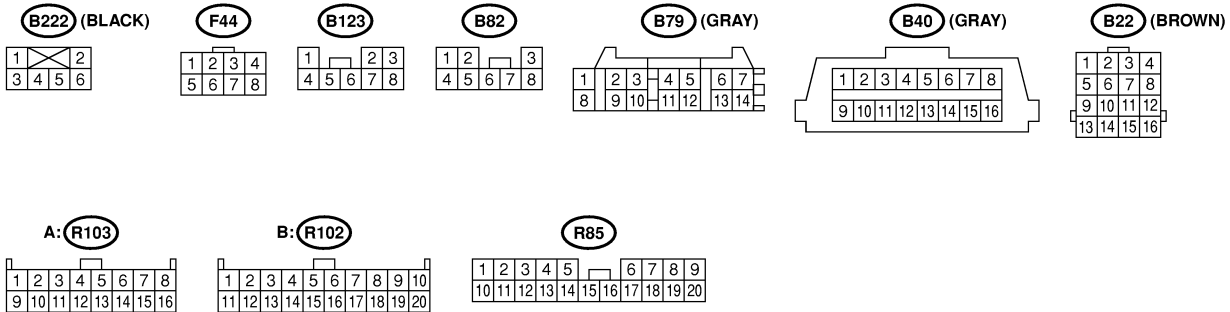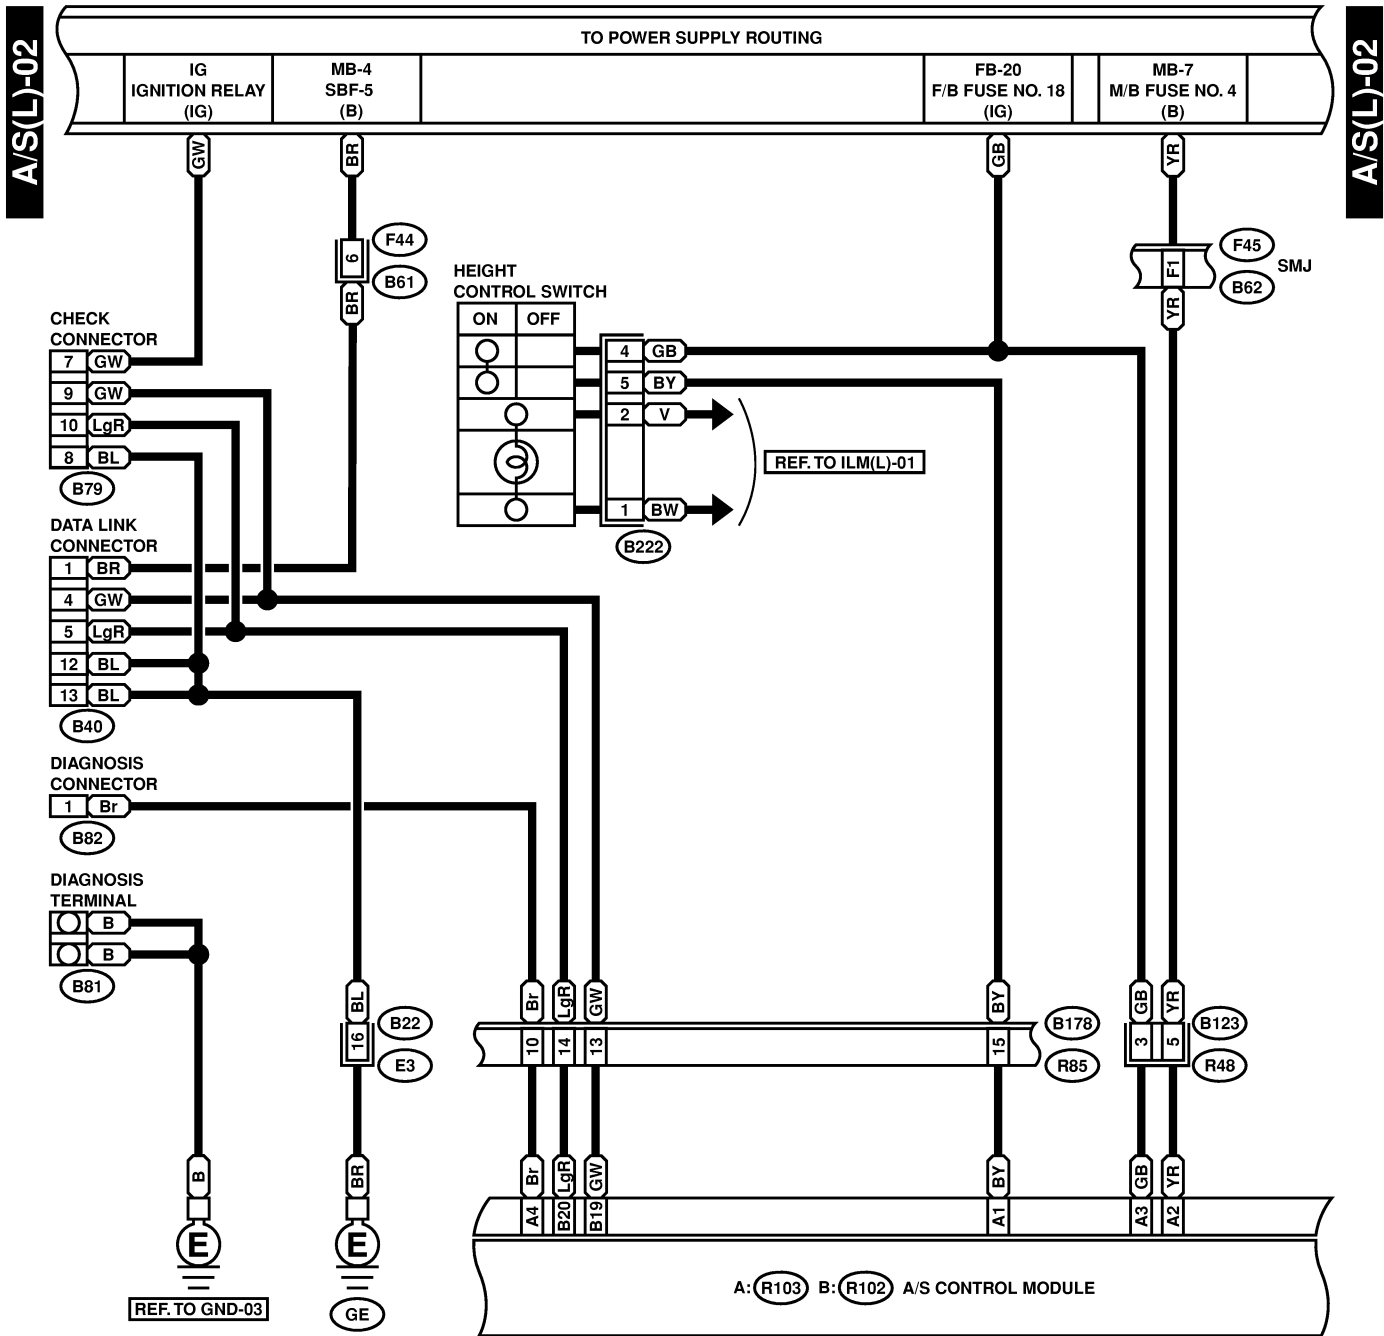

PNEUMATIC (AIR) SUSPENSION SYSTEM

Wiring System

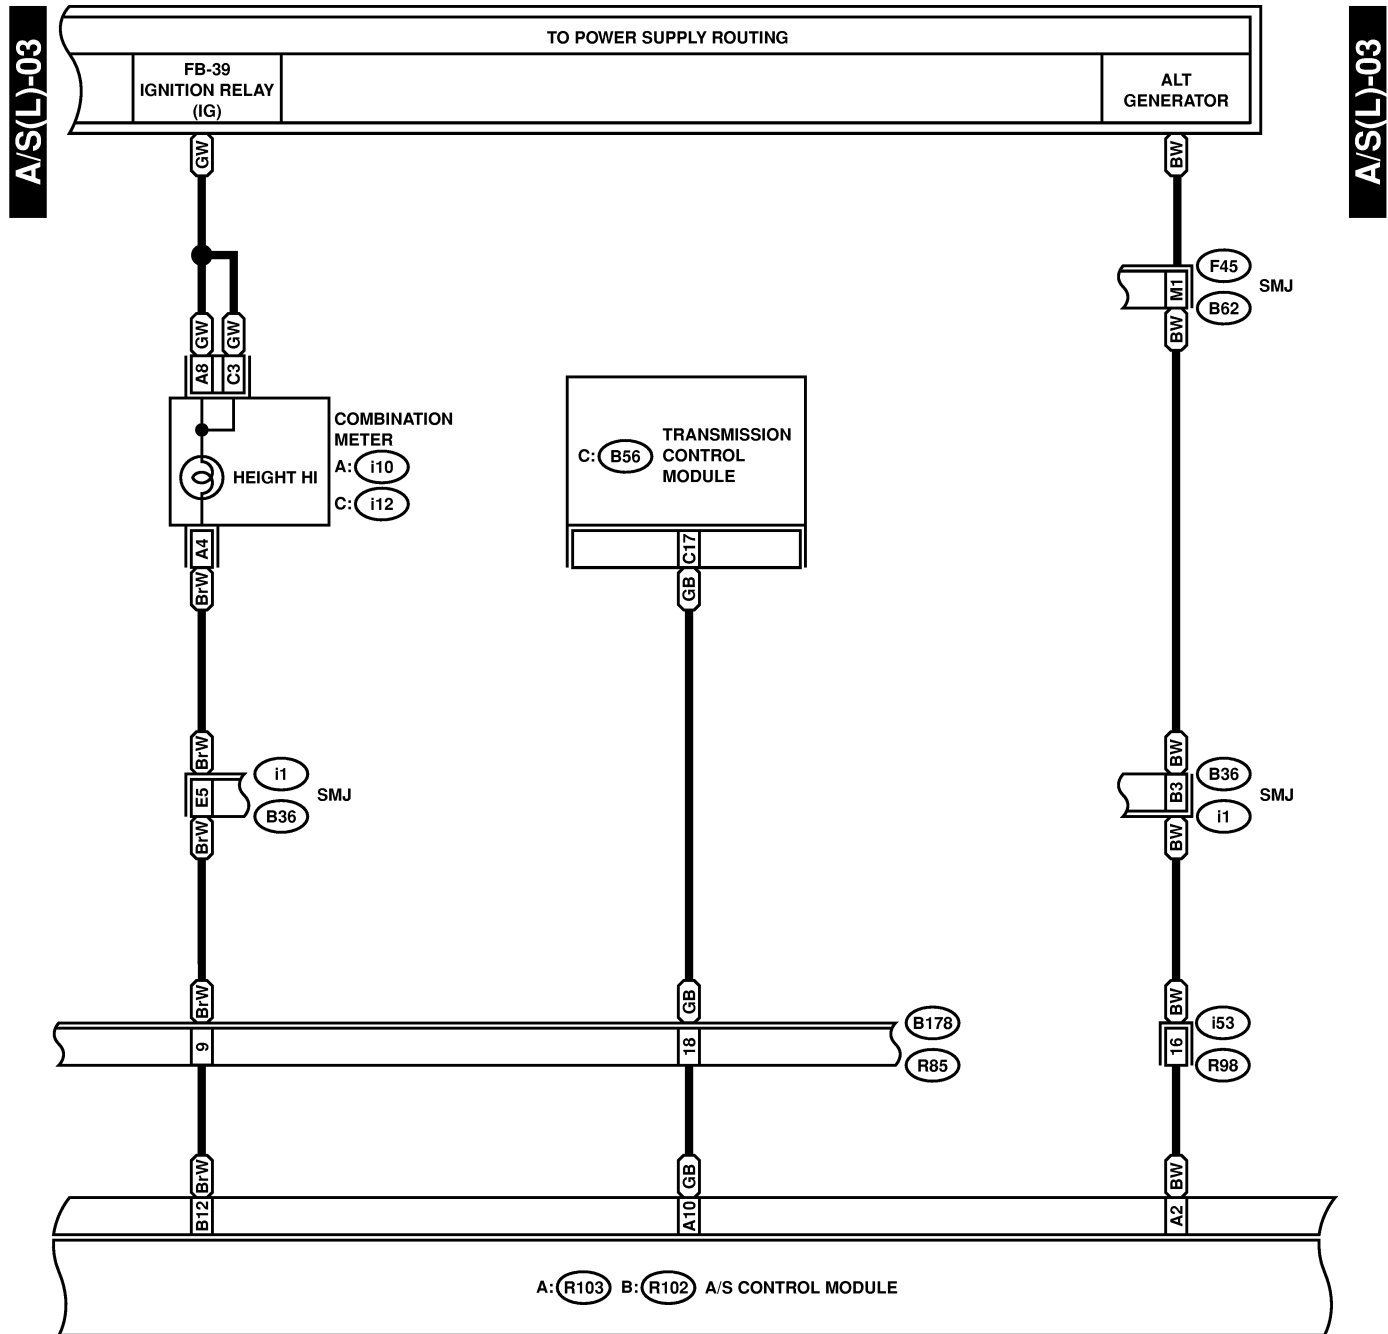

C: i12 (GREEN)

1	2	3	4	5	6
7	8	9	10	11	12
13	14				

A: R103

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16

B: R102

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20

R85

1	2	3	4	5	6	7	8	9
10	11	12	13	14	15	16	17	18
19	20							

R98 (BLUE)

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20

C: B56 (GREEN)


1	2	3	4	5	6	7	8	9
10	11	12	13	14	15	16	17	18
19	20	21				22	23	24

A: i10 (GREEN)

1	2	3	4	5	6	7	8	9	10	11	12	13	14
15	16	17	18	19	20	21	22	23	24	25	26	27	28
29	30												

PNEUMATIC (AIR) SUSPENSION SYSTEM


Wiring System

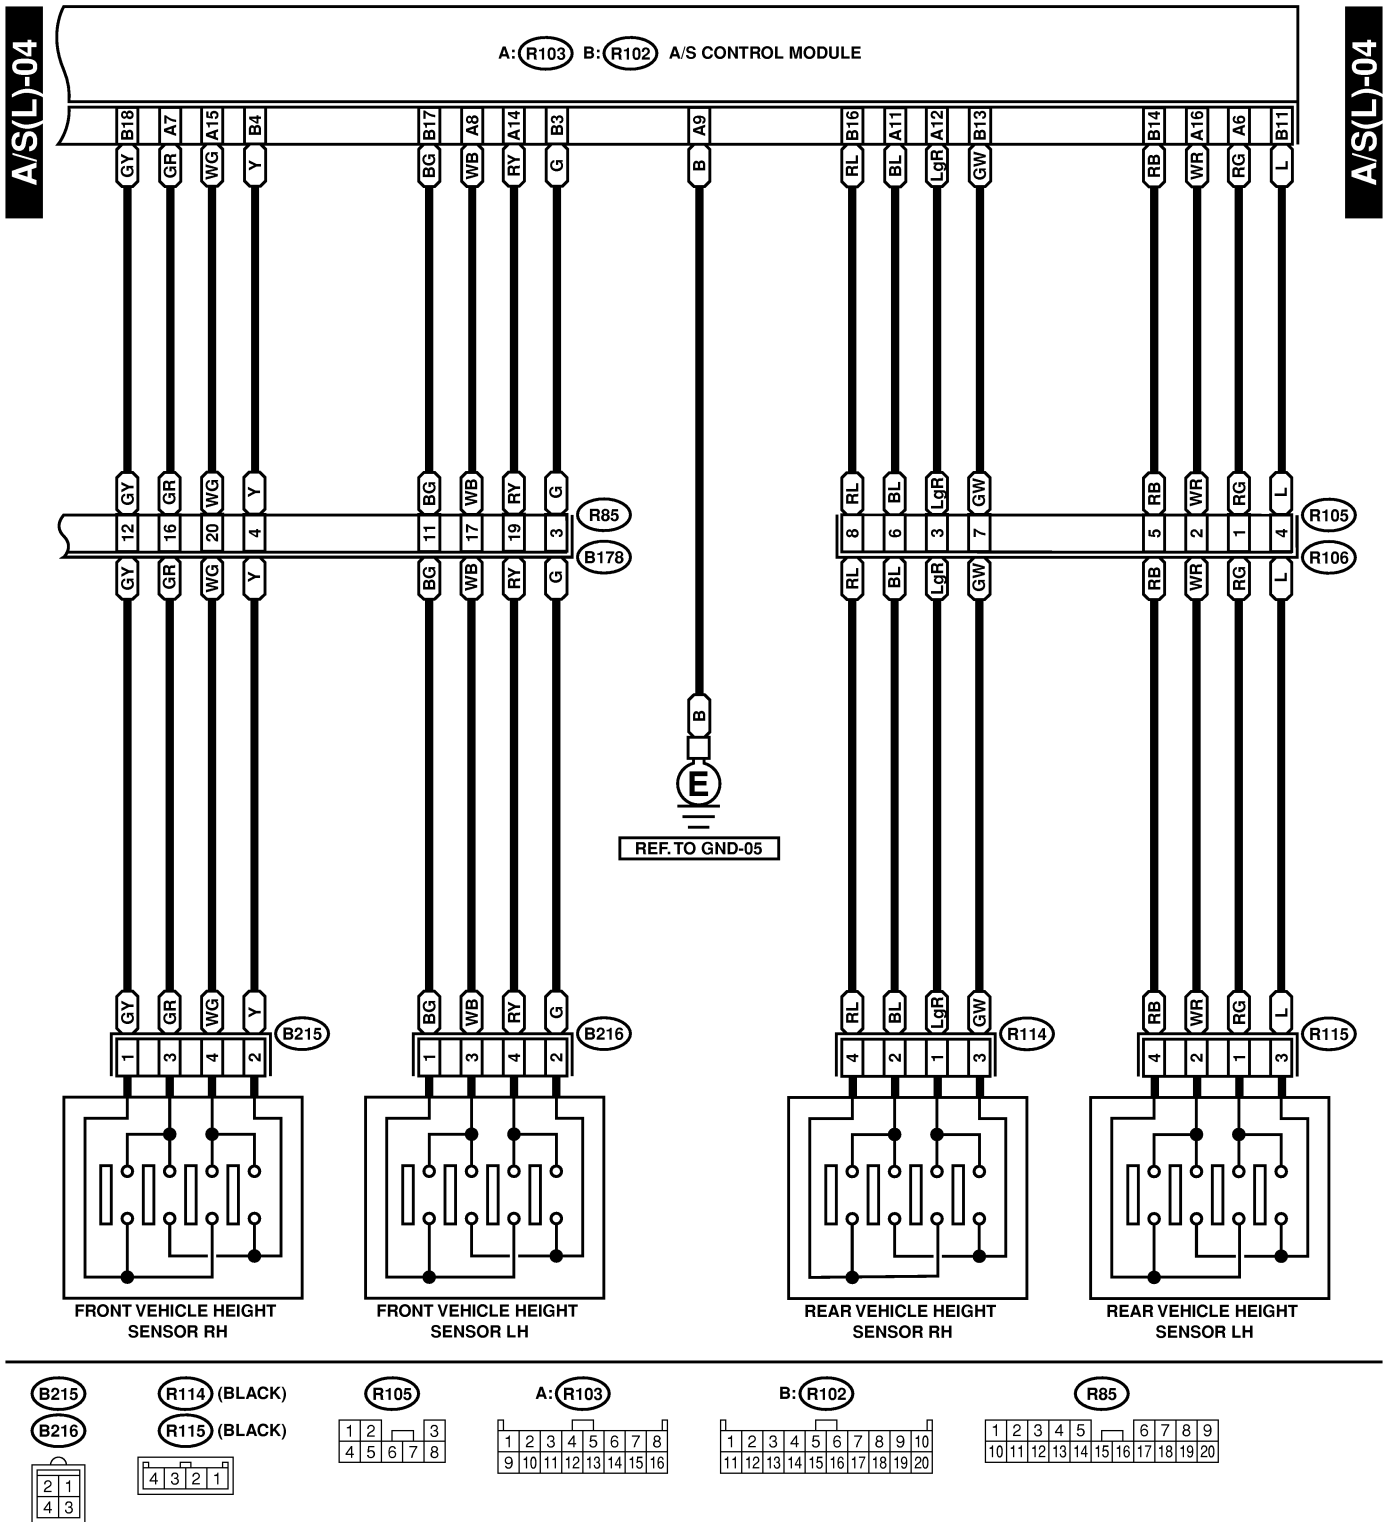

PNEUMATIC (AIR) SUSPENSION SYSTEM


Wiring System

2. RHD MODEL S903479A2102

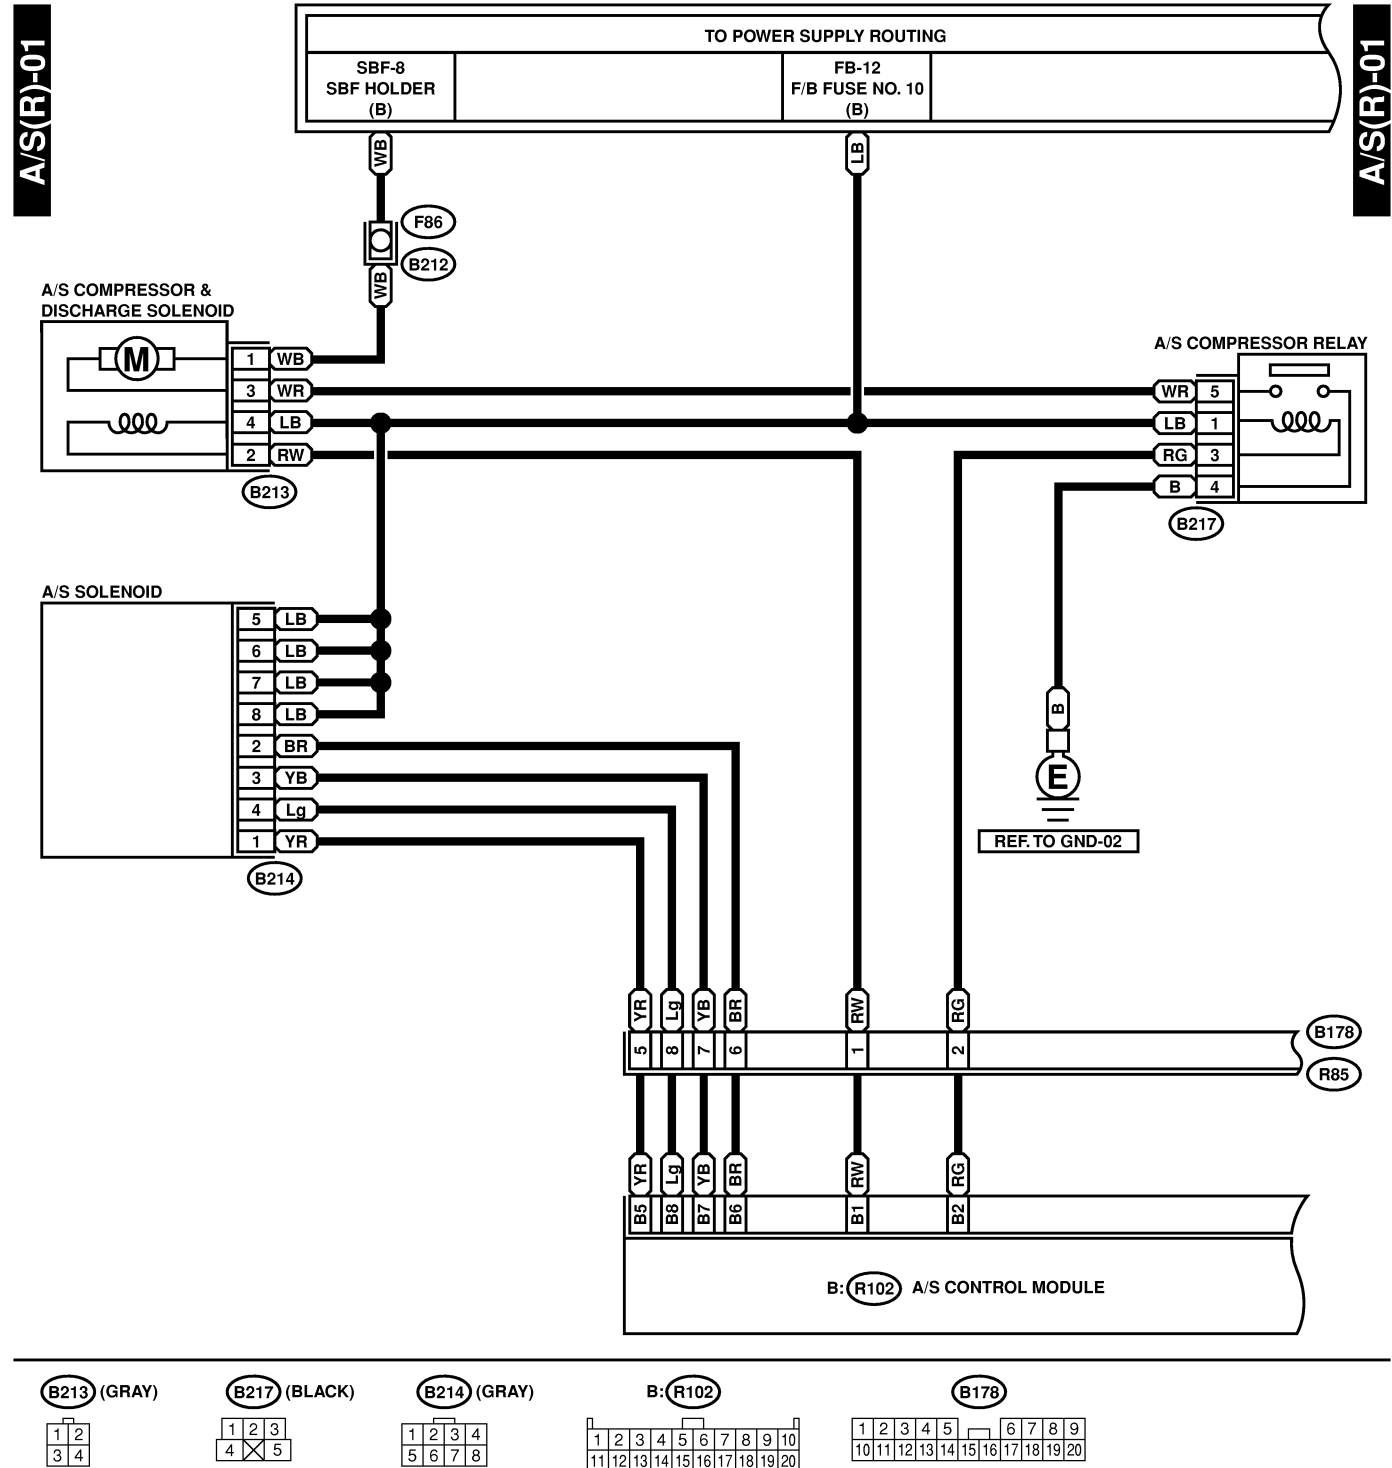

PNEUMATIC (AIR) SUSPENSION SYSTEM


Wiring System

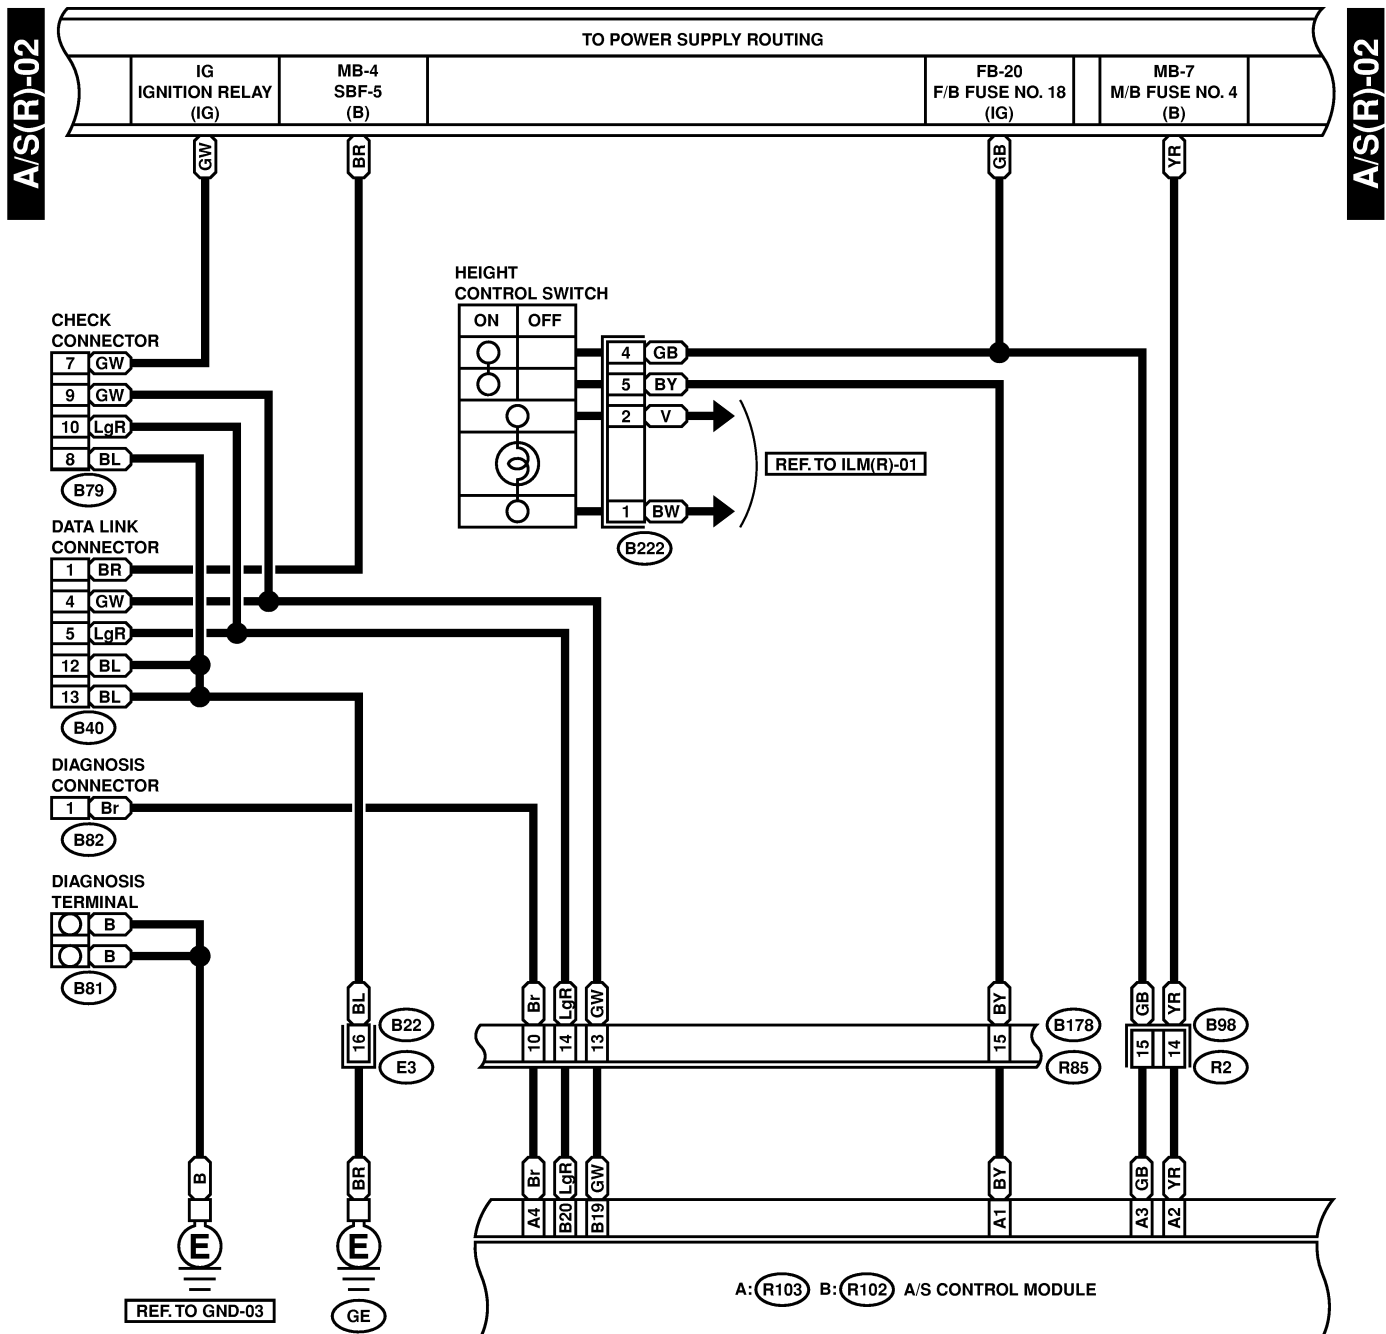


B222 (BLACK)



 
B82




B79 (GRAY)

 


B40 (GRAY)

 


B22 (BROWN)

 


A: R103

 


B: R102

 

B178

 


R2 (BLUE)

 


PNEUMATIC (AIR) SUSPENSION SYSTEM


Wiring System

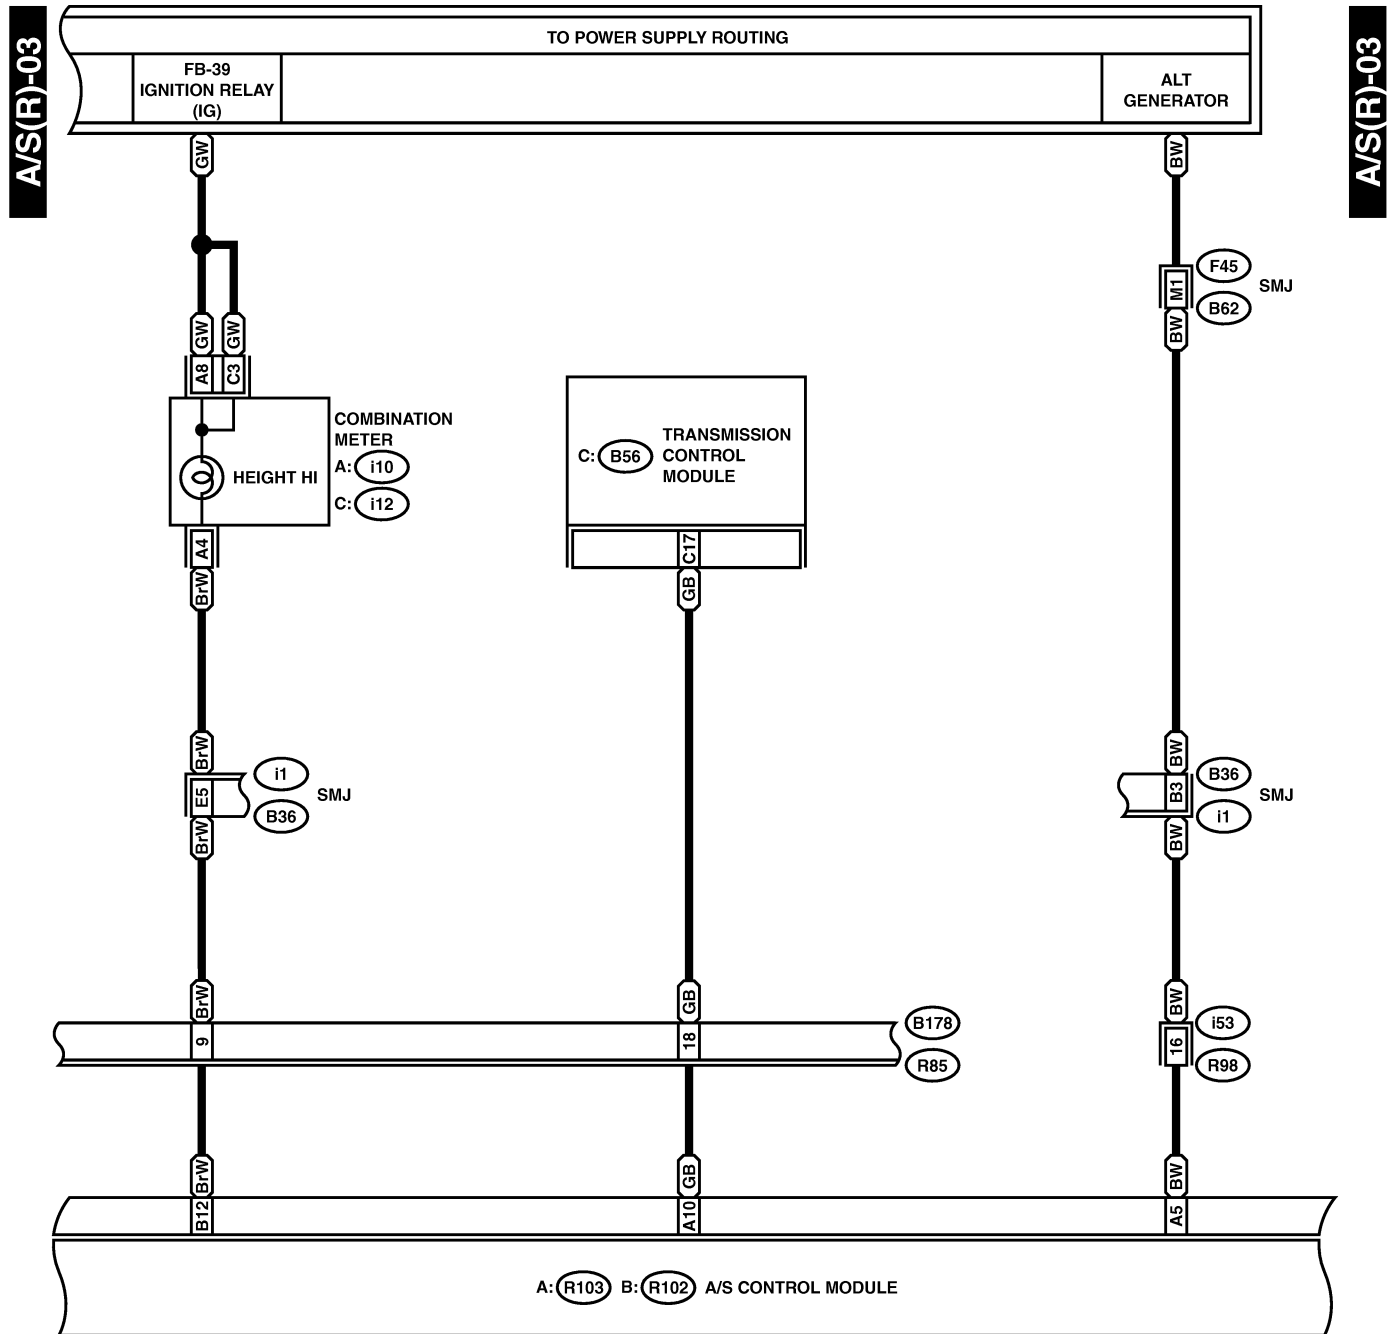

A/S(R)-03

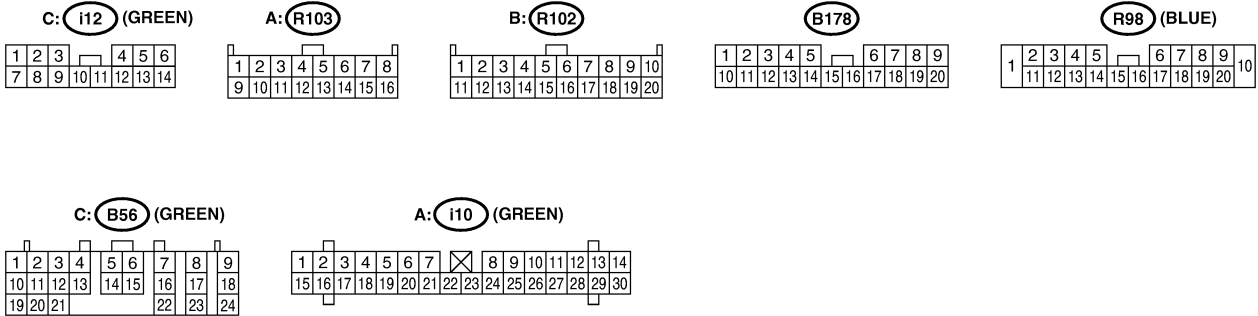

Wiring System

 


POWER SEAT SYSTEM

Wiring System

35. Power Seat System S903669

A: SCHEMATIC S903669A21

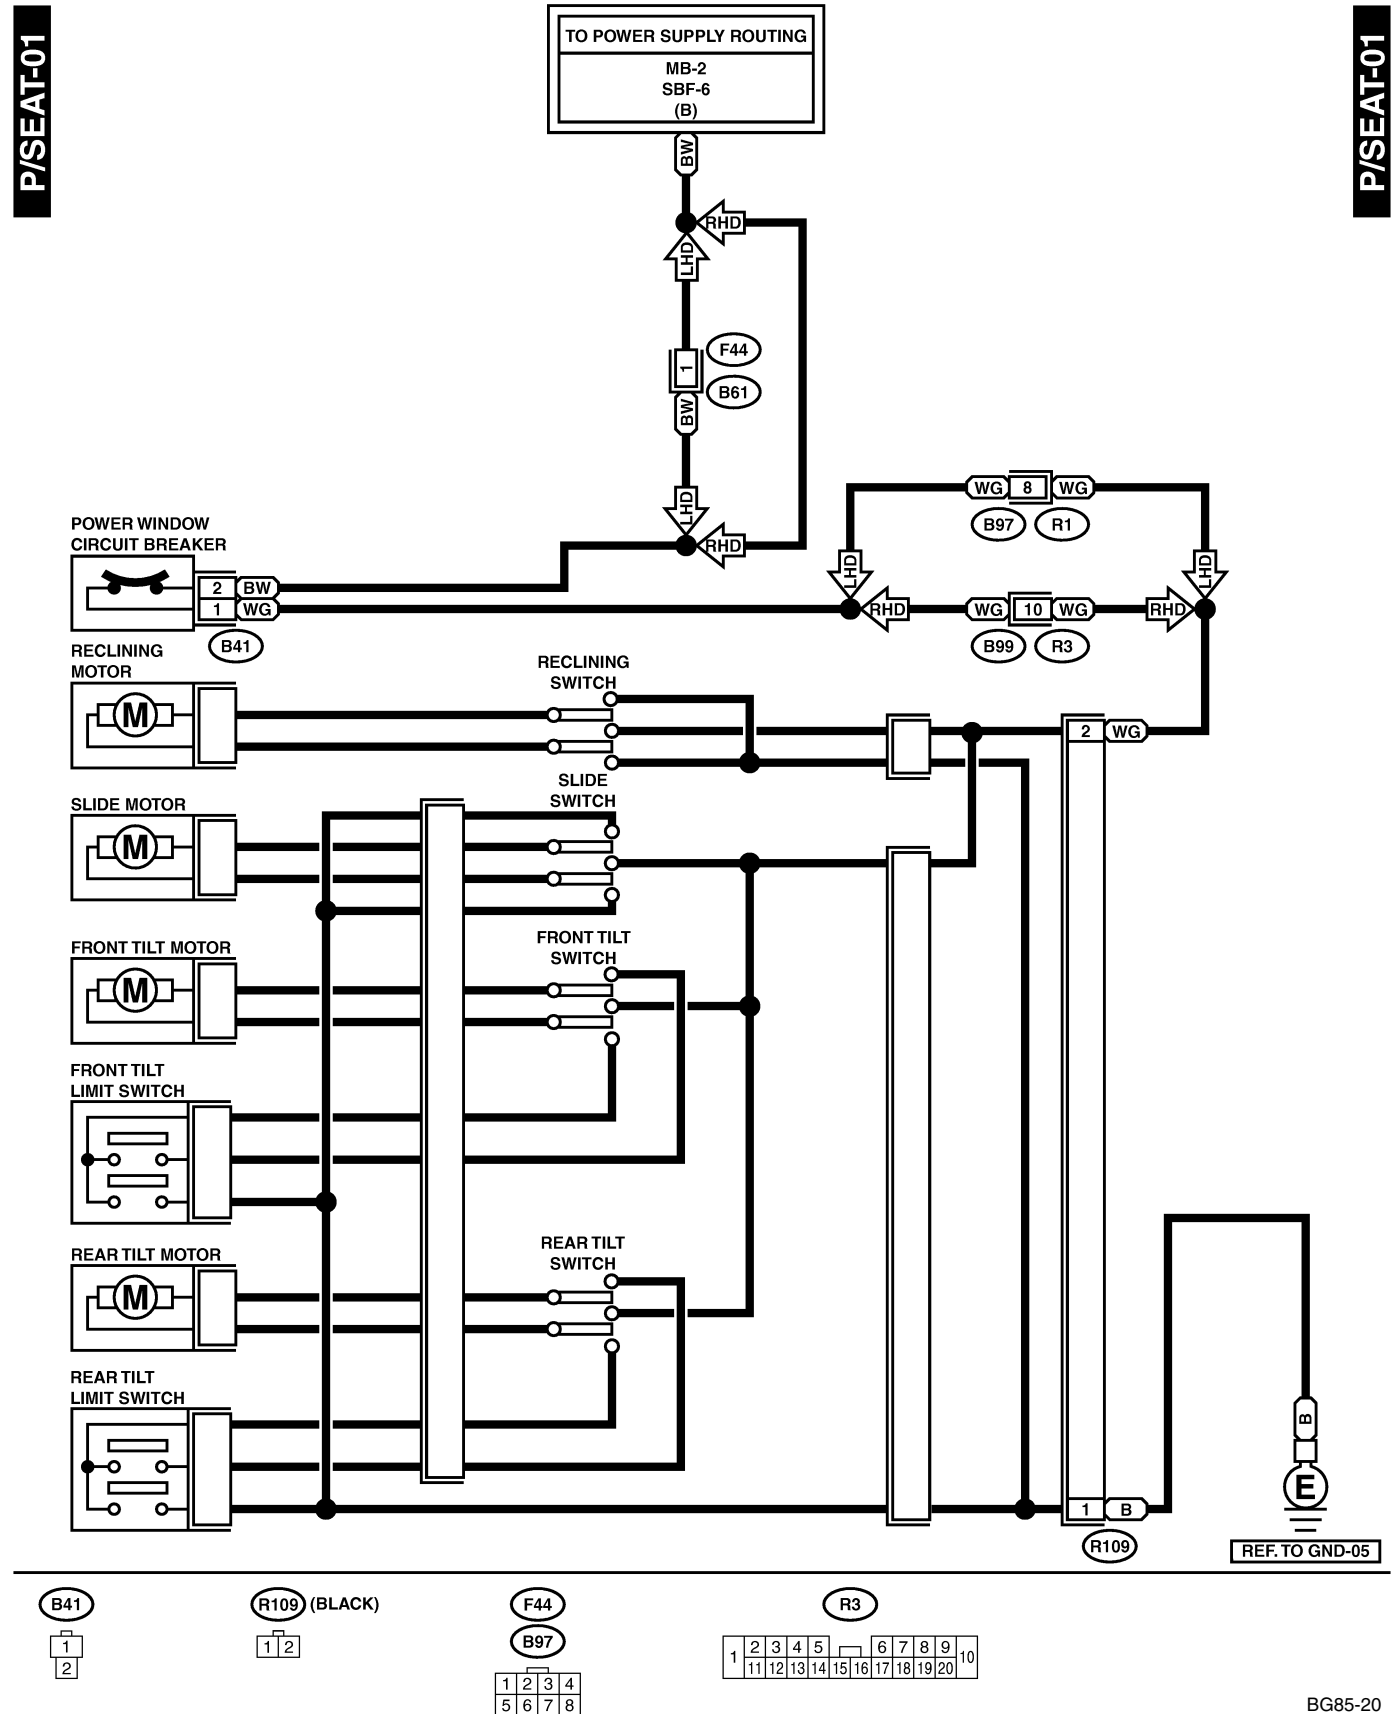

WI-234

BG85-20


36. Power Window System S903456

A: SCHEMATIC S903456A21

POWER WINDOW SYSTEM

Wiring System

1. LHD MODEL S903456A2101

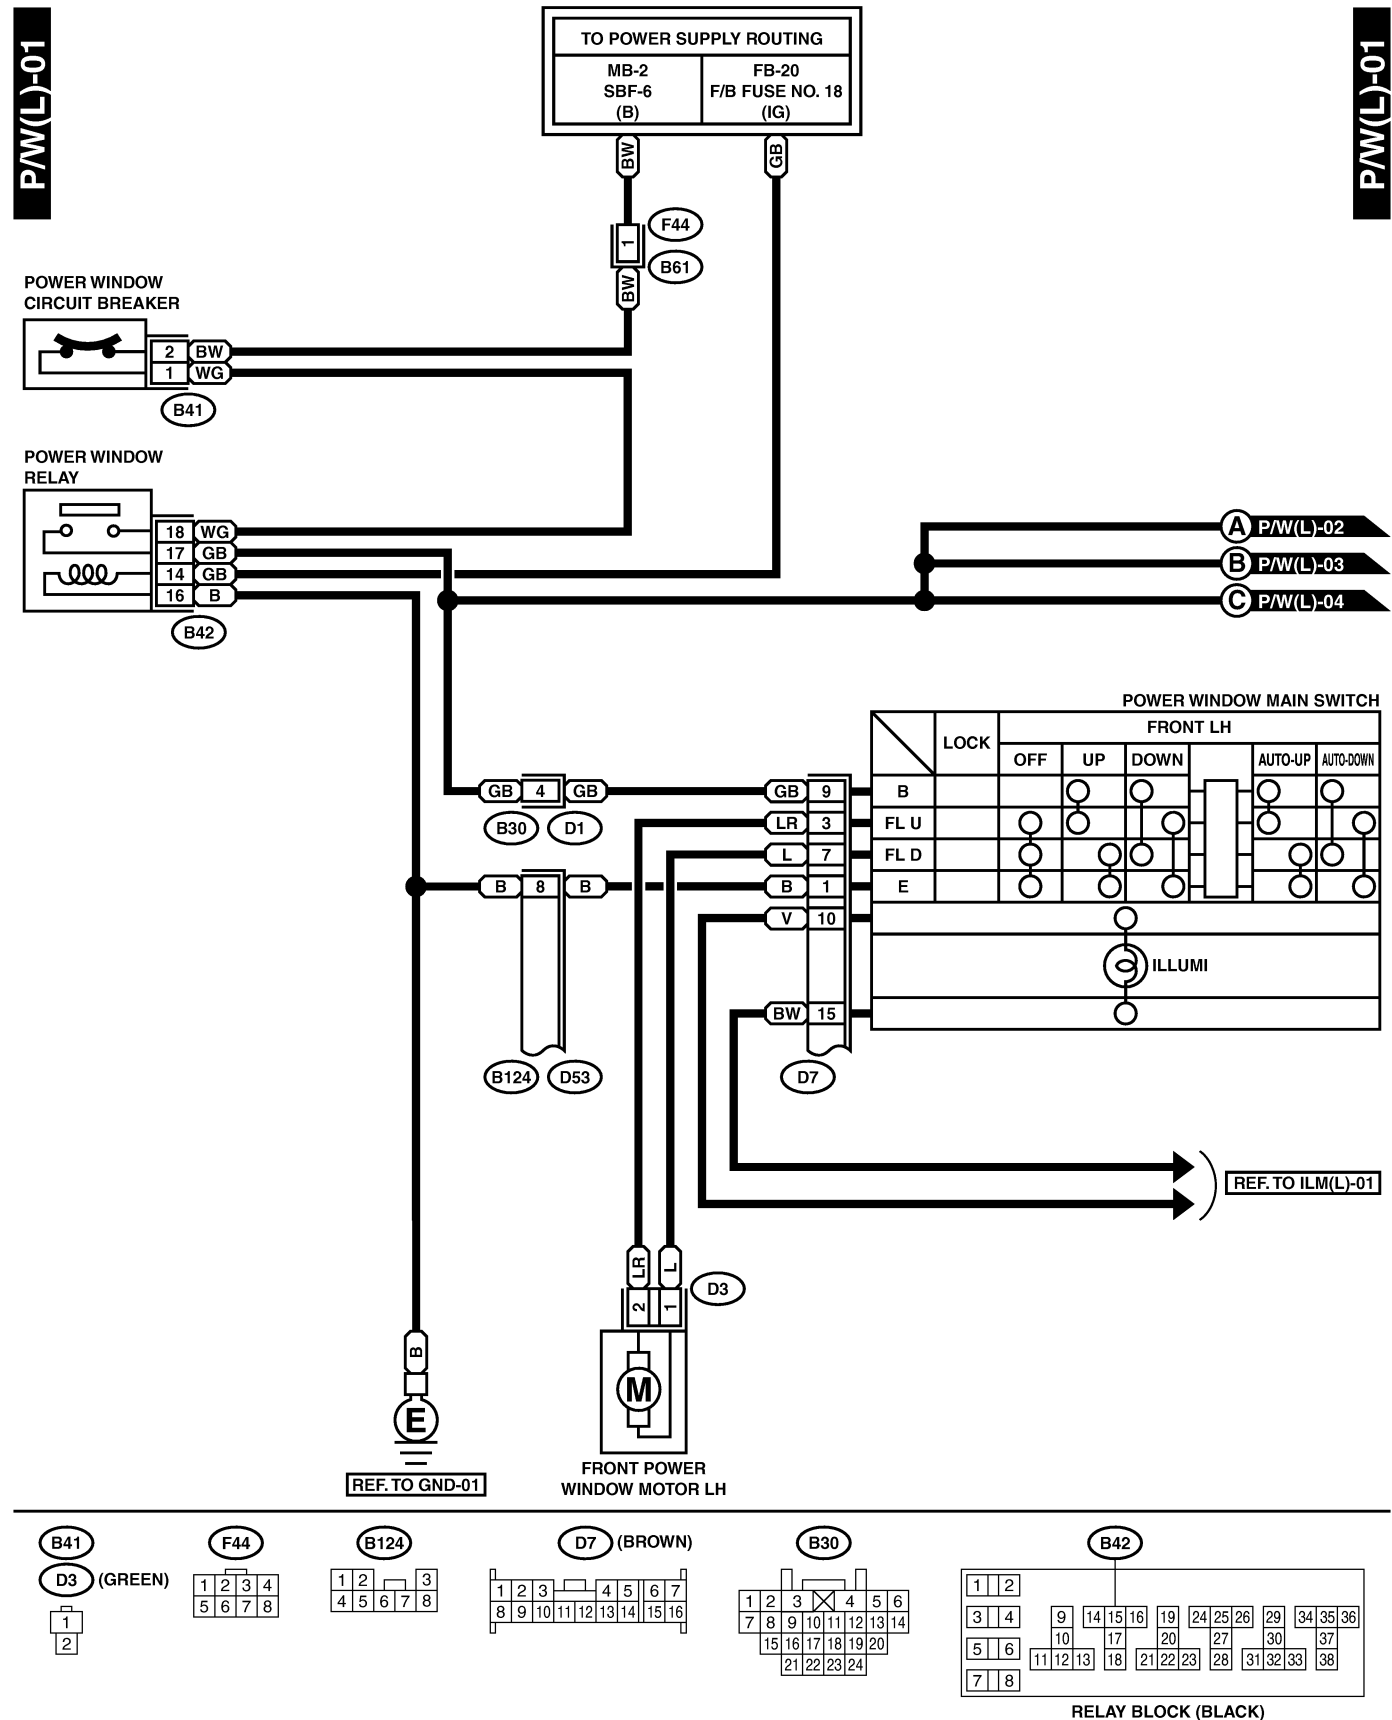

BL70-21A


WI-236

POWER WINDOW SYSTEM

Wiring System

P/W(L)-02

P/W(L)-02

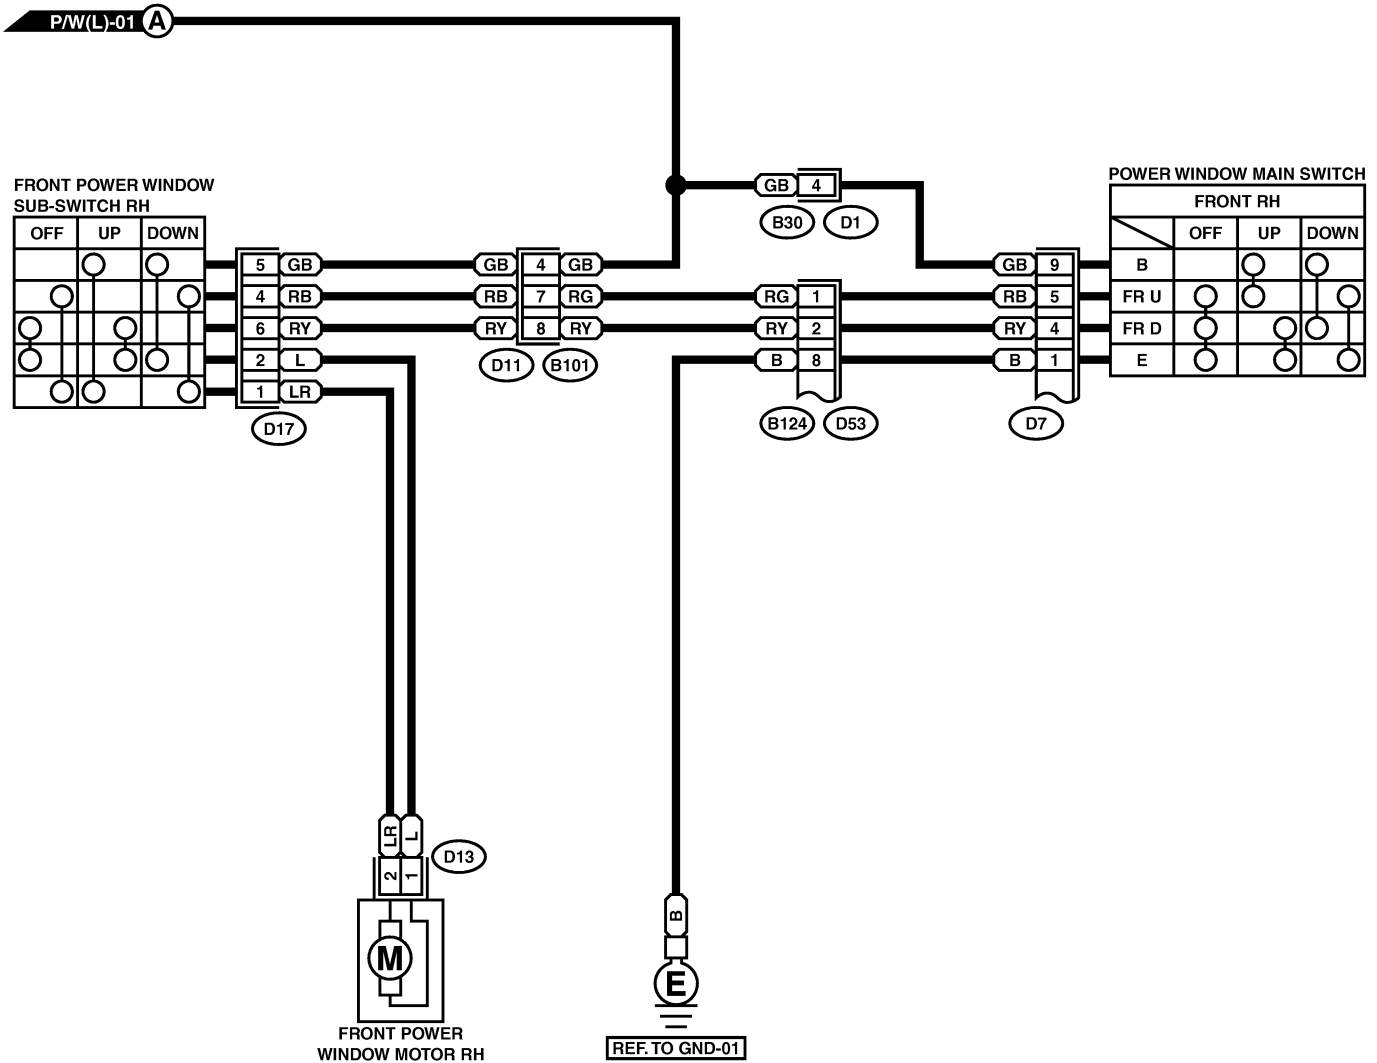


D13 (GREEN)




D17



 B124




D7 (BROWN)

 

B30

 
B101



Wiring System


P/W(L)-03

P/W(L)-03

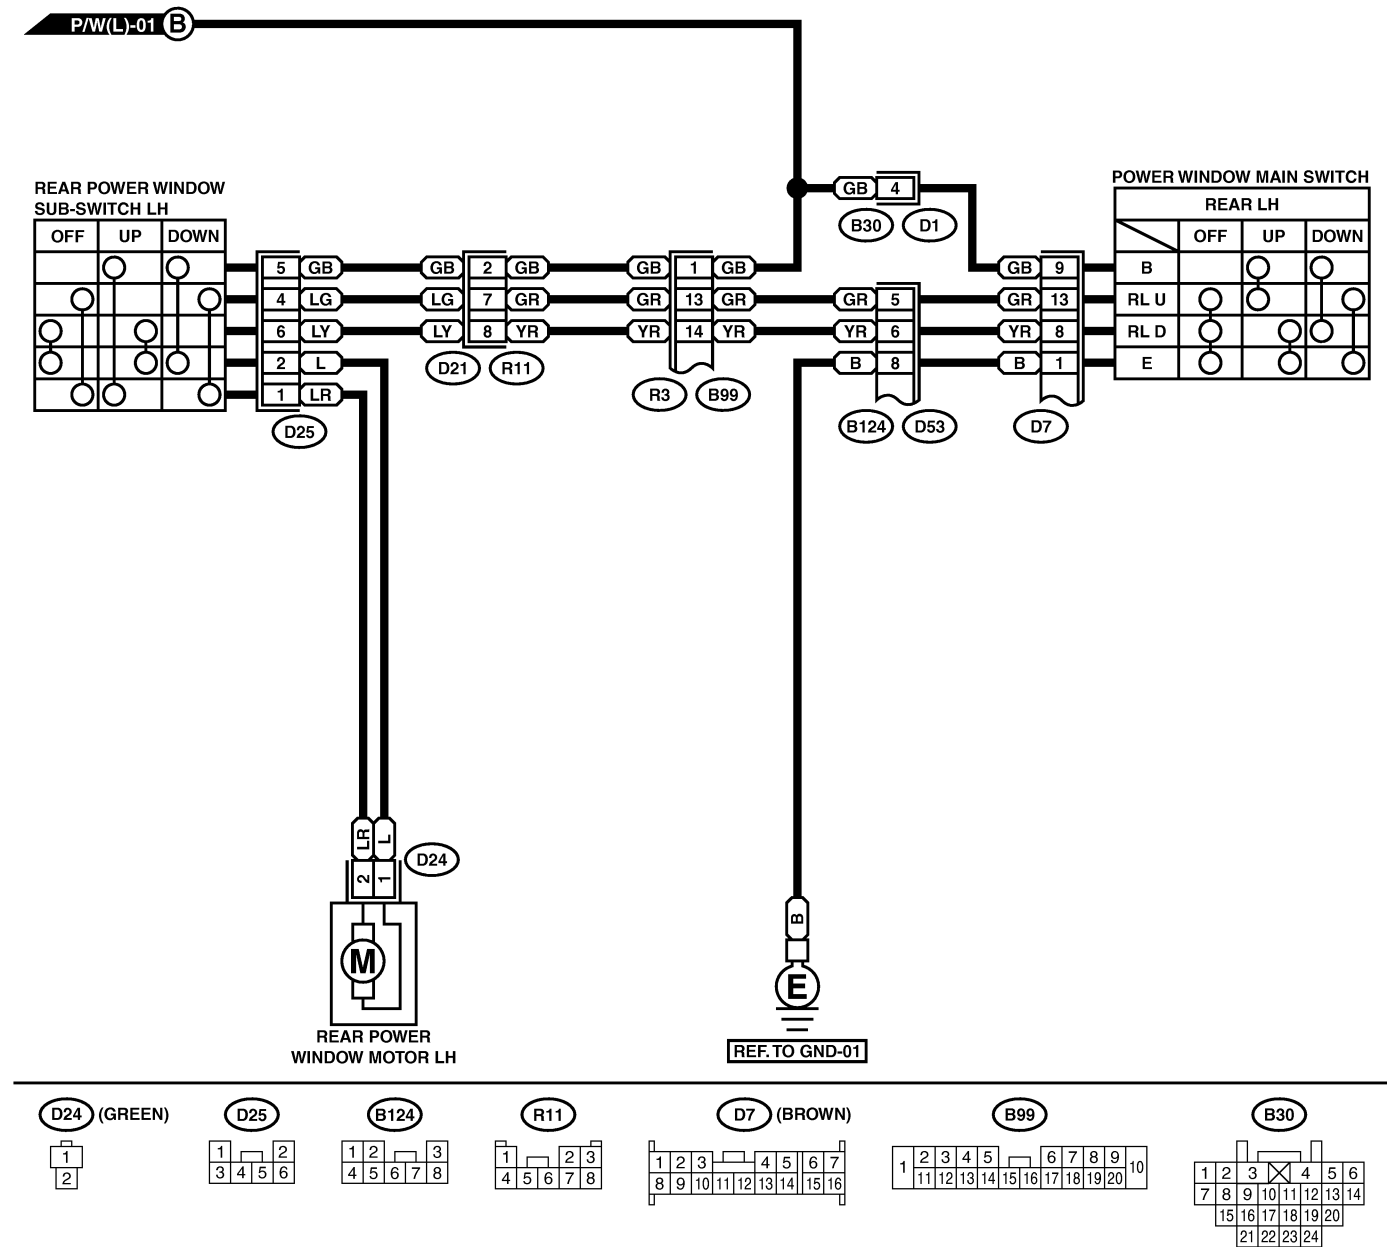

P/W(L)-04


P/W(L)-04

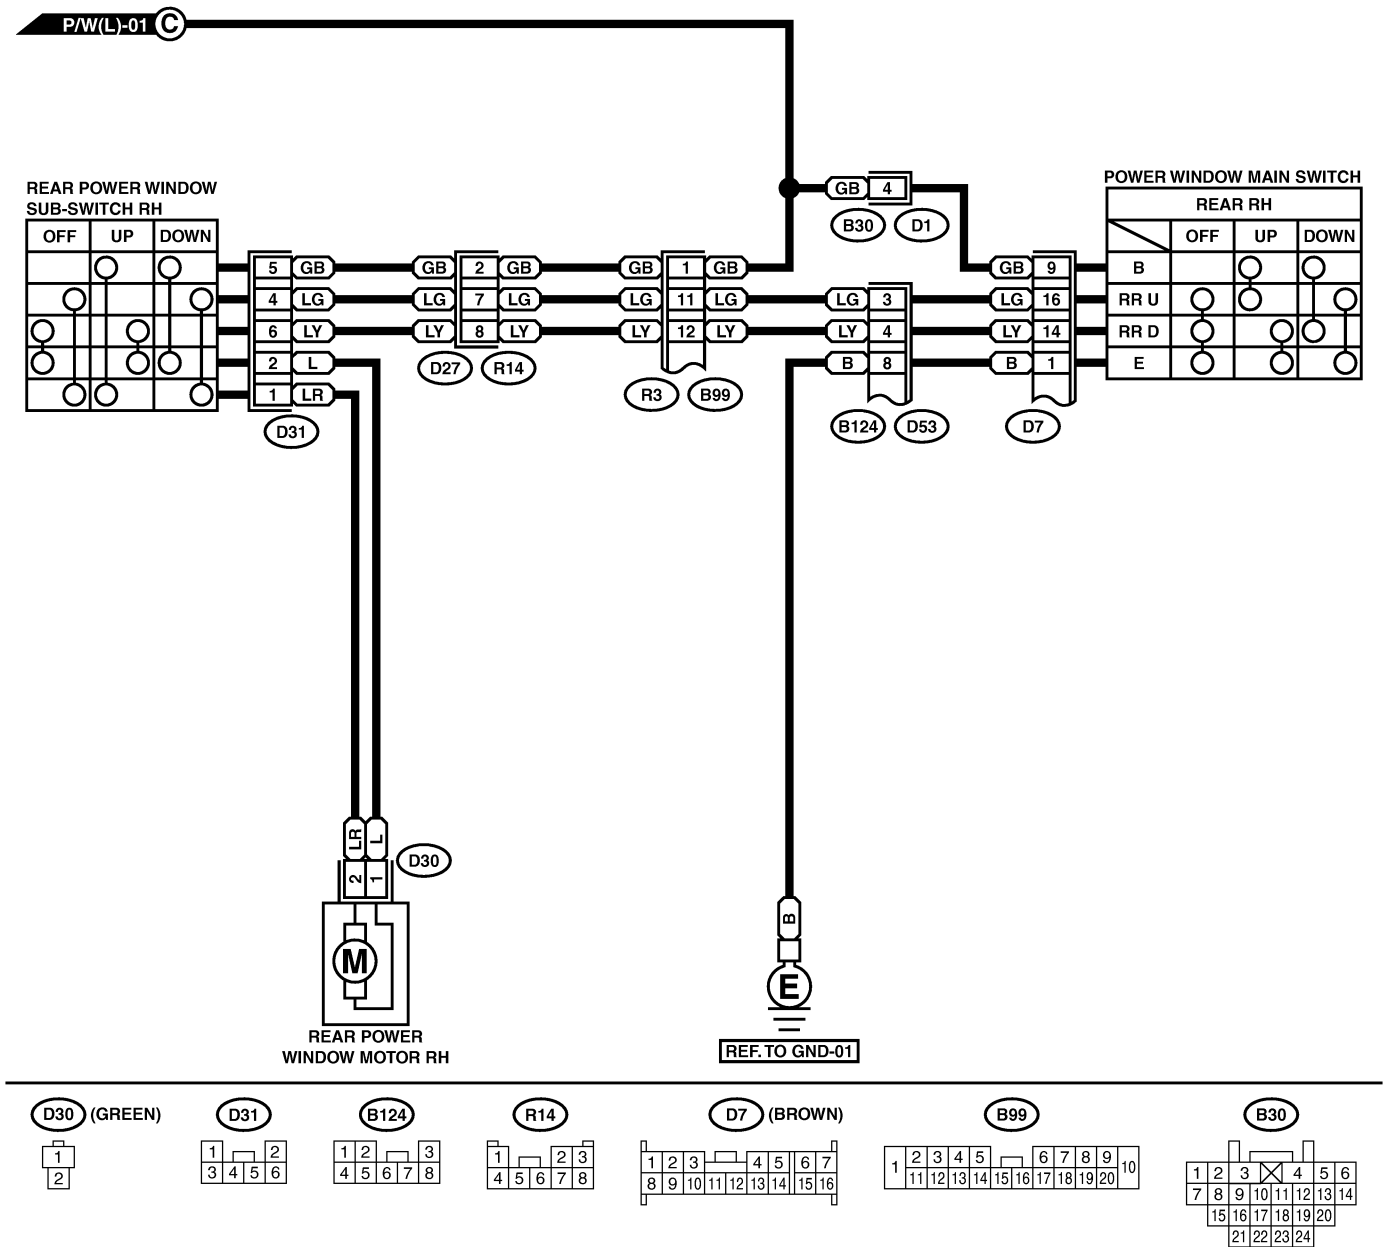

POWER WINDOW SYSTEM

Wiring System

2. RHD MODEL S903456A2102

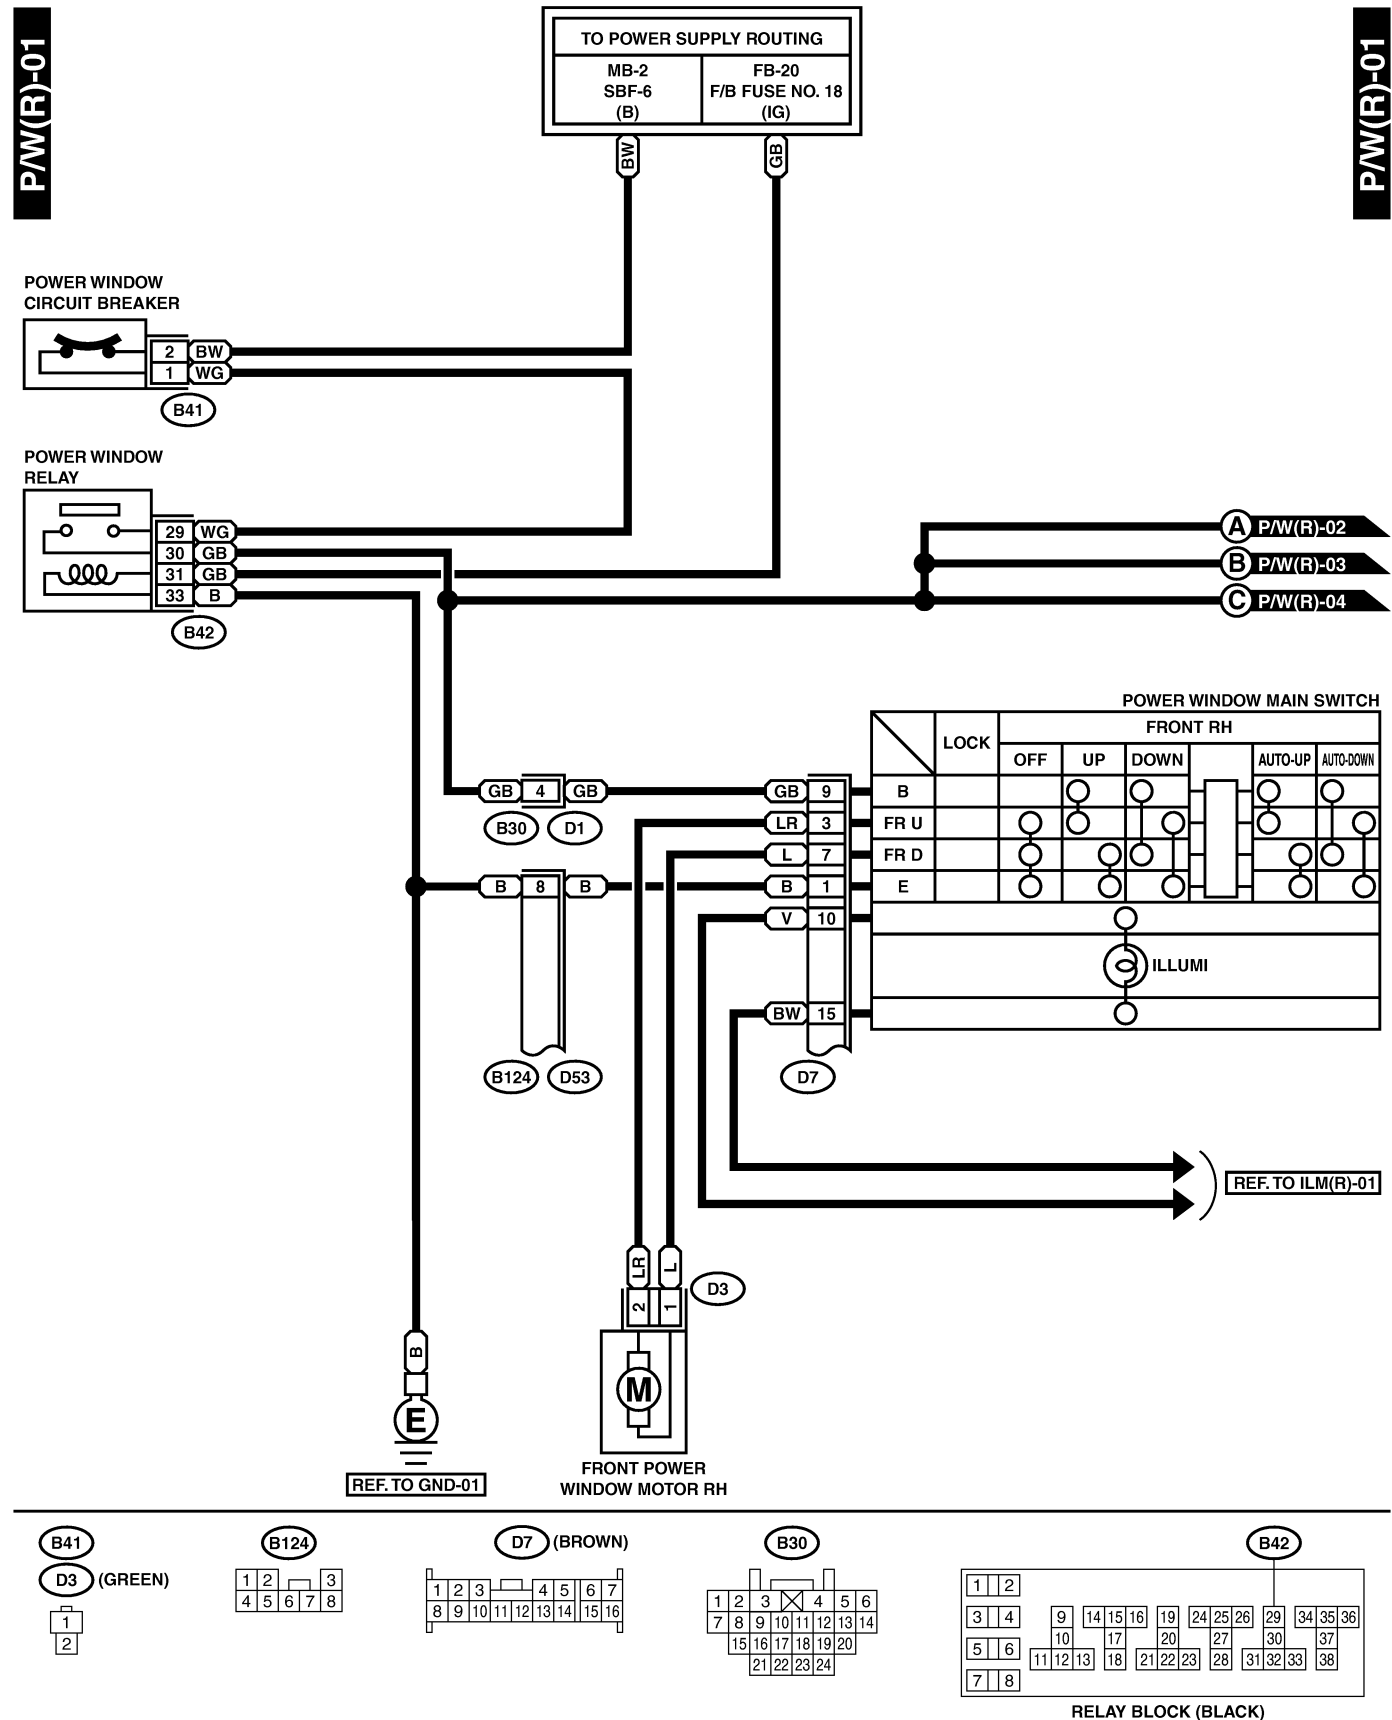


BR70-21A

WI-240

P/W(R)-02

P/W(R)-02

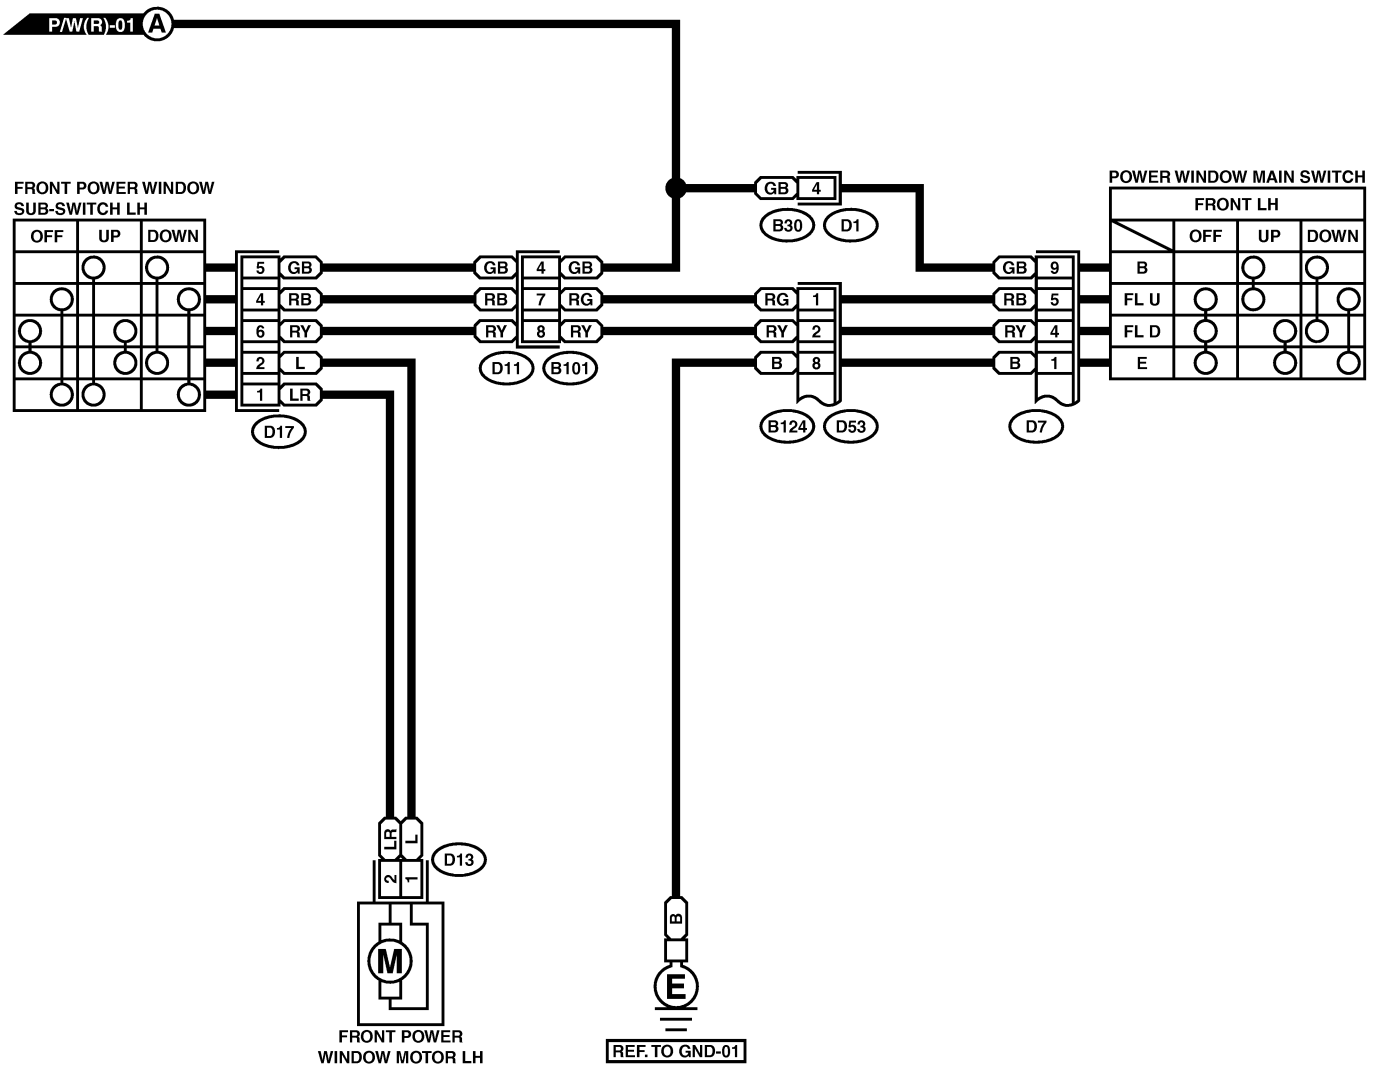


D13 (GREEN)




D17



 B124




D7 (BROWN)

 

B30

 B101




POWER WINDOW SYSTEM

Wiring System

P/W(R)-03


P/W(R)-03

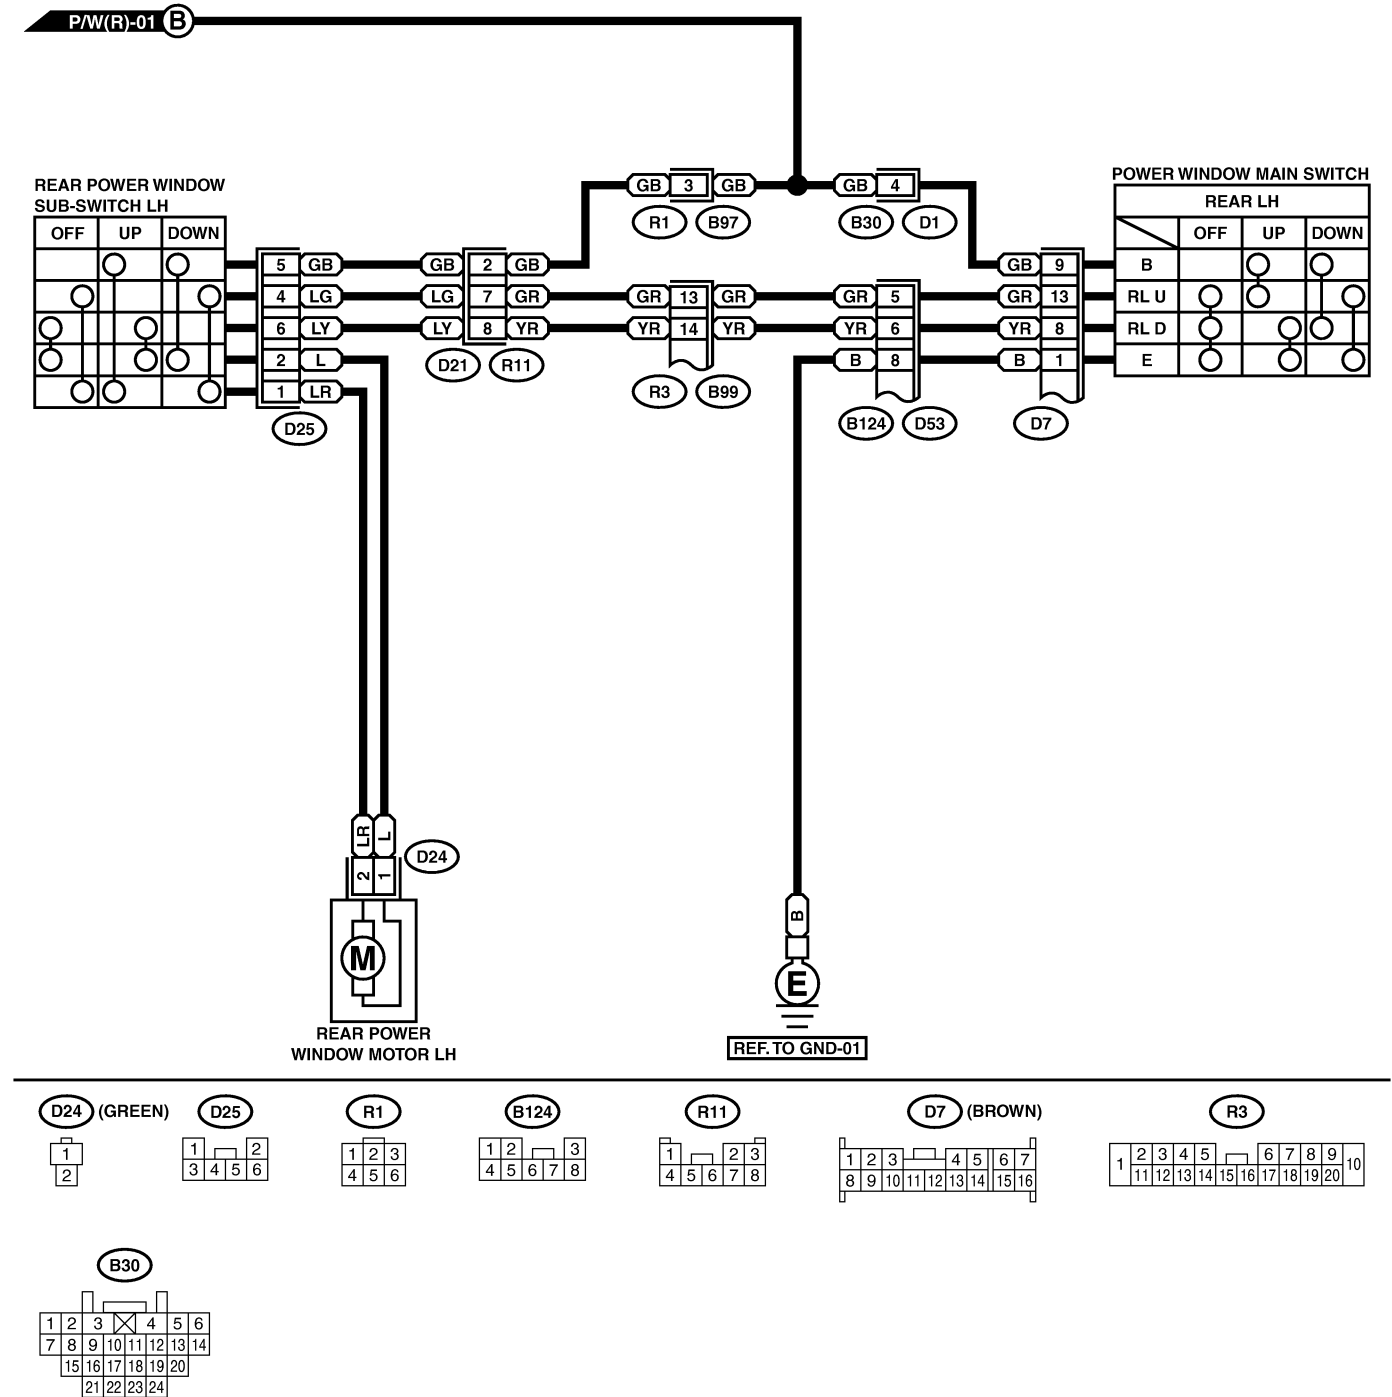

BR70-21C

P/W(R)-04

P/W(R)-04

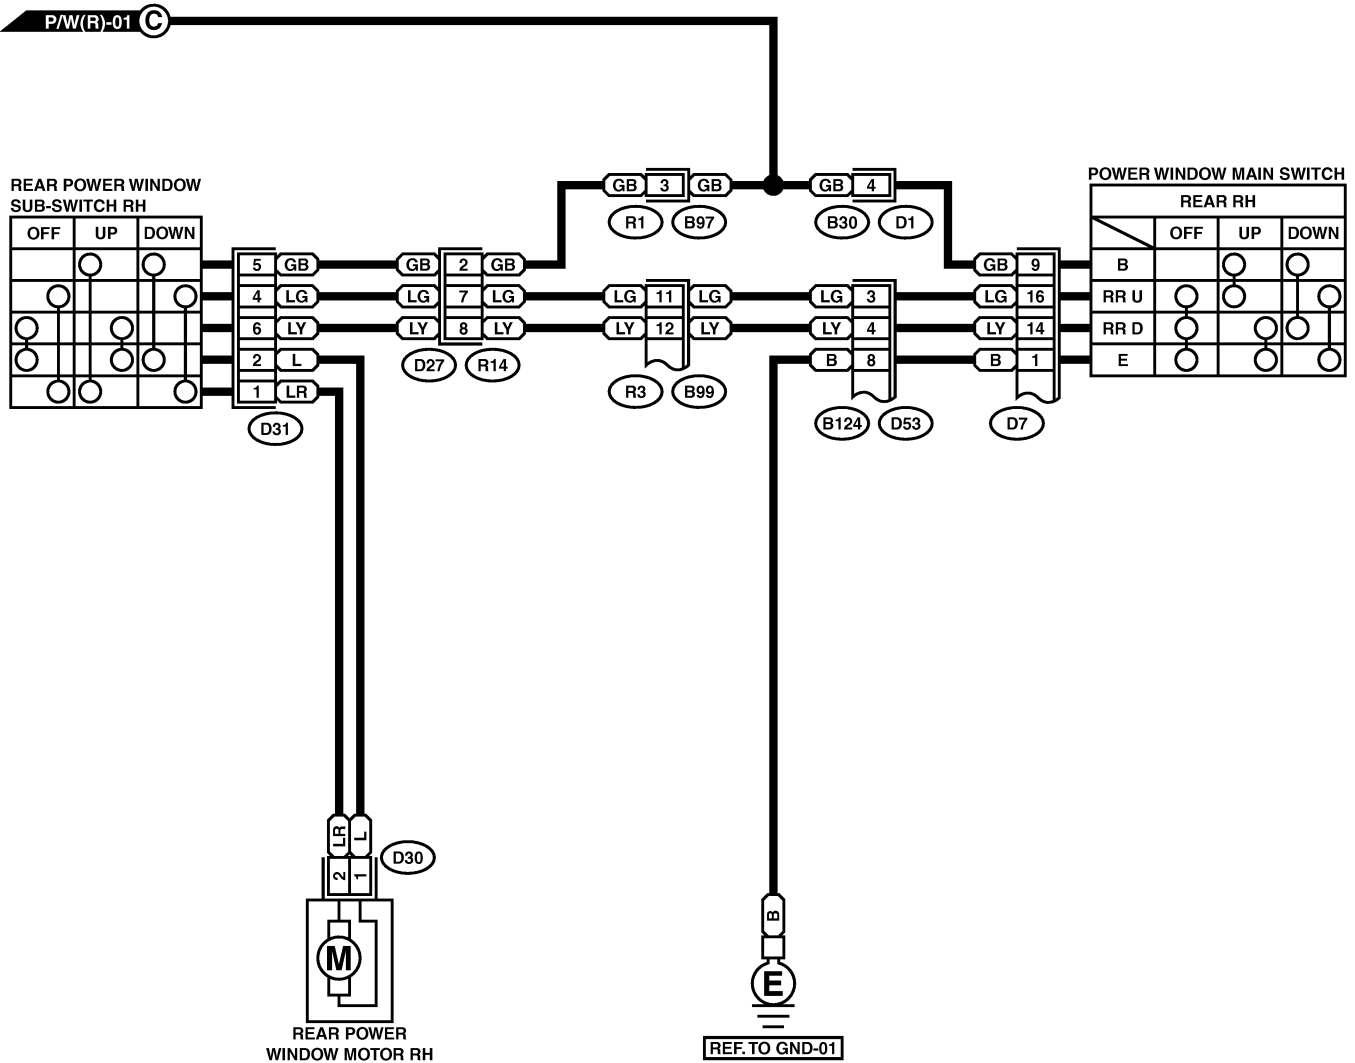

D30 (GREEN)



 
D31




R1




B124




R14

 

D7 (BROWN)

 

R3

 

B30




RADIATOR FAN SYSTEM

Wiring System

37. Radiator Fan System S903480

A: SCHEMATIC S903480A21


1. H4 MODEL S903480A2103

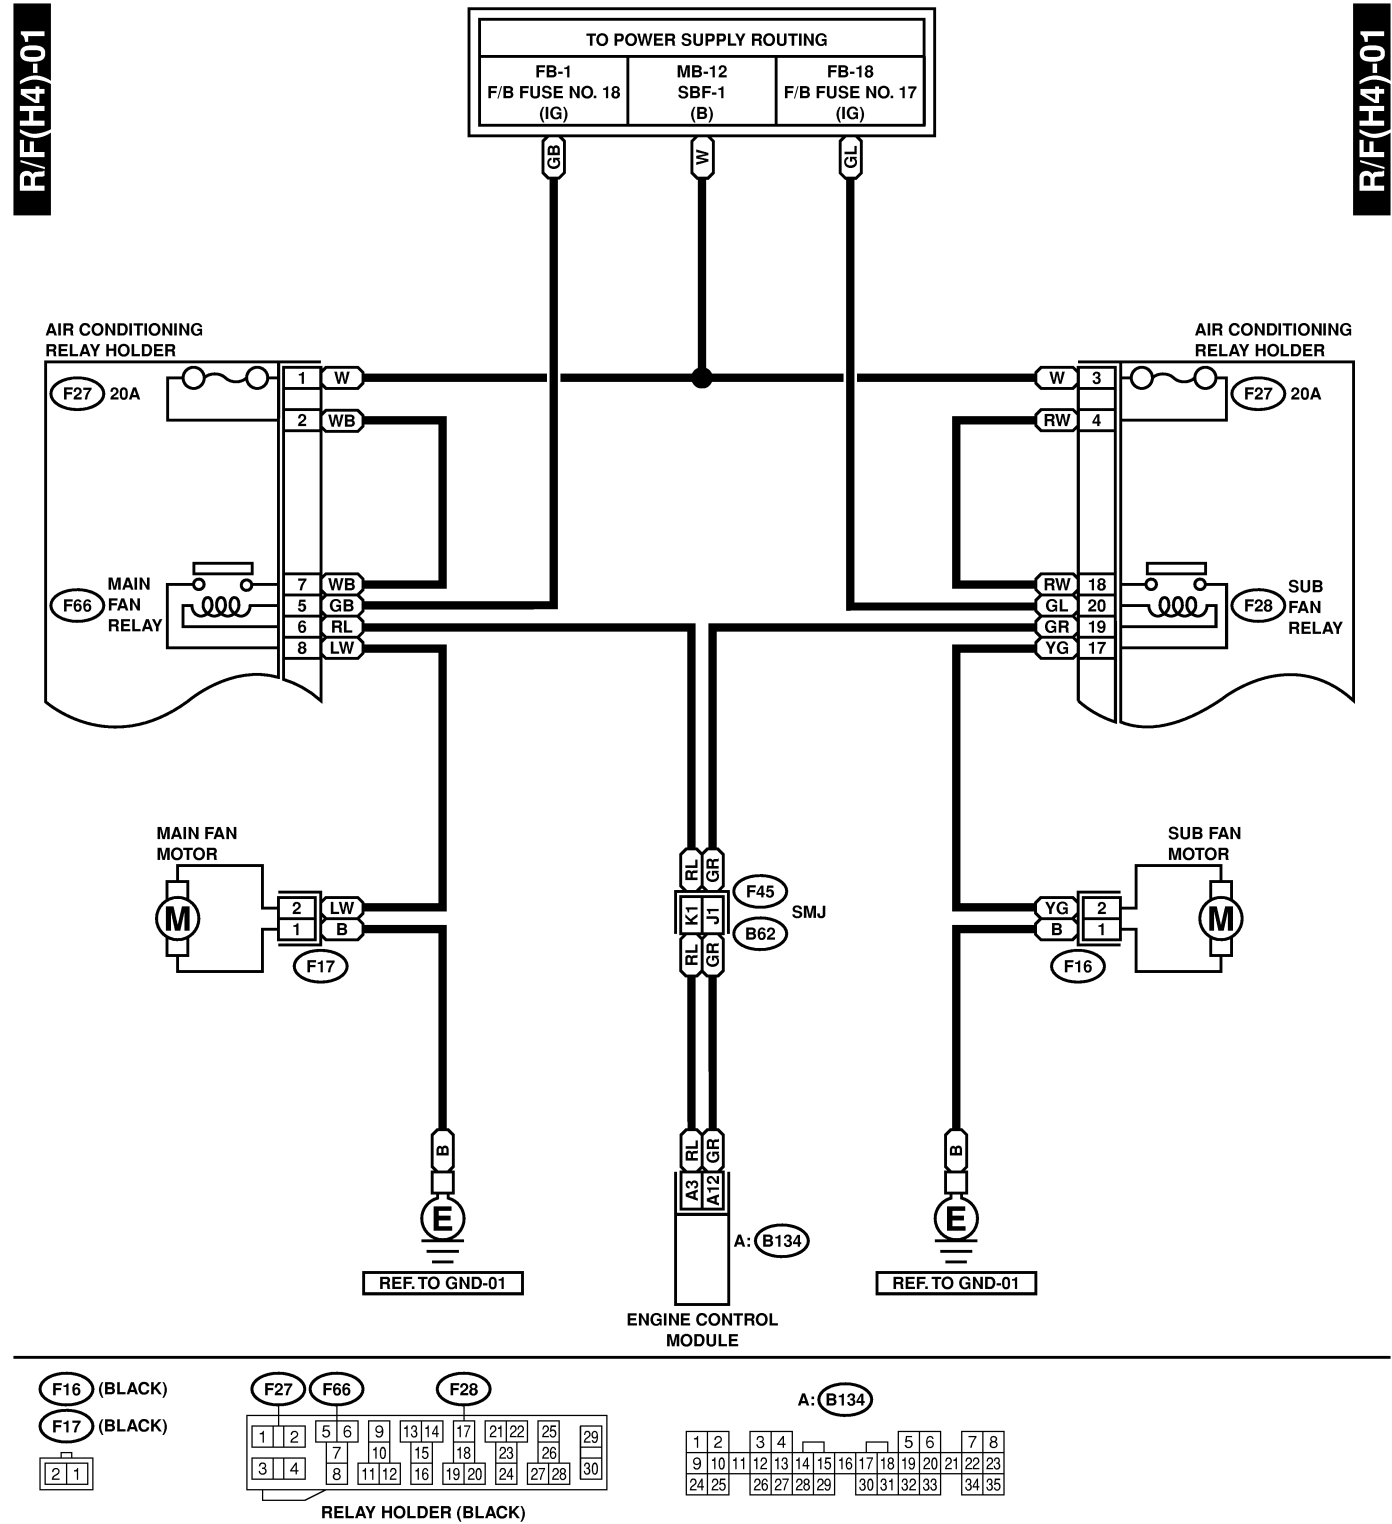

RADIATOR FAN SYSTEM

Wiring System


2. LHD-H6 MODEL S903480A2104

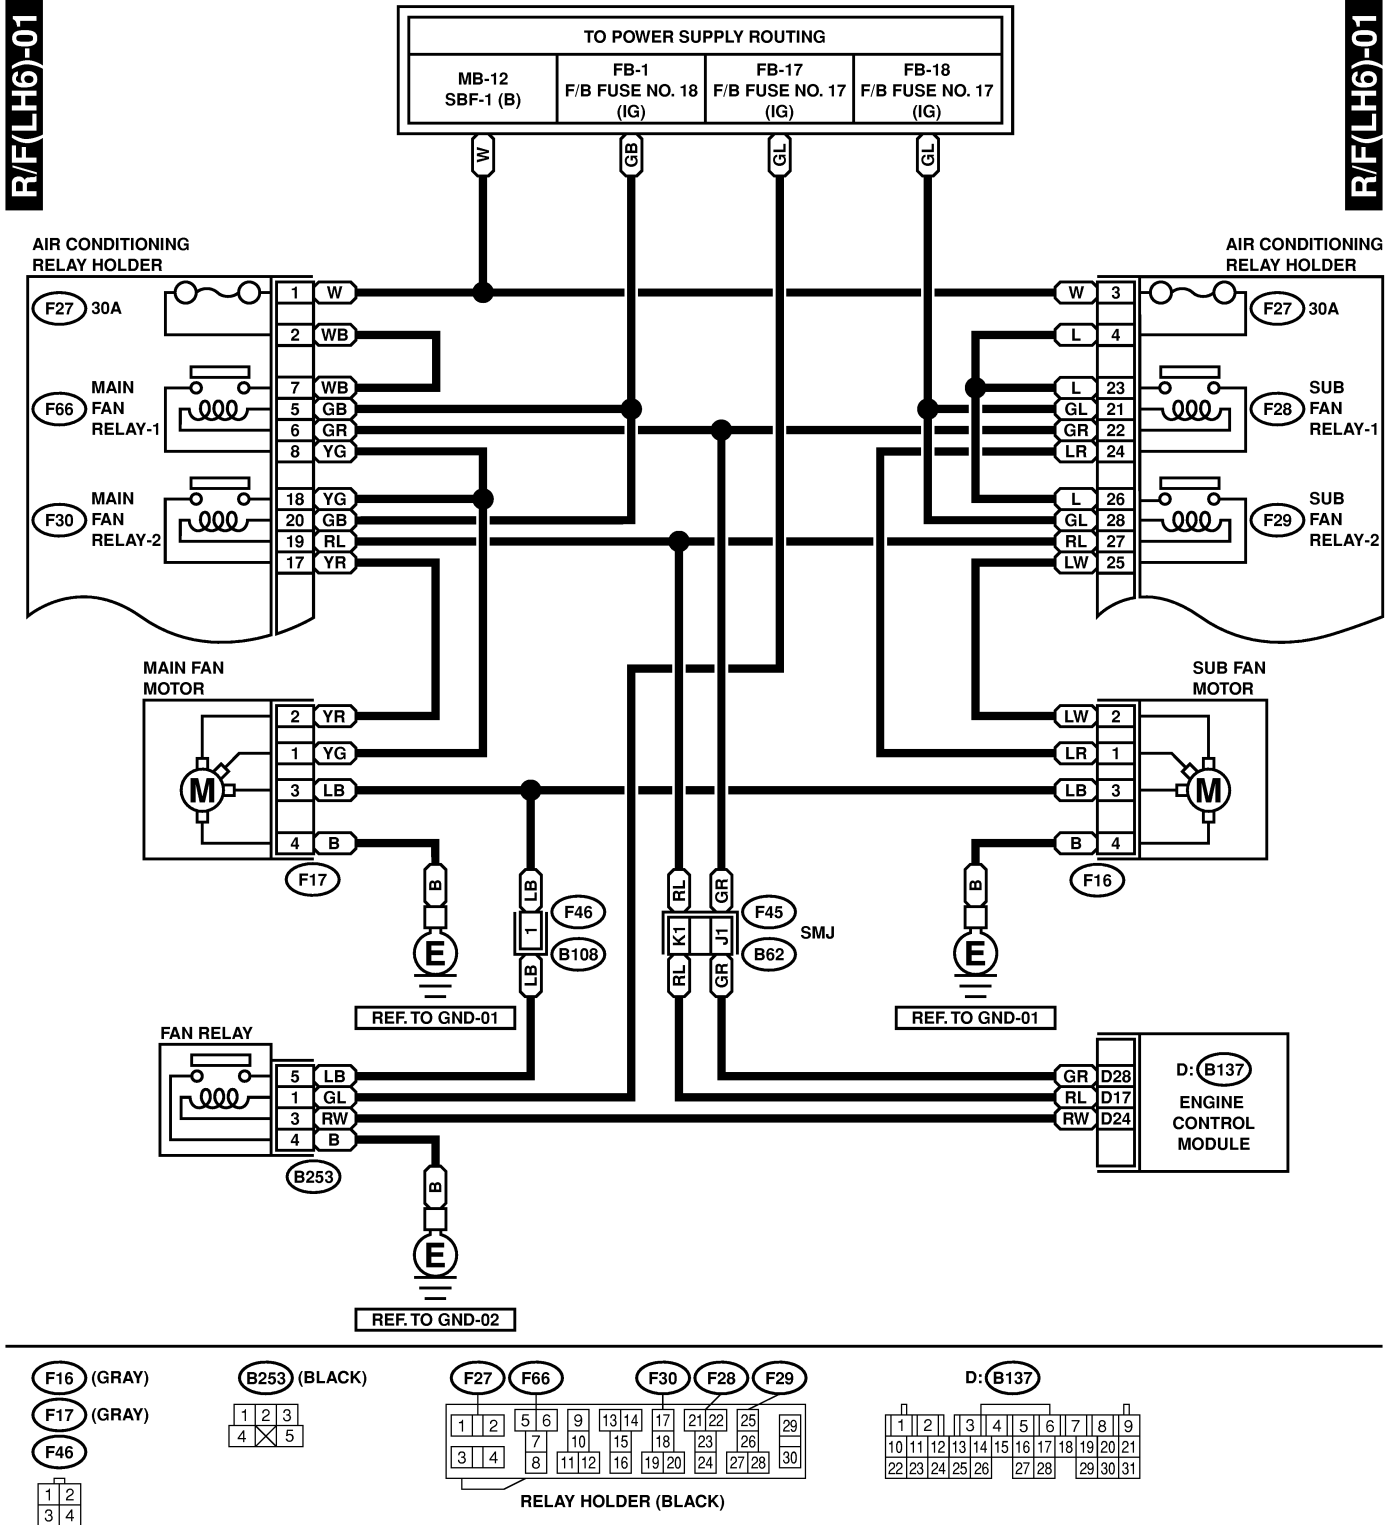

RADIATOR FAN SYSTEM


Wiring System

3. RHD-H6 MODEL S903480A2105

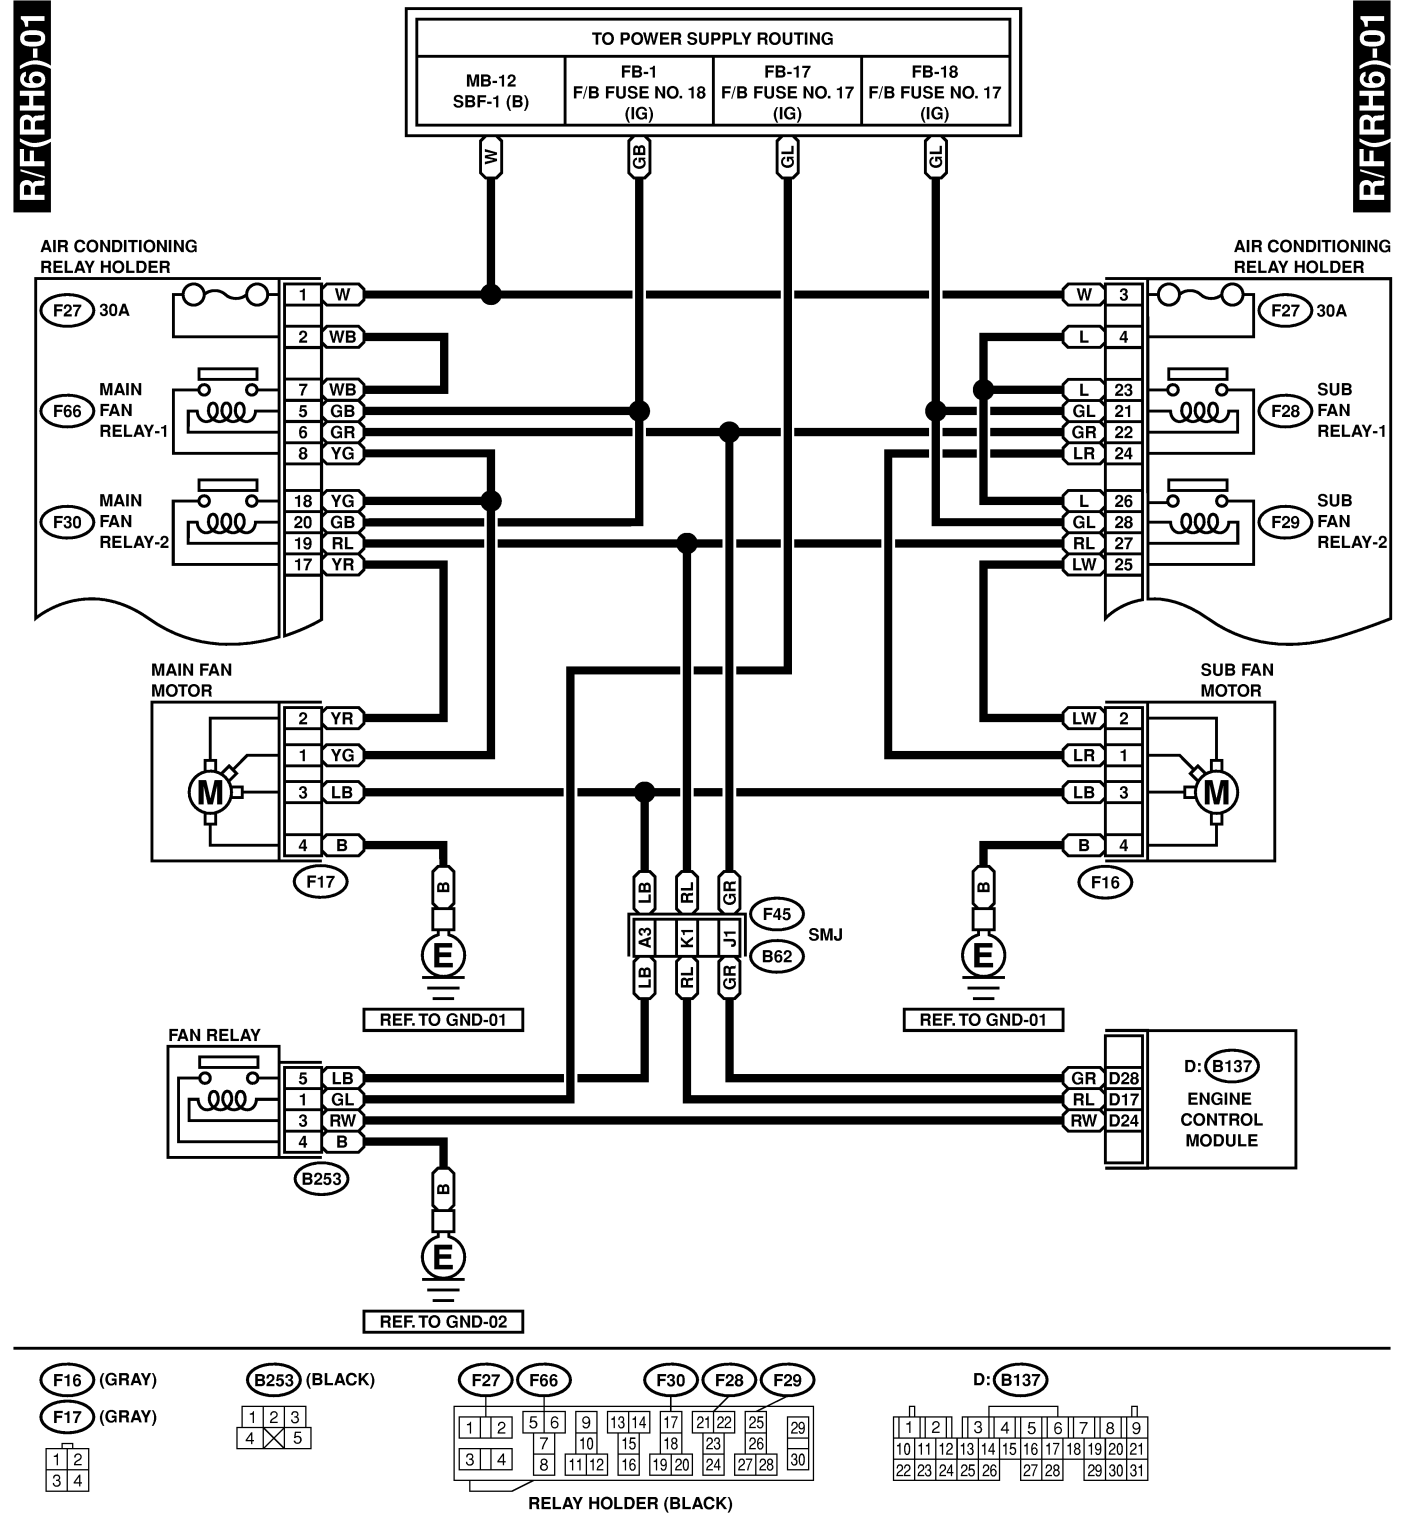

38. Rear Accessory Power Supply System S903670

A: SCHEMATIC S903670A21

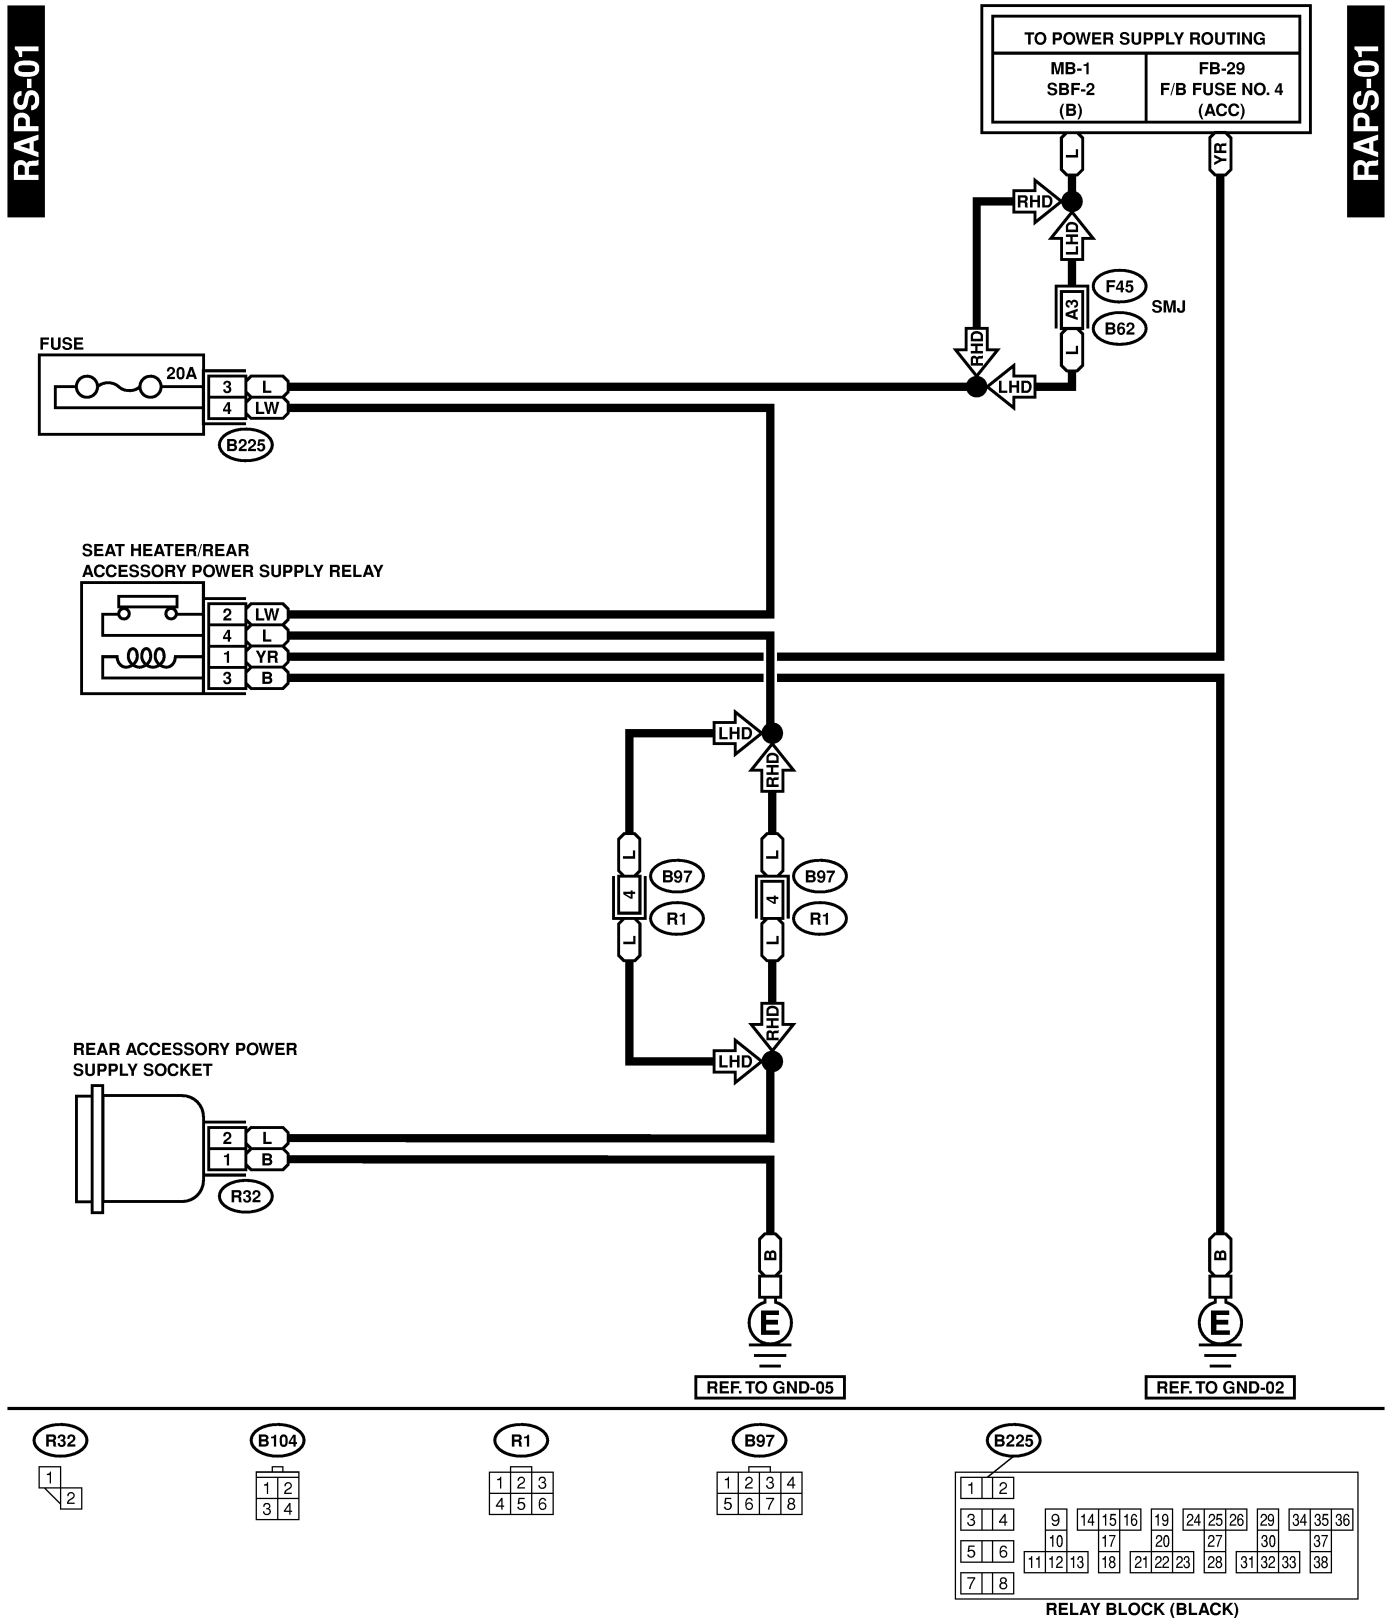

Wiring System



S903476

S903476A21



40. Rear Window Defogger System S903455

A: SCHEMATIC S903455A21

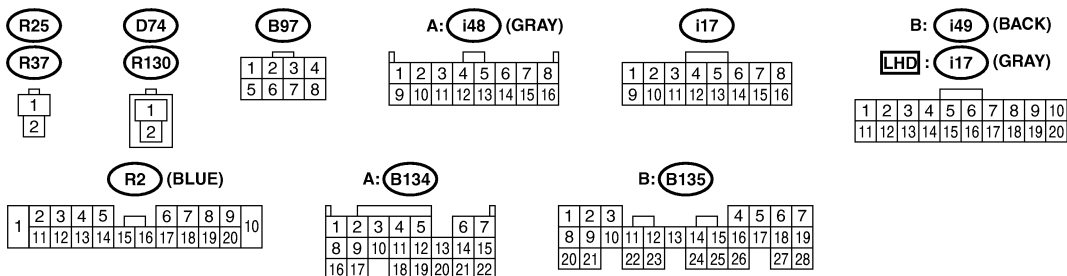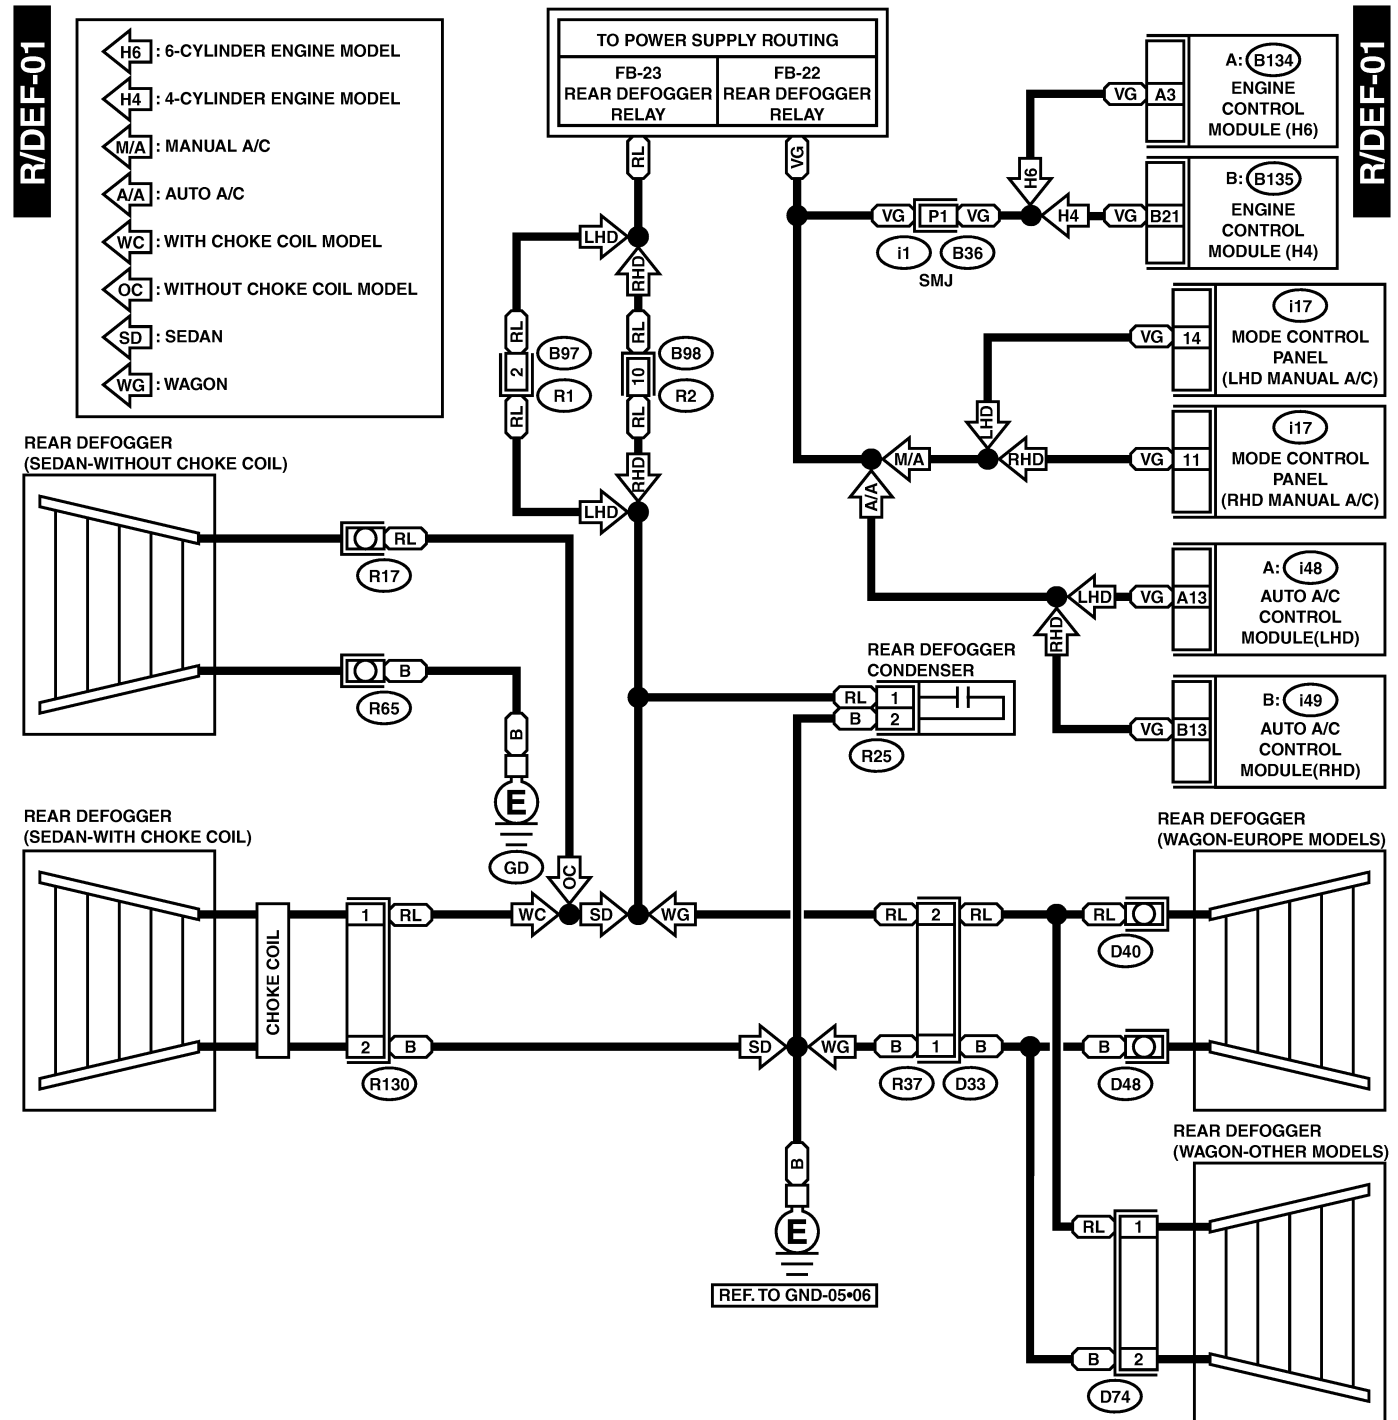

REMOTE CONTROLLED REARVIEW MIRROR SYSTEM

Wiring System

41. Remote Controlled Rearview Mirror System


S903459

A: SCHEMATIC

S903459A21


1. LHD MODEL

S903459A2101

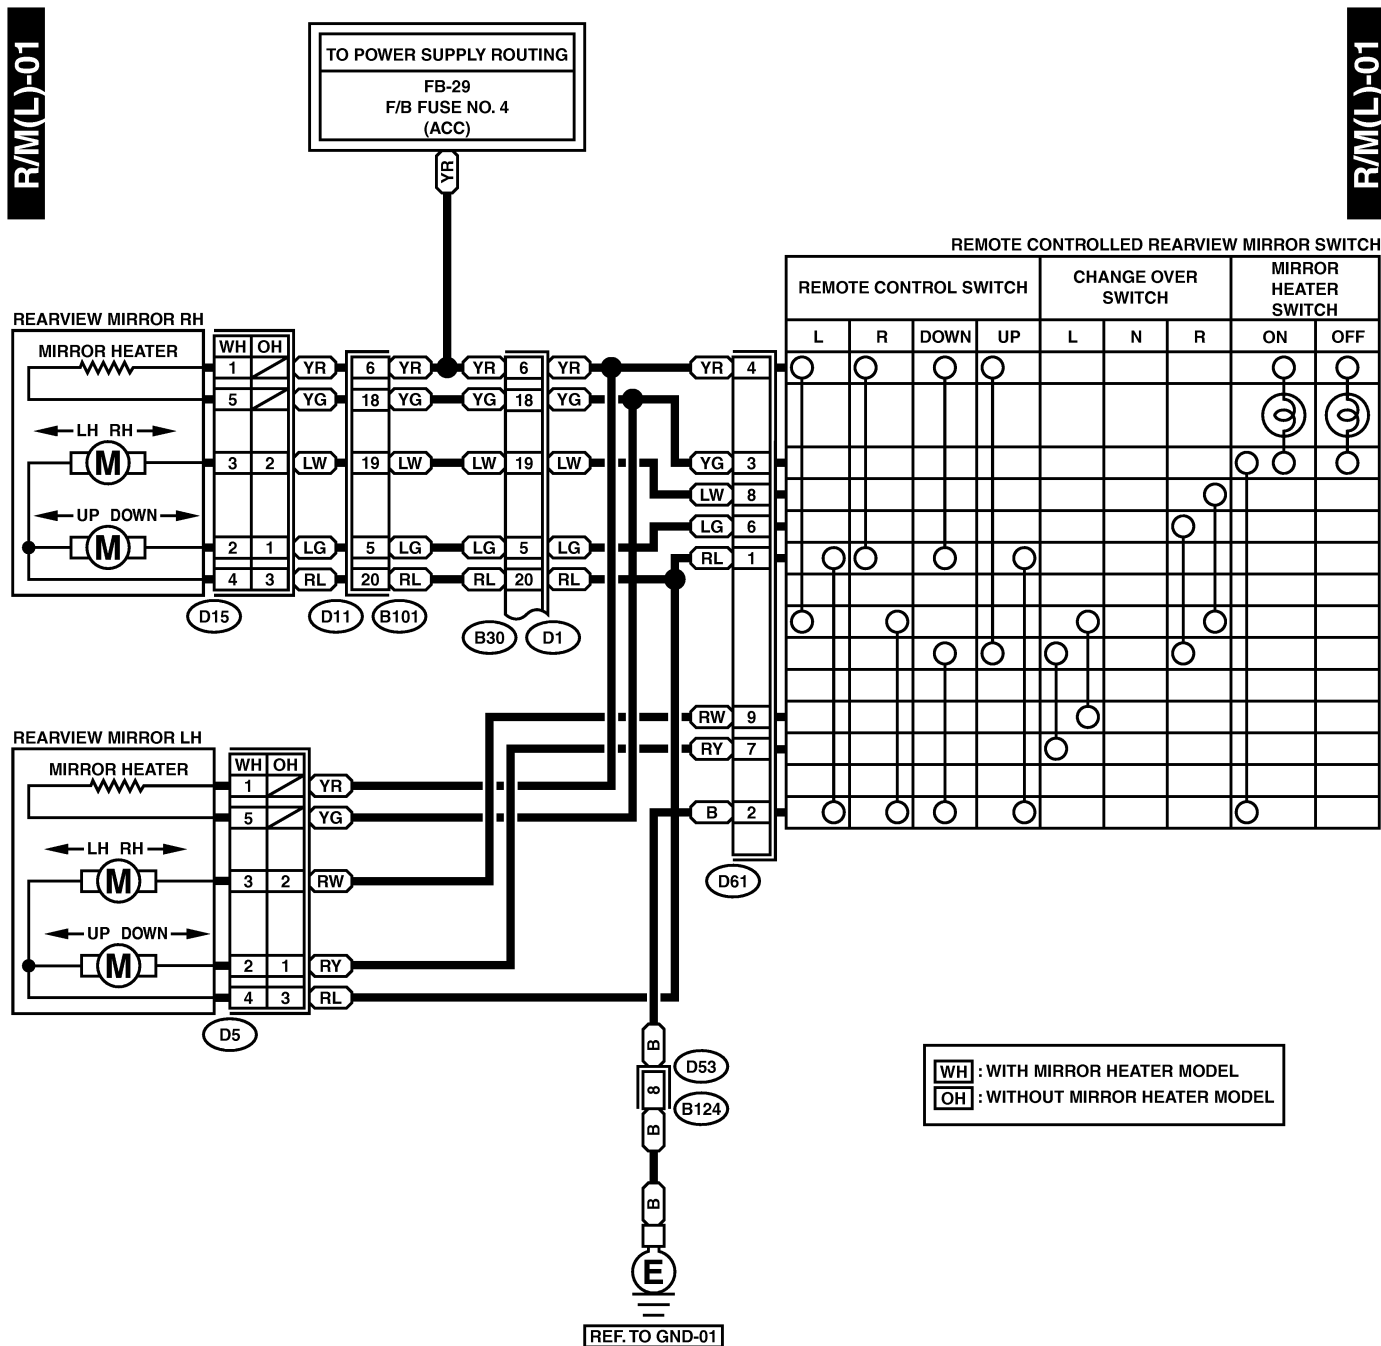

Wiring System

R/M(R)-01

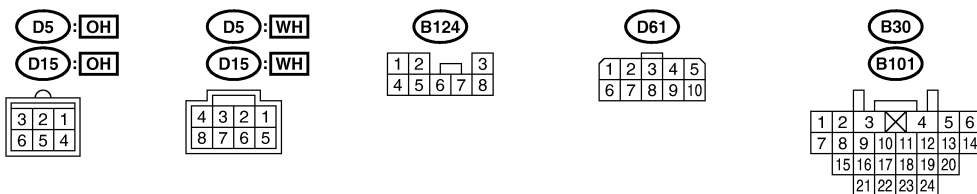

SEAT BELT WARNING SYSTEM

Wiring System

42. Seat Belt Warning System


S903483

A: SCHEMATIC

S903483A21

1. LHD MODEL


S903483A2101

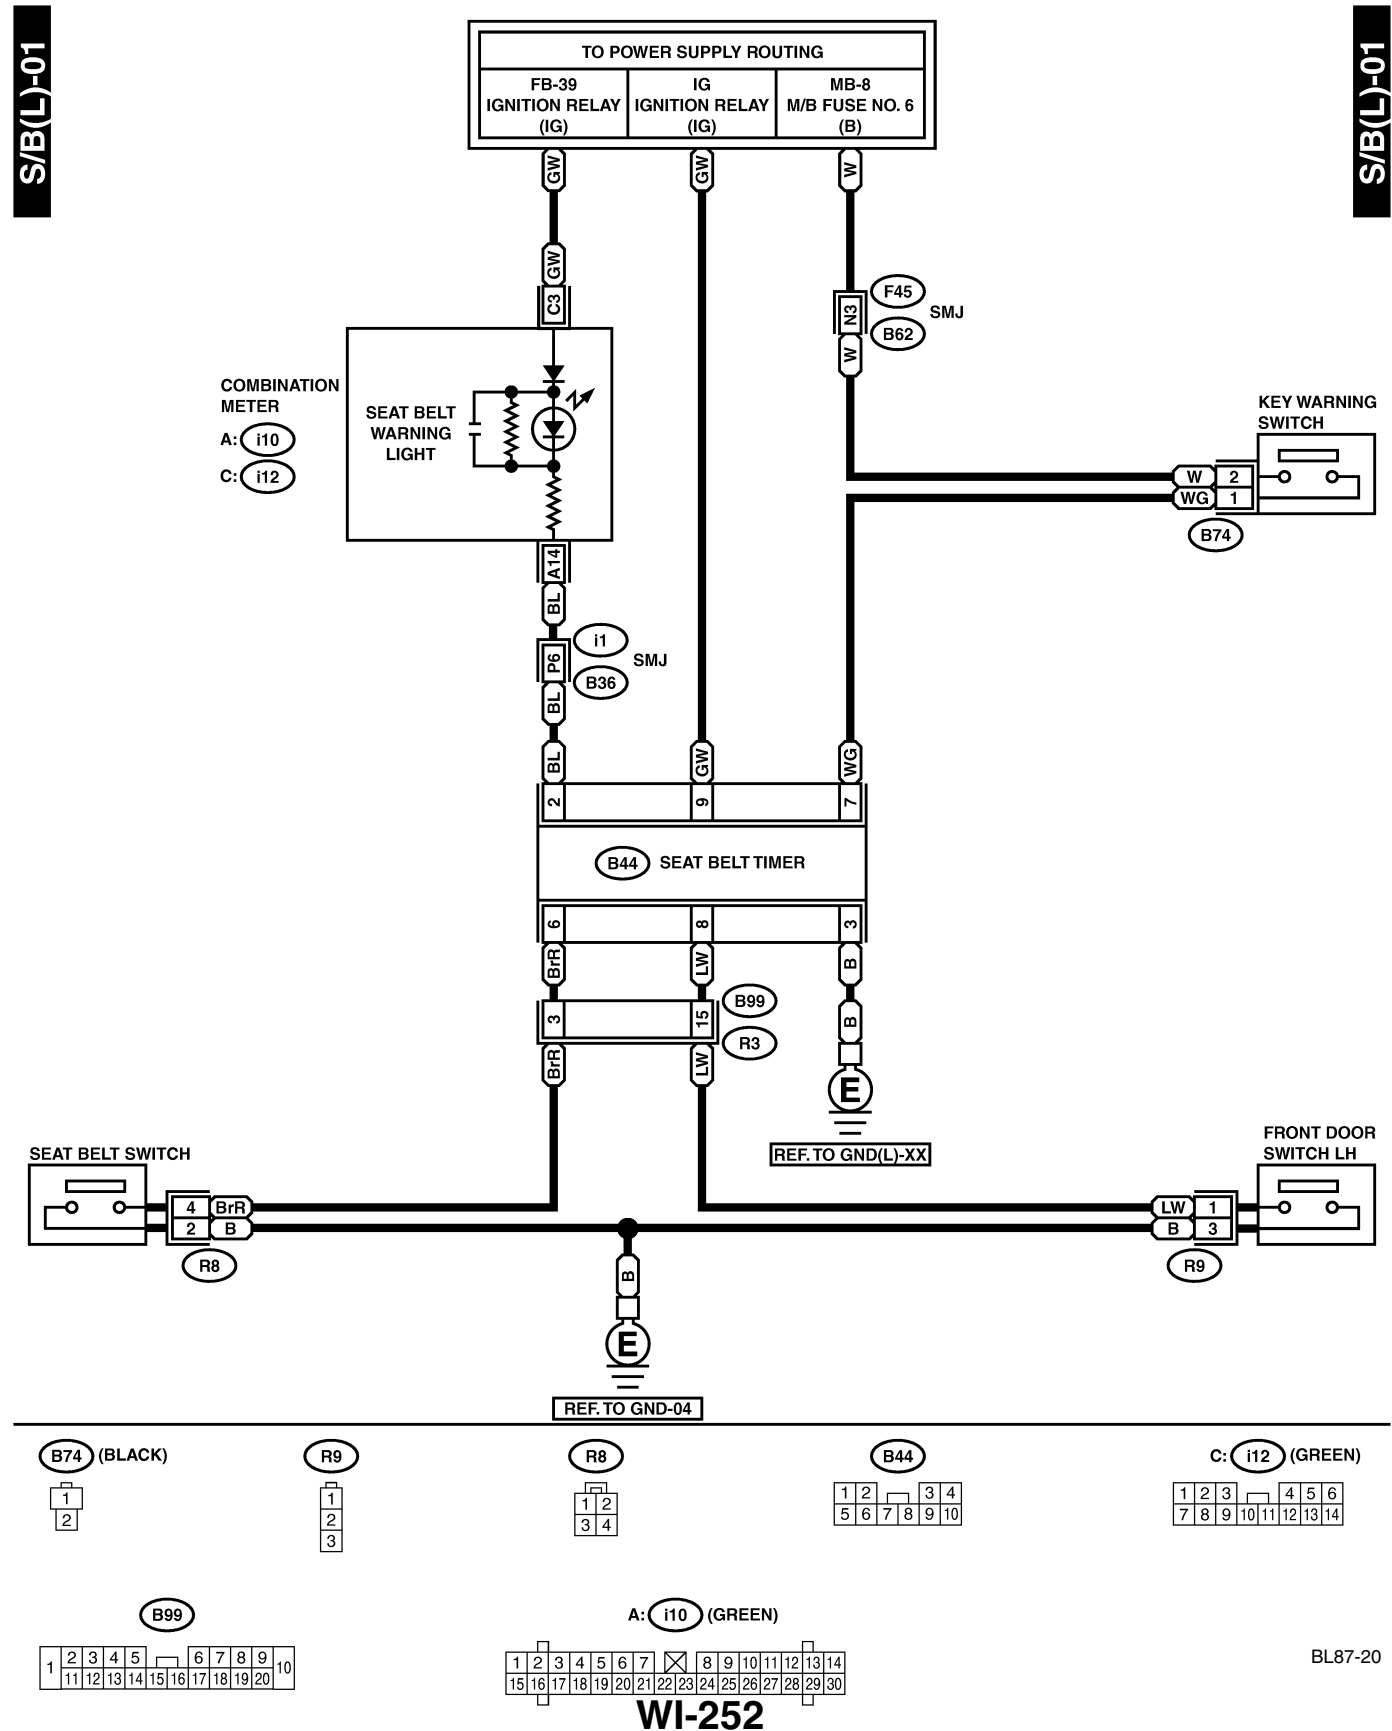

SEAT BELT WARNING SYSTEM

Wiring System

2. RHD MODEL S903483A2102

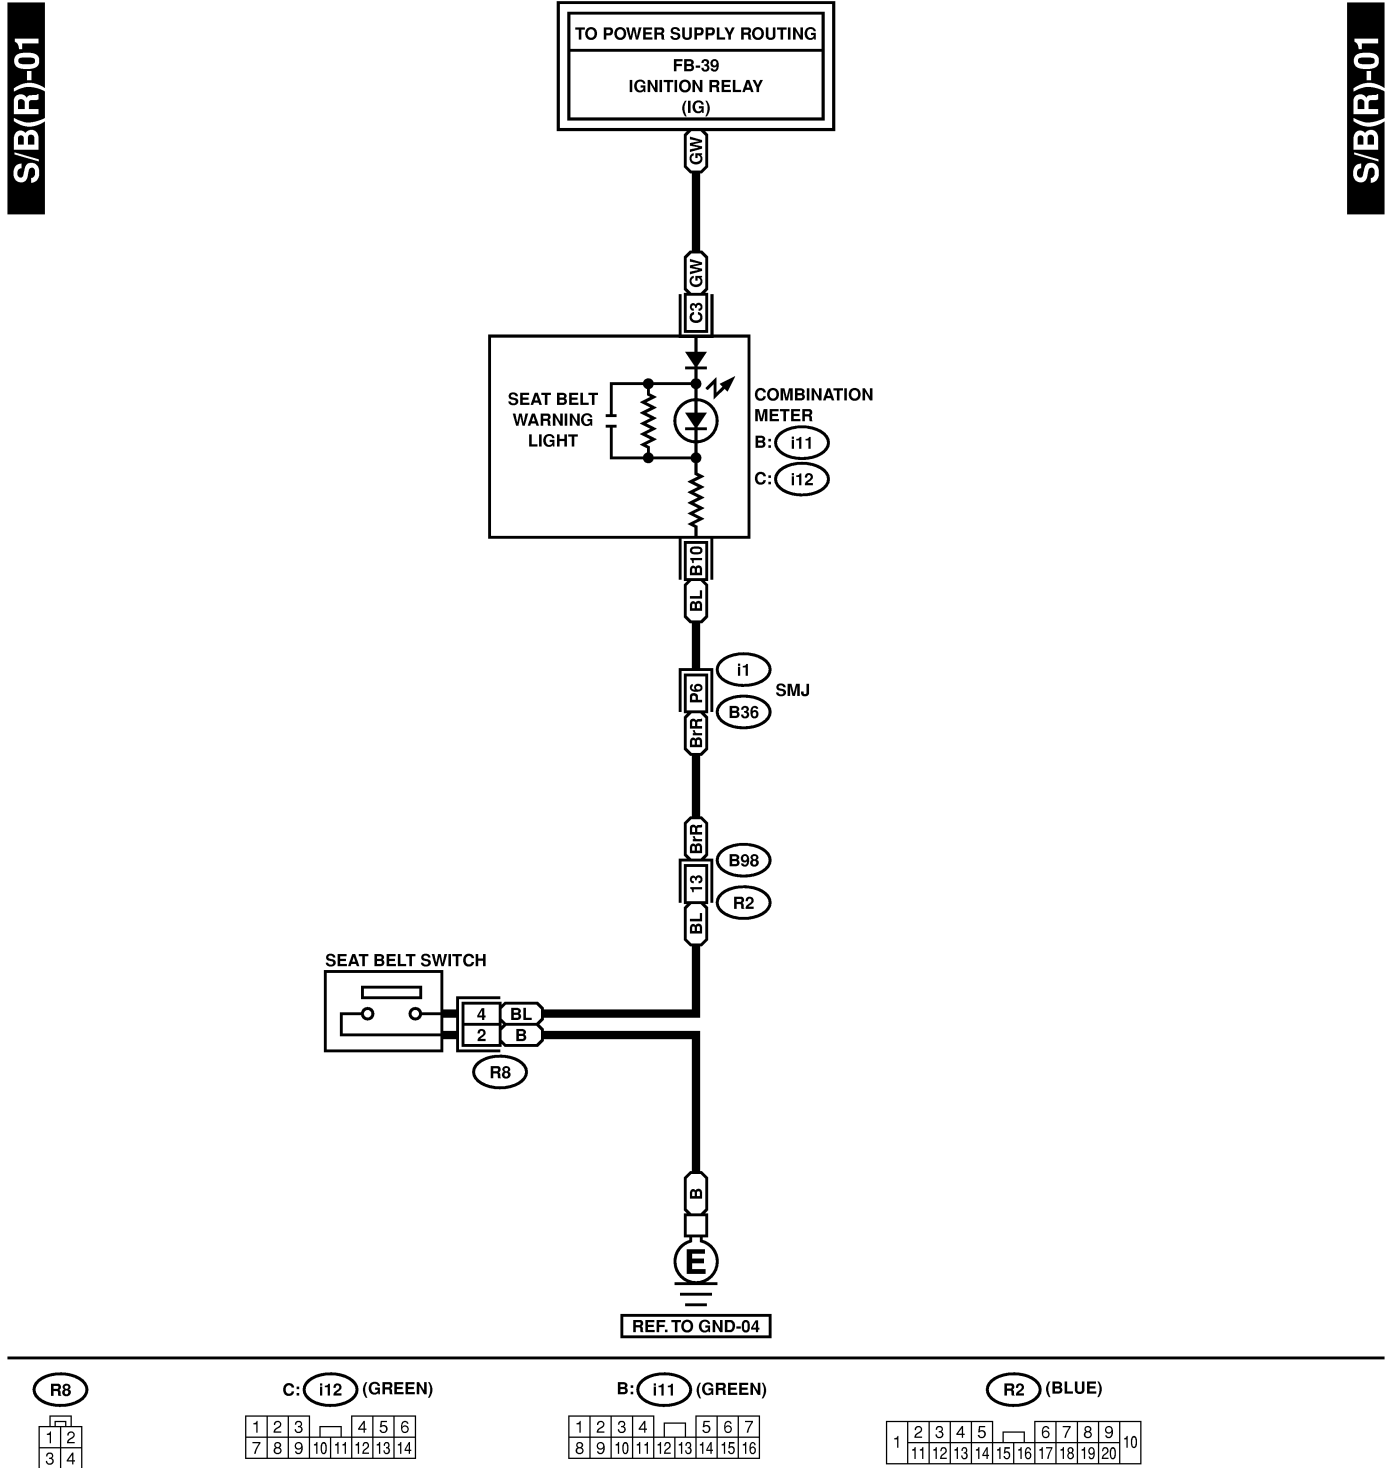

SEAT HEATER SYSTEM


Wiring System

43. Seat Heater System

S903462

A: SCHEMATIC

S903462A21

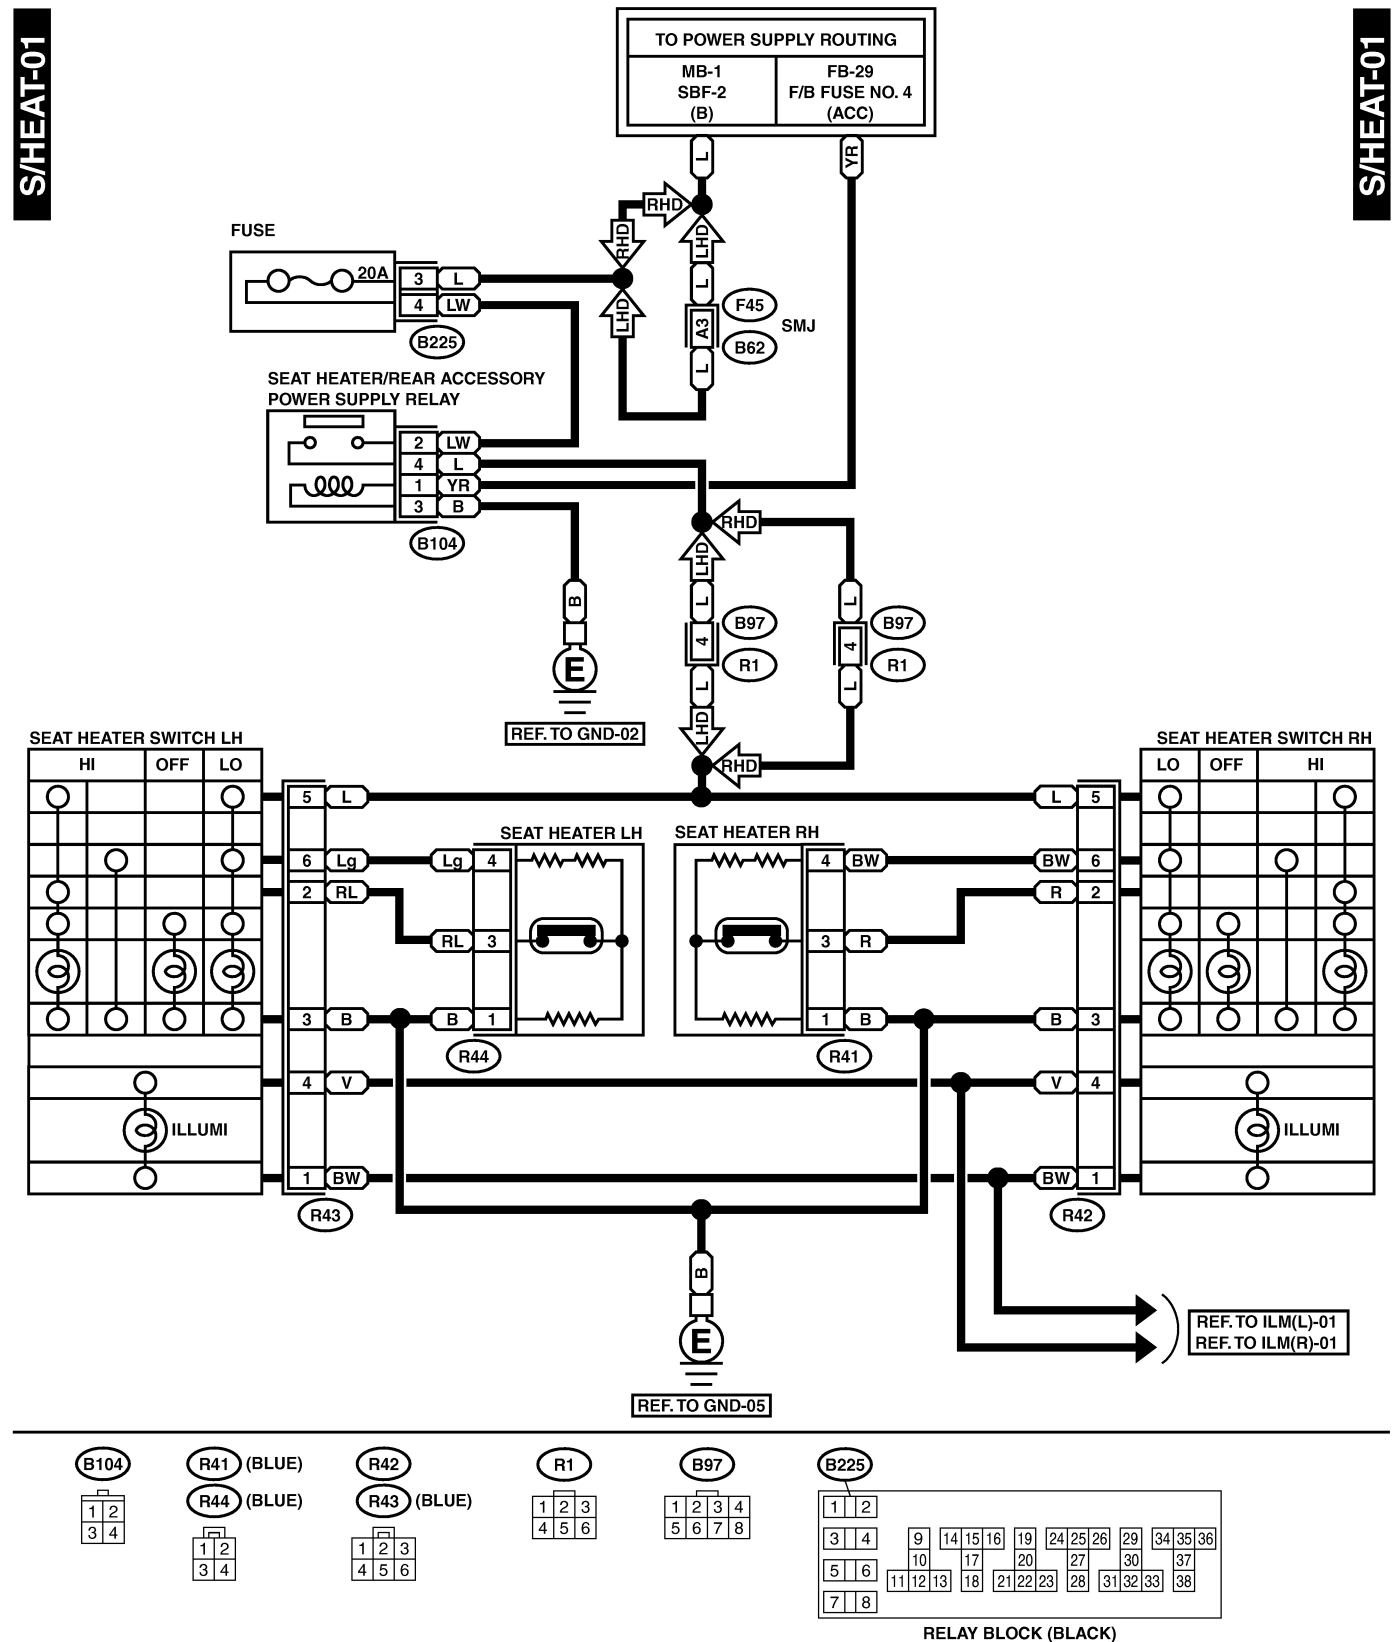

BG84-22

WI-254

44. Starter System S903439

A: SCHEMATIC S903439A21

