

24.A/C Filter**A: REPLACEMENT**

For the A/C filter replacement procedures, refer to the AC section. <Ref. to AC-53, REPLACEMENT, A/C Filter.>

ENGINE SECTION

This service manual has been prepared to provide SUBARU service personnel with the necessary information and data for the correct maintenance and repair of SUBARU vehicles.

This manual includes the procedures for maintenance, disassembling, reassembling, inspection and adjustment of components and diagnostics for guidance of experienced mechanics.

Please peruse and utilize this manual fully to ensure complete repair work for satisfying our customers by keeping their vehicle in optimum condition. When replacement of parts during repair work is needed, be sure to use SUBARU genuine parts.

All information, illustration and specifications contained in this manual are based on the latest product information available at the time of publication approval.

FUEL INJECTION (FUEL SYSTEMS)

FU(H6DO)

EMISSION CONTROL
(AUX. EMISSION CONTROL DEVICES)

EC(H6DO)

INTAKE (INDUCTION)

IN(H6DO)

MECHANICAL

ME(H6DO)

EXHAUST

EX(H6DO)

COOLING

CO(H6DO)

LUBRICATION

LU(H6DO)

SPEED CONTROL SYSTEMS

SP(H6DO)

IGNITION

IG(H6DO)

STARTING/CHARGING SYSTEMS

SC(H6DO)

ENGINE (DIAGNOSTICS)

EN(H6DO)(diag)

GENERAL DESCRIPTION

GD(H6DO)

FUEL INJECTION (FUEL SYSTEMS)

FU(H6DO)

	Page
1. General Description	2
2. Throttle Body	19
3. Intake Manifold	22
4. Engine Coolant Temperature Sensor	30
5. Crankshaft Position Sensor	31
6. Camshaft Position Sensor	34
7. Knock Sensor	37
8. Throttle Position Sensor	38
9. Manifold Absolute Pressure Sensor	39
10. Mass Air Flow and Intake Air Temperature Sensor	40
11. EGR Valve	41
12. Fuel Injector	42
13. Oil Flow Control Solenoid Valve	45
14. Oil Temperature Sensor	47
15. Front Oxygen (A/F) Sensor	48
16. Rear Oxygen Sensor	50
17. Engine Control Module (ECM)	51
18. Main Relay	52
19. Fuel Pump Relay	54
20. Electronic Throttle Control Relay	55
21. Fuel Pump Control Unit	57
22. Fuel	58
23. Fuel Tank	60
24. Fuel Filler Pipe	63
25. Fuel Pump	65
26. Fuel Level Sensor	67
27. Fuel Sub Level Sensor	68
28. Fuel Filter	70
29. Fuel Delivery and Evaporation Lines	74
30. Fuel System Trouble in General	78