

Dodge Neon 2005 fuse box diagram

Power Distribution Center

A Power Distribution Center is located in the engine compartment; next to the battery.

Maxi fuse	Ampere rating [A]	Description
1	—	—
2	—	—
3	40	Headlamps
4	40	Ignition Run
5	30	ABS Solenoid
6	30	Radiator Fan
7	—	Spare
8	40	ABS Pump
9	30	Starter
10	40	Electric Back Light (EBL)
11	—	Spare

12	—	Spare
13	20	IOD/Int Lighting/Radio
14	20	Power Outlet
15	15	Hazard Flasher
16	15	MTV
17	20	Electronic Automatic Transaxle (EATX)
18	10	Horn
19	—	Spare
20	20	Fog Lamp (Export Only)
21	20	ASD/Fuel Pump
22	10	A/C Clutch
23	15	Stop Lamps

Interior Fuses

The fuse access panel is behind the end cover at the left side of the instrument panel.

Fuse	Ampere rating	Description
------	---------------	-------------

1	10	Power Mirror/ Multifunction
2	20	Wiper Switch/Motor
3	20	Radio/Power Sunroof
4	15	Interior Lighting
5	10	Airbag Run Only
6	20	HVAC Blower
7	10	Backup Switch/EBL/Temp/Comp
8	15	High Headlamp
9	10	Airbag Run-Start
10	15	ABS Engine Run Start
11	10	ARKEM Run Start
12	10	Ignition Off/Run/ Start
13	20	Power Seat Height Adjust
14	20	ARKEM Door Locks
15	15	Exterior Lighting

16	25	Headlamp
17	10	Lt Low Beam Headlamp/Headlamp Level Switch (Bux Only)
18	10	Rt Low Beam Headlamp/Headlamp Level Motor
19	10	Fog lamps
20	—	Spare