

Cadillac Catera 1999 – 2000 fuse box diagram

Instrument Panel Fuse Block (Driver's Side)

The fuse block is located below the steering wheel on the driver's side. Using a screwdriver, loosen the two trim fasteners under the trim panel and pull the trim panel away from the instrument panel to access.

33 HEATER BLOWER				34 RR WDO DEFOG				35 PWR SEAT			
21 HI BEAM LH	22 LO BEAM LH	23 PWR LP LH	24 CLAMP 19L	25 SUN ROOF	26 CLAMP 26	27 ALG	28 LOCKDOWN	29 DOME LAMP	30 PWR LP RH	31 LO BEAM RH	32 HI BEAM RH
9 WIPER	10 CLAMP 15L	11 HTD MIRROR	12 HZD	13 O/S MIRROR	14 CLAMP 12	15 CLAMP 12 SPARE	16 CIG	17 HORN	18 FUSE PUMP	19 ASS	20 HZD KAT FRONT
				1 PWF	2 CLAMP 15 SR	3 FLASHER	4 HZD SEAT PWR	5 CLAMP 30 A/T	6 AUDIO	7 PWR	8 RADIO BATT GUARD

Cadillac Catera – fuse box – instrument panel

Fuse	Usage
1	RH and LH Front Side Door Window Regulator Motor, LH Front Side Door Window Switch
2	Stoplamp Switch, Cruise Control Release Switch
3	Automatic Transmission Range Switch, Automatic Transmission Control Indicator, Power Steering Control Module, Hazard Warning Switch, Automatic Transmission Winter Mode Switch, Transmission Control Module (TCM)
4	RH and LH Rear Seat Cushion Heater Relay, Rear Sunshade Motor
5	Transmission Control Module
6	Radio Speaker Amplifier
7	RH and LH Rear Side Door Window Regulator Motor
8	Headlamp Switch, Turn Signal Switch, Horn Relay, CD Changer, Multifunction Relay
9	Windshield Wiper Motor and Relay, Windshield Wiper and Windshield Washer Switch
10	Body Control Module (BCM), Heater Water Auxiliary Pump, Fan Control Relays, Auxiliary Water Pump Relay
11	Heater and A/C Control, RH and LH Outside Rearview Mirrors
12	Hazard Warning Switch, Instrument Cluster, Data Link Connector (DLC), Stoplamp Switch, Gage Cluster, Heater and A/C Control
13	Remote Control Outside Rearview Mirror Switch, A/C Compressor Relay, Coolant Fan Test Connector, A/C Load Switch

14	Cellular Telephone, RH and LH Windshield Washer Nozzles, Driver and Passenger Heated Seat Switch, Heater and A/C Control, Heated Outside Rearview Mirror and Rear Window Defogger Relay
15	Rear Suspension Leveling Air Compressor Relay, Instrument Cluster, Gage Cluster, Cruise Control Switch, Headlamp Switch, Multifunction Relay, Passenger and Driver Heated Seat Relay, BCM, Sunroof Actuator, Automatic Level Control Sensor, RH and LH Heated Rear Seat Switch, RH and LH Heated Rear Seat Cushion Relay, Driver Seat Adjuster Memory Module, LH Front Side Door Window Switch, Inside Rearview Mirror
16	Cigarette Lighter (Front and Console)
17	Horn #1 and #2
18	Fuel Pump
19	Electronic Brake/Traction Control Module
20	Passenger and Driver Heated Seat Relay
21	Daytime Running Lamp (DRL) Relay, LH High-Beam Headlamp Relay
22	Headlamp Switch, LH Low-Beam Headlamp
23	LH Parking Lamp and Turn Signal Lamps, LH Rear Sidemarkers Lamp, Multifunction Relay, LH Stoplamp and Taillamp
24	Lifting Magnet, BCM, Gage Cluster
25	Sunroof Actuator
26	Headlamp Switch, RH and LH Front Sidemarkers Lamp, Middle Taillamp, RH and LH Rear License Plate Lamp, Radio, Automatic Transmission Control Indicator, Heater and A/C Control
27	Automatic Level Control Sensor, Rear Suspension Leveling Air Compressor and Relay
28	Door Lock Relay, OnStar Connector
29	Multifunction Relay
30	RH Parking Lamp and Turn Signal Lamp, RH Rear Sidemarkers Lamp, RH Stoplamp and Taillamp
31	RH Low-Beam Headlamp Turn Signal Switch
32	RH High-Beam Headlamp Relay
33	Blower Controller, A/C Compressor Relay
34	Heated Rear Window Defogger Relay

35	Passenger Seat Adjuster Switch, Driver Seat Adjuster Memory Module
----	--

Relay Box

The relay box is located on the lower part of the instrument panel, to the right of the steering column.


I DRL	II ALC	VII PRK LP
III RR WDO DEFOG HTD MIRROR	IV FLASHER	VIII LO BEAM
		IX
V HI BEAM RH	VI HORN	X
		XI HI BEAM LH

Cadillac Catera – relay box

Relay	Usage
I	Daytime Running Lamps
II	Automatic Level Control
III	Rear Window Defogger, Heated Mirrors
IV	Hazard Warning Flashers
V	High-Beam Headlamps II (RH)
VI	Horn
VII	Parking Lamps and Turn Signal Lamps
VIII	Low-Beam Headlamps
IX	Not Used
X	Not Used
XI	High-Beam Headlamps I (LH)

Engine Compartment Relay Center

The relay center is located next to the battery on the driver's side of the engine. Lift the cover to access.

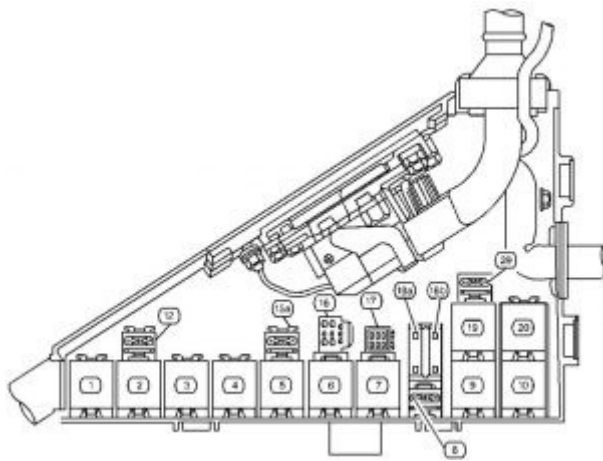

Cadillac Catera – fuse box – engine compartment

Fuse/Relay	Usage
1	Secondary Air Injection Pump (Relay K12)
2	Fan Control (Relay K67)
3	Auxiliary Water Pump (Relay K22)
4	Windshield Wiper Motor (Relay K8)
5	A/C Compressor Relay (K60)
6	Fan Control Relay (K87)
7	Fan Control Relay (K26)
8	Fuse 50
9	Fan Control Relay (K28)
10	Engine Controls Power Relay (K43)
12	Fuse 40
15	Fuse 52
16	Connector C110
17	Coolant Fan Test Connector Fan Control
18	Fuse 42 (A), Fuse 49 (B)
19	Fan Control Relay (K52)
20	Fuel Pump Relay (K44)
29	Fuse 43