

#### EMAIL US

<<http://www.scion.com/>> , "Contact"

#### CHAT

On weekdays you can chat with a Scion Customer Advocate.

<<http://www.scion.com/>> , "Have a Question?" or "Contact"

#### CALL US

For the Scion Customer Experience dial 1.866.70.SCION.

2006



#### MAILING ADDRESS

Scion  
19001 S. Western Ave.  
D102, P.O. Box 2742  
Torrance, CA 90509-2742  
USA

#### OUR WEBSITE

<<http://www.scion.com/>>

©2005 Scion, a marque of Toyota Motor Sales, U.S.A., Inc.  
00452-PRG06-XA



## Scion xA

## Pocket Reference Guide

# 2006 SCION xA

This *Pocket Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Pocket Reference Guide* is not intended as a substitute for the *Owner's Manual* located in the vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of the vehicle's capabilities and limitations.

Your dealership and the entire staff of Scion, a marque of Toyota Motor Sales, U.S.A., Inc., wish you many years of satisfied driving in your new SCION xA.

## ! A word about safe vehicle operations


This *Pocket Reference Guide* is not a full description of SCION xA operations. Every xA owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in yellow throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.


All information in this *Pocket Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

## Spare tire & tools

### Tool location

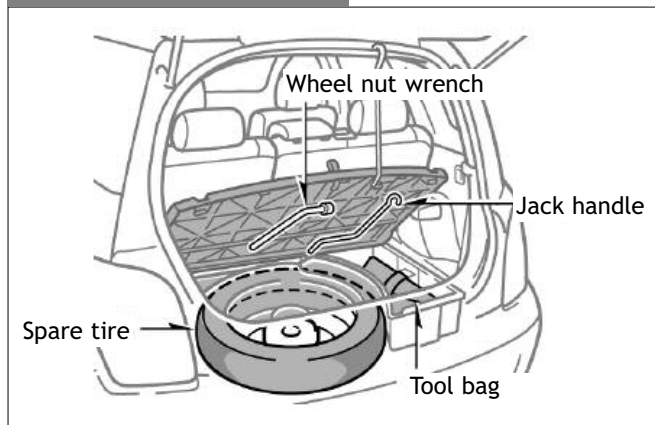

### Removing the spare tire

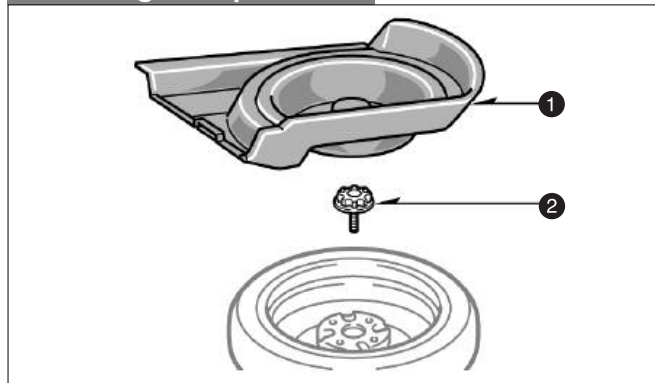

- ① Remove the spare tire cover.
- ② Loosen and remove the bolt.

Refer to the *Owner's Manual* for jack positioning and tire changing procedures.


# INDEX
 
| Item                                 | Page no. |
|--------------------------------------|----------|
| <b>OVERVIEW</b>                      |          |
| Engine maintenance                   | 7        |
| Fuel tank door release and cap       | 6        |
| Hood release                         | 6        |
| Indicator symbols                    | 4-5      |
| Instrument cluster                   | 4        |
| Instrument panel                     | 2-3      |
| <b>FEATURES/OPERATIONS</b>           |          |
| Air conditioning/Heating             | 13       |
| Automatic transmission               | 8        |
| AUX jack                             | 15       |
| Clock                                | 13       |
| Cup holders                          | 14       |
| Door locks                           | 9        |
| Grocery bag hooks                    | 14       |
| Light control-Instrument panel       | 14       |
| Lights & turn signals                | 11       |
| Luggage storage box                  | 14       |
| Manual transmission                  | 8        |
| Parking brake                        | 8        |
| Seat adjustments-Front               | 9        |
| Seat adjustments-Rear                | 10       |
| Seats-Head restraints                | 10       |
| Steering wheel switches              | 15       |
| Tilt steering wheel                  | 10       |
| Windows                              | 12       |
| Windshield wiper & washer            | 12       |
| <b>SAFETY AND EMERGENCY FEATURES</b> |          |
| Doors-Child safety locks             | 16       |
| Seat belts                           | 16       |
| Seat belts-shoulder belt anchor      | 16       |
| Spare tire & tools                   | 17       |

OVERVIEW


FEATURES/OPERATIONS

SAFETY AND EMERGENCY FEATURES




# OVERVIEW


## Instrument panel

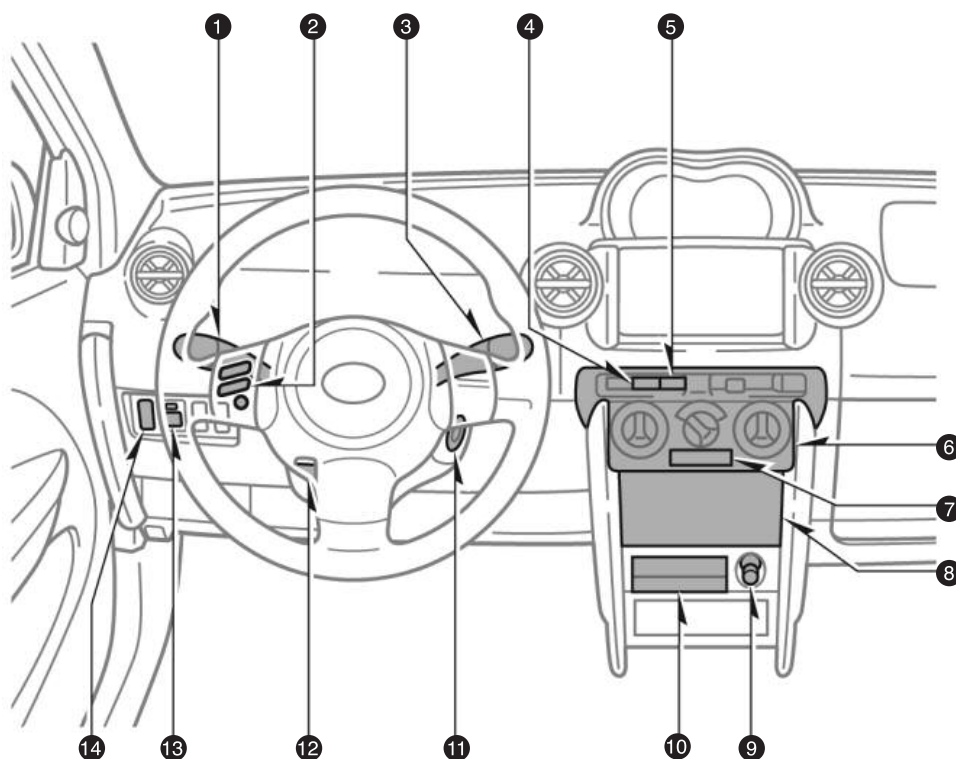

- ❶ Headlight and turn signal controls
- ❷ Steering wheel switches
- ❸ Wiper and washer controls
- ❹ Rear window defogger switch
- ❺ Emergency flasher switch
- ❻ Air conditioning controls
- ❼ Front passenger seat belt reminder light

  
- ❽ Auxiliary box
- ❾ 12V DC Power outlet/Cigarette lighter
- ❿ Ashtray
- ⓫ Ignition
- ⓬ Tilt steering lock release
- ⓭ Power rear view mirror controls
- ⓮ Instrument panel light control





OVERVIEW

**Instrument cluster**

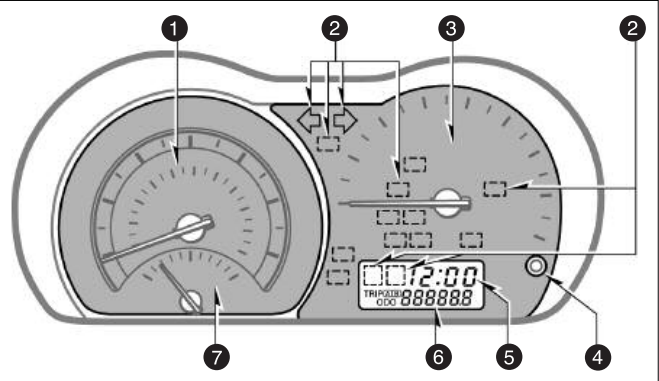

- 1 Speedometer
- 2 Service indicator and reminder
- 3 Tachometer
- 4 Clock/trip meter reset knob
- 5 Clock
- 6 Odometer and two trip meters
- 7 Fuel gauge

 Blue: Low engine coolant temperature indicator<sup>2</sup>

 Red: High engine coolant temperature warning<sup>1</sup>

 MAINT REQD Engine oil replacement reminder<sup>1</sup>

 Turn signal indicators

 Headlight high beam indicator

 ABS Anti-lock Brake System warning<sup>1</sup>

**CAUTION**

When the Anti-lock Brake System (ABS) function is in action, you may feel the brake pedal pulsating and hear a noise. In this situation, to let the Anti-lock Brake System work for you, just hold the brake pedal down more firmly. Do not pump the brake as this will result in reduced braking performance.

**Indicator symbols**

 BRAKE

 Brake system warning<sup>1</sup>

 Driver seat belt reminder<sup>1</sup>

 PASSENGER Front passenger seat belt reminder<sup>1</sup>

 Battery warning<sup>1</sup>

 CHECK Malfunction/Check Engine indicator<sup>1</sup>

 Low engine oil pressure warning<sup>1</sup>

 
 Low fuel level warning<sup>1</sup>

 
 Open door warning<sup>1</sup>

 Airbag SRS warning<sup>1</sup>

<sup>1</sup> For details, refer to “Service reminder indicators and warning buzzers,” Section 1-6, 2006 Owner’s Manual.

<sup>2</sup> For details, refer to “Engine coolant temperature indicator and warning light” Section 1-6, 2006 Owner’s Manual.






## OVERVIEW

### Fuel tank door release and cap




**NOTE:** If the cap is not tightened enough, Check Engine "CHECK" indicator may illuminate.

### Hood release

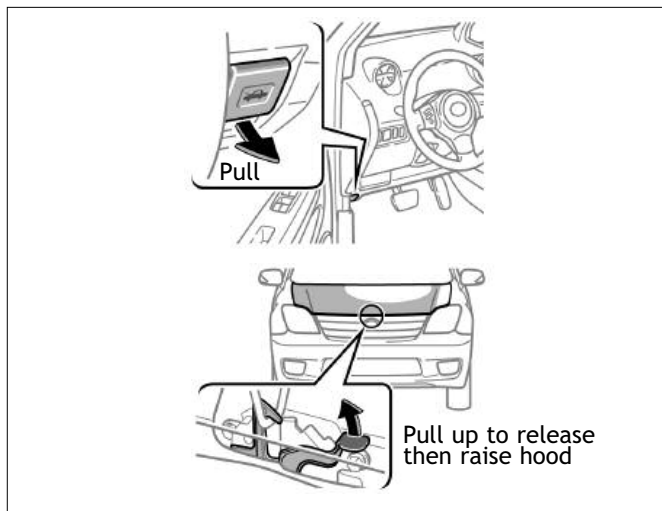



### Engine maintenance

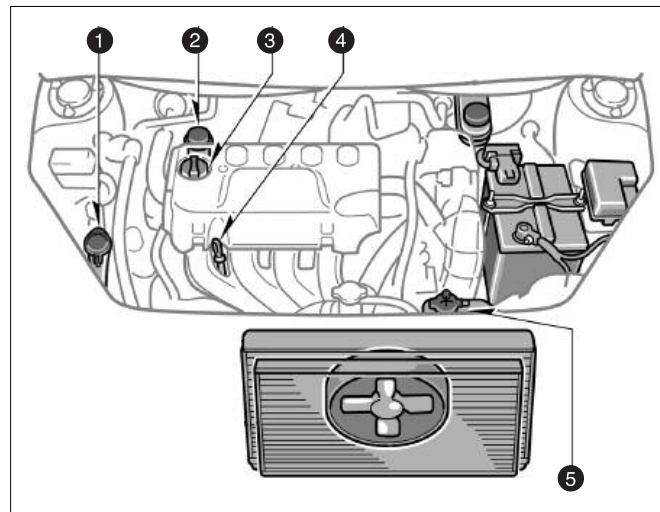

- ① Windshield washer fluid tank
- ② Power steering fluid reservoir
- ③ Engine oil filler cap
- ④ Engine oil level dipstick
- ⑤ Engine coolant reservoir

  
**Note:** Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Owner's Warranty Information Booklet," "Scheduled Maintenance Guide" or "Owner's Manual Supplement."





## FEATURES/OPERATIONS

### Automatic transmission (if equipped)

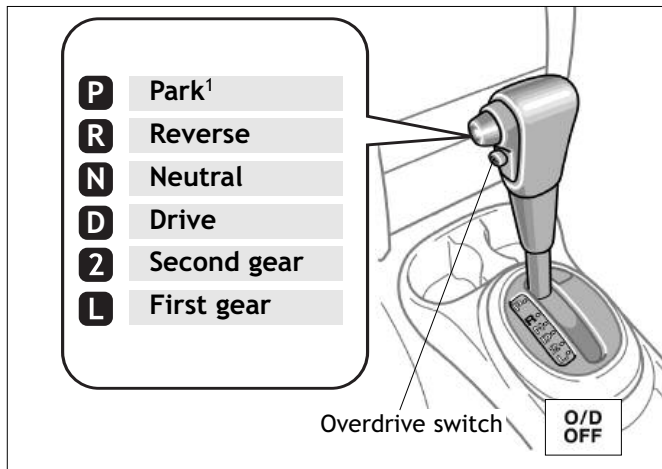

<sup>1</sup>The ignition switch must be ON, and the brake pedal depressed.

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.


#### Overdrive switch

To turn "ON" or "OFF" Depress the overdrive switch to choose either three-speed ("OFF") or four-speed ("ON") operation. During normal driving conditions, always drive with overdrive "ON," this allows the transmission to shift automatically into four-speed operation at higher speeds, improving fuel economy. If the indicator light on the instrument cluster is illuminated, overdrive is "OFF."


### Manual transmission (if equipped)

For safety, the engine will not start unless the clutch pedal is FULLY depressed.

### Parking brake

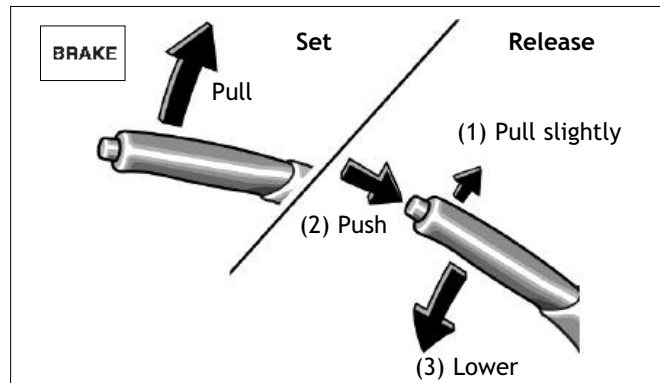


### Door locks

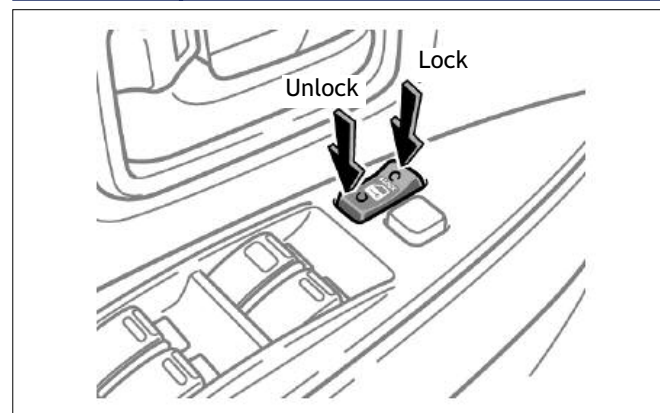


### Seat adjustments-Front



  
- ① Position
- ② Seatback angle






## FEATURES/OPERATIONS


### Seat adjustments-Rear

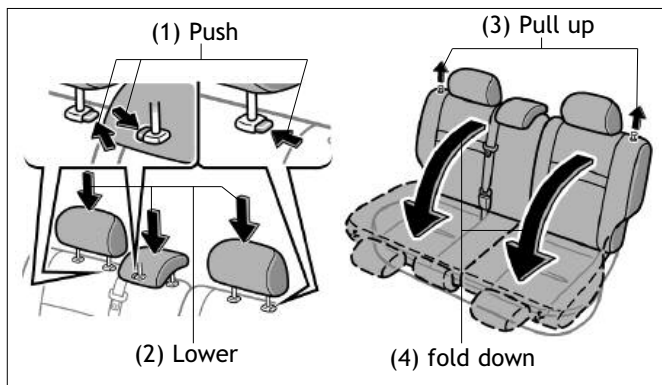

### Seats-Head restraints

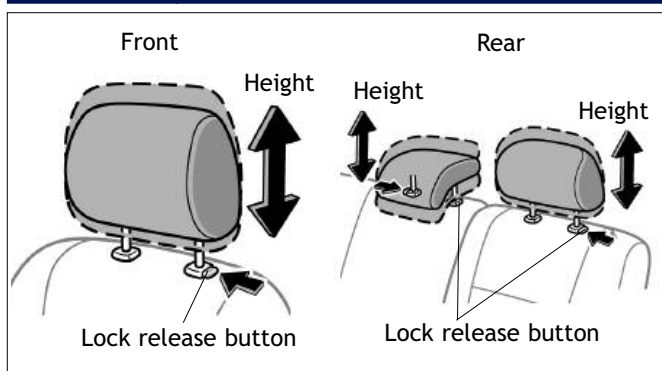

### Tilt steering wheel

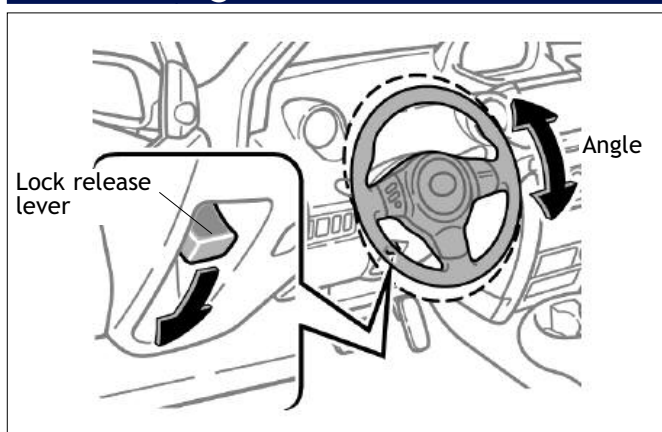


Hold wheel, push lever down, set angle then return lever.

**Note:** Do not attempt to adjust while the vehicle is in motion.

### Lights & turn signals

#### Headlights


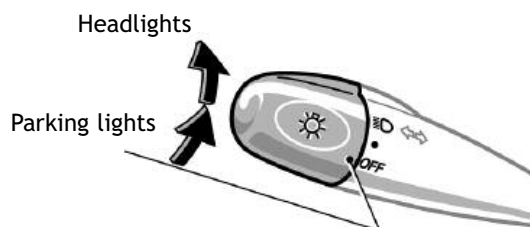



High beams

Low beams

High beam flasher

#### Turn signals

 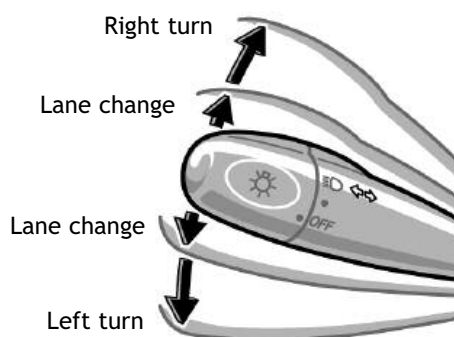


 


## FEATURES/OPERATIONS

### Windshield wiper & washer

#### Front

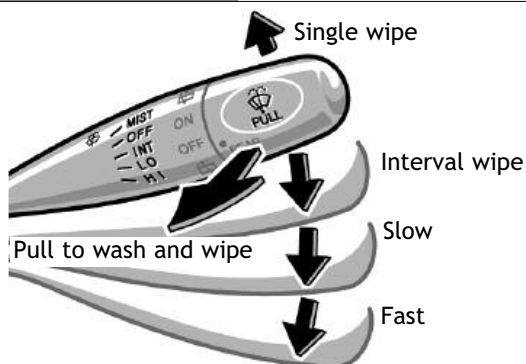


#### Rear

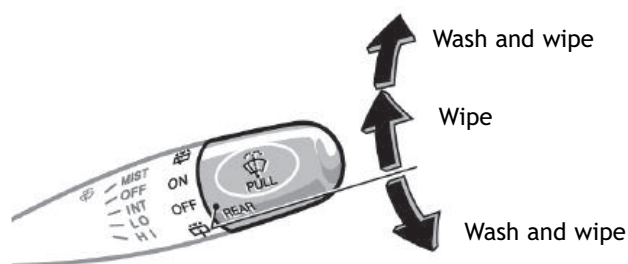

### Windows

#### Driver side

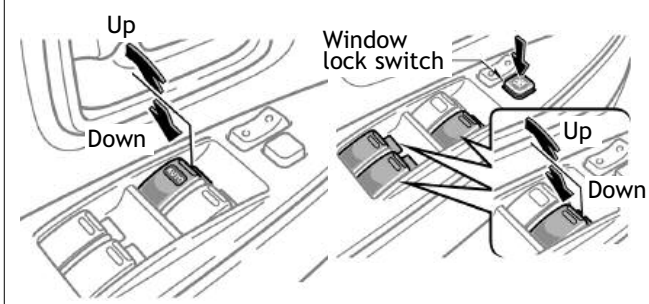


#### Window operation


**Automatic down operation (Driver side only)** Push the switch completely down and release to fully open. To stop window mid-way, lightly pull up on the switch.

### Light control-Instrument panel

#### Brightness control

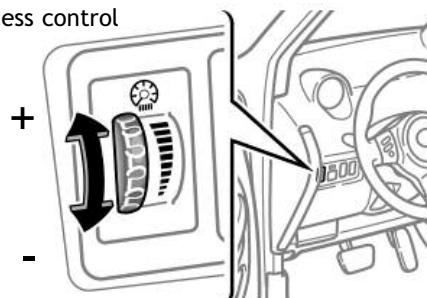

### Air conditioning/Heating

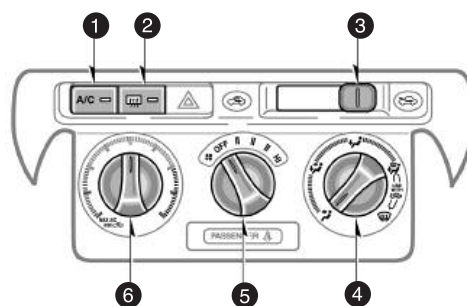


- 1 Air Conditioning ON/OFF
- 2 Rear defogger
- 3 Fresh or recirculate cabin air
- 4 Vent selector<sup>1</sup>
- 5 Fan speed
- 6 Temperature


<sup>1</sup> " " or " " use fresh air to reduce window fogging.

### Clock



  Turn to "H"-Set hour  
Turn to "M"-Set minutes






## FEATURES/OPERATIONS

### Cup holders

Front




Rear

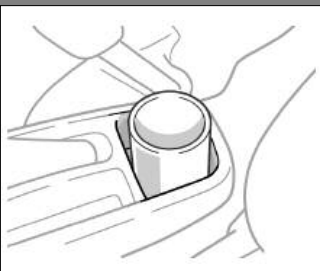


### Grocery bag hooks


Front seatbacks

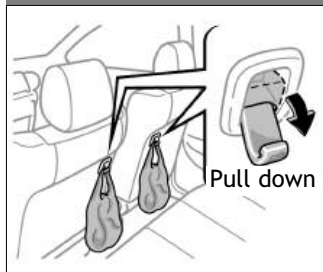


Luggage compartment

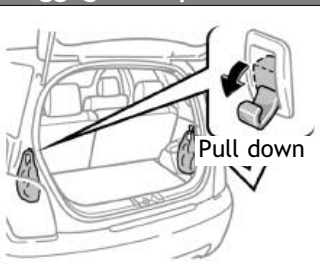

### Luggage storage box

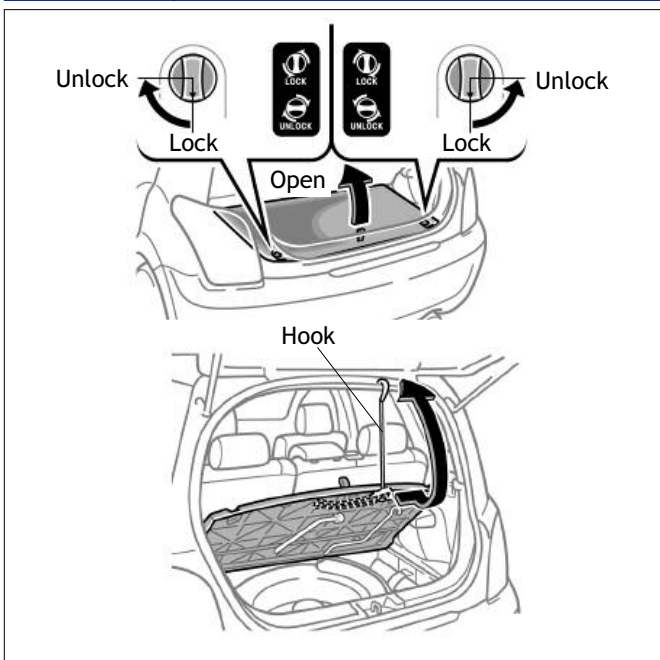

### Steering wheel switches

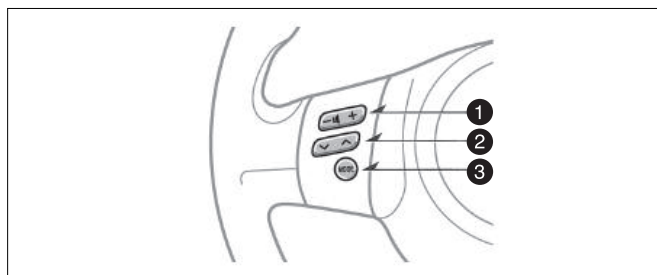

① " - + "

Volume control

② " V ^ "

-In radio mode Push to select a preset station, push and hold to seek the next strong station.


-In tape mode Push to skip up or down to the next/previous track, push and hold to fast forward or reverse.

-In CD mode Push to skip up or down to a next/previous track.

③ "MODE"


Push to turn audio "ON" and select an audio mode. Push and hold to turn the audio system "OFF."

### AUX jack

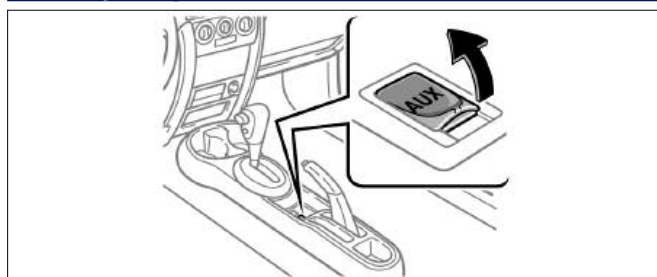


To listen to a portable audio component, connect the mini plug of a commercially available component to the AUX jack.

 Refer to the *SCION Audio System Owner's Manual* for more details.




# SAFETY AND EMERGENCY FEATURES

## Doors-Child safety locks

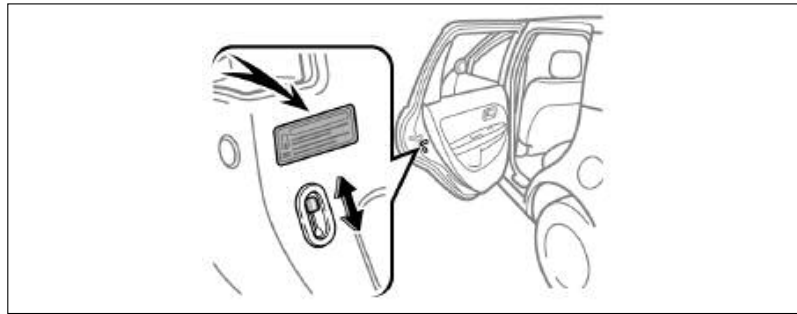

Move the lever to "LOCK," allowing the door to be opened only from the outside.

## Seat belts

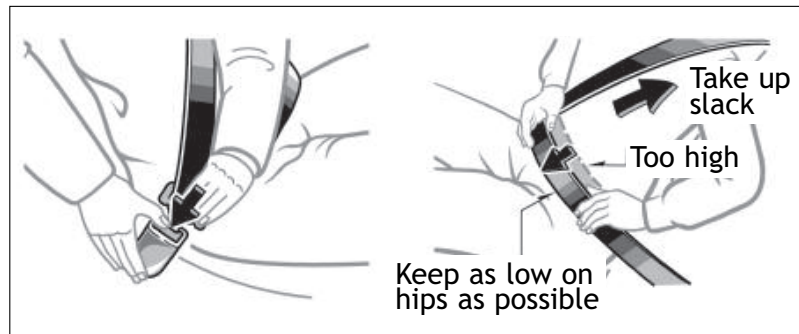

If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

## Seat belts-Shoulder belt anchor

