


Chevrolet Camaro 2016 fuse box diagram

Engine Compartment Fuse Block

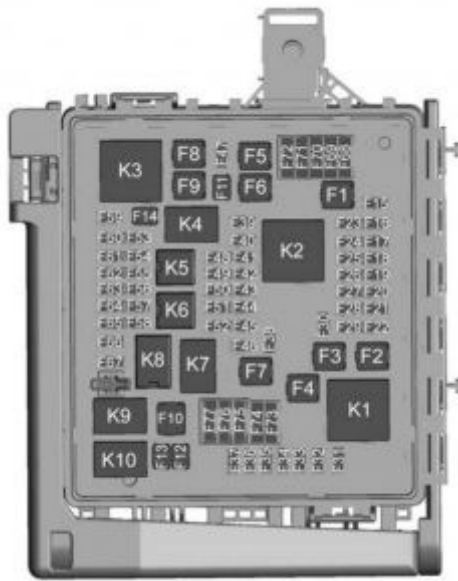

Chevrolet Camaro – fuse box – engine compartment


Fuses	Usage
F1	ABS pump
F2	—
F3	Driver power seat
F4	Cooling fan
F5	Passenger power seat
F6	—
F7	—
F8	—
F9	—
F10	—
F11	—
F12	Front wiper
F13	Starter
F14	Brake vacuum pump
F15	—
F16	Heated seat
F17	Passenger window
F18	Body control module 4
F19	Airbag module/AOS
F20	OnStar/Navigation (if equipped)
F21	Body control module 6
F22	ABS valve

F23	—
F24	—
F25	Steering column lock
F26	Body control module 2
F27	—
F28	Body control module 3
F29	Body control module 8
F30	Windshield wiper
F31	Right HID headlamp
F32	Left HID headlamp
F33	—
F34	Horn
F35	—
F36	Left high-beam headlamp
F37	Right high-beam headlamp
F38	Headlamp leveling
F39	—
F40	Rear electrical center/Ignition
F41	Malfunction indicator lamp/Ignition
F42	Instrument panel body/Ignition
F43	Exhaust valve/Active fuel management
F44	AOS display/Ignition
F45	Sunroof
F46	Body control module 7
F47	CGM
F48	—
F49	Heated steering wheel
F50	Fuel system control module/Ignition
F51	Exhaust valve
F52	A/C clutch
F53	—
F54	Coolant pump
F55	—
F56	—
F57	Engine control module/Ignition
F58	Transmission control module/Ignition
F59	—
F60	Transmission control module battery
F61	MAF/O2 sensor

F62	Ignition coils – odd
F63	Non-walk/O2 sensor
F64	Ignition coils – even
F65	Ignition coils – odd
F66	Engine control module 1
F67	Engine control module 2
F68	—
F69	—
F70	—
F71	—
F72	—
F73	—
F74	—
F75	—
F76	—
F77	—
Relays	Usage
K1	—
K2	Run/Crank
K3	—
K4	Vacuum pump
K5	—
K6	Coolant pump
K7	Engine control module
K8	A/C control
K9	—
K10	Starter

Rear Compartment Fuse Block

The rear compartment fuse block is on the right side under the trunk load floor.

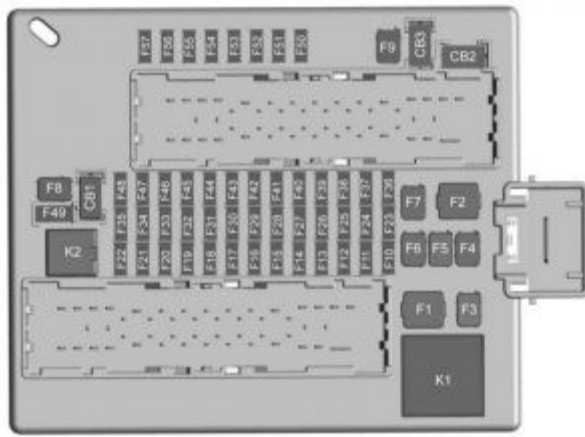

Chevrolet Camaro – fuse box – rear compartment

Fuses	Usage
F1	Rear defogger
F2	Front HVAC
F3	Electric parking brake
F4	—
F5	—
F6	Rear drive control module
F7	Right window 1
F8	—
F9	Left window 1
F10	Heated mirror 1
F11	—
F12	Heated steering wheel
F13	—
F14	HVAC control
F15	—
F16	Display
F17	Camera
F18	—
F19	Front ventilated seat 1
F20	Reverse lamps
F21	—
F22	—
F23	Body control module 1
F24	—
F25	—
F26	—
F27	RGB lights
F28	Passive entry/Passive start battery 1

F29	Data link connector
F30	Canister vent
F31	Memory seat module folding top
F32	Memory seat module
F33	Wireless charger
F34	Engine control module battery
F35	Fuel pump/Fuel system control module
F36	—
F37	Electric steering column lock
F38	Mirror window module
F39	Rear closure
F40	—
F41	Battery regulated voltage control
F42	SADS
F43	—
F44	Folding top solenoid
F45	Amplifier
F46	FPPM 22
F47	Shunt
F48	—
F49	Steering wheel
F50	Interior rearview mirror
F51	Camera module
F52	Rear parking assist
F53	Electronic limited-slip differential
F54	Side blind zone alert
F55	Radio controls
F56	Theft deterrent/Universal remote system
F57	—

Relays	Usage
K1	Rear defogger
K2	—

Circuit Breaker	Usage
CB1	—
CB2	Retained accessory power
CB3	—