





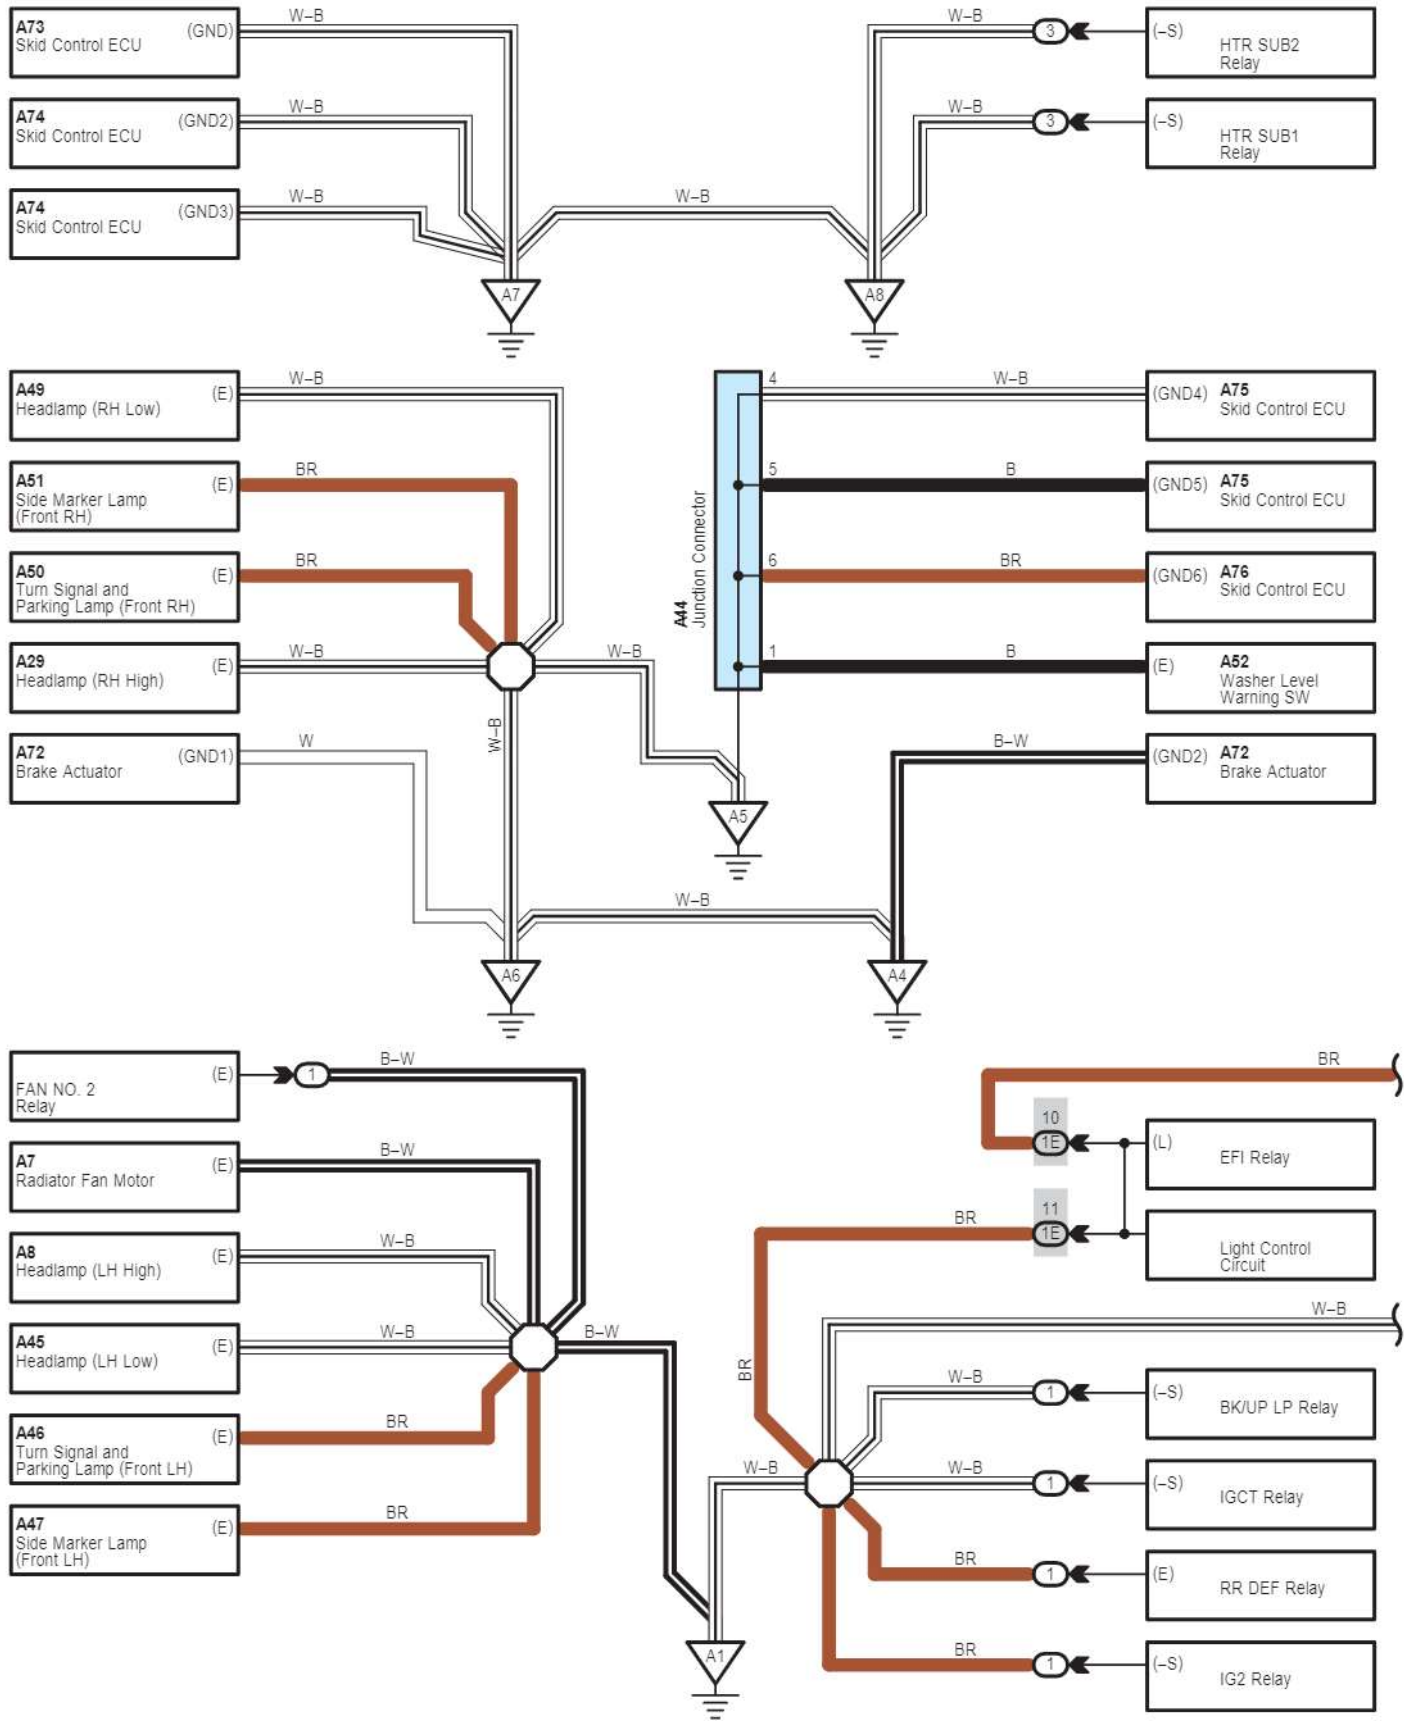

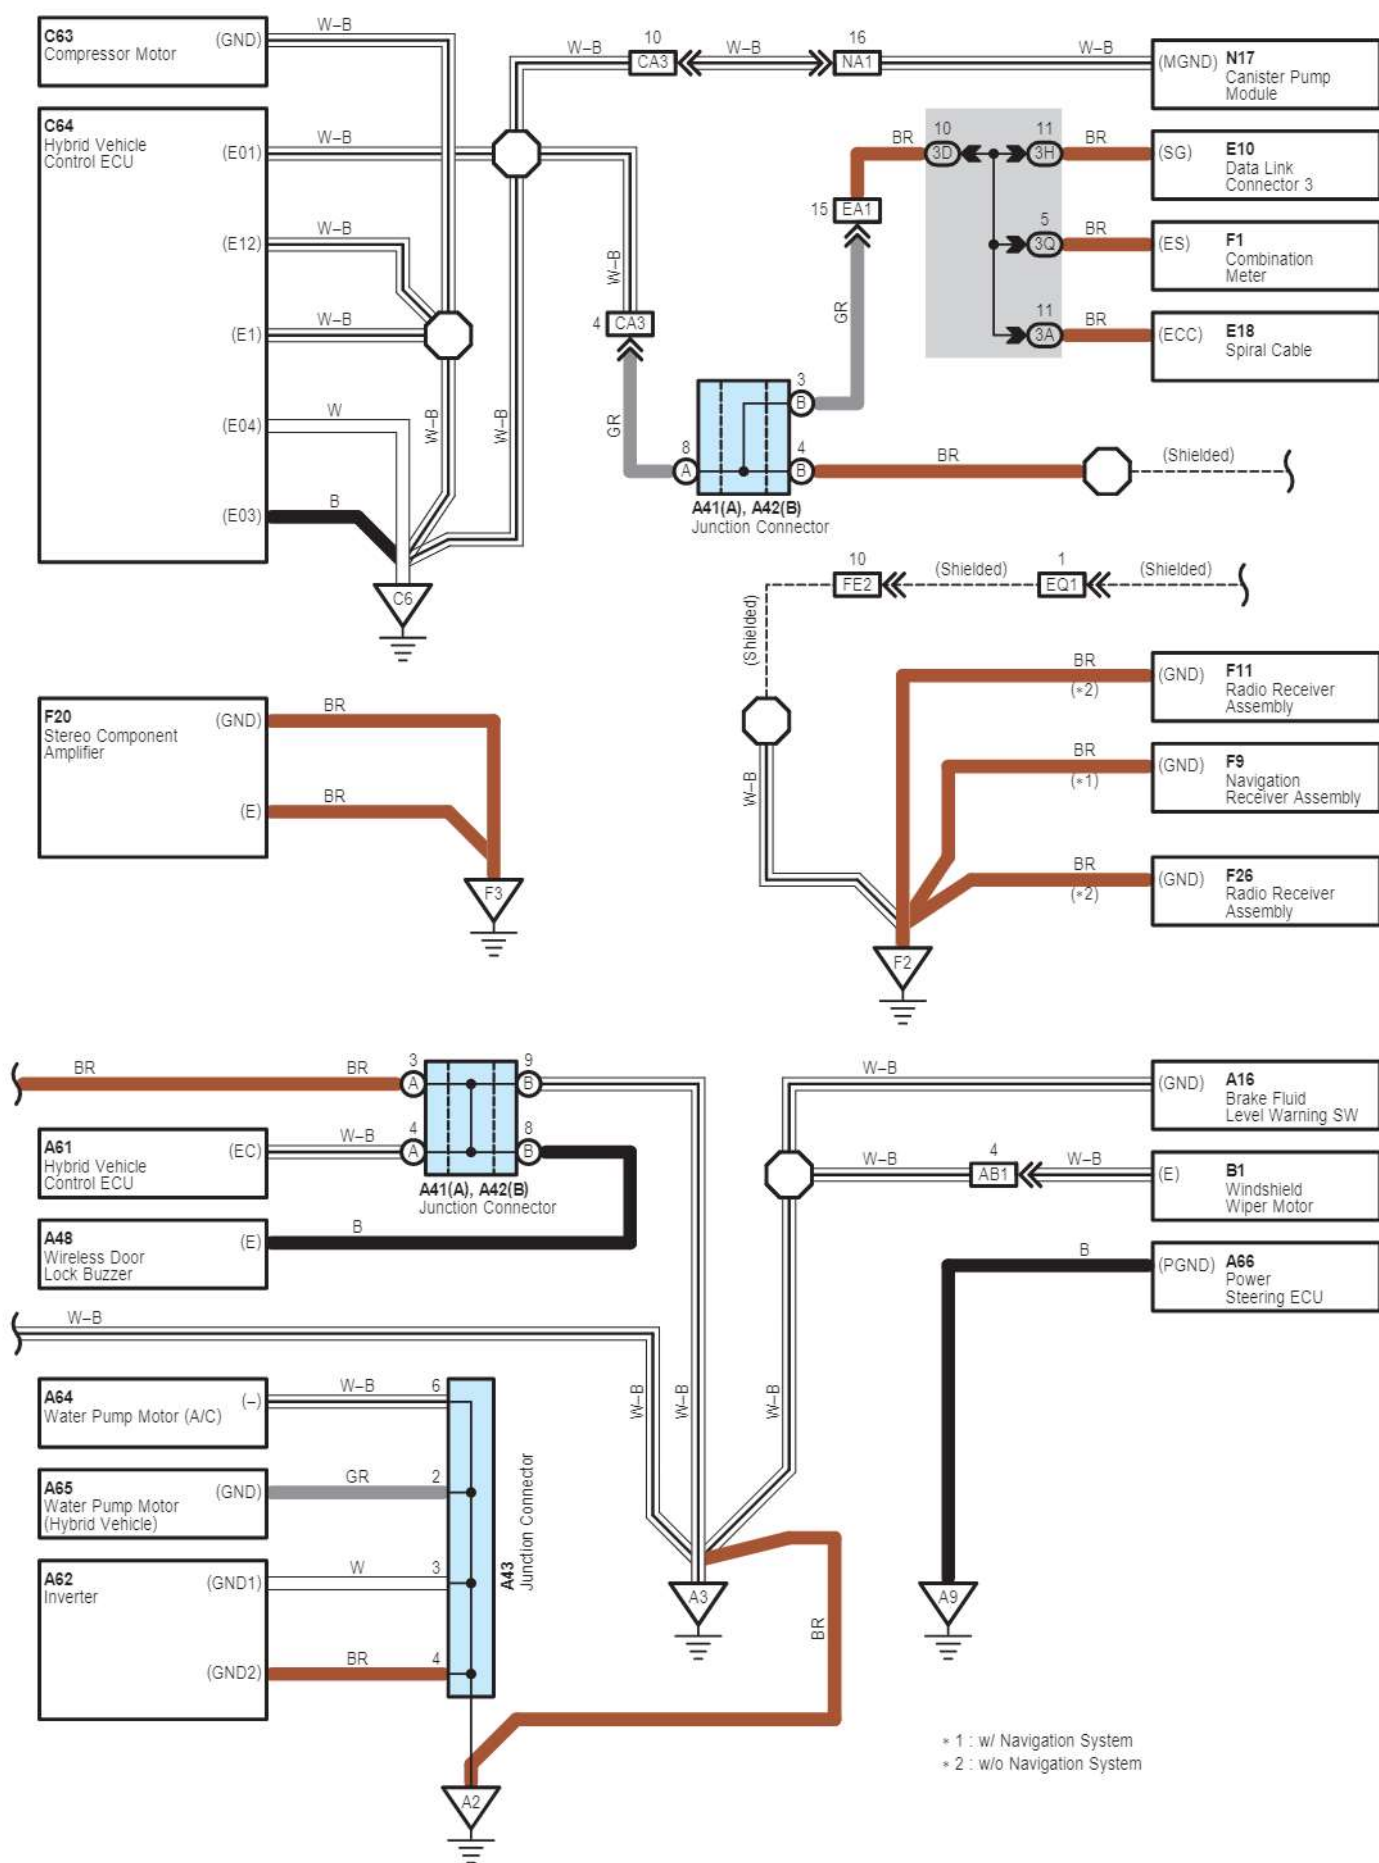



I GROUND POINT

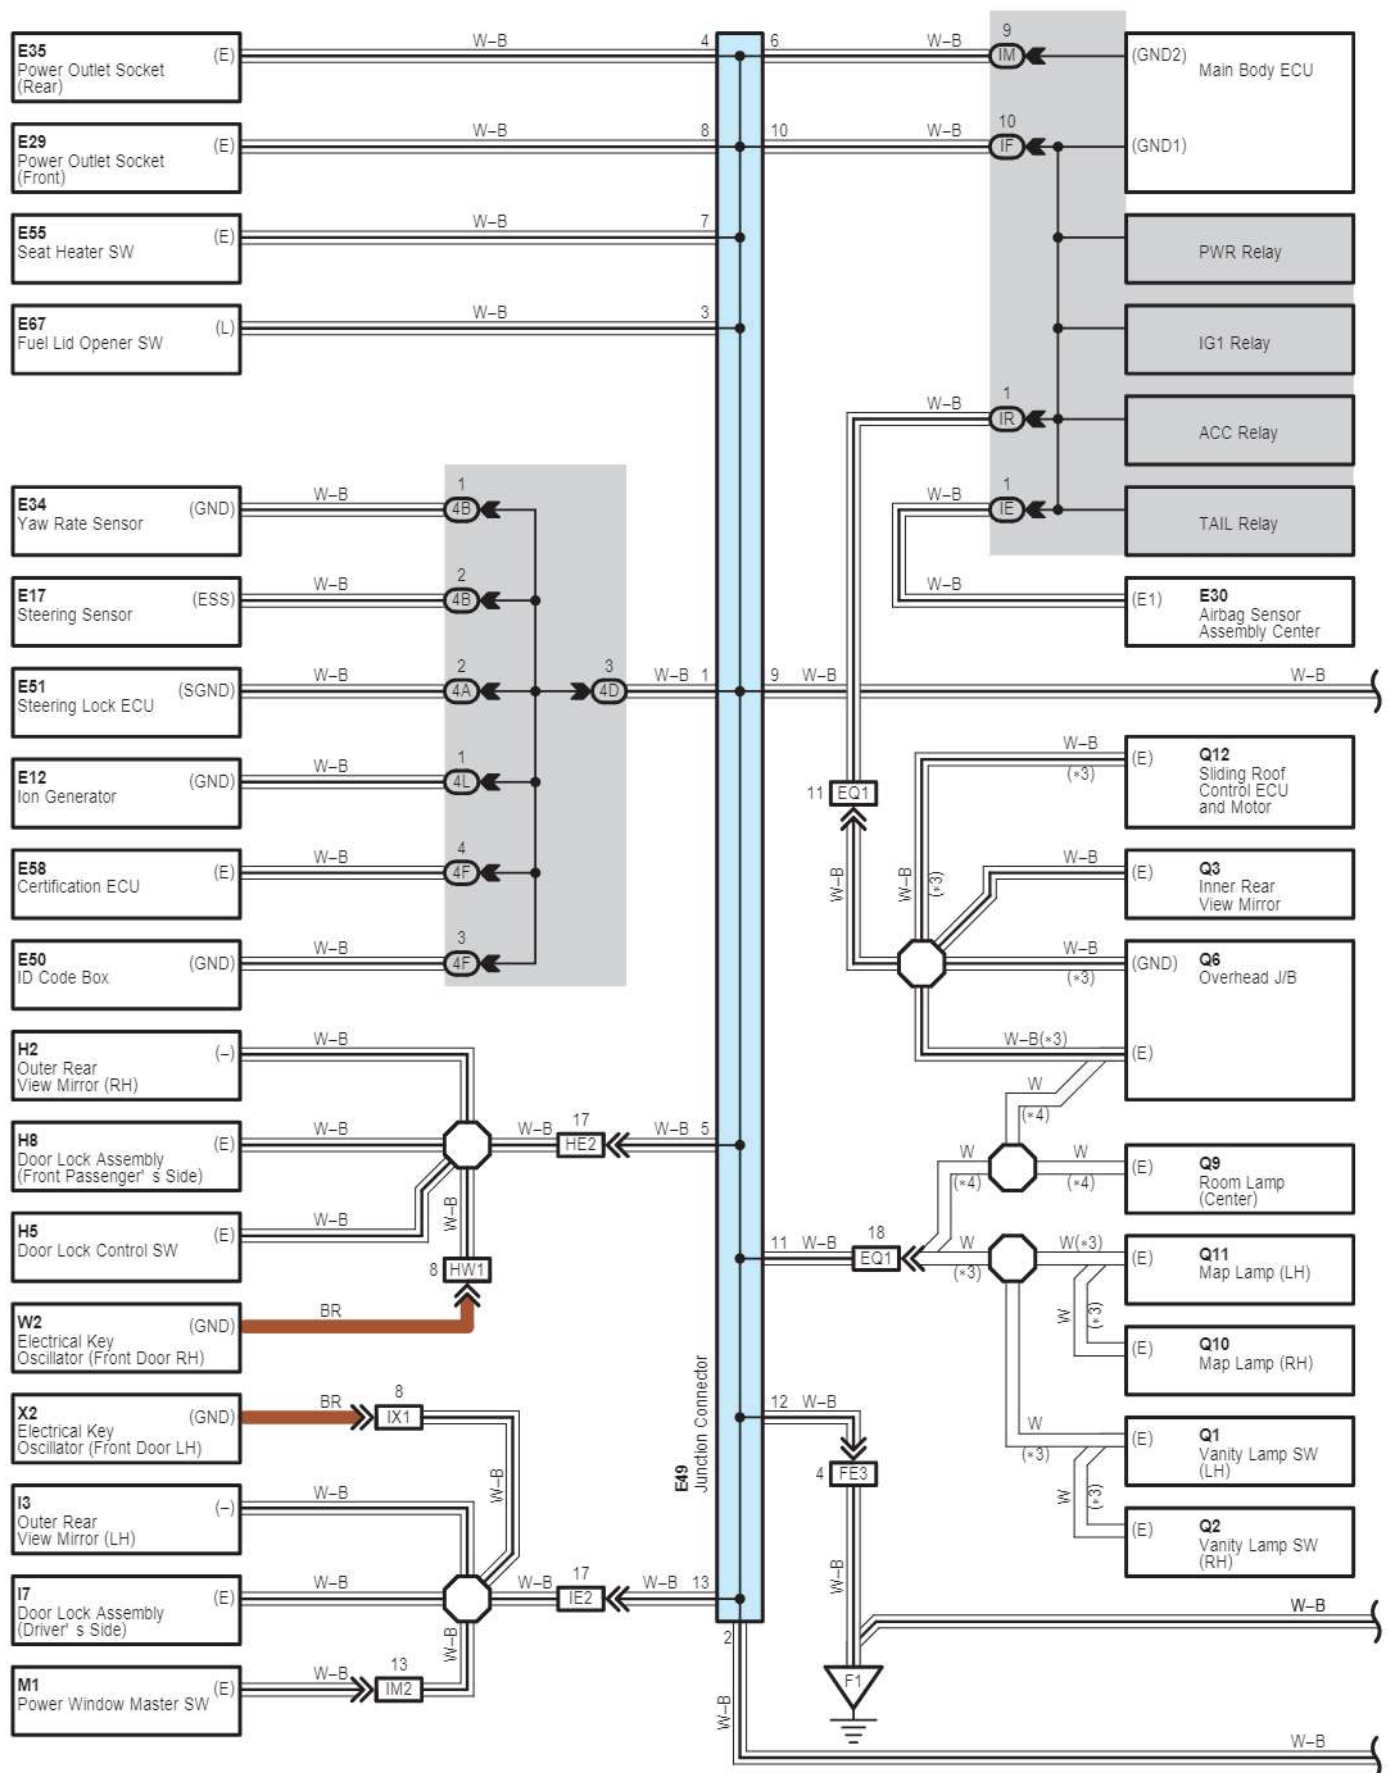

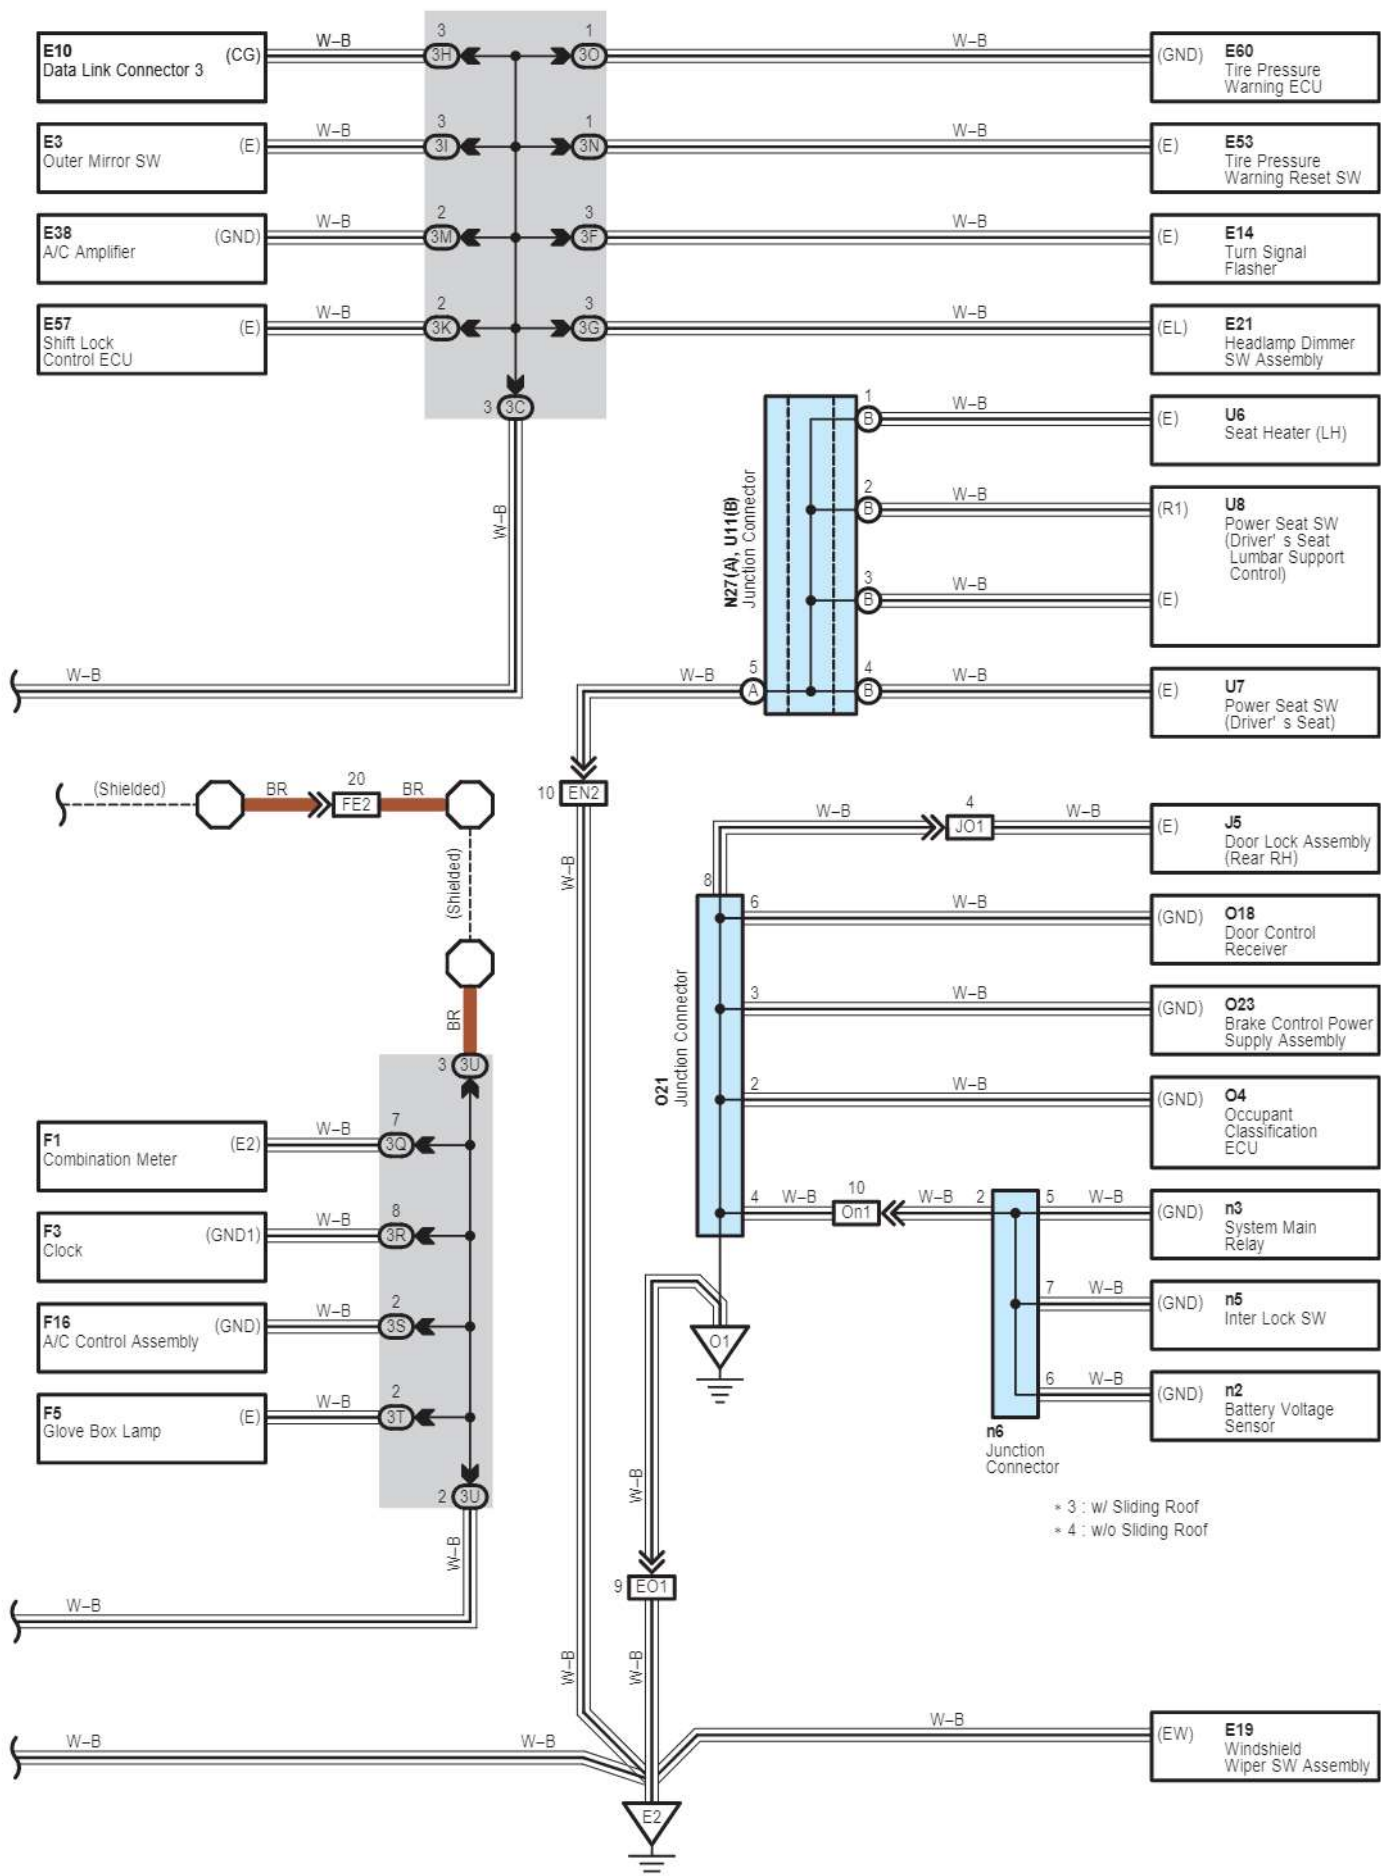

I GROUND POINT

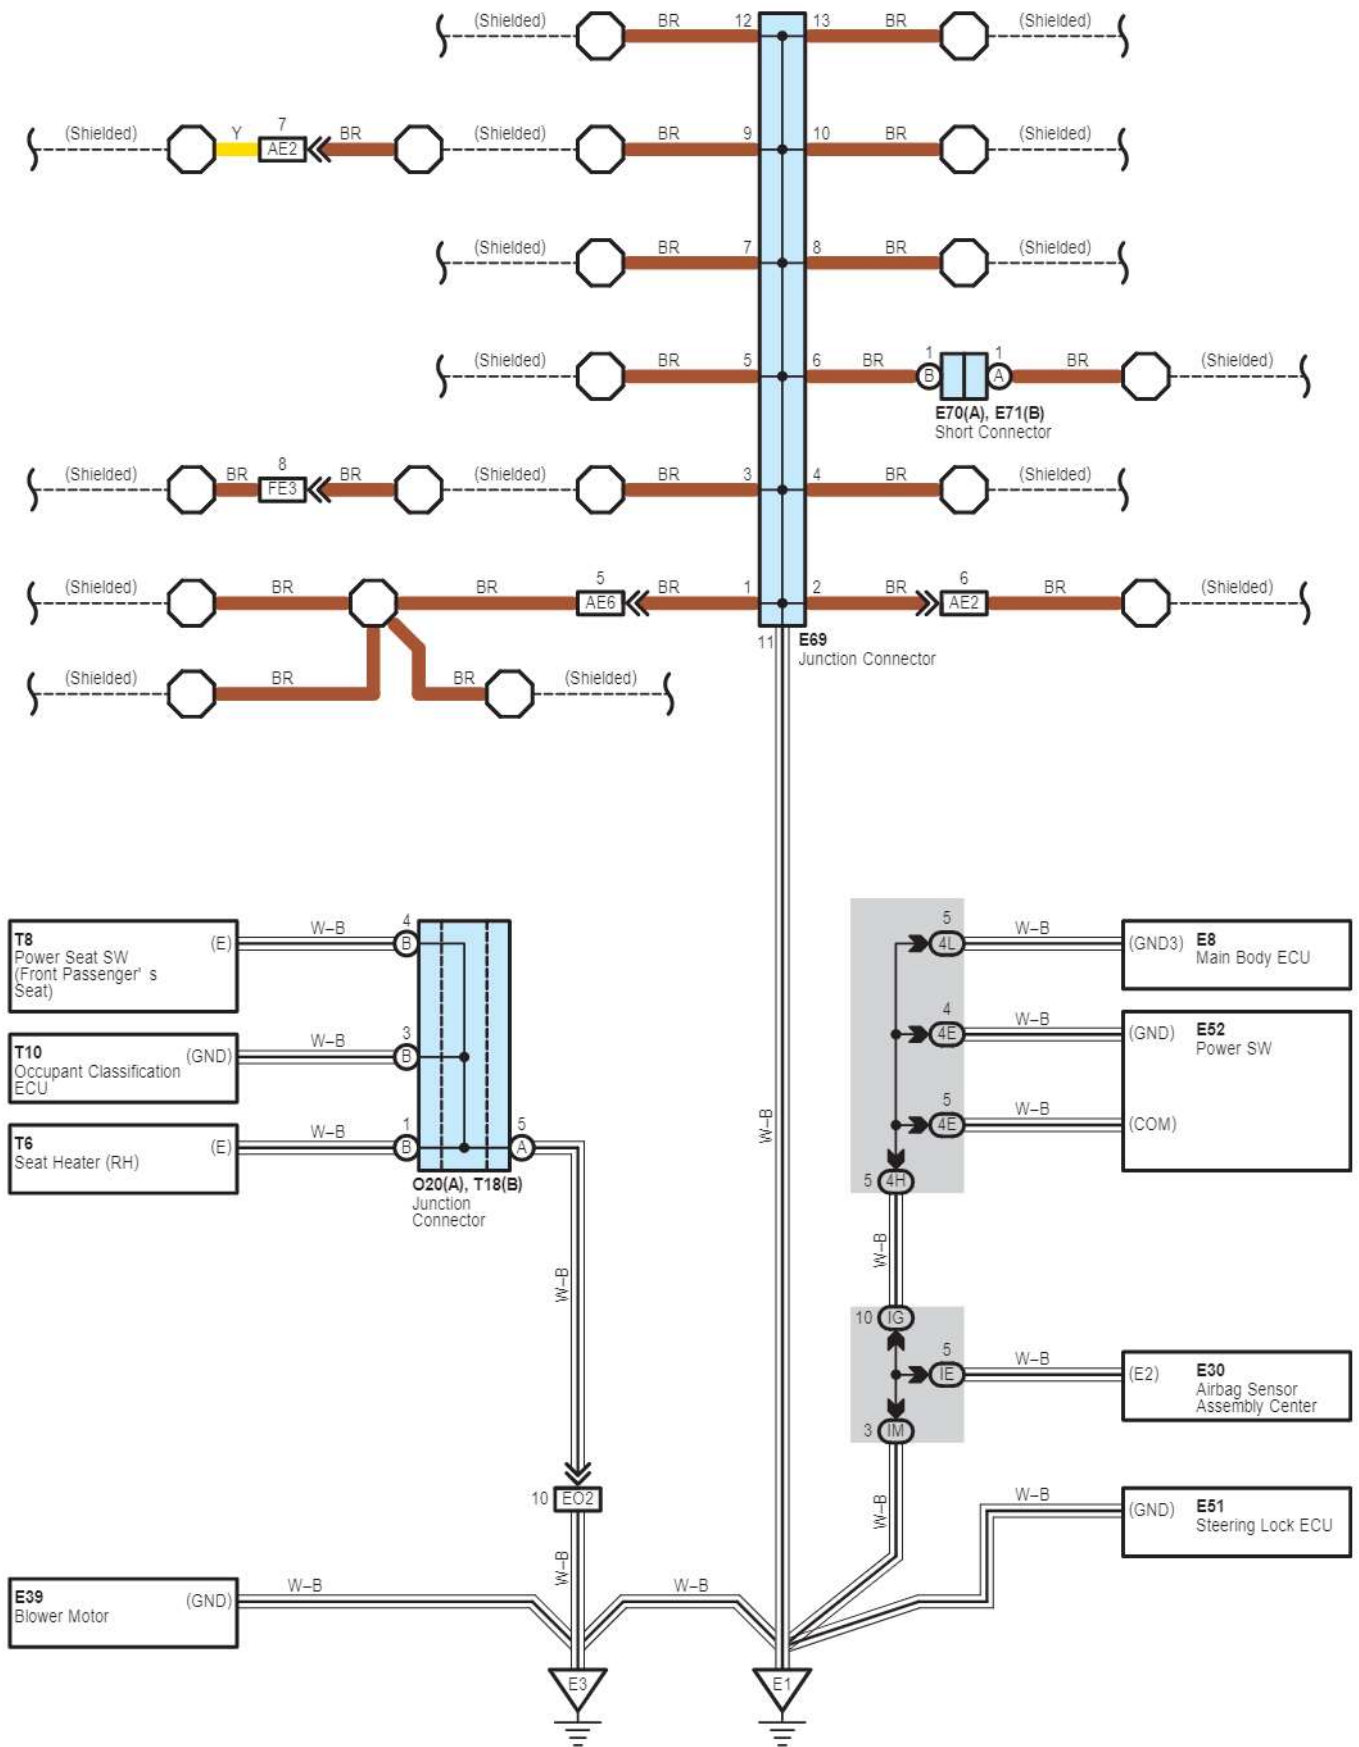

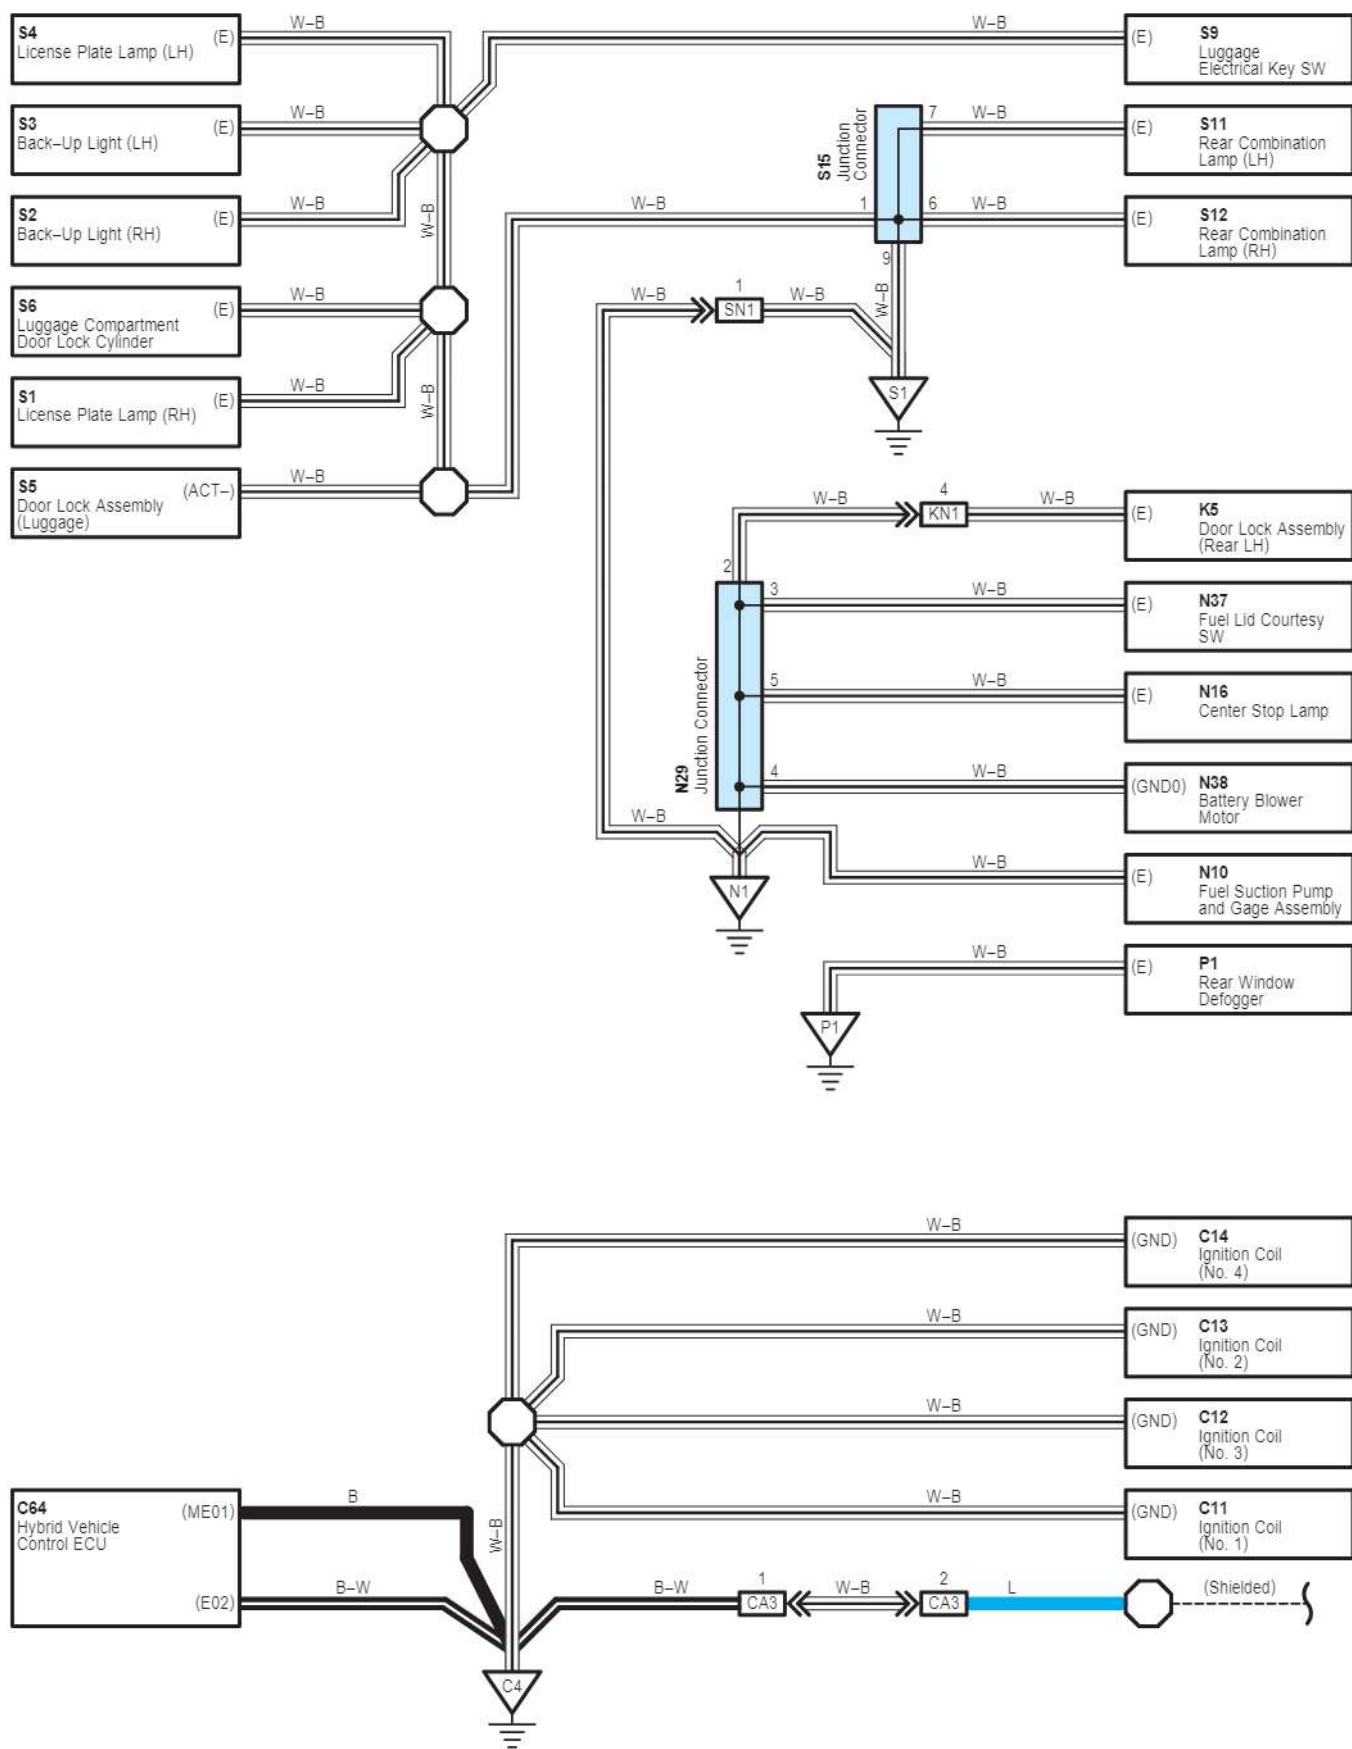

I GROUND POINT

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A41	A 55	E70	A 53	S15	57
A42	B 55	E71	B 53	T18	B 60 (*1)
A43	50	N27	A 60 (*1)	U11	B 60 (*1)
A44	50	N29	56	n6	58
E49	53	O20	A 60 (*1)		
E69	53	O21	56		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	23	Engine Room R/B (Engine Compartment Left)
3	22	Engine Room R/B No.3 (Engine Compartment Right)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	25	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
3A	36	Instrument Panel Wire and J/B No.3 (Behind the Combination Meter)
3C		
3D		
3F		
3G		
3H		
3I		
3K		
3M		
3N		
3O		
3Q	36	Instrument Panel No.2 Wire and J/B No.3 (Behind the Combination Meter)
3R		
3S		
3T		
3U		
4A	42	Instrument Panel Wire and J/B No.4 (Instrument Panel Brace Center)
4B		
4D		
4E		
4F		
4H		
4L		
IE	30	Instrument Panel Wire and Instrument Panel J/B (Cowl Side Left)
IF		
IG	31	
IM	30	
IR		

* 1 : w/ Power Seat * 2 : w/o Power Seat

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AB1	62	Engine Room Main Wire and Engine Room No.2 Wire (Near the Windshield Wiper Motor)
AE2	63	Engine Room Main Wire and Instrument Panel Wire (Right Side of the Instrument Panel J/B)
AE6	63	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Right)
CA3	62	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B and Engine Room J/B)
EA1	63	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)
EN2	63	Instrument Panel Wire and Floor Wire (Left Kick Panel)
EO1	63	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
EO2		
EQ1	63	Instrument Panel Wire and Roof Wire (Lower Part of Front Pillar LH)
FE2	63	Instrument Panel No.2 Wire and Instrument Panel Wire (Instrument Panel Center)
FE3		
HE2	63	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
HW1	64	Front Door RH Wire and Electrical Key Wire Harness RH (Inside of the Front Door RH)
IE2	63	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IM2	64	Front Door LH Wire and Front Door LH No.2 Wire (Inside of the Front Door LH)
IX1	64	Front Door LH Wire and Electrical Key Wire Harness LH (Inside of the Front Door LH)
JO1	64	Rear Door No.1 Wire and Floor No.2 Wire (Right Center Pillar)
KN1	64	Rear Door No.2 Wire and Floor Wire (Left Center Pillar)
NA1	63	Floor Wire and Engine Room Main Wire (Left Kick Panel)
On1	65	Floor No.2 Wire and Battery Pack Wire (Near the Hybrid Battery)
SN1	64	Luggage Room Wire and Floor Wire (Luggage Room Left)

 : Ground Points

Code	See Page	Ground Points Location
A1	63	Front Left Fender
A2		
A3	63	Left Cowl Side Panel
A4	62	Near the Brake Actuator
A5	62	Front Right Fender
A6	63	Right Cowl Side Panel
A7		
A8	62	Near the Brake Actuator
A9	62	Left Side of the Suspension Tower
C4	62	Cylinder Block
C6		
E1	63	Instrument Panel Left
E2	63	Instrument Panel Brace LH
E3	63	Instrument Panel Right
F1	63	Instrument Panel Left
F2	63	Instrument Panel Brace RH
F3	63	Under the Front Passenger's Seat
N1	64	Left Rear Quarter Panel
O1	64	Right Rear Quarter Panel
P1		
S1	64	Lower Back Panel Center