



F RELAY LOCATIONS



[Engine Compartment]

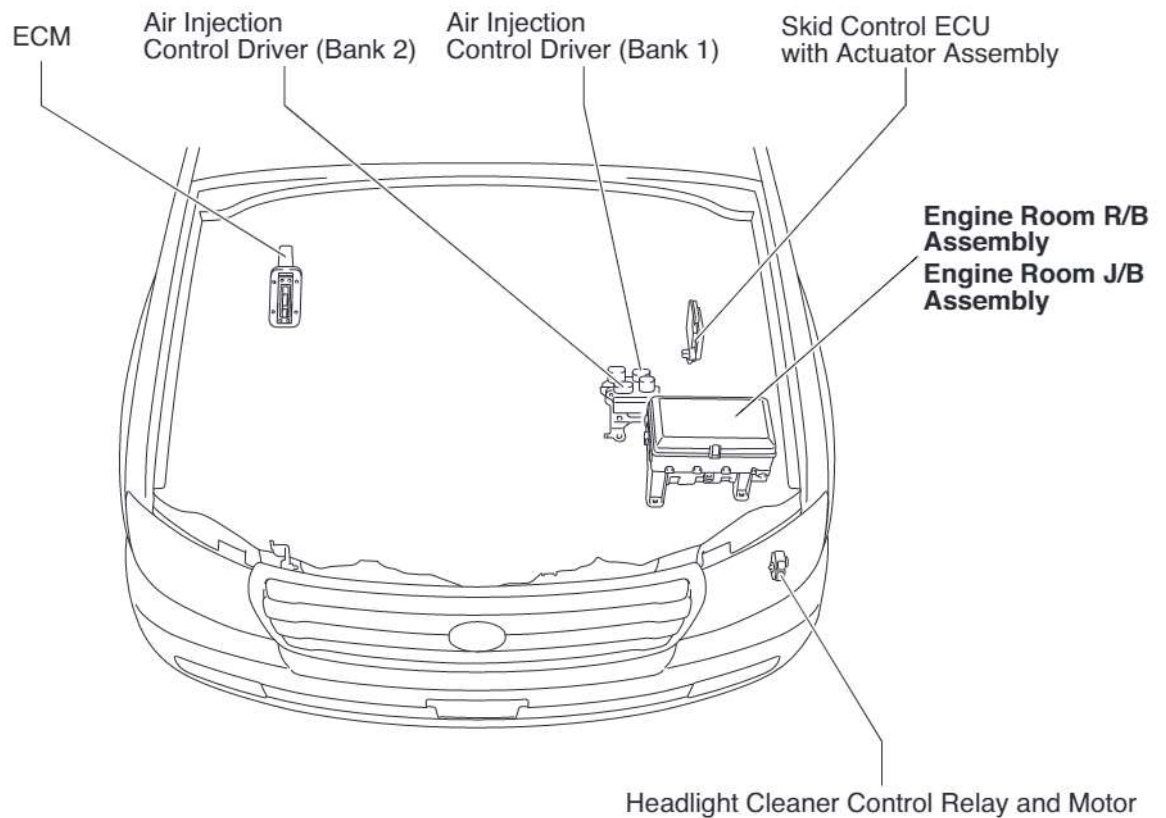

[Instrument Panel]

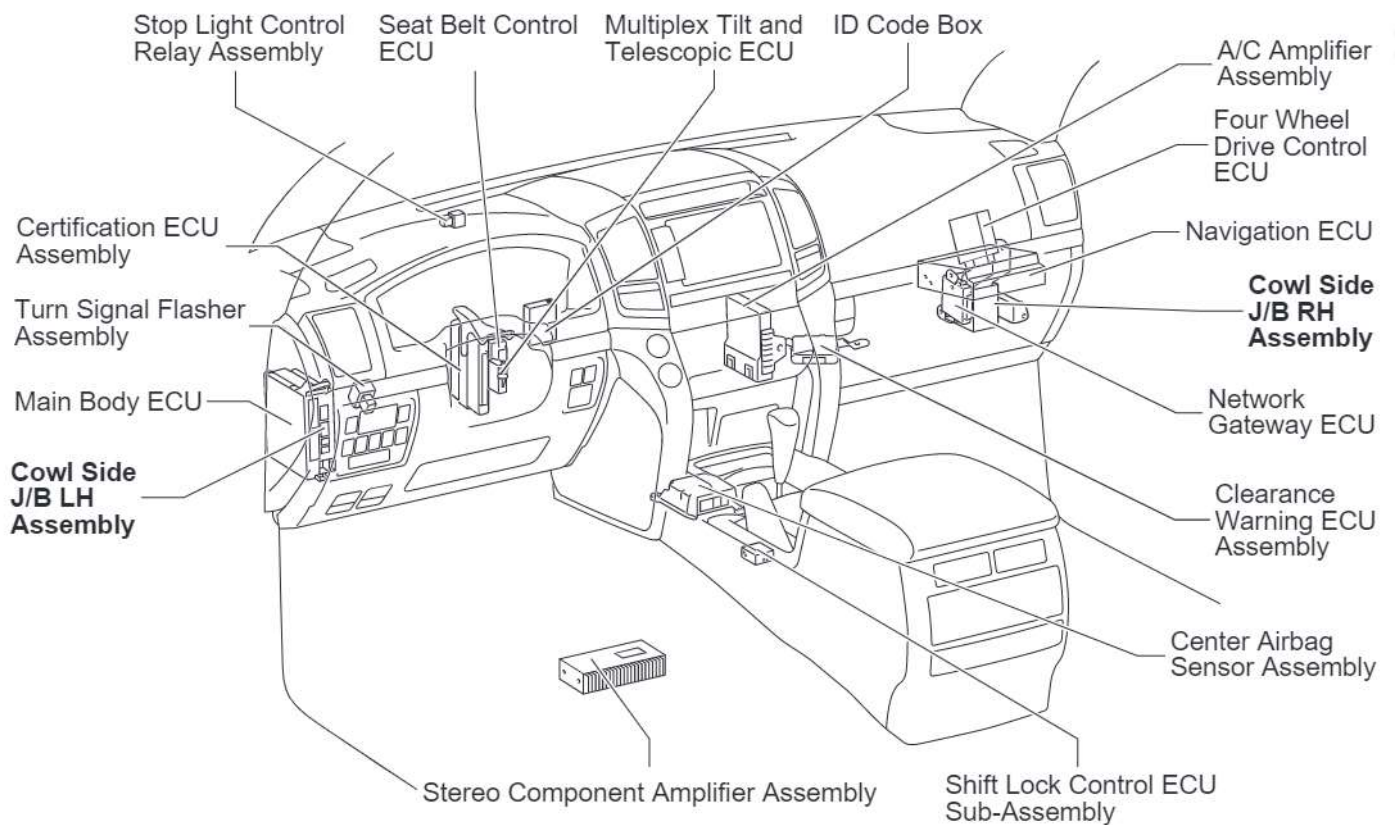

LAND CRUISER (EM0800U)

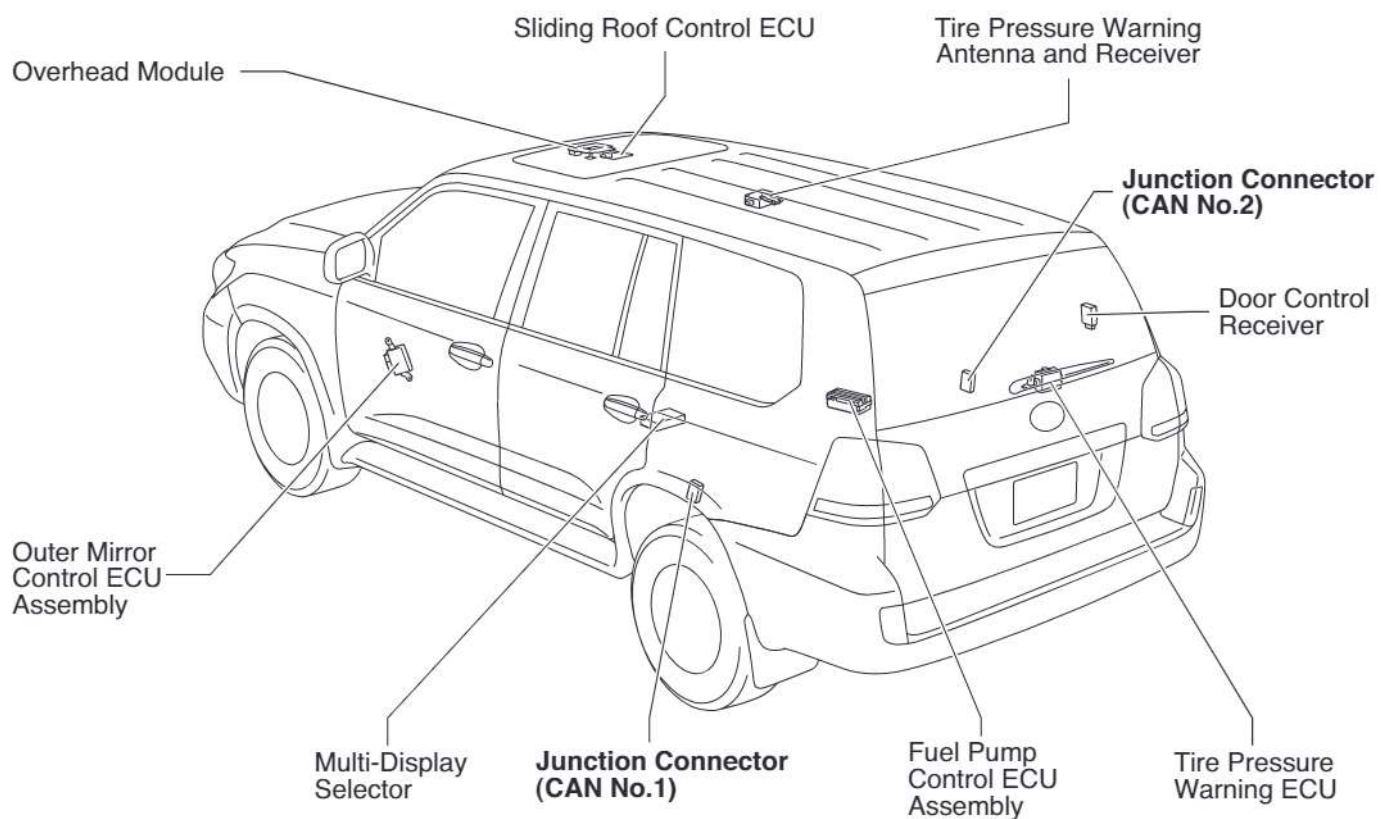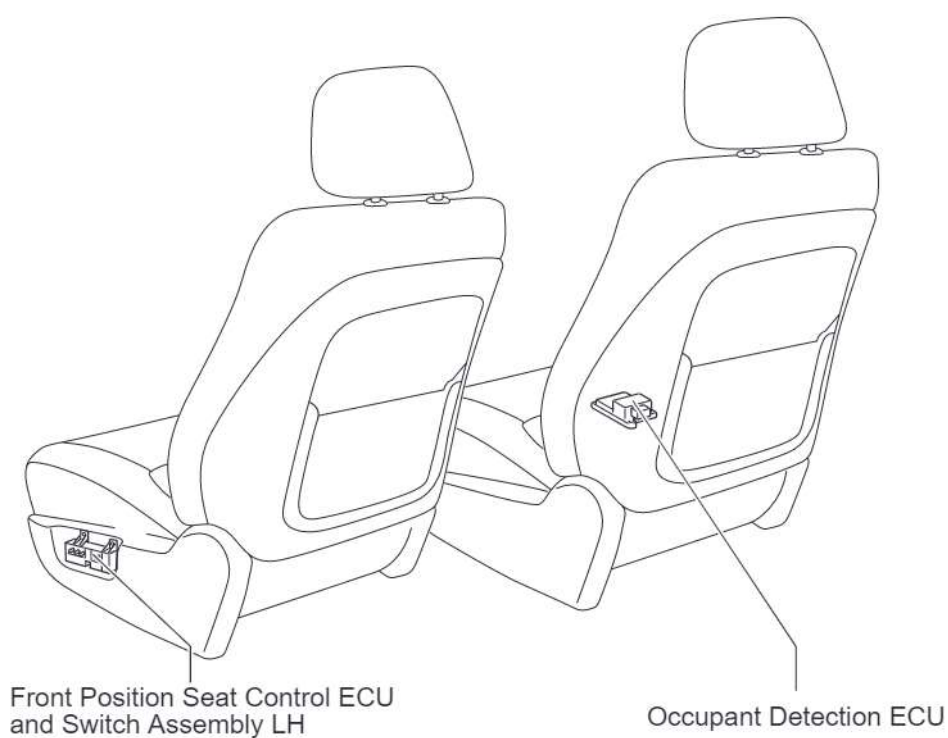
[Body]**[Front Seat]**

F RELAY LOCATIONS




: Cowl Side J/B LH Assembly

Cowl Side Left (See Page 20)

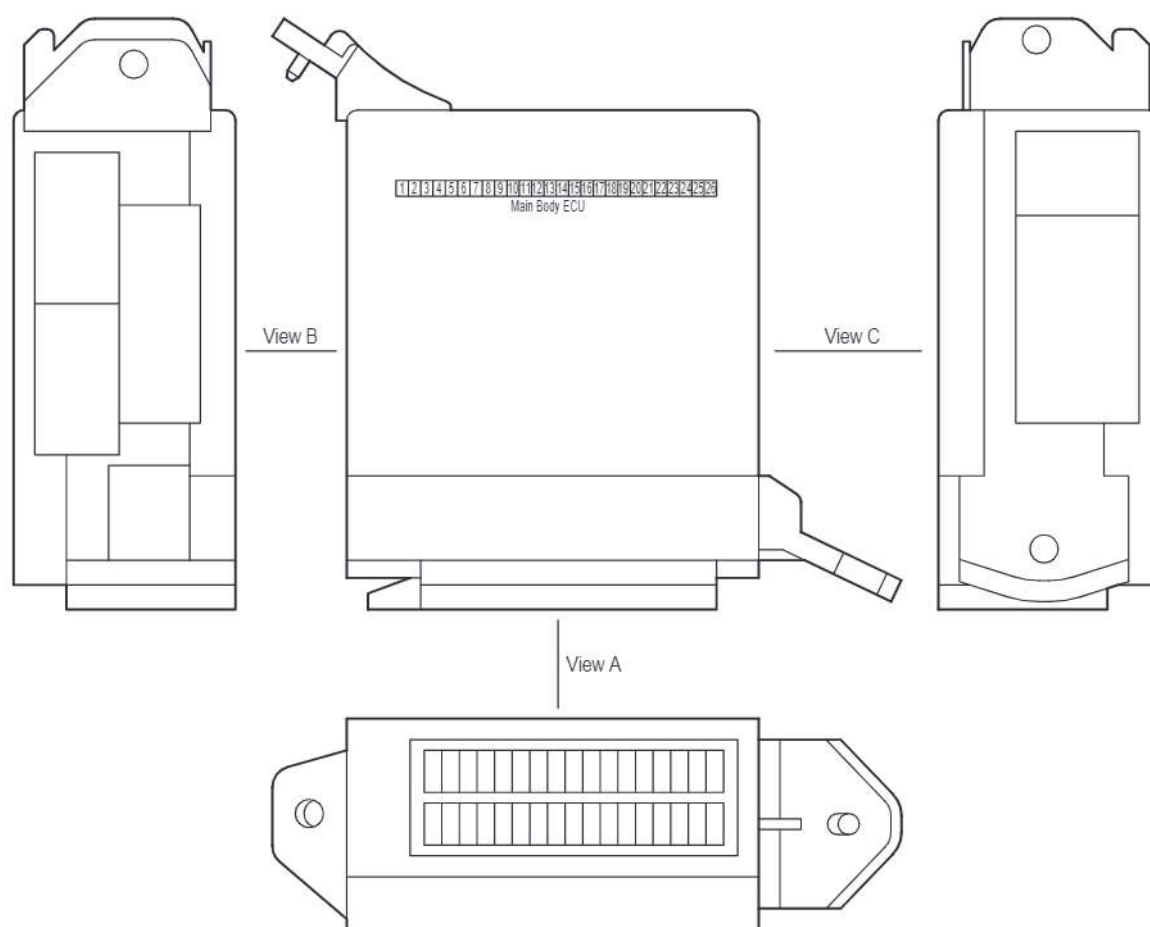

LAND CRUISER (EM0800U)


View A

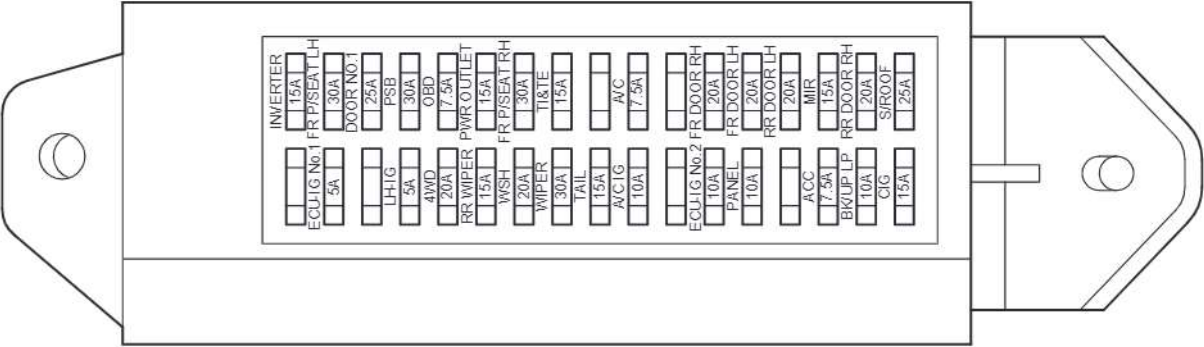


F RELAY LOCATIONS

 : Cowl Side J/B LH Assembly Cowl Side Left (See Page 20)

View B

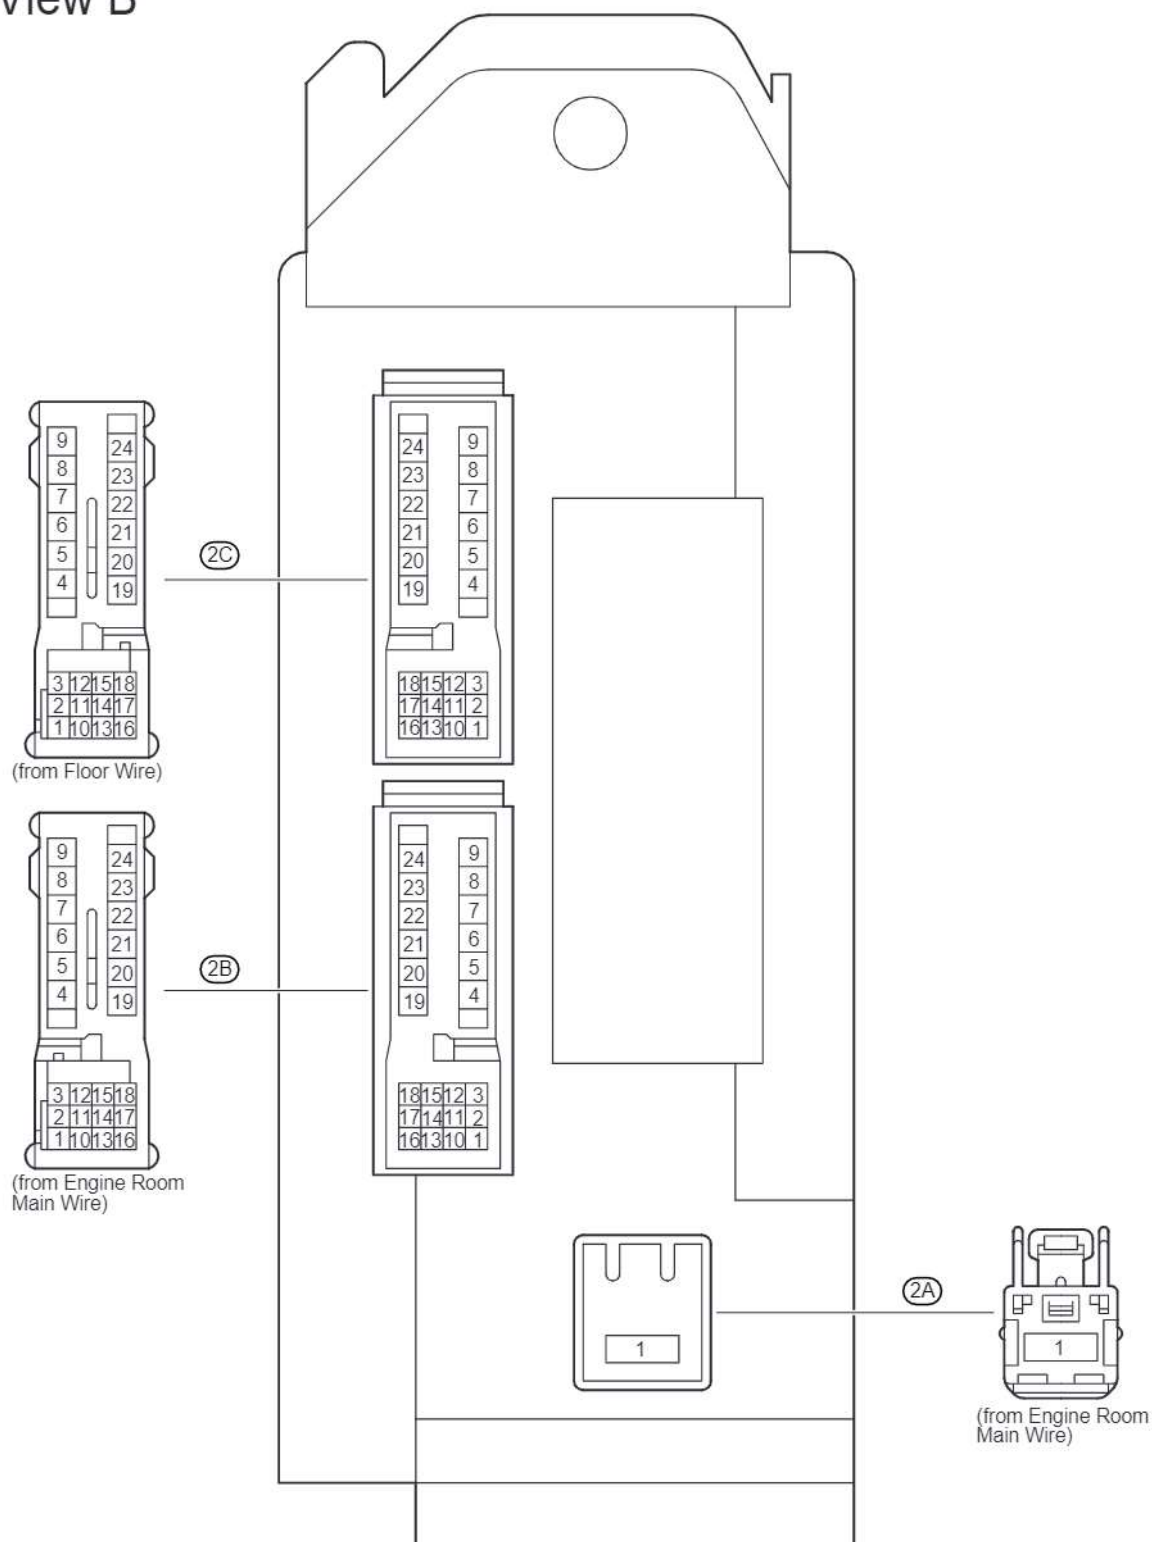


View C

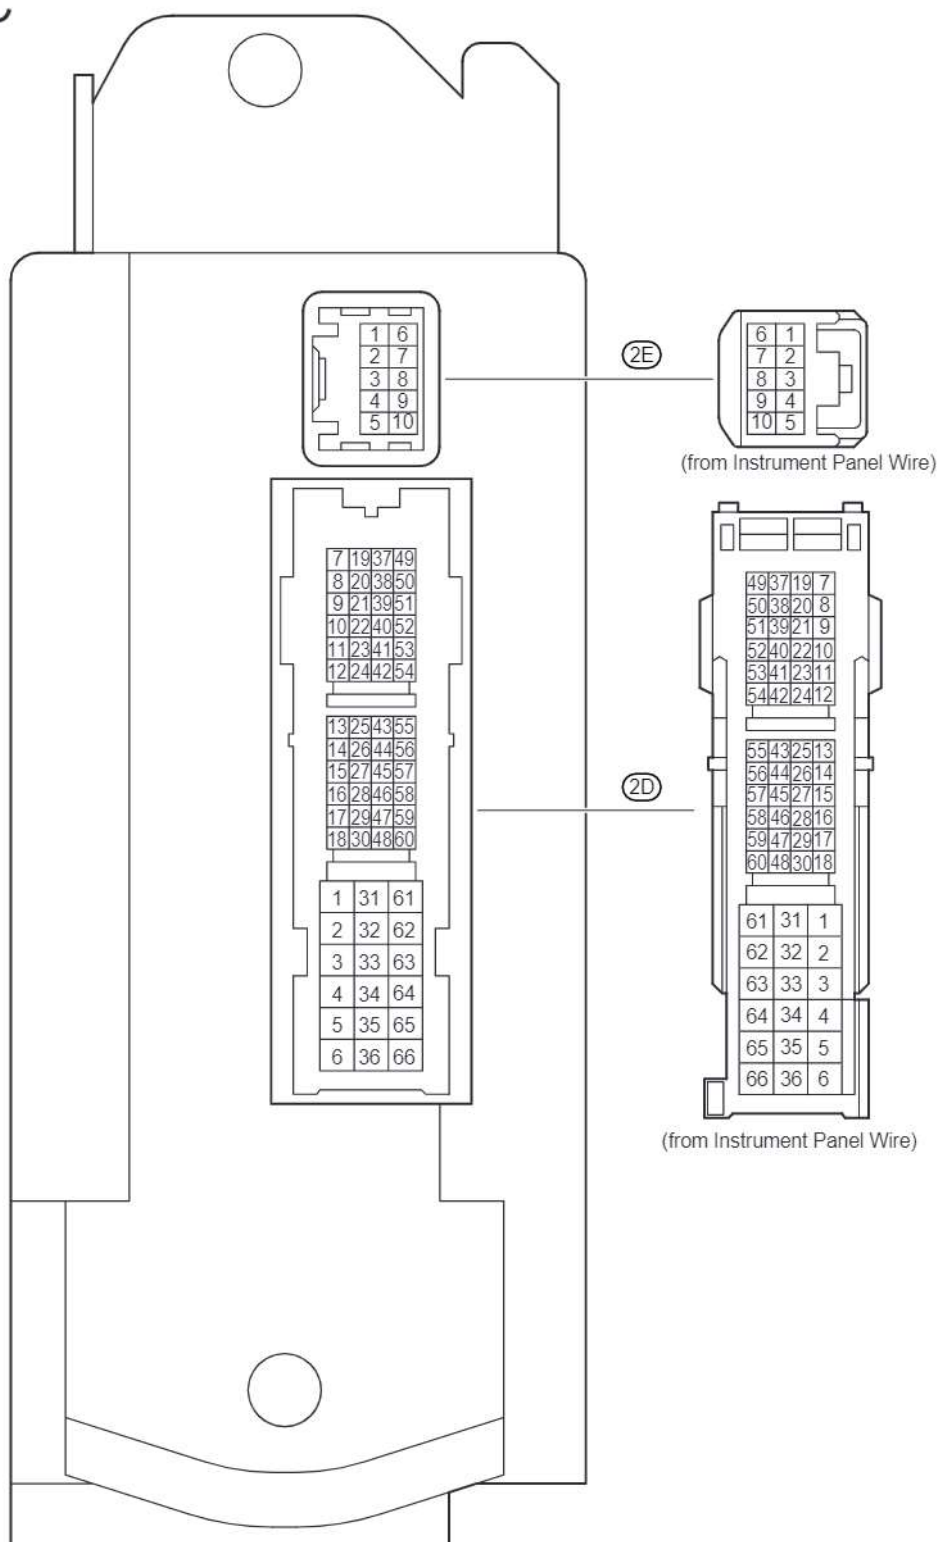


F RELAY LOCATIONS

[Cowl Side J/B LH Assembly Inner Circuit]

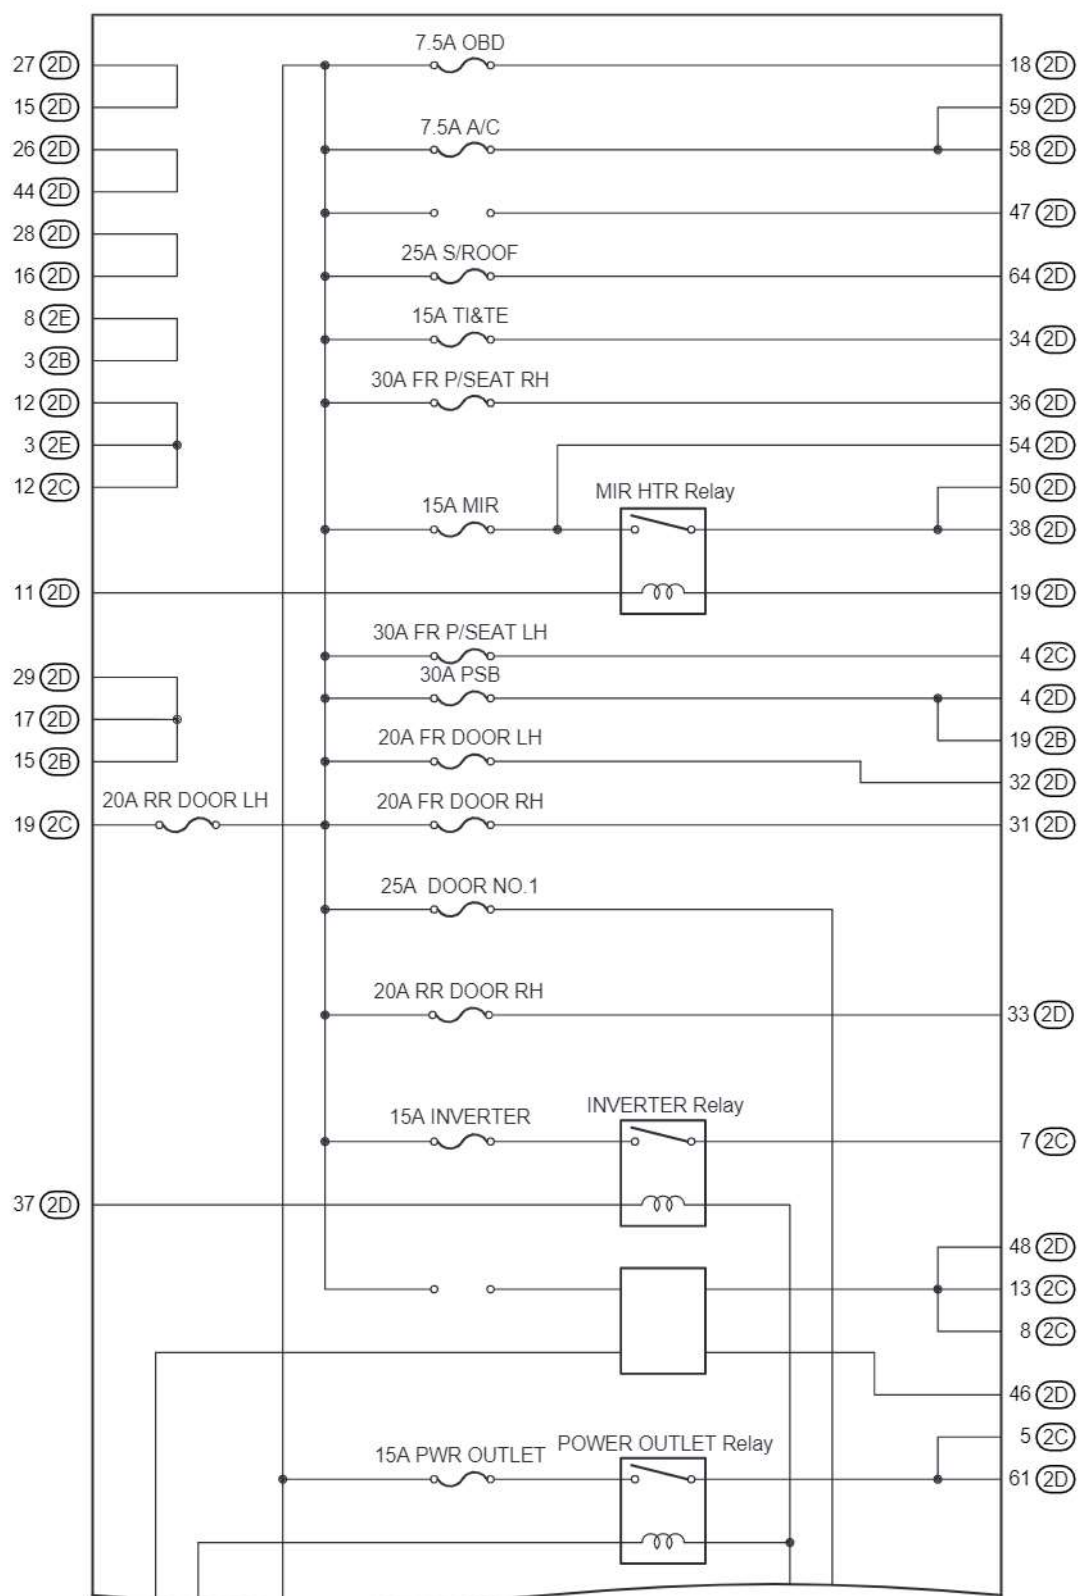


(Cont. Next Page)

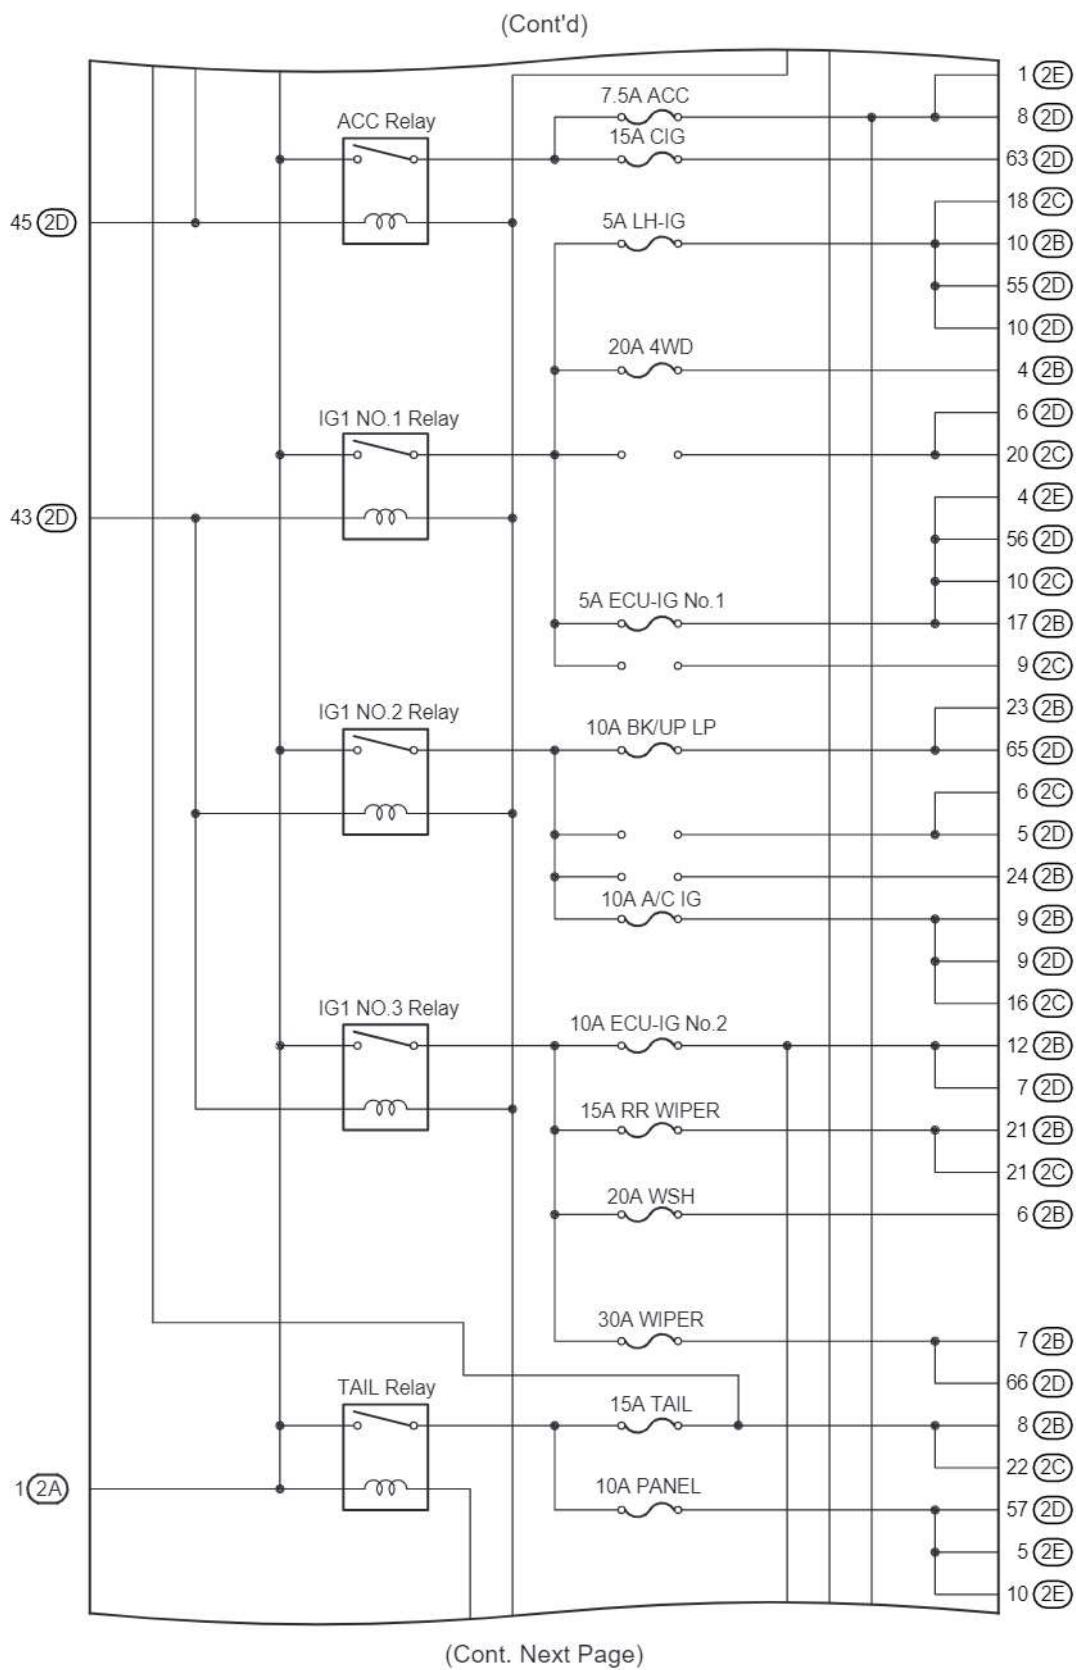

F RELAY LOCATIONS

[Cowl Side J/B LH Assembly Inner Circuit]

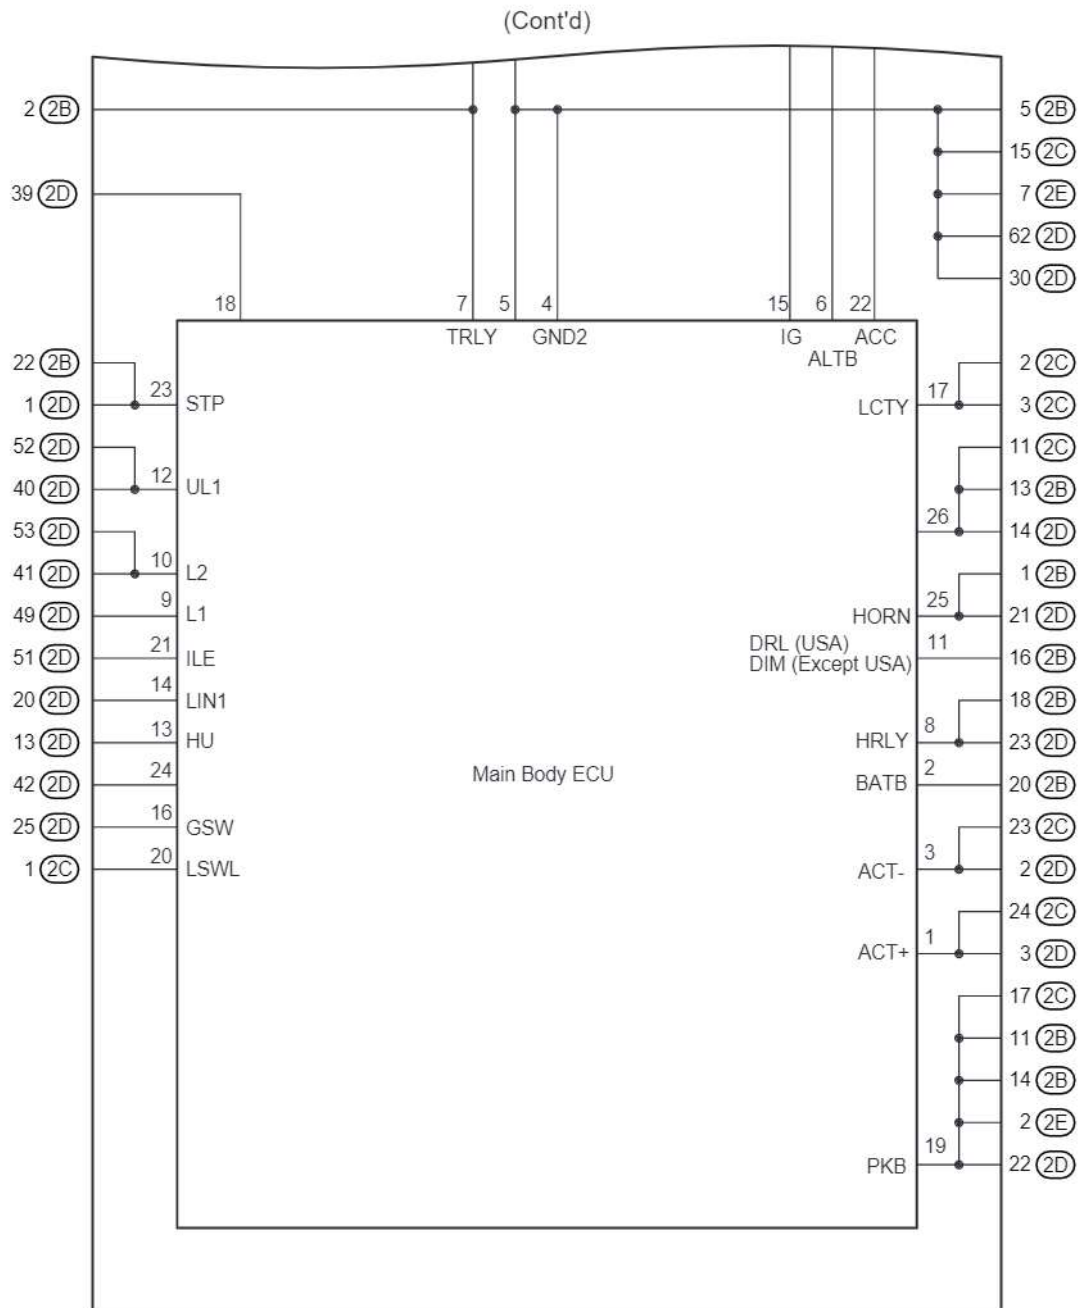


F RELAY LOCATIONS




: Cowl Side J/B RH Assembly

Cowl Side Left (See Page 20)

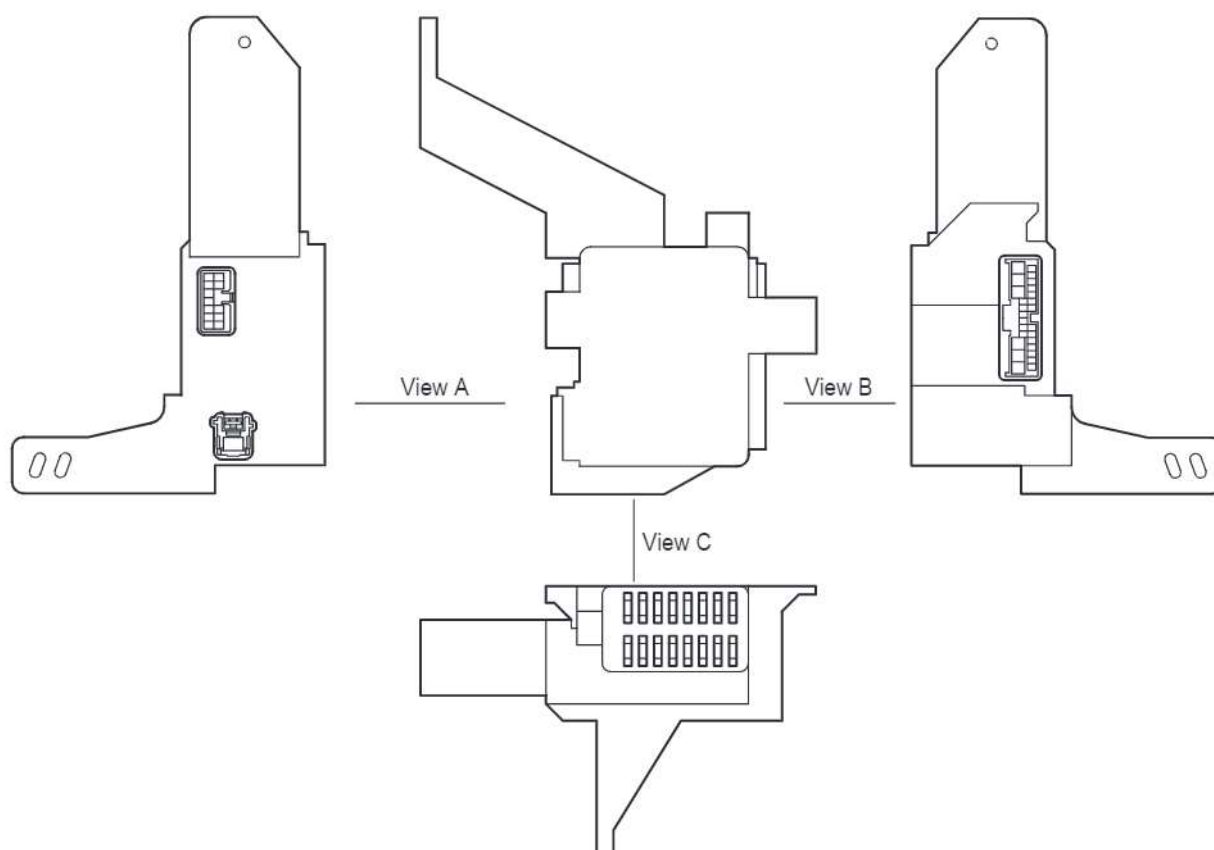


View A

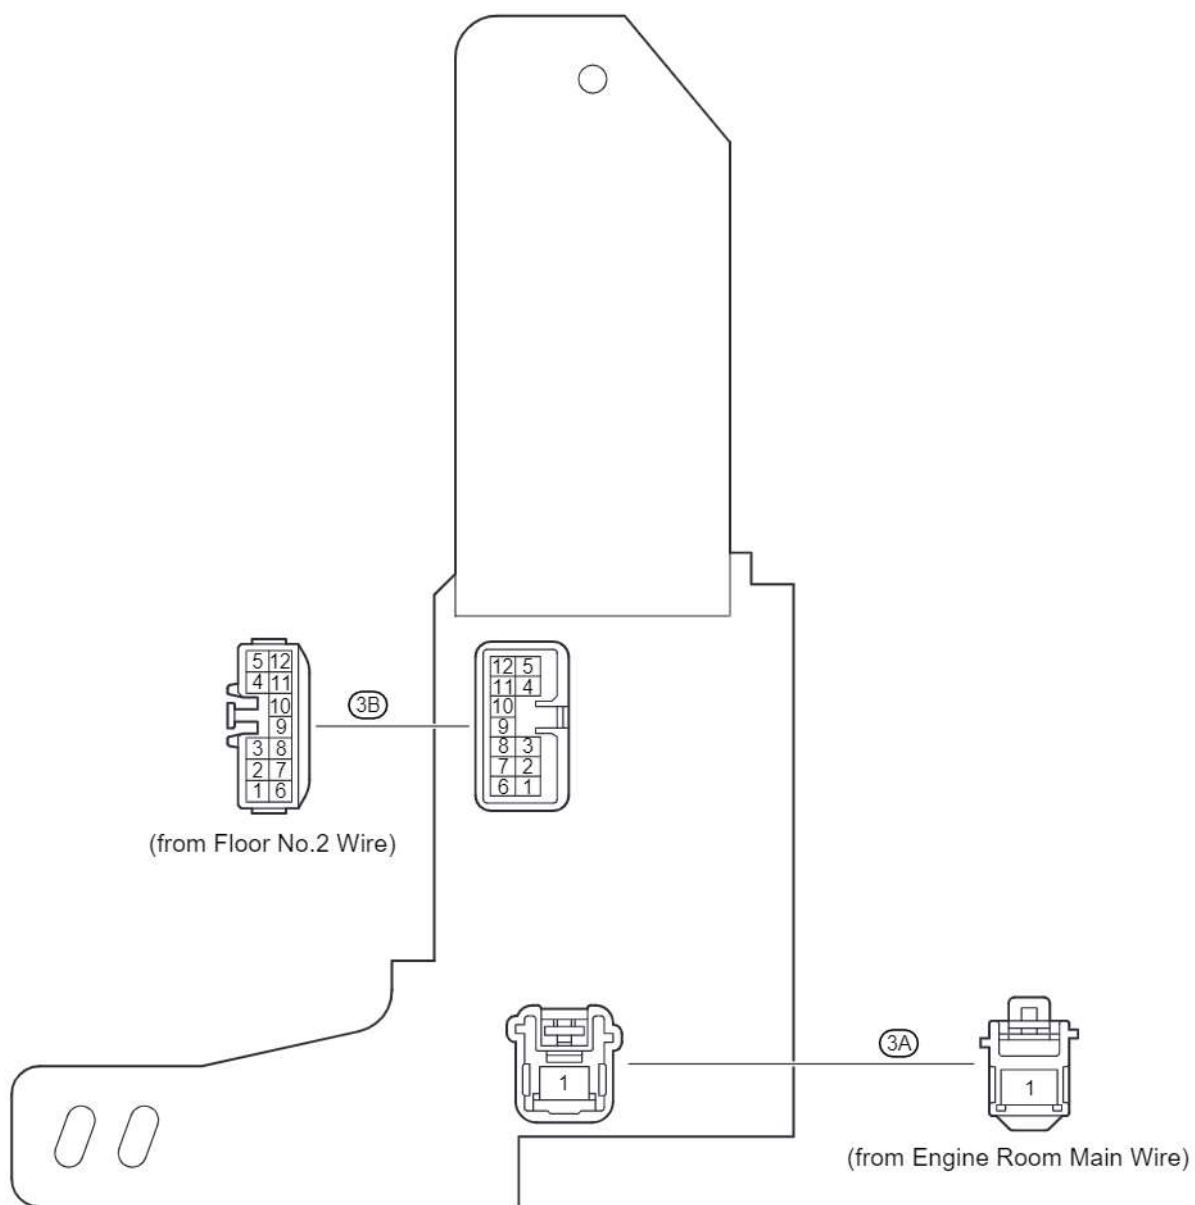


F RELAY LOCATIONS

 : Cowl Side J/B RH Assembly Cowl Side Left (See Page 20)

View B

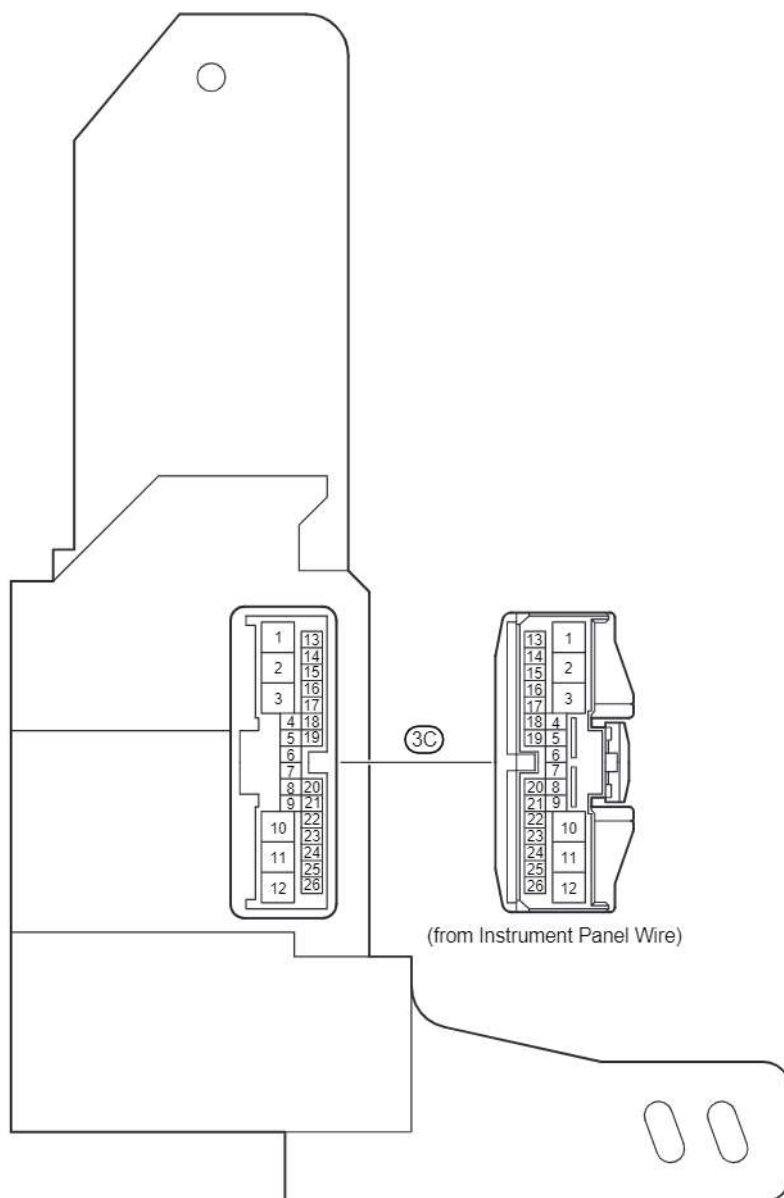


View C

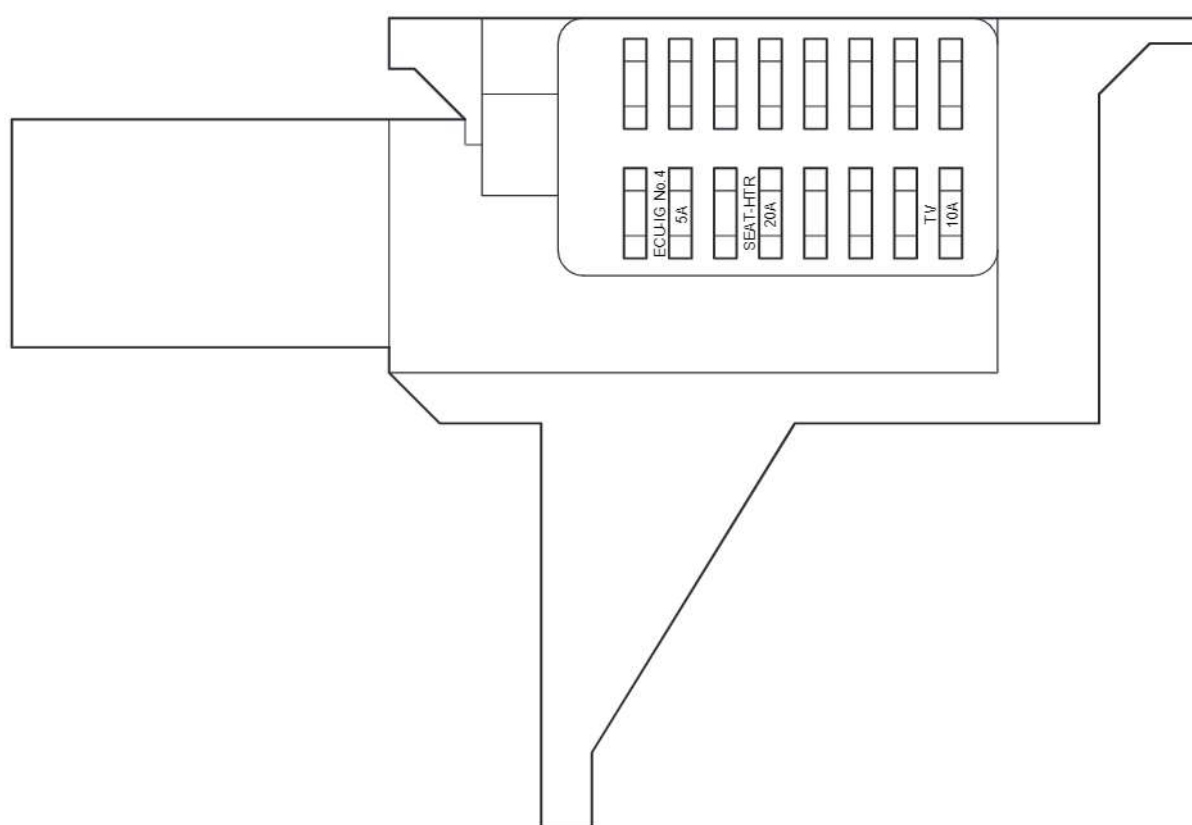

F RELAY LOCATIONS

[Cowl Side J/B RH Assembly Inner Circuit]

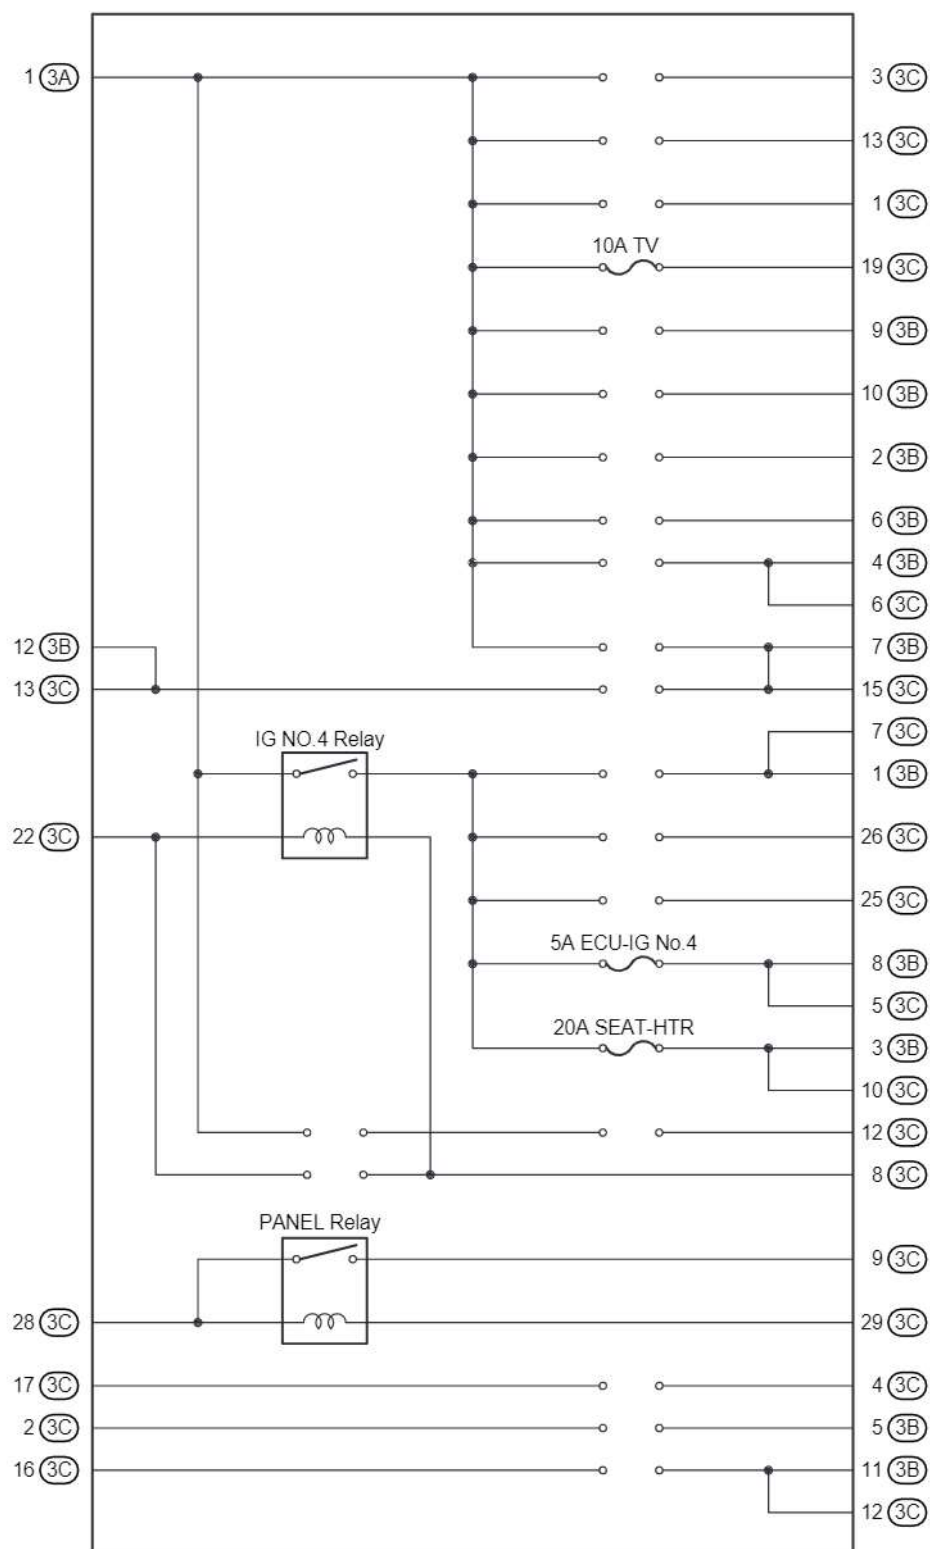


F RELAY LOCATIONS

① : Engine Room R/B Assembly


○ : Engine Room J/B Assembly

Engine Compartment Left (See Page 20)

- * 1: DEFOG Relay
- * 2: SUB BATT Relay
- * 3: TOW TAIL Relay
- * 4: IG1 NO.5 Relay
- * 5: EFI NO.2 Relay
- * 6: DRL NO.3 or RR A/C Relay
- * 7: ST Relay
- * 8: C/OPN Relay
- * 9: SECURITY HORN Relay
- * 10: FR FOG Relay
- * 11: PTC HTR1 Relay
- * 12: ST CUT Relay
- * 13: CDS FAN Relay
- * 14: PTC HTR2 Relay
- * 15: BRK LP Relay
- * 16: MG CLT Relay
- * 17: DEICER Relay
- * 18: PTC HTR3 Relay
- * 19: DRL NO.4 Relay
- * 20: HEAD HI Relay
- * 21: HEAD LO Relay
- * 23: 50A HTR (for High Current)
- * 25: 150A LH-J/B (for High Current)
- * 26: 180A ALT (for High Current)
- * 27: 50A A/PUMP NO.1 (for High Current)
- * 28: 50A A/PUMP NO.2 (for High Current)
- * 29: 40A MAIN (for High Current)

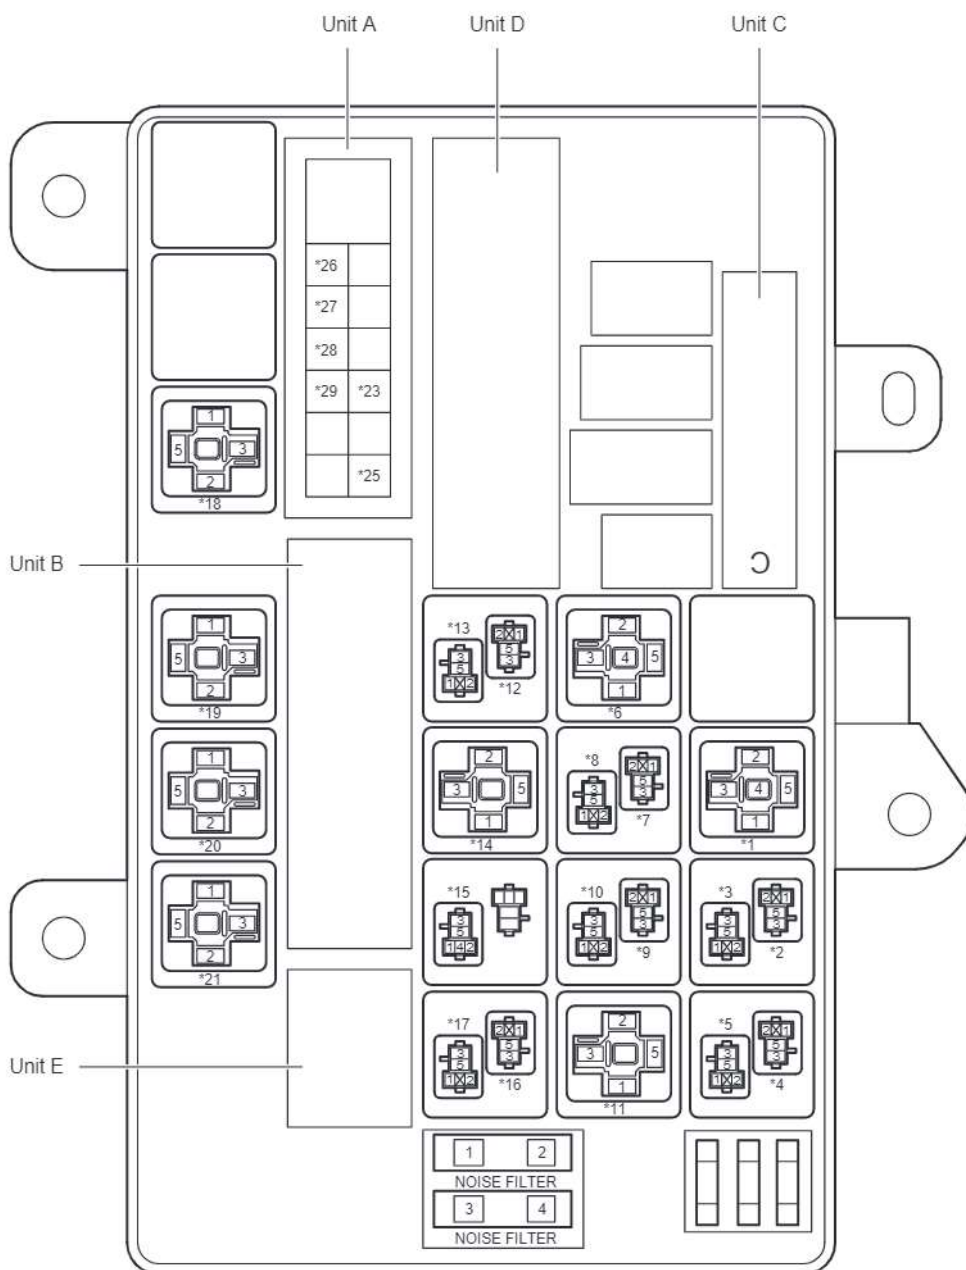

Unit A

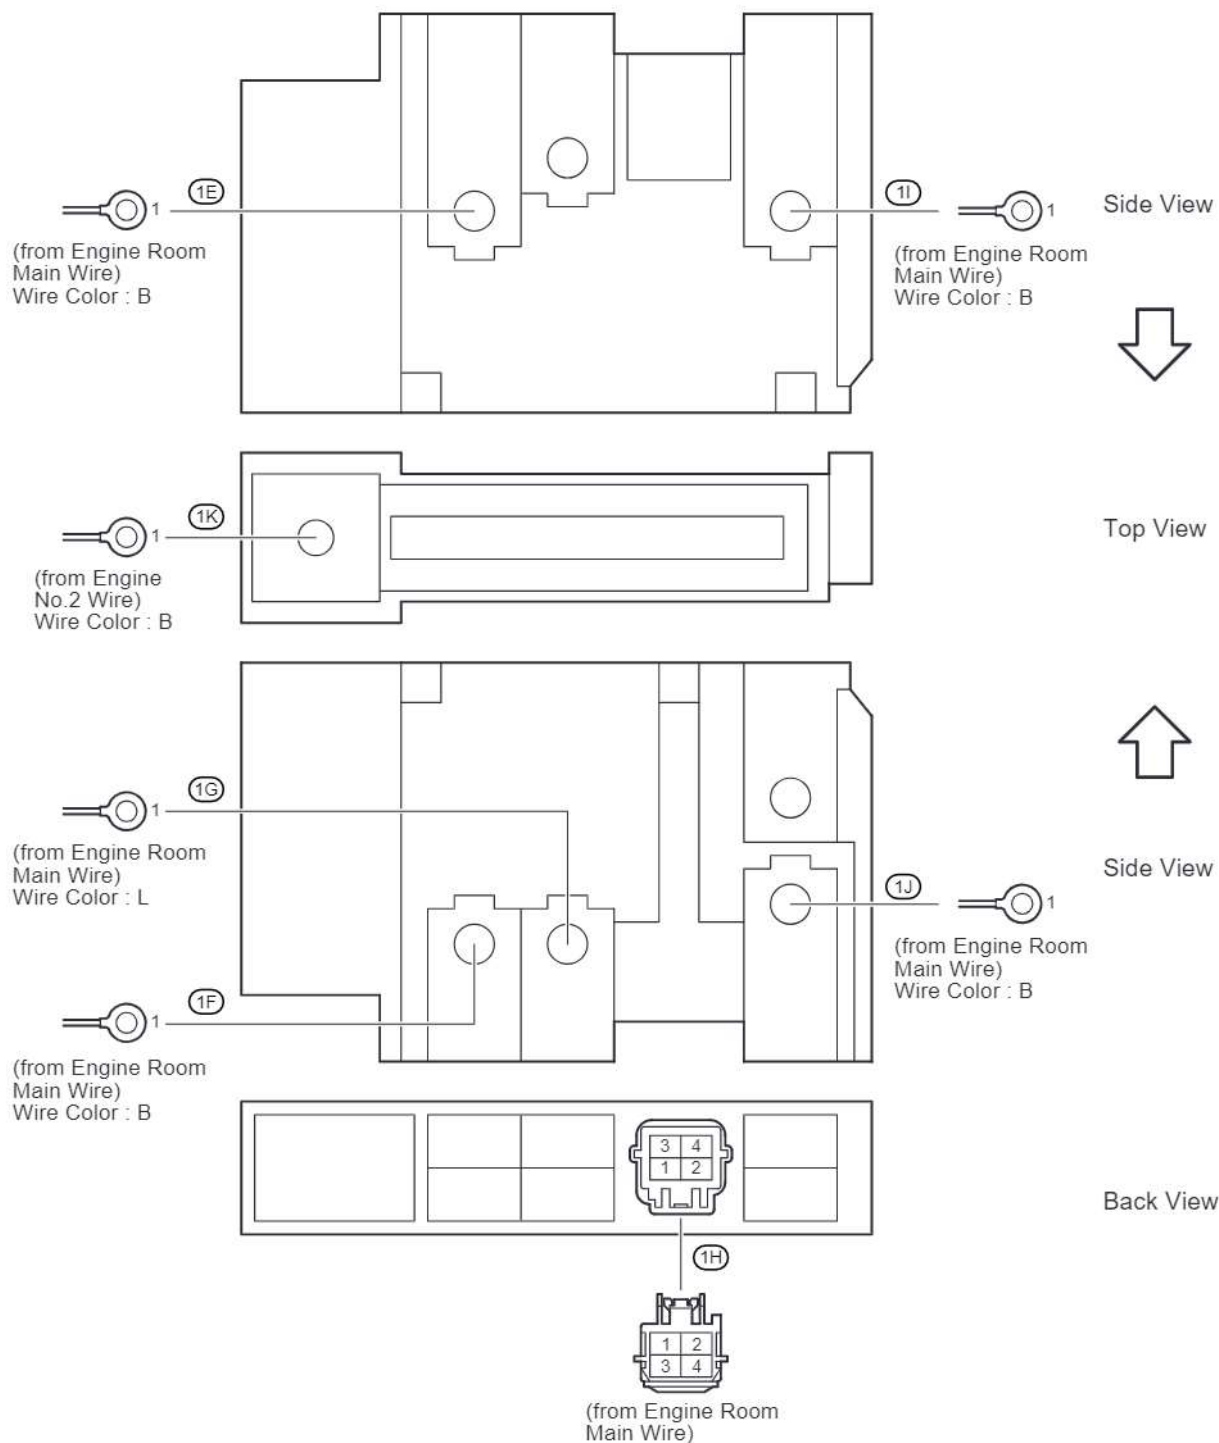


F RELAY LOCATIONS


① : Engine Room R/B Assembly
 ○ : Engine Room J/B Assembly

Engine Compartment Left (See Page 20)

Unit B

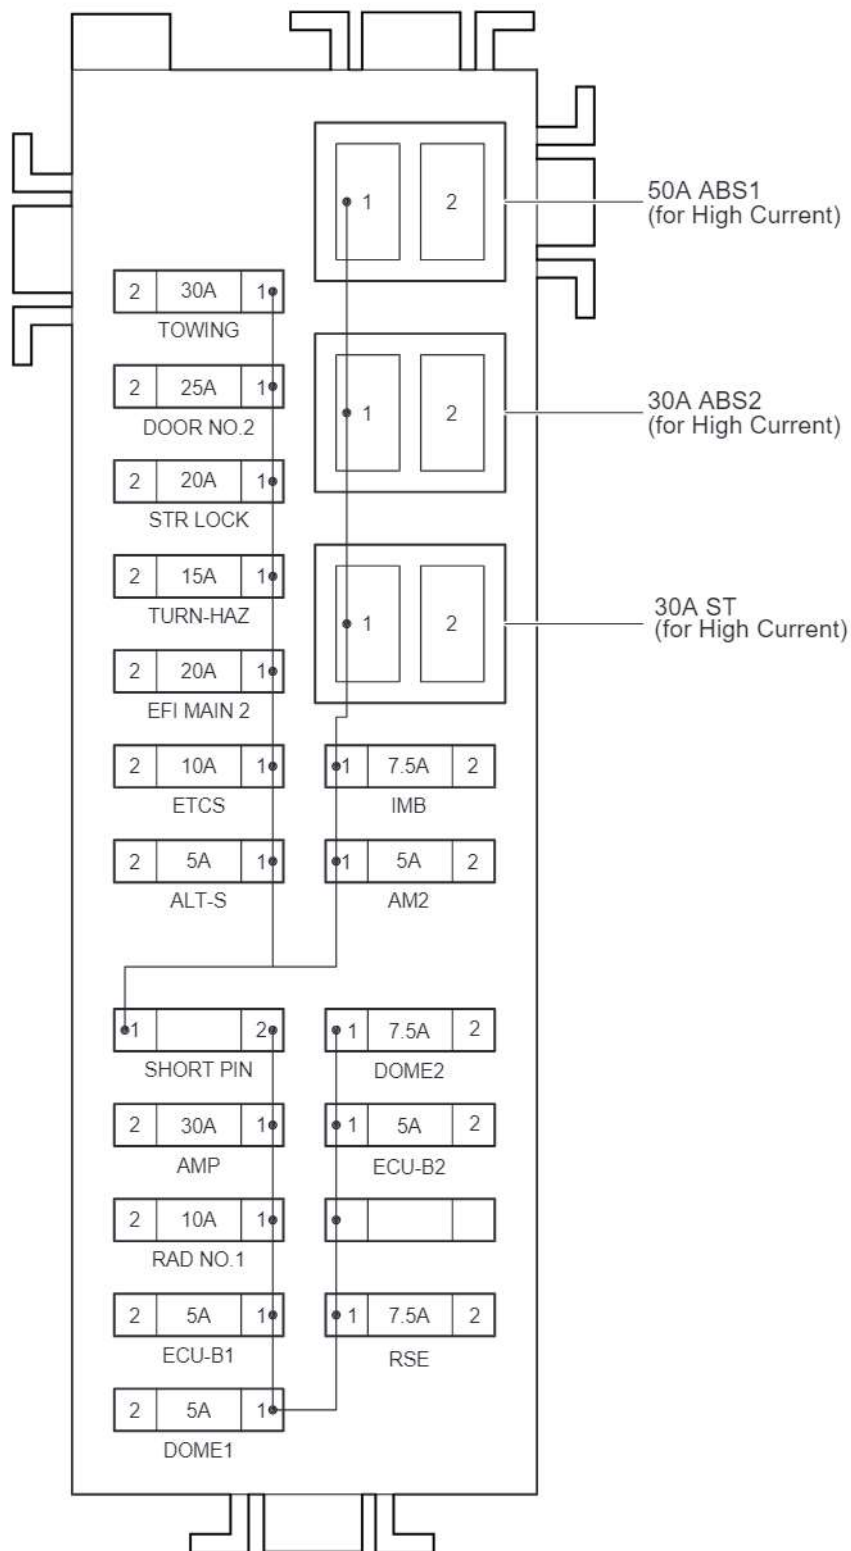

Unit C

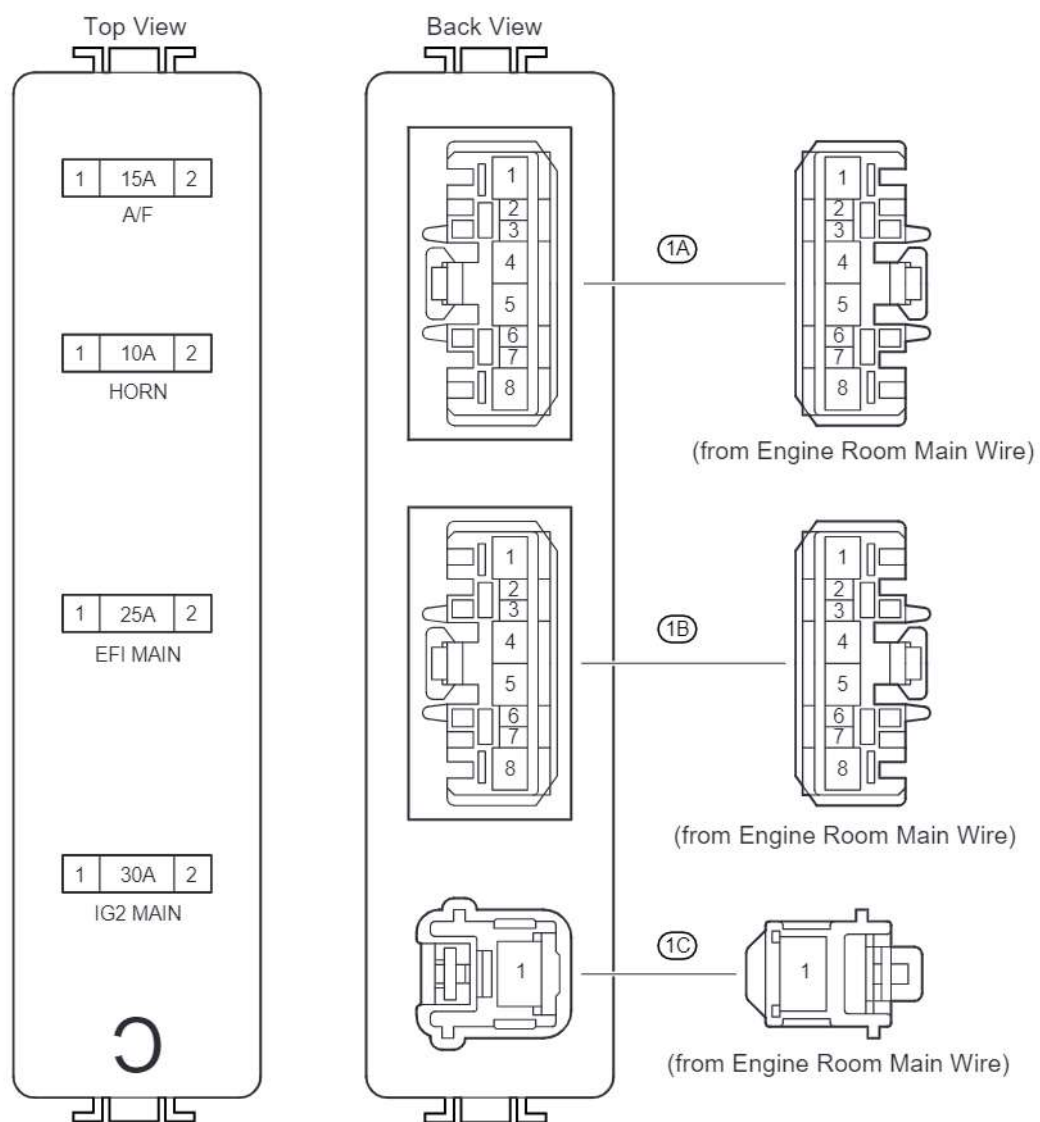


F RELAY LOCATIONS

① : Engine Room R/B Assembly
 ○ : Engine Room J/B Assembly


Engine Compartment Left (See Page 20)

Unit D

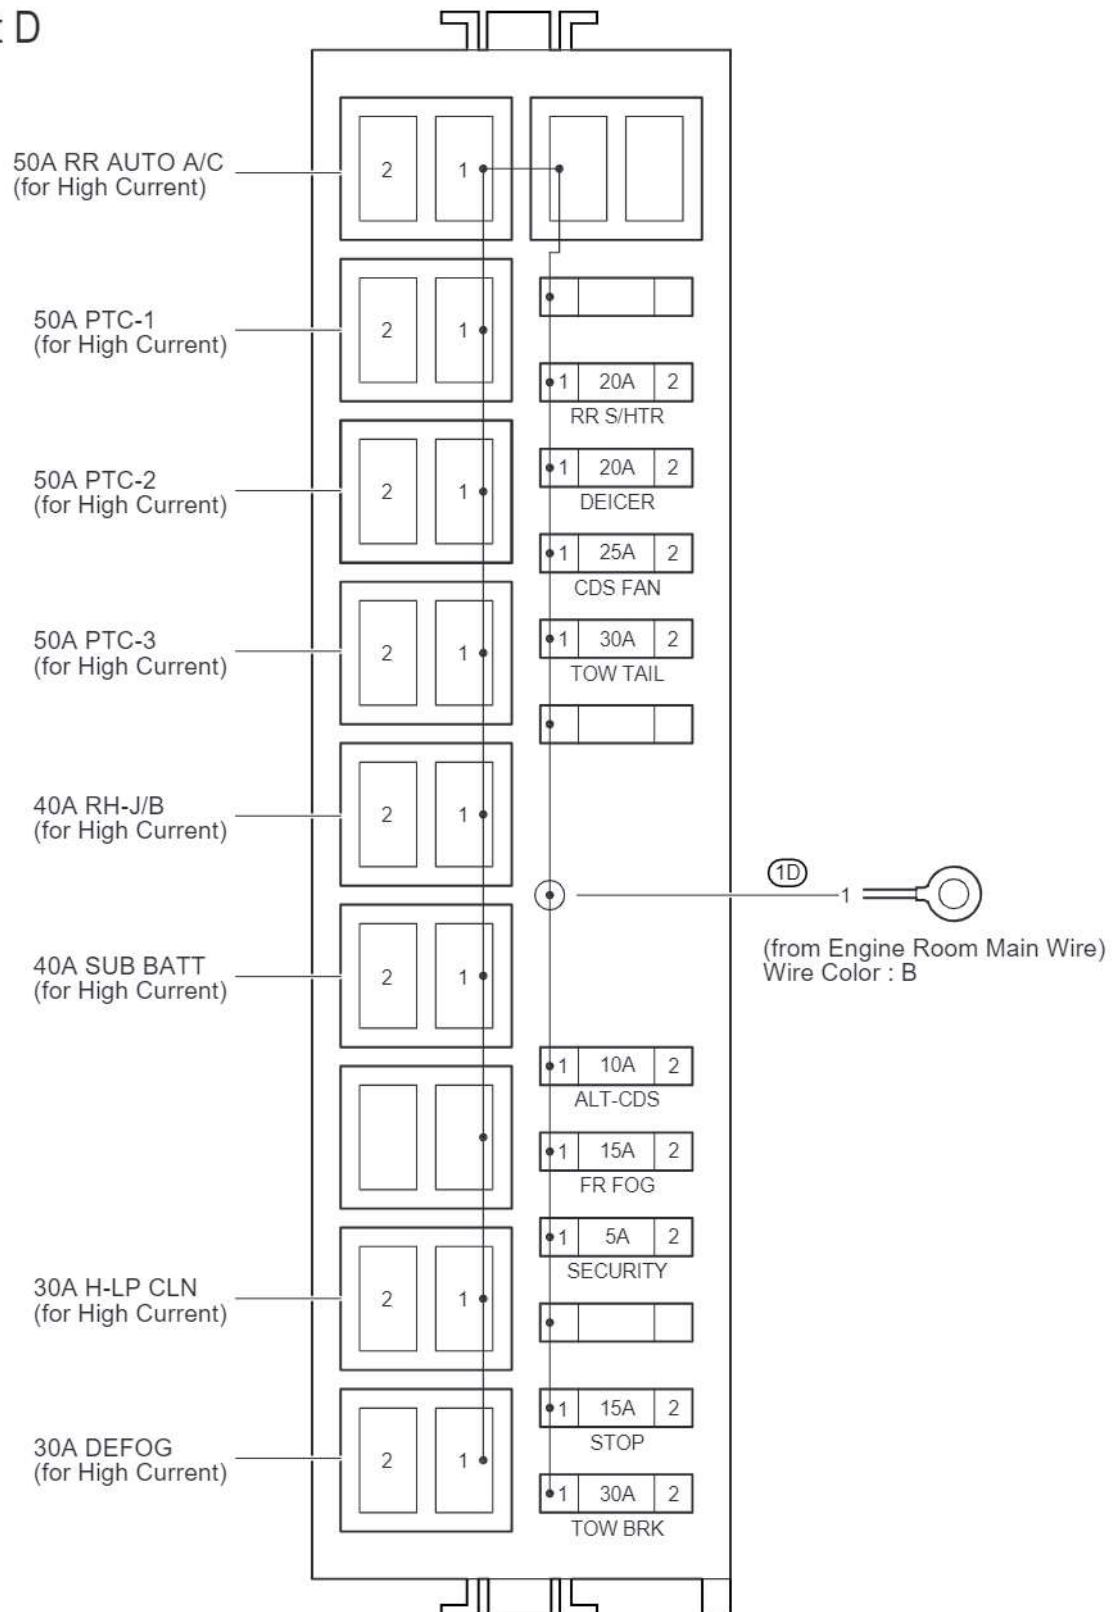


LAND CRUISER (EM0800U)

Unit E

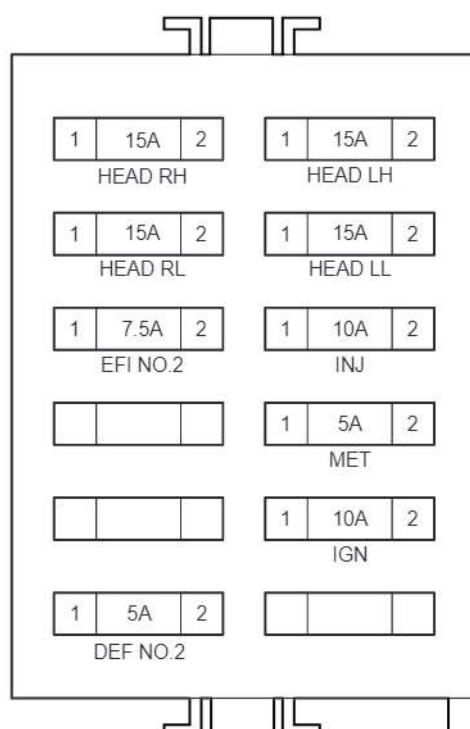




F RELAY LOCATIONS

[Engine Room R/B Assembly and Engine Room J/B Assembly Inner Circuit]

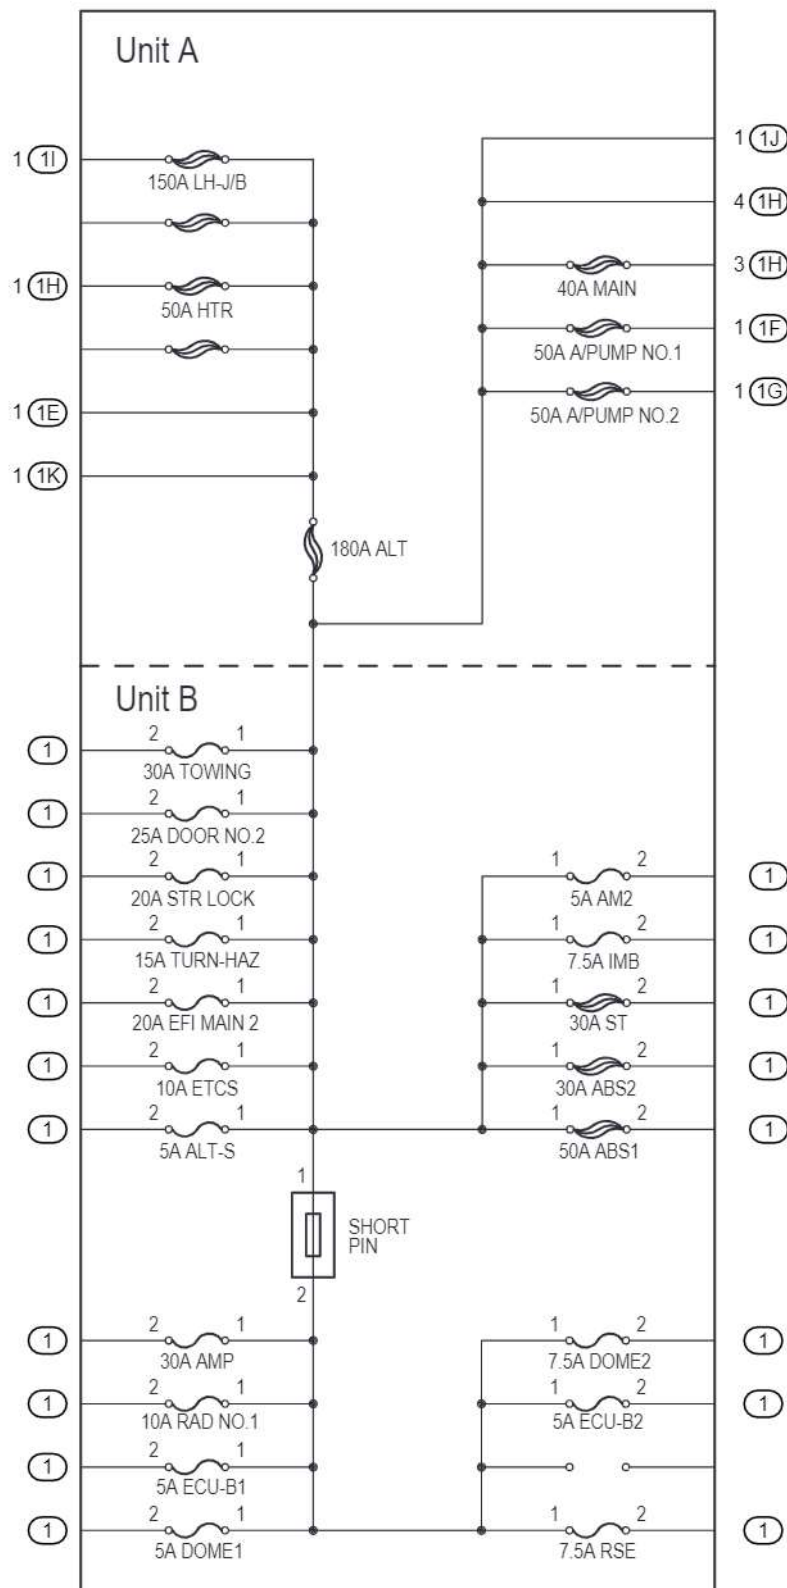


LAND CRUISER (EM0800U)

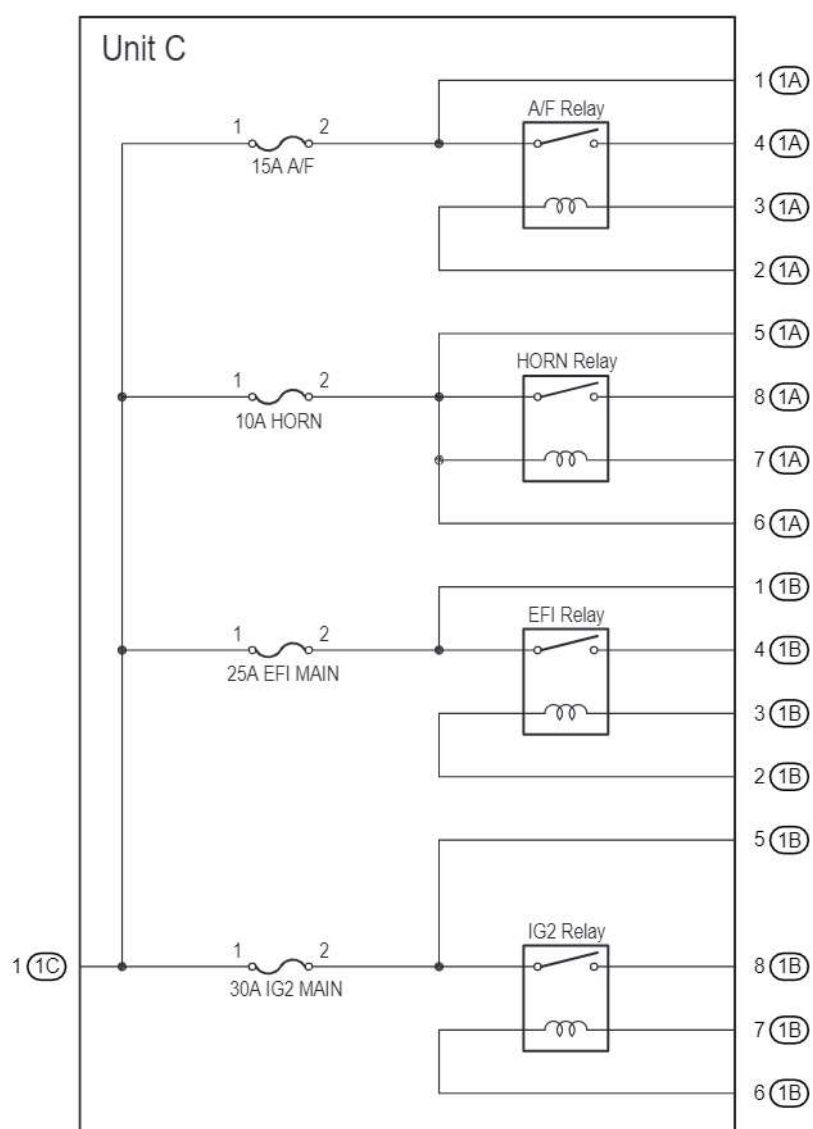

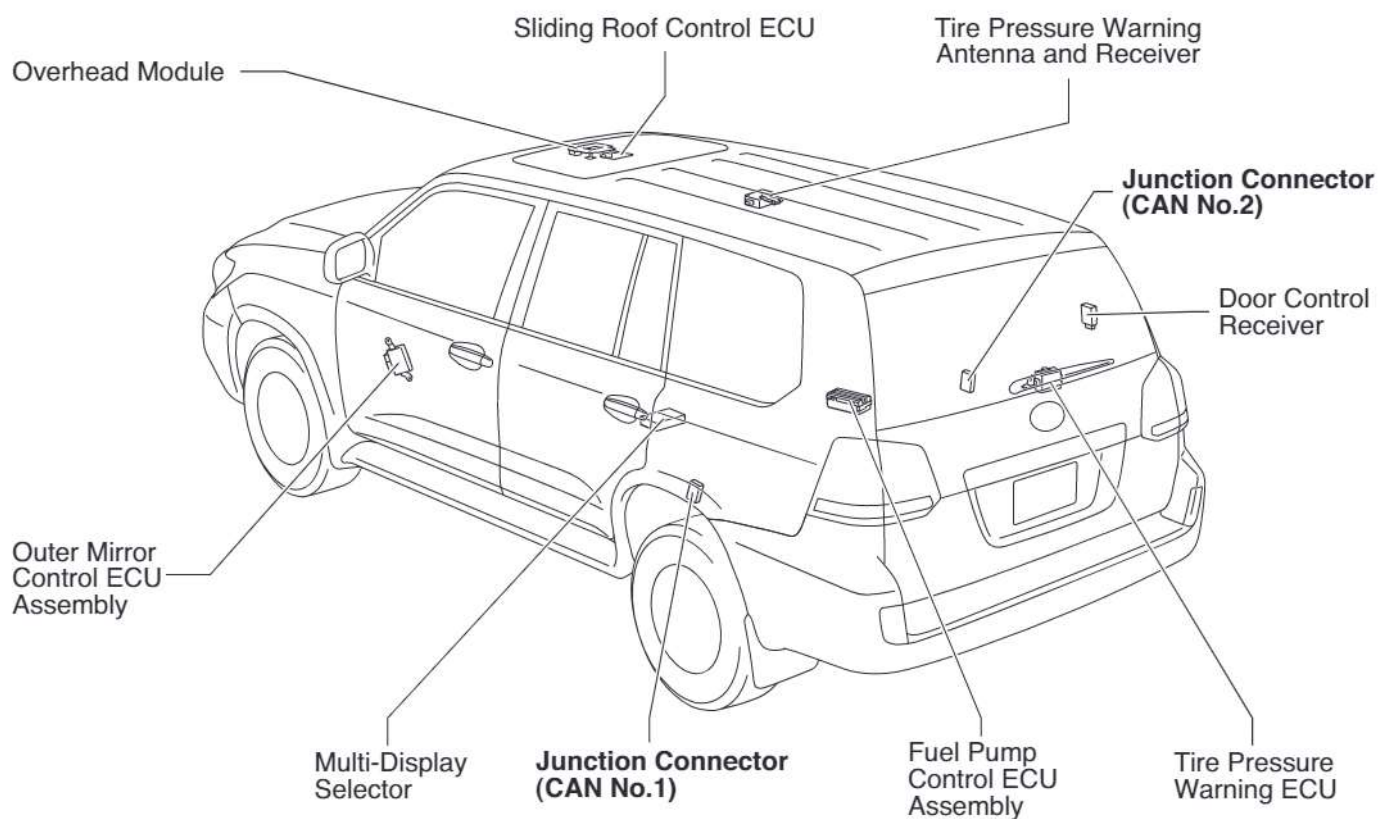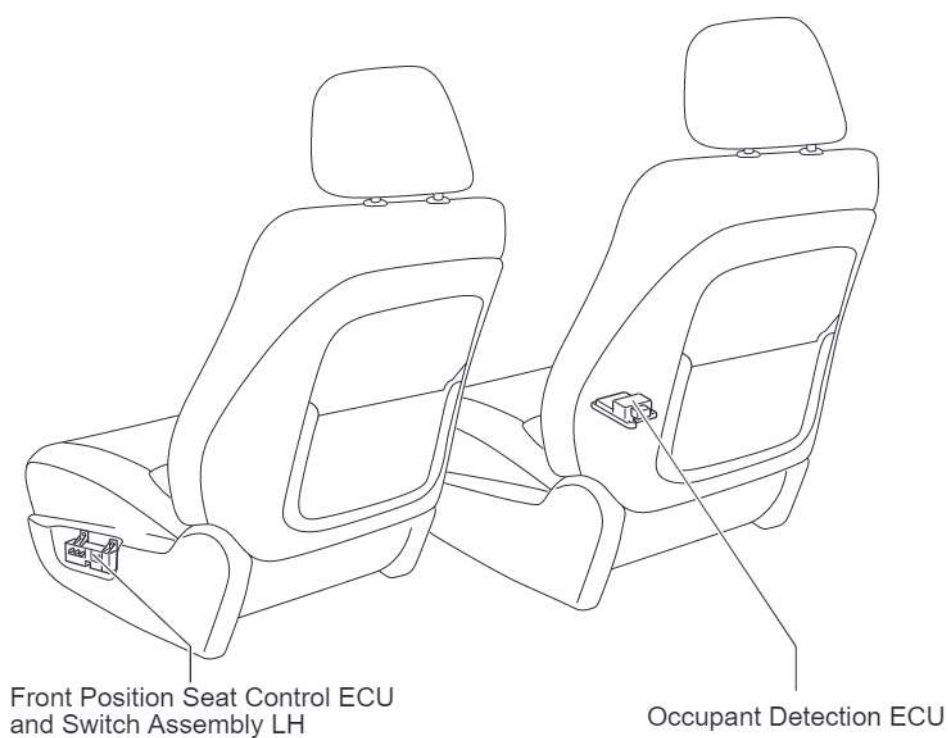
[Body]**[Front Seat]**

F RELAY LOCATIONS

[Engine Compartment]

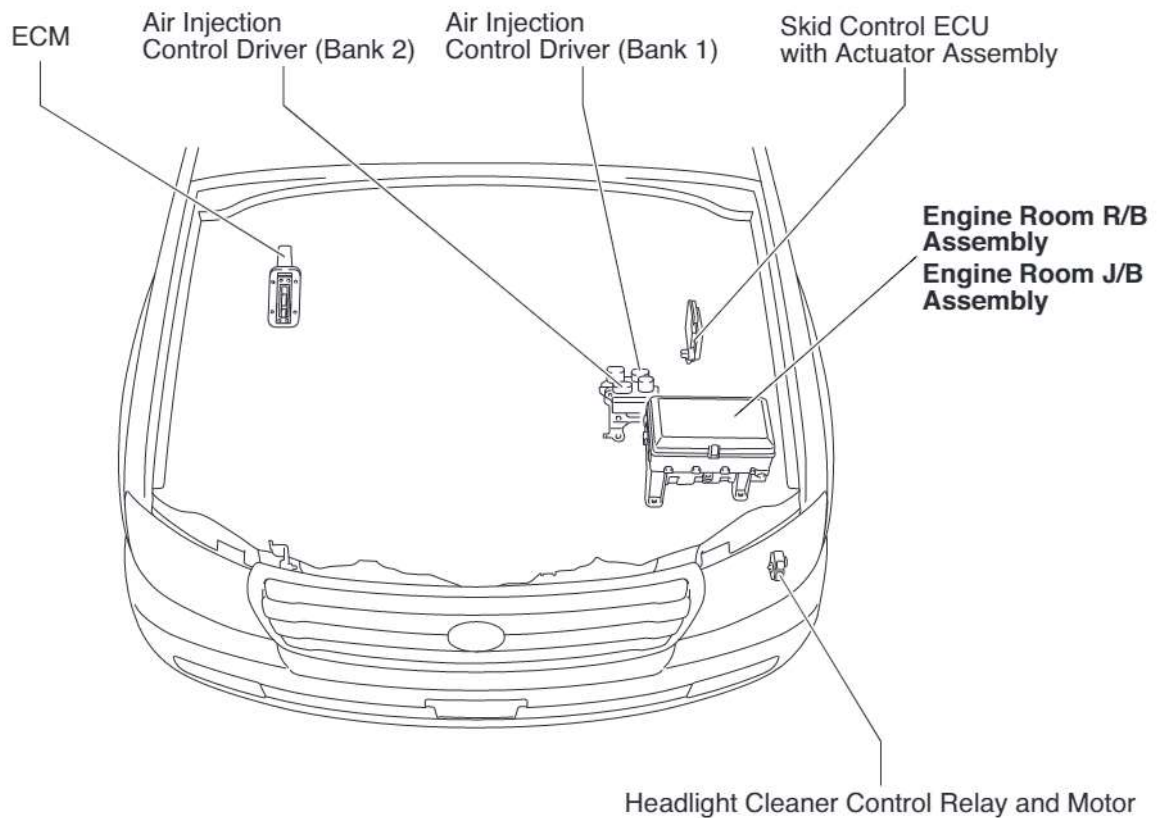

[Instrument Panel]

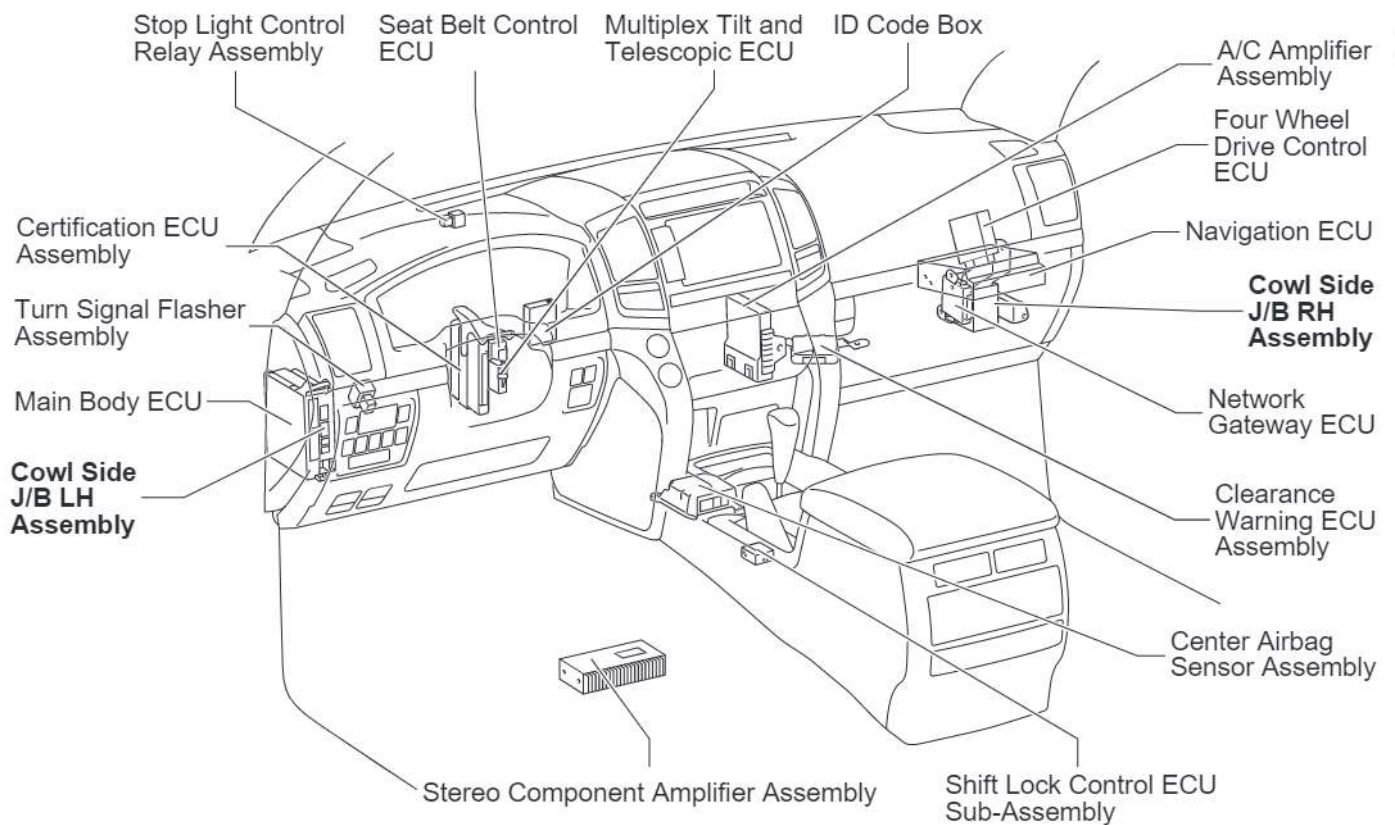


LAND CRUISER (EM0800U)


F RELAY LOCATIONS

Junction Connector (CAN No.1)

Left Luggage Compartment (See Page 21)

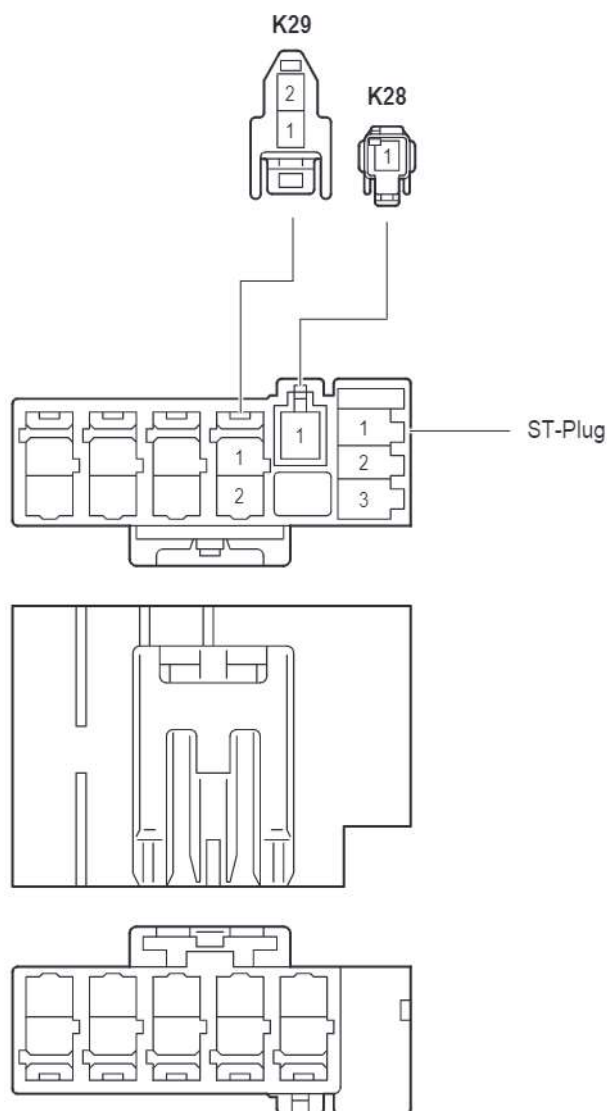


[Junction Connector (CAN No.1) Inner Circuit]

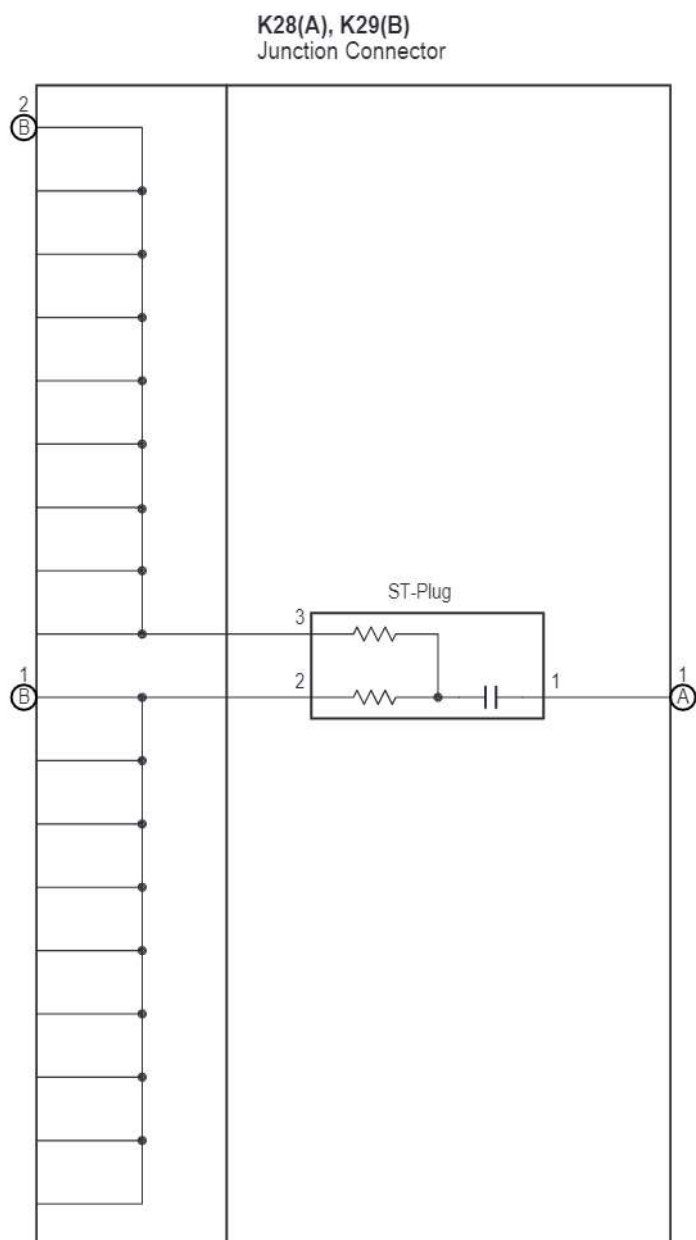

F RELAY LOCATIONS

Junction Connector (CAN No.2)

Right Luggage Compartment (See Page 21)

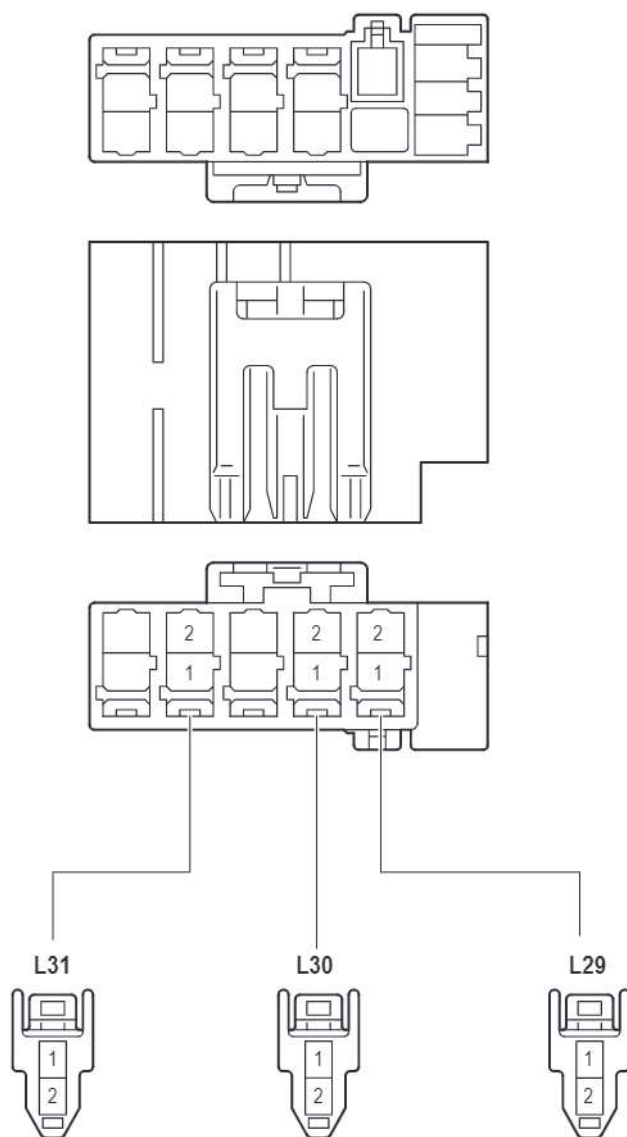

LAND CRUISER (EM0800U)

[Junction Connector (CAN No.2) Inner Circuit]

