


Buick Regal 1978 – 1981 fuse box diagram

Fuse box diagram

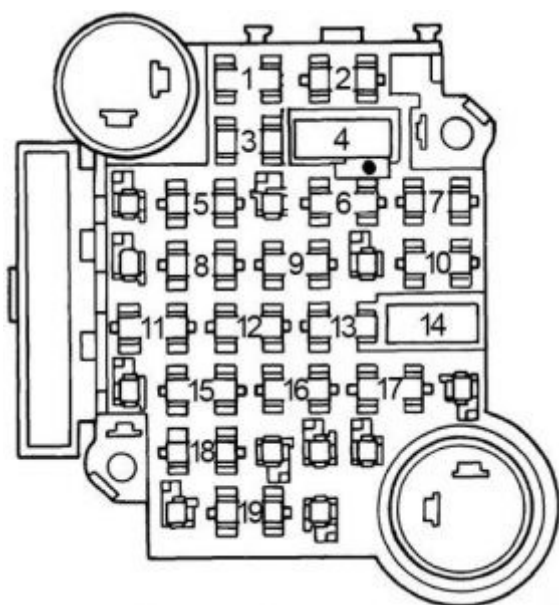

Buick Regal – fuse box diagram

Fuse [A]	Protected Component
1 5	Instrument illumination and headlight warning
2 20	Electric choke (V6), closed loop
3 5	Instrument illumination and headlight warning
4 30	Circuit breaker: Power windows and roof
5 —	—
6 25	Heater, air conditioning, pulse wipers and deck lid
7 10	Electronic Control Module
8 —	—
9 25	Windshield wiper and washer
10 20	Hazard and stop lights
11 20	Seat belt light and buzzer, heated back light relay, tailgate window release, map light and fuel economy light, cruise control, rear defogger blower, instrument gauges and indicator lights, electric choke
12 20	Tail, side marker, parking and license lights, clock radio
13 10	Radio
14 30	Circuit breaker: Power seats, door locks and heated back light
15 20	Turn signal and back-up lights
16 20	Clock, cigar lighter, glove box light, key buzzer, power antenna, clock radio, radio capacitor, dome and sail panel lights, trunk light, reading light, headlight on warning and door locks
17 —	—
18 —	—
19 10	Gauges, cruise control, torque converter clutch and indicator light

Circuit Breaker: Headlight Circuit — A thermo circuit breaker is incorporated in the headlight switch assembly to protect headlight circuits. Windshield Wiper — Integral with windshield wiper motor.