


E ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[LHD : 3S-FE]

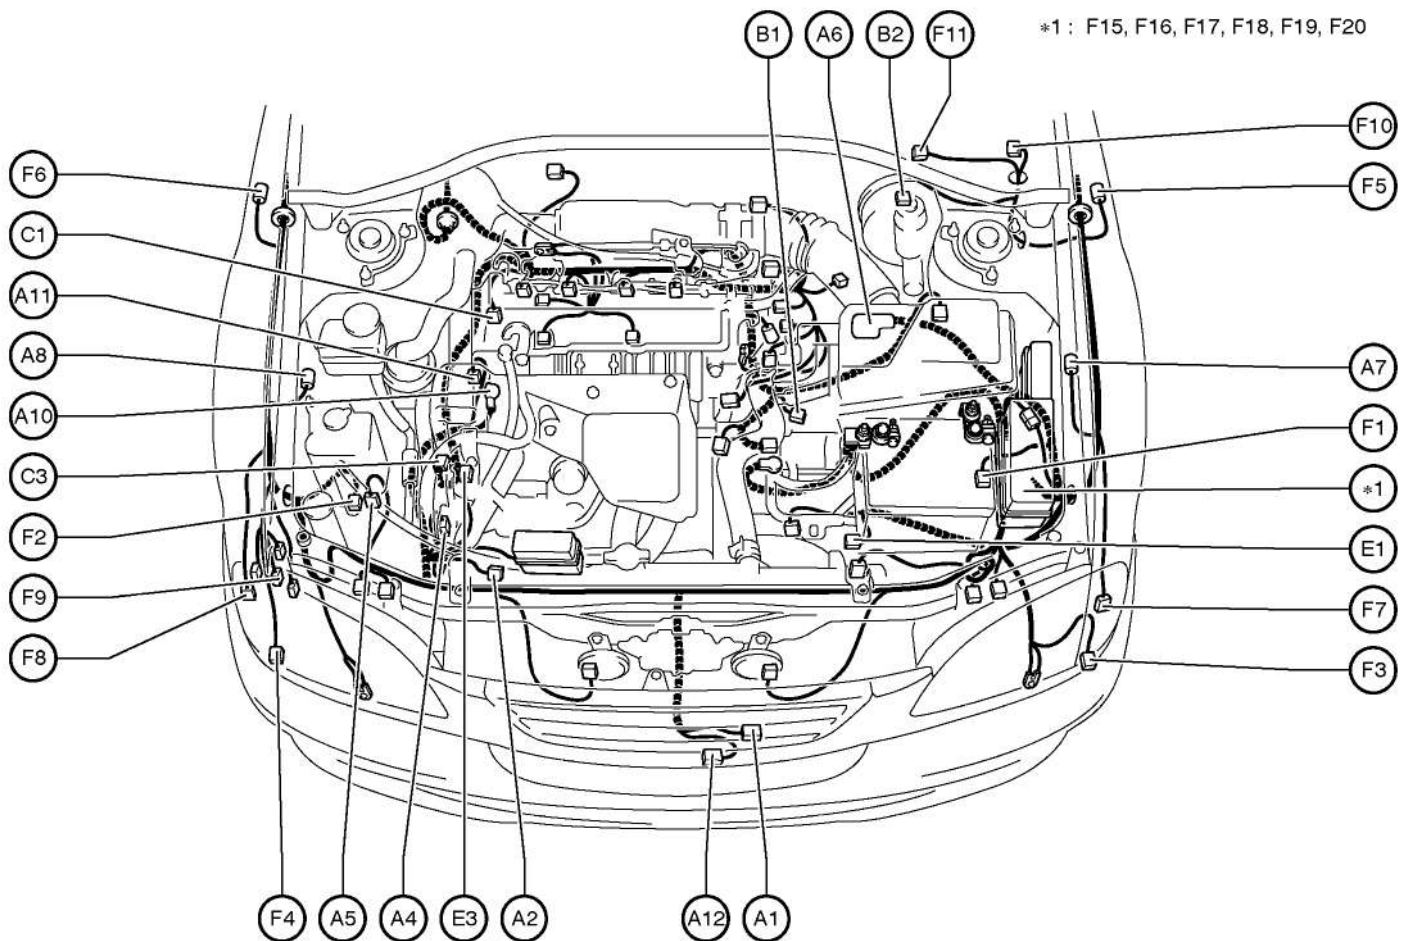

- A 1 A/C Ambient Temp. Sensor
- A 2 A/C Condenser Fan Motor
- A 4 A/C Magnetic Clutch and Lock Sensor
- A 5 A/C Triple Pressure SW
(A/C Dual and Single Pressure SW)
- A 6 ABS ECU with Actuator
- A 7 ABS Speed Sensor Front LH
- A 8 ABS Speed Sensor Front RH
- A10 Alternator
- A11 Alternator
- A12 Ambient Temp. Sensor

- B 1 Back-Up Light SW
- B 2 Brake Fluid Level Warning SW


- C 1 Camshaft Position Sensor
- C 3 Crankshaft Position Sensor

- E 1 ECT Solenoid
- E 3 Engine Oil Level Sensor

- F 1 Front Airbag Sensor LH
- F 2 Front Airbag Sensor RH
- F 3 Front Fog Light LH
- F 4 Front Fog Light RH
- F 5 Front Side Turn Signal Light LH
- F 6 Front Side Turn Signal Light RH
- F 7 Front Turn Signal Light LH
- F 8 Front Turn Signal Light RH
- F 9 Front Washer Motor
- F10 Front Window Deicer
- F11 Front Wiper Motor
- F15 Fusible Link Block
- F16 Fusible Link Block
- F17 Fusible Link Block
- F18 Fusible Link Block
- F19 Fusible Link Block
- F20 Fusible Link Block

Position of Parts in Engine Compartment

[LHD : 3S-FE]

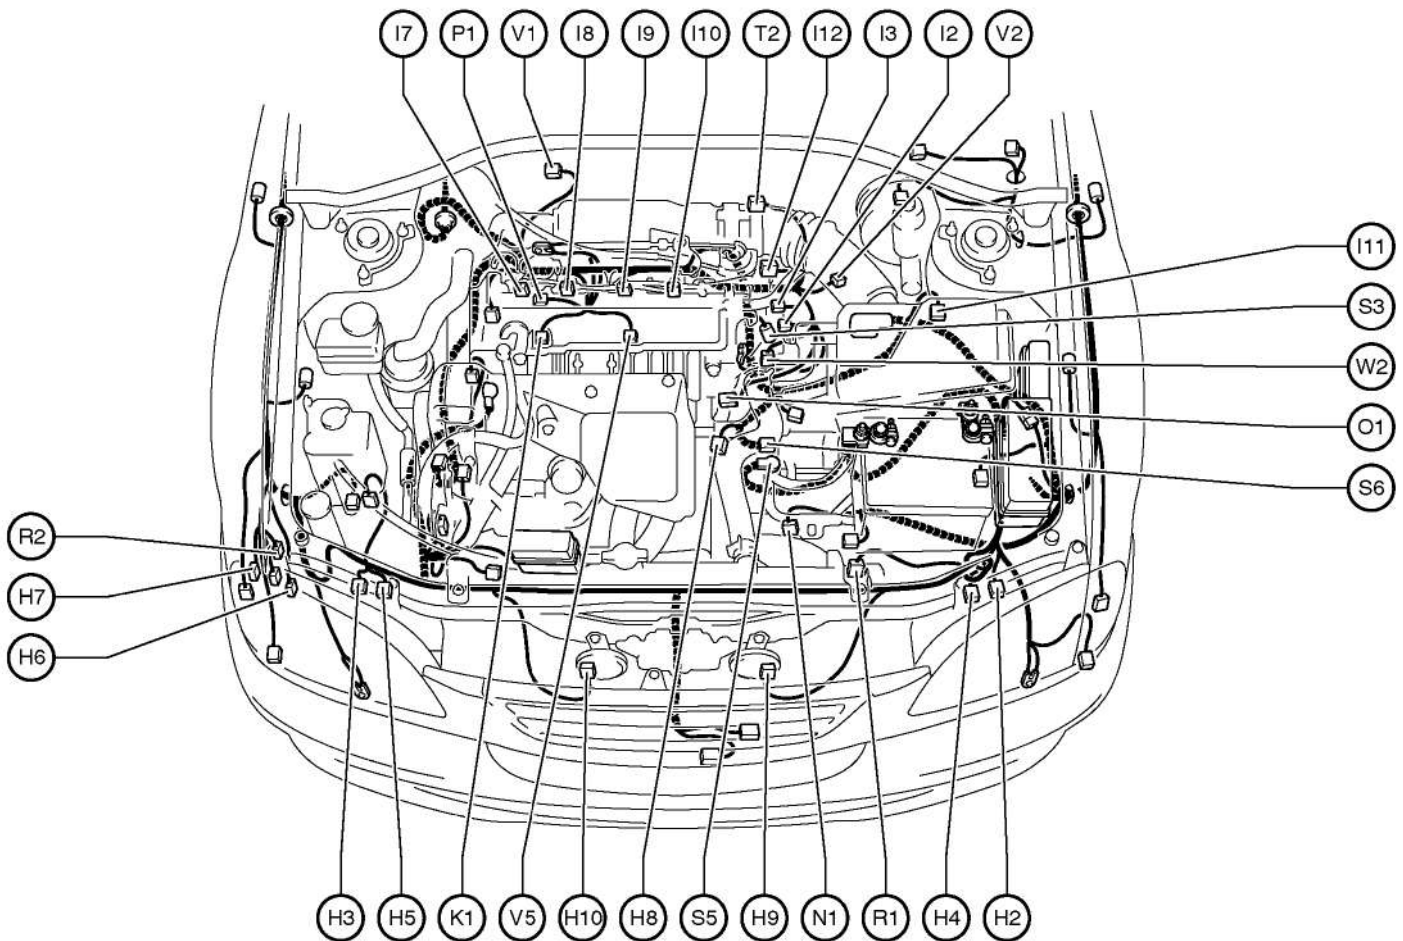

H 2 Headlight and Front Clearance Light LH
 H 3 Headlight and Front Clearance Light RH
 H 4 Headlight Beam Level Control Actuator LH
 H 5 Headlight Beam Level Control Actuator RH
 H 6 Headlight Cleaner Motor
 H 7 Headlight Cleaner Relay
 H 8 Heated Oxygen Sensor
 H 9 Horn LH
 H10 Horn RH

I 2 Ignition Coil and Igniter No.1
 I 3 Ignition Coil and Igniter No.2
 I 7 Injector No.1
 I 8 Injector No.2
 I 9 Injector No.3
 I 10 Injector No.4
 I 11 Intake Air Temp. Sensor
 I 12 ISC Valve

K 1 Knock Sensor

N 1 Neutral Start SW

O 1 Oil Pressure SW

P 1 Power Steering Oil Pressure SW

R 1 Radiator Fan Motor

R 2 Rear Washer Motor

S 3 Speed Sensor

S 5 Starter

S 6 Starter

T 2 Throttle Position Sensor

V 1 Vacuum Sensor

V 2 Variable Resistor


V 5 VSV (EGR)

W 2 Water Temp. Sensor

E ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[LHD : 7A-FE, 4A-FE Lean Burn Type]

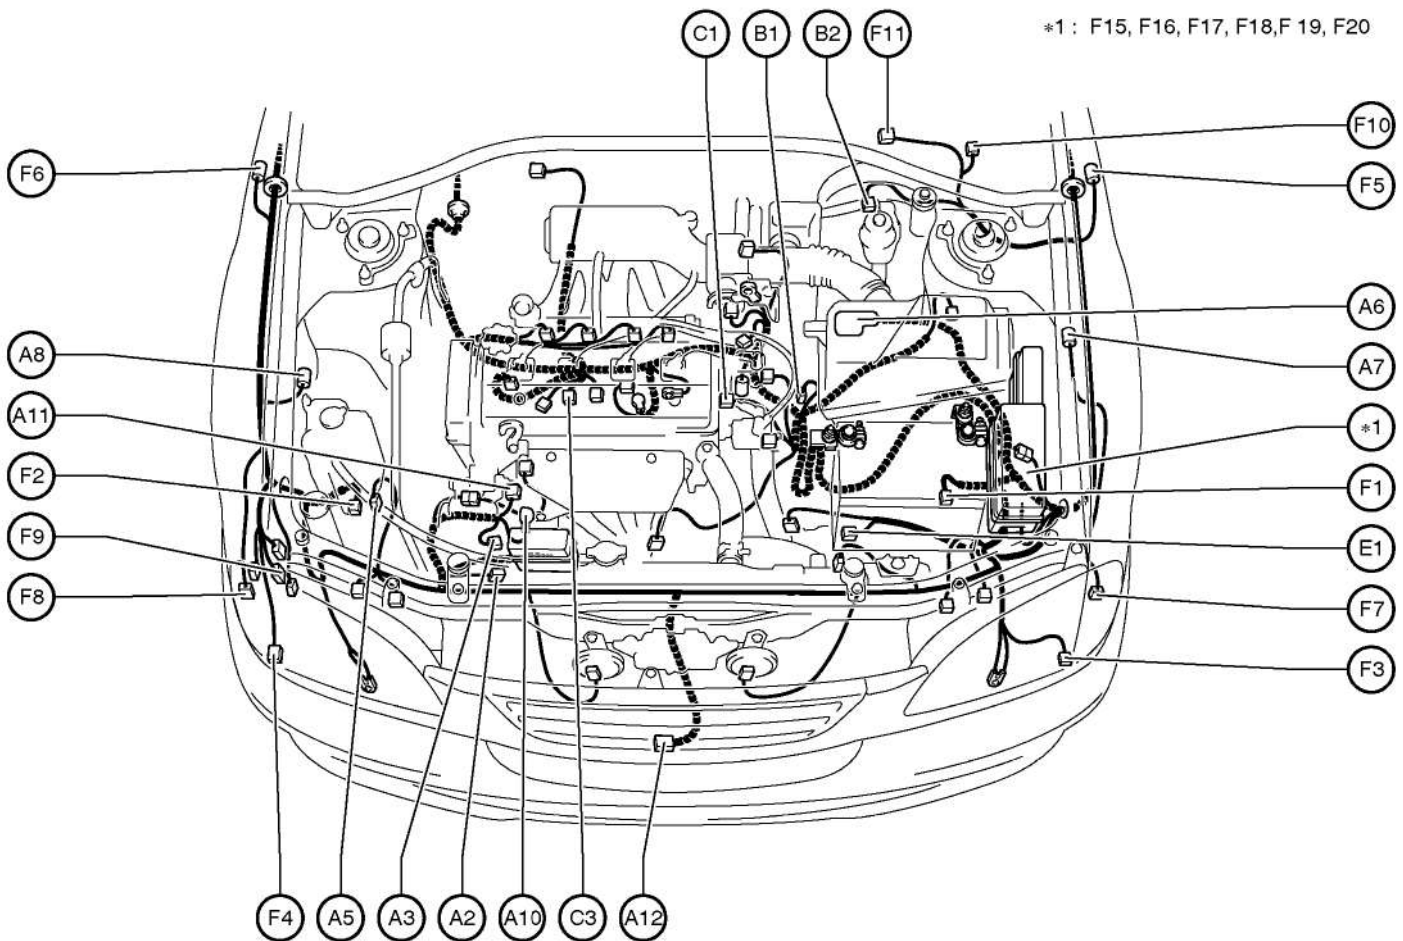

A 2 A/C Condenser Fan Motor
 A 3 A/C Magnetic Clutch
 A 5 A/C Triple Pressure SW
 (A/C Dual and Single Pressure SW)
 A 6 ABS ECU with Actuator
 A 7 ABS Speed Sensor Front LH
 A 8 ABS Speed Sensor Front RH
 A10 Alternator
 A11 Alternator
 A12 Ambient Temp. Sensor

B 1 Back-Up Light SW
 B 2 Brake Fluid Level Warning SW


C 1 Camshaft Position Sensor
 C 3 Crankshaft Position Sensor

E 1 ECT Solenoid

F 1 Front Airbag Sensor LH
 F 2 Front Airbag Sensor RH
 F 3 Front Fog Light LH
 F 4 Front Fog Light RH
 F 5 Front Side Turn Signal Light LH
 F 6 Front Side Turn Signal Light RH
 F 7 Front Turn Signal Light LH
 F 8 Front Turn Signal Light RH
 F 9 Front Washer Motor
 F10 Front Window Deicer
 F11 Front Wiper Motor
 F15 Fusible Link Block
 F16 Fusible Link Block
 F17 Fusible Link Block
 F18 Fusible Link Block
 F19 Fusible Link Block
 F20 Fusible Link Block

Position of Parts in Engine Compartment

[LHD : 7A-FE, 4A-FE Lean Burn Type]

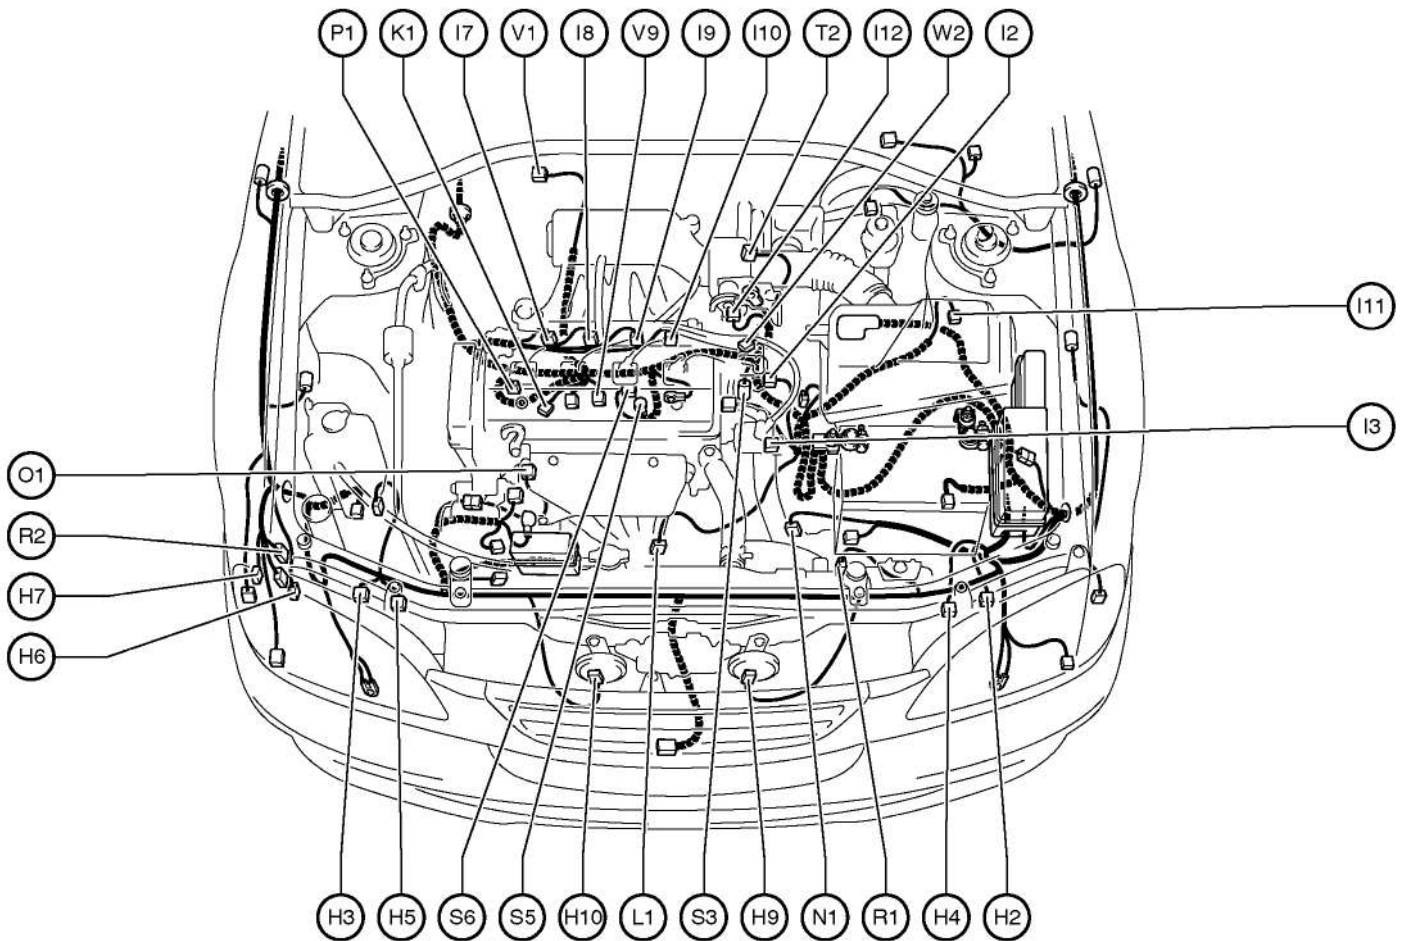

H 2 Headlight and Front Clearance Light LH
 H 3 Headlight and Front Clearance Light RH
 H 4 Headlight Beam Level Control Actuator LH
 H 5 Headlight Beam Level Control Actuator RH
 H 6 Headlight Cleaner Motor
 H 7 Headlight Cleaner Relay
 H 9 Horn LH
 H10 Horn RH

I 2 Ignition Coil and Igniter No.1
 I 3 Ignition Coil and Igniter No.2
 I 7 Injector No.1
 I 8 Injector No.2
 I 9 Injector No.3
 I 10 Injector No.4
 I 11 Intake Air Temp. Sensor
 I 12 ISC Valve

K 1 Knock Sensor

L 1 Lean Mixture Sensor

N 1 Neutral Start SW

O 1 Oil Pressure SW

P 1 Power Steering Oil Pressure SW

R 1 Radiator Fan Motor

R 2 Rear Washer Motor

S 3 Speed Sensor

S 5 Starter

S 6 Starter

T 2 Throttle Position Sensor

V 1 Vacuum Sensor


V 9 VSV (Swirl Control)

W 2 Water Temp. Sensor

E ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[LHD : 4A-FE Stoichiometric Type]

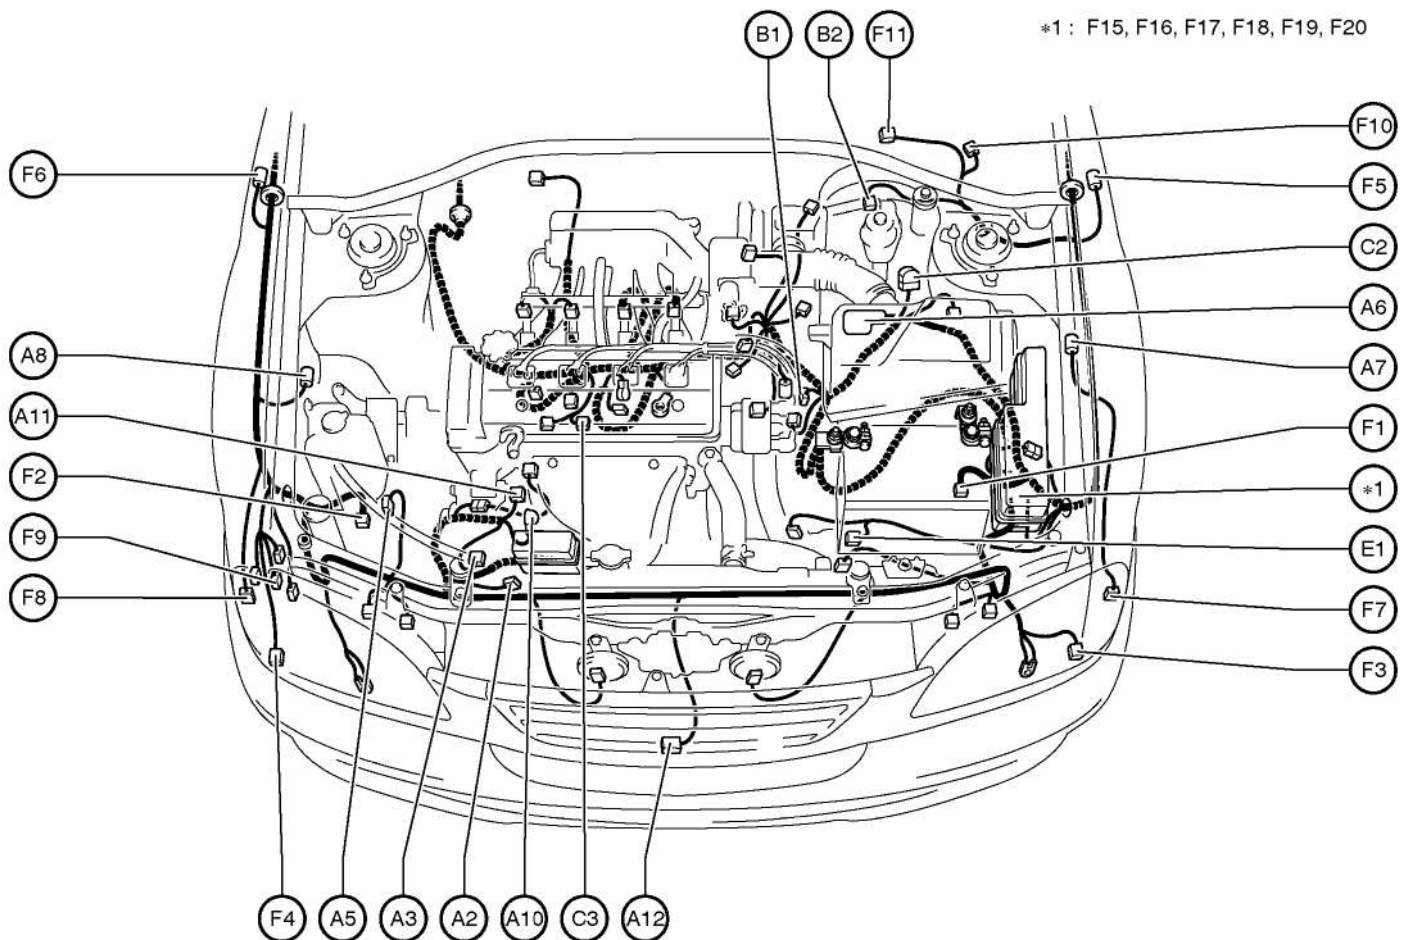

A 2 A/C Condenser Fan Motor
 A 3 A/C Magnetic Clutch
 A 5 A/C Triple Pressure SW
 (A/C Dual and Single Pressure SW)
 A 6 ABS ECU with Actuator
 A 7 ABS Speed Sensor Front LH
 A 8 ABS Speed Sensor Front RH
 A10 Alternator
 A11 Alternator
 A12 Ambient Temp. Sensor

B 1 Back-Up Light SW
 B 2 Brake Fluid Level Warning SW


C 2 Check Connector
 C 3 Crankshaft Position Sensor

E 1 ECT Solenoid

F 1 Front Airbag Sensor LH
 F 2 Front Airbag Sensor RH
 F 3 Front Fog Light LH
 F 4 Front Fog Light RH
 F 5 Front Side Turn Signal Light LH
 F 6 Front Side Turn Signal Light RH
 F 7 Front Turn Signal Light LH
 F 8 Front Turn Signal Light RH
 F 9 Front Washer Motor
 F10 Front Window Deicer
 F11 Front Wiper Motor
 F15 Fusible Link Block
 F16 Fusible Link Block
 F17 Fusible Link Block
 F18 Fusible Link Block
 F19 Fusible Link Block
 F20 Fusible Link Block

Position of Parts in Engine Compartment

[LHD : 4A-FE Stoichiometric Type]

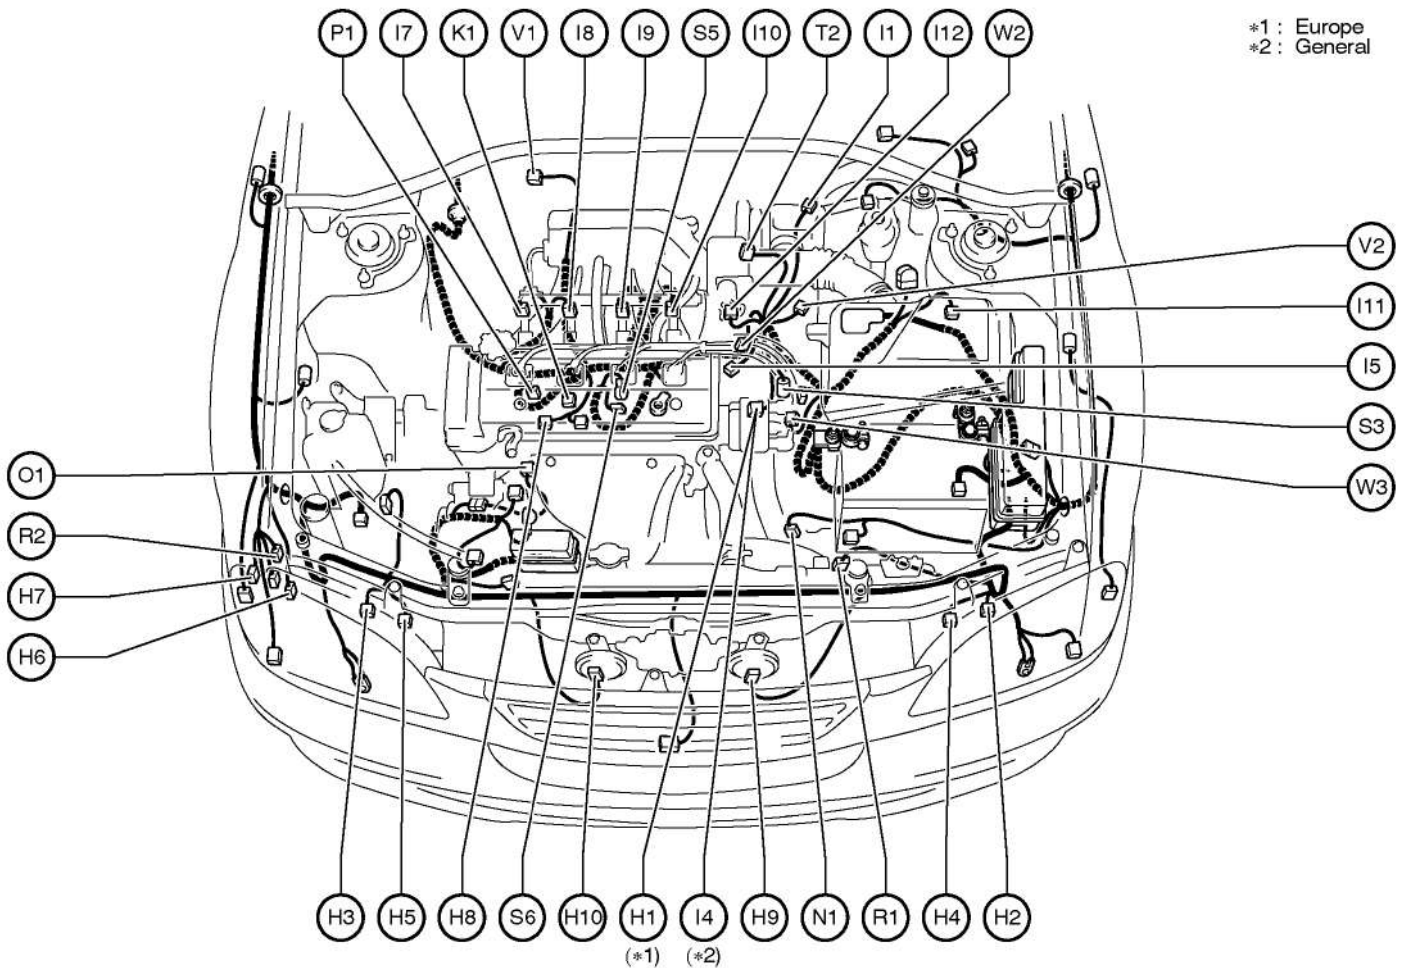

H 1 Hall Sensor
H 2 Headlight and Front Clearance Light LH
H 3 Headlight and Front Clearance Light RH
H 4 Headlight Beam Level Control Actuator LH
H 5 Headlight Beam Level Control Actuator RH
H 6 Headlight Cleaner Motor
H 7 Headlight Cleaner Relay
H 8 Heated Oxygen Sensor
H 9 Horn LH
H10 Horn RH

I 1 Ignition Coil
I 4 IIA
I 5 IIA
I 7 Injector No.1
I 8 Injector No.2
I 9 Injector No.3
I 10 Injector No.4
I 11 Intake Air Temp. Sensor
I 12 ISC Valve

K 1 Knock Sensor

N 1 Neutral Start SW

O 1 Oil Pressure SW

P 1 Power Steering Oil Pressure SW

R 1 Radiator Fan Motor

R 2 Rear Washer Motor

S 3 Speed Sensor

S 5 Starter

S 6 Starter

T 2 Throttle Position Sensor

V 1 Vacuum Sensor

V 2 Variable Resistor


W 2 Water Temp. Sensor

W 3 Water Temp. SW

E ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[LHD : 1CD-FTV]

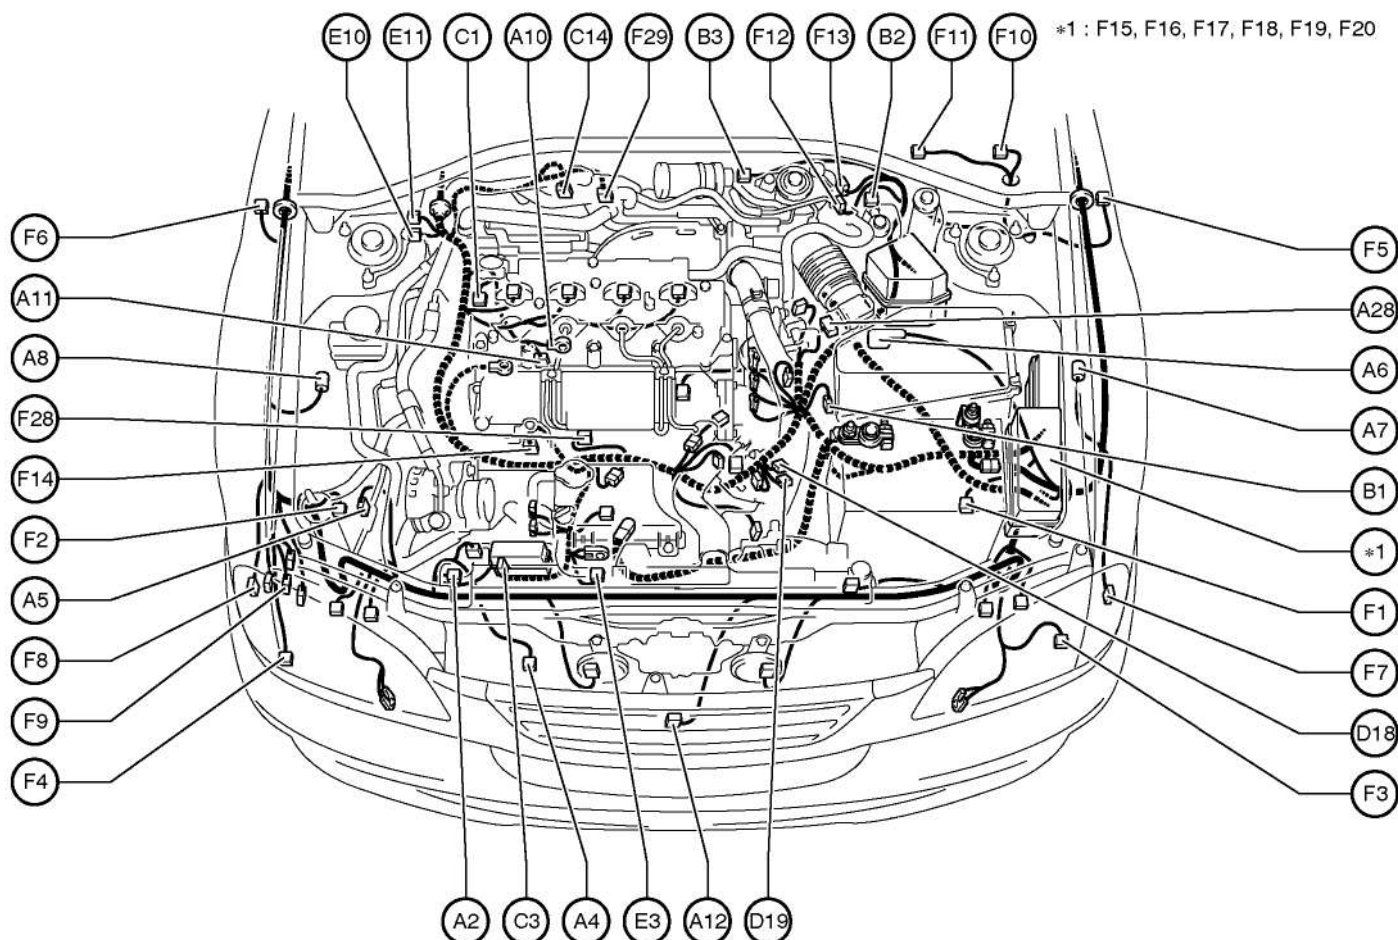

- A 2 A/C Condenser Fan Motor
- A 4 A/C Magnetic Clutch and Lock Sensor
- A 5 A/C Triple Pressure SW
(A/C Dual and Single Pressure SW)
- A 6 ABS ECU with Actuator
- A 7 ABS Speed Sensor Front LH
- A 8 ABS Speed Sensor Front RH
- A10 Alternator
- A11 Alternator
- A12 Ambient Temp. Sensor
- A28 Air Flow Meter

- B 1 Back-Up Light SW
- B 2 Brake Fluid Level Warning SW
- B 3 Brake Vacuum Warning SW

- C 1 Camshaft Position Sensor
- C 3 Crankshaft Position Sensor
- C14 Combustion Type Power Heater


- D18 Diesel Throttle Control Motor
- D19 Diesel Throttle Position Sensor

- E 3 Engine Oil Level Sensor
- E10 Electronic Driver Unit
- E11 Electronic Driver Unit

- F 1 Front Airbag Sensor LH
- F 2 Front Airbag Sensor RH
- F 3 Front Fog Light LH
- F 4 Front Fog Light RH
- F 5 Front Side Turn Signal Light LH
- F 6 Front Side Turn Signal Light RH
- F 7 Front Turn Signal Light LH
- F 8 Front Turn Signal Light RH
- F 9 Front Washer Motor
- F10 Front Window Deicer
- F11 Front Wiper Motor
- F12 Fuel Heater
- F13 Fuel Sedimentary SW
- F14 Fuel Temp. Sensor
- F15 Fusible Link Block
- F16 Fusible Link Block
- F17 Fusible Link Block
- F18 Fusible Link Block
- F19 Fusible Link Block
- F20 Fusible Link Block
- F28 Fuel Pressure Sensor
- F29 Fuel Pump

Position of Parts in Engine Compartment

[LHD : 1CD-FTV]

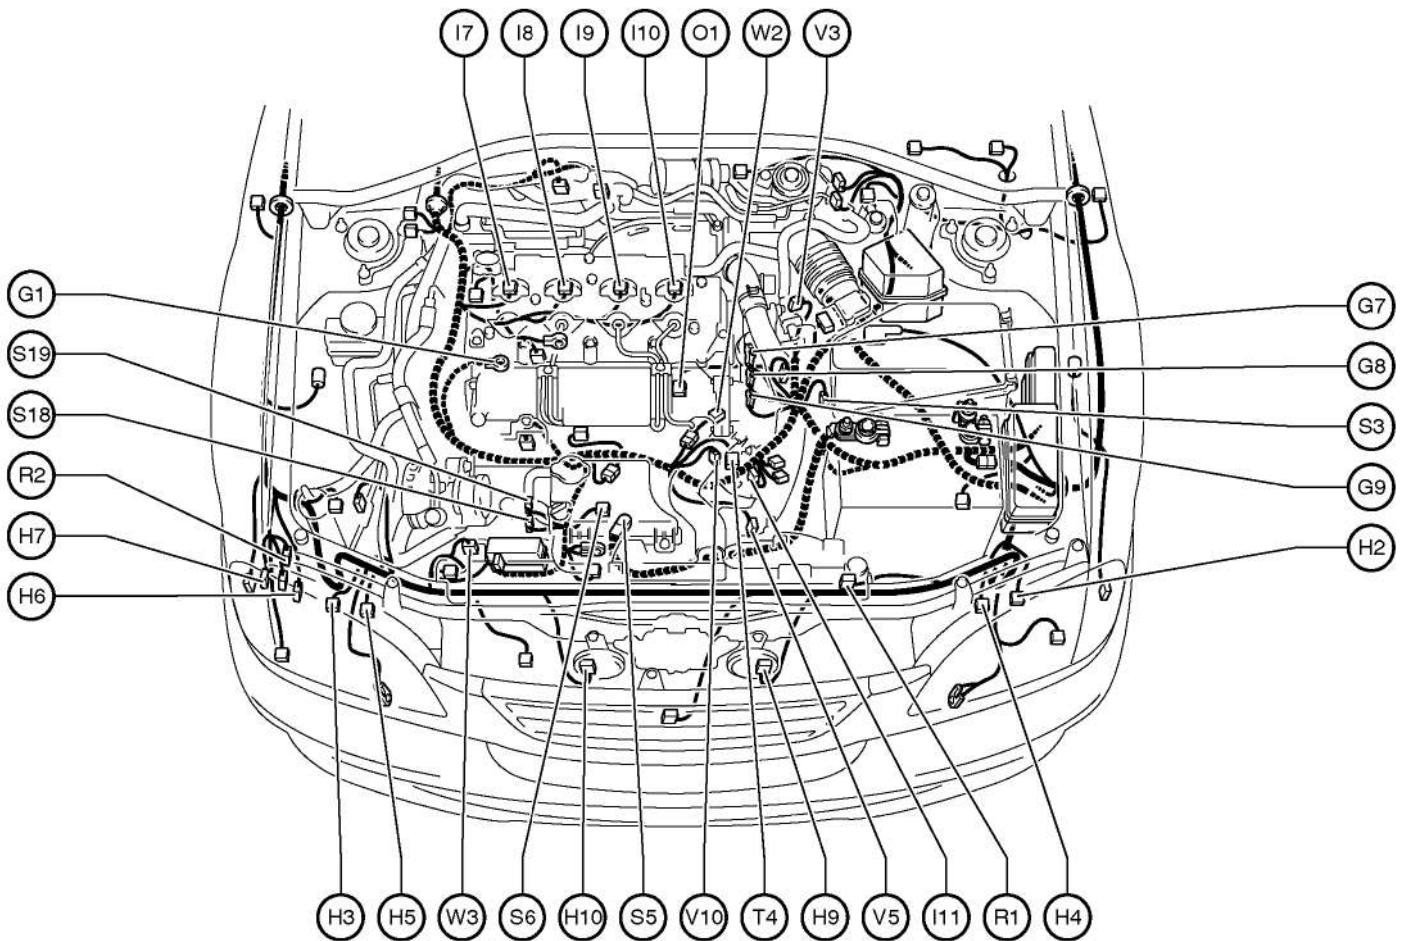

G 1 Glow Plug (Engine)

G 7 Glow Plug (Power Heater)

G 8 Glow Plug (Power Heater)

G 9 Glow Plug (Power Heater)

H 2 Headlight and Front Clearance Light LH

H 3 Headlight and Front Clearance Light RH

H 4 Headlight Beam Level Control Actuator LH

H 5 Headlight Beam Level Control Actuator RH

H 6 Headlight Cleaner Motor

H 7 Headlight Cleaner Relay

H 9 Horn LH

H10 Horn RH

I 7 Injector No.1

I 8 Injector No.2

I 9 Injector No.3

I 10 Injector No.4

I 11 Intake Air Temp. Sensor

O 1 Oil Pressure SW

R 1 Radiator Fan Motor

R 2 Rear Washer Motor

S 3 Speed Sensor

S 5 Starter

S 6 Starter

S18 Suction Control Valve 1

S19 Suction Control Valve 2

T 4 Turbo Pressure Sensor

V 3 VRV (EGR)

V 5 VSV (EGR)

V10 VSV (Turbo Pressure Sensor)


W 2 Water Temp. Sensor

W 3 Water Temp. SW

E ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[LHD : 2C-TE]

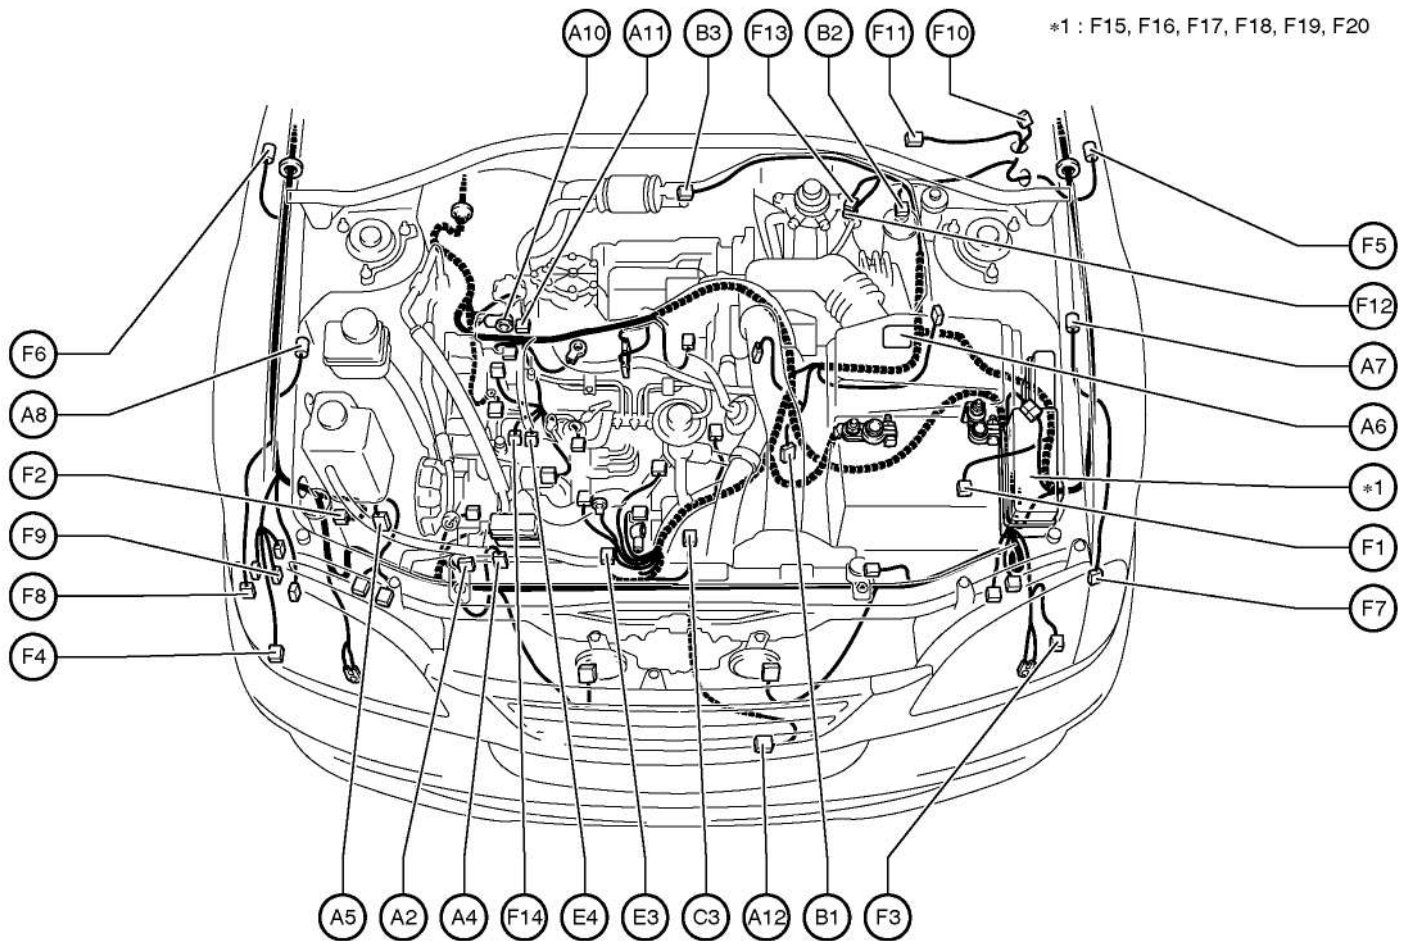


- A 2 A/C Condenser Fan Motor
- A 4 A/C Magnetic Clutch and Lock Sensor
- A 5 A/C Triple Pressure SW
(A/C Dual and Single Pressure SW)
- A 6 ABS ECU with Actuator
- A 7 ABS Speed Sensor Front LH
- A 8 ABS Speed Sensor Front RH
- A10 Alternator
- A11 Alternator
- A12 Ambient Temp. Sensor
- B 1 Back-Up Light SW
- B 2 Brake Fluid Level Warning SW
- B 3 Brake Vacuum Warning SW
- C 3 Crankshaft Position Sensor
- E 3 Engine Oil Level Sensor
- E 4 Engine Speed Sensor

- F 1 Front Airbag Sensor LH
- F 2 Front Airbag Sensor RH
- F 3 Front Fog Light LH
- F 4 Front Fog Light RH
- F 5 Front Side Turn Signal Light LH
- F 6 Front Side Turn Signal Light RH
- F 7 Front Turn Signal Light LH
- F 8 Front Turn Signal Light RH
- F 9 Front Washer Motor
- F10 Front Window Deicer
- F11 Front Wiper Motor
- F12 Fuel Heater
- F13 Fuel Sedimentary SW
- F14 Fuel Temp. Sensor
- F15 Fusible Link Block
- F16 Fusible Link Block
- F17 Fusible Link Block
- F18 Fusible Link Block
- F19 Fusible Link Block
- F20 Fusible Link Block

Position of Parts in Engine Compartment

[LHD : 2C-TE]

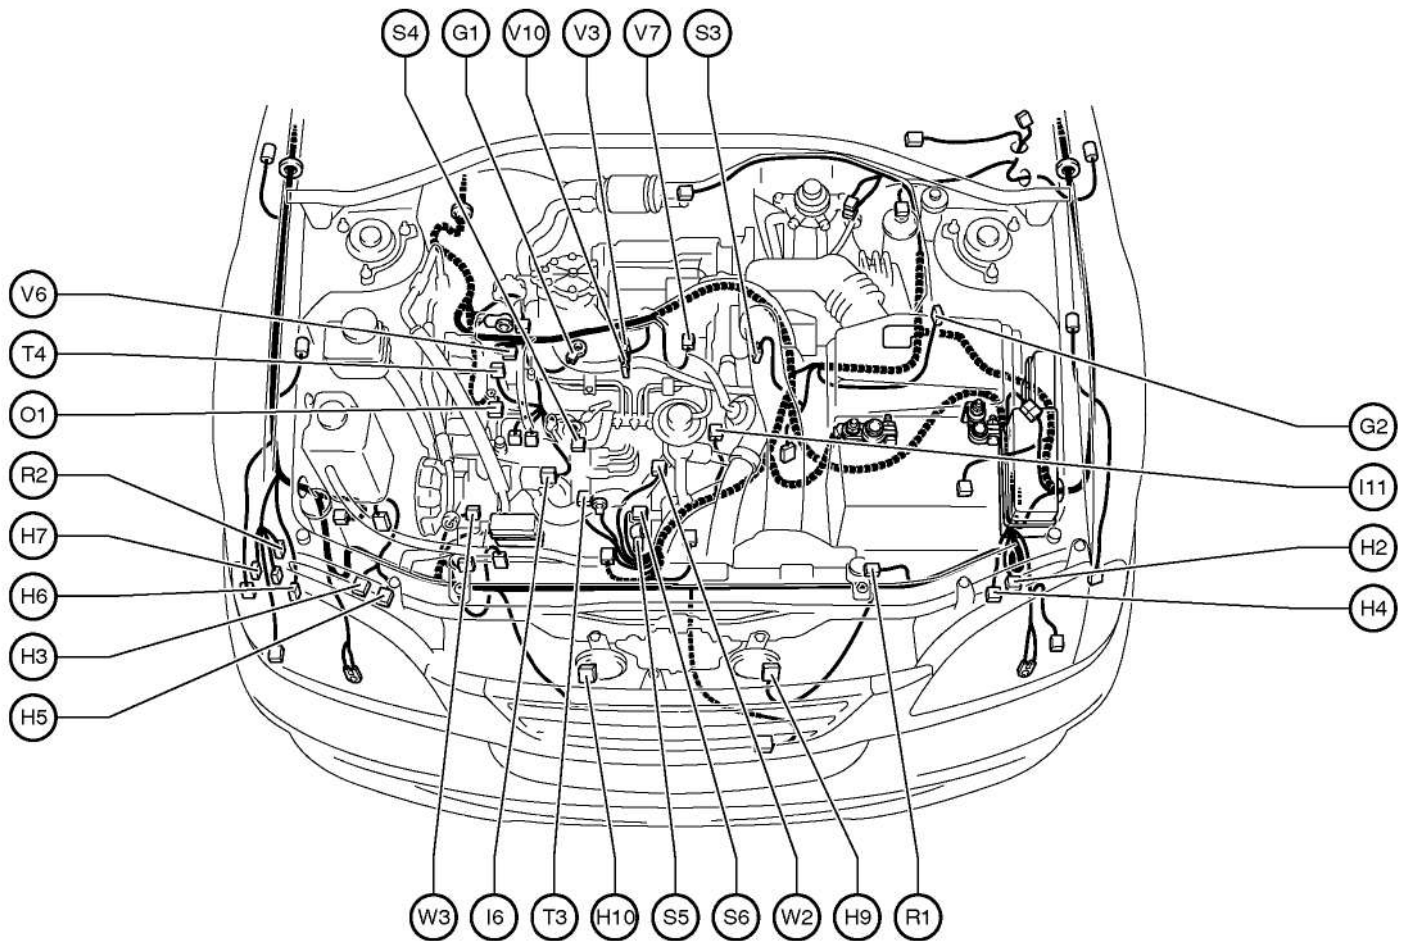

G 1 Glow Plug (Engine)
G 2 Glow Plug Relay

H 2 Headlight and Front Clearance Light LH
H 3 Headlight and Front Clearance Light RH
H 4 Headlight Beam Level Control Actuator LH
H 5 Headlight Beam Level Control Actuator RH
H 6 Headlight Cleaner Motor
H 7 Headlight Cleaner Relay
H 9 Horn LH
H10 Horn RH

I 6 Injection Pump
I 11 Intake Air Temp. Sensor

O 1 Oil Pressure SW

R 1 Radiator Fan Motor
R 2 Rear Washer Motor

S 3 Speed Sensor
S 4 Spill Control Valve
S 5 Starter
S 6 Starter

T 3 Timing Control Valve
T 4 Turbo Pressure Sensor


V 3 VRV (EGR)
V 6 VSV (Fully Closed)
V 7 VSV (Idle Opening)
V10 VSV (Turbo Pressure Sensor)

W 2 Water Temp. Sensor
W 3 Water Temp. SW

E ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[LHD : 2C-T]

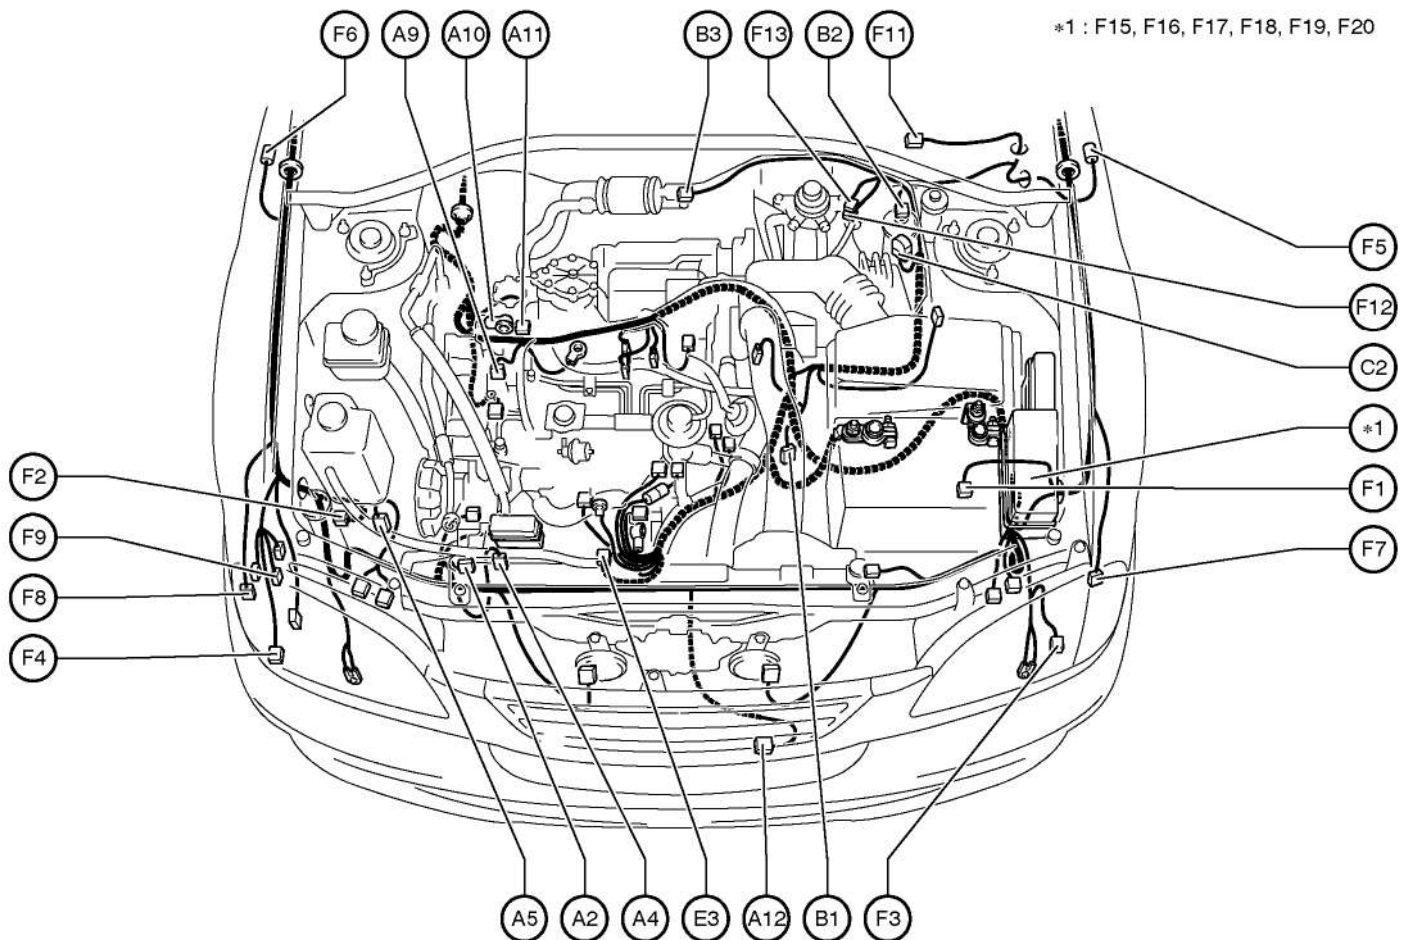


- A 2 A/C Condenser Fan Motor
- A 4 A/C Magnetic Clutch and Lock Sensor
- A 5 A/C Triple Pressure SW
(A/C Dual and Single Pressure SW)
- A 9 Accelerator Pedal Position Sensor
- A10 Alternator
- A11 Alternator
- A12 Ambient Temp. Sensor
- B 1 Back-Up Light SW
- B 2 Brake Fluid Level Warning SW
- B 3 Brake Vacuum Warning SW
- C 2 Check Connector
- E 3 Engine Oil Level Sensor

- F 1 Front Airbag Sensor LH
- F 2 Front Airbag Sensor RH
- F 3 Front Fog Light LH
- F 4 Front Fog Light RH
- F 5 Front Side Turn Signal Light LH
- F 6 Front Side Turn Signal Light RH
- F 7 Front Turn Signal Light LH
- F 8 Front Turn Signal Light RH
- F 9 Front Washer Motor
- F11 Front Wiper Motor
- F12 Fuel Heater
- F13 Fuel Sedimentary SW
- F15 Fusible Link Block
- F16 Fusible Link Block
- F17 Fusible Link Block
- F18 Fusible Link Block
- F19 Fusible Link Block
- F20 Fusible Link Block

Position of Parts in Engine Compartment

[LHD : 2C-T]

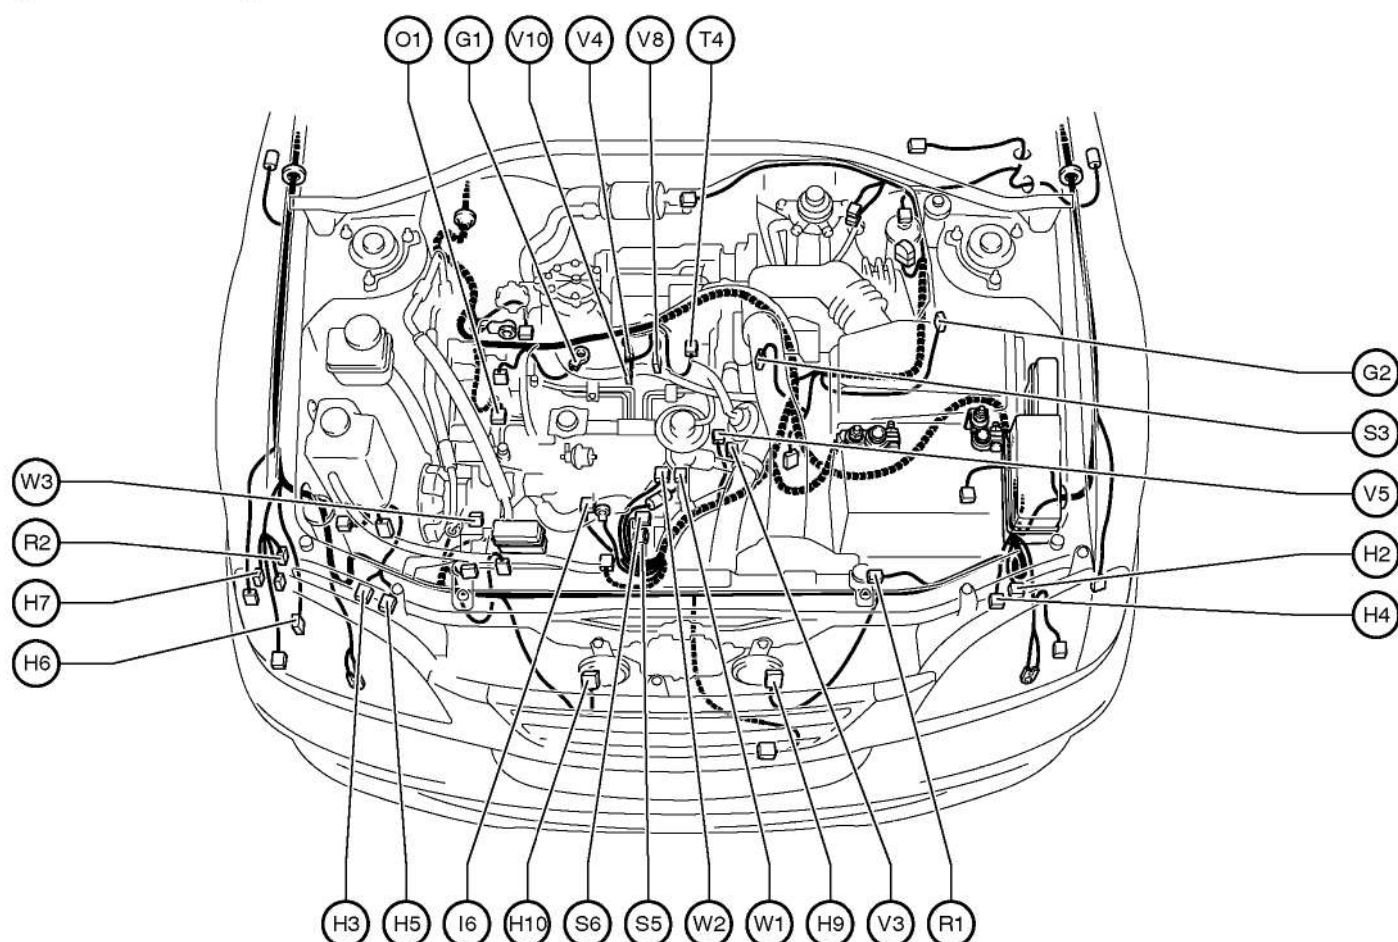

G 1 Glow Plug (Engine)

G 2 Glow Plug Relay

H 2 Headlight and Front Clearance Light LH

H 3 Headlight and Front Clearance Light RH

H 4 Headlight Beam Level Control Actuator LH

H 5 Headlight Beam Level Control Actuator RH

H 6 Headlight Cleaner Motor

H 7 Headlight Cleaner Relay

H 9 Horn LH

H10 Horn RH

I 6 Injection Pump

O 1 Oil Pressure SW

R 1 Radiator Fan Motor

R 2 Rear Washer Motor

S 3 Speed Sensor

S 5 Starter

S 6 Starter

T 4 Turbo Pressure Sensor

V 3 VRV (EGR)

V 4 VSV (BACS)

V 5 VSV (EGR)

V 8 VSV (Idle-Up)

V10 VSV (Turbo Pressure Sensor)

W 1 Water Temp. Sender


W 2 Water Temp. Sensor

W 3 Water Temp. SW

E ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

[LHD]

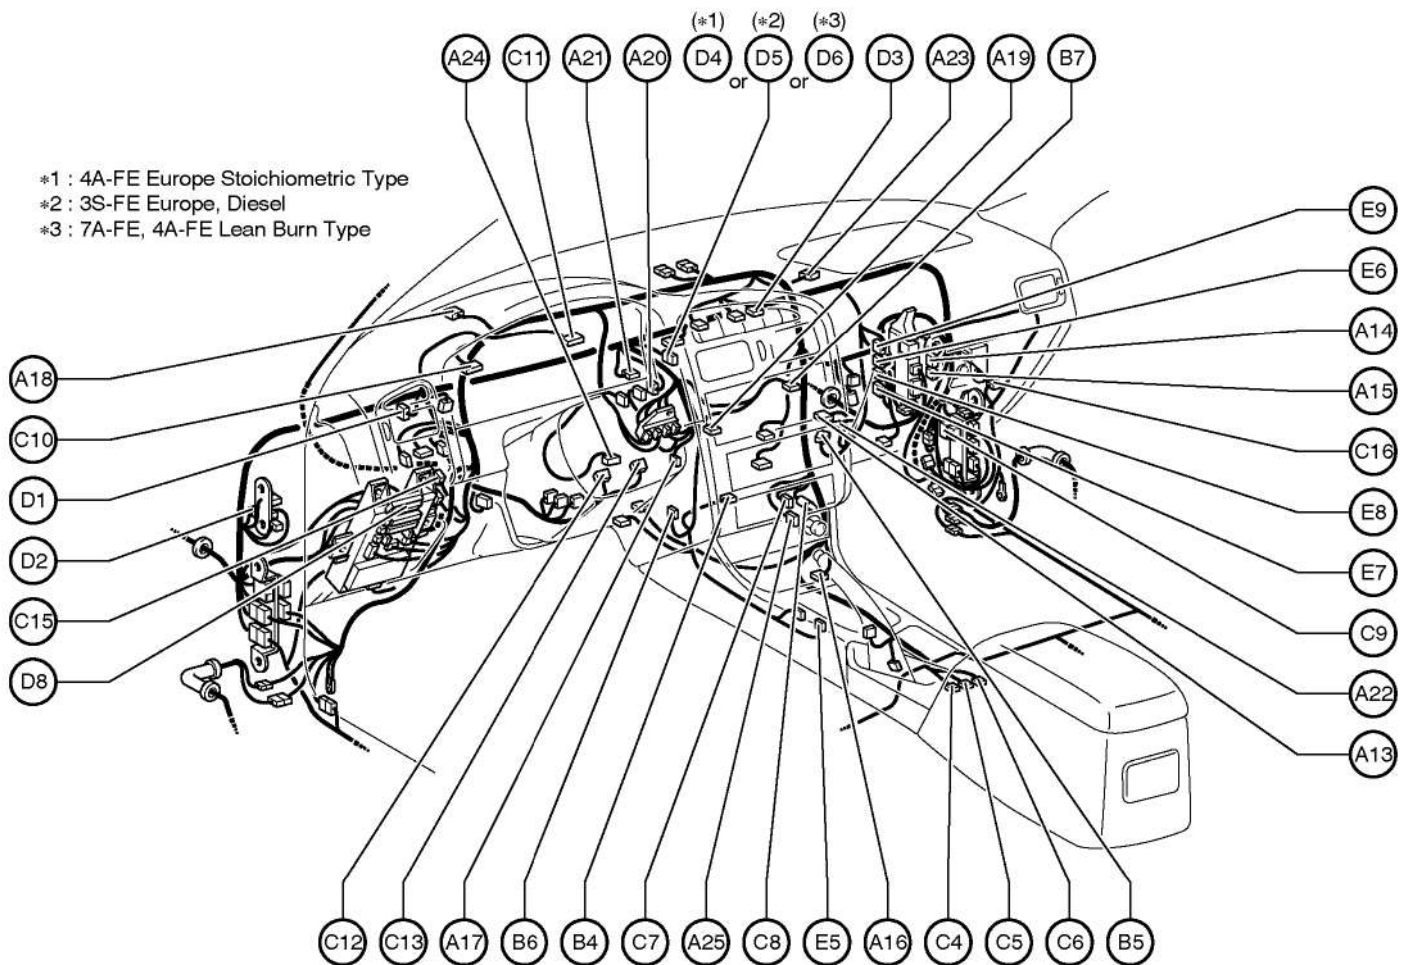


- *1 : 4A-FE Europe Stoichiometric Type
- *2 : 3S-FE Europe, Diesel
- *3 : 7A-FE, 4A-FE Lean Burn Type

- A13 A/C Amplifier
- A14 A/C Amplifier
- A15 A/C Amplifier
- A16 A/C Evaporator Temp. Sensor
- A17 A/C Room Temp. Sensor
- A18 A/C Solar Sensor
- A19 A/C SW
- A20 Accelerator Pedal Position Sensor
- A21 Accelerator Position SW
- A22 Air Mix Control Servo Motor
- A23 Airbag Squib (Front Passenger Airbag Assembly)
- A24 Airbag Squib (Steering Wheel Pad)
- A25 Ashtray Illumination
- B 4 Blower Controller
- B 5 Blower Motor
- B 6 Blower Resistor
- B 7 Blower SW
- C 4 Center Airbag Sensor Assembly
- C 5 Center Airbag Sensor Assembly
- C 6 Center Airbag Sensor Assembly
- C 7 Cigarette Lighter

- C 8 Cigarette Lighter Illumination
- C 9 Circuit Opening Relay
- C10 Combination Meter
- C11 Combination Meter
- C12 Combination SW
- C13 Combination SW
- C15 Curtain Airbag Squib LH
- C16 Curtain Airbag Squib RH
- D 1 Daytime Running Light Relay
- D 2 Defogger Relay
- D 3 Deicer SW or Short Connector (Deicer SW)
- D 4 Diode (EFI)
- D 5 Diode (Idle-Up)
- D 6 Diode (Idle-Up)
- D 8 DLC3
- E 5 ECT Pattern Select SW
- E 6 Engine ECU (M/T) or Engine and ECT ECU (A/T)
- E 7 Engine ECU (M/T) or Engine and ECT ECU (A/T)
- E 8 Engine ECU (M/T) or Engine and ECT ECU (A/T)
- E 9 Engine ECU

Position of Parts in Instrument Panel

[LHD]

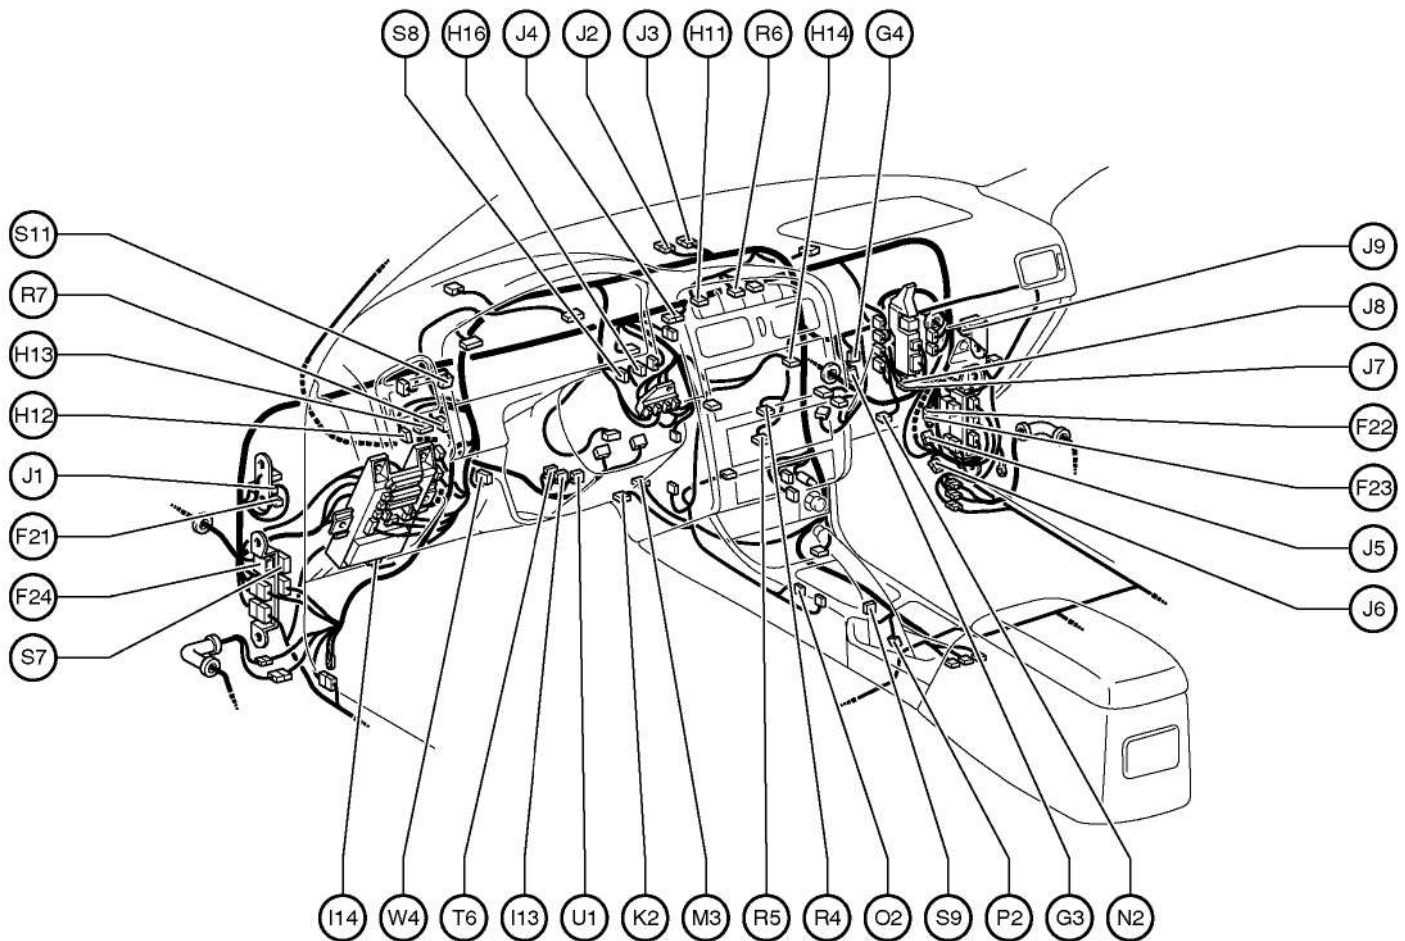

F21 Front Fog Light Relay
 F22 Fuel Control Connector
 F23 Fuel Control Connector
 F24 Fuse Box

G 3 Glove Box Light
 G 4 Glove Box Light SW

H11 Hazard SW
 H12 Headlight Beam Level Control SW
 H13 Headlight Cleaner SW
 H14 Heater Control SW
 H16 Heater SW

I 13 Ignition SW
 I 14 Integration Relay

J 1 Junction Connector
 J 2 Junction Connector
 J 3 Junction Connector
 J 4 Junction Connector
 J 5 Junction Connector
 J 6 Junction Connector
 J 7 Junction Connector
 J 8 Junction Connector
 J 9 Junction Connector

K 2 Kick Down SW

M 3 Max Hot SW

N 2 Noise Filter (Ignition System)

O 2 O/D Main SW

P 2 Parking Brake SW

R 4 Radio and Player
 R 5 Radio and Player
 R 6 Rear Window Defogger SW
 R 7 Remote Control Mirror SW

S 7 Seat Heater Relay
 S 8 Seat Heater SW (Driver's Seat)
 S 9 Seat Heater SW (Front Passenger's Seat)
 S11 Stop Light SW

T 6 Transponder Key ECU


U 1 Unlock Warning SW

W 4 Wireless Door Lock ECU

E ELECTRICAL WIRING ROUTING

Position of Parts in Body

[LHD : S/D]

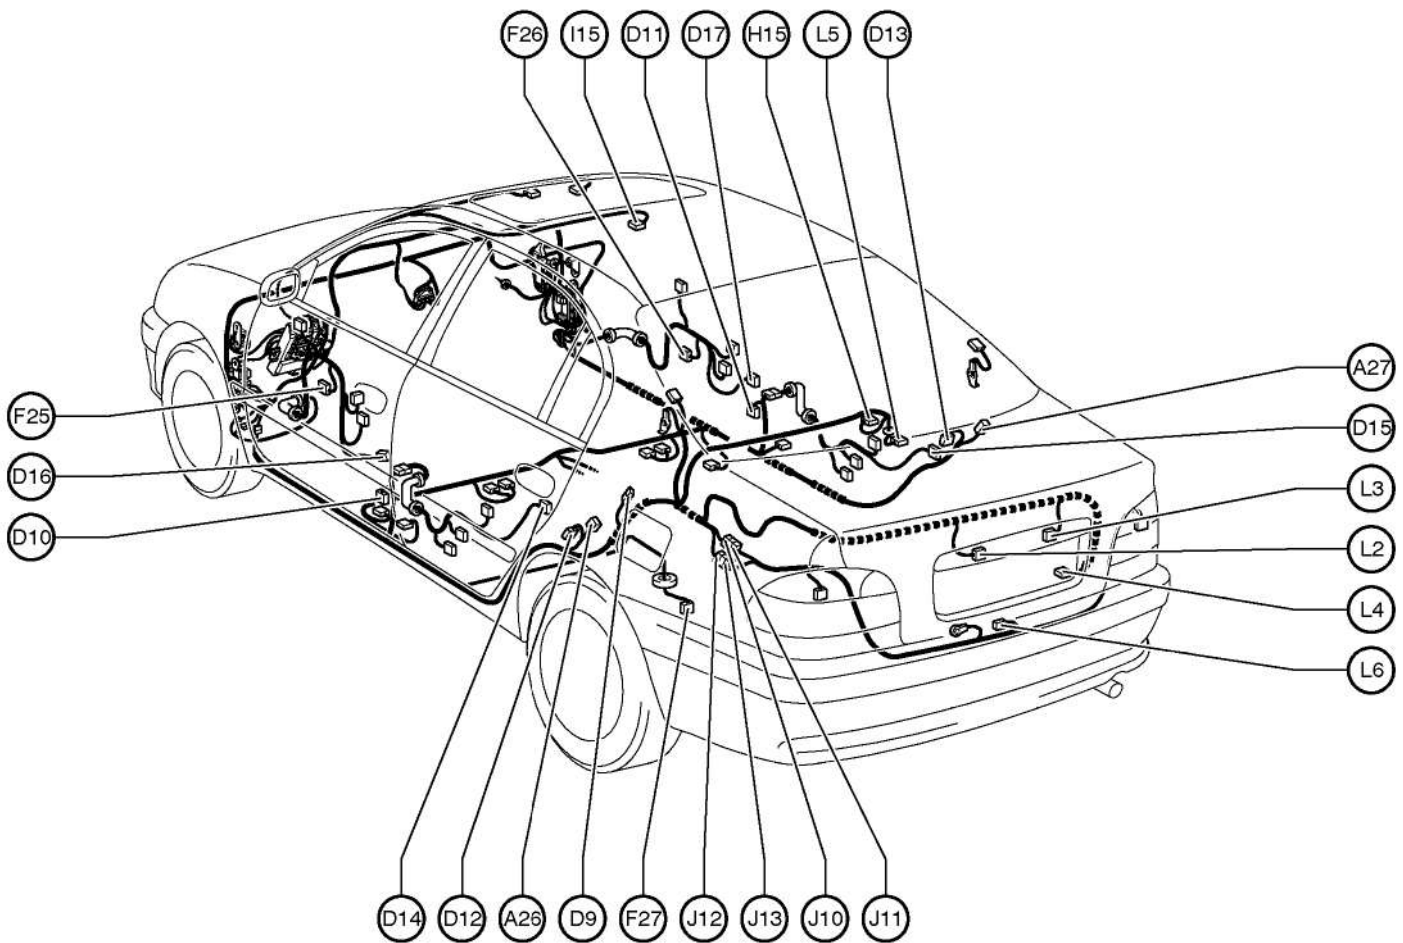

A26 ABS Speed Sensor Rear LH
A27 ABS Speed Sensor Rear RH

D 9 Diode (Luggage Room Light)
D10 Door Courtesy SW Front LH
D11 Door Courtesy SW Front RH
D12 Door Courtesy SW Rear LH
D13 Door Courtesy SW Rear RH
D14 Door Lock Motor Rear LH
D15 Door Lock Motor Rear RH
D16 Door Lock Motor, Door Key Lock and
Unlock SW Front LH
D17 Door Lock Motor, Door Key Lock and
Unlock SW Front RH

F25 Front Door Speaker LH
F26 Front Door Speaker RH
F27 Fuel Sender and Fuel Pump

H15 High Mounted Stop Light


I 15 Interior Light

J 10 Junction Connector
J 11 Junction Connector
J 12 Junction Connector
J 13 Junction Connector

L 2 License Plate Light LH
L 3 License Plate Light RH
L 4 Luggage Compartment Door Lock Motor
L 5 Luggage Room Light
L 6 Luggage Room Light SW

Position of Parts in Body

[LHD : S/D]

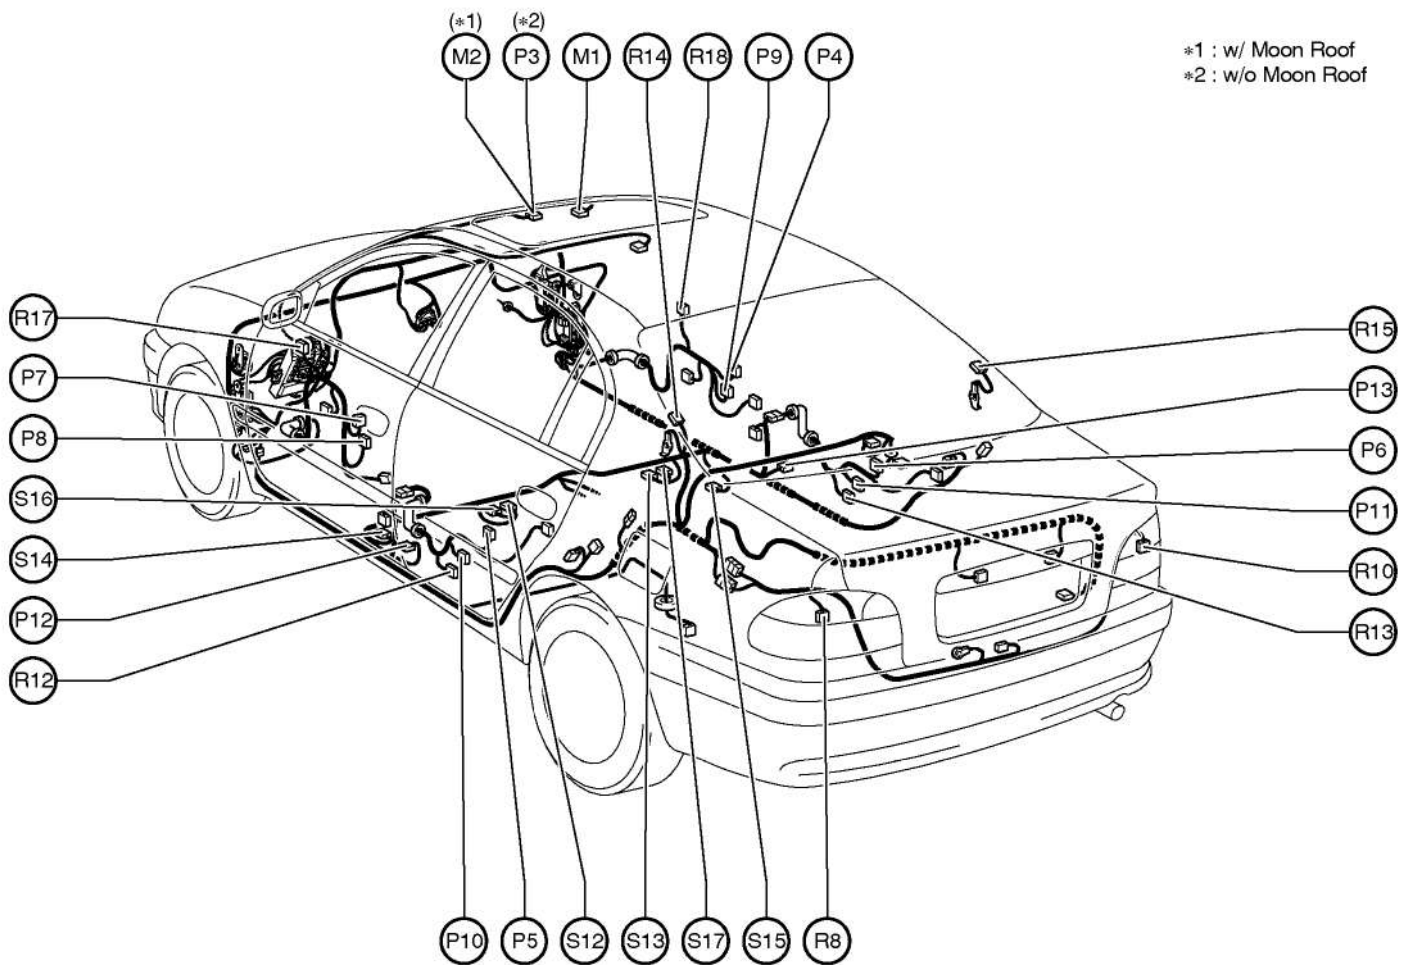

M 1 Moon Roof Control Relay and Motor
M 2 Moon Roof Control SW

P 3 Personal Light
P 4 Power Window Control SW (Front Passenger Side)
P 5 Power Window Control SW Rear LH
P 6 Power Window Control SW Rear RH
P 7 Power Window Master SW
P 8 Power Window Motor (Driver Side)
P 9 Power Window Motor (Front Passenger Side)
P10 Power Window Motor Rear LH
P11 Power Window Motor Rear RH
P12 Pretensioner LH
P13 Pretensioner RH


R 8 Rear Combination Light LH
R10 Rear Combination Light RH
R12 Rear Door Speaker LH
R13 Rear Door Speaker RH
R14 Rear Window Defogger
R15 Rear Window Defogger
R17 Remote Control Mirror LH
R18 Remote Control Mirror RH

S12 Seat Heater (Driver's Seat)
S13 Seat Heater (Front Passenger's Seat)
S14 Side Airbag Sensor LH
S15 Side Airbag Sensor RH
S16 Side Airbag Squib LH
S17 Side Airbag Squib RH

E ELECTRICAL WIRING ROUTING

Position of Parts in Body

[LHD : L/B]

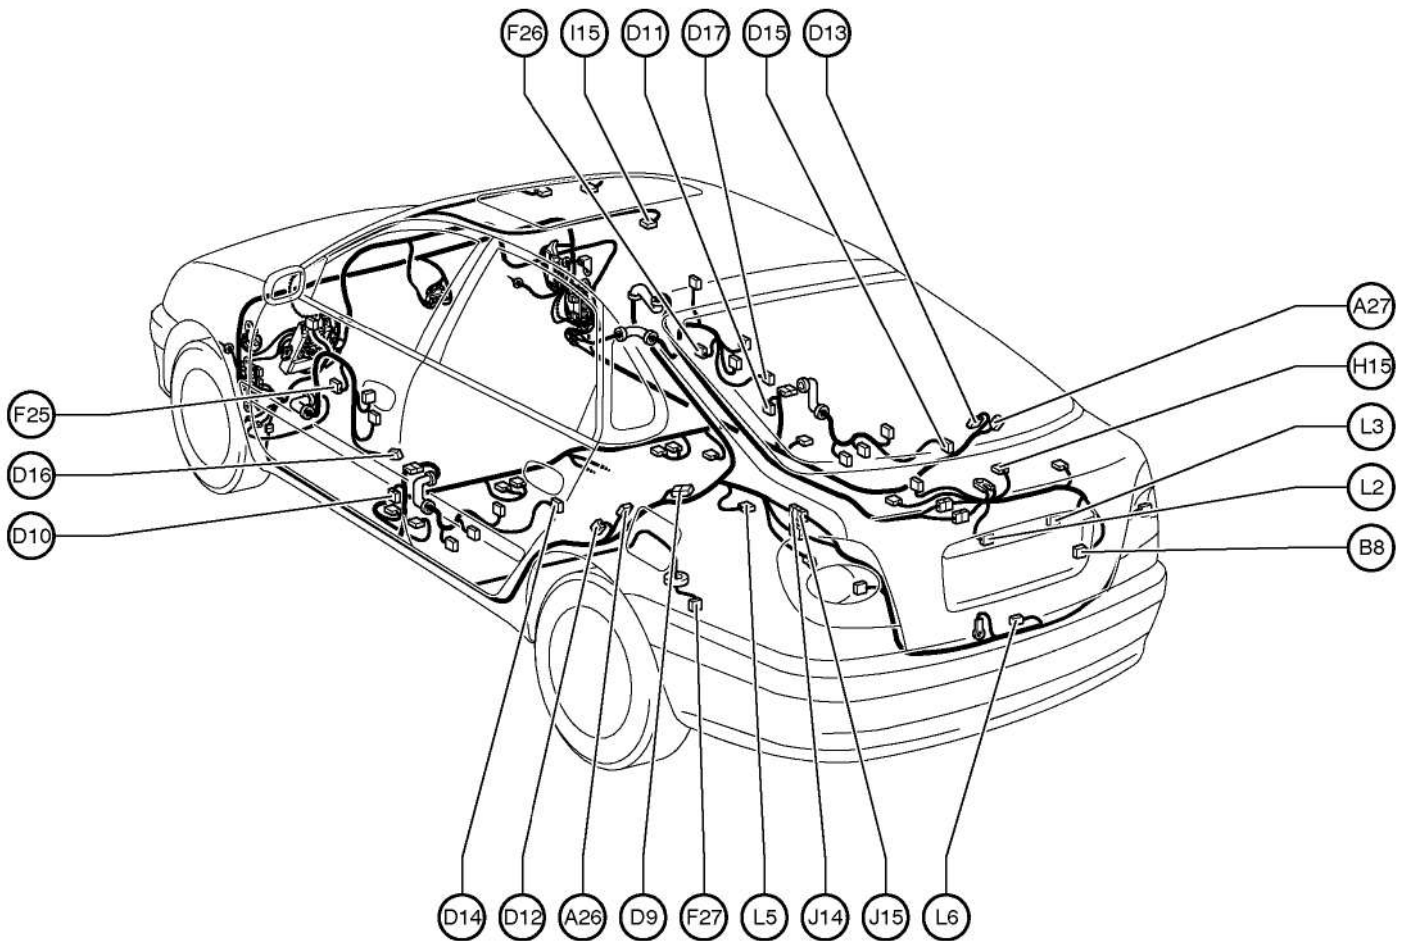

A26 ABS Speed Sensor Rear LH
A27 ABS Speed Sensor Rear RH

B 8 Back Door Lock Motor

D 9 Diode (Luggage Room Light)
D10 Door Courtesy SW Front LH
D11 Door Courtesy SW Front RH
D12 Door Courtesy SW Rear LH
D13 Door Courtesy SW Rear RH
D14 Door Lock Motor Rear LH
D15 Door Lock Motor Rear RH
D16 Door Lock Motor, Door Key Lock and
Unlock SW Front LH
D17 Door Lock Motor, Door Key Lock and
Unlock SW Front RH

F25 Front Door Speaker LH
F26 Front Door Speaker RH
F27 Fuel Sender and Fuel Pump

H15 High Mounted Stop Light


I 15 Interior Light

J 14 Junction Connector
J 15 Junction Connector

L 2 License Plate Light LH
L 3 License Plate Light RH
L 5 Luggage Room Light
L 6 Luggage Room Light SW

Position of Parts in Body

[LHD : L/B]

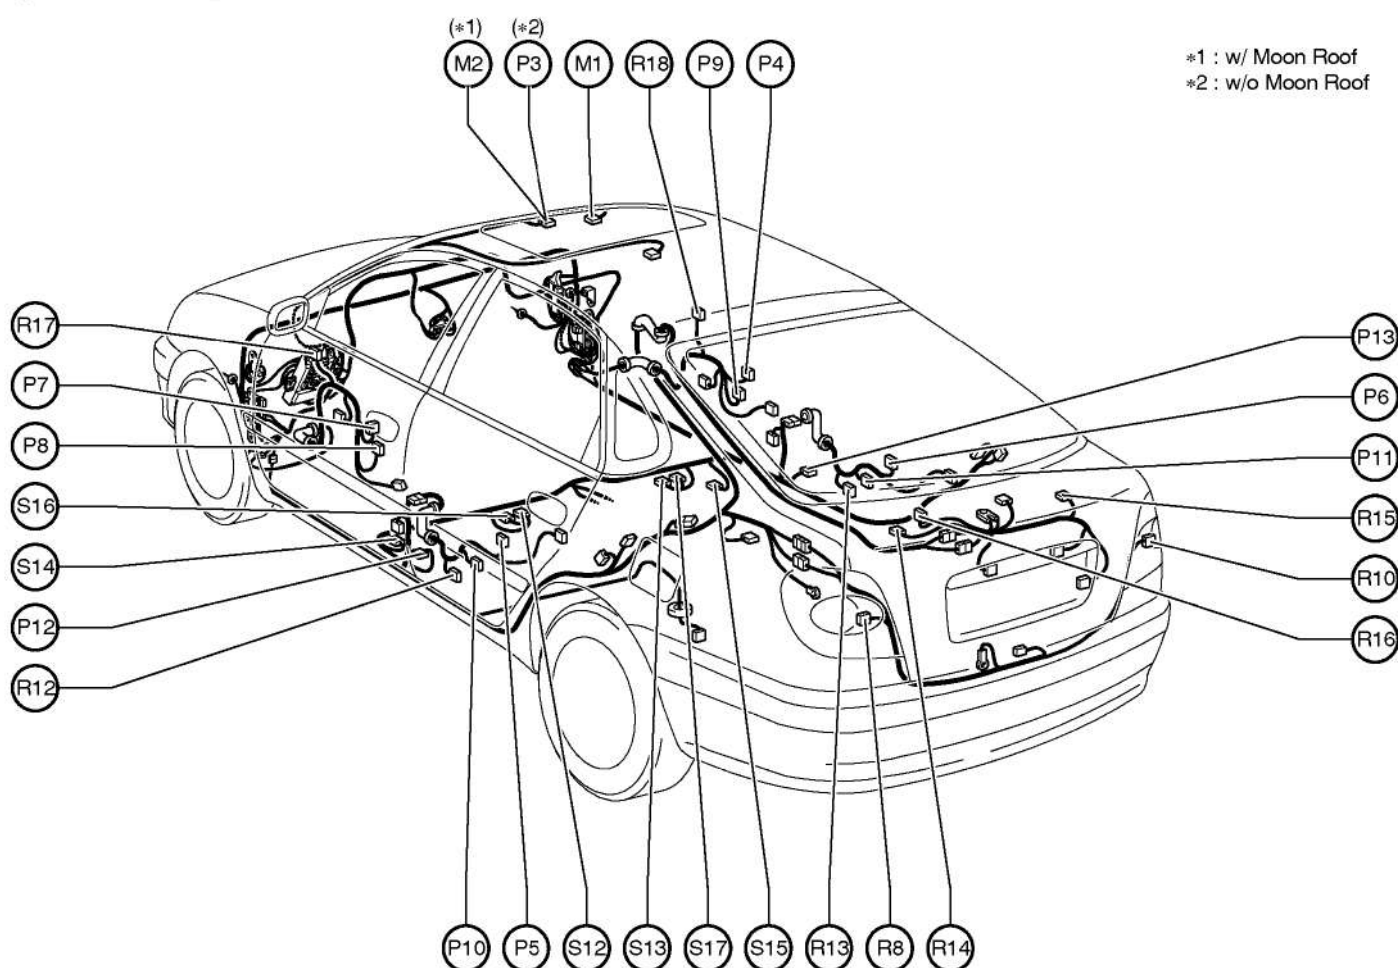

M 1 Moon Roof Control Relay and Motor
M 2 Moon Roof Control SW

P 3 Personal Light
P 4 Power Window Control SW (Front Passenger Side)
P 5 Power Window Control SW Rear LH
P 6 Power Window Control SW Rear RH
P 7 Power Window Master SW
P 8 Power Window Motor (Driver Side)
P 9 Power Window Motor (Front Passenger Side)
P10 Power Window Motor Rear LH
P11 Power Window Motor Rear RH
P12 Pretensioner LH
P13 Pretensioner RH


R 8 Rear Combination Light LH
R10 Rear Combination Light RH
R12 Rear Door Speaker LH
R13 Rear Door Speaker RH
R14 Rear Window Defogger
R15 Rear Window Defogger
R16 Rear Wiper Motor and Relay
R17 Remote Control Mirror LH
R18 Remote Control Mirror RH

S12 Seat Heater (Driver's Seat)
S13 Seat Heater (Front Passenger's Seat)
S14 Side Airbag Sensor LH
S15 Side Airbag Sensor RH
S16 Side Airbag Squib LH
S17 Side Airbag Squib RH

E ELECTRICAL WIRING ROUTING

Position of Parts in Body

[LHD : W/G]

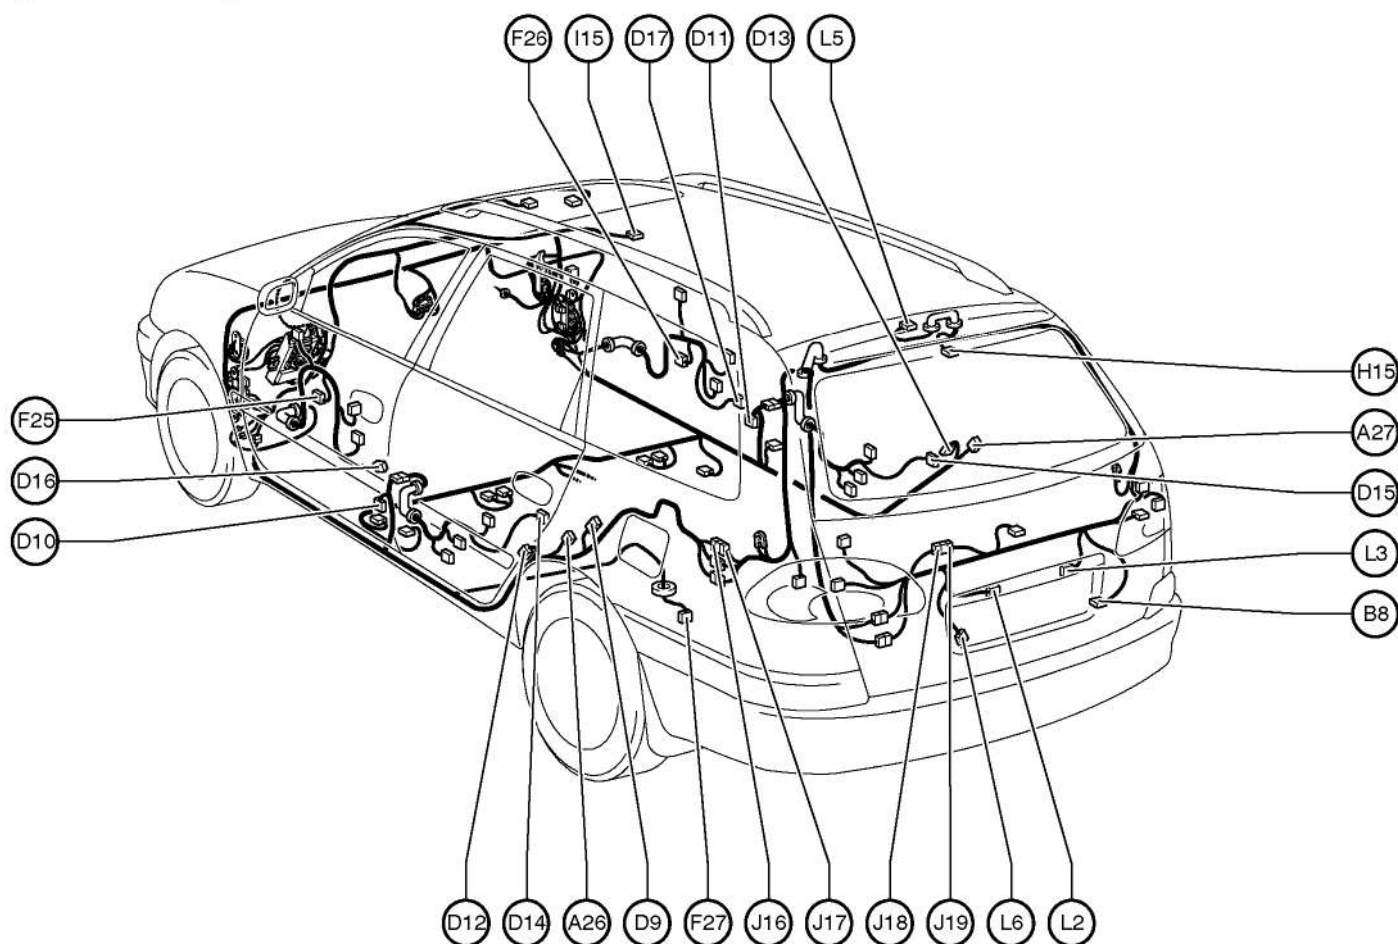

A26 ABS Speed Sensor Rear LH
A27 ABS Speed Sensor Rear RH

B 8 Back Door Lock Motor

D 9 Diode (Luggage Room Light)
D10 Door Courtesy SW Front LH
D11 Door Courtesy SW Front RH
D12 Door Courtesy SW Rear LH
D13 Door Courtesy SW Rear RH
D14 Door Lock Motor Rear LH
D15 Door Lock Motor Rear RH
D16 Door Lock Motor, Door Key Lock and
Unlock SW Front LH
D17 Door Lock Motor, Door Key Lock and
Unlock SW Front RH

F 25 Front Door Speaker LH
F 26 Front Door Speaker RH
F 27 Fuel Sender and Fuel Pump

H15 High Mounted Stop Light


I 15 Interior Light

J 16 Junction Connector
J 17 Junction Connector
J 18 Junction Connector
J 19 Junction Connector

L 2 License Plate Light LH
L 3 License Plate Light RH
L 5 Luggage Room Light
L 6 Luggage Room Light SW

Position of Parts in Body

[LHD : W/G]

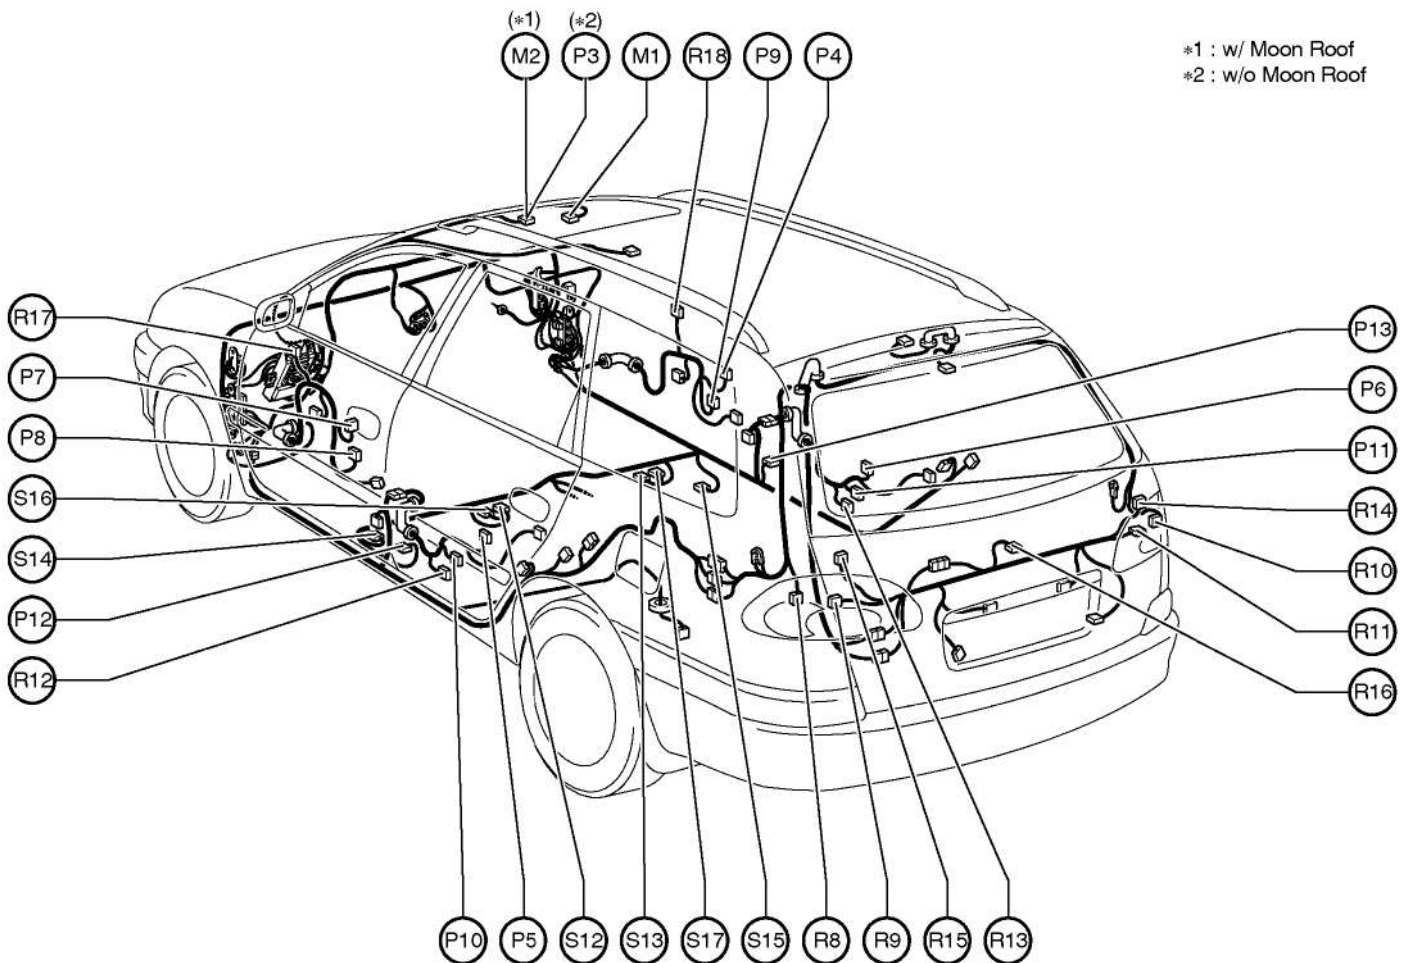

*1 : w/ Moon Roof
*2 : w/o Moon Roof

M 1 Moon Roof Control Relay and Motor
M 2 Moon Roof Control SW

P 3 Personal Light
P 4 Power Window Control SW (Front Passenger Side)
P 5 Power Window Control SW Rear LH
P 6 Power Window Control SW Rear RH
P 7 Power Window Master SW
P 8 Power Window Motor (Driver Side)
P 9 Power Window Motor (Front Passenger Side)
P10 Power Window Motor Rear LH
P11 Power Window Motor Rear RH
P12 Pretensioner LH
P13 Pretensioner RH


R 8 Rear Combination Light LH
R 9 Rear Combination Light LH
R10 Rear Combination Light RH
R11 Rear Combination Light RH
R12 Rear Door Speaker LH
R13 Rear Door Speaker RH
R14 Rear Window Defogger
R15 Rear Window Defogger
R16 Rear Wiper Motor and Relay
R17 Remote Control Mirror LH
R18 Remote Control Mirror RH

S12 Seat Heater (Driver's Seat)
S13 Seat Heater (Front Passenger's Seat)
S14 Side Airbag Sensor LH
S15 Side Airbag Sensor RH
S16 Side Airbag Squib LH
S17 Side Airbag Squib RH

E ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[RHD : 3S-FE]

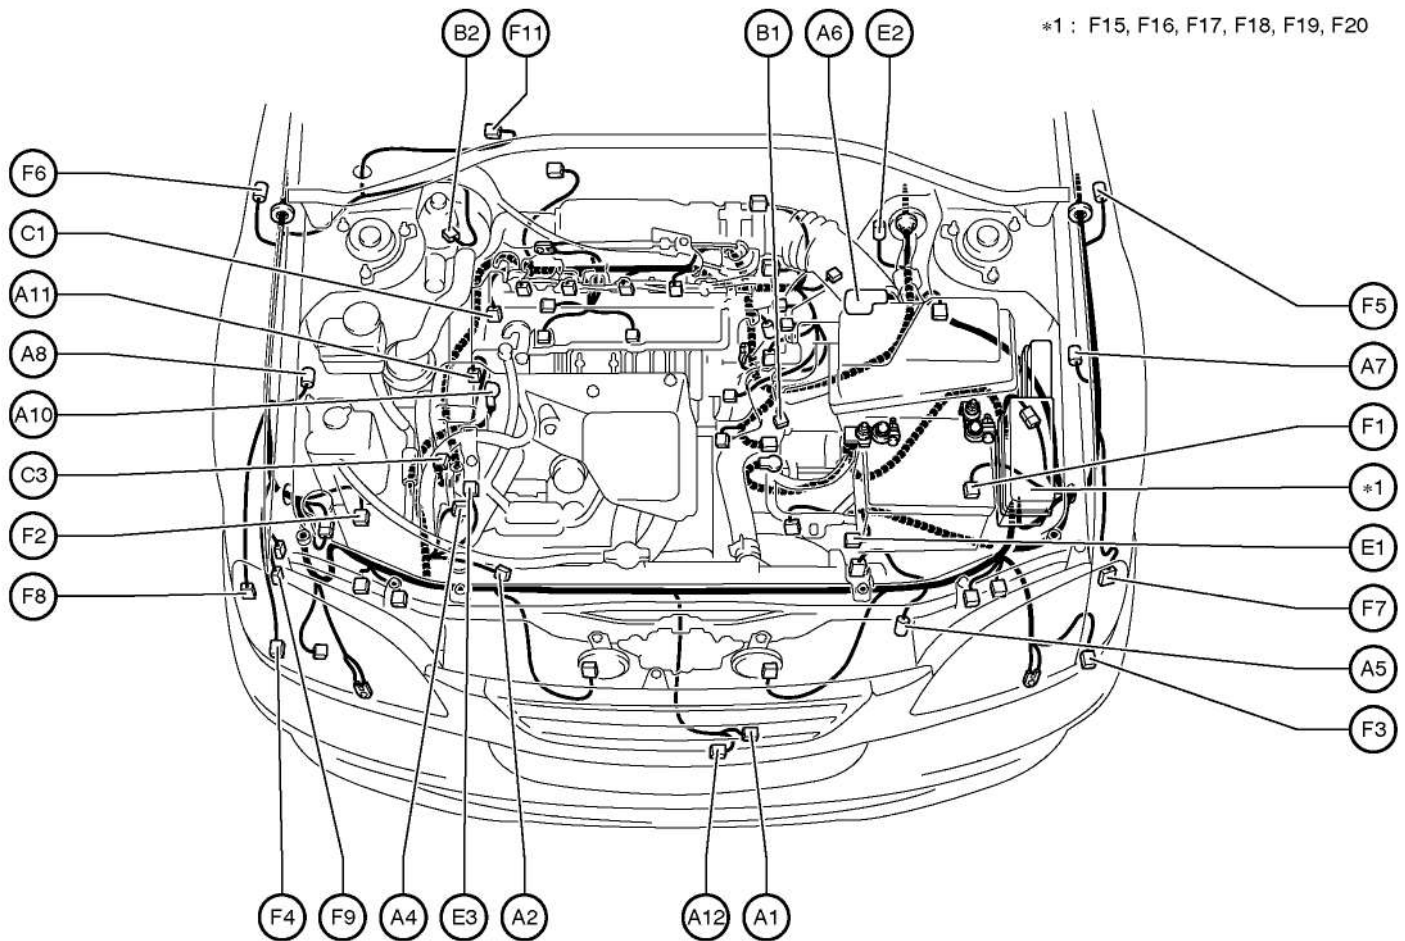


- A 1 A/C Ambient Temp. Sensor
- A 2 A/C Condenser Fan Motor
- A 4 A/C Magnetic Clutch and Lock Sensor
- A 5 A/C Triple Pressure SW
(A/C Dual and Single Pressure SW)
- A 6 ABS ECU with Actuator
- A 7 ABS Speed Sensor Front LH
- A 8 ABS Speed Sensor Front RH
- A10 Alternator
- A11 Alternator
- A12 Ambient Temp. Sensor
- B 1 Back-Up Light SW
- B 2 Brake Fluid Level Warning SW
- C 1 Camshaft Position Sensor
- C 3 Crankshaft Position Sensor

- E 1 ECT Solenoid
- E 2 Engine Hood Courtesy SW
- E 3 Engine Oil Level Sensor

- F 1 Front Airbag Sensor LH
- F 2 Front Airbag Sensor RH
- F 3 Front Fog Light LH
- F 4 Front Fog Light RH
- F 5 Front Side Turn Signal Light LH
- F 6 Front Side Turn Signal Light RH
- F 7 Front Turn Signal Light LH
- F 8 Front Turn Signal Light RH
- F 9 Front Washer Motor
- F11 Front Wiper Motor
- F15 Fusible Link Block
- F16 Fusible Link Block
- F17 Fusible Link Block
- F18 Fusible Link Block
- F19 Fusible Link Block
- F20 Fusible Link Block

Position of Parts in Engine Compartment

[RHD : 3S-FE]

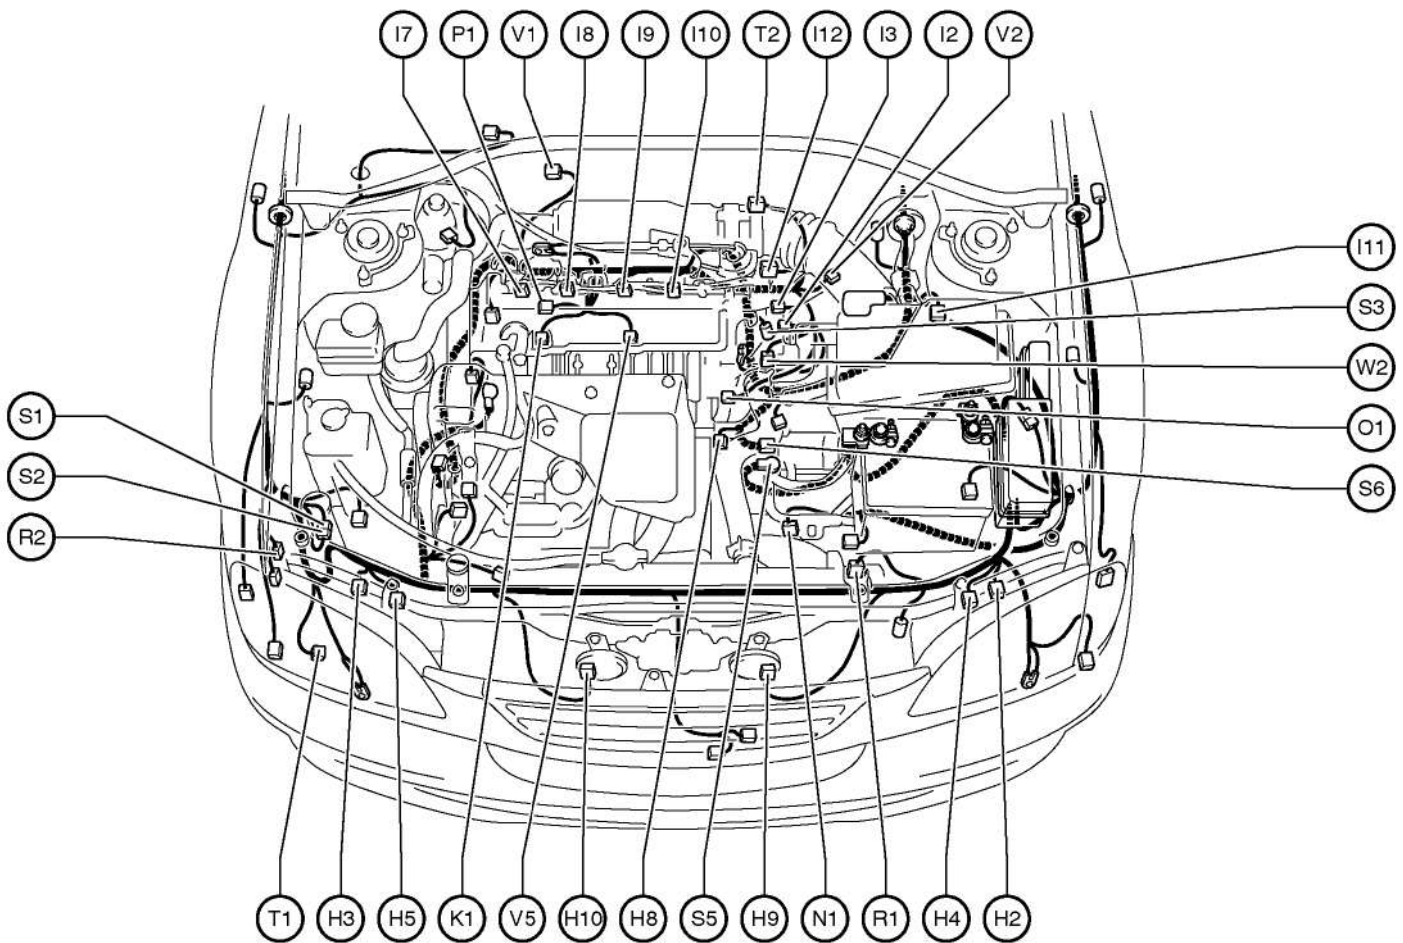

H 2 Headlight and Front Clearance Light LH
 H 3 Headlight and Front Clearance Light RH
 H 4 Headlight Beam Level Control Actuator LH
 H 5 Headlight Beam Level Control Actuator RH
 H 8 Heated Oxygen Sensor
 H 9 Horn LH
 H10 Horn RH

I 2 Ignition Coil and Igniter No.1
 I 3 Ignition Coil and Igniter No.2
 I 7 Injector No.1
 I 8 Injector No.2
 I 9 Injector No.3
 I 10 Injector No.4
 I 11 Intake Air Temp. Sensor
 I 12 ISC Valve

K 1 Knock Sensor

N 1 Neutral Start SW

O 1 Oil Pressure SW

P 1 Power Steering Oil Pressure SW

R 1 Radiator Fan Motor

R 2 Rear Washer Motor

S 1 Short Connector

S 2 Short Connector

S 3 Speed Sensor

S 5 Starter

S 6 Starter

T 1 Theft Deterrent Siren

T 2 Throttle Position Sensor

V 1 Vacuum Sensor

V 2 Variable Resistor


V 5 VSV (EGR)

W 2 Water Temp. Sensor

E ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[RHD : 7A-FE, 4A-FE Lean Burn Type]

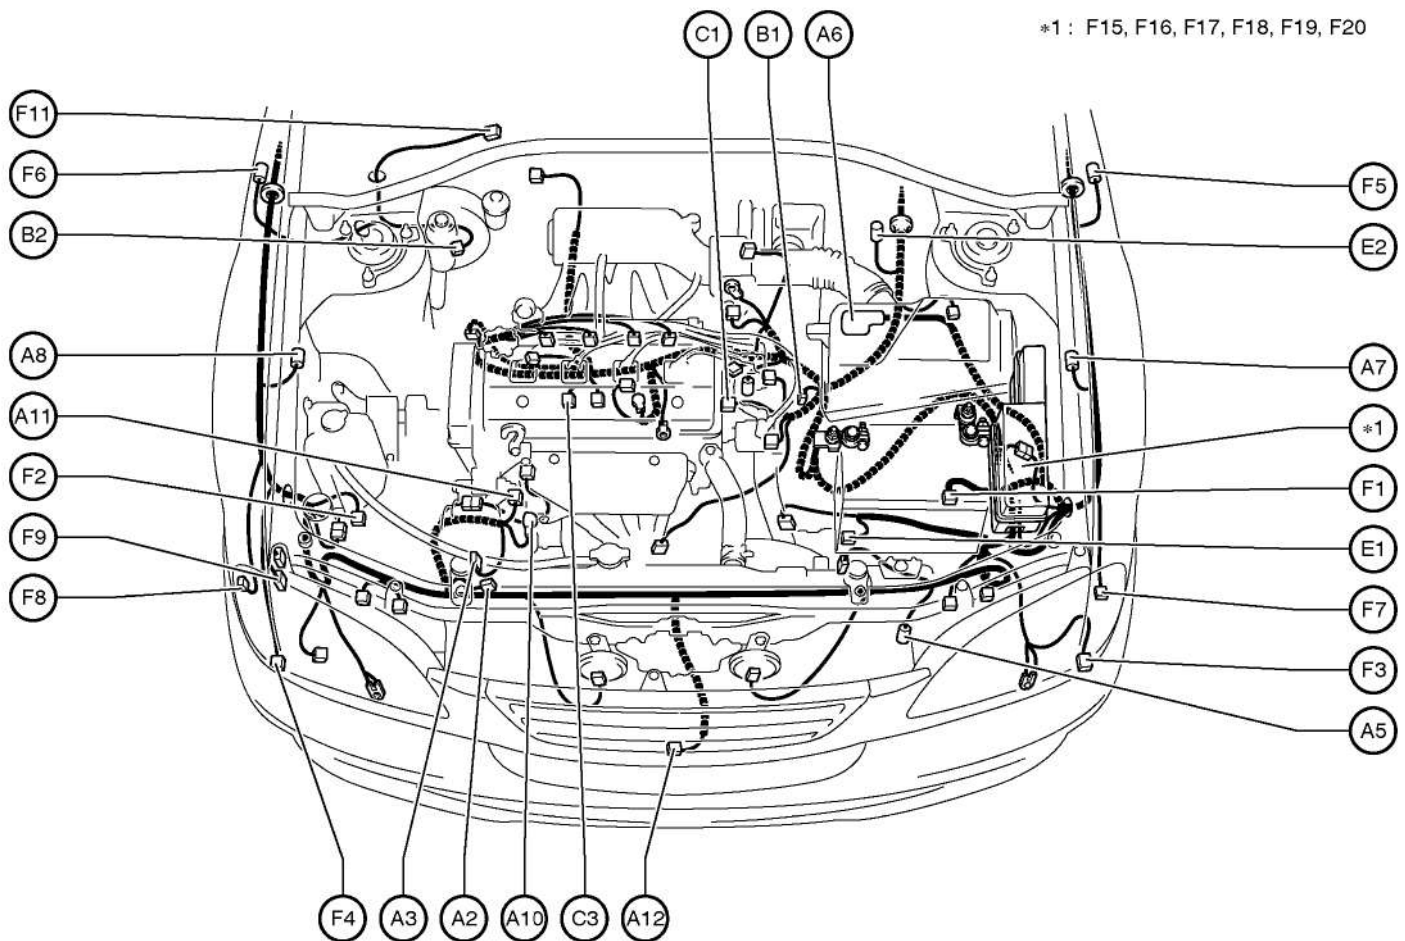

A 2 A/C Condenser Fan Motor
 A 3 A/C Magnetic Clutch
 A 5 A/C Triple Pressure SW
 (A/C Dual and Single Pressure SW)
 A 6 ABS ECU with Actuator
 A 7 ABS Speed Sensor Front LH
 A 8 ABS Speed Sensor Front RH
 A10 Alternator
 A11 Alternator
 A12 Ambient Temp. Sensor

B 1 Back-Up Light SW
 B 2 Brake Fluid Level Warning SW


C 1 Camshaft Position Sensor
 C 3 Crankshaft Position Sensor

E 1 ECT Solenoid
 E 2 Engine Hood Courtesy SW

F 1 Front Airbag Sensor LH
 F 2 Front Airbag Sensor RH
 F 3 Front Fog Light LH
 F 4 Front Fog Light RH
 F 5 Front Side Turn Signal Light LH
 F 6 Front Side Turn Signal Light RH
 F 7 Front Turn Signal Light LH
 F 8 Front Turn Signal Light RH
 F 9 Front Washer Motor
 F11 Front Wiper Motor
 F15 Fusible Link Block
 F16 Fusible Link Block
 F17 Fusible Link Block
 F18 Fusible Link Block
 F19 Fusible Link Block
 F20 Fusible Link Block

Position of Parts in Engine Compartment

[RHD : 7A-FE, 4A-FE Lean Burn Type]

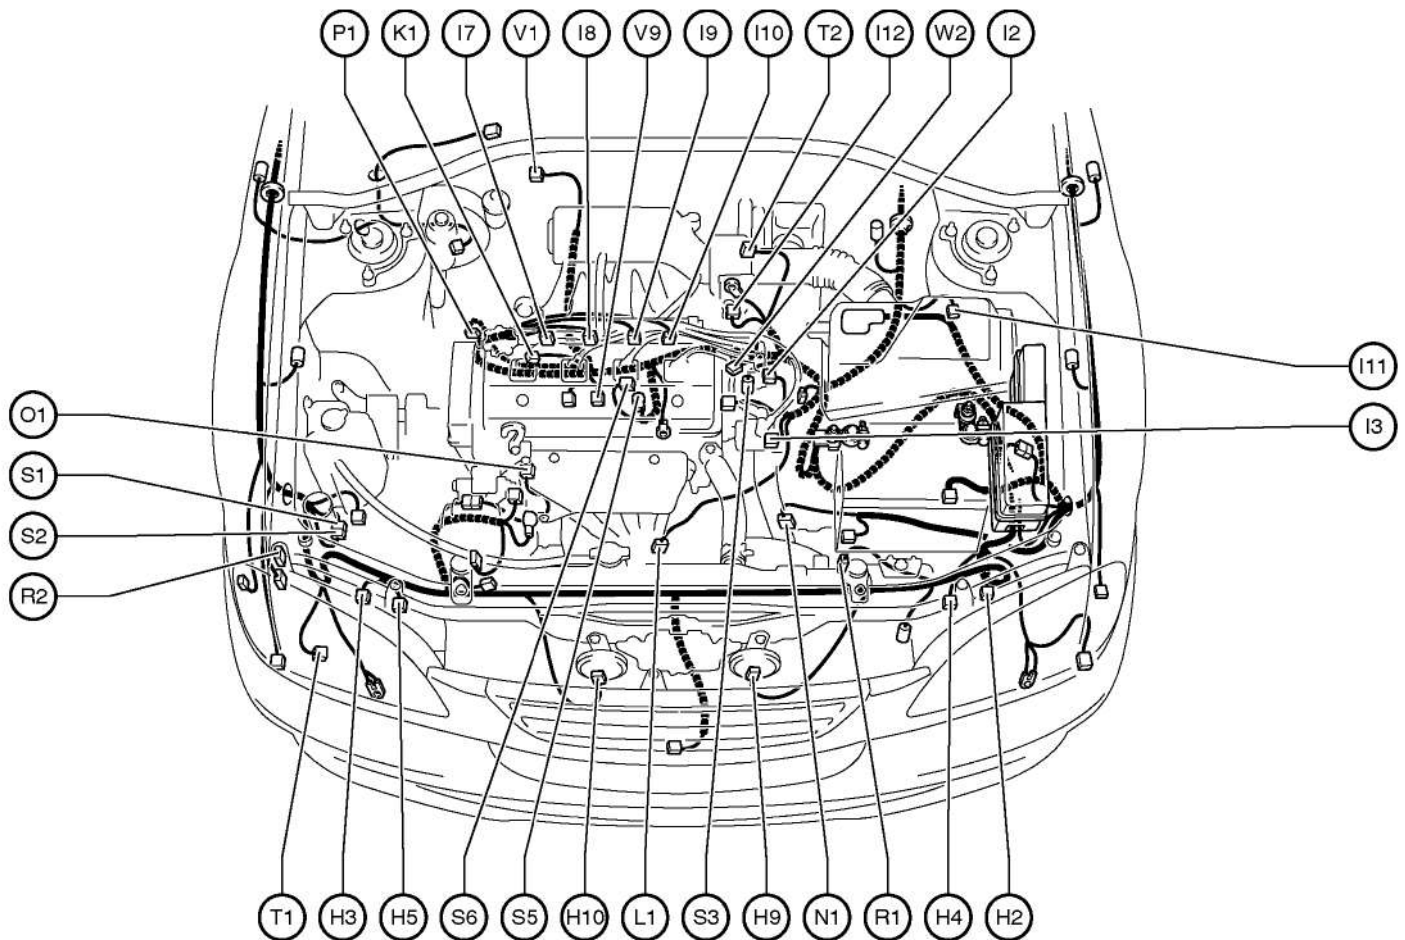

H 2 Headlight and Front Clearance Light LH
 H 3 Headlight and Front Clearance Light RH
 H 4 Headlight Beam Level Control Actuator LH
 H 5 Headlight Beam Level Control Actuator RH
 H 9 Horn LH
 H10 Horn RH

I 2 Ignition Coil and Igniter No.1
 I 3 Ignition Coil and Igniter No.2
 I 7 Injector No.1
 I 8 Injector No.2
 I 9 Injector No.3
 I 10 Injector No.4
 I 11 Intake Air Temp. Sensor
 I 12 ISC Valve

K 1 Knock Sensor

L 1 Lean Mixture Sensor

N 1 Neutral Start SW

O 1 Oil Pressure SW

P 1 Power Steering Oil Pressure SW

R 1 Radiator Fan Motor

R 2 Rear Washer Motor

S 1 Short Connector

S 2 Short Connector

S 3 Speed Sensor

S 5 Starter

S 6 Starter

T 1 Theft Deterrent Siren

T 2 Throttle Position Sensor

V 1 Vacuum Sensor


V 9 VSV (Swirl Control)

W 2 Water Temp. Sensor

E ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[RHD : 4A-FE Stoichiometric Type]

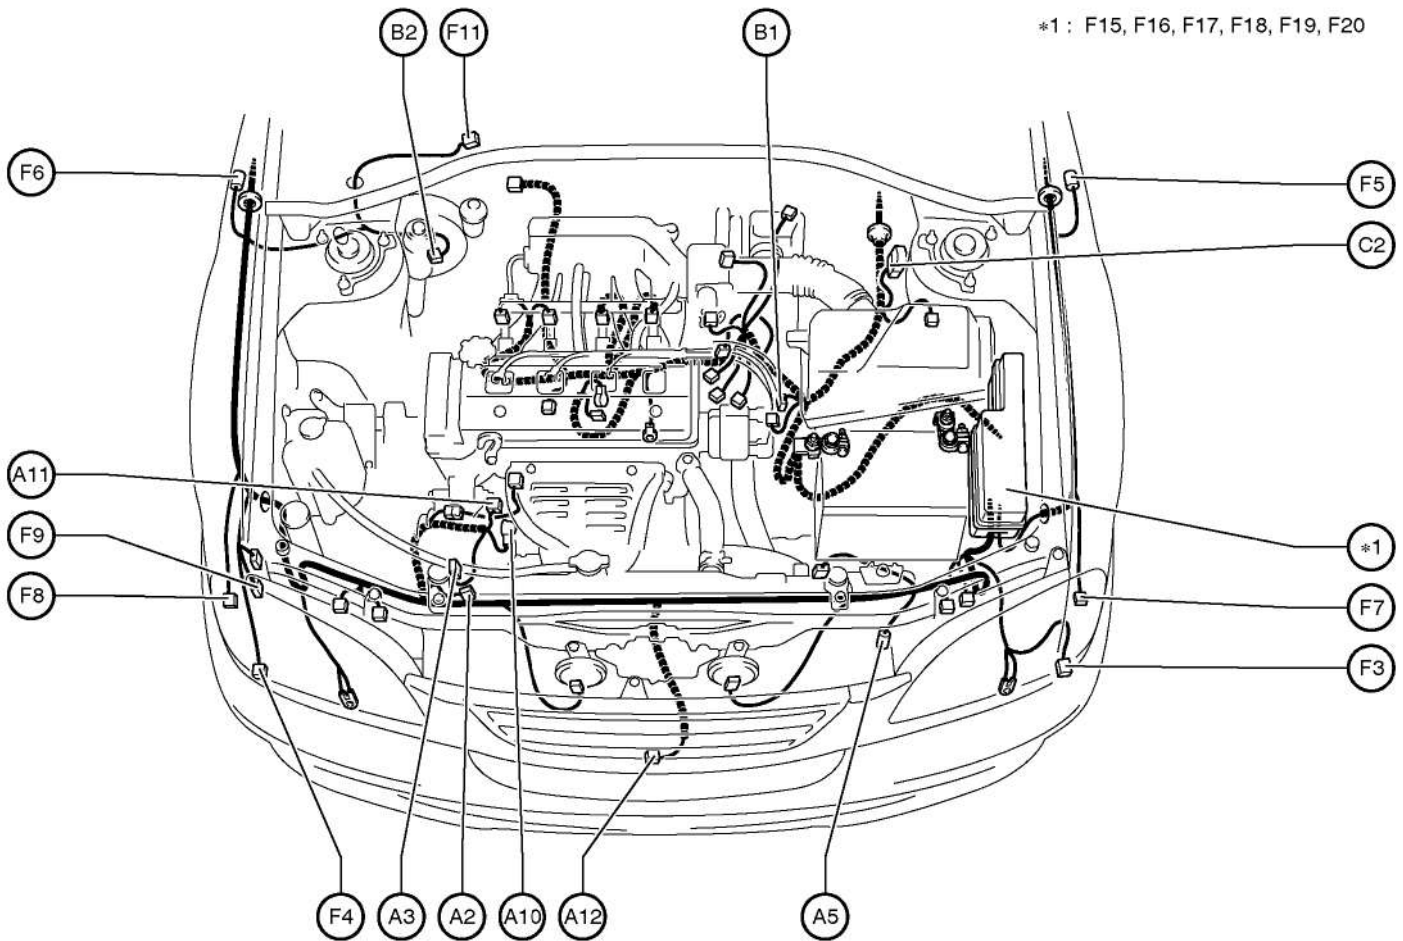

*1 : F15, F16, F17, F18, F19, F20

A 2 A/C Condenser Fan Motor
 A 3 A/C Magnetic Clutch
 A 5 A/C Triple Pressure SW
 (A/C Dual and Single Pressure SW)
 A10 Alternator
 A11 Alternator
 A12 Ambient Temp. Sensor


B 1 Back-Up Light SW
 B 2 Brake Fluid Level Warning SW

C 2 Check Connector

F 3 Front Fog Light LH
 F 4 Front Fog Light RH
 F 5 Front Side Turn Signal Light LH
 F 6 Front Side Turn Signal Light RH
 F 7 Front Turn Signal Light LH
 F 8 Front Turn Signal Light RH
 F 9 Front Washer Motor
 F11 Front Wiper Motor
 F15 Fusible Link Block
 F16 Fusible Link Block
 F17 Fusible Link Block
 F18 Fusible Link Block
 F19 Fusible Link Block
 F20 Fusible Link Block

Position of Parts in Engine Compartment

[RHD : 4A-FE Stoichiometric Type]

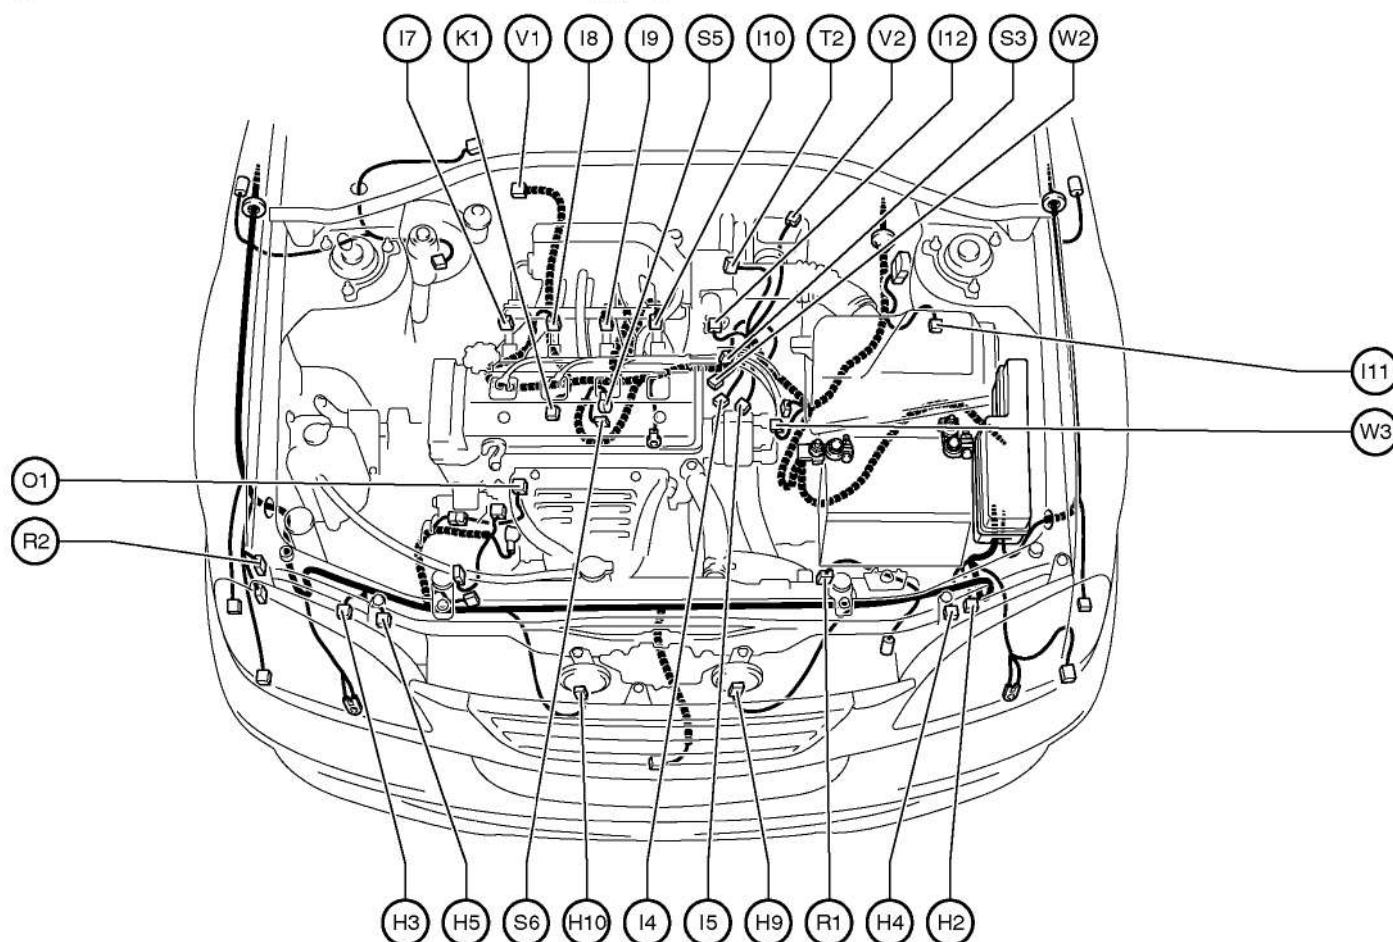

H 2 Headlight and Front Clearance Light LH
 H 3 Headlight and Front Clearance Light RH
 H 4 Headlight Beam Level Control Actuator LH
 H 5 Headlight Beam Level Control Actuator RH
 H 9 Horn LH
 H10 Horn RH

I 4 IIA
 I 5 IIA
 I 7 Injector No.1
 I 8 Injector No.2
 I 9 Injector No.3
 I 10 Injector No.4
 I 11 Intake Air Temp. Sensor
 I 12 ISC Valve

K 1 Knock Sensor

O 1 Oil Pressure SW

R 1 Radiator Fan Motor
 R 2 Rear Washer Motor

S 3 Speed Sensor
 S 5 Starter
 S 6 Starter

T 2 Throttle Position Sensor


V 1 Vacuum Sensor
 V 2 Variable Resistor

W 2 Water Temp. Sensor
 W 3 Water Temp. SW

E ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[RHD : 1CD-FTV]

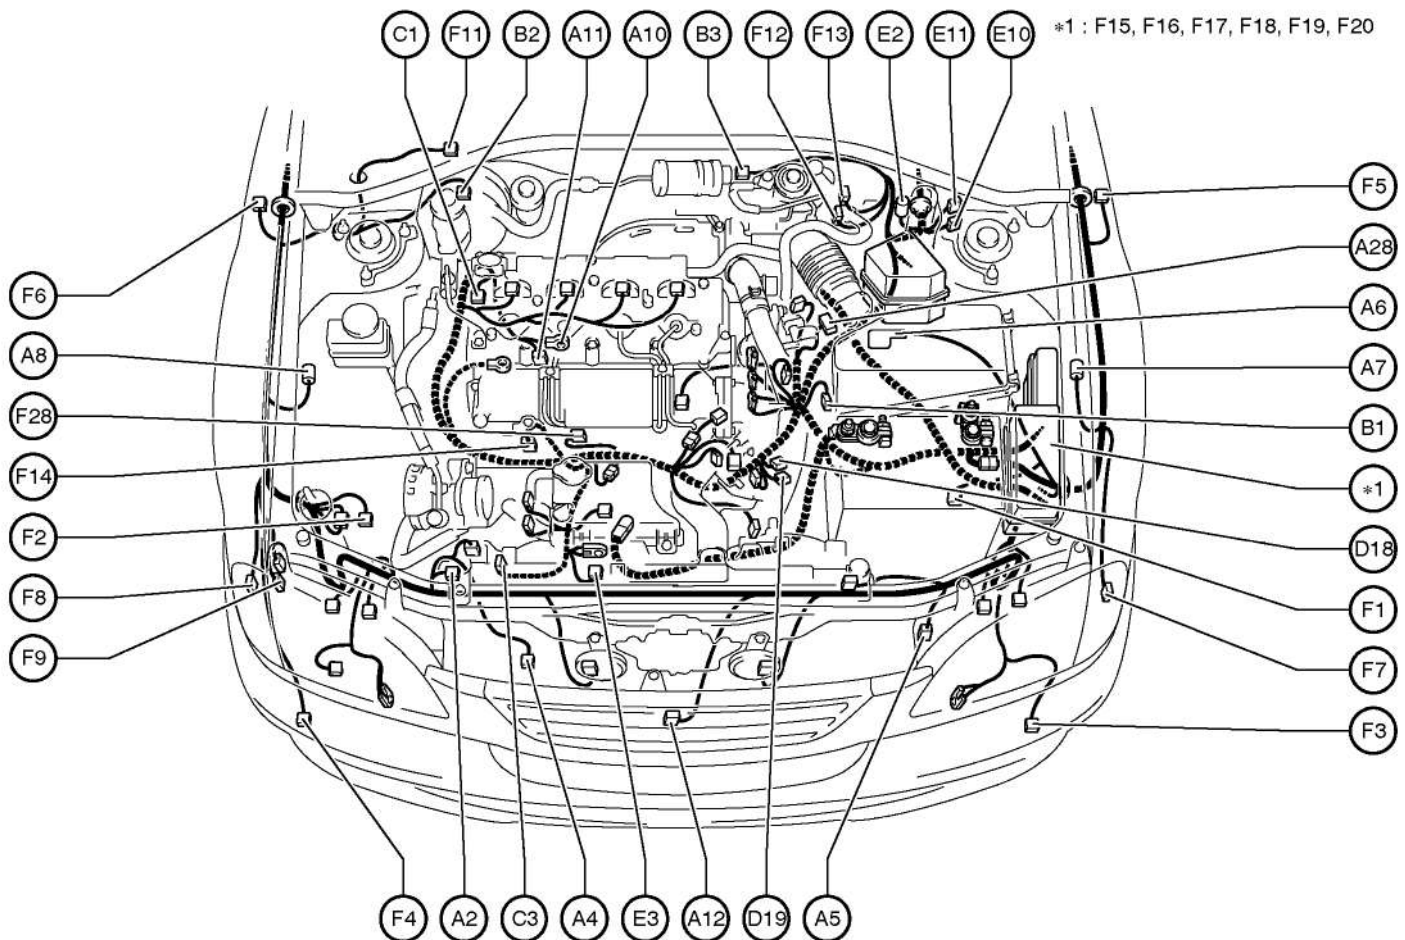

A 2 A/C Condenser Fan Motor
 A 4 A/C Magnetic Clutch and Lock Sensor
 A 5 A/C Triple Pressure SW
 (A/C Dual and Single Pressure SW)
 A 6 ABS ECU with Actuator
 A 7 ABS Speed Sensor Front LH
 A 8 ABS Speed Sensor Front RH
 A10 Alternator
 A11 Alternator
 A12 Ambient Temp. Sensor
 A28 Air Flow Meter

B 1 Back-Up Light SW
 B 2 Brake Fluid Level Warning SW
 B 3 Brake Vacuum Warning SW

C 1 Camshaft Position Sensor
 C 3 Crankshaft Position Sensor


D18 Diesel Throttle Control Motor
 D19 Diesel Throttle Position Sensor

E 2 Engine Hood Courtesy SW
 E 3 Engine Oil Level Sensor
 E10 Electronic Driver Unit
 E11 Electronic Driver Unit

F 1 Front Airbag Sensor LH
 F 2 Front Airbag Sensor RH
 F 3 Front Fog Light LH
 F 4 Front Fog Light RH
 F 5 Front Side Turn Signal Light LH
 F 6 Front Side Turn Signal Light RH
 F 7 Front Turn Signal Light LH
 F 8 Front Turn Signal Light RH
 F 9 Front Washer Motor
 F11 Front Wiper Motor
 F12 Fuel Heater
 F13 Fuel Sedimentary SW
 F14 Fuel Temp. Sensor
 F15 Fusible Link Block
 F16 Fusible Link Block
 F17 Fusible Link Block
 F18 Fusible Link Block
 F19 Fusible Link Block
 F20 Fusible Link Block
 F28 Fuel Pressure Sensor

Position of Parts in Engine Compartment

[RHD : 1CD-FTV]

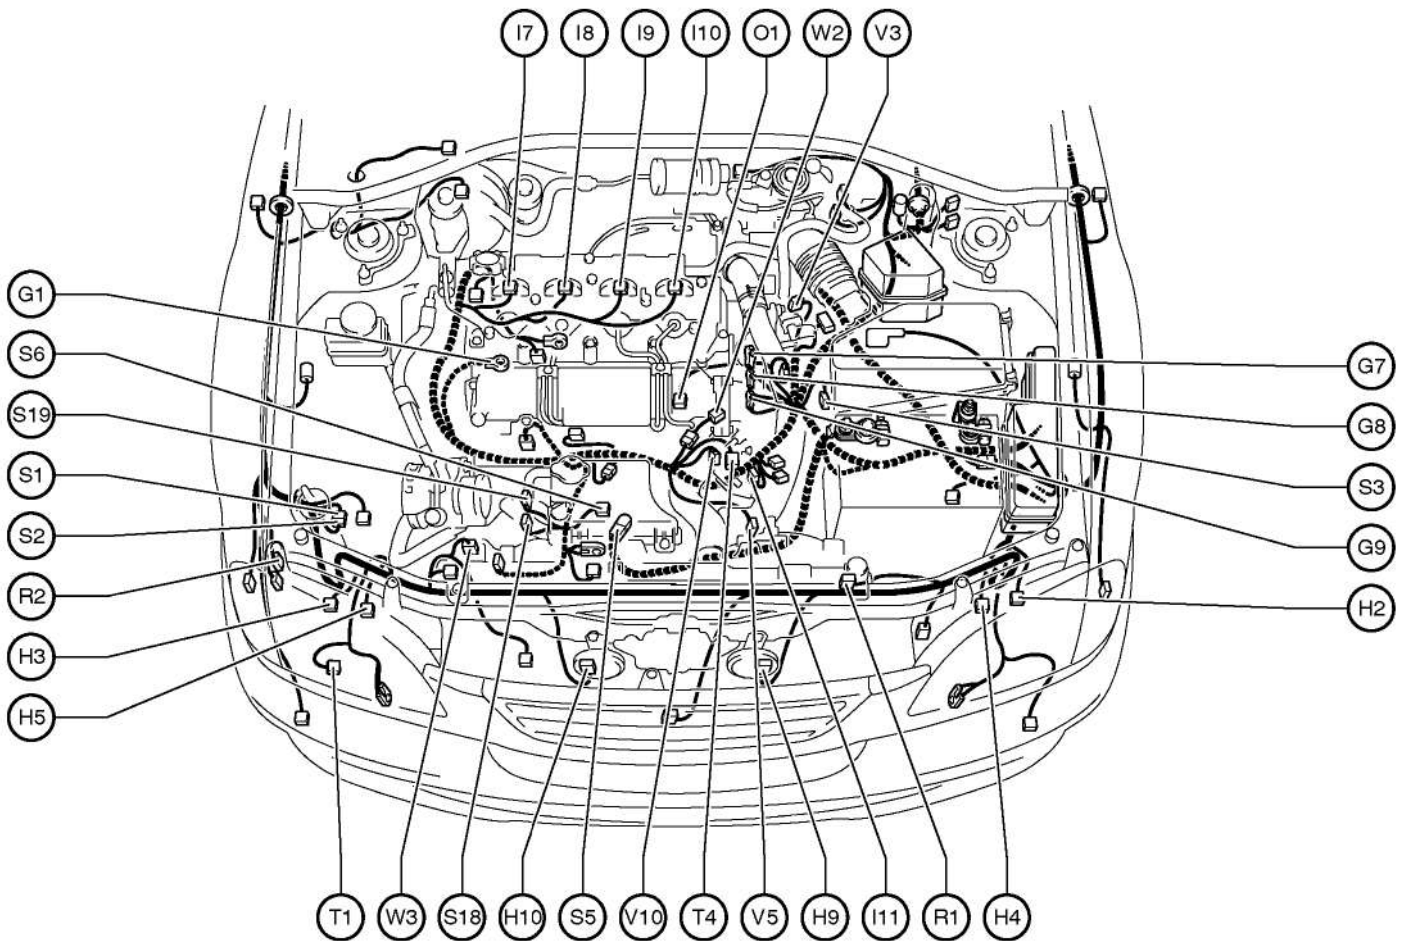

G 1 Glow Plug (Engine)

G 7 Glow Plug (Power Heater)

G 8 Glow Plug (Power Heater)

G 9 Glow Plug (Power Heater)

H 2 Headlight and Front Clearance Light LH

H 3 Headlight and Front Clearance Light RH

H 4 Headlight Beam Level Control Actuator LH

H 5 Headlight Beam Level Control Actuator RH

H 9 Horn LH

H10 Horn RH

I 7 Injector No.1

I 8 Injector No.2

I 9 Injector No.3

I 10 Injector No.4

I 11 Intake Air Temp. Sensor

O 1 Oil Pressure SW

R 1 Radiator Fan Motor

R 2 Rear Washer Motor

S 1 Short Connector

S 2 Short Connector

S 3 Speed Sensor

S 5 Starter

S 6 Starter

S18 Suction Control Valve 1

S19 Suction Control Valve 2

T 1 Theft Deterrent Siren

T 4 Turbo Pressure Sensor

V 3 VRV (EGR)

V 5 VSV (EGR)

V10 VSV (Turbo Pressure Sensor)


W 2 Water Temp. Sensor

W 3 Water Temp. SW

E ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[RHD : 2C-TE]

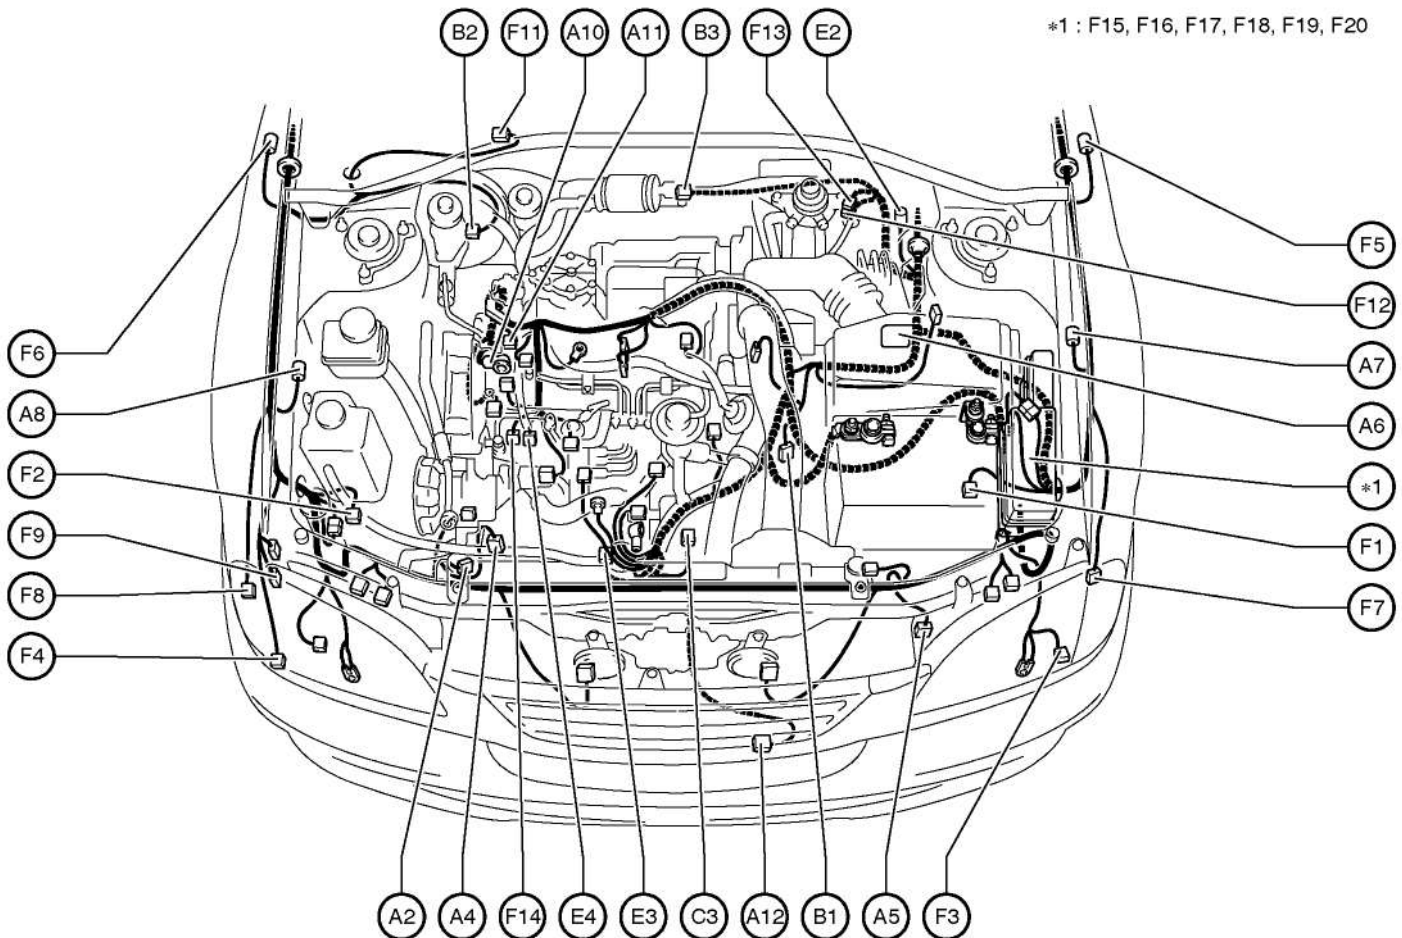


- A 2 A/C Condenser Fan Motor
- A 4 A/C Magnetic Clutch and Lock Sensor
- A 5 A/C Triple Pressure SW
(A/C Dual and Single Pressure SW)
- A 6 ABS ECU with Actuator
- A 7 ABS Speed Sensor Front LH
- A 8 ABS Speed Sensor Front RH
- A10 Alternator
- A11 Alternator
- A12 Ambient Temp. Sensor
- B 1 Back-Up Light SW
- B 2 Brake Fluid Level Warning SW
- B 3 Brake Vacuum Warning SW
- C 3 Crankshaft Position Sensor
- E 2 Engine Hood Courtesy SW
- E 3 Engine Oil Level Sensor
- E 4 Engine Speed Sensor

- F 1 Front Airbag Sensor LH
- F 2 Front Airbag Sensor RH
- F 3 Front Fog Light LH
- F 4 Front Fog Light RH
- F 5 Front Side Turn Signal Light LH
- F 6 Front Side Turn Signal Light RH
- F 7 Front Turn Signal Light LH
- F 8 Front Turn Signal Light RH
- F 9 Front Washer Motor
- F11 Front Wiper Motor
- F12 Fuel Heater
- F13 Fuel Sedimentary SW
- F14 Fuel Temp. Sensor
- F15 Fusible Link Block
- F16 Fusible Link Block
- F17 Fusible Link Block
- F18 Fusible Link Block
- F19 Fusible Link Block
- F20 Fusible Link Block

Position of Parts in Engine Compartment

[RHD : 2C-TE]

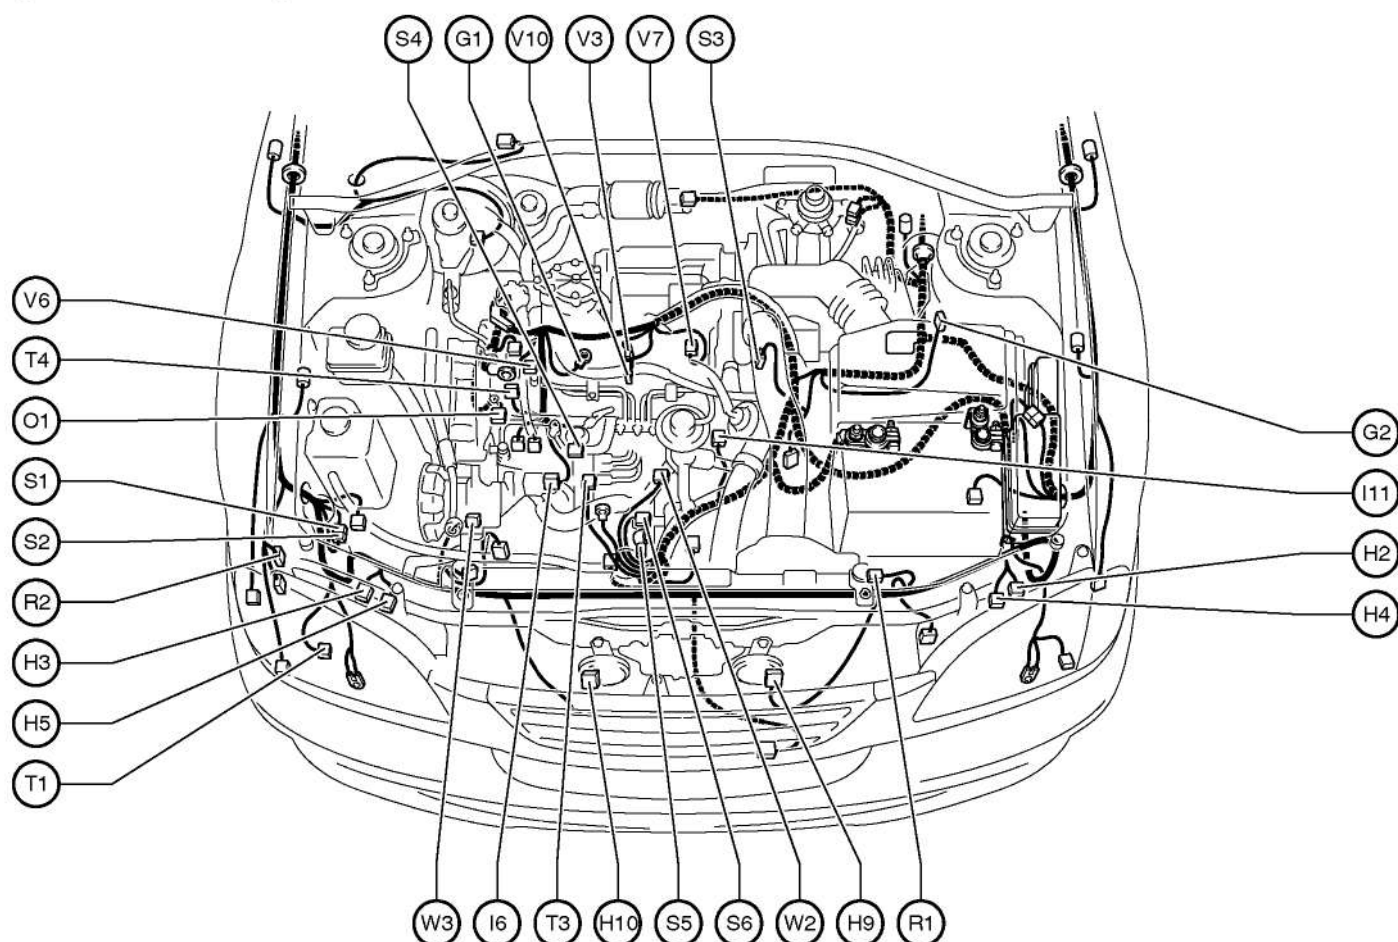

G 1 Glow Plug (Engine)

G 2 Glow Plug Relay

H 2 Headlight and Front Clearance Light LH

H 3 Headlight and Front Clearance Light RH

H 4 Headlight Beam Level Control Actuator LH

H 5 Headlight Beam Level Control Actuator RH

H 9 Horn LH

H10 Horn RH

I 6 Injection Pump

I 11 Intake Air Temp. Sensor

O 1 Oil Pressure SW

R 1 Radiator Fan Motor

R 2 Rear Washer Motor

S 1 Short Connector

S 2 Short Connector

S 3 Speed Sensor

S 4 Spill Control Valve

S 5 Starter

S 6 Starter

T 1 Theft Deterrent Siren

T 3 Timing Control Valve

T 4 Turbo Pressure Sensor

V 3 VRV (EGR)

V 6 VSV (Fully Closed)

V 7 VSV (Idle Opening)

V10 VSV (Turbo Pressure Sensor)


W 2 Water Temp. Sensor

W 3 Water Temp. SW

E ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

[RHD]

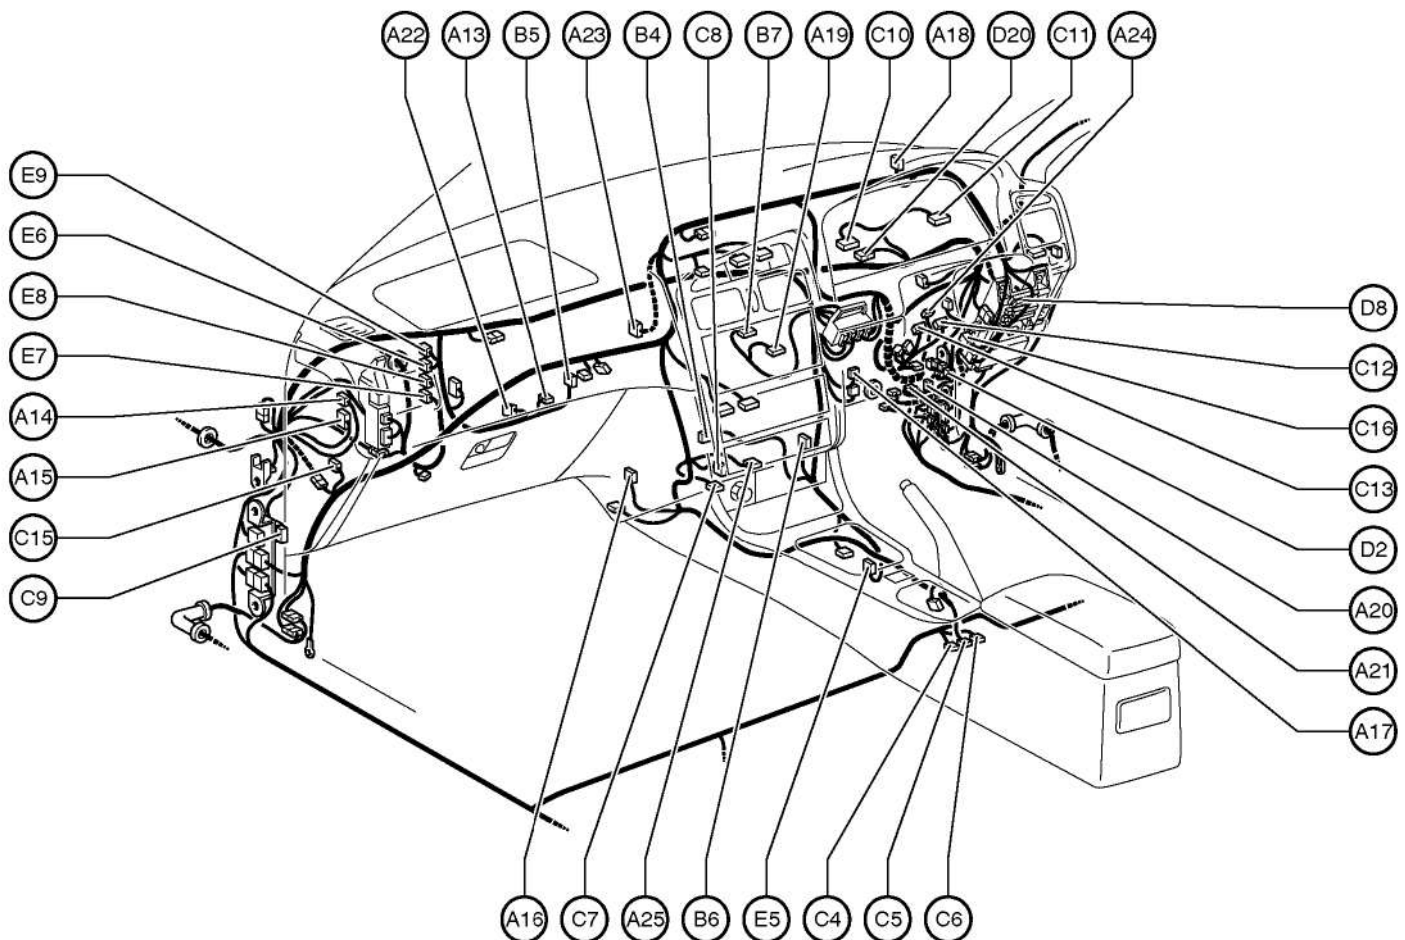

A13 A/C Amplifier
 A14 A/C Amplifier
 A15 A/C Amplifier
 A16 A/C Evaporator Temp. Sensor
 A17 A/C Room Temp. Sensor
 A18 A/C Solar Sensor
 A19 A/C SW
 A20 Accelerator Pedal Position Sensor
 A21 Accelerator Position SW
 A22 Air Mix Control Servo Motor
 A23 Airbag Squib (Front Passenger Airbag Assembly)
 A24 Airbag Squib (Steering Wheel Pad)
 A25 Ashtray Illumination

B 4 Blower Controller
 B 5 Blower Motor
 B 6 Blower Resistor
 B 7 Blower SW


C 4 Center Airbag Sensor Assembly
 C 5 Center Airbag Sensor Assembly
 C 6 Center Airbag Sensor Assembly
 C 7 Cigarette Lighter
 C 8 Cigarette Lighter Illumination
 C 9 Circuit Opening Relay
 C10 Combination Meter
 C11 Combination Meter
 C12 Combination SW
 C13 Combination SW
 C15 Curtain Airbag Squib LH
 C16 Curtain Airbag Squib RH

D 2 Defogger Relay
 D 8 DLC3
 D20 Diode (Door)

E 5 ECT Pattern Select SW
 E 6 Engine ECU (M/T) or Engine and ECT ECU (A/T)
 E 7 Engine ECU (M/T) or Engine and ECT ECU (A/T)
 E 8 Engine ECU (M/T) or Engine and ECT ECU (A/T)
 E 9 Engine ECU

Position of Parts in Instrument Panel

[RHD]

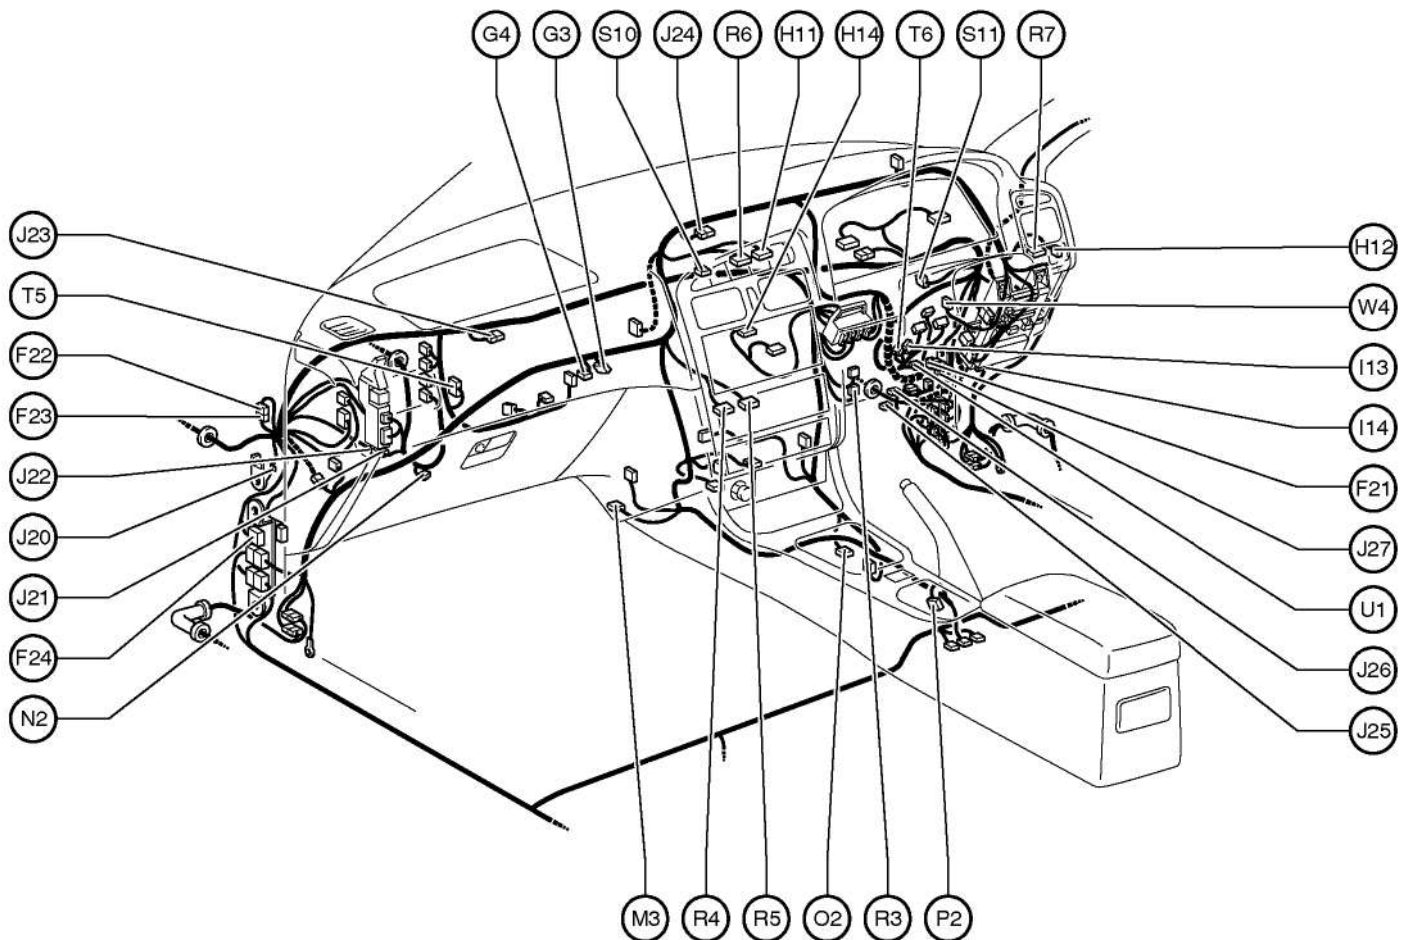

F21 Front Fog Light Relay
F22 Fuel Control Connector
F23 Fuel Control Connector
F24 Fuse Box

G 3 Glove Box Light
G 4 Glove Box Light SW

H11 Hazard SW
H12 Headlight Beam Level Control SW
H14 Heater Control SW

I 13 Ignition SW
I 14 Integration Relay

J 20 Junction Connector
J 21 Junction Connector
J 22 Junction Connector
J 23 Junction Connector
J 24 Junction Connector
J 25 Junction Connector
J 26 Junction Connector
J 27 Junction Connector

M 3 Max Hot SW

N 2 Noise Filter (Ignition System)

O 2 O/D Main SW

P 2 Parking Brake SW

R 3 Radar Sensor
R 4 Radio and Player
R 5 Radio and Player
R 6 Rear Window Defogger SW
R 7 Remote Control Mirror SW

S10 Status Monitor

S11 Stop Light SW

T 5 Theft Deterrent ECU
T 6 Transponder Key ECU


U 1 Unlock Warning SW

W 4 Wireless Door Lock ECU

E ELECTRICAL WIRING ROUTING

Position of Parts in Body

[RHD : S/D]

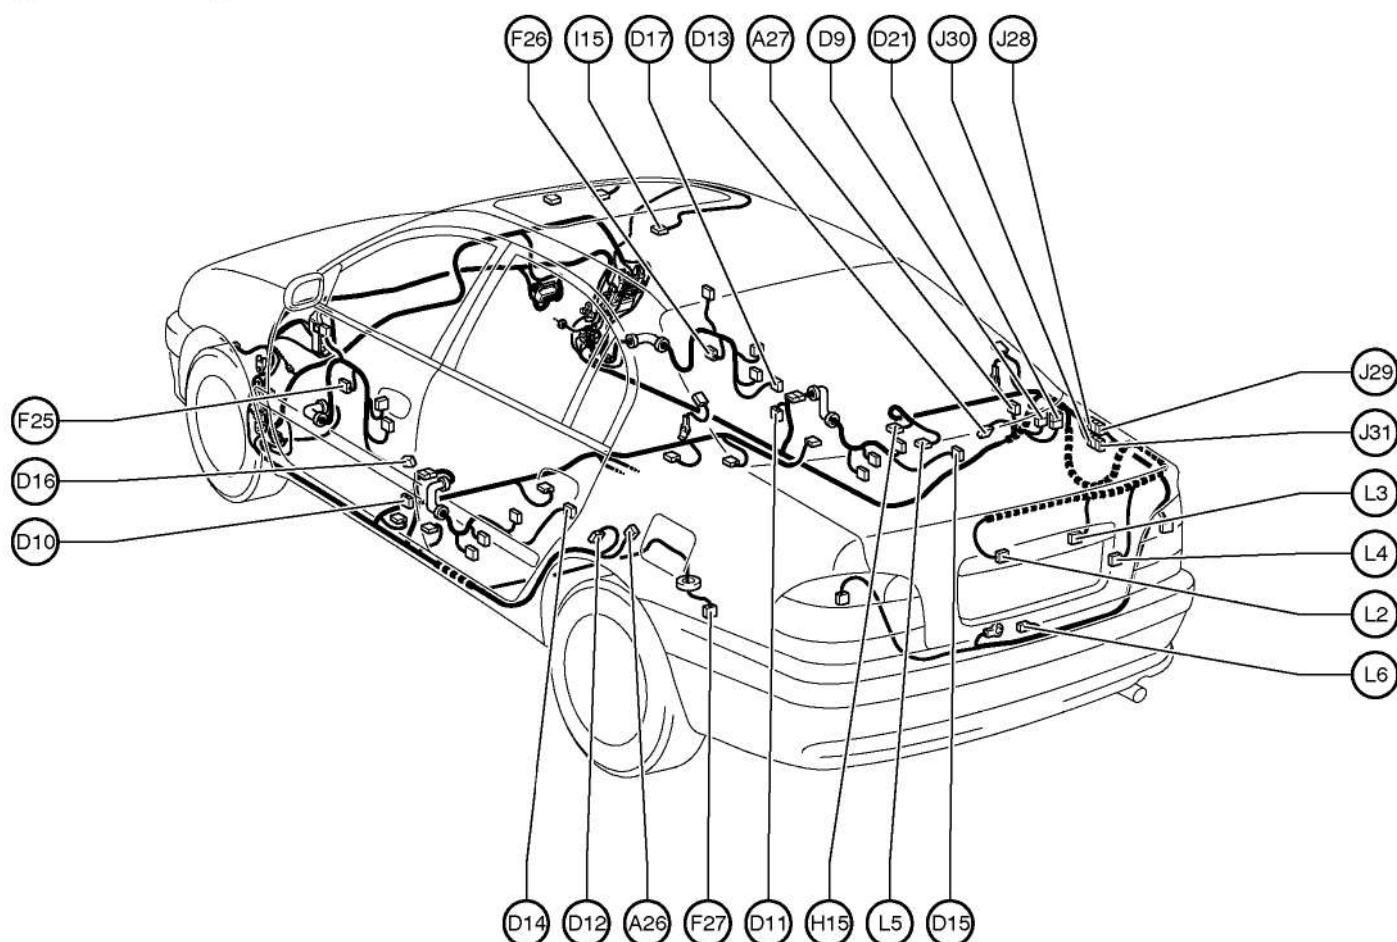

A26 ABS Speed Sensor Rear LH
A27 ABS Speed Sensor Rear RH

H15 High Mounted Stop Light

D 9 Diode (Luggage Room Light)
D10 Door Courtesy SW Front LH
D11 Door Courtesy SW Front RH
D12 Door Courtesy SW Rear LH
D13 Door Courtesy SW Rear RH
D14 Door Lock Motor Rear LH
D15 Door Lock Motor Rear RH
D16 Door Lock Motor, Door Key Lock and Unlock SW
Front LH
D17 Door Lock Motor, Door Key Lock and Unlock SW
Front RH
D21 Diode (Luggage Room Light)

I 15 Interior Light


J 28 Junction Connector
J 29 Junction Connector
J 30 Junction Connector
J 31 Junction Connector

L 2 License Plate Light LH
L 3 License Plate Light RH
L 4 Luggage Compartment Door Lock Motor
L 5 Luggage Room Light
L 6 Luggage Room Light SW

F25 Front Door Speaker LH
F26 Front Door Speaker RH
F27 Fuel Sender and Fuel Pump

Position of Parts in Body

[RHD : S/D]

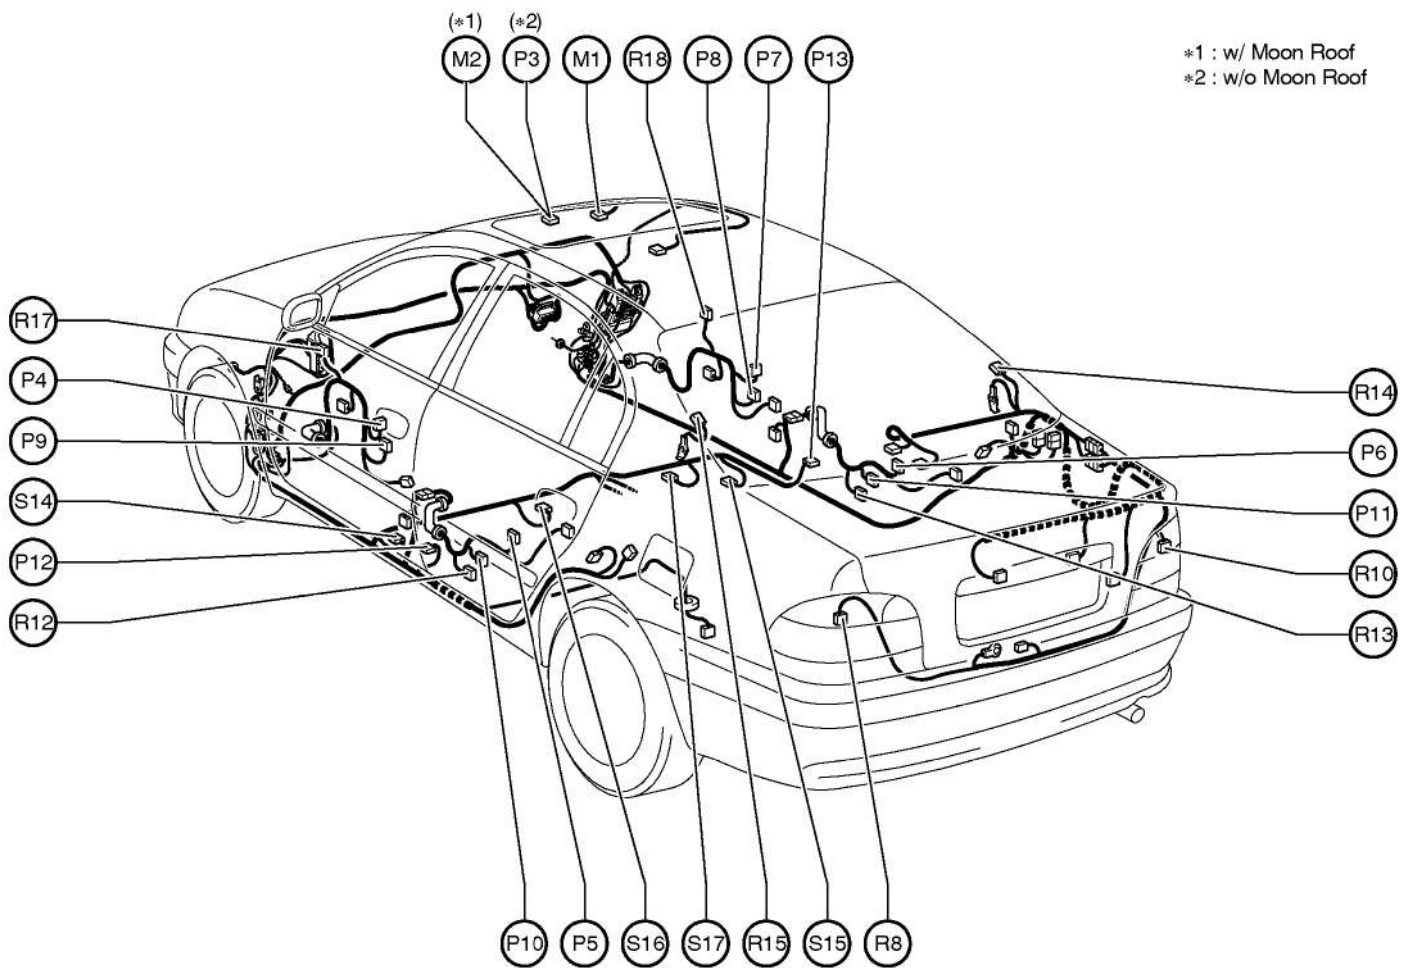

*1 : w/ Moon Roof
*2 : w/o Moon Roof

M 1 Moon Roof Control Relay and Motor
M 2 Moon Roof Control SW

P 3 Personal Light
P 4 Power Window Control SW (Front Passenger Side)
P 5 Power Window Control SW Rear LH
P 6 Power Window Control SW Rear RH
P 7 Power Window Master SW
P 8 Power Window Motor (Driver Side)
P 9 Power Window Motor (Front Passenger Side)
P10 Power Window Motor Rear LH
P11 Power Window Motor Rear RH
P12 Pretensioner LH
P13 Pretensioner RH


R 8 Rear Combination Light LH
R10 Rear Combination Light RH
R12 Rear Door Speaker LH
R13 Rear Door Speaker RH
R14 Rear Window Defogger
R15 Rear Window Defogger
R17 Remote Control Mirror LH
R18 Remote Control Mirror RH

S14 Side Airbag Sensor LH
S15 Side Airbag Sensor RH
S16 Side Airbag Squib LH
S17 Side Airbag Squib RH

E ELECTRICAL WIRING ROUTING

Position of Parts in Body

[RHD : L/B]

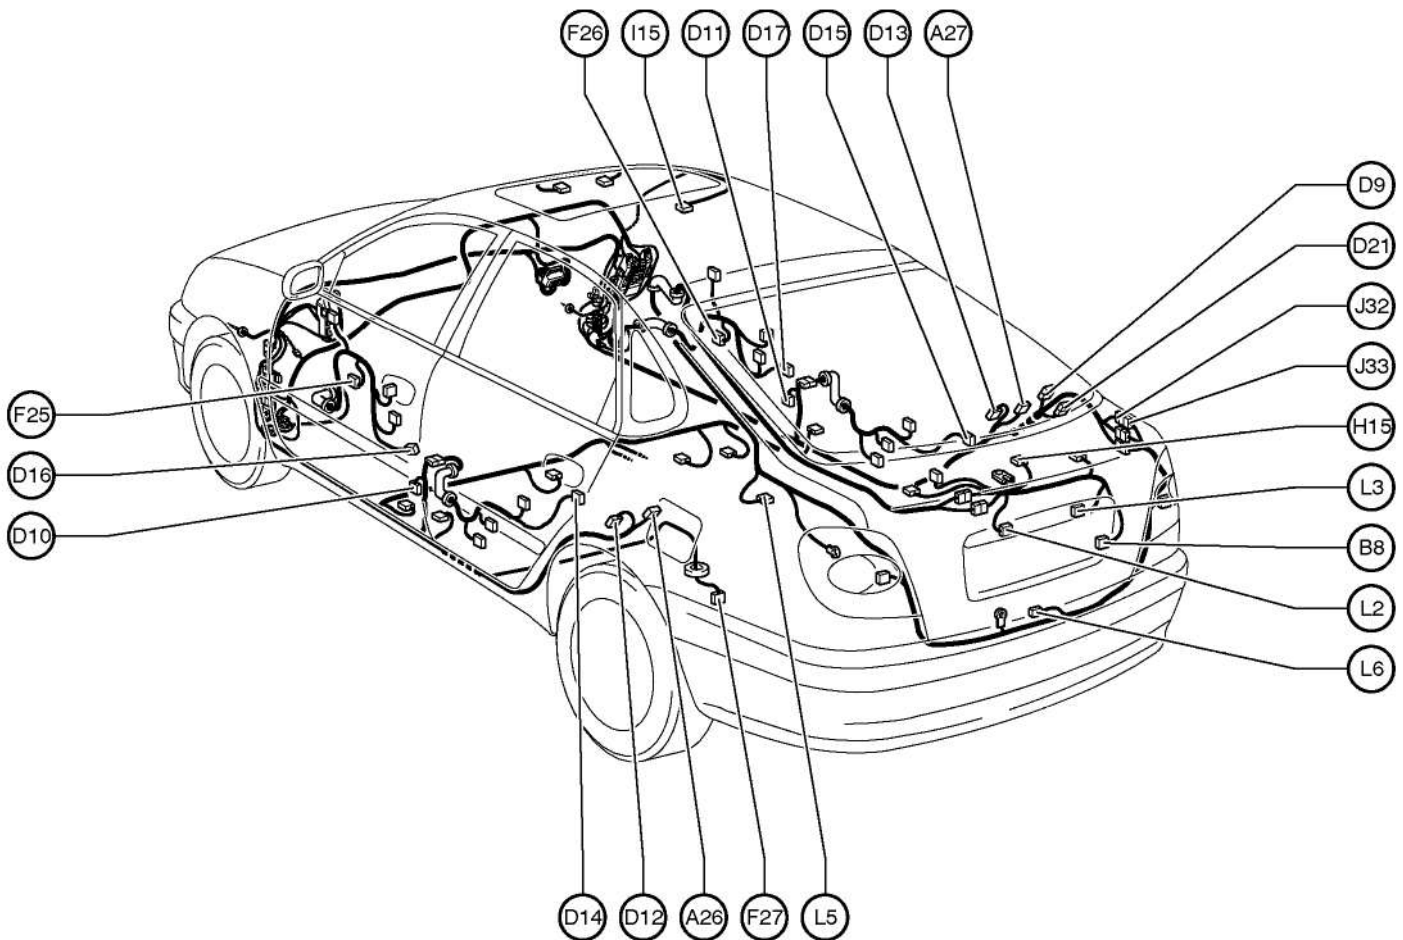

A26 ABS Speed Sensor Rear LH
A27 ABS Speed Sensor Rear RH

B 8 Back Door Lock Motor

D 9 Diode (Luggage Room Light)
D10 Door Courtesy SW Front LH
D11 Door Courtesy SW Front RH
D12 Door Courtesy SW Rear LH
D13 Door Courtesy SW Rear RH
D14 Door Lock Motor Rear LH
D15 Door Lock Motor Rear RH
D16 Door Lock Motor, Door Key Lock and Unlock SW
Front LH
D17 Door Lock Motor, Door Key Lock and Unlock SW
Front RH
D21 Diode (Luggage Room Light)

F25 Front Door Speaker LH
F26 Front Door Speaker RH
F27 Fuel Sender and Fuel Pump

H15 High Mounted Stop Light


I 15 Interior Light

J32 Junction Connector
J33 Junction Connector

L 2 License Plate Light LH
L 3 License Plate Light RH
L 5 Luggage Room Light
L 6 Luggage Room Light SW

Position of Parts in Body

[RHD : L/B]

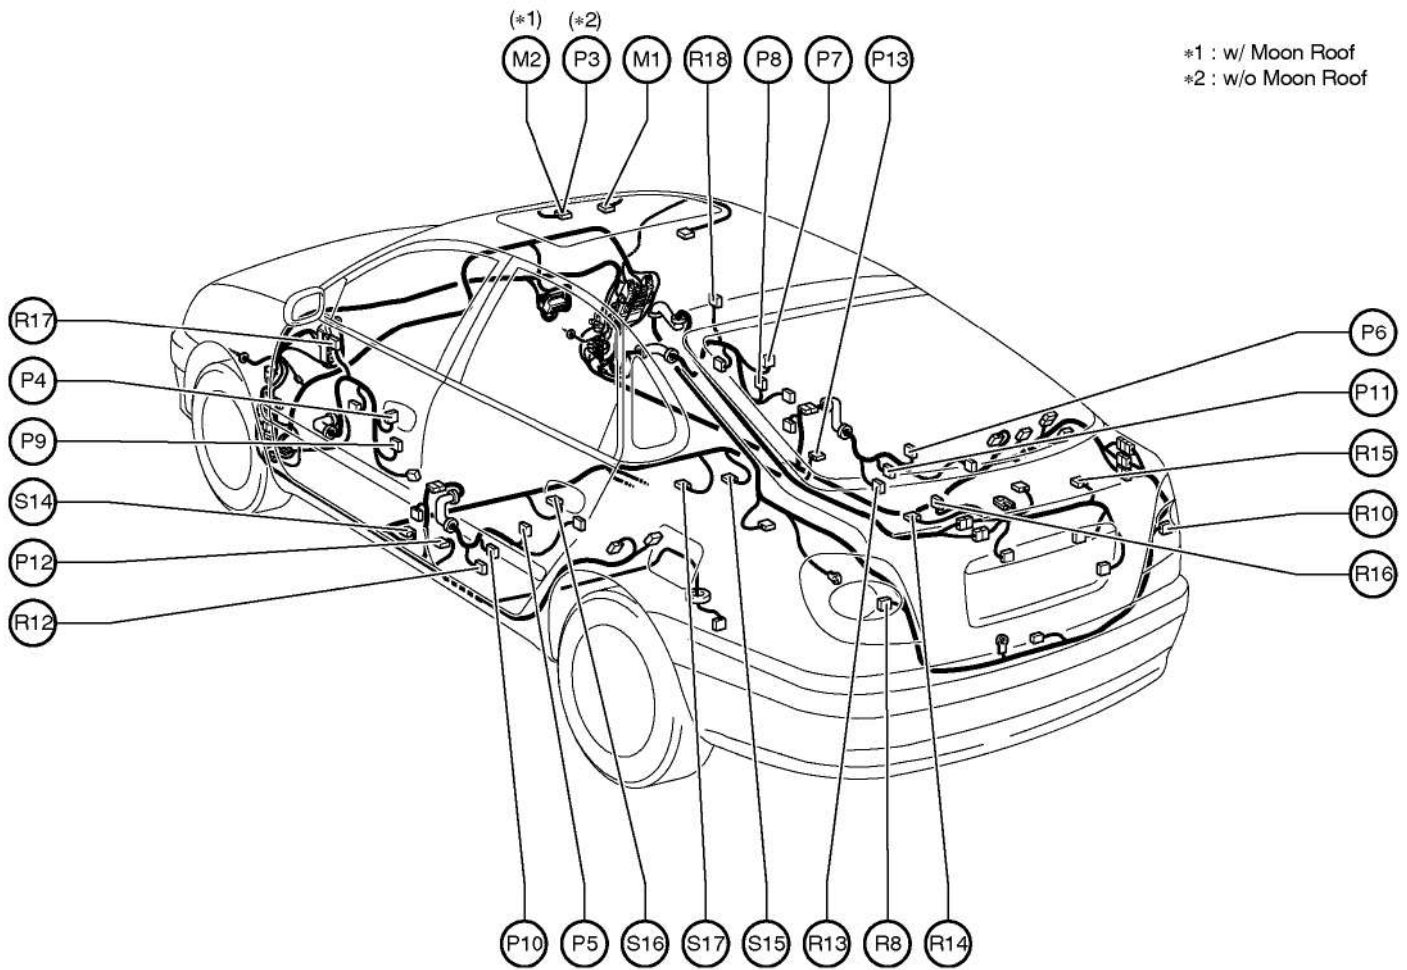

*1 : w/ Moon Roof
*2 : w/o Moon Roof

M 1 Moon Roof Control Relay and Motor
M 2 Moon Roof Control SW

P 3 Personal Light
P 4 Power Window Control SW (Front Passenger Side)
P 5 Power Window Control SW Rear LH
P 6 Power Window Control SW Rear RH
P 7 Power Window Master SW
P 8 Power Window Motor (Driver Side)
P 9 Power Window Motor (Front Passenger Side)
P10 Power Window Motor Rear LH
P11 Power Window Motor Rear RH
P12 Pretensioner LH
P13 Pretensioner RH


R 8 Rear Combination Light LH
R10 Rear Combination Light RH
R12 Rear Door Speaker LH
R13 Rear Door Speaker RH
R14 Rear Window Defogger
R15 Rear Window Defogger
R16 Rear Wiper Motor and Relay
R17 Remote Control Mirror LH
R18 Remote Control Mirror RH

S14 Side Airbag Sensor LH
S15 Side Airbag Sensor RH
S16 Side Airbag Squib LH
S17 Side Airbag Squib RH

E ELECTRICAL WIRING ROUTING

Position of Parts in Body

[RHD : W/G]

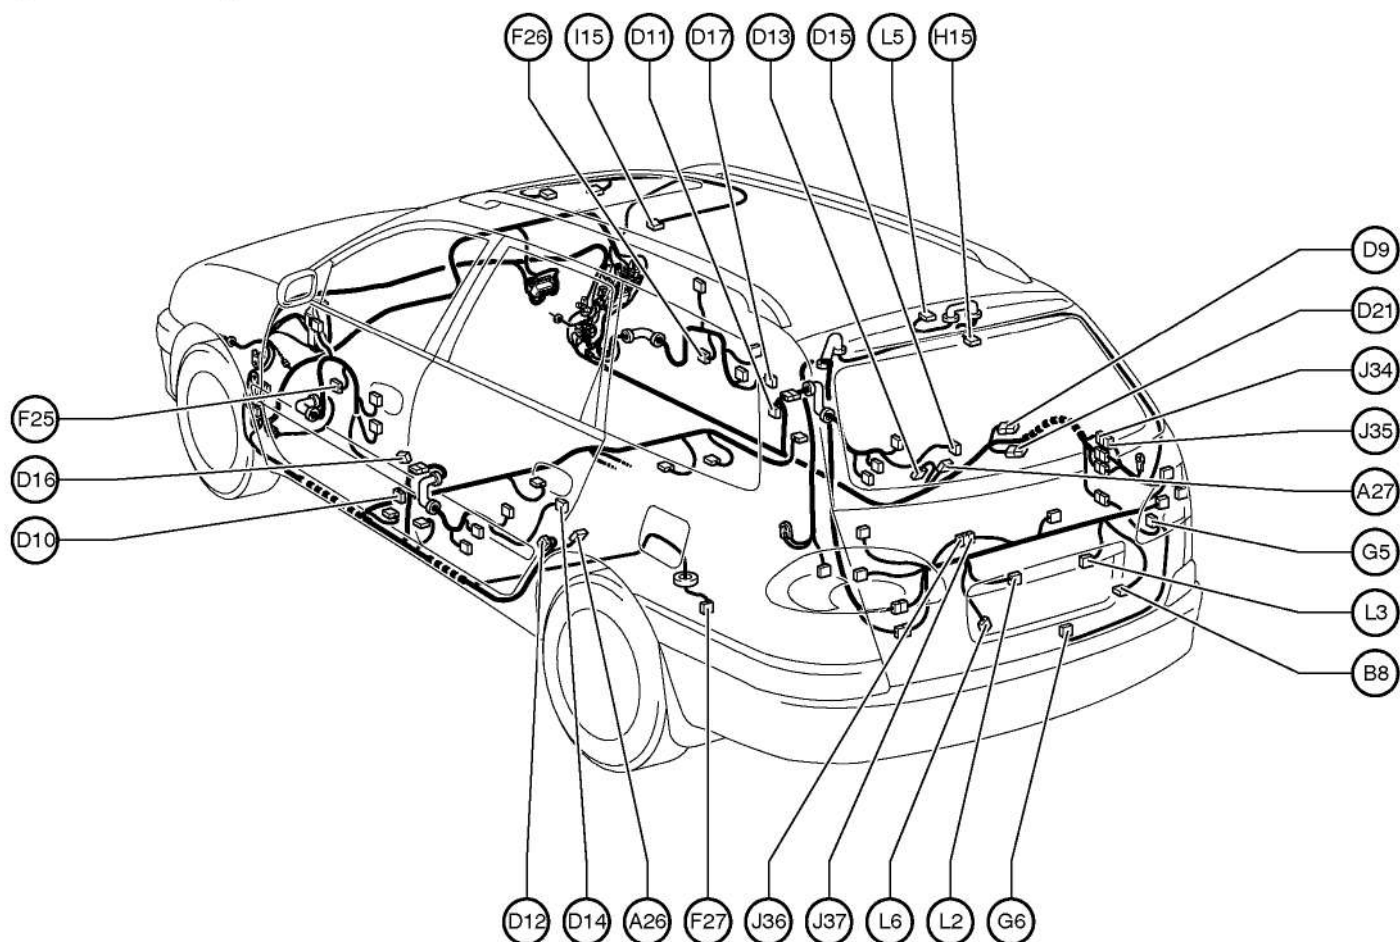

A26 ABS Speed Sensor Rear LH
A27 ABS Speed Sensor Rear RH

B 8 Back Door Lock Motor

D 9 Diode (Luggage Room Light)
D10 Door Courtesy SW Front LH
D11 Door Courtesy SW Front RH
D12 Door Courtesy SW Rear LH
D13 Door Courtesy SW Rear RH
D14 Door Lock Motor Rear LH
D15 Door Lock Motor Rear RH
D16 Door Lock Motor, Door Key Lock and Unlock SW
Front LH
D17 Door Lock Motor, Door Key Lock and Unlock SW
Front RH
D21 Diode (Luggage Room Light)

F25 Front Door Speaker LH
F26 Front Door Speaker RH
F27 Fuel Sender and Fuel Pump

G 5 Glass Breakage Sensor ECU
G 6 Glass Breakage Sensor Microphone

H15 High Mounted Stop Light


I 15 Interior Light

J 34 Junction Connector
J 35 Junction Connector
J 36 Junction Connector
J 37 Junction Connector

L 2 License Plate Light LH
L 3 License Plate Light RH
L 5 Luggage Room Light
L 6 Luggage Room Light SW

Position of Parts in Body

[RHD : W/G]

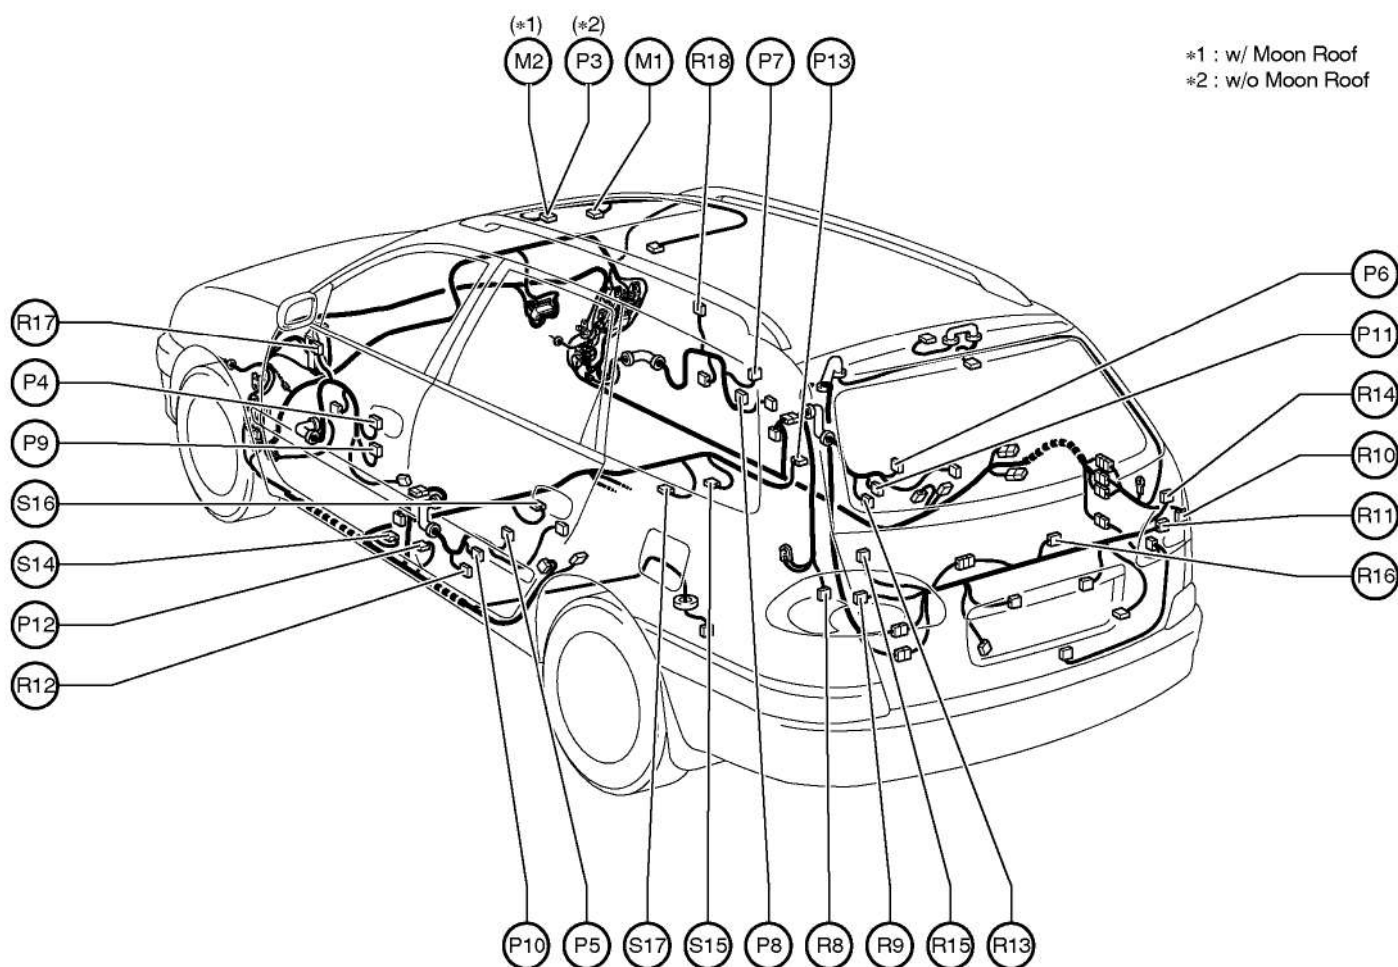

*1 : w/ Moon Roof
*2 : w/o Moon Roof

M 1 Moon Roof Control Relay and Motor
M 2 Moon Roof Control SW

P 3 Personal Light
P 4 Power Window Control SW (Front Passenger Side)
P 5 Power Window Control SW Rear LH
P 6 Power Window Control SW Rear RH
P 7 Power Window Master SW
P 8 Power Window Motor (Driver Side)
P 9 Power Window Motor (Front Passenger Side)
P10 Power Window Motor Rear LH
P11 Power Window Motor Rear RH
P12 Pretensioner LH
P13 Pretensioner RH

R 8 Rear Combination Light LH
R 9 Rear Combination Light LH
R10 Rear Combination Light RH
R11 Rear Combination Light RH
R12 Rear Door Speaker LH
R13 Rear Door Speaker RH
R14 Rear Window Defogger
R15 Rear Window Defogger
R16 Rear Wiper Motor and Relay
R17 Remote Control Mirror LH
R18 Remote Control Mirror RH


S14 Side Airbag Sensor LH
S15 Side Airbag Sensor RH
S16 Side Airbag Squib LH
S17 Side Airbag Squib RH

E ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[LHD : 3S-FE]

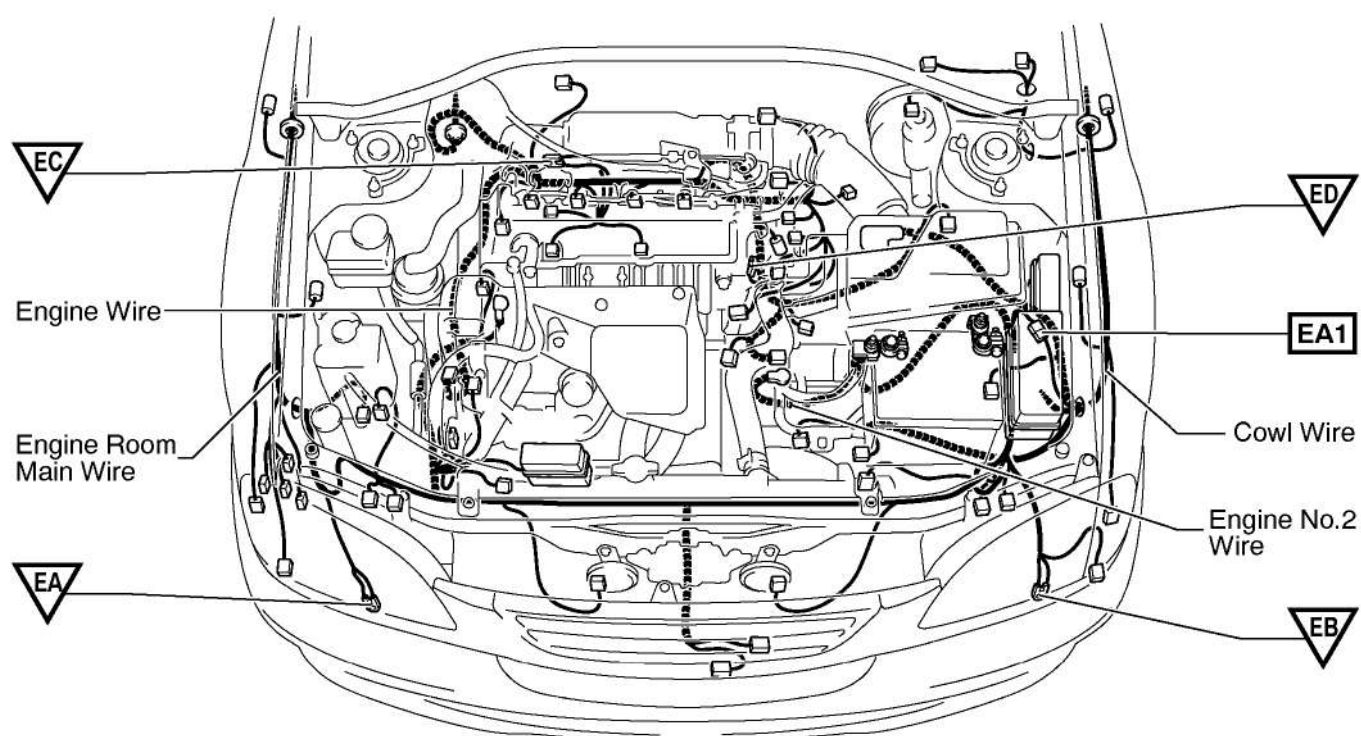

Connector Joining Wire Harness and Wire Harness

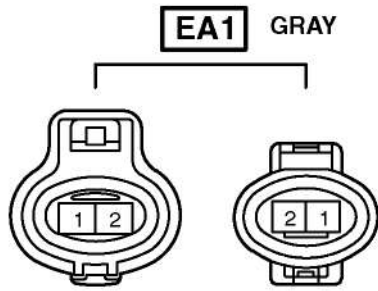


Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Room Main Wire and Cowl Wire (Under the Engine Room J/B)

E ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[LHD : 7A-FE, 4A-FE Lean Burn Type]

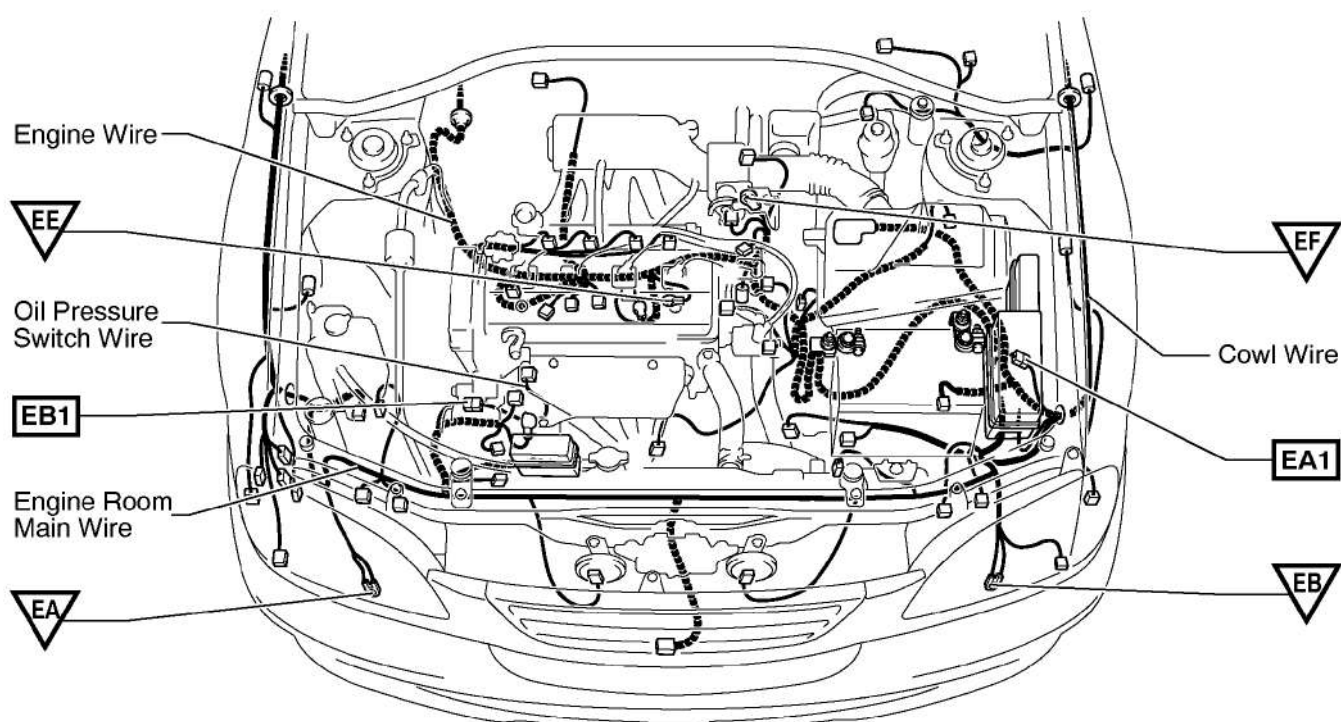

Connector Joining Wire Harness and Wire Harness

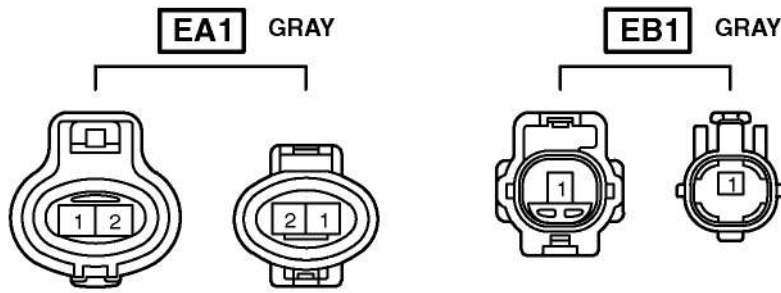


Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Room Main Wire and Cowl Wire (Under the Engine Room J/B)
EB1	Oil Pressure Switch Wire and Engine Room Main Wire (Near the Alternator)

E ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[LHD : 4A-FE Stoichiometric Type]

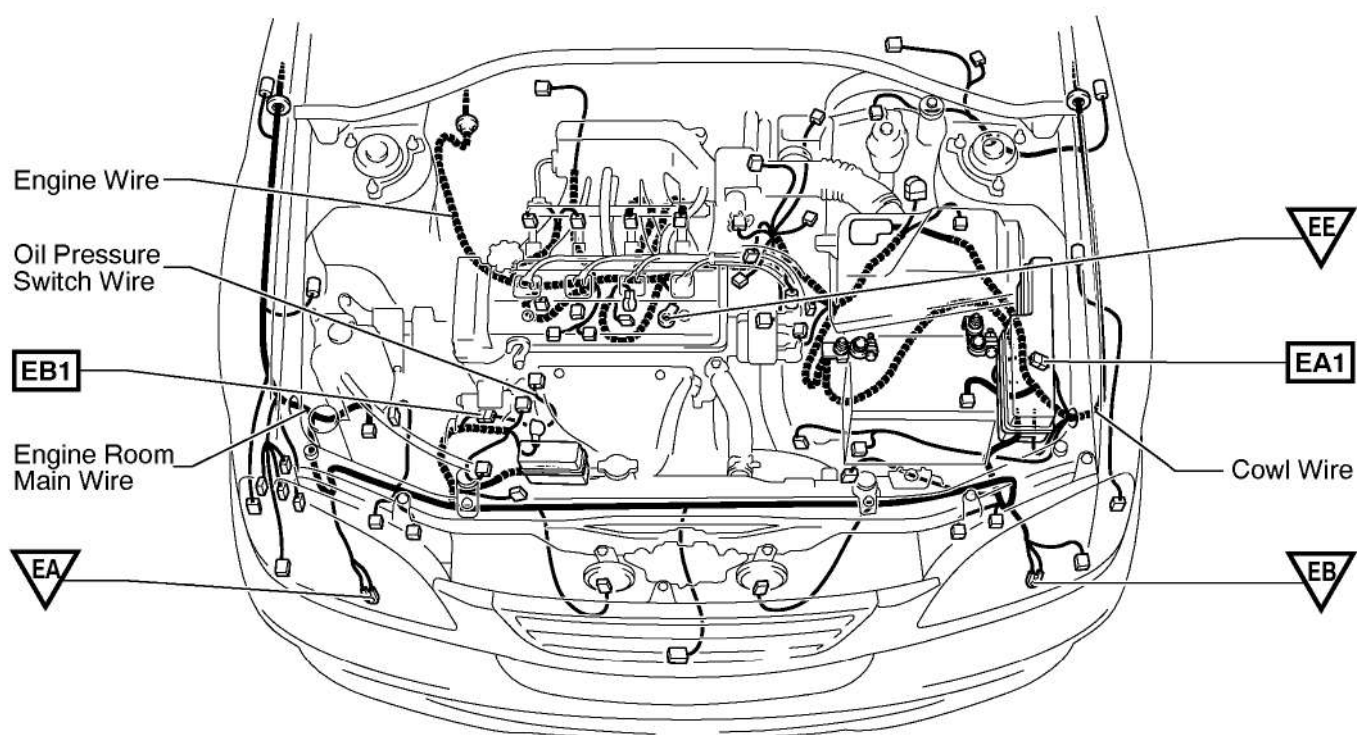

Connector Joining Wire Harness and Wire Harness

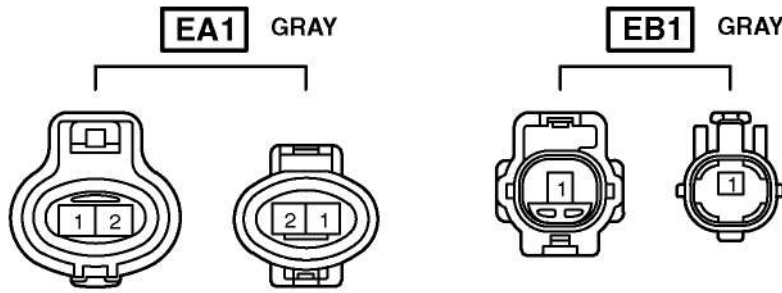


Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Room Main Wire and Cowl Wire (Under the Engine Room J/B)
EB1	Oil Pressure Switch Wire and Engine Room Main Wire (Near the Alternator)

E ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[LHD : 1CD-FTV]

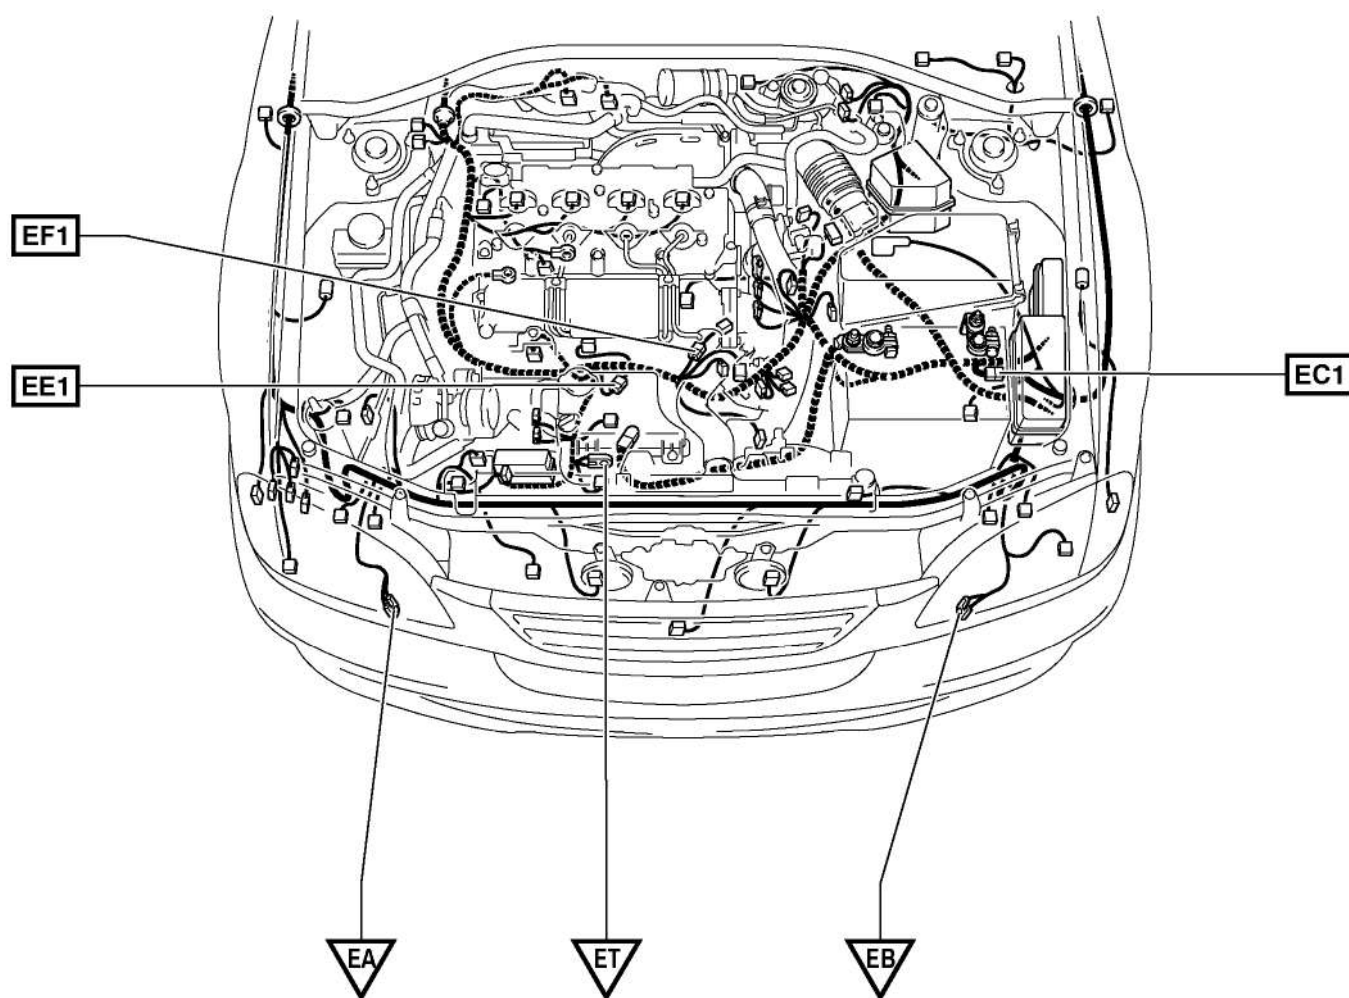

Connector Joining Wire Harness and Wire Harness

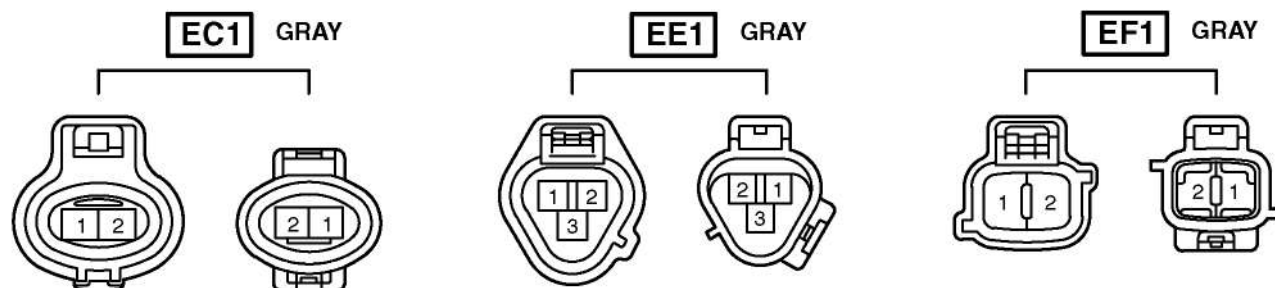


Code	Joining Wire Harness and Wire Harness (Connector Location)
EC1	Engine Wire and Cowl Wire (Under the Engine Room J/B)
EE1	Engine Wire and Engine No.6 Wire (Under the Starter)
EF1	Engine Wire and Engine No.4 Wire (Under the Starter)

E ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[LHD : 2C-TE]

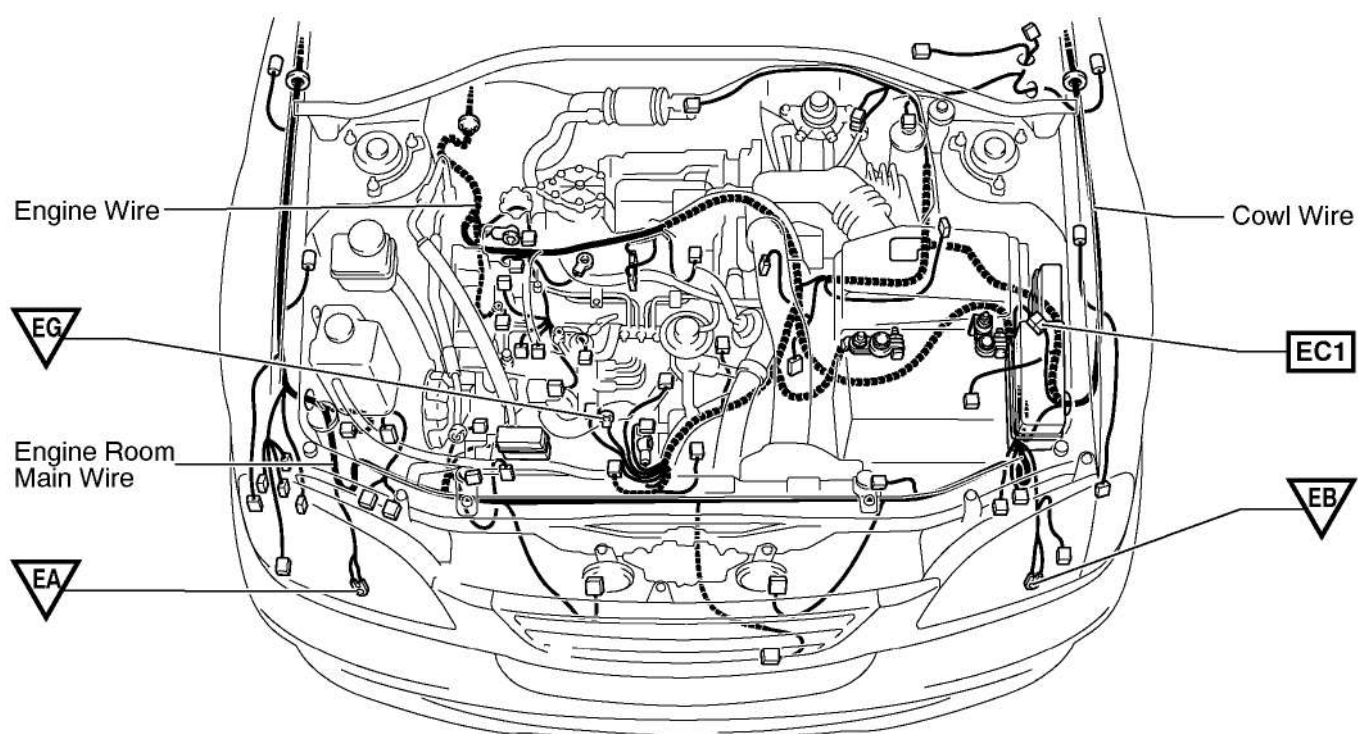

Connector Joining Wire Harness and Wire Harness

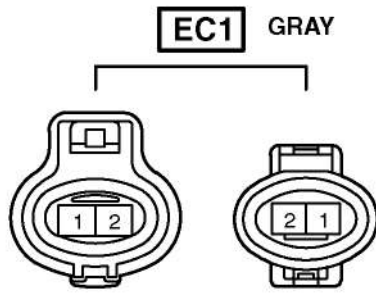


Code	Joining Wire Harness and Wire Harness (Connector Location)
EC1	Engine Wire and Cowl Wire (Under the Engine Room J/B)

E ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[LHD : 2C-T]

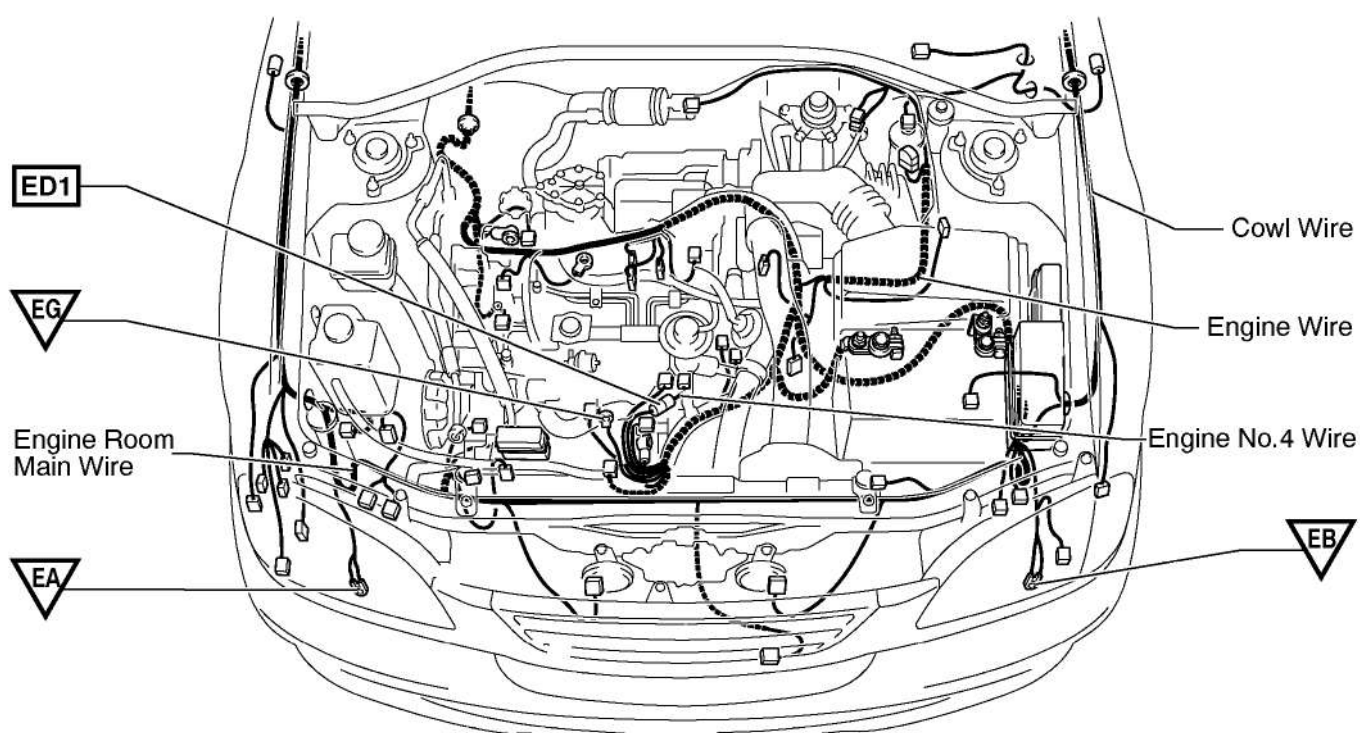

Connector Joining Wire Harness and Wire Harness

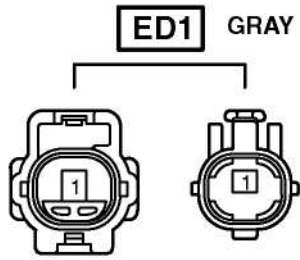


Code	Joining Wire Harness and Wire Harness (Connector Location)
ED1	Engine No.4 Wire and Engine Wire (Near the Starter)

E ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[LHD]

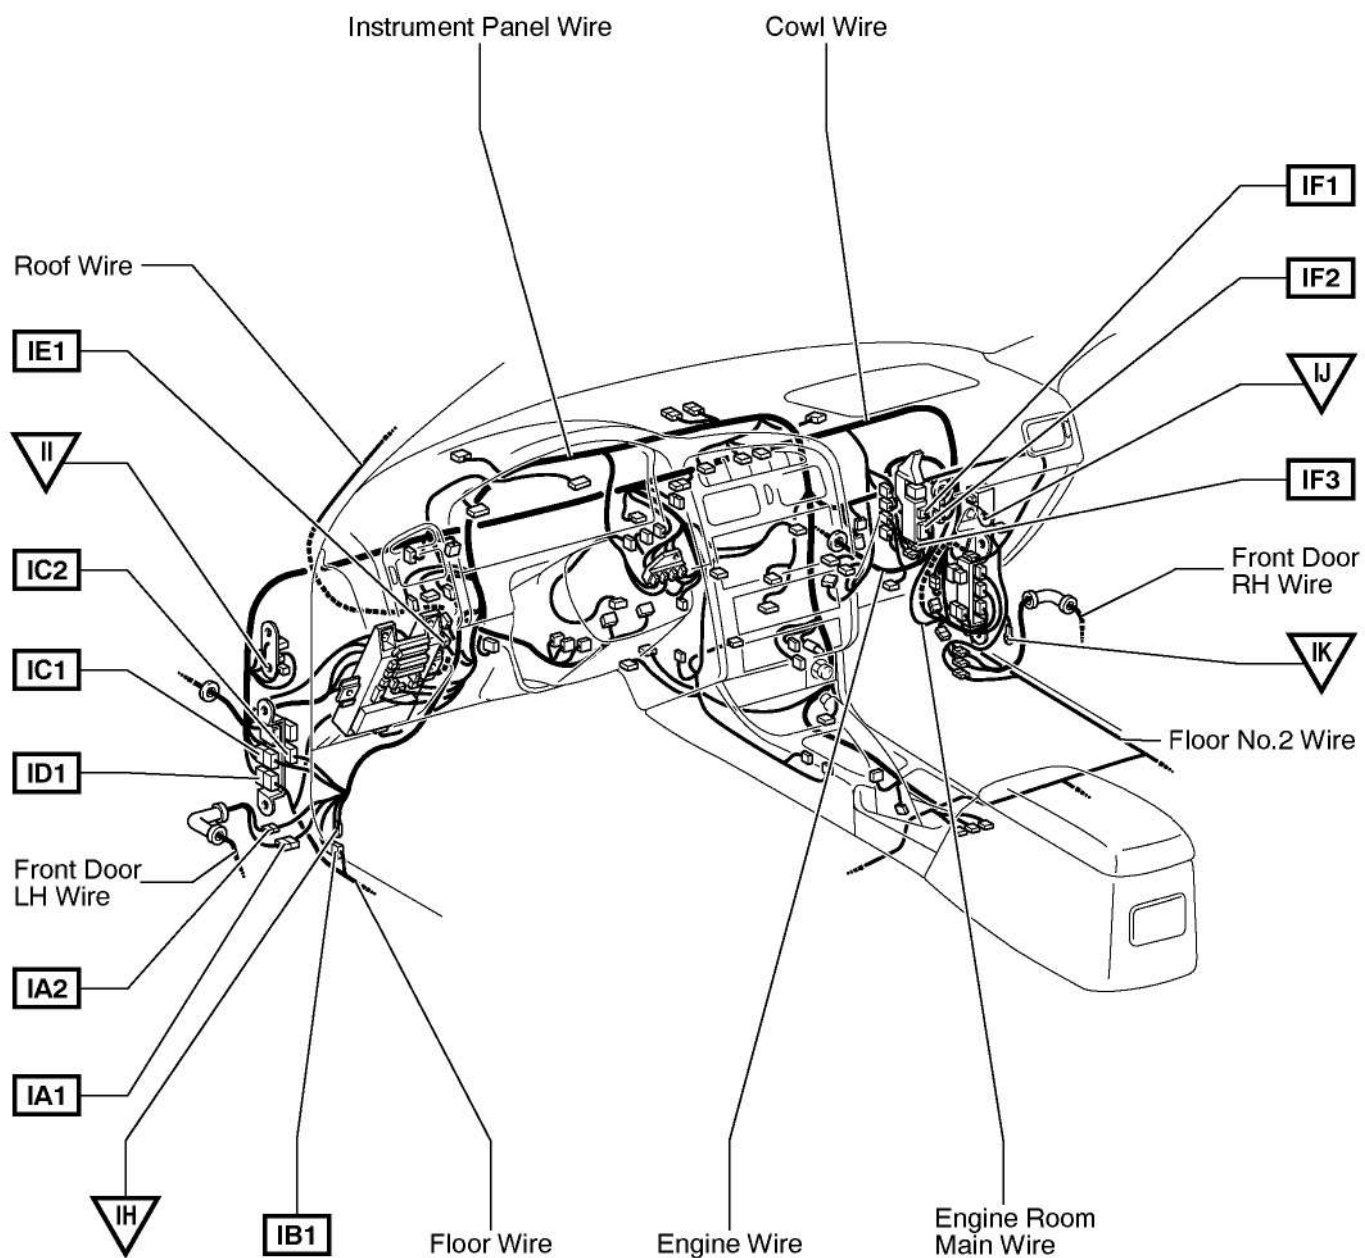

Connector Joining Wire Harness and Wire Harness

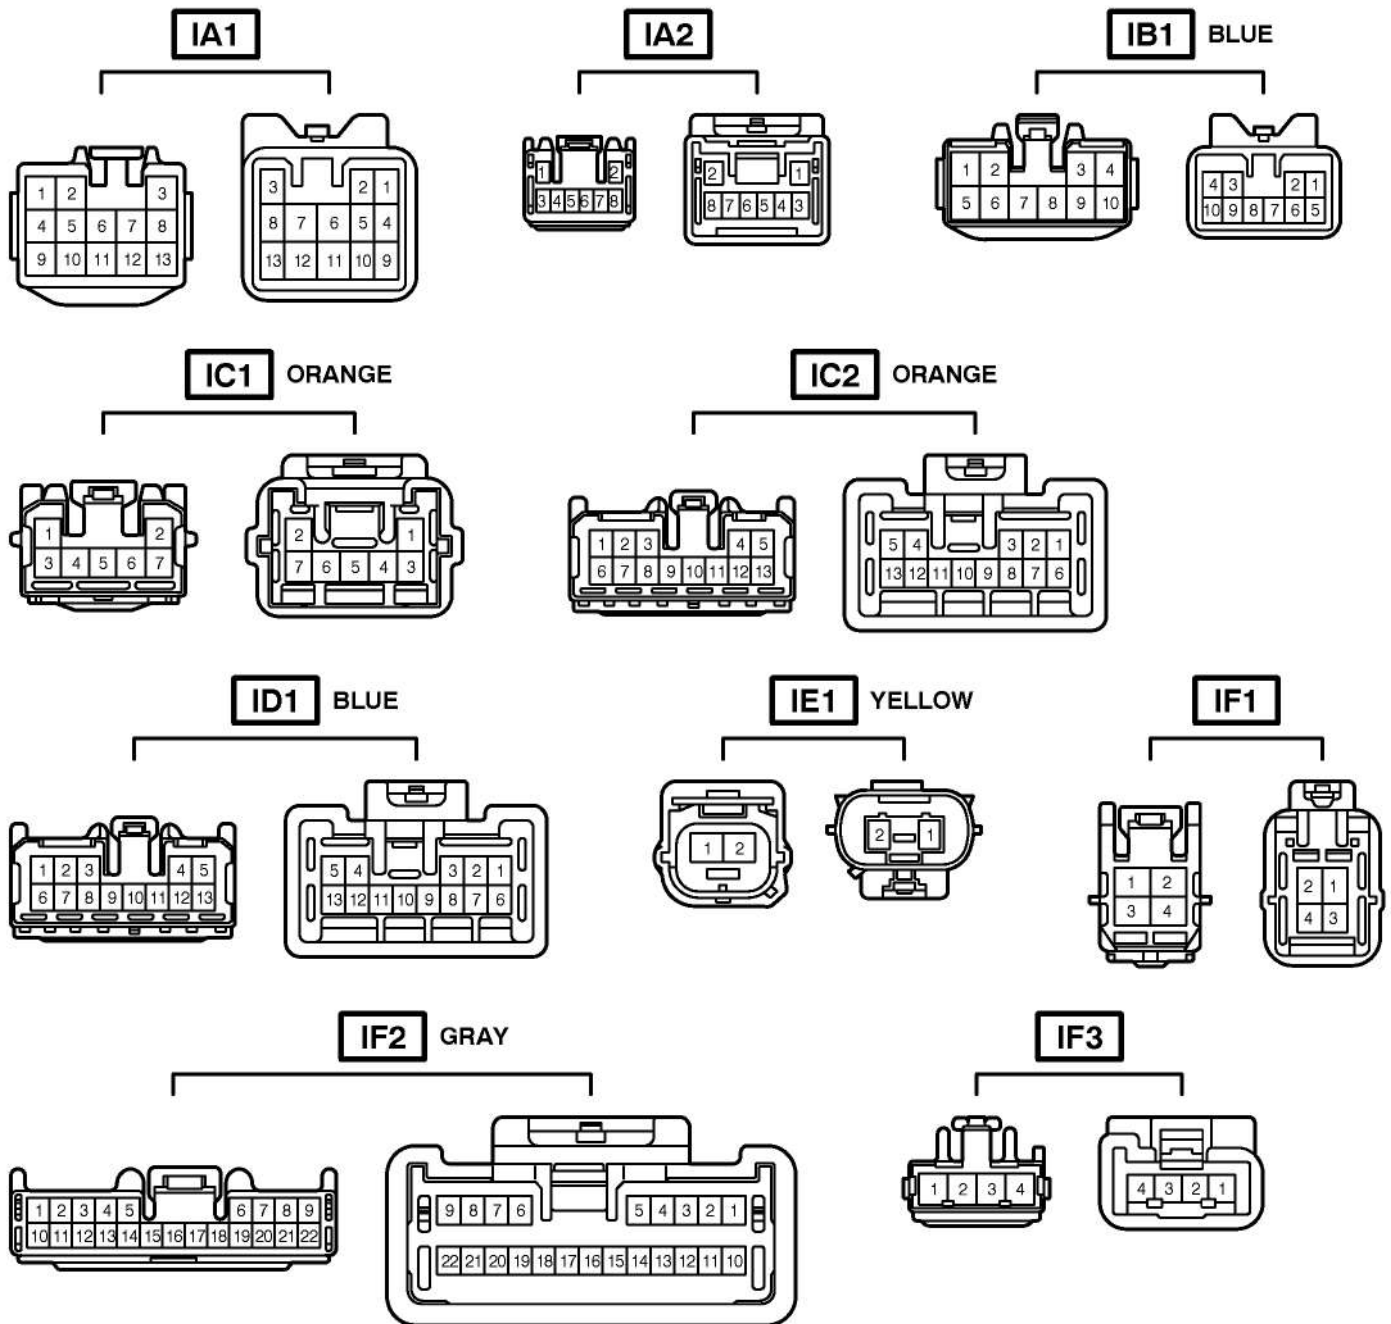


Code	Joining Wire Harness and Wire Harness (Connector Location)
IA1	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IA2	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IB1	Instrument Panel Wire and Floor Wire (Left Kick Panel)
IC1	Instrument Panel Wire and Cowl Wire (Left Kick Panel)
IC2	Instrument Panel Wire and Cowl Wire (Left Kick Panel)
ID1	Floor Wire and Cowl Wire (Left Kick Panel)
IE1	Instrument Panel Wire and Cowl Wire (Right Side of Instrument Panel J/B)
IF1	Engine Wire and Cowl Wire (Passenger Side Dash Panel)
IF2	Engine Wire and Cowl Wire (Passenger Side Dash Panel)
IF3	Engine Wire and Cowl Wire (Passenger Side Dash Panel)


E ELECTRICAL WIRING ROUTING

 : Location of Connector Joining Wire Harness and Wire Harness

[LHD]

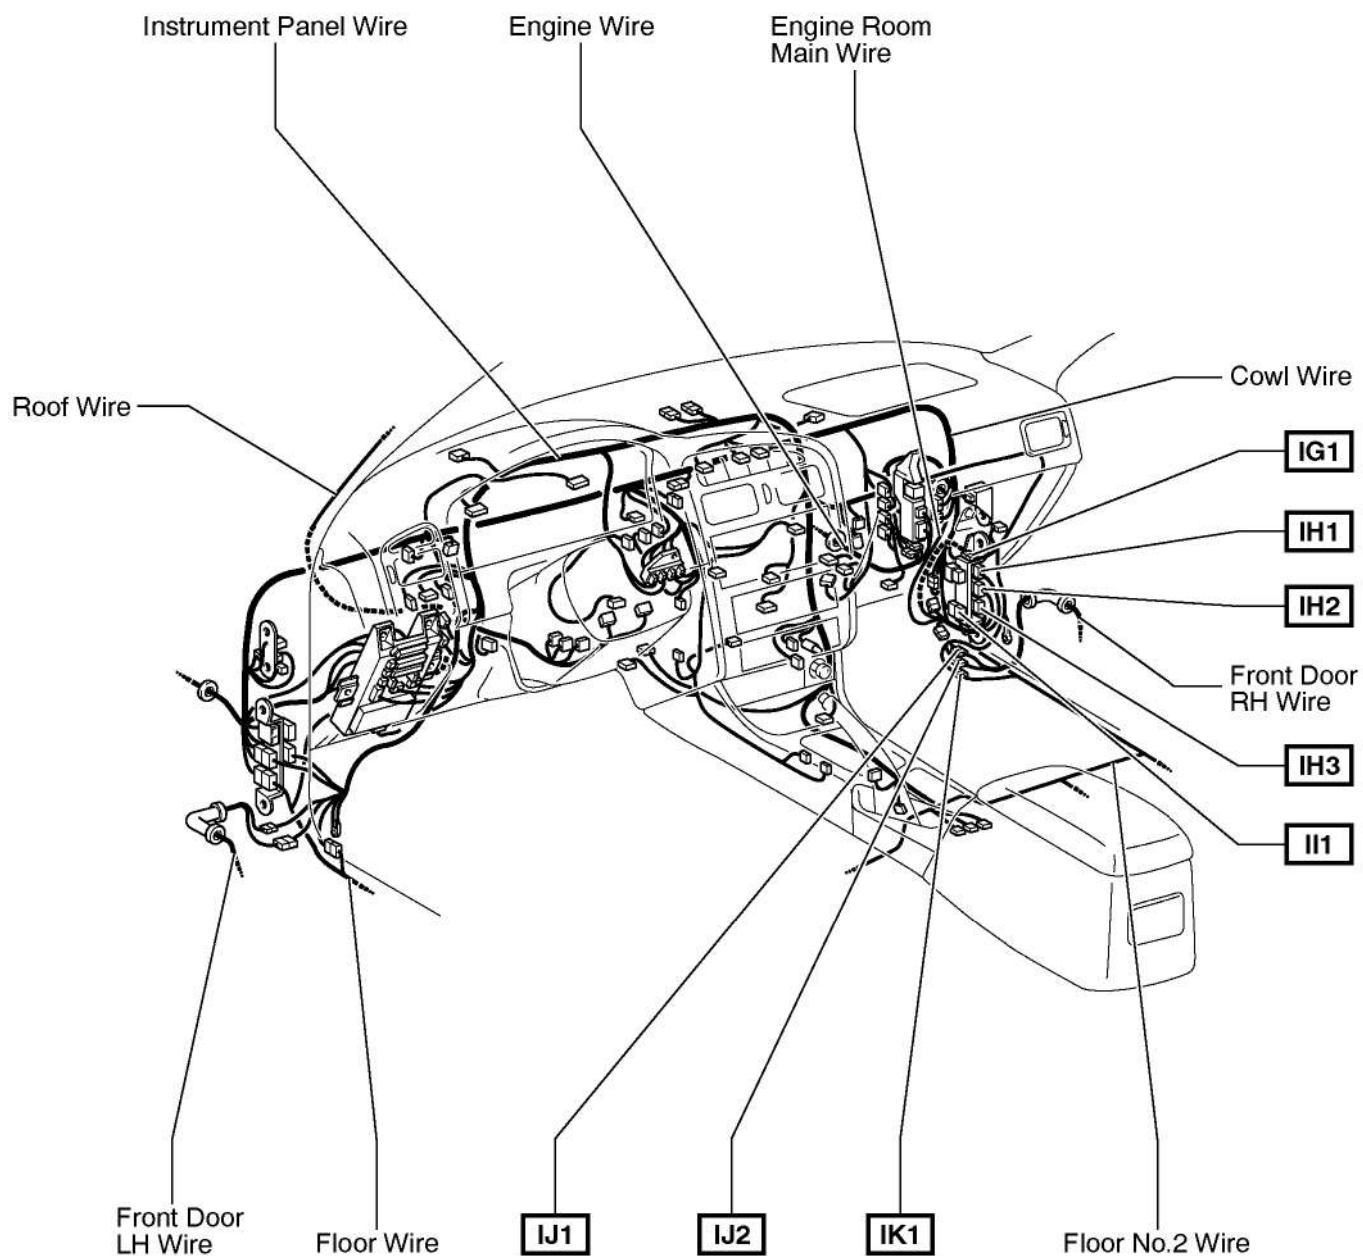

Connector Joining Wire Harness and Wire Harness

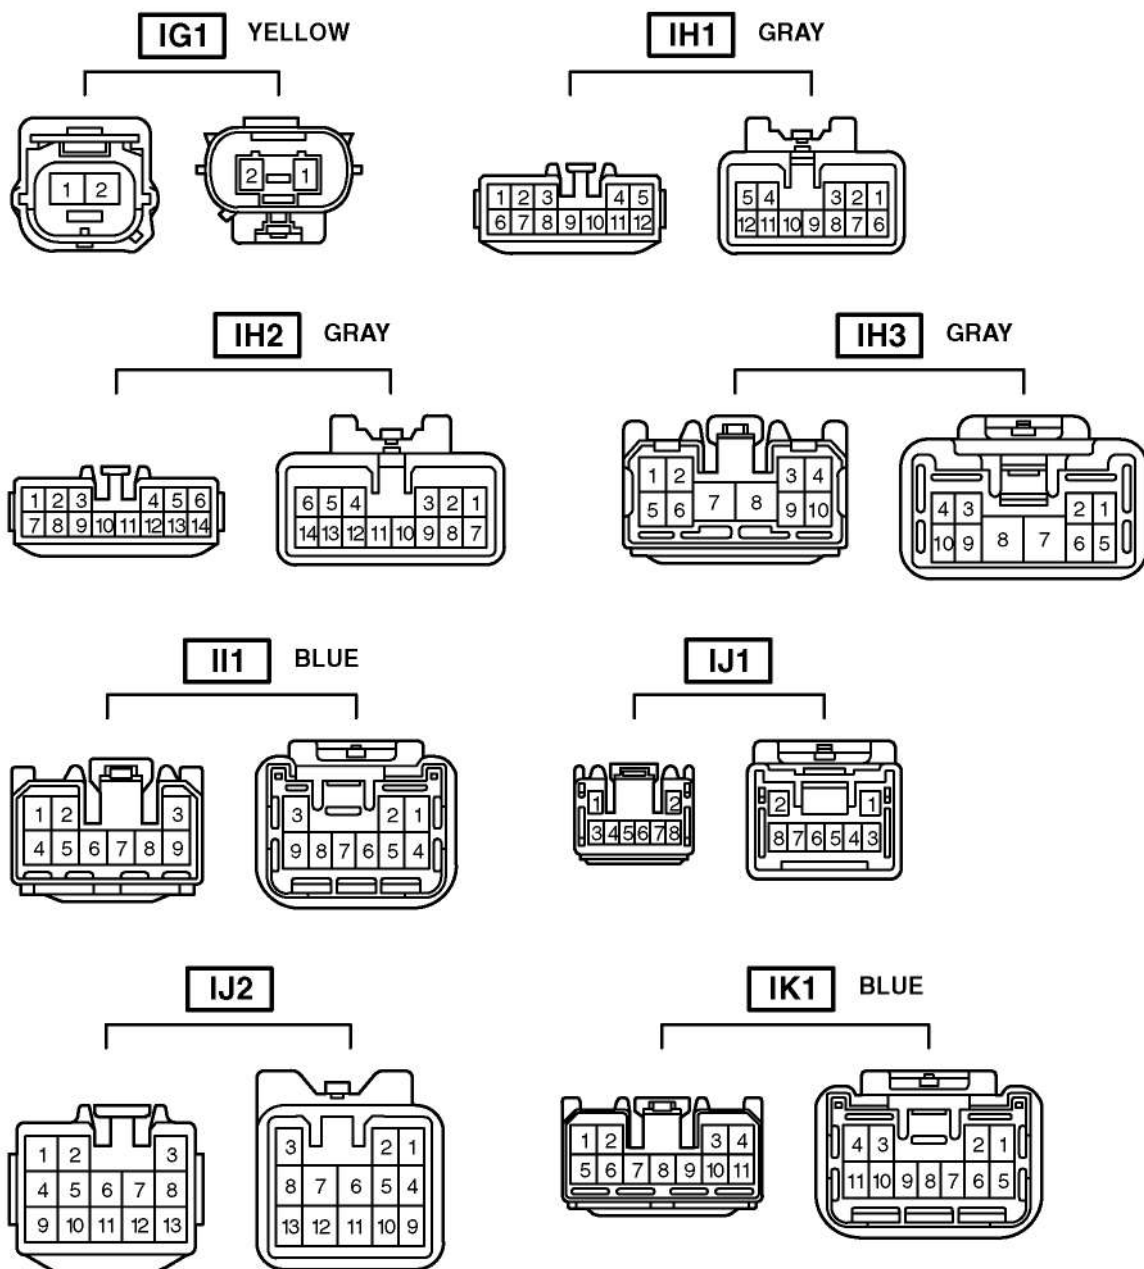


Code	Joining Wire Harness and Wire Harness (Connector Location)
IG1	Instrument Panel Wire and Engine Room Main Wire (Right Kick Panel)
IH1	Engine Room Main Wire and Cowl Wire (Right Kick Panel)
IH2	
IH3	
II1	Floor No.2 Wire and Cowl Wire (Right Kick Panel)
IJ1	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IJ2	
IK1	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)

E ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[LHD : S/D]

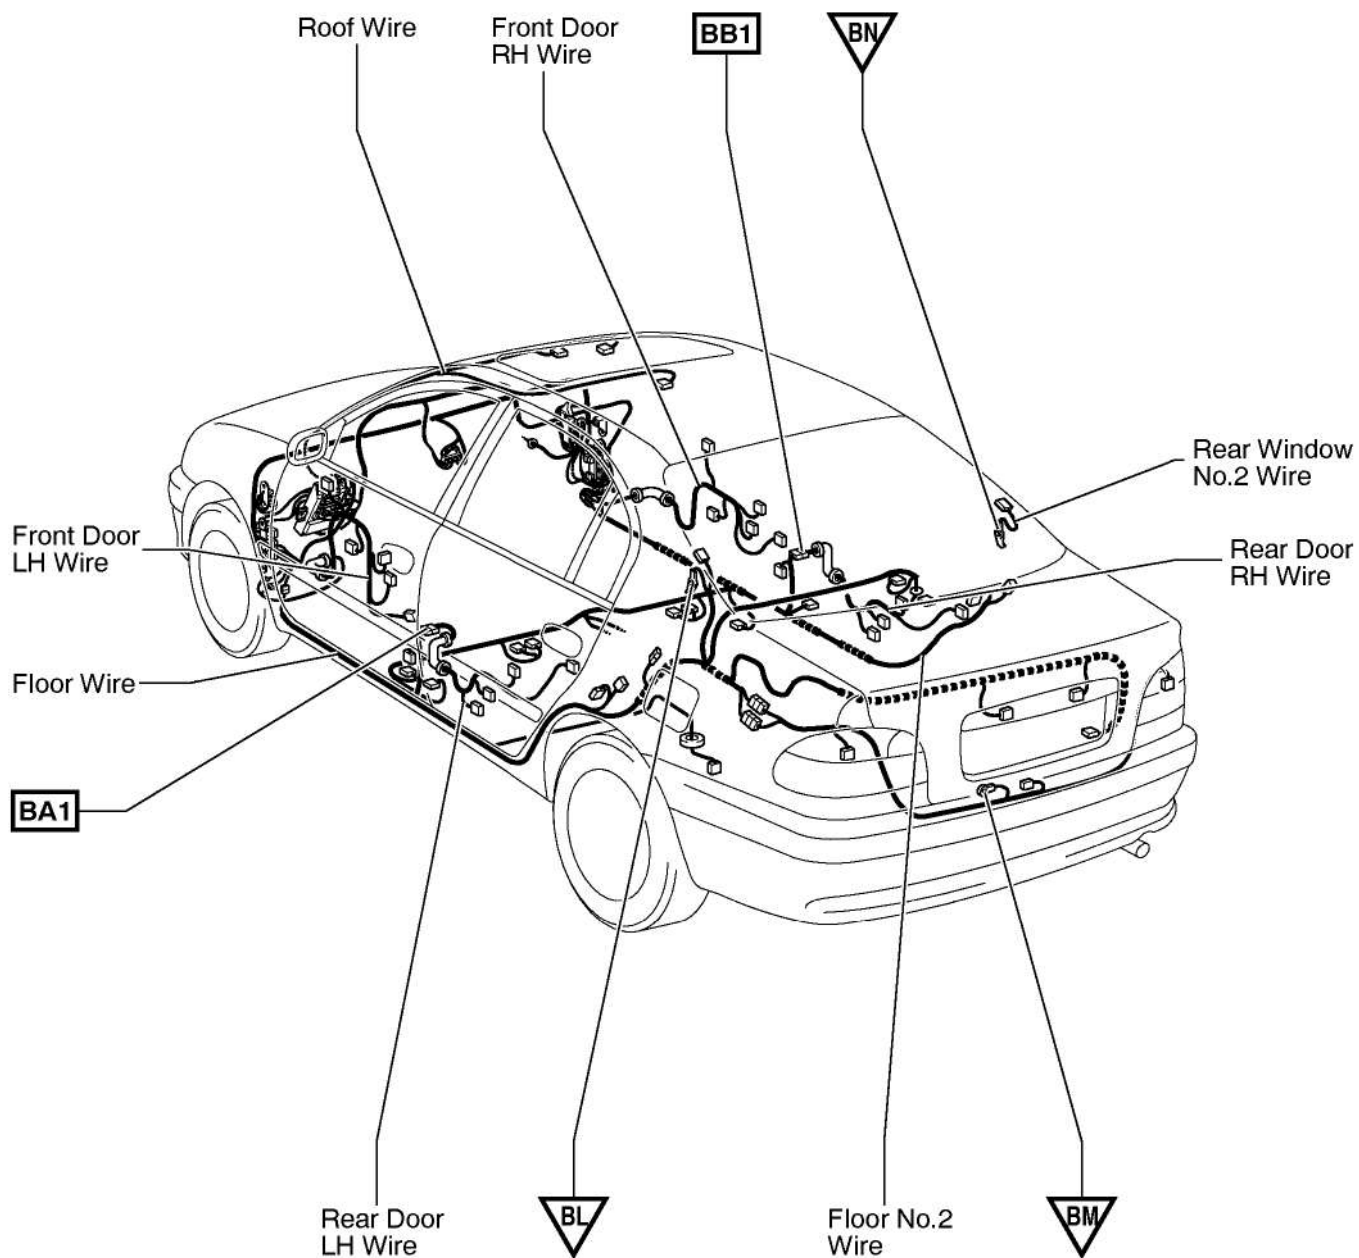

Connector Joining Wire Harness and Wire Harness

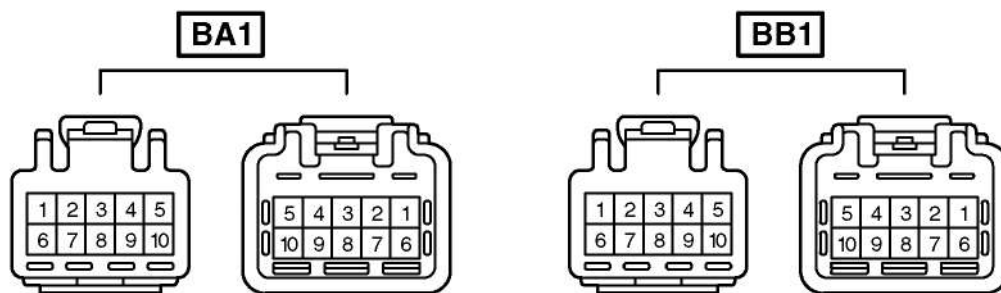


Code	Joining Wire Harness and Wire Harness (Connector Location)
BA1	Rear Door LH Wire and Floor Wire (Under the Left Center Pillar)
BB1	Rear Door RH Wire and Floor No.2 Wire (Under the Right Center Pillar)

E ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[LHD : L/B]

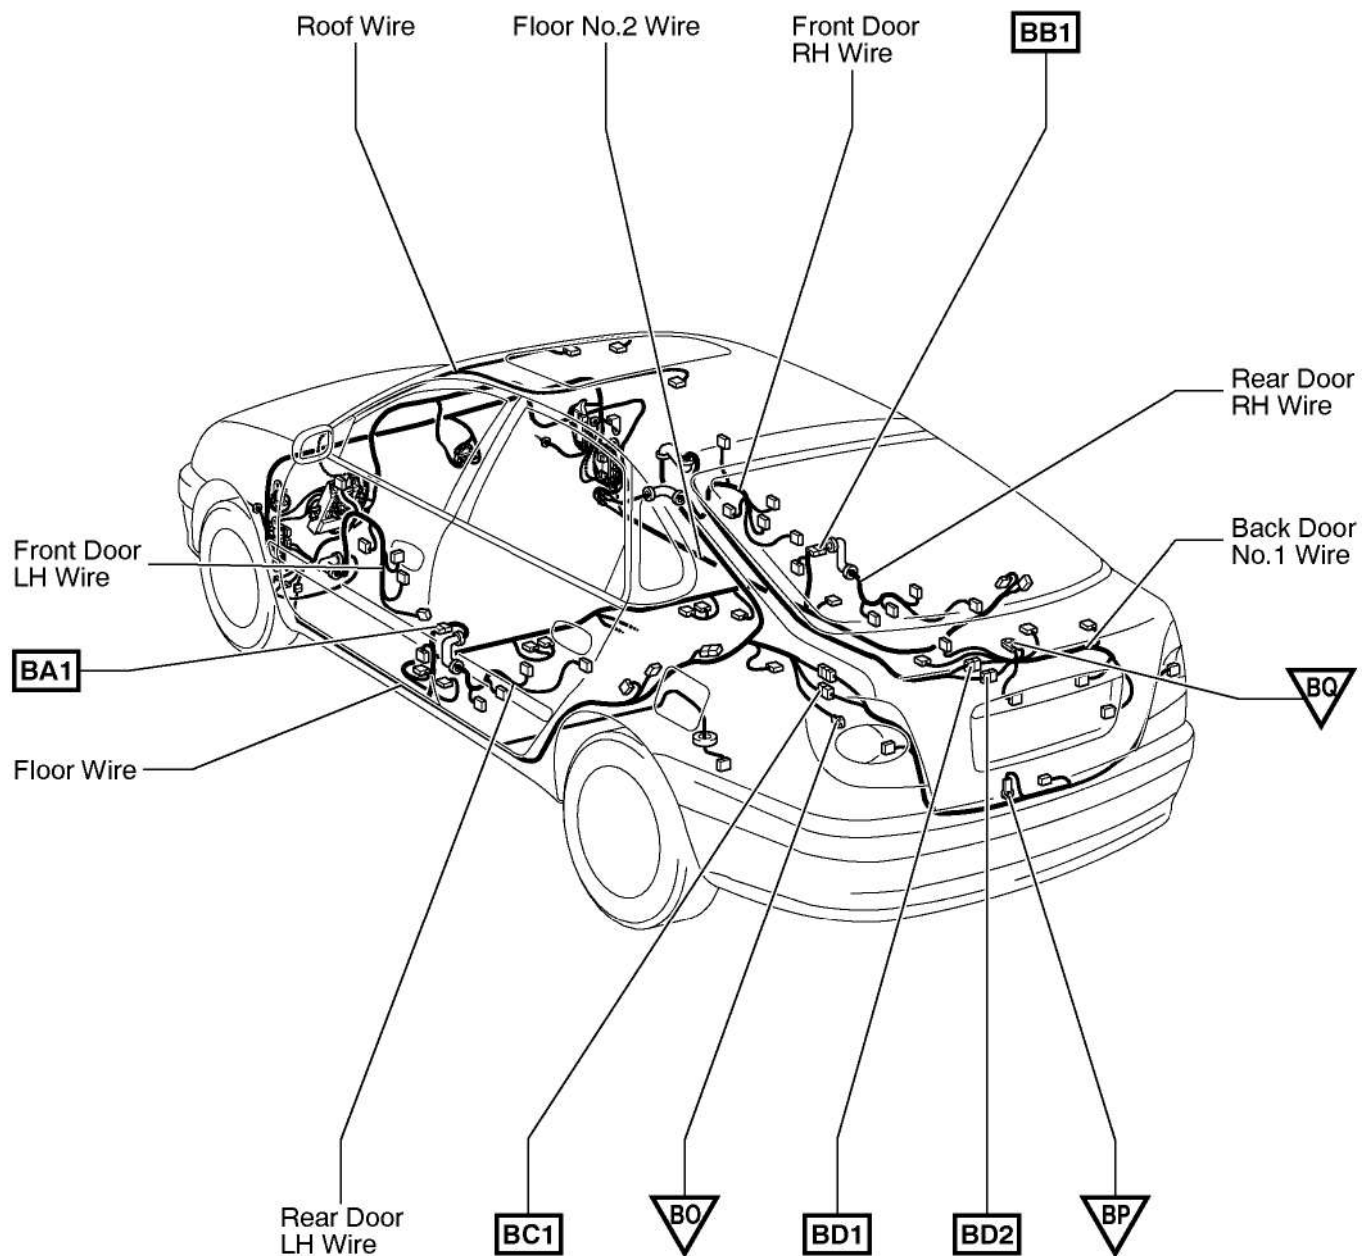

Connector Joining Wire Harness and Wire Harness

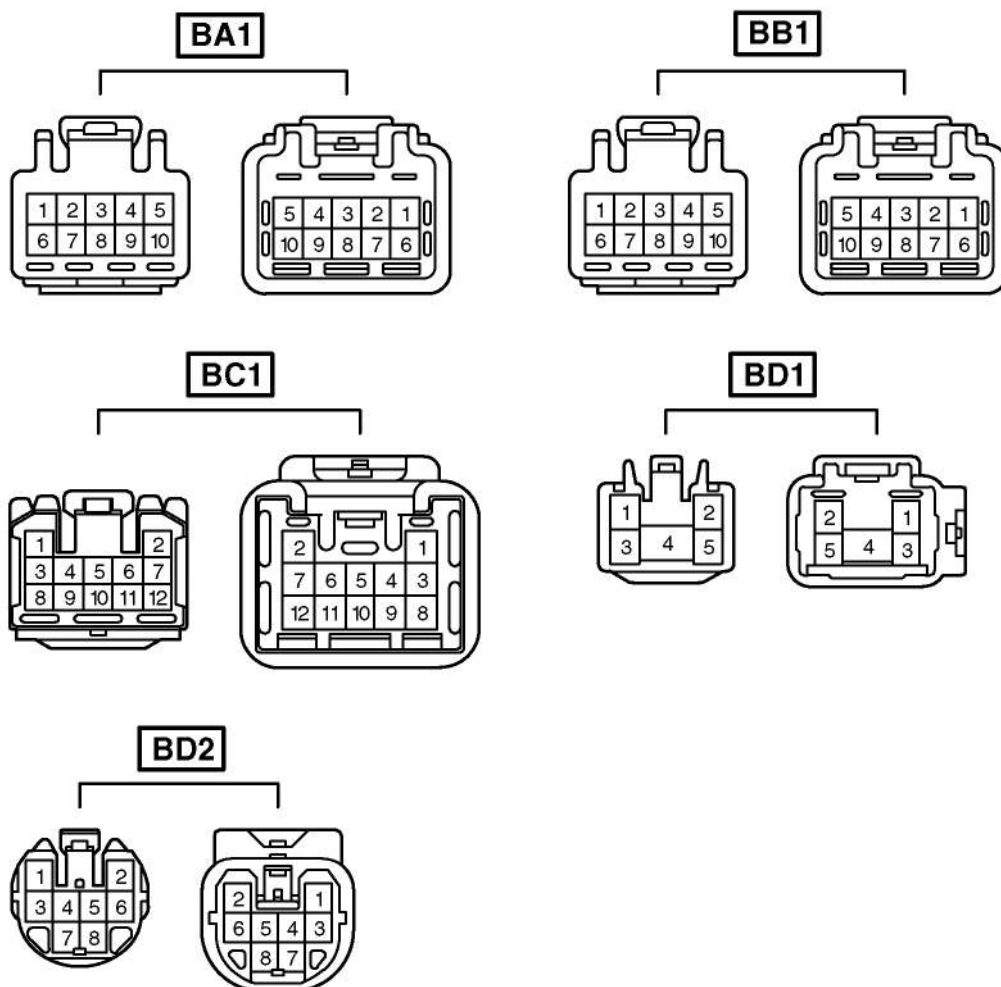


Code	Joining Wire Harness and Wire Harness (Connector Location)
BA1	Rear Door LH Wire and Floor Wire (Under the Left Center Pillar)
BB1	Rear Door RH Wire and Floor No.2 Wire (Under the Right Center Pillar)
BC1	Floor Wire and Floor Wire (Under the Left Quarter Pillar)
BD1	Floor Wire and Back Door No.1 Wire (Back Door Left)
BD2	

E ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[LHD : W/G]

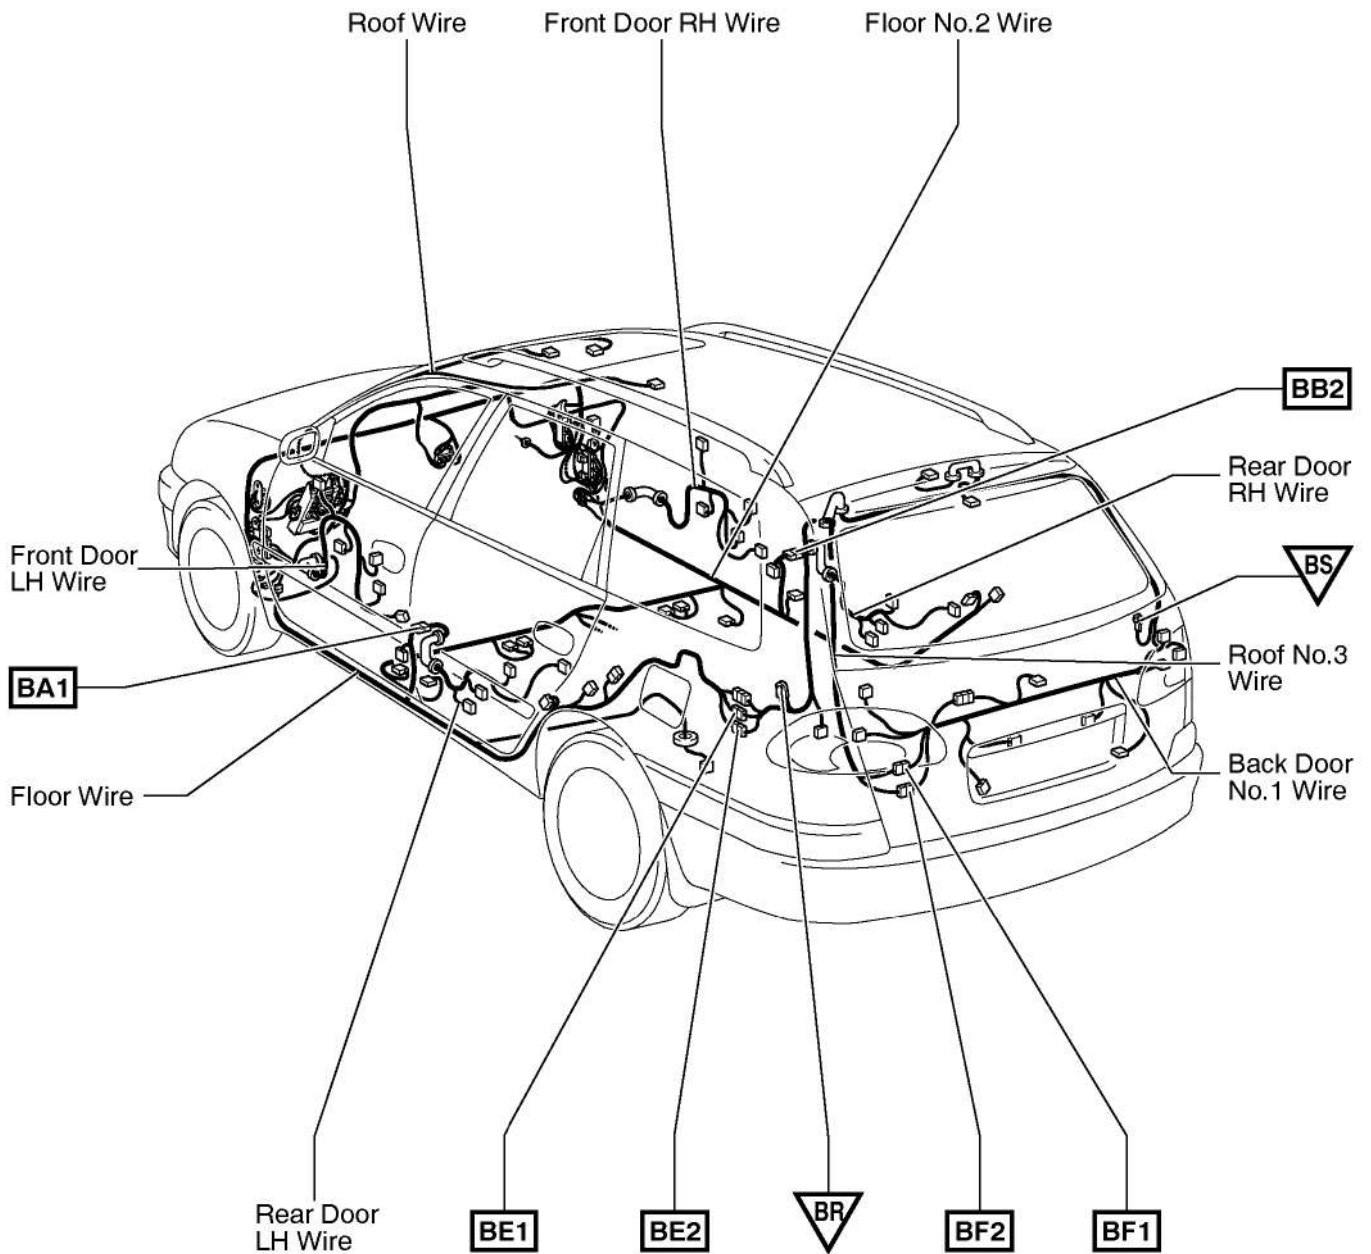

Connector Joining Wire Harness and Wire Harness

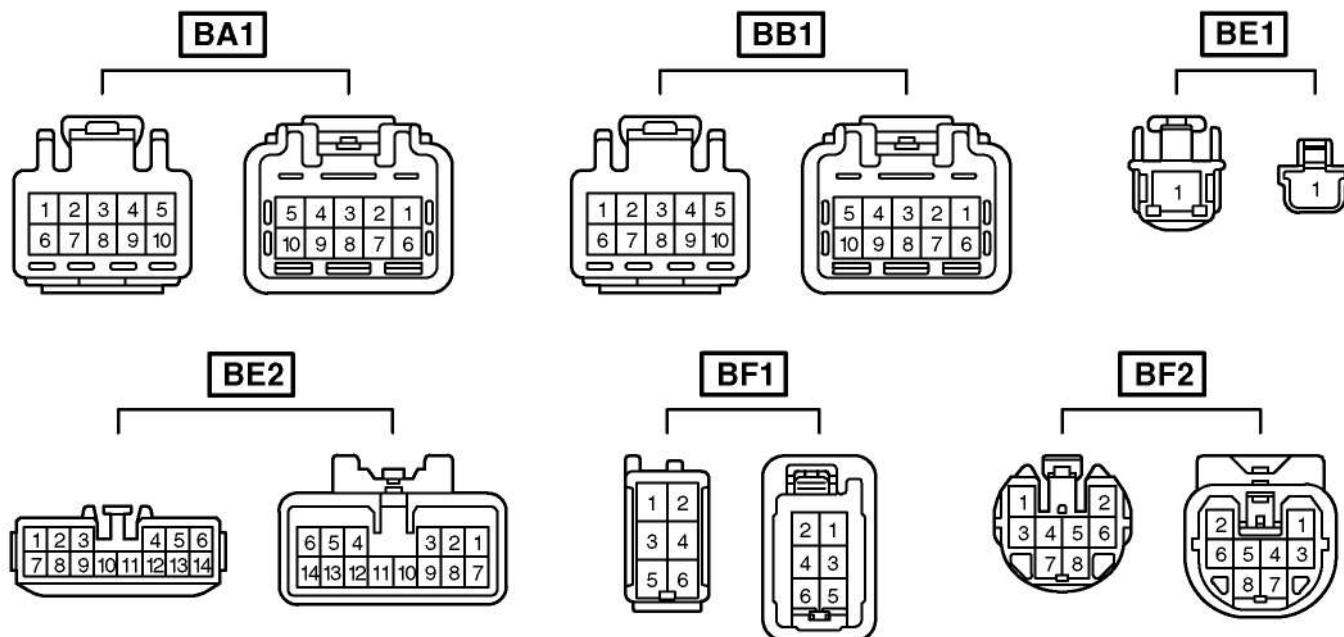


Code	Joining Wire Harness and Wire Harness (Connector Location)
BA1	Rear Door LH Wire and Floor Wire (Under the Left Center Pillar)
BB1	Rear Door RH Wire and Floor No.2 Wire (Under the Right Center Pillar)
BE1	Roof No.3 Wire and Floor Wire (Left Quarter Panel)
BE2	Floor Wire and Roof No.3 Wire (Left Quarter Panel)
BF1	Roof No.3 Wire and Back Door No.1 Wire (Back Door Left)
BF2	

E ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[RHD : 3S-FE]

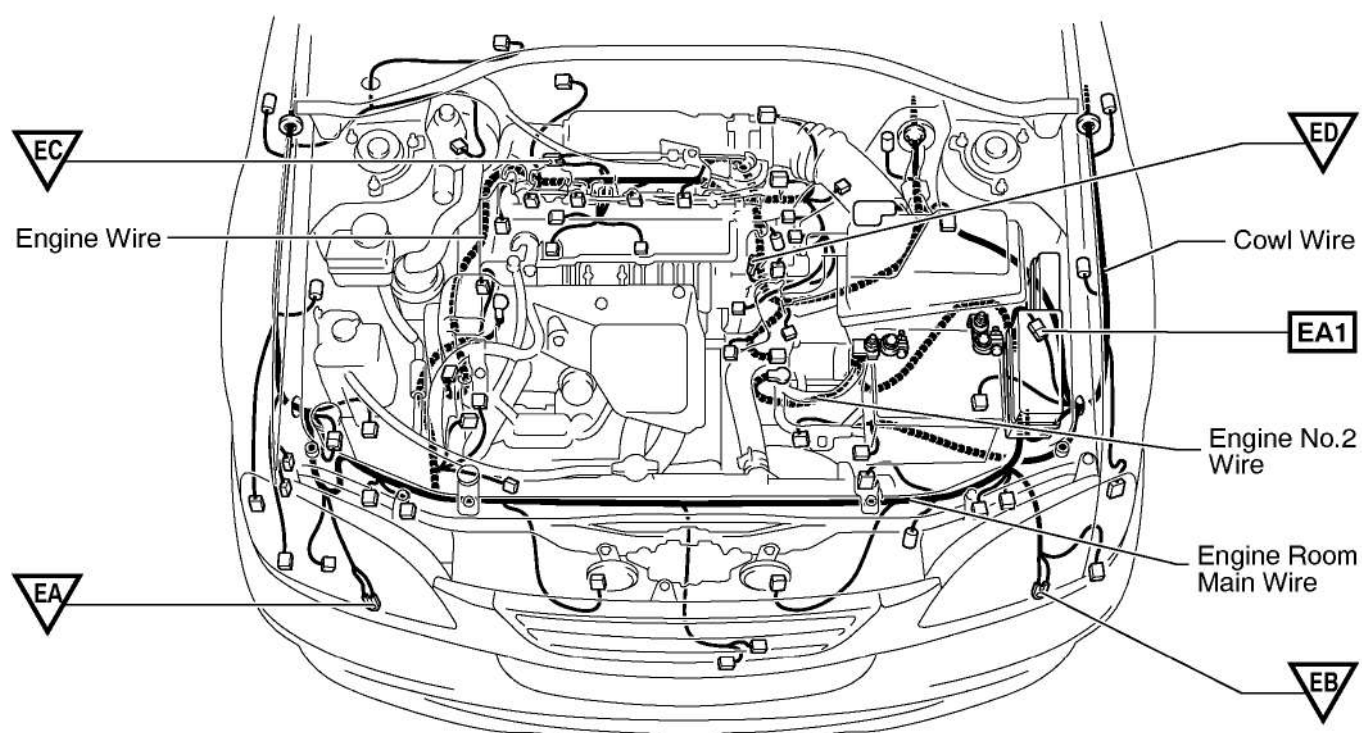

Connector Joining Wire Harness and Wire Harness

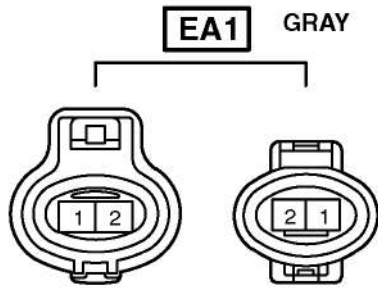


Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Room Main Wire and Cowl Wire (Under the Engine Room J/B)

E ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[RHD : 7A-FE, 4A-FE Lean Burn Type]

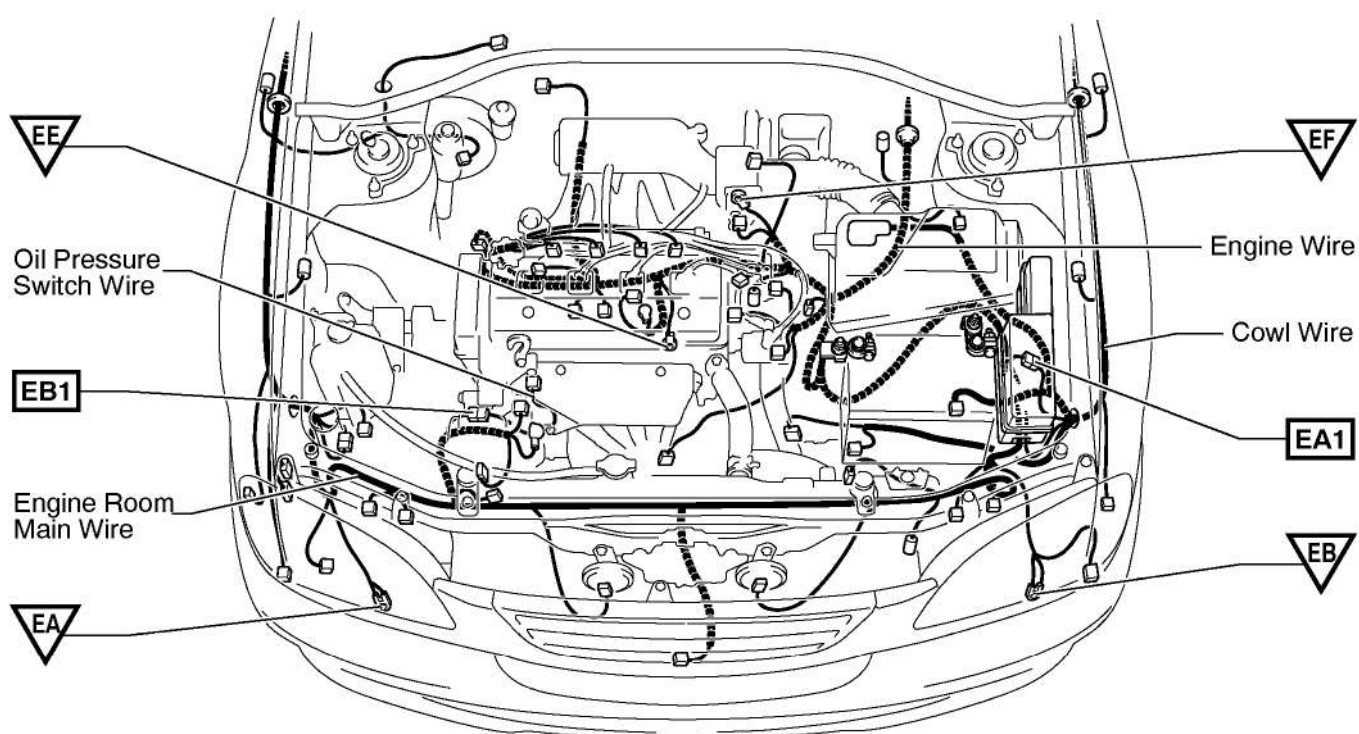

Connector Joining Wire Harness and Wire Harness

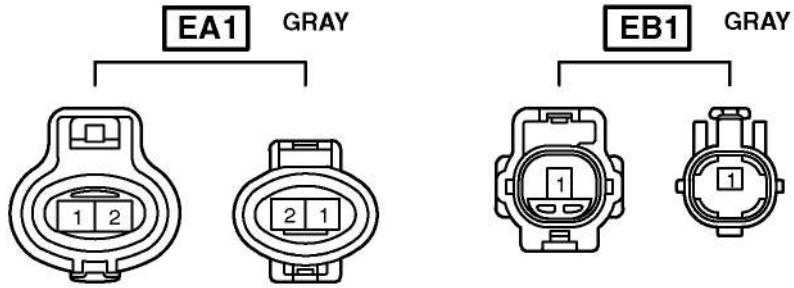


Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Room Main Wire and Cowl Wire (Under the Engine Room J/B)
EB1	Oil Pressure Switch Wire and Engine Room Main Wire (Near the Alternator)

E ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[RHD : 4A-FE Stoichiometric Type]

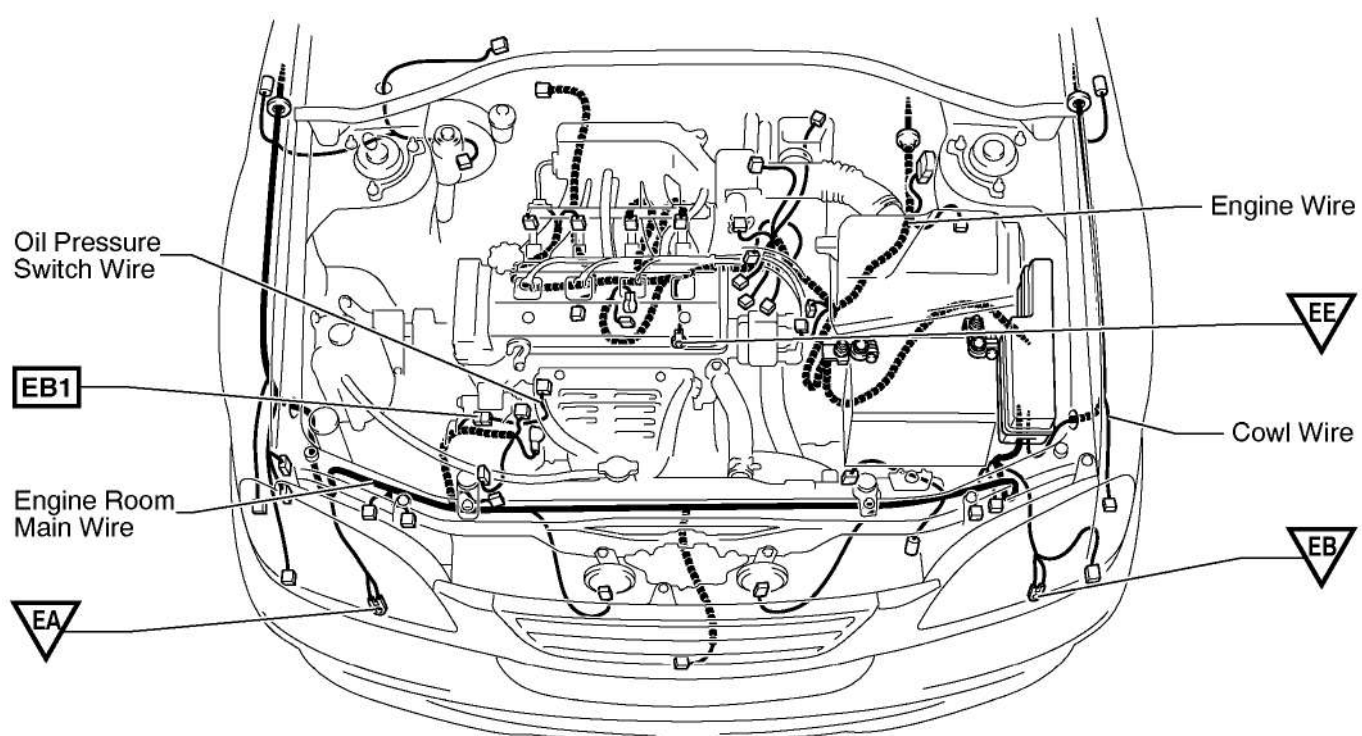

Connector Joining Wire Harness and Wire Harness

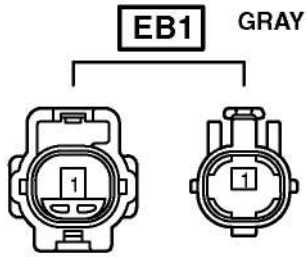


Code	Joining Wire Harness and Wire Harness (Connector Location)
EB1	Oil Pressure Switch Wire and Engine Room Main Wire (Near the Alternator)

E ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[RHD : 1CD-FTV]

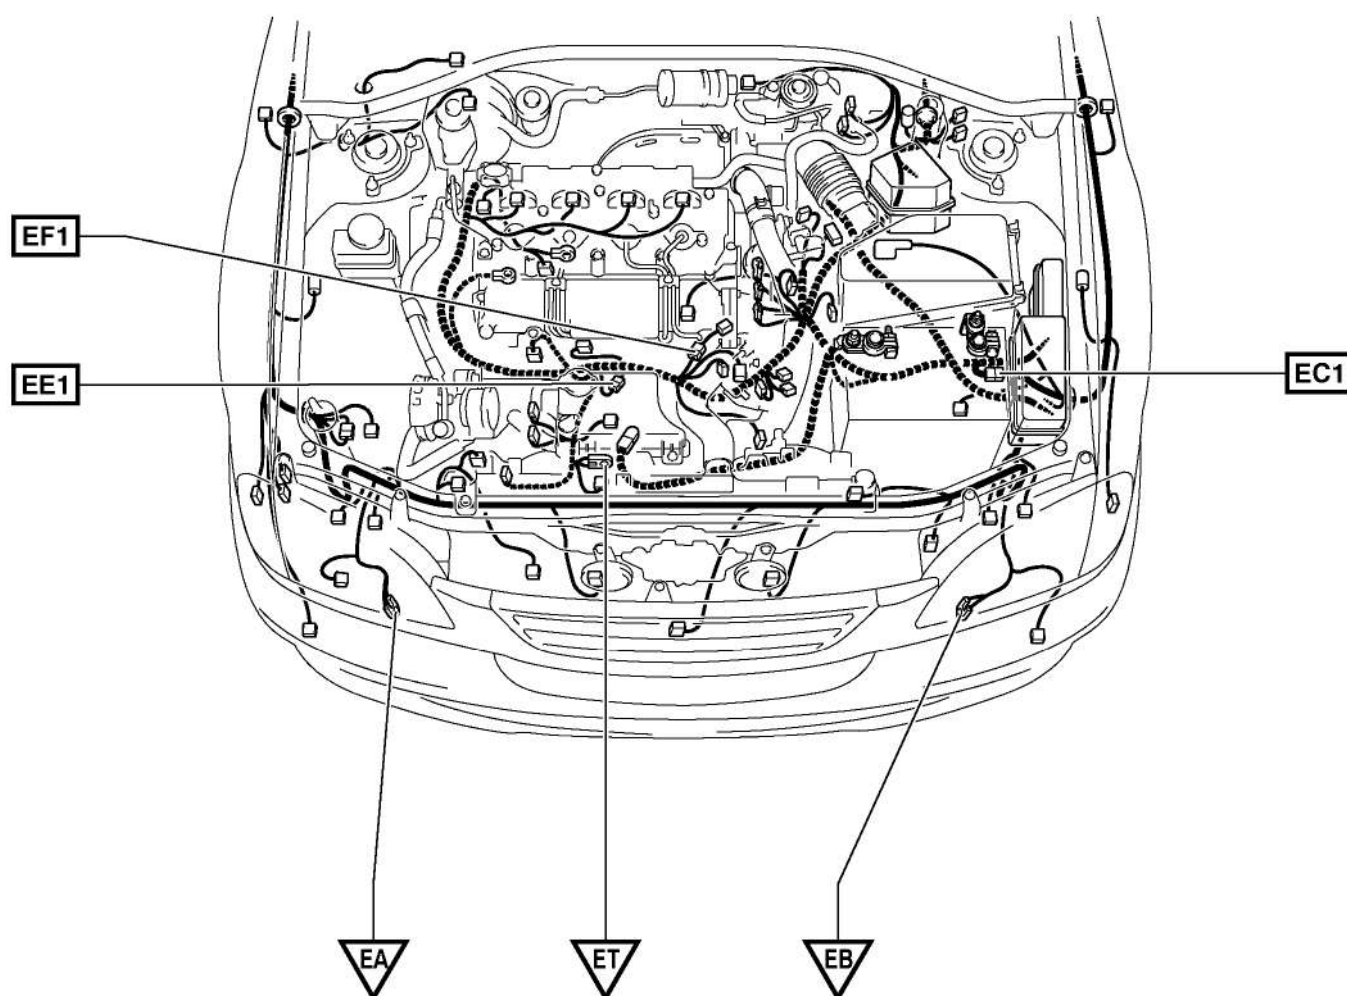

Connector Joining Wire Harness and Wire Harness

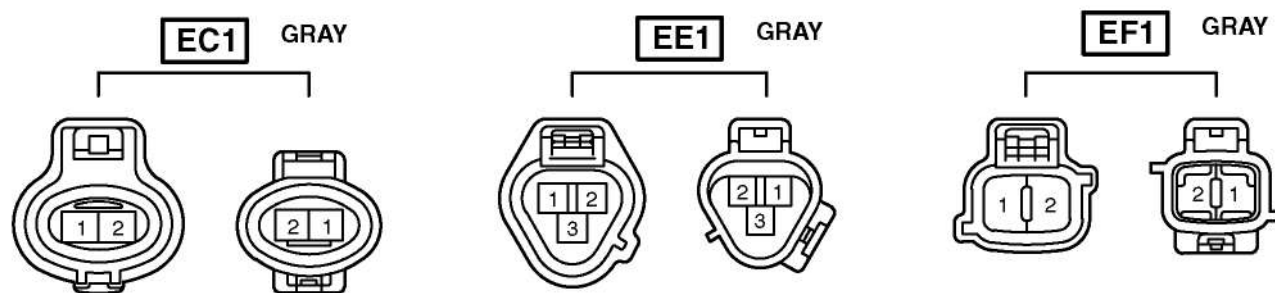


Code	Joining Wire Harness and Wire Harness (Connector Location)
EC1	Engine Wire and Cowl Wire (Under the Engine Room J/B)
EE1	Engine Wire and Engine No.6 Wire (Under the Starter)
EF1	Engine Wire and Engine No.4 Wire (Under the Starter)

E ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[RHD : 2C-TE]

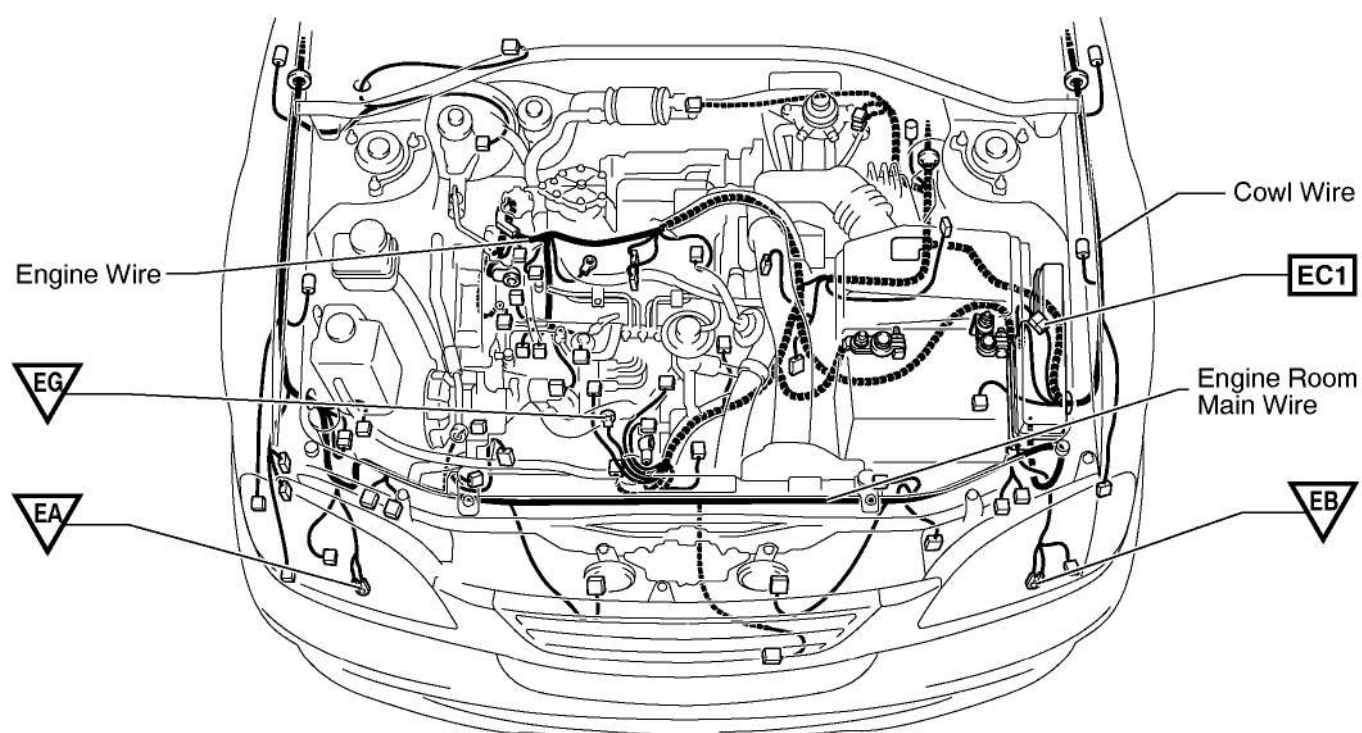

Connector Joining Wire Harness and Wire Harness

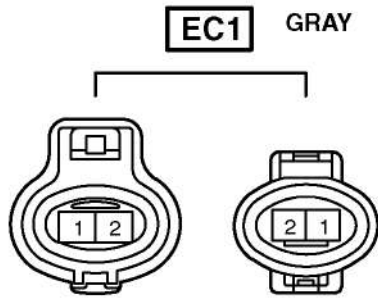


Code	Joining Wire Harness and Wire Harness (Connector Location)
EC1	Engine Wire and Cowl Wire (Under the Engine Room J/B)

E ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[RHD]

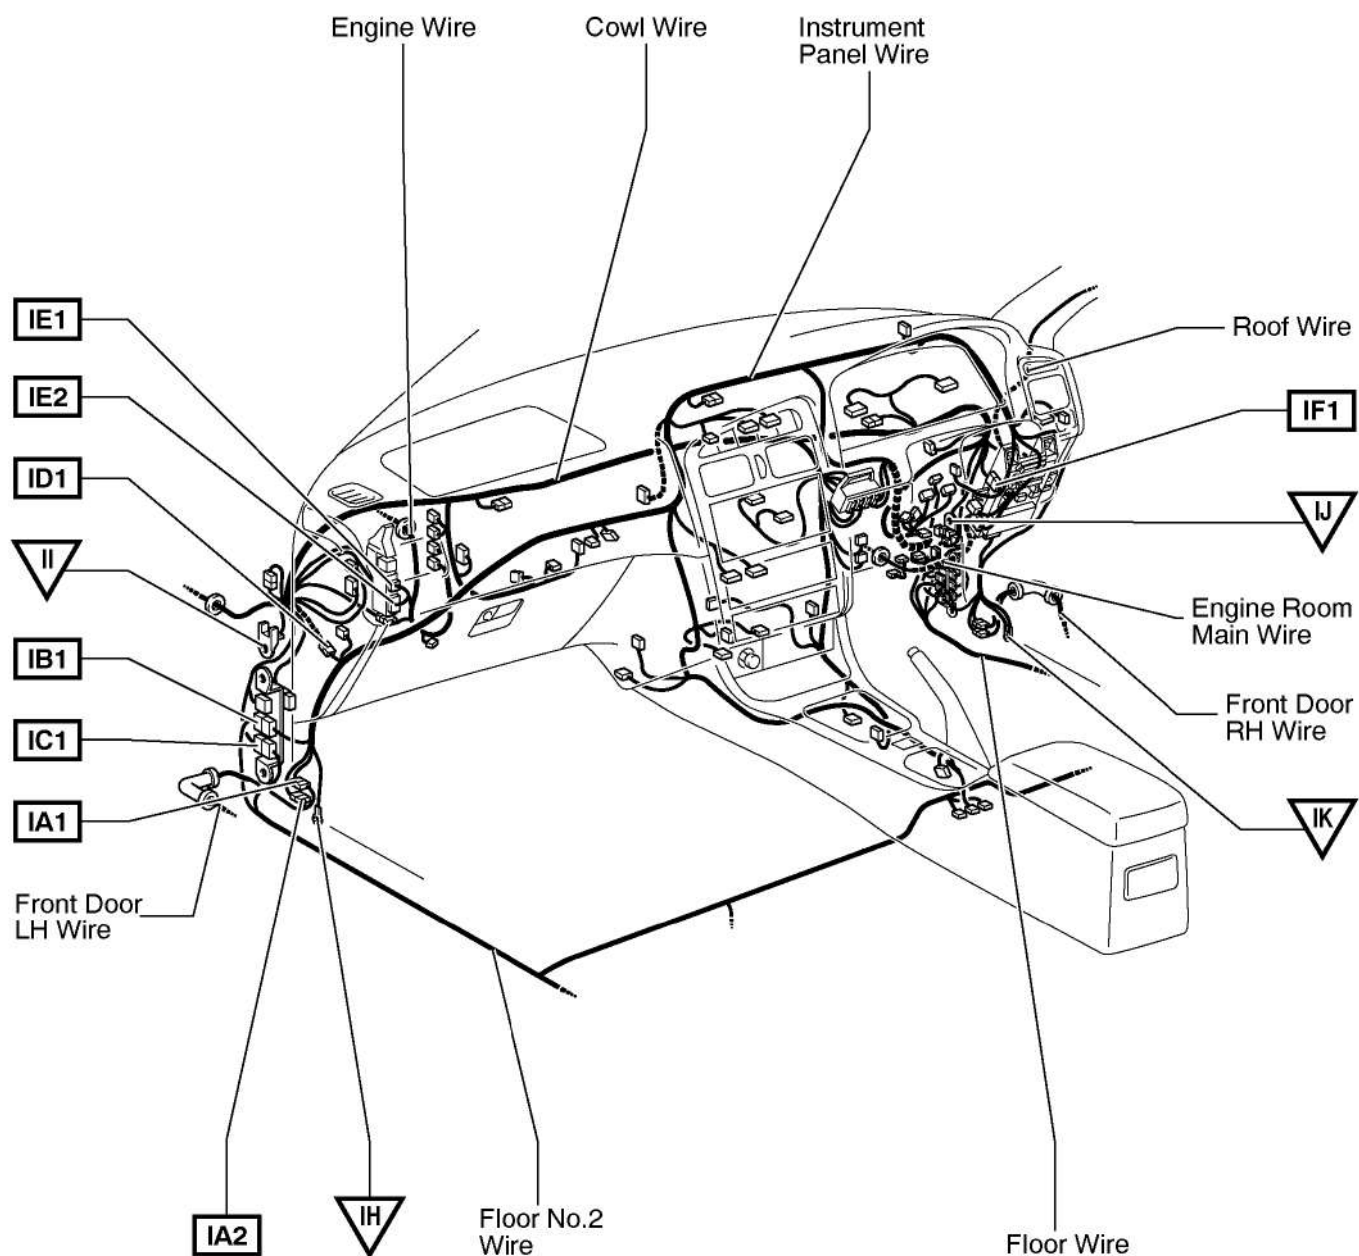

Connector Joining Wire Harness and Wire Harness

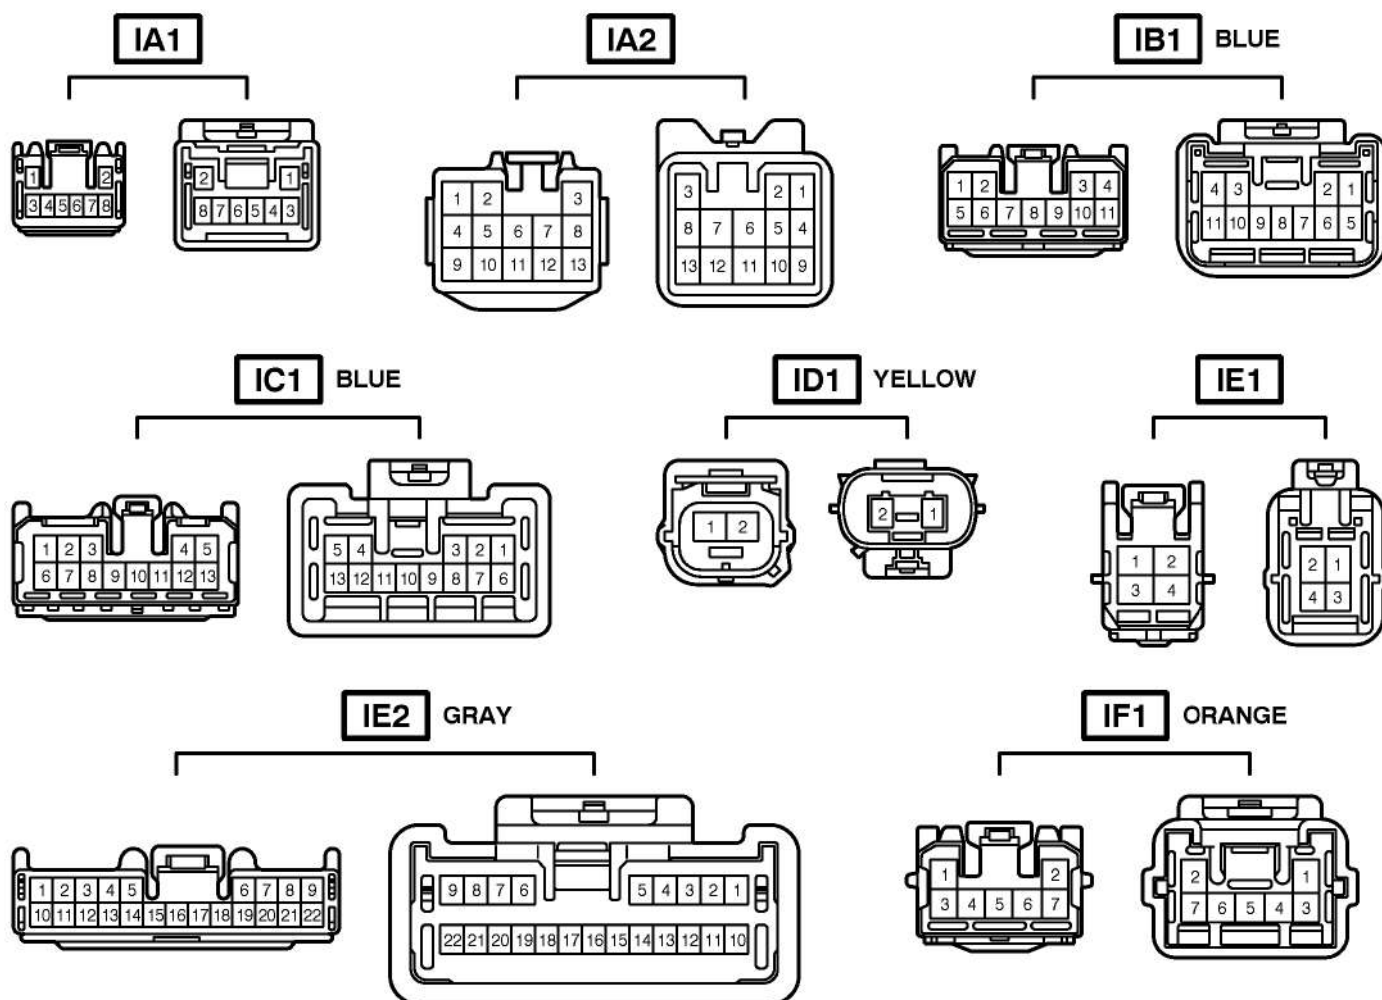


Code	Joining Wire Harness and Wire Harness (Connector Location)
IA1	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IA2	
IB1	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)
IC1	Floor No.2 Wire and Cowl Wire (Left Kick Panel)
ID1	Instrument Panel Wire and Cowl Wire (Left Kick Panel)
IE1	Engine Wire and Cowl Wire (Passenger's Side Dash Panel)
IE2	
IF1	Instrument Panel Wire and Cowl Wire (Left Side of the Instrument Panel J/B)


E ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness

[RHD]

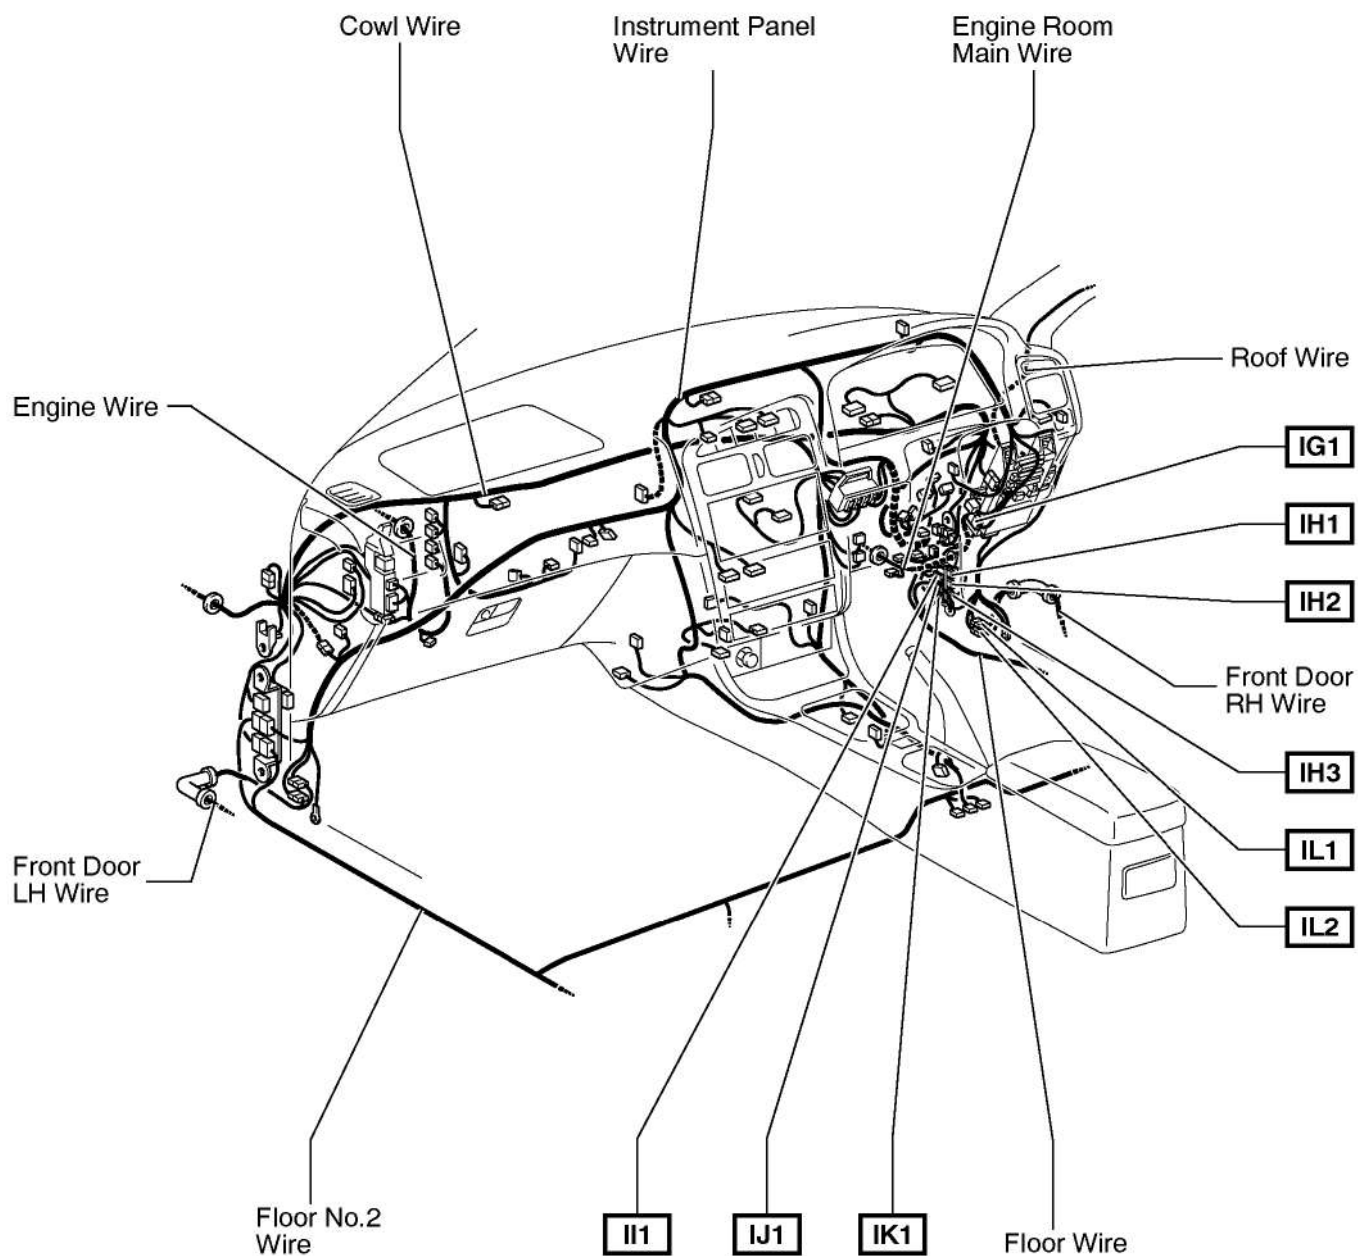

Connector Joining Wire Harness and Wire Harness

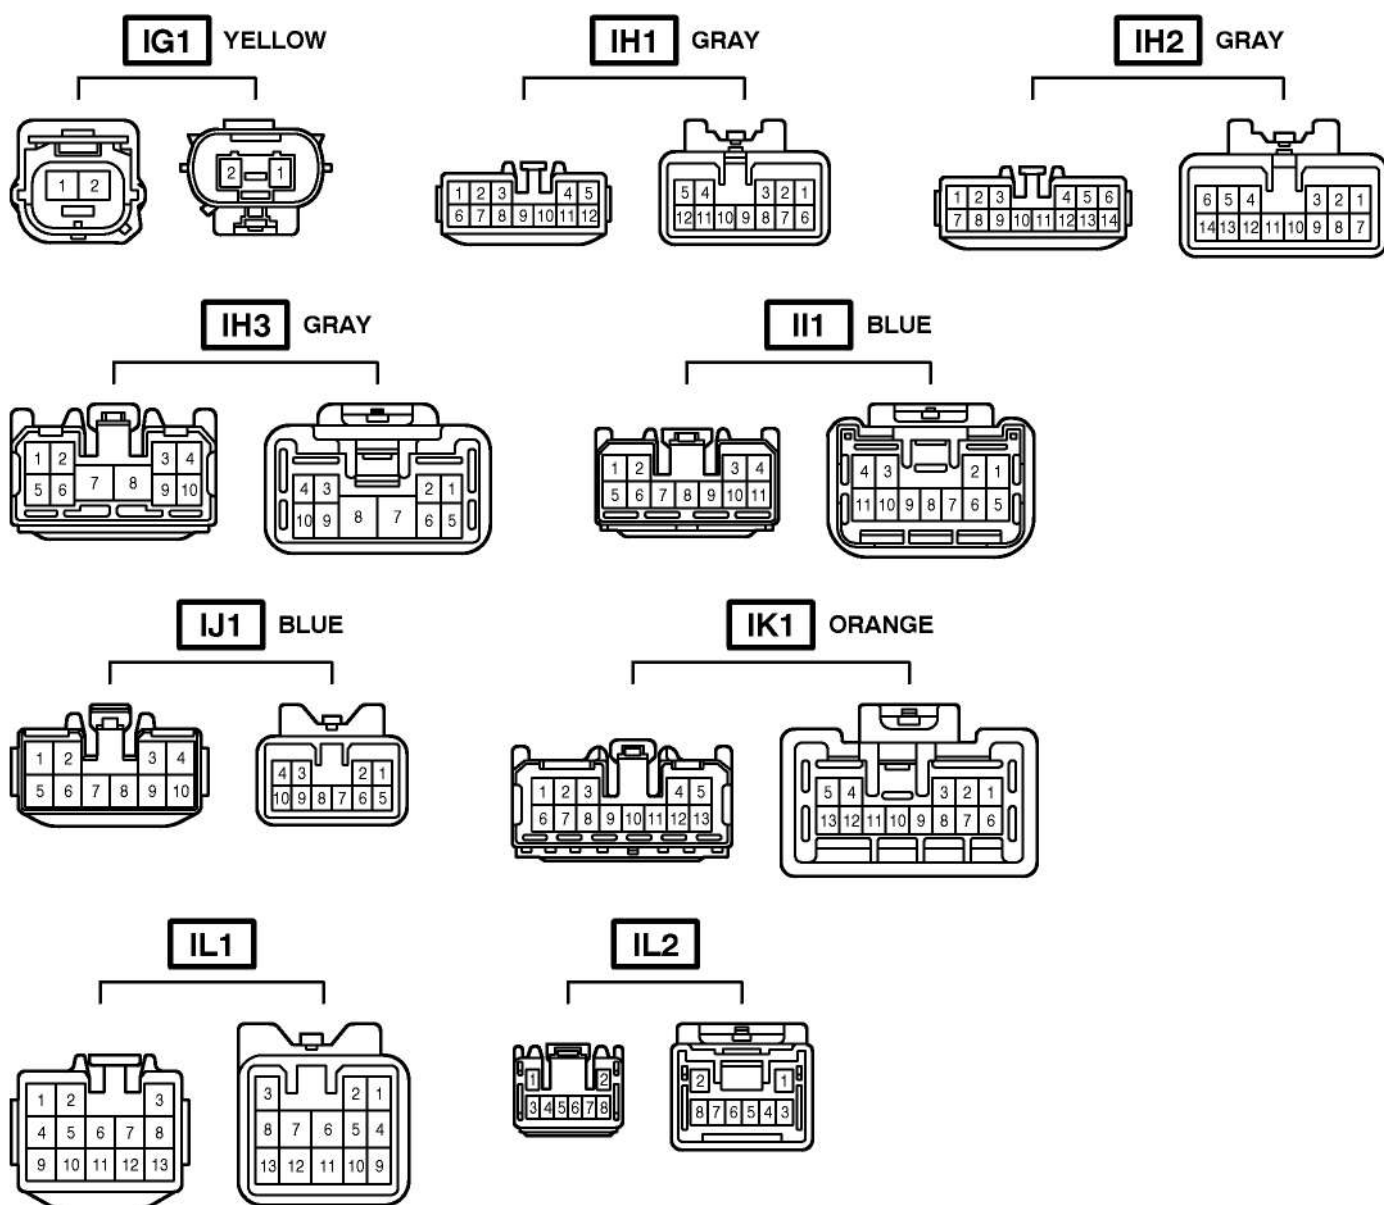


Code	Joining Wire Harness and Wire Harness (Connector Location)
IG1	Instrument Panel Wire and Engine Room Main Wire (Left Side of the Instrument Panel J/B)
IH1	Engine Room Main Wire and Cowl Wire (Right Kick Panel)
IH2	
IH3	
II1	Floor Wire and Cowl Wire (Right Kick Panel)
IJ1	Instrument Panel Wire and Floor Wire (Right Kick Panel)
IK1	Instrument Panel Wire and Cowl Wire (Right Kick Panel)
IL1	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IL2	

E ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[RHD : S/D]

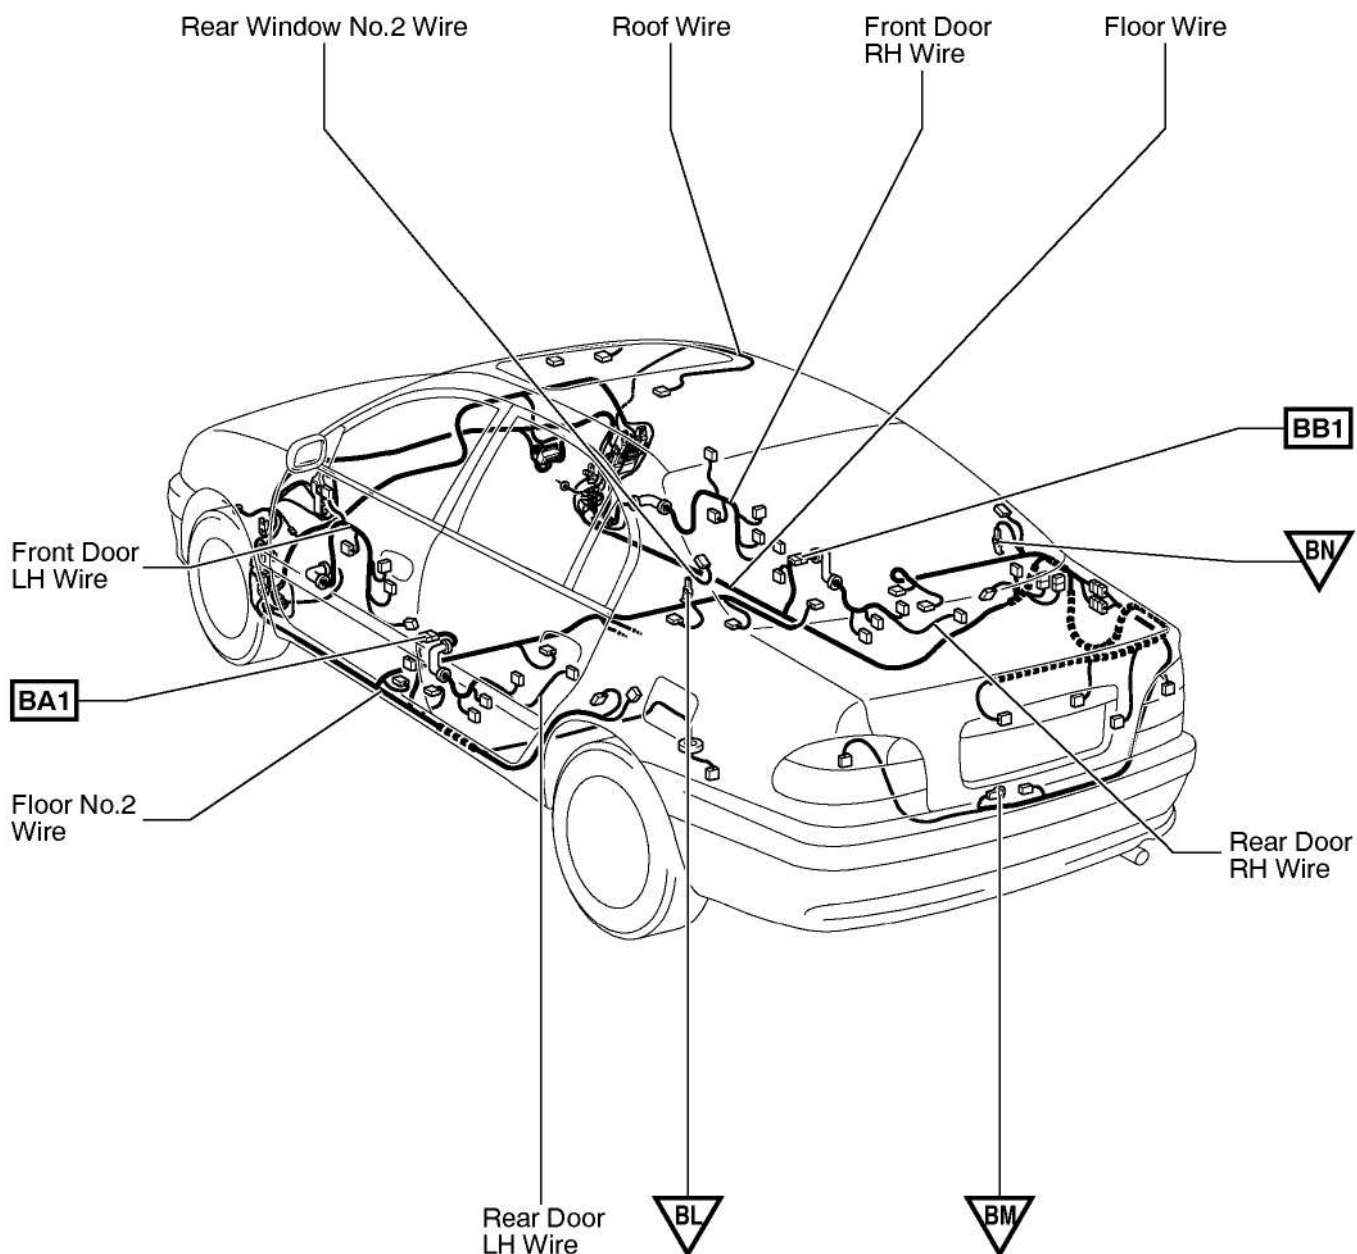

Connector Joining Wire Harness and Wire Harness

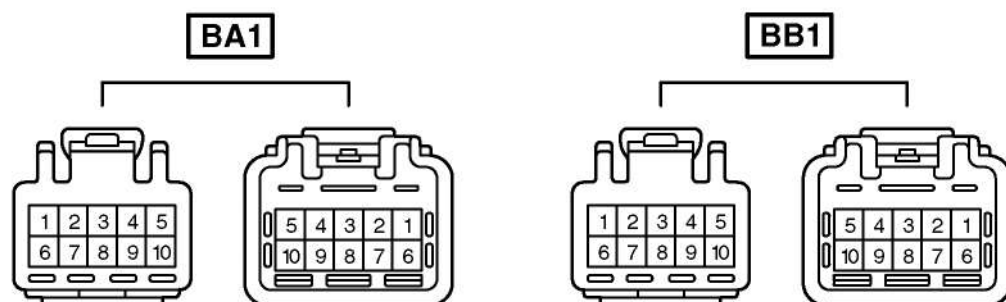


Code	Joining Wire Harness and Wire Harness (Connector Location)
BA1	Rear Door LH Wire and Floor No.2 Wire (Under the Left Center Pillar)
BB1	Rear Door RH Wire and Floor Wire (Under the Right Center Pillar)

E ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[RHD : L/B]

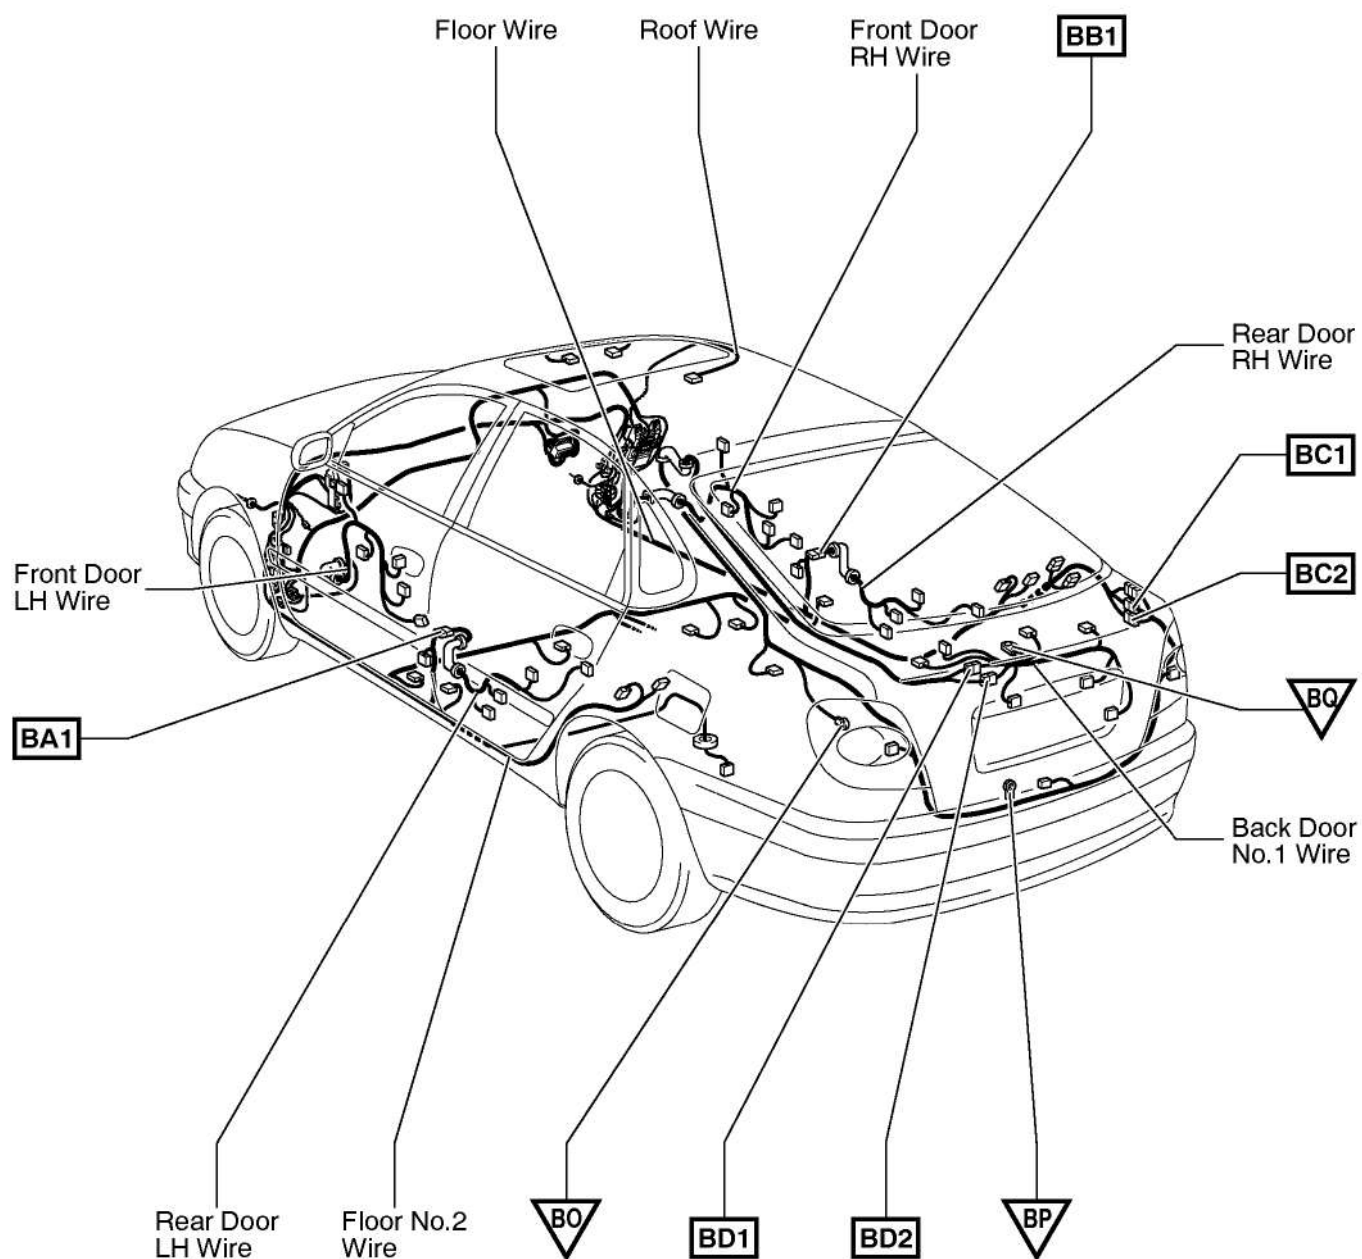

Connector Joining Wire Harness and Wire Harness

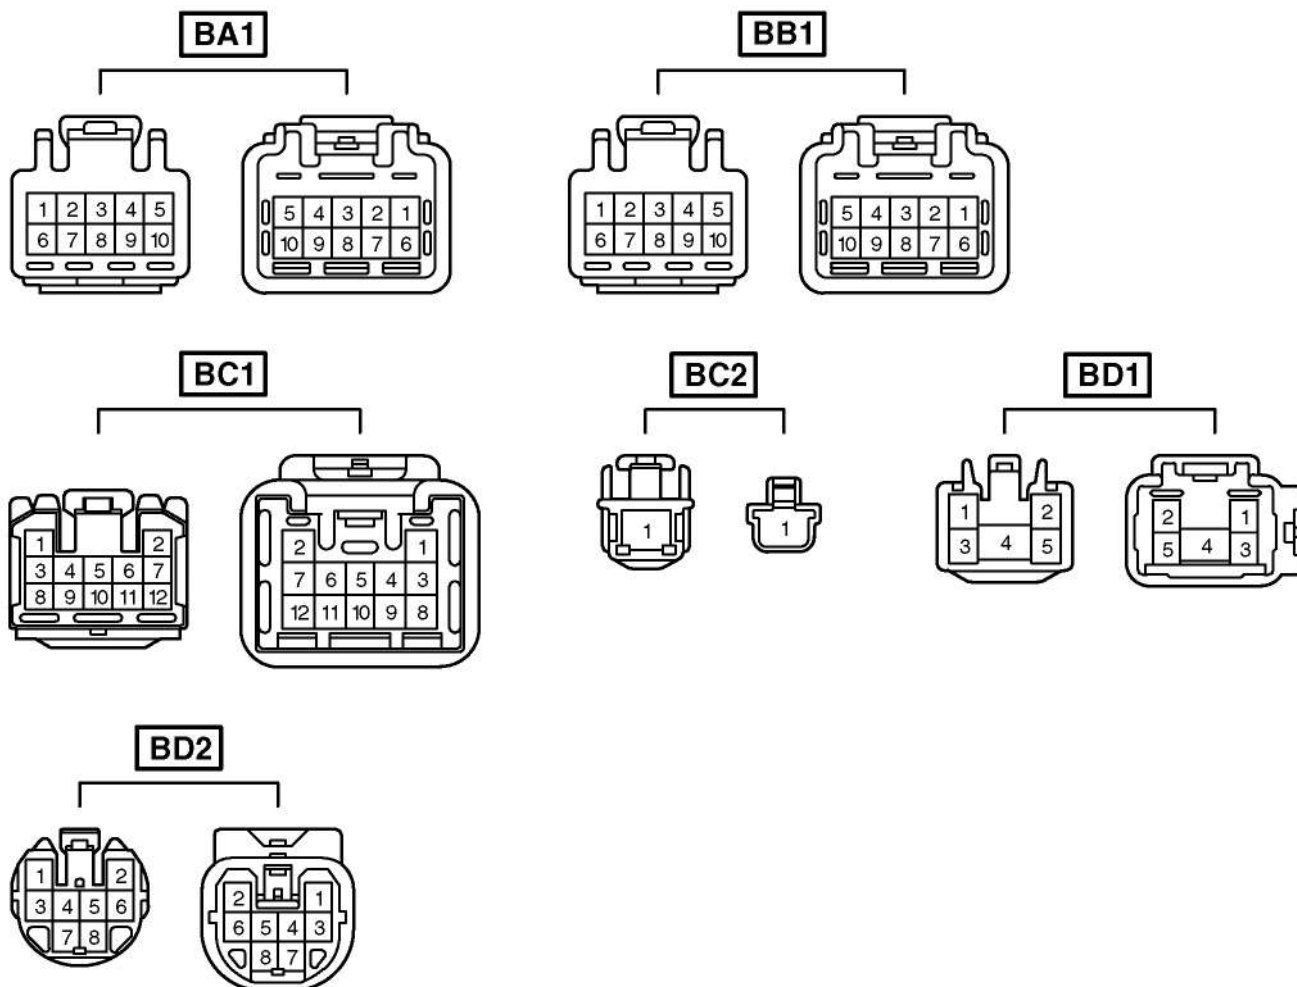


Code	Joining Wire Harness and Wire Harness (Connector Location)
BA1	Rear Door LH Wire and Floor No.2 Wire (Under the Left Center Pillar)
BB1	Rear Door RH Wire and Floor Wire (Under the Right Center Pillar)
BC1	Floor Wire and Floor Wire (Under the Right Quarter Pillar)
BC2	Floor Wire and Floor Wire (Under the Right Quarter Pillar)
BD1	Floor Wire and Back Door No.1 Wire (Back Door Left)
BD2	Floor Wire and Back Door No.1 Wire (Back Door Left)

E ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[RHD : W/G]

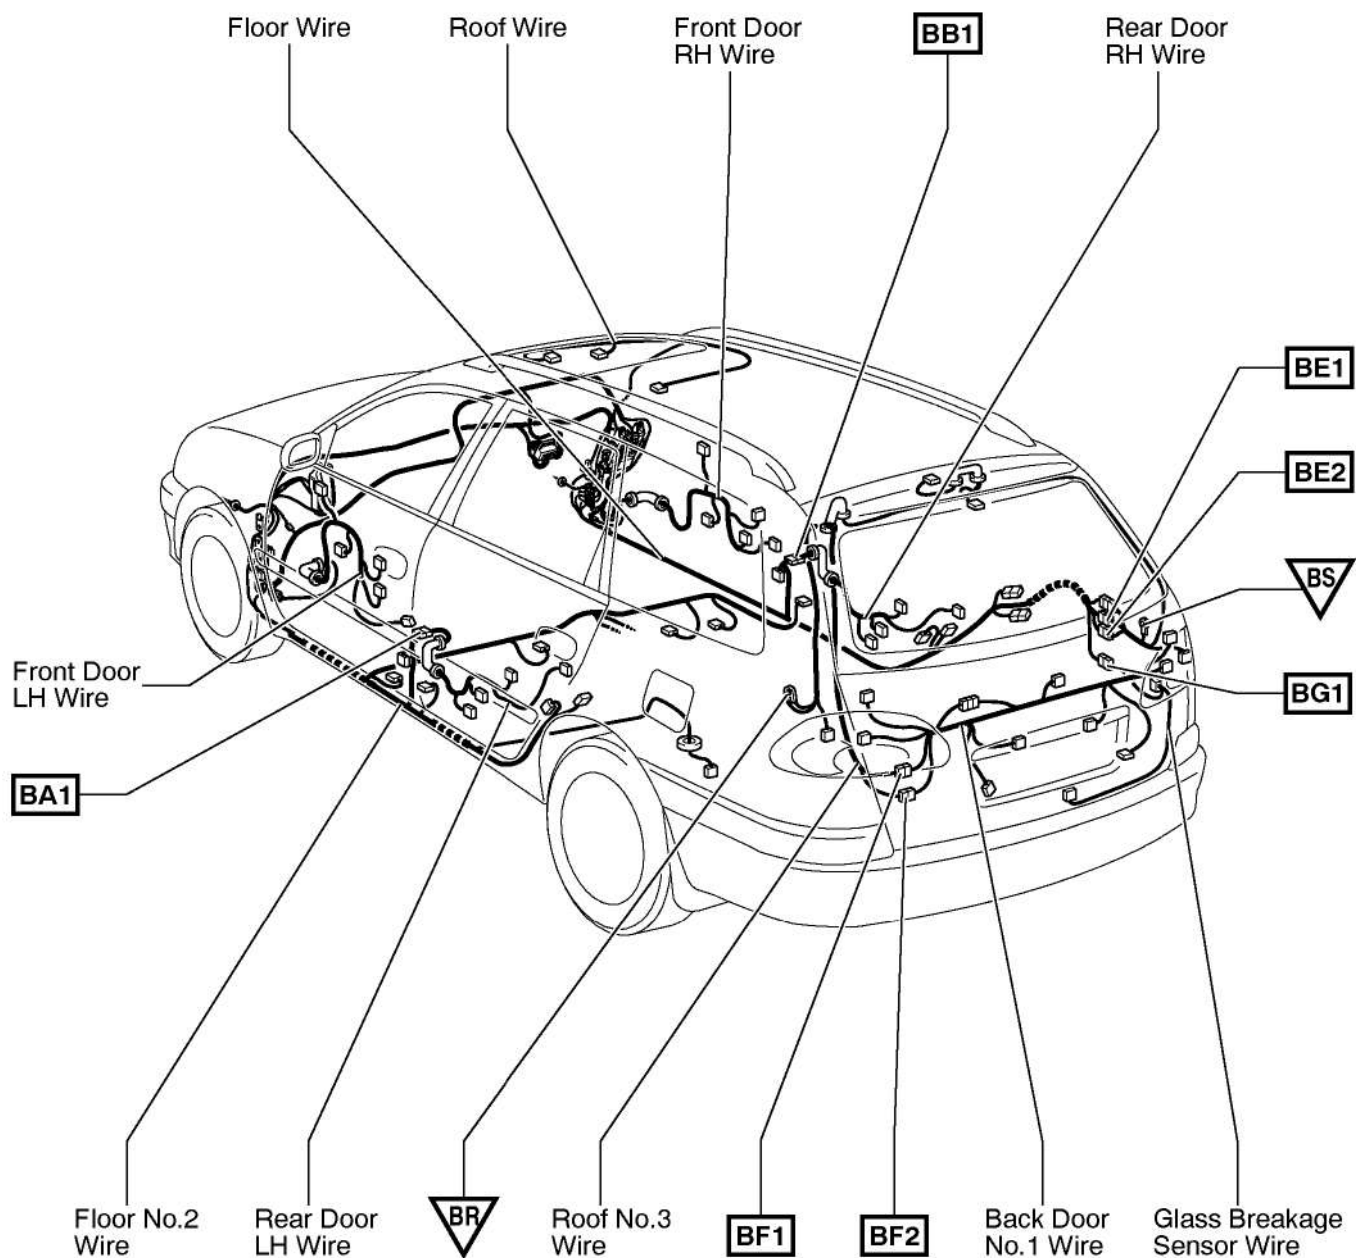

Connector Joining Wire Harness and Wire Harness

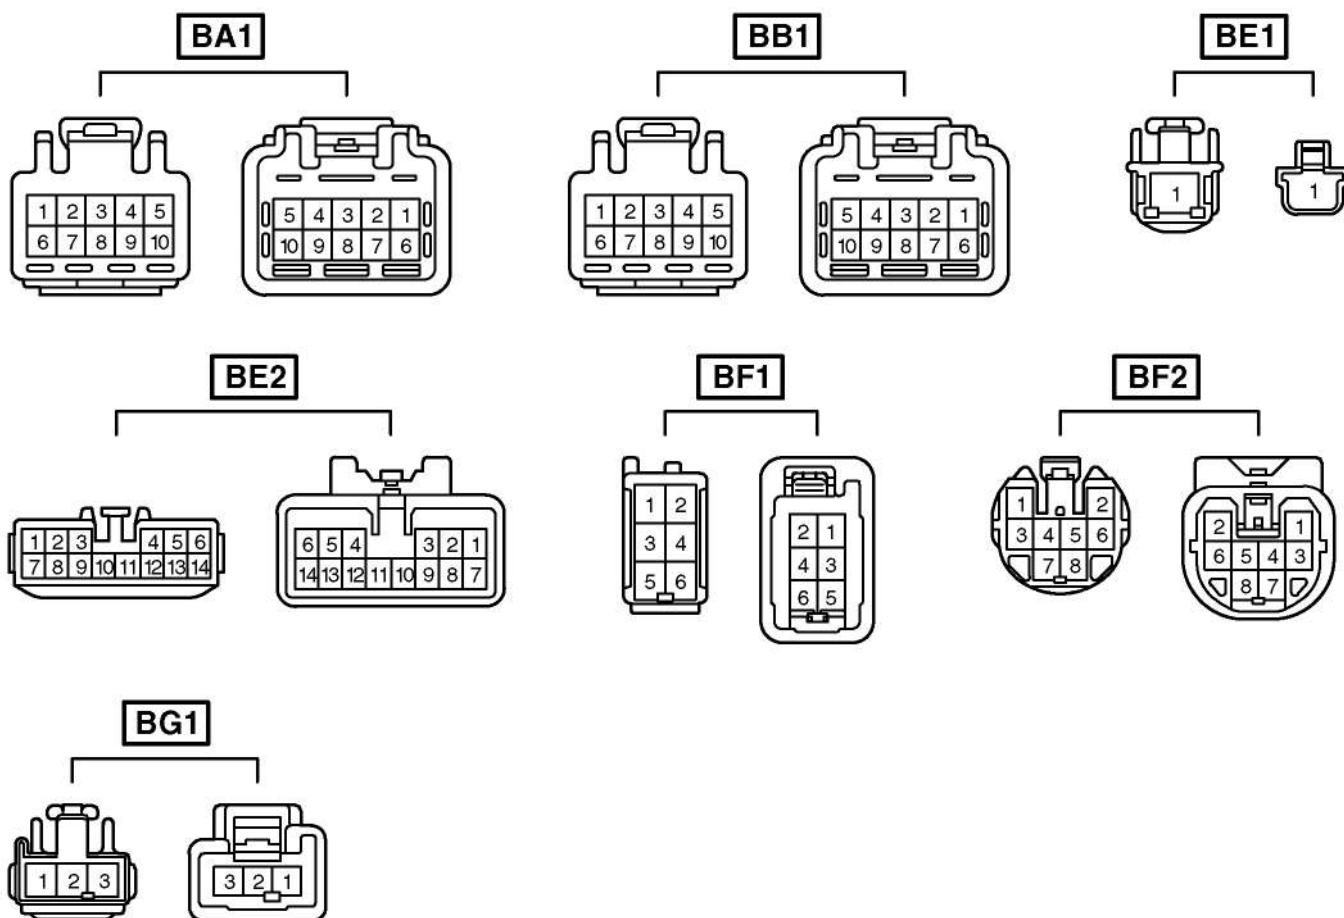

Code	Joining Wire Harness and Wire Harness (Connector Location)
BA1	Rear Door LH Wire and Floor No.2 Wire (Under the Left Center Pillar)
BB1	Rear Door RH Wire and Floor Wire (Under the Right Center Pillar)
BE1	Roof No.3 Wire and Floor Wire (Right Quarter Panel)
BE2	
BF1	Roof No.3 Wire and Back Door No.1 Wire (Back Door Left)
BF2	
BG1	Floor Wire and Glass Breakage Sensor Wire (Rear Quarter Panel RH)