


K OVERALL ELECTRICAL WIRING DIAGRAM

SYSTEMS	LOCATION	SYSTEMS	LOCATION	SYSTEMS	LOCATION
ABS	18-2(LHD) 41-2(RHD)	Engine Immobiliser System (5S-FE)	3-2(LHD) 27-2(RHD)	Power Window	15-2(LHD) 38-2(RHD)
Auto Antenna	16-2(LHD) 39-2(RHD)	Front Fog Light	11-2(LHD) 34-2(RHD)	Radiator Fan and Condenser Fan	23-3(LHD) 46-3(RHD)
Automatic Air Conditioner	23-2(LHD) 47-2(RHD)	Front Wiper and Washer	10-2(LHD) 33-2(RHD)	Radio and Player	16-3(LHD) 39-3(RHD)
Back-Up Light	9-4(LHD) 32-4(RHD)	Headlight	4-2(lw/Daytime Running Light LHD) 5-2(lw/o Daytime Running Light LHD) 28-2(RHD)	Rear Fog Light	11-3(LHD) 34-3(RHD)
Charging	1-4(LHD) 25-4(RHD)	Headlight Beam Level Control	5-3(LHD) 28-3(RHD)	Rear Window Defogger	46-2(RHD)
Cigarette Lighter and Clock	13-4(LHD) 36-4(RHD)	Headlight Cleaner	22-2(LHD) 44-2(RHD)	Rear Window Defogger and Mirror Heat	23-2(LHD)
Combination Meter	22-3(LHD) 44-3(RHD)	Horn	12-4(LHD) 35-4(RHD)	Remote Control Mirror	10-3(LHD) 33-3(RHD)
Cruise Control	19-2(LHD) 45-2(RHD)	Illumination	7-2(LHD) 30-2(RHD)	Seat Heater	17-4(LHD)
Door Lock Control	14-2(LHD) 37-2(RHD)	Interior Light	8-3(LHD) 31-3(RHD)	SRS	13-2(LHD) 36-2(RHD)
ECT and A/T Indicator (1MZ-FE)	20-2(LHD) 42-2(RHD)	Light Reminder Buzzer	8-2(LHD) 31-2(RHD)	Starting and Ignition	1-2(LHD) 25-2(RHD)
ECT and A/T Indicator (5S-FE)	21-2(LHD) 43-2(RHD)	Moon Roof	12-2(LHD) 35-2(RHD)	Stop Light	6-3(LHD) 29-3(RHD)
Engine Control (1MZ-FE)	2-4(LHD) 26-4(RHD)	Power Outlet	13-3(LHD) 36-3(RHD)	Taillight	6-2(LHD) 29-2(RHD)
Engine Control (5S-FE)	3-4(LHD) 27-4(RHD)	Power Seat	17-2(LHD) 40-2(RHD)	Turn Signal and Hazard Warning Light	9-2(LHD) 32-2(RHD)
Engine Immobiliser System (1MZ-FE)	2-2(LHD) 26-2(RHD)	Power source	1~24-1(LHD) 25~47-1(RHD)	Unlock Warning	12-3(LHD) 35-3(RHD)

2 CAMRY (LHD)


(Cont. next page)

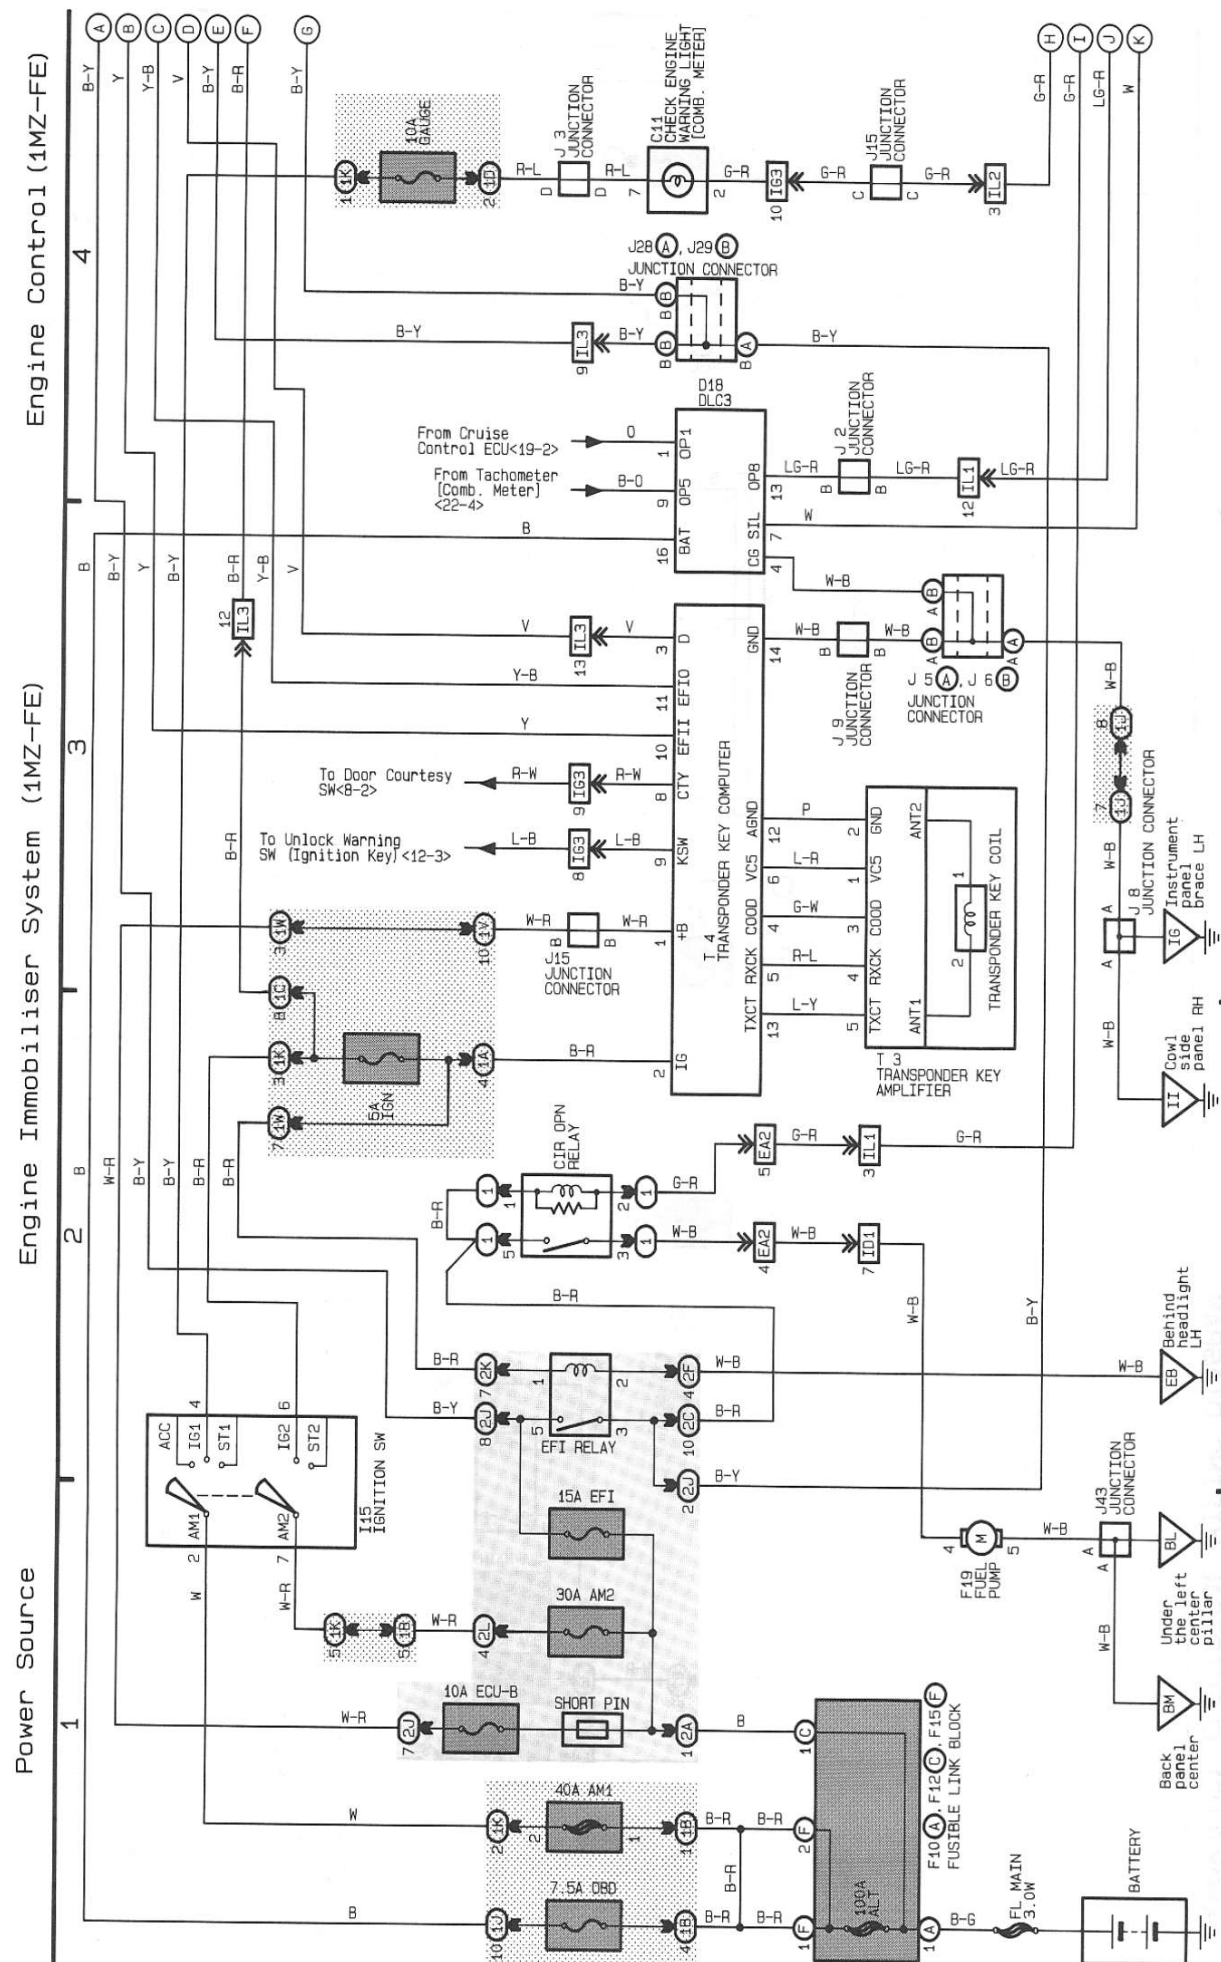

2 CAMRY (Cont'd) (LHD)

Engine Control (1MZ-FE)

* 1: Leaded Gasoline
 ** 2: Unleaded Gasoline

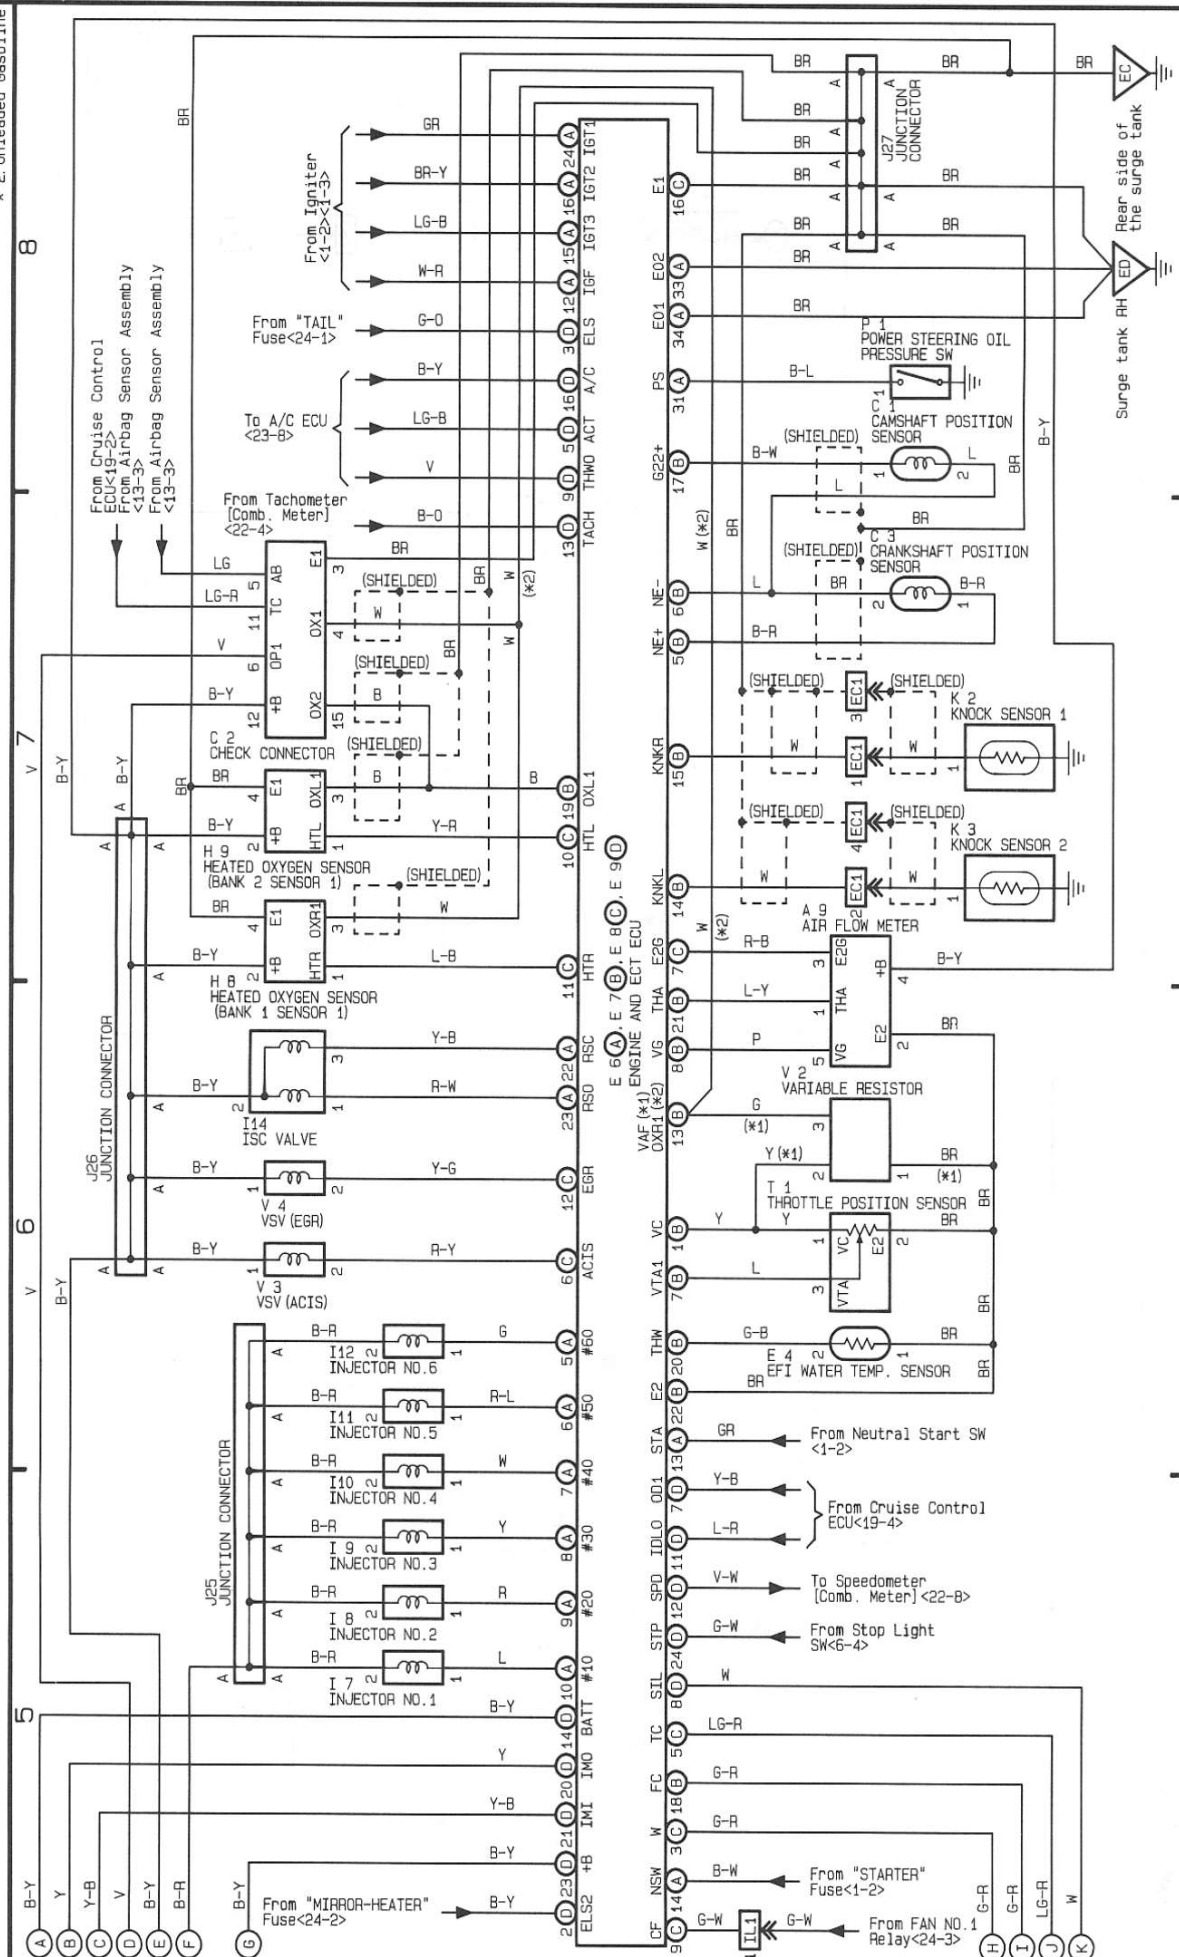


3 CAMRY (LHD)

Power Source

Engine Immobiliser System (5S-FE)


Engine Control (5S-FE)

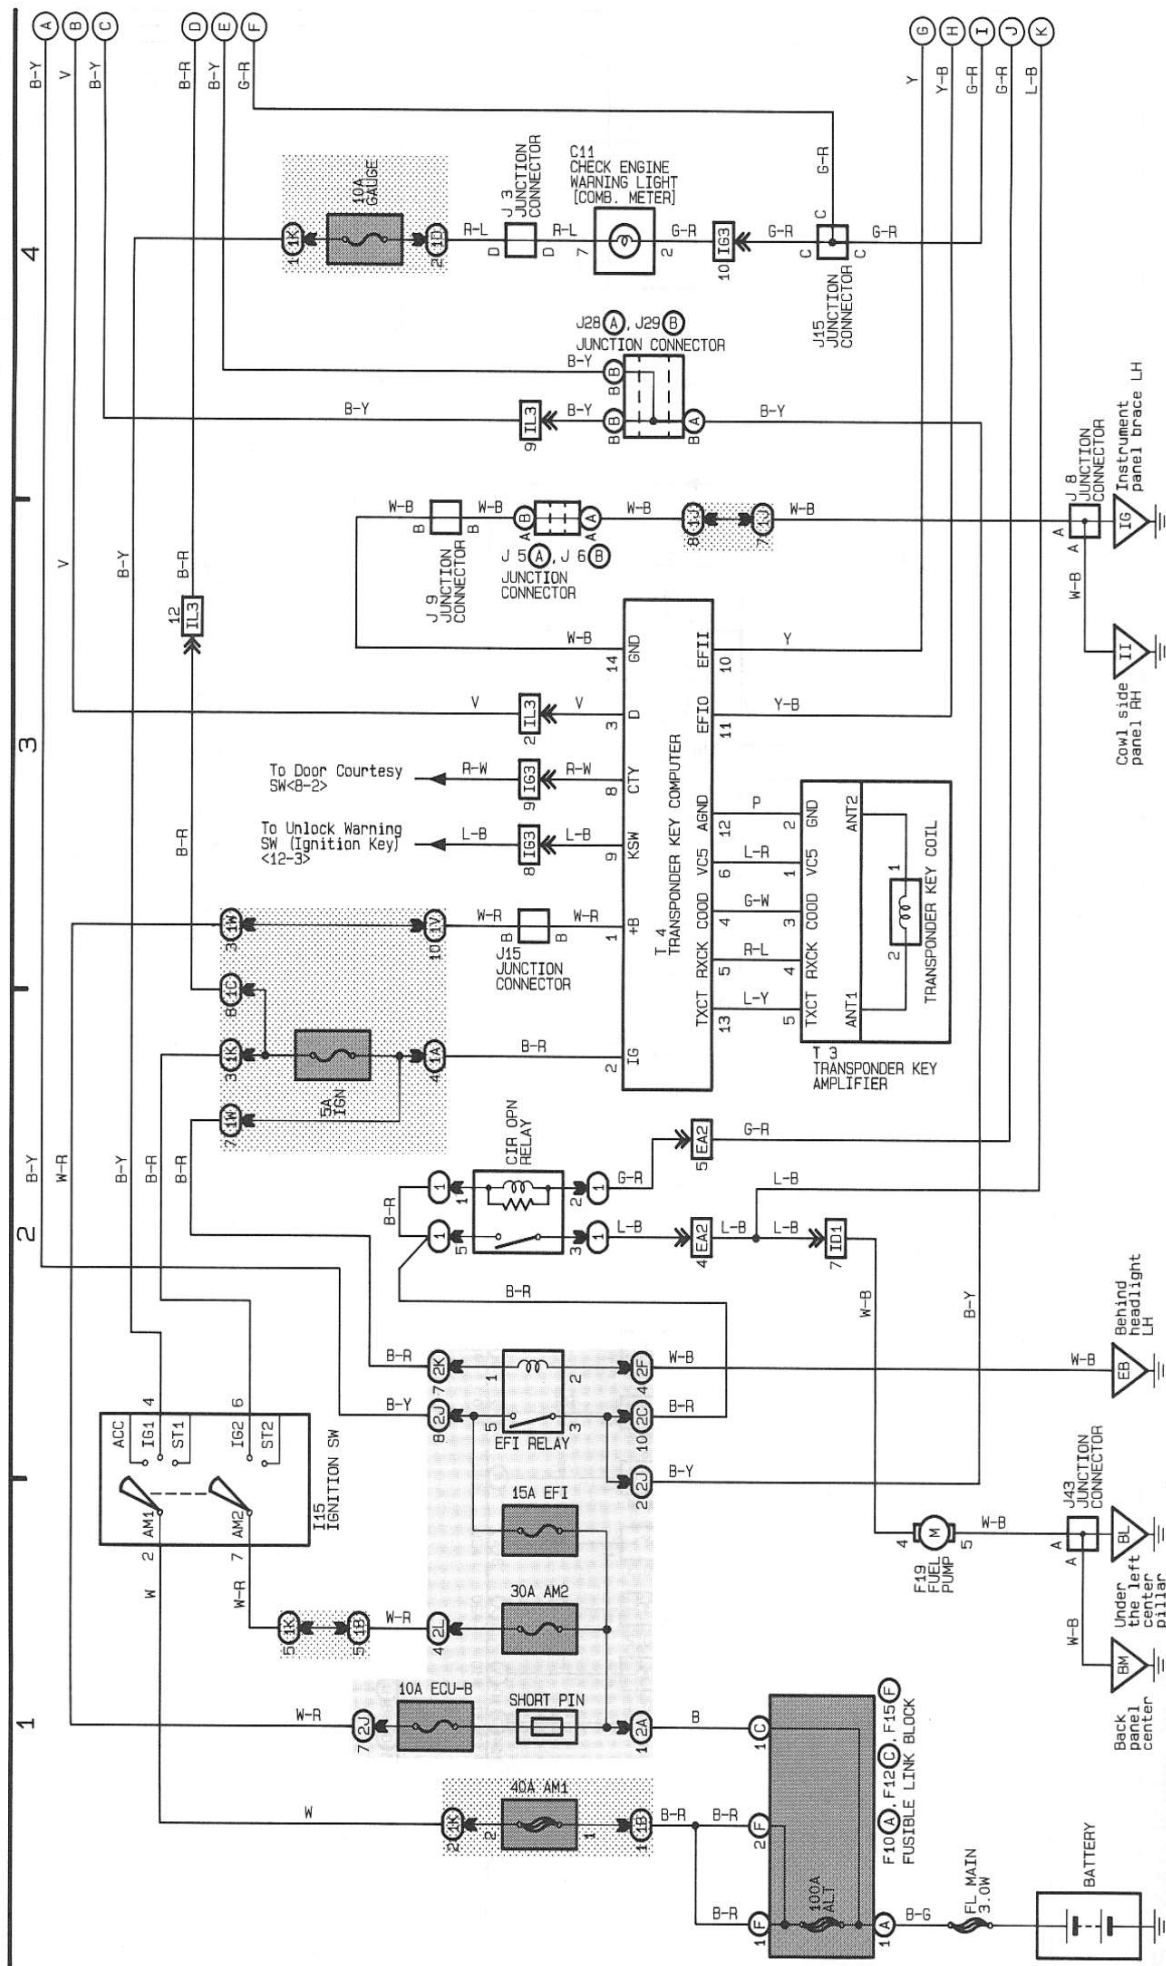

3 CAMRY (Cont'd) (LHD)


Engine Control (5S-FE)

* 1: Leaded Gasoline

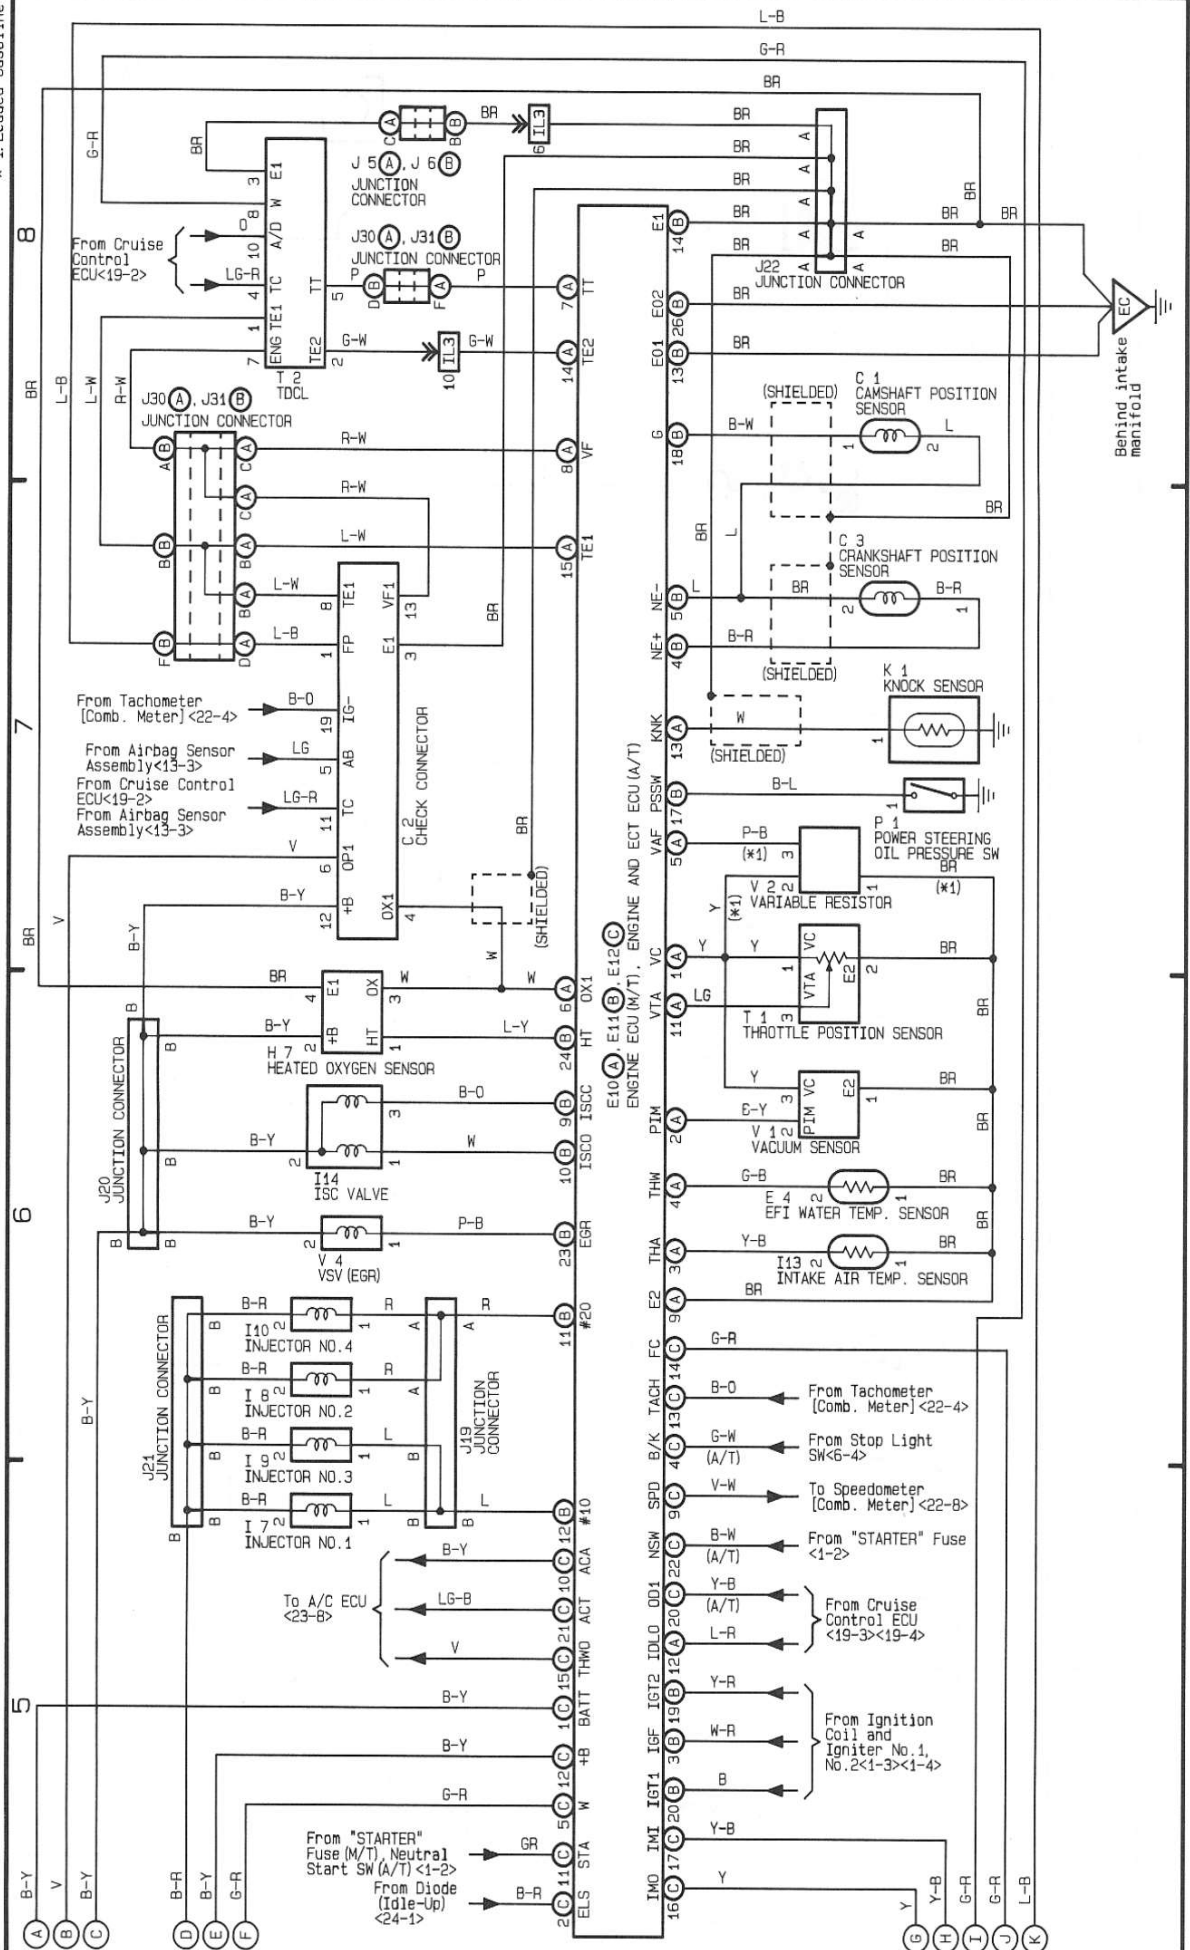


K OVERALL ELECTRICAL WIRING DIAGRAM


4 CAMRY (LHD)

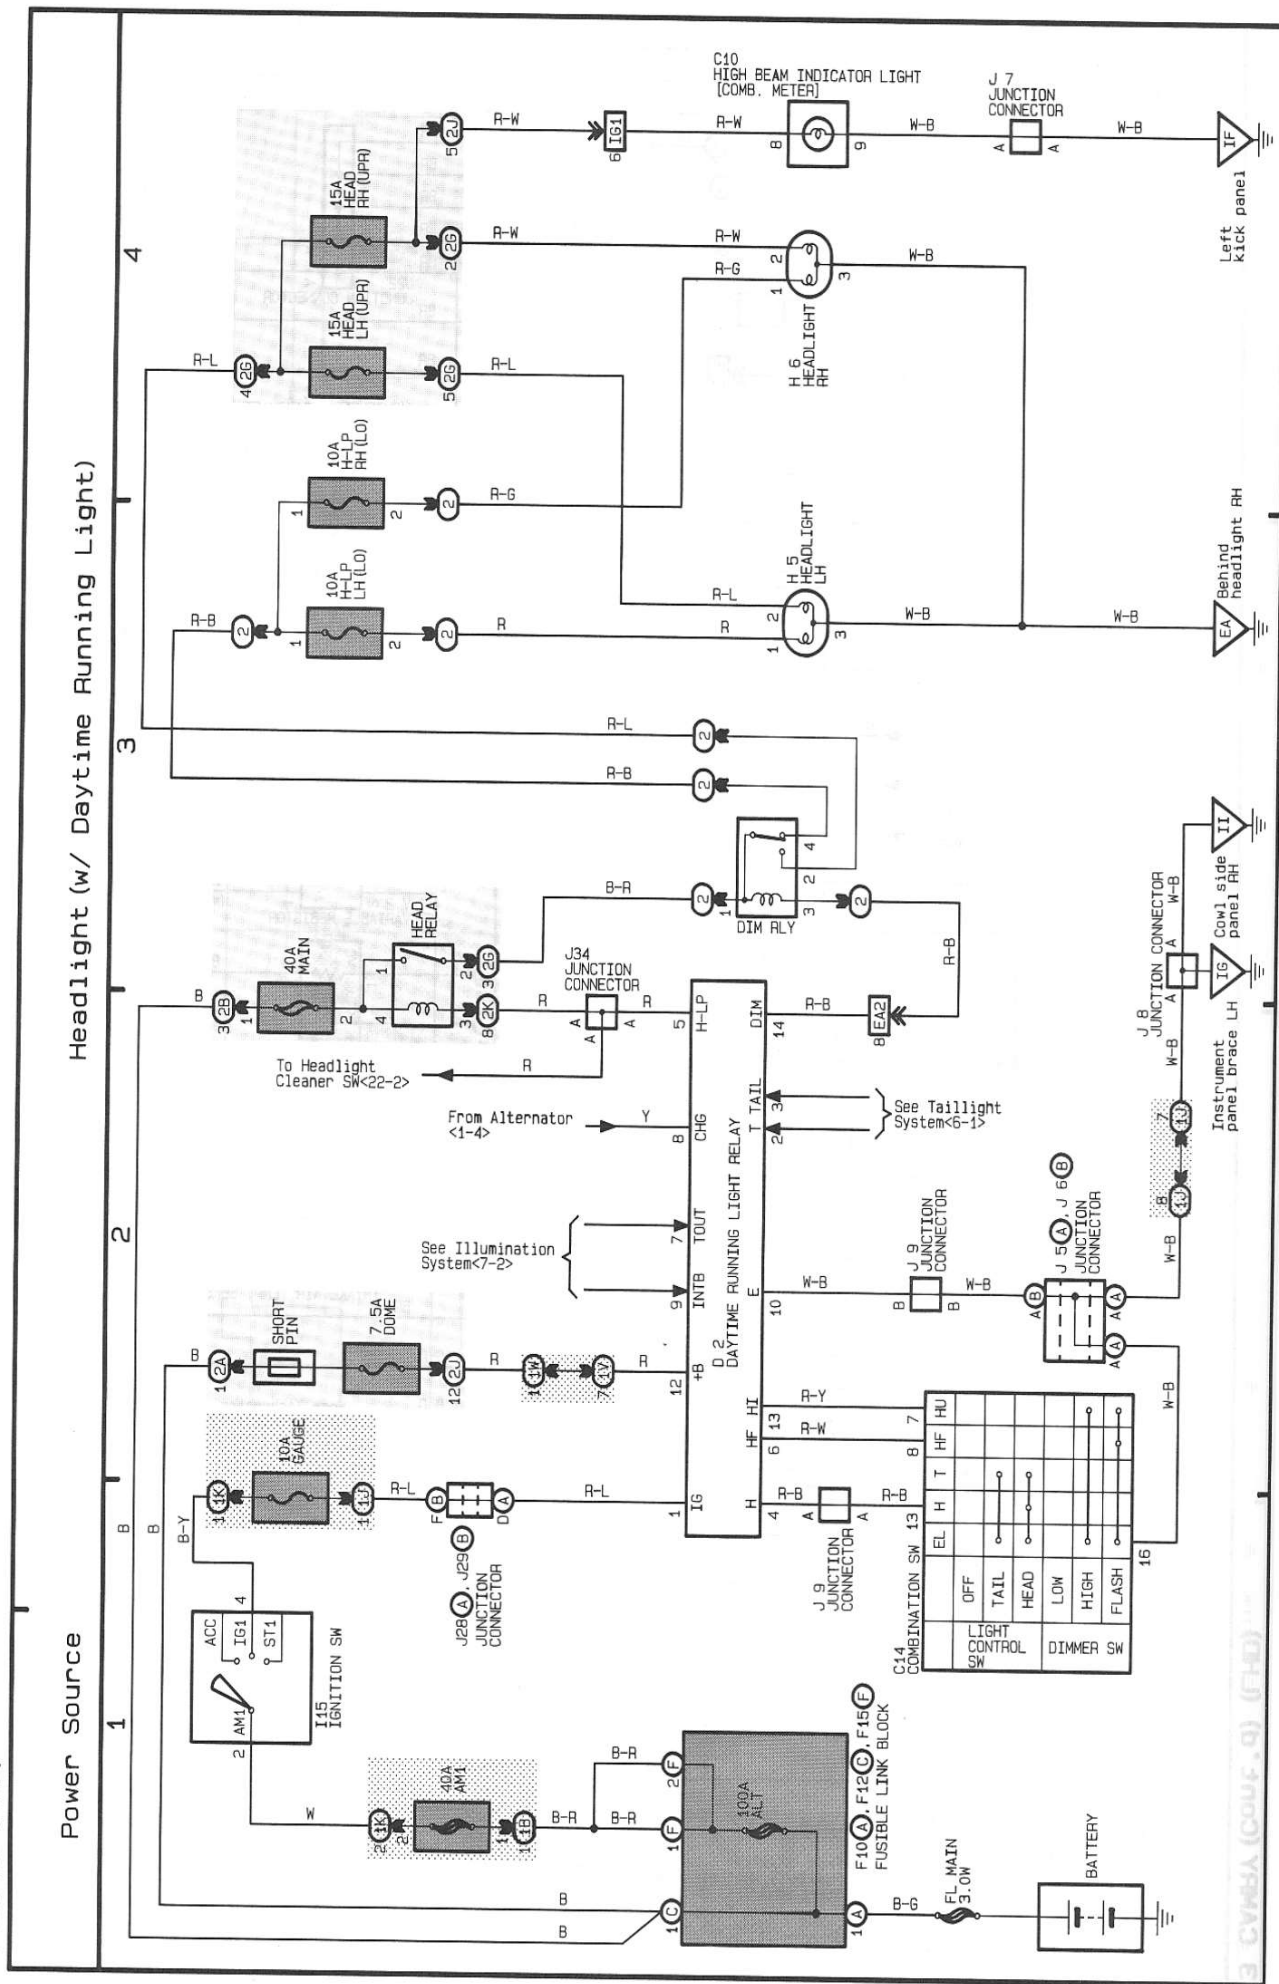

5 CAMRY (LHD)

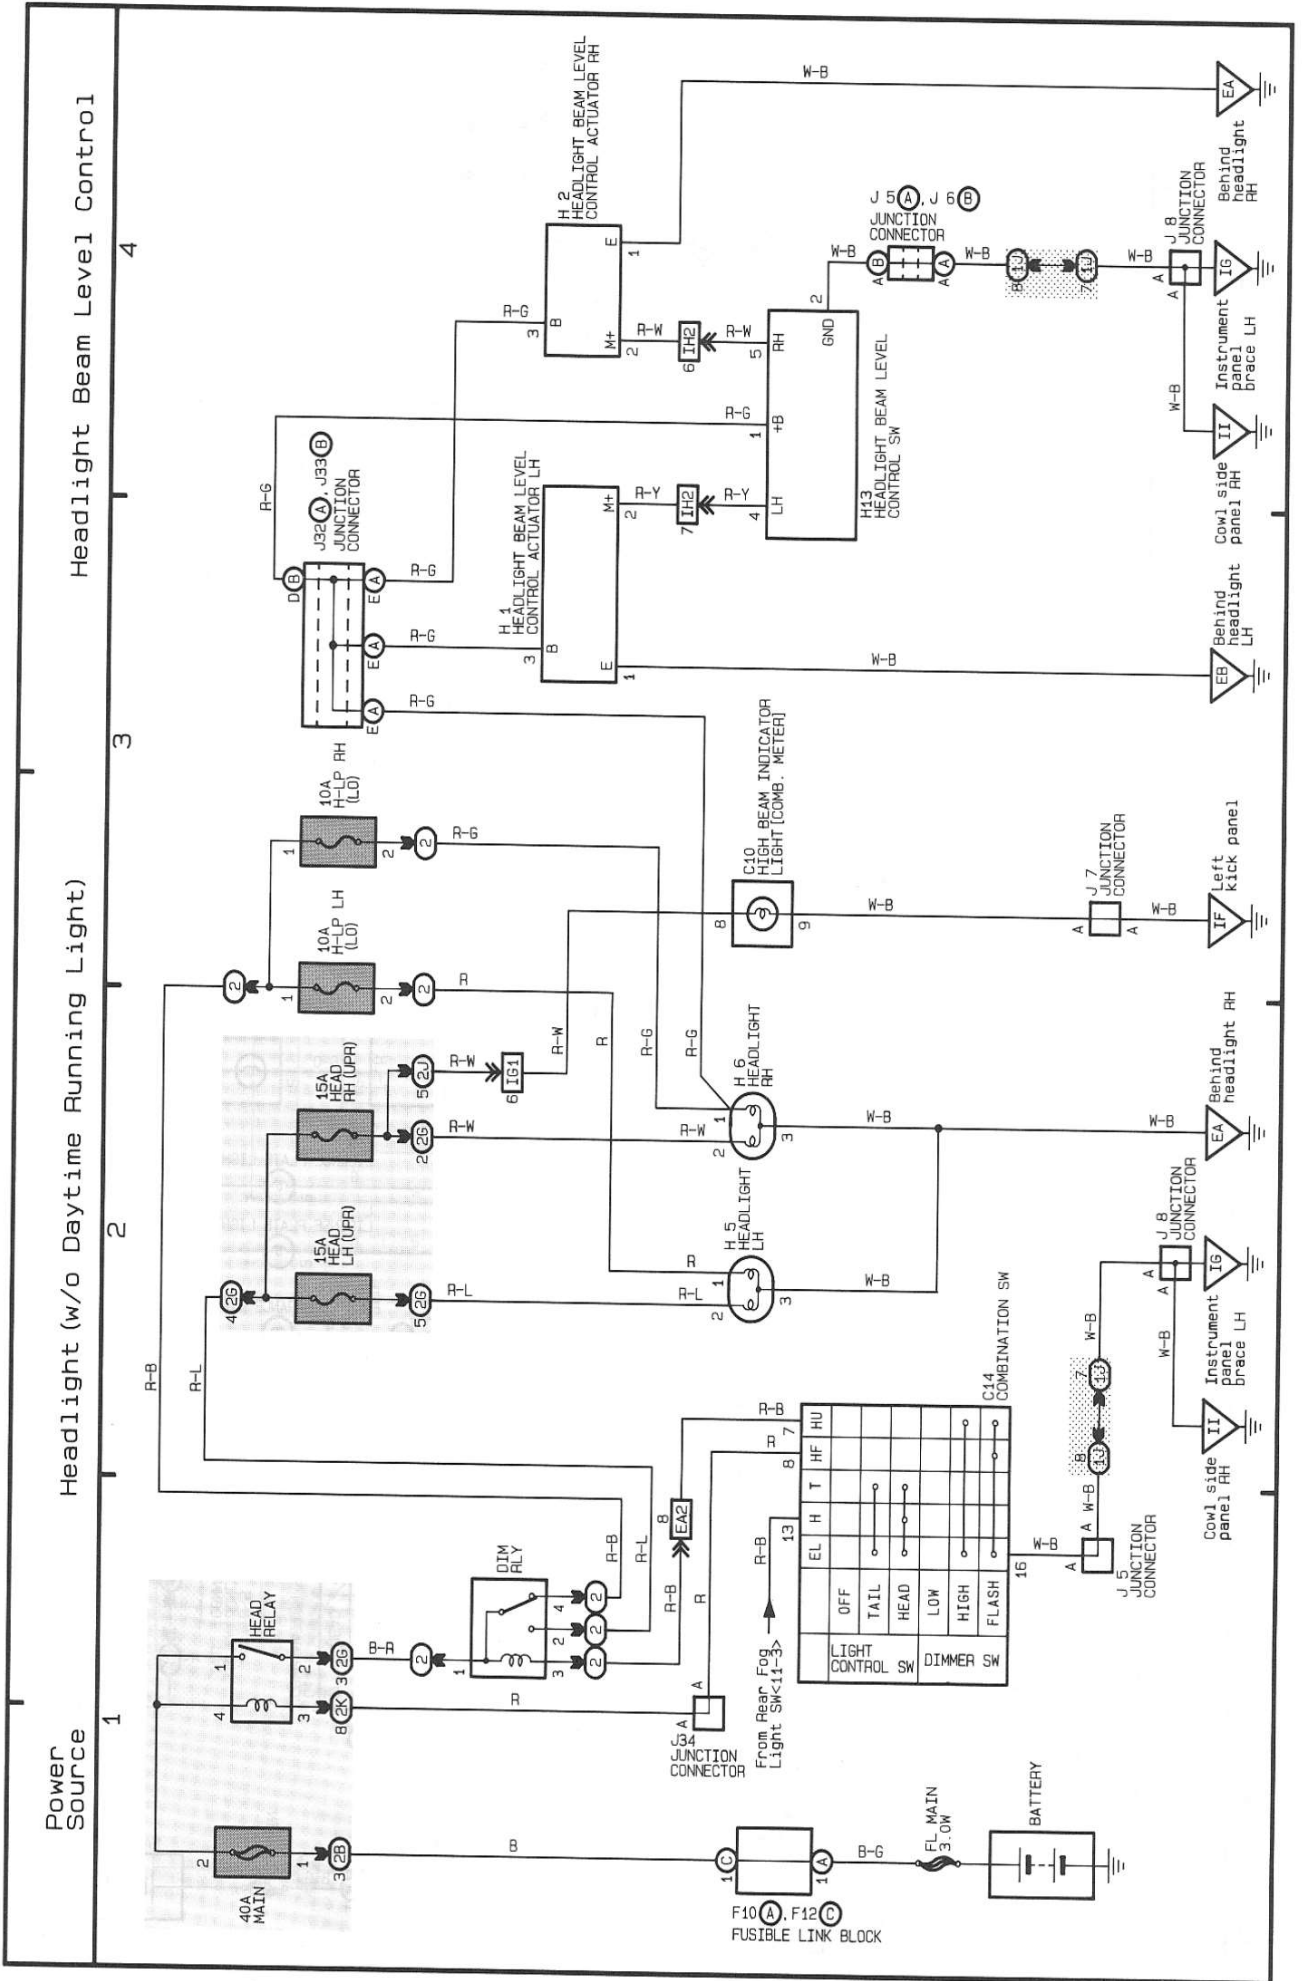

6 CAMRY (LHD)

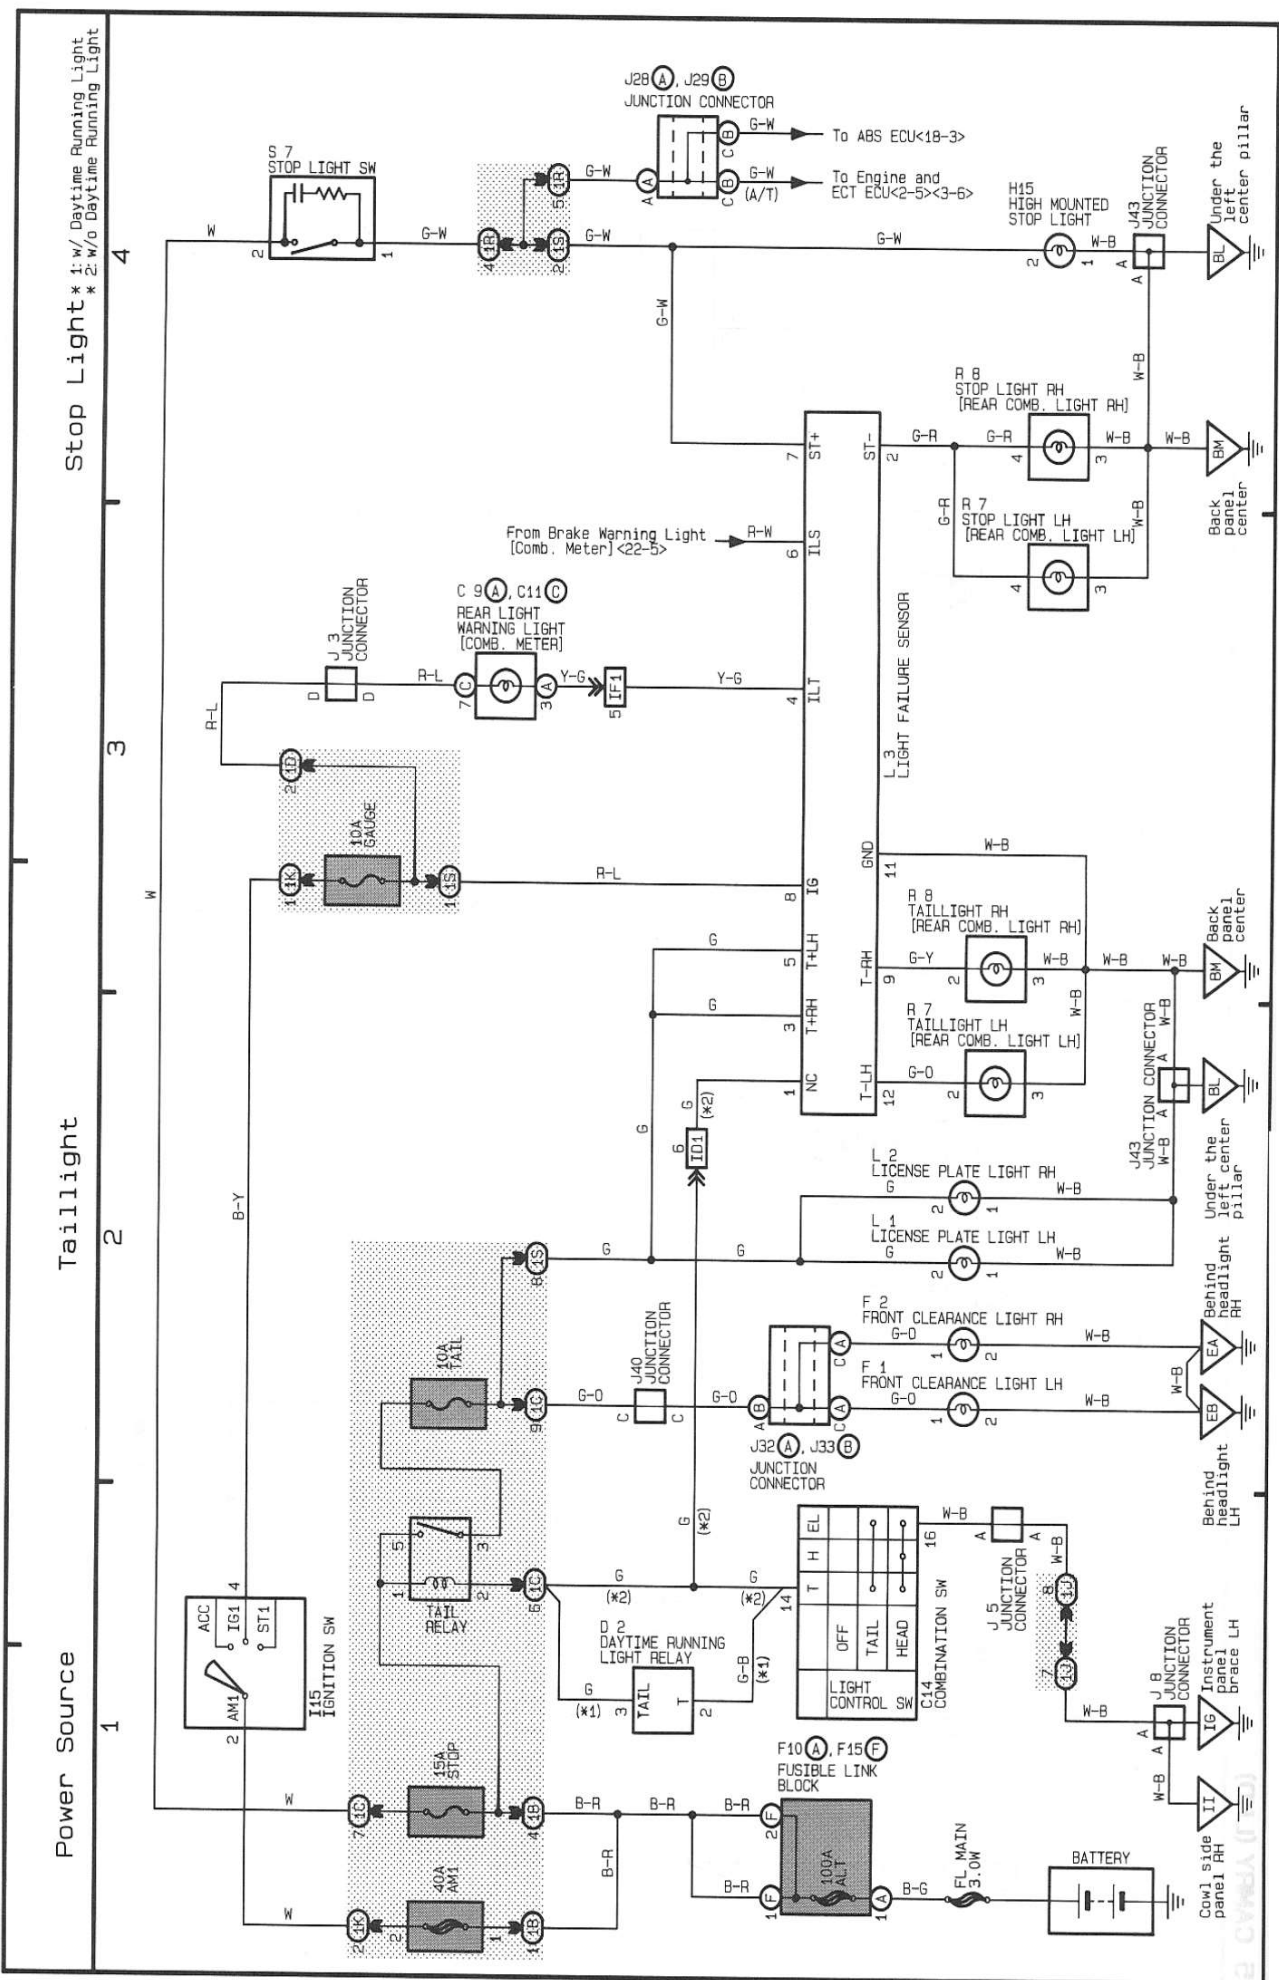


7 CAMRY (LHD)

Power Source


Illumination

* 1: w/ Daytime Running Light
 * 2: w/o Daytime Running Light

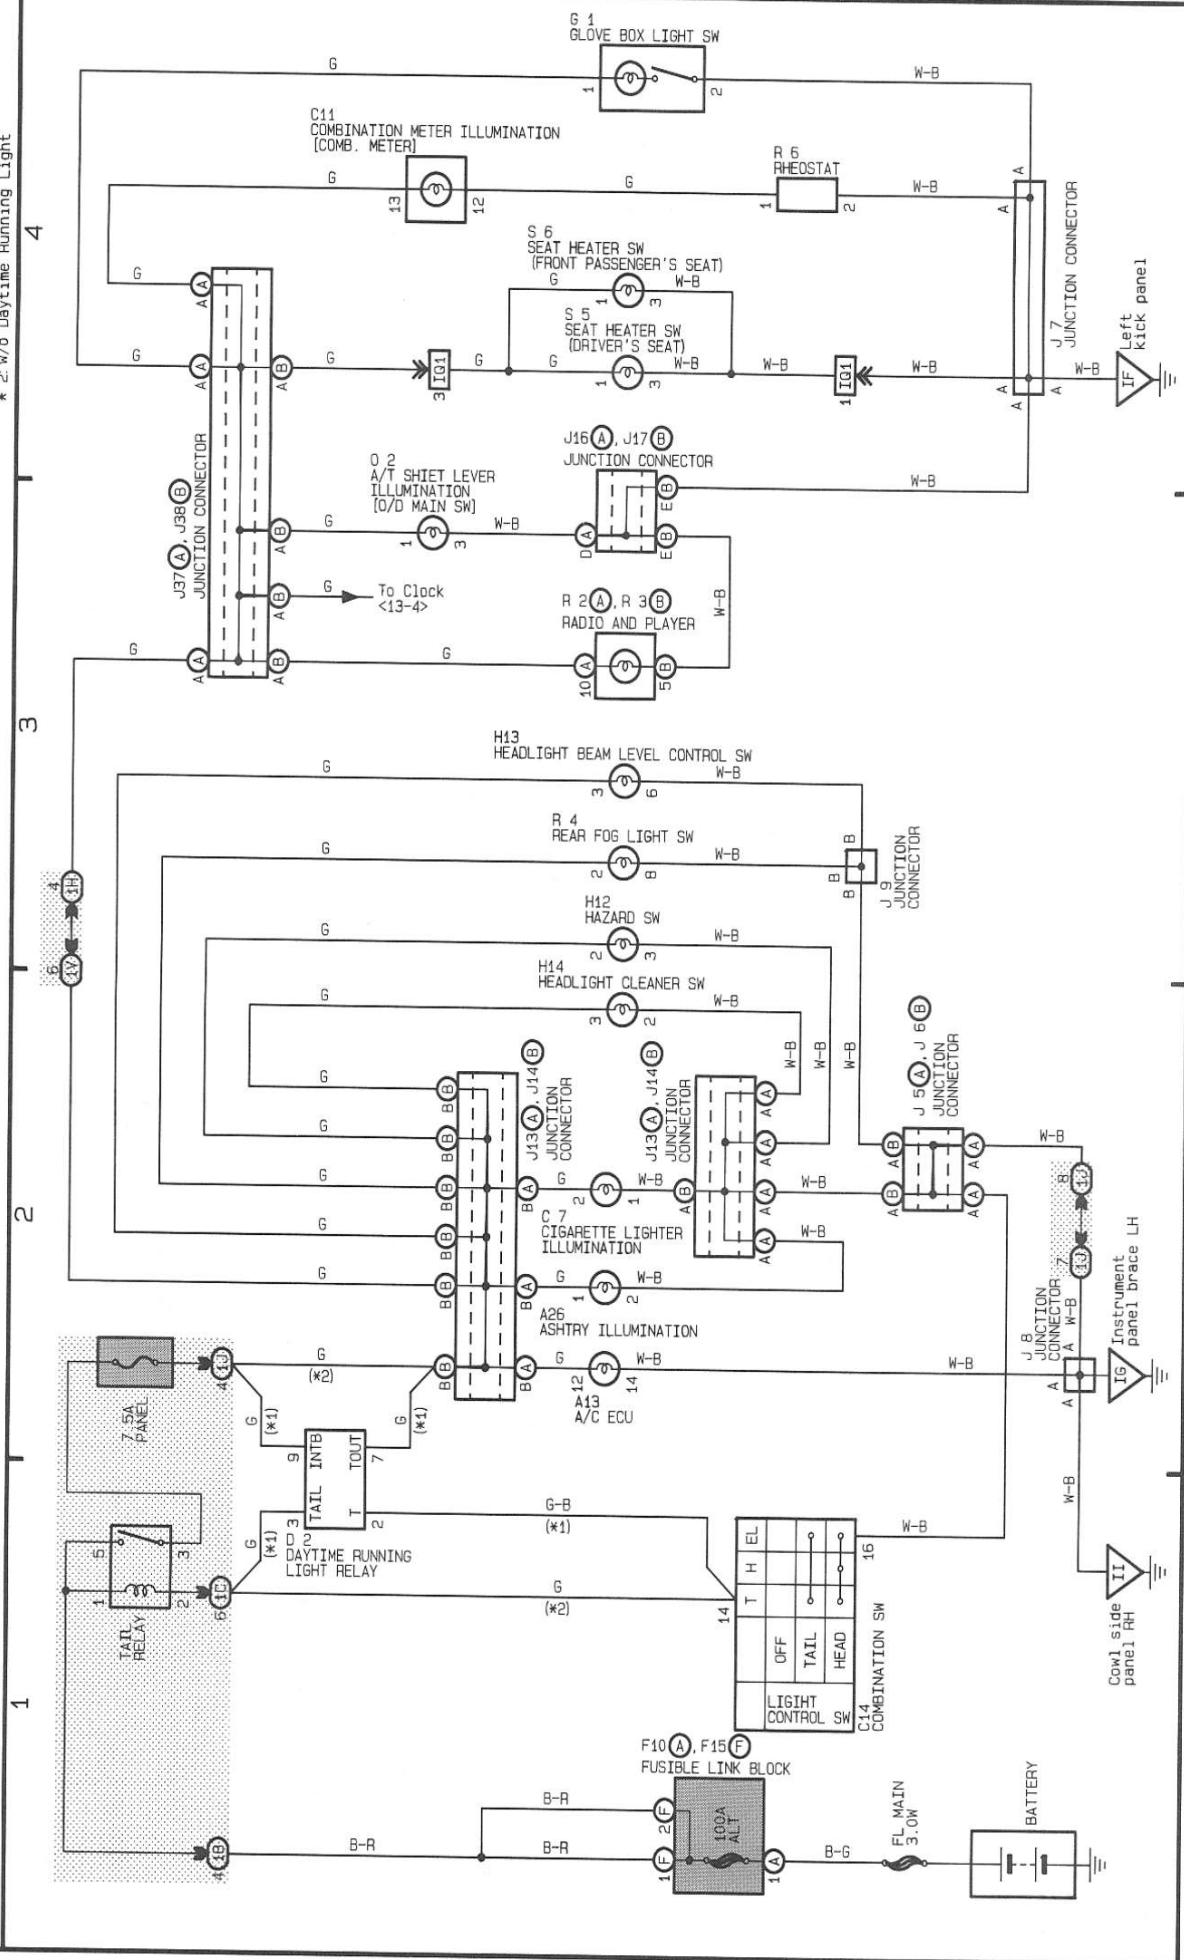

K OVERALL ELECTRICAL WIRING DIAGRAM


8 CAMRY (LHD)

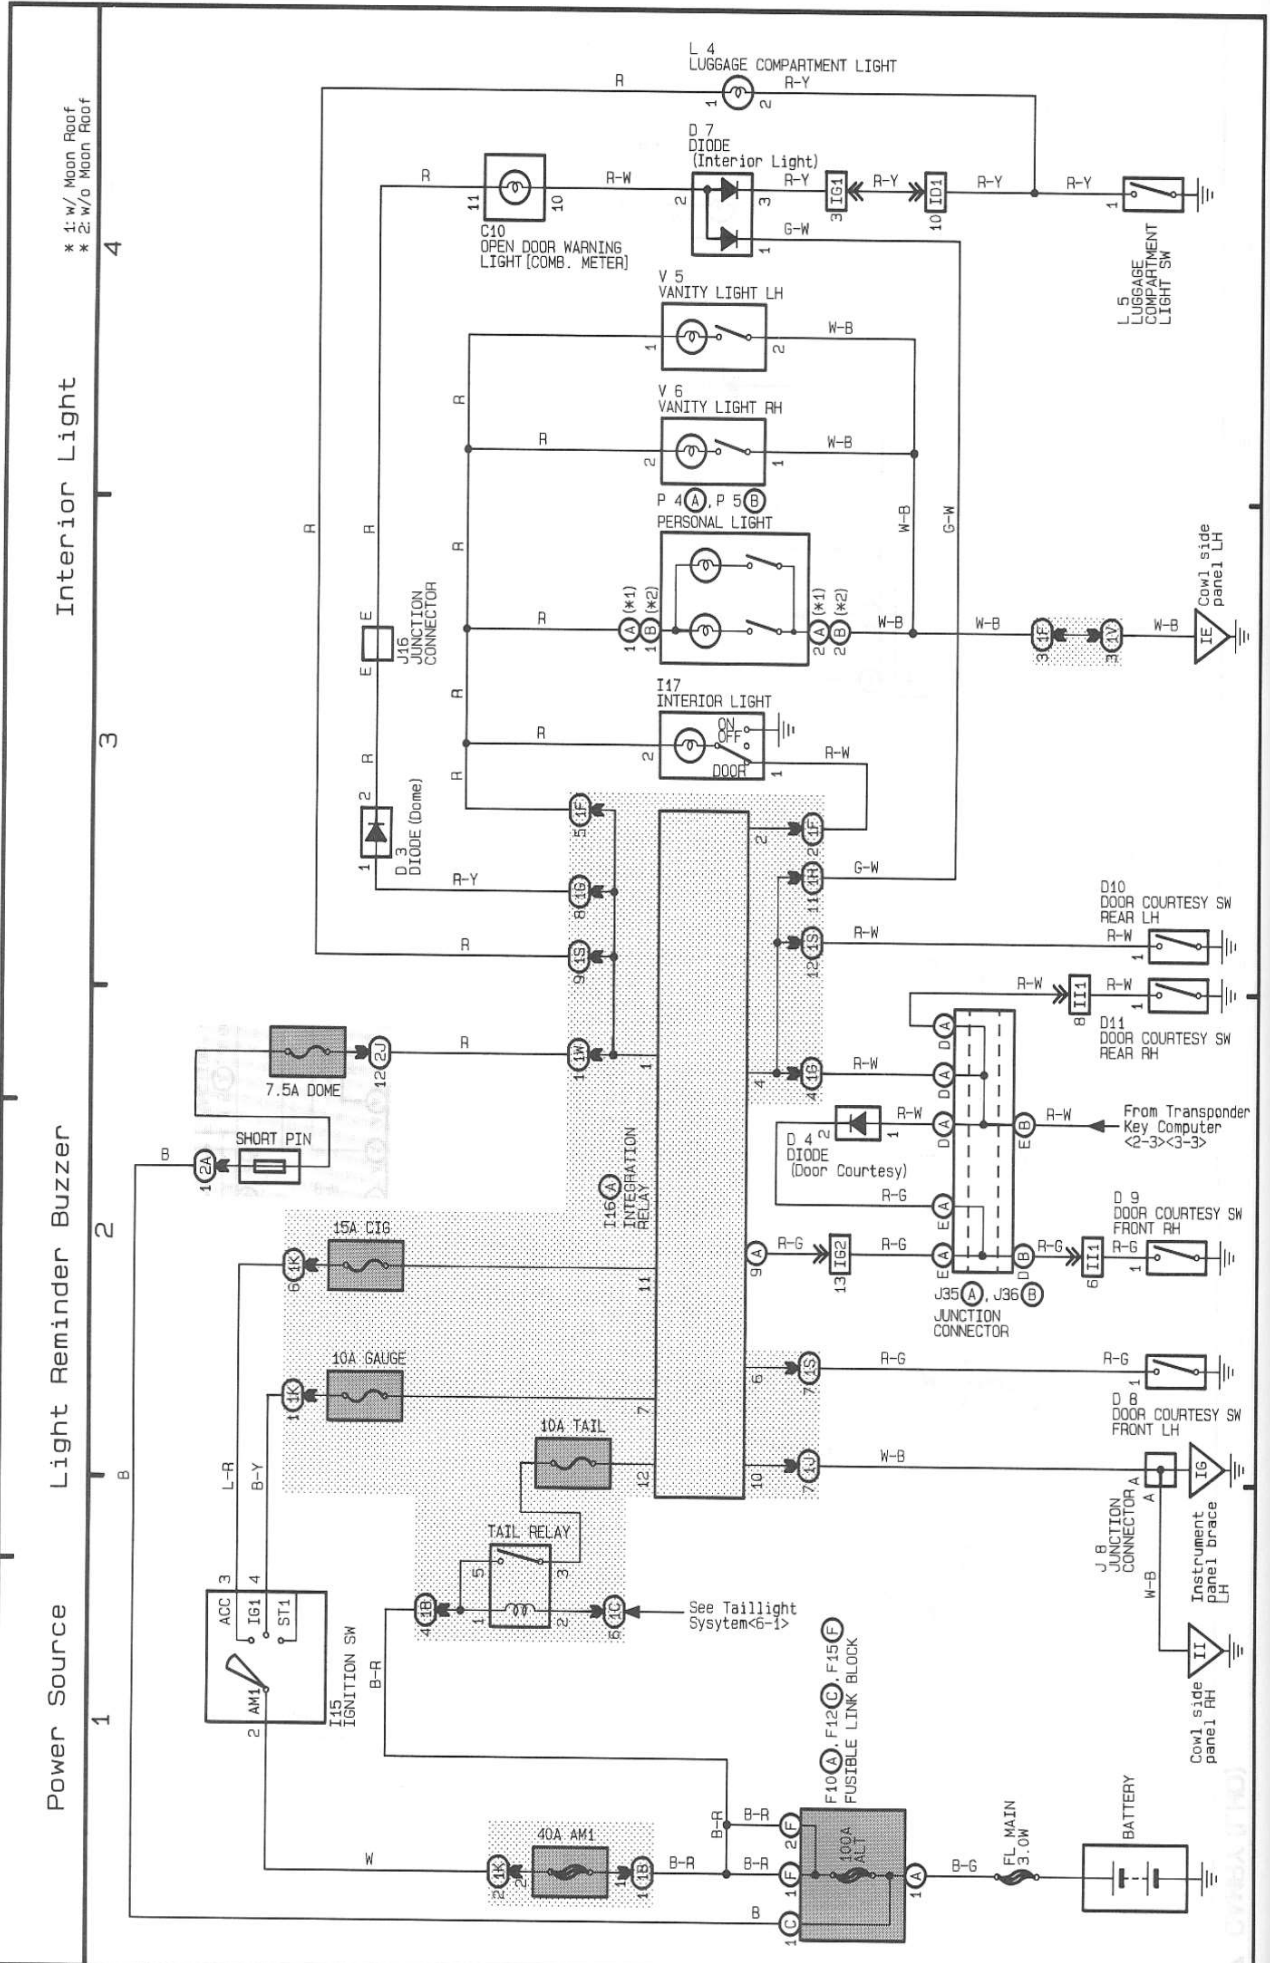

Back-Up Light


Turn Signal and Hazard Warning Light

Power Source

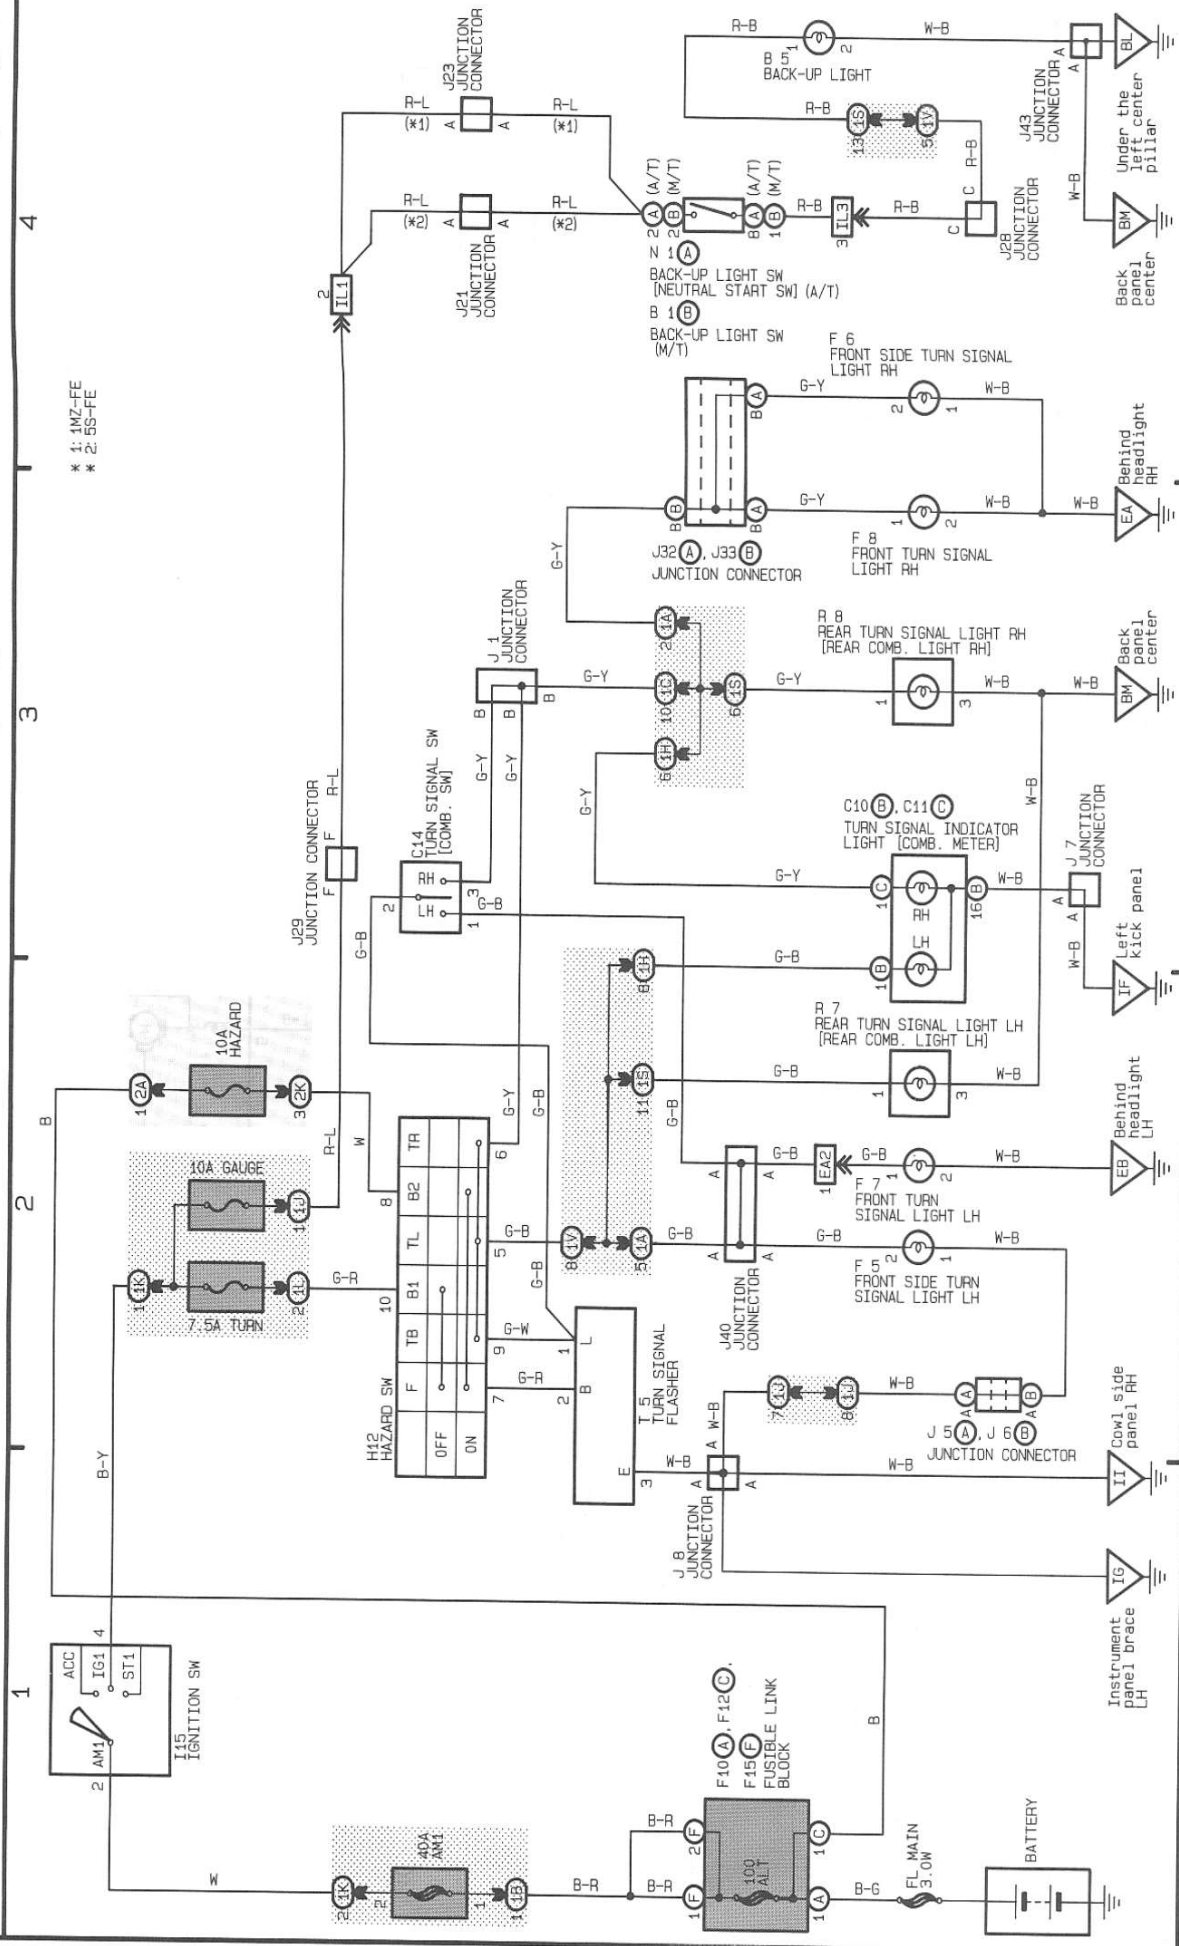

K OVERALL ELECTRICAL WIRING DIAGRAM

10 CAMRY (LHD)

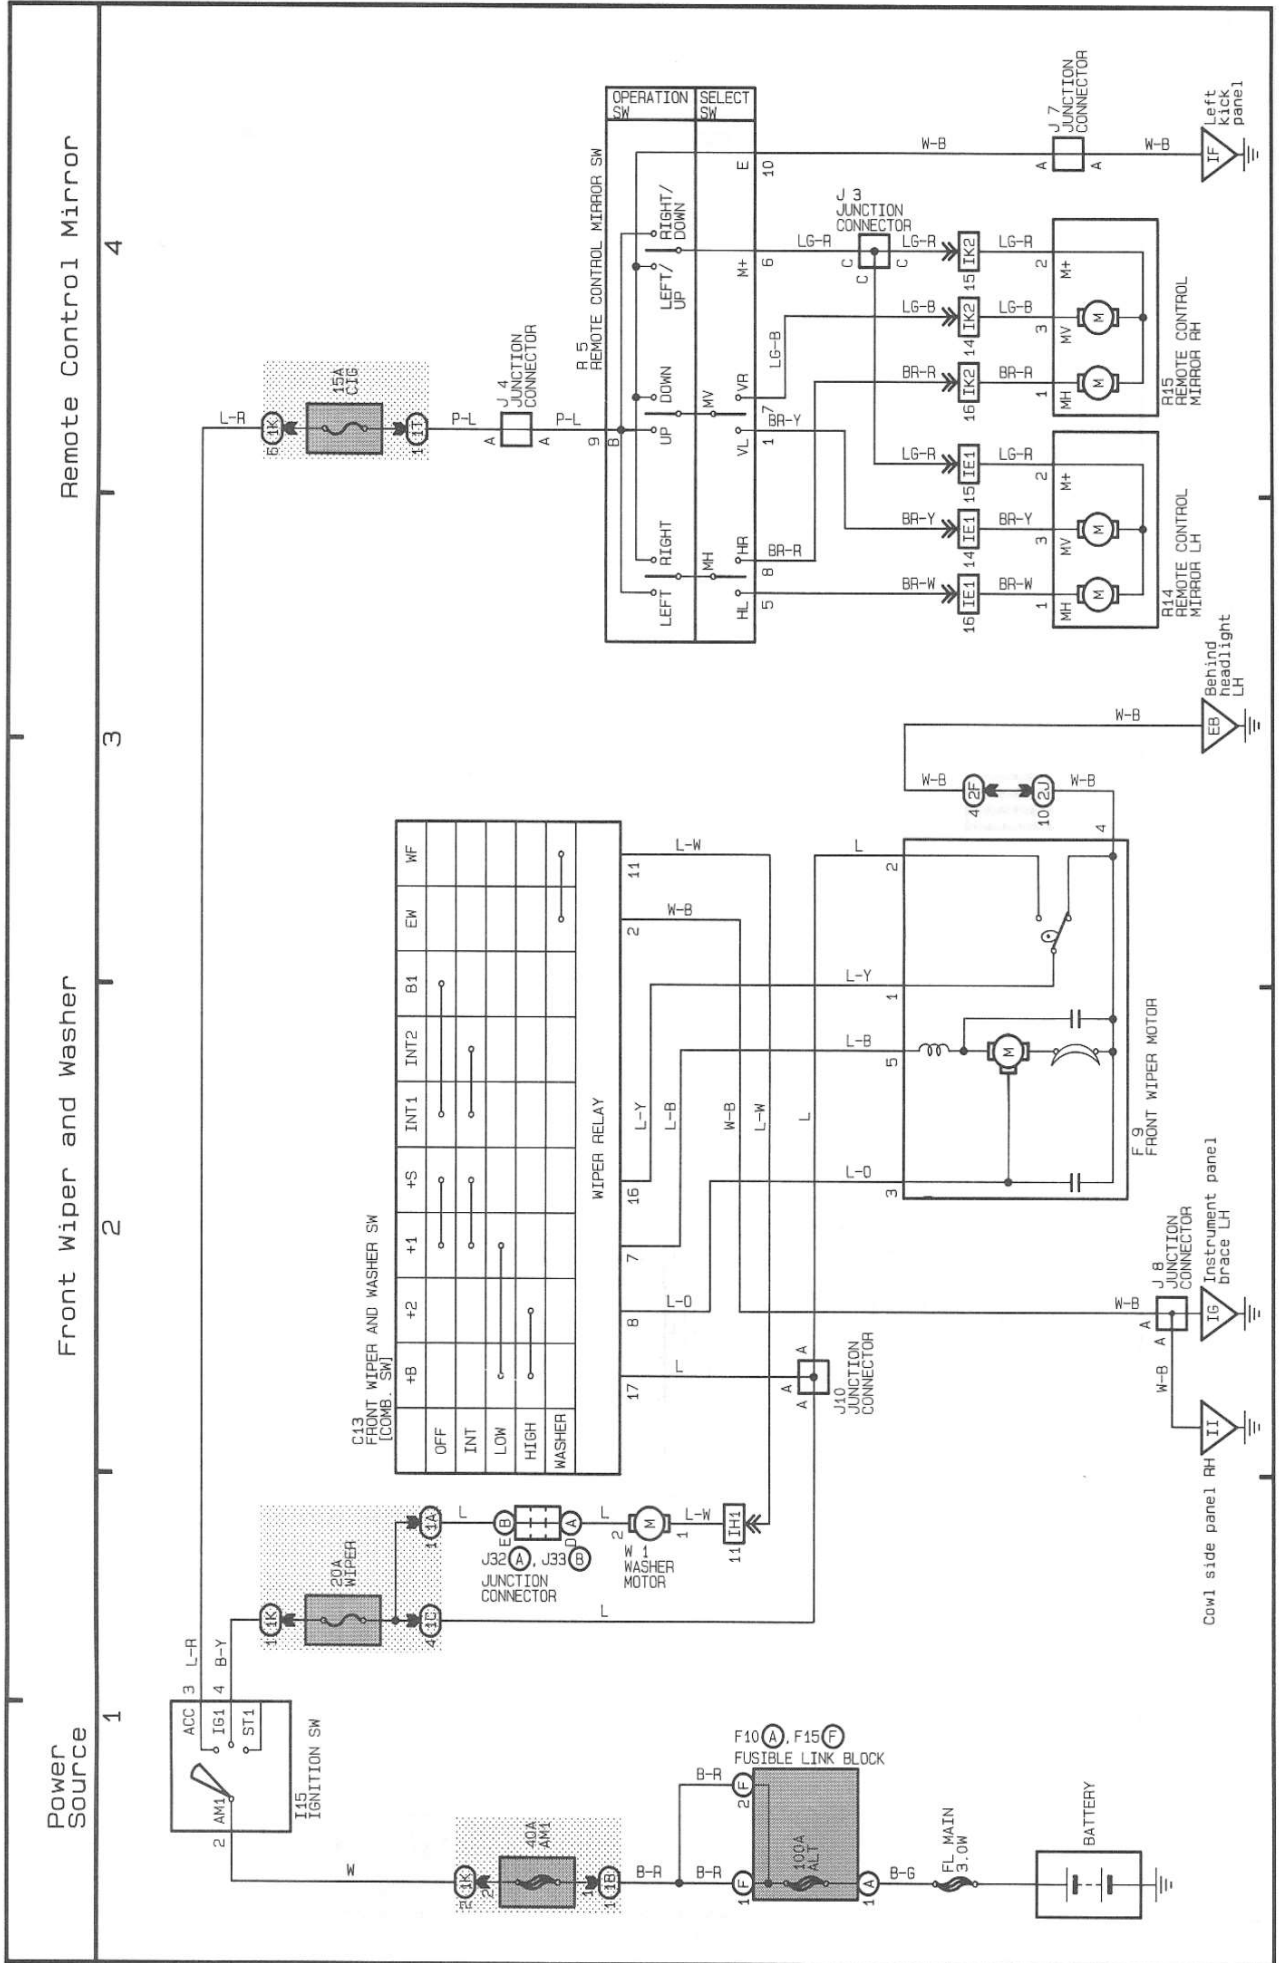


Power Source

Front Fog Light


Rear Fog Light


* 1: w/ Daytime Running Light
 * 2: w/o Daytime Running Light

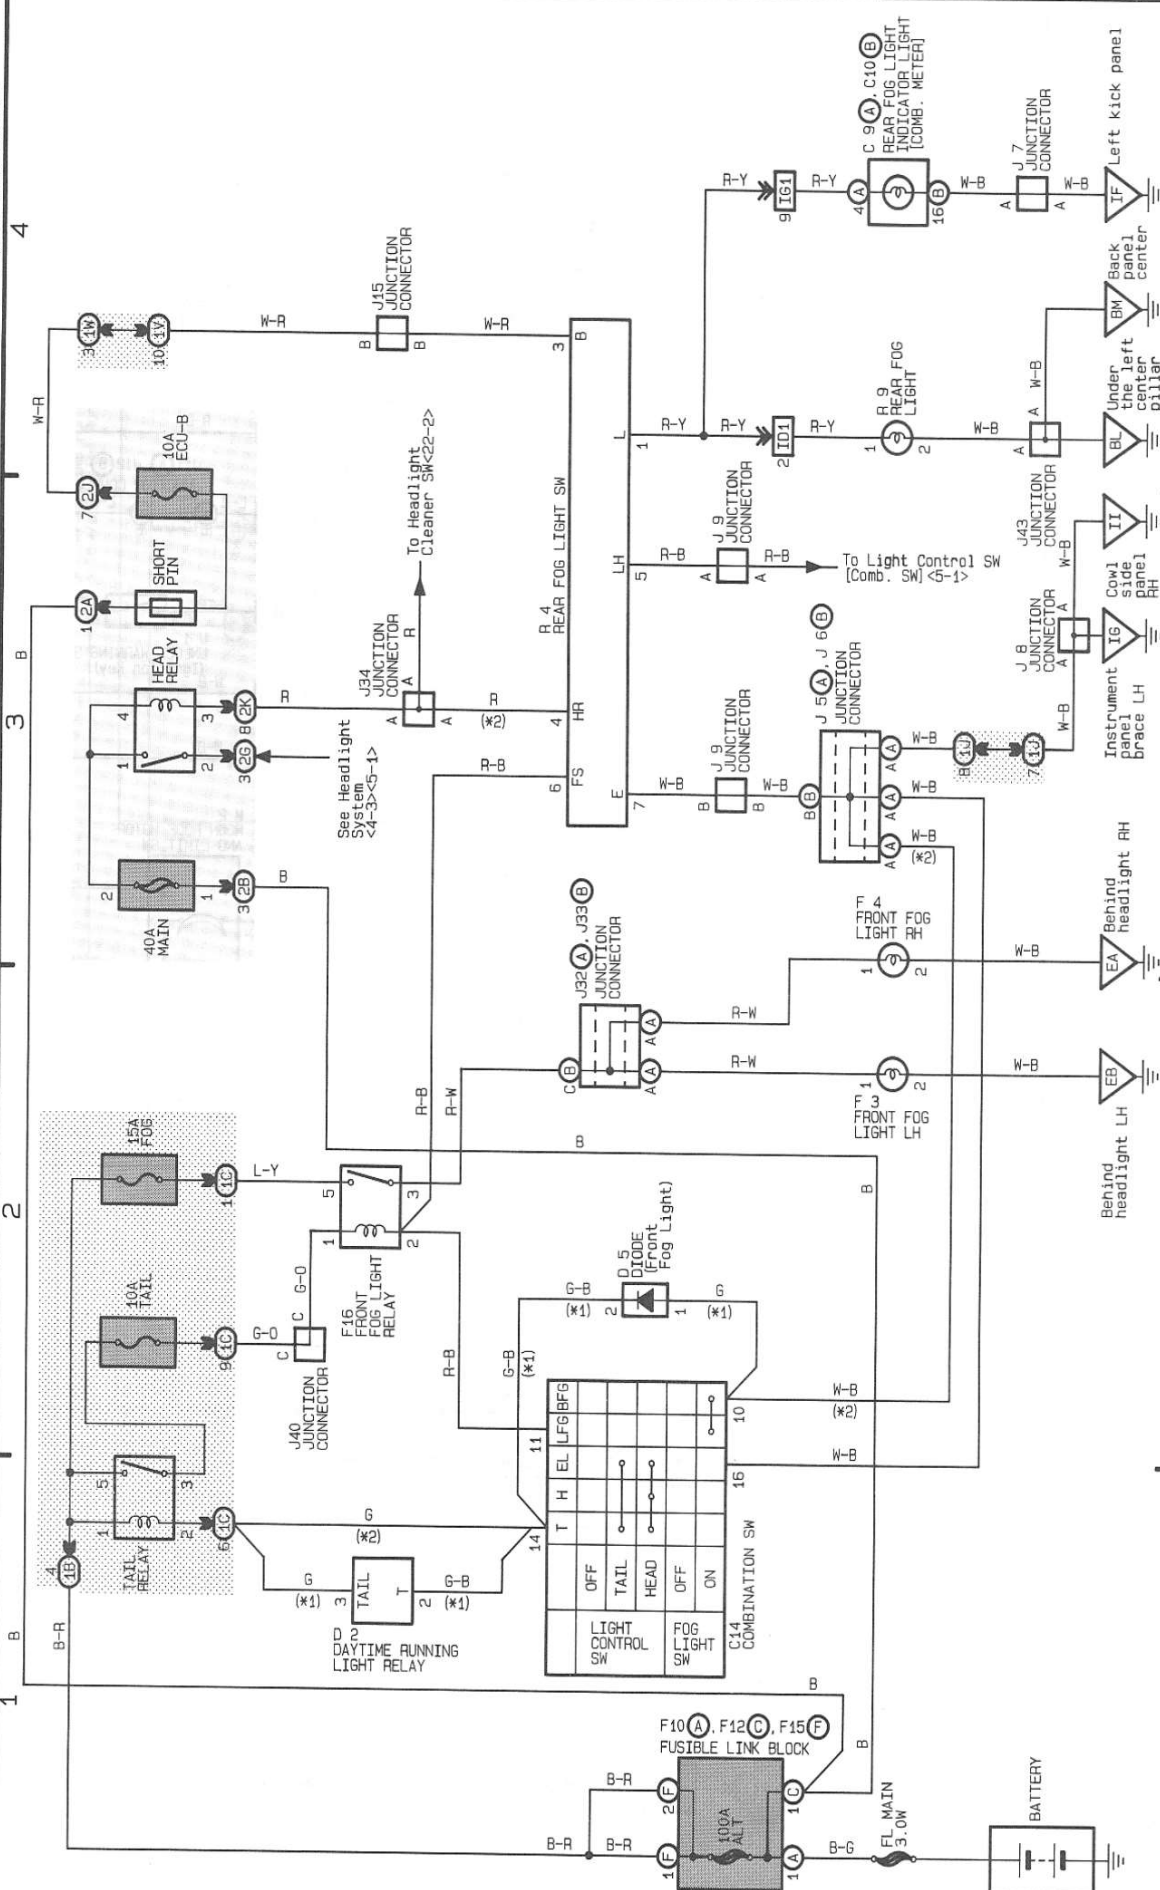


K OVERALL ELECTRICAL WIRING DIAGRAM


12 CAMRY (LHD)

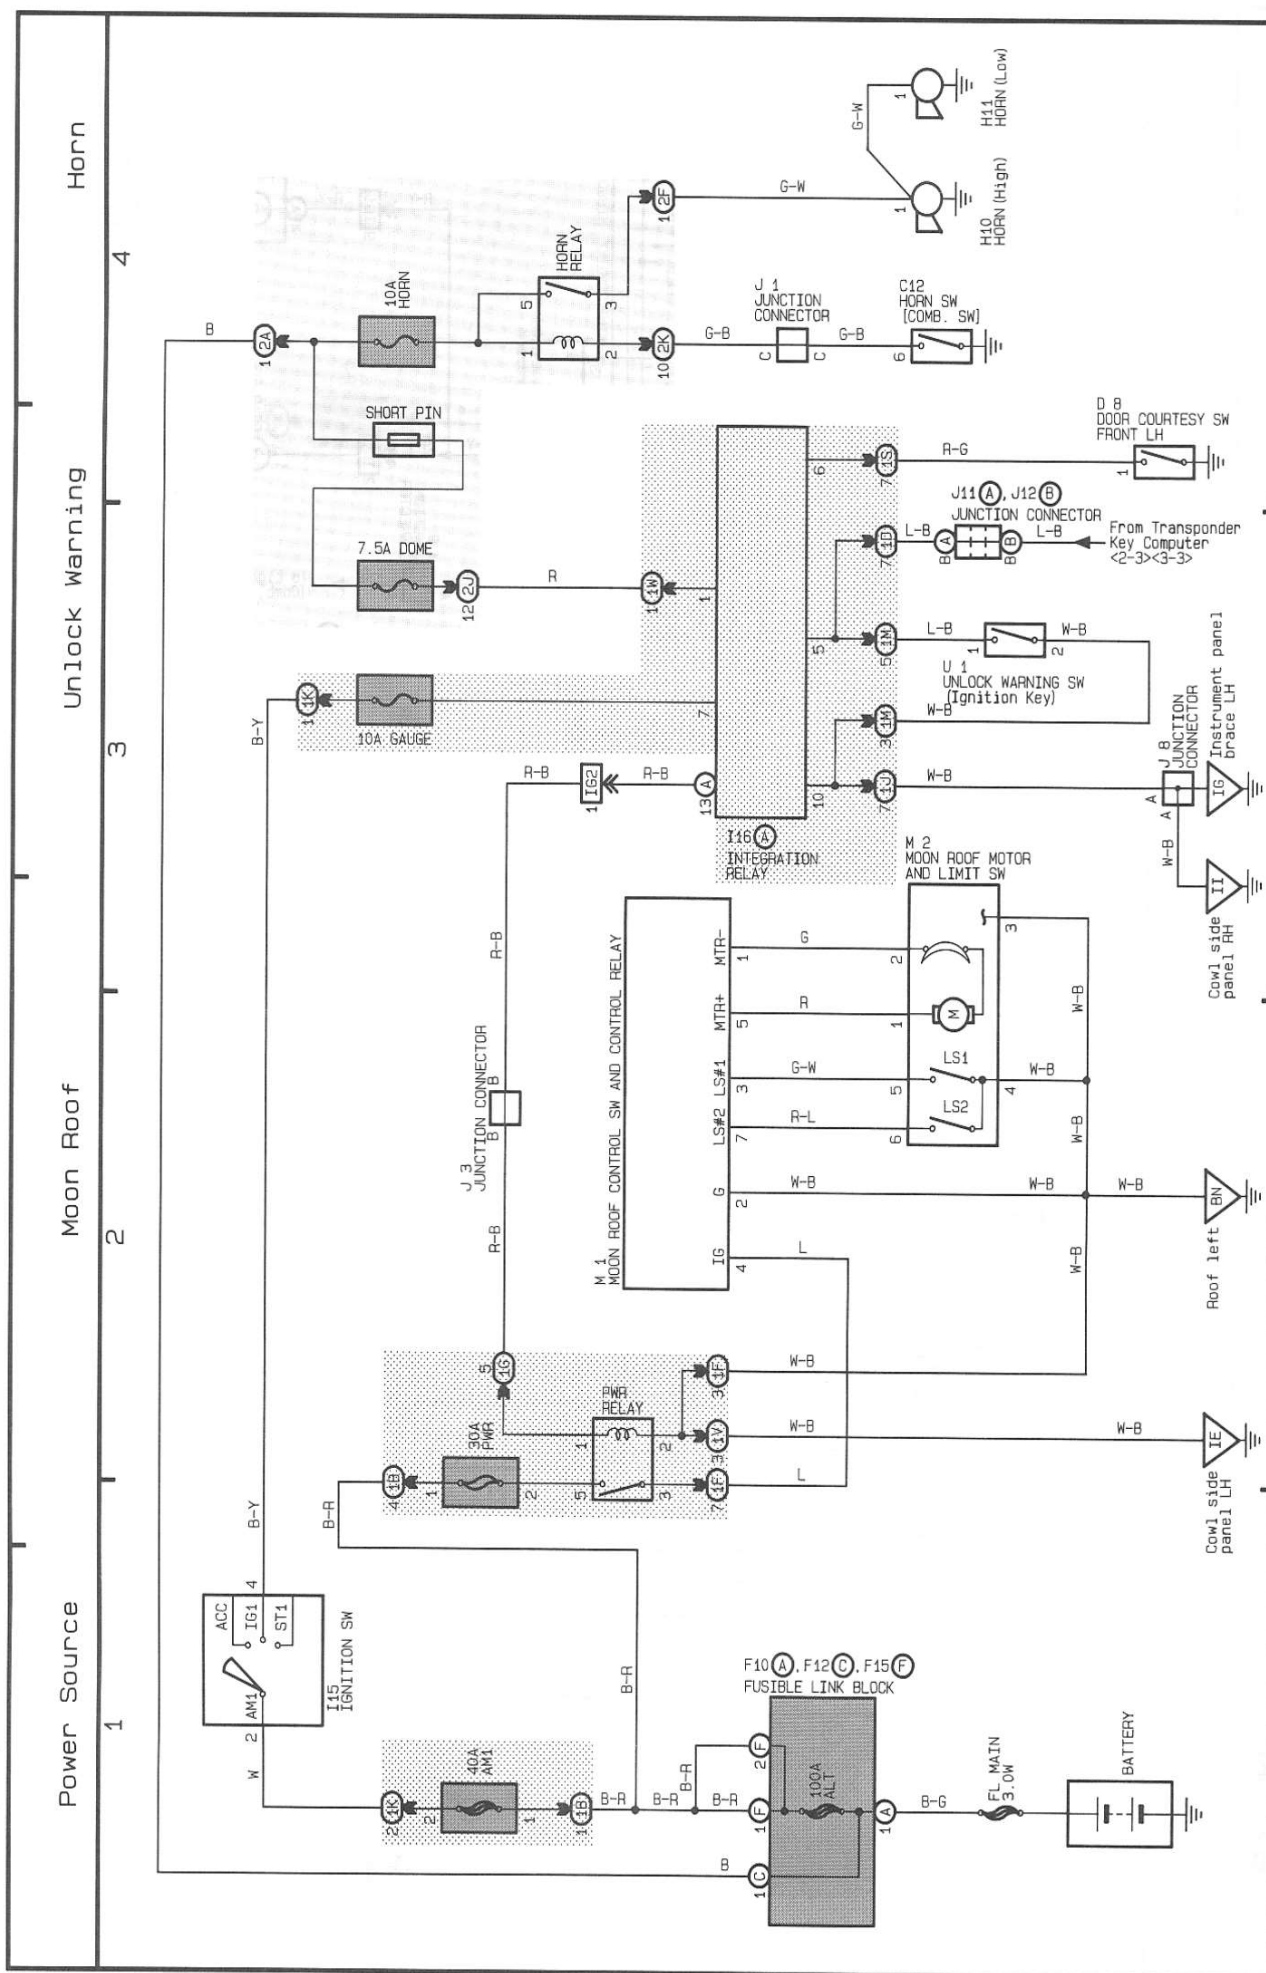

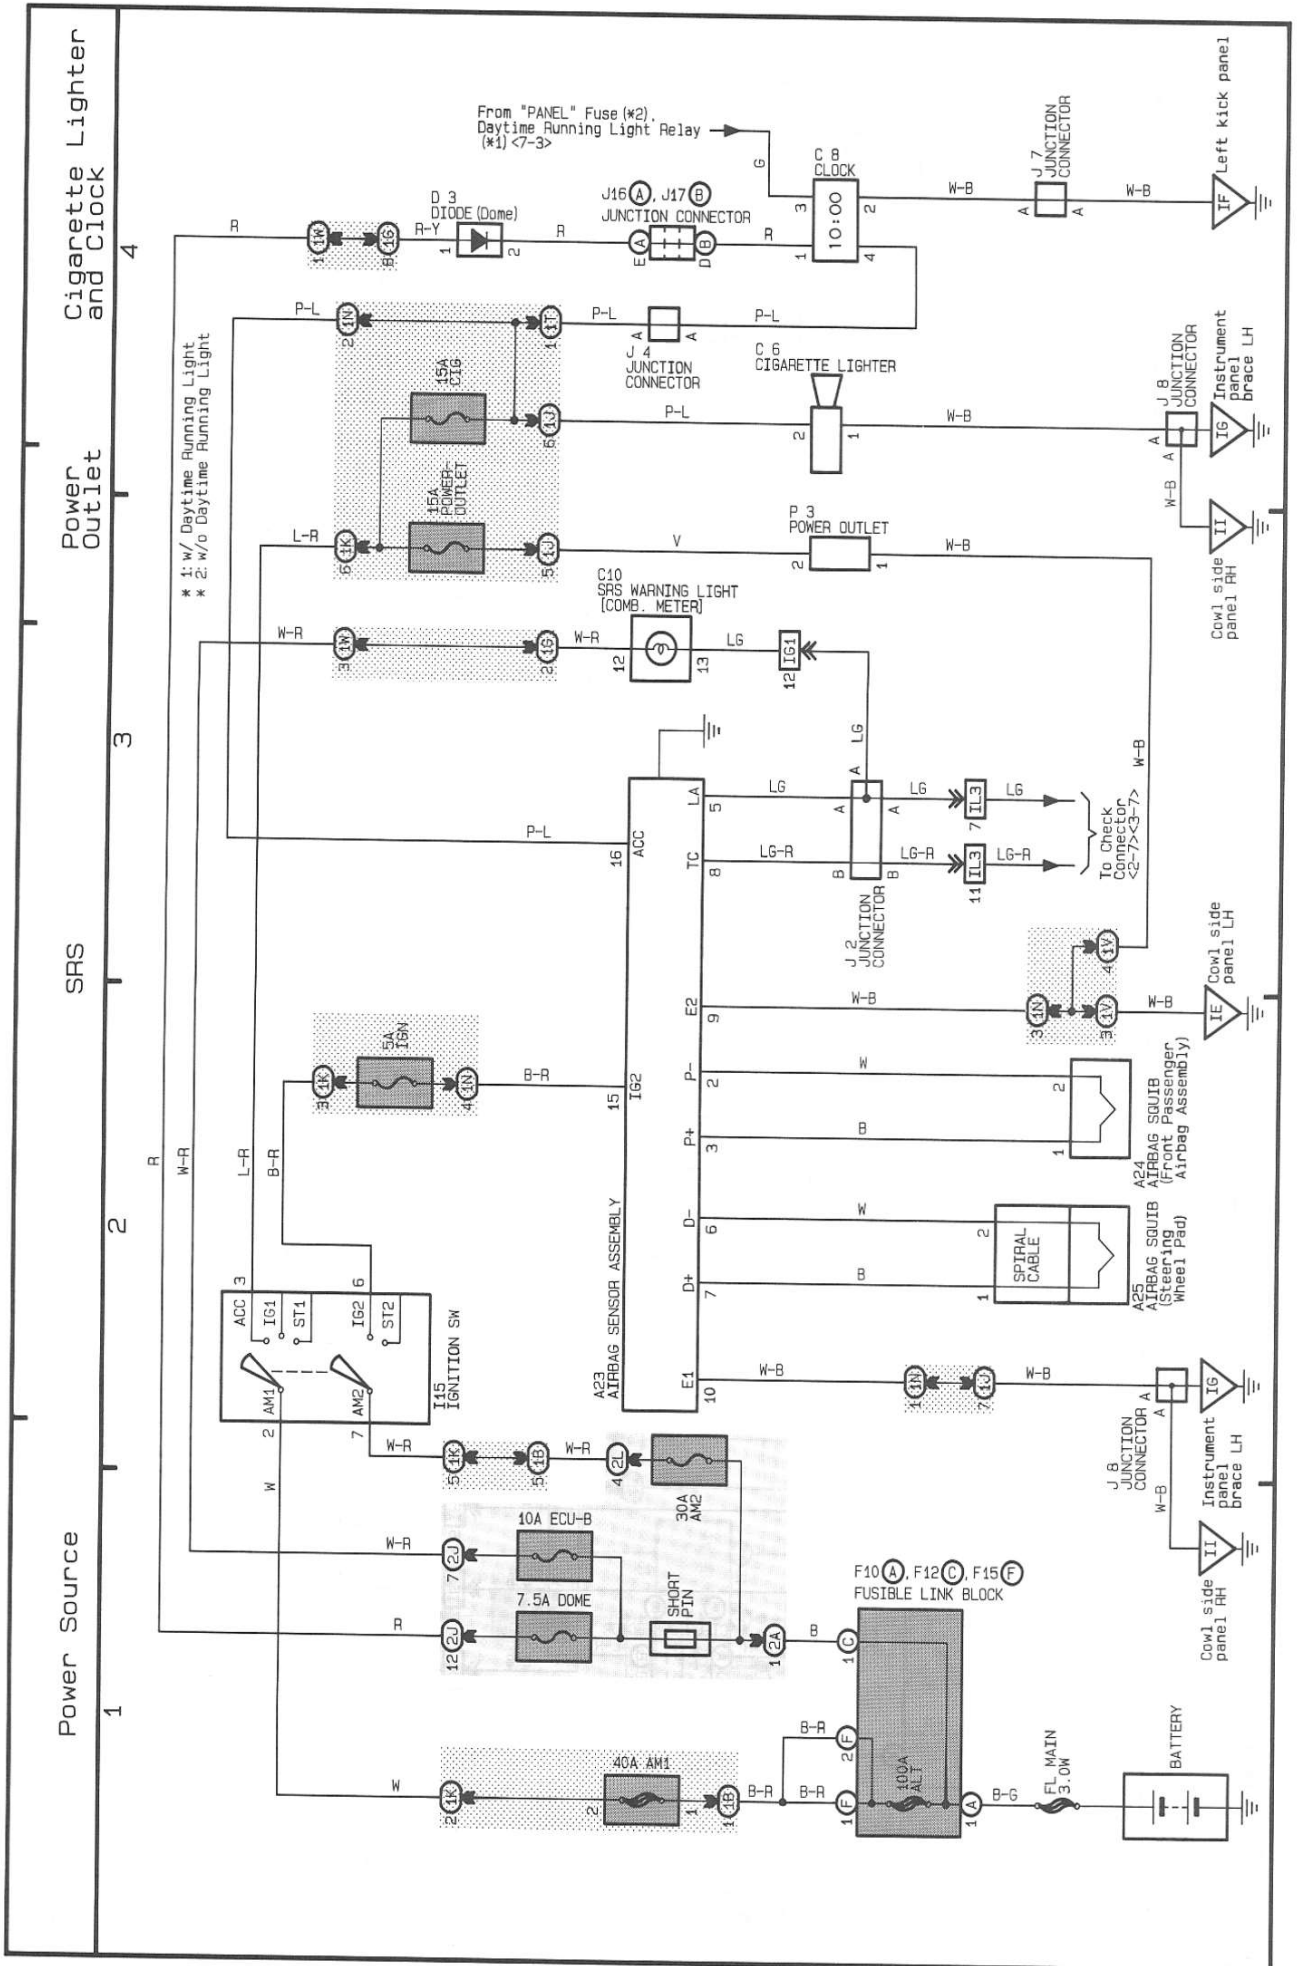


14 CAMRY (LHD)

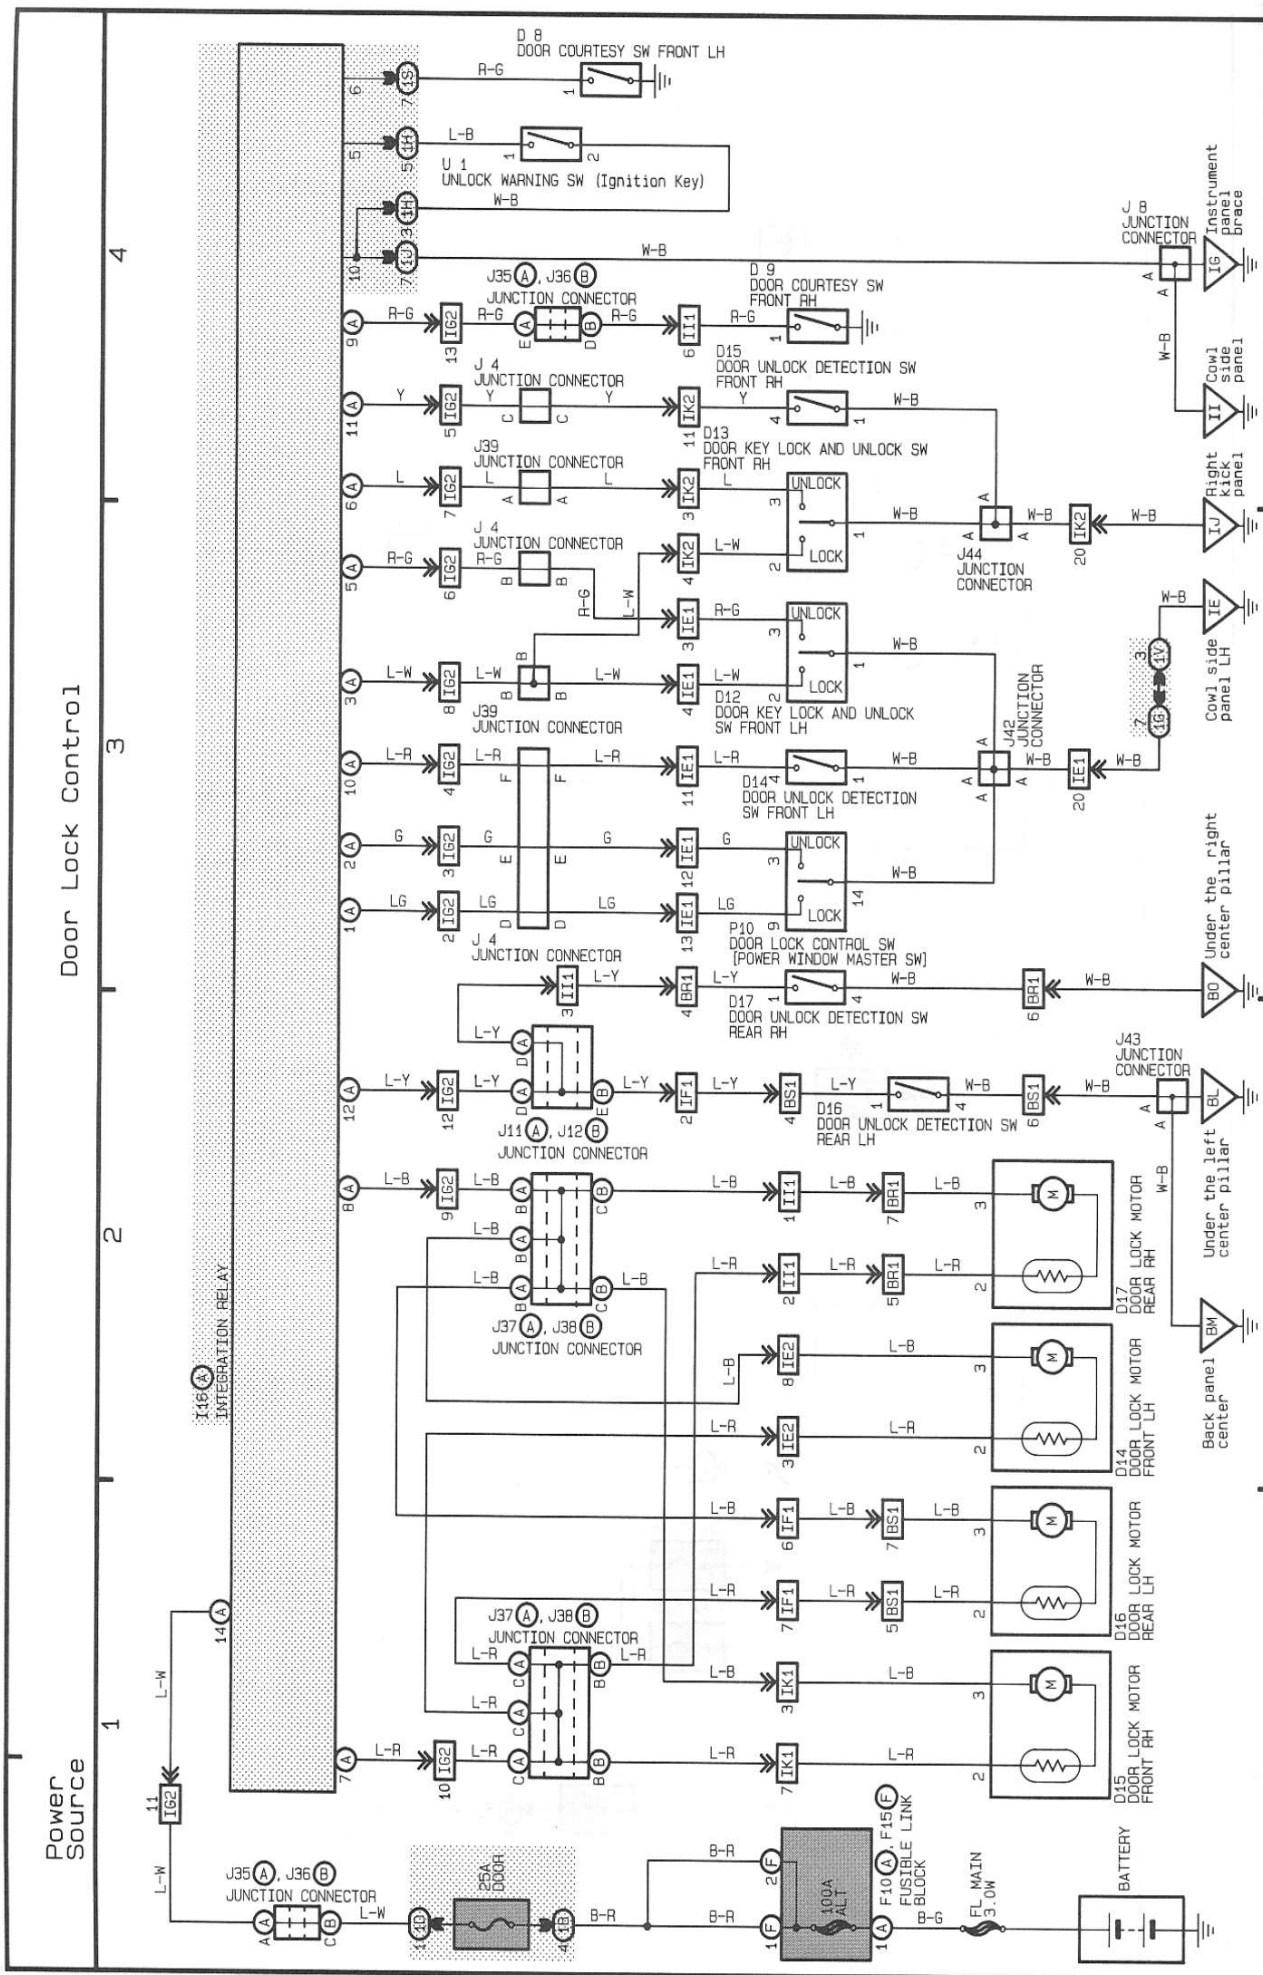

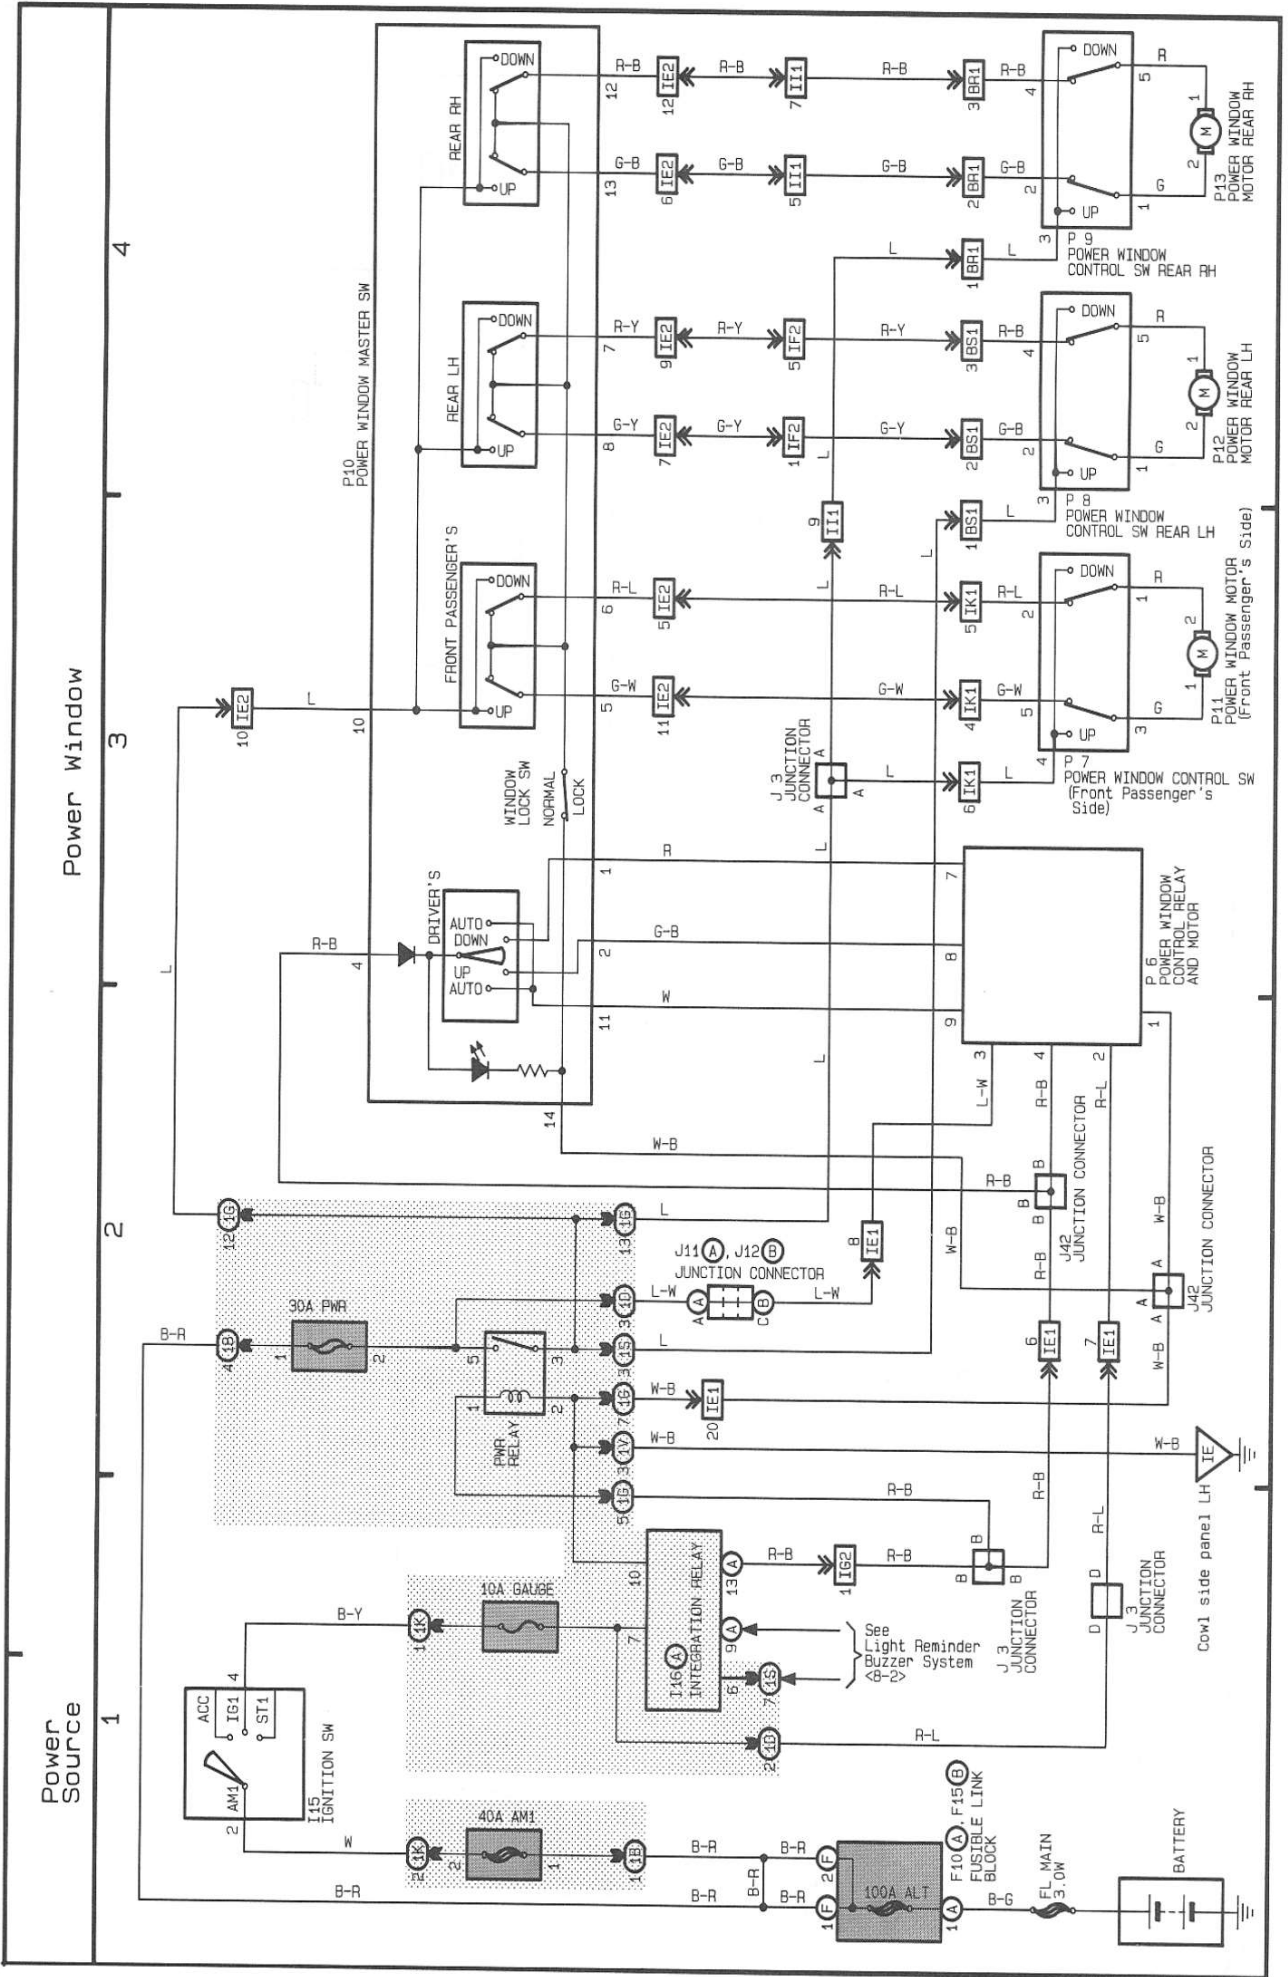


K OVERALL ELECTRICAL WIRING DIAGRAM


16 CAMRY (LHD)

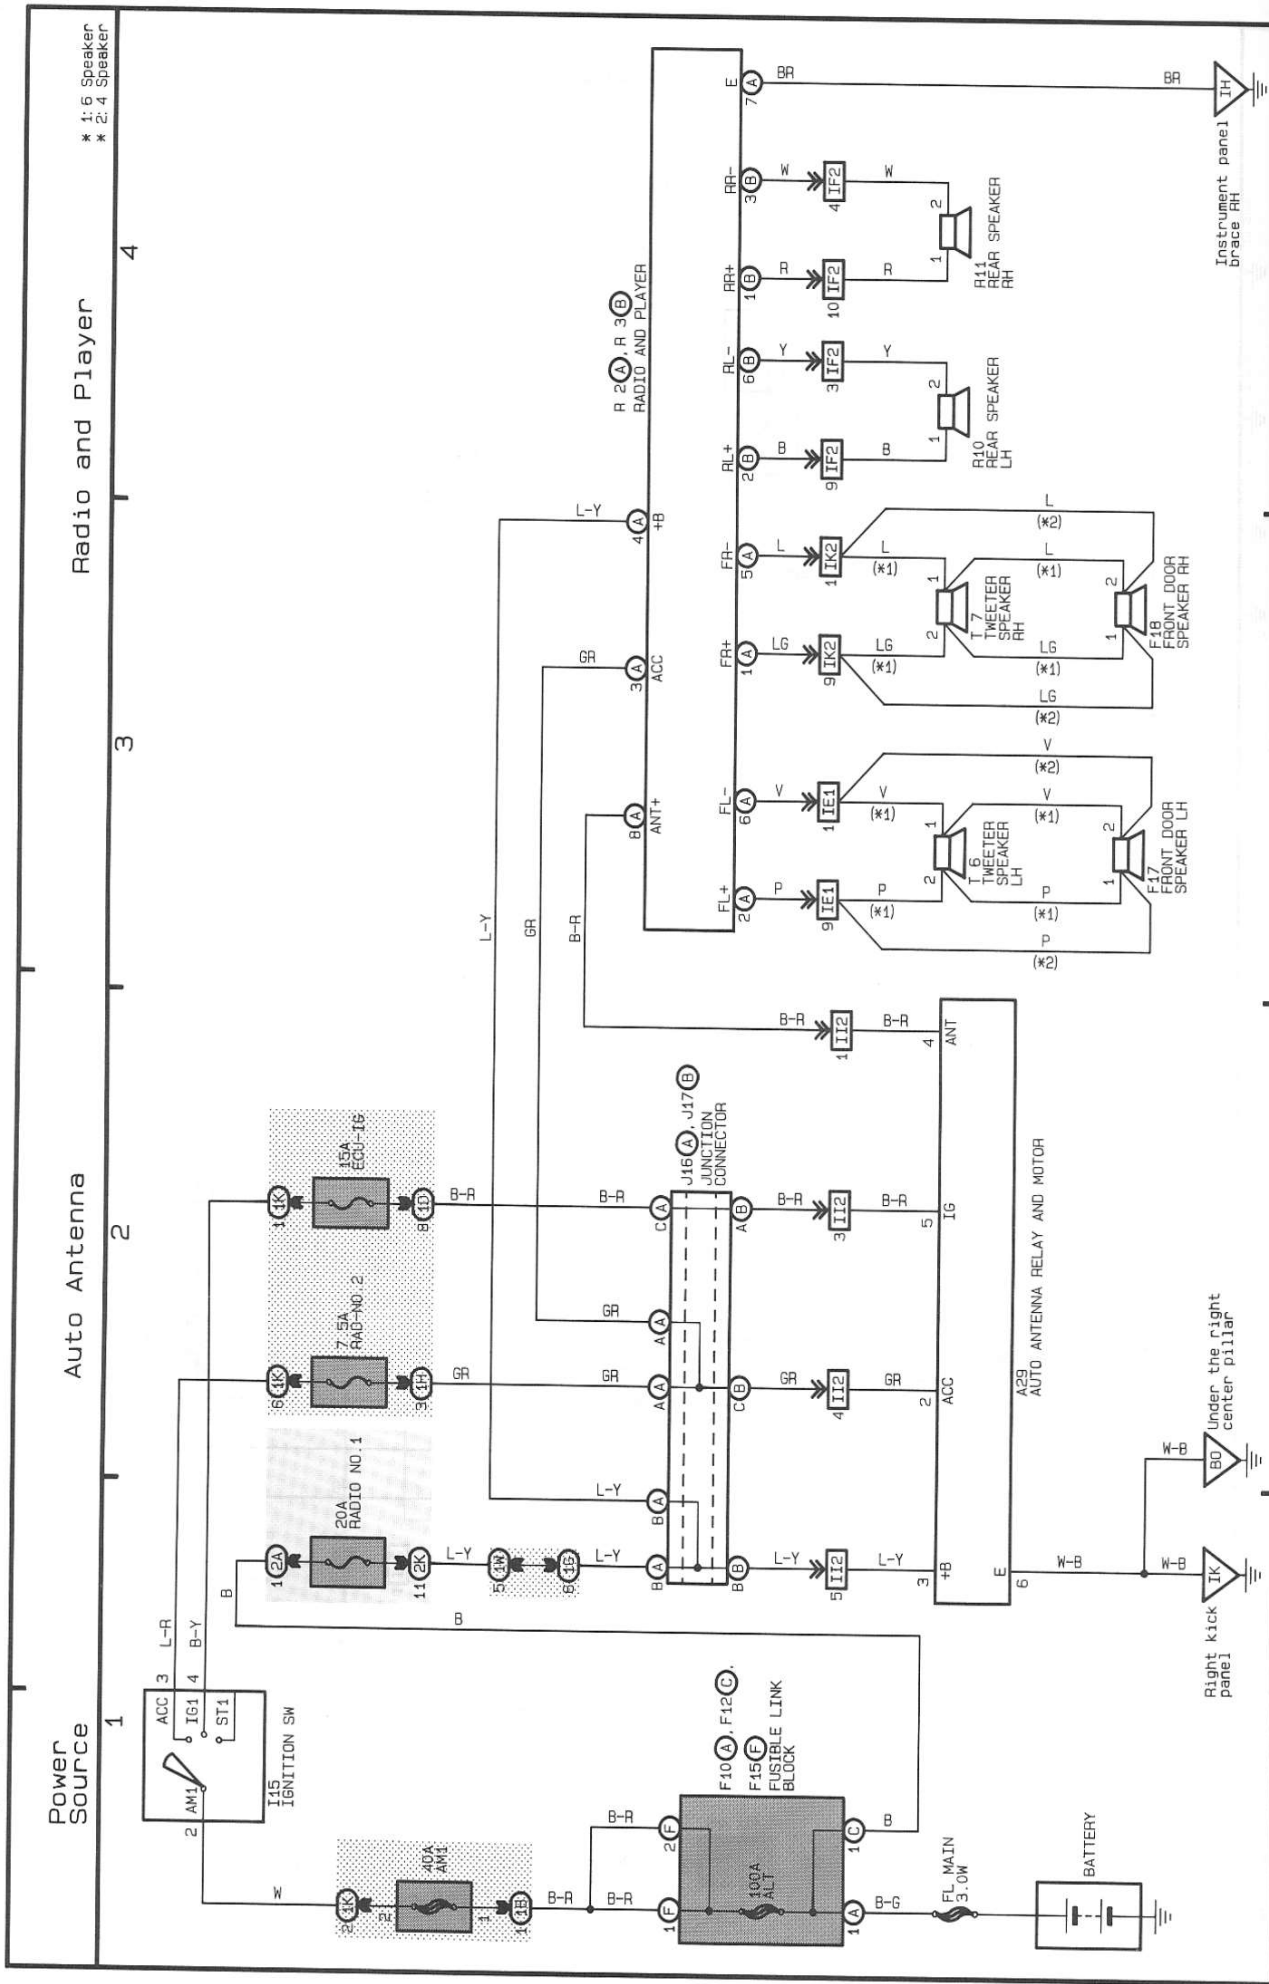

17 CAMRY (LHD)

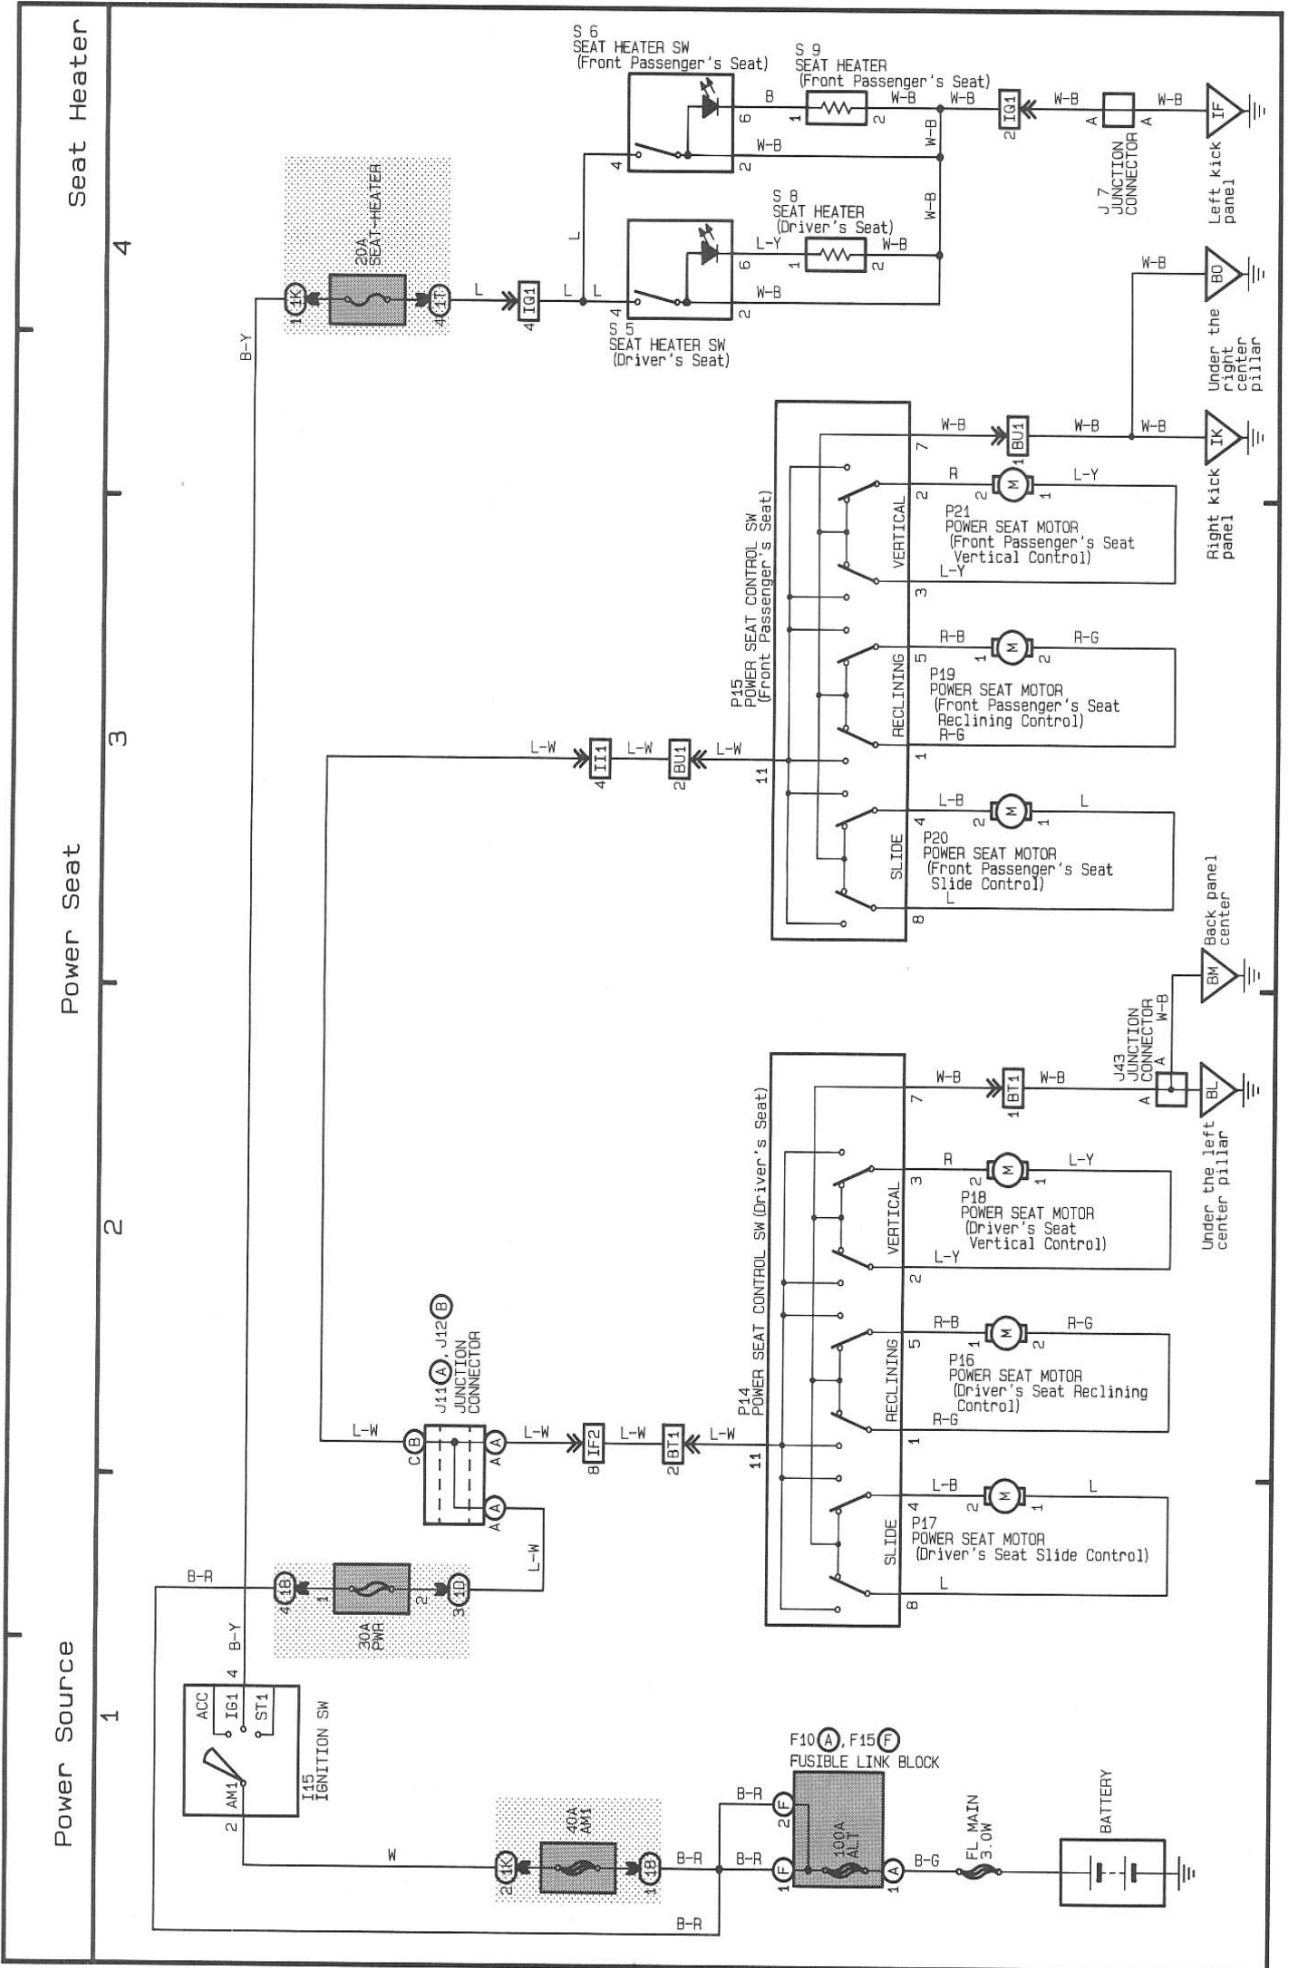

K OVERALL ELECTRICAL WIRING DIAGRAM

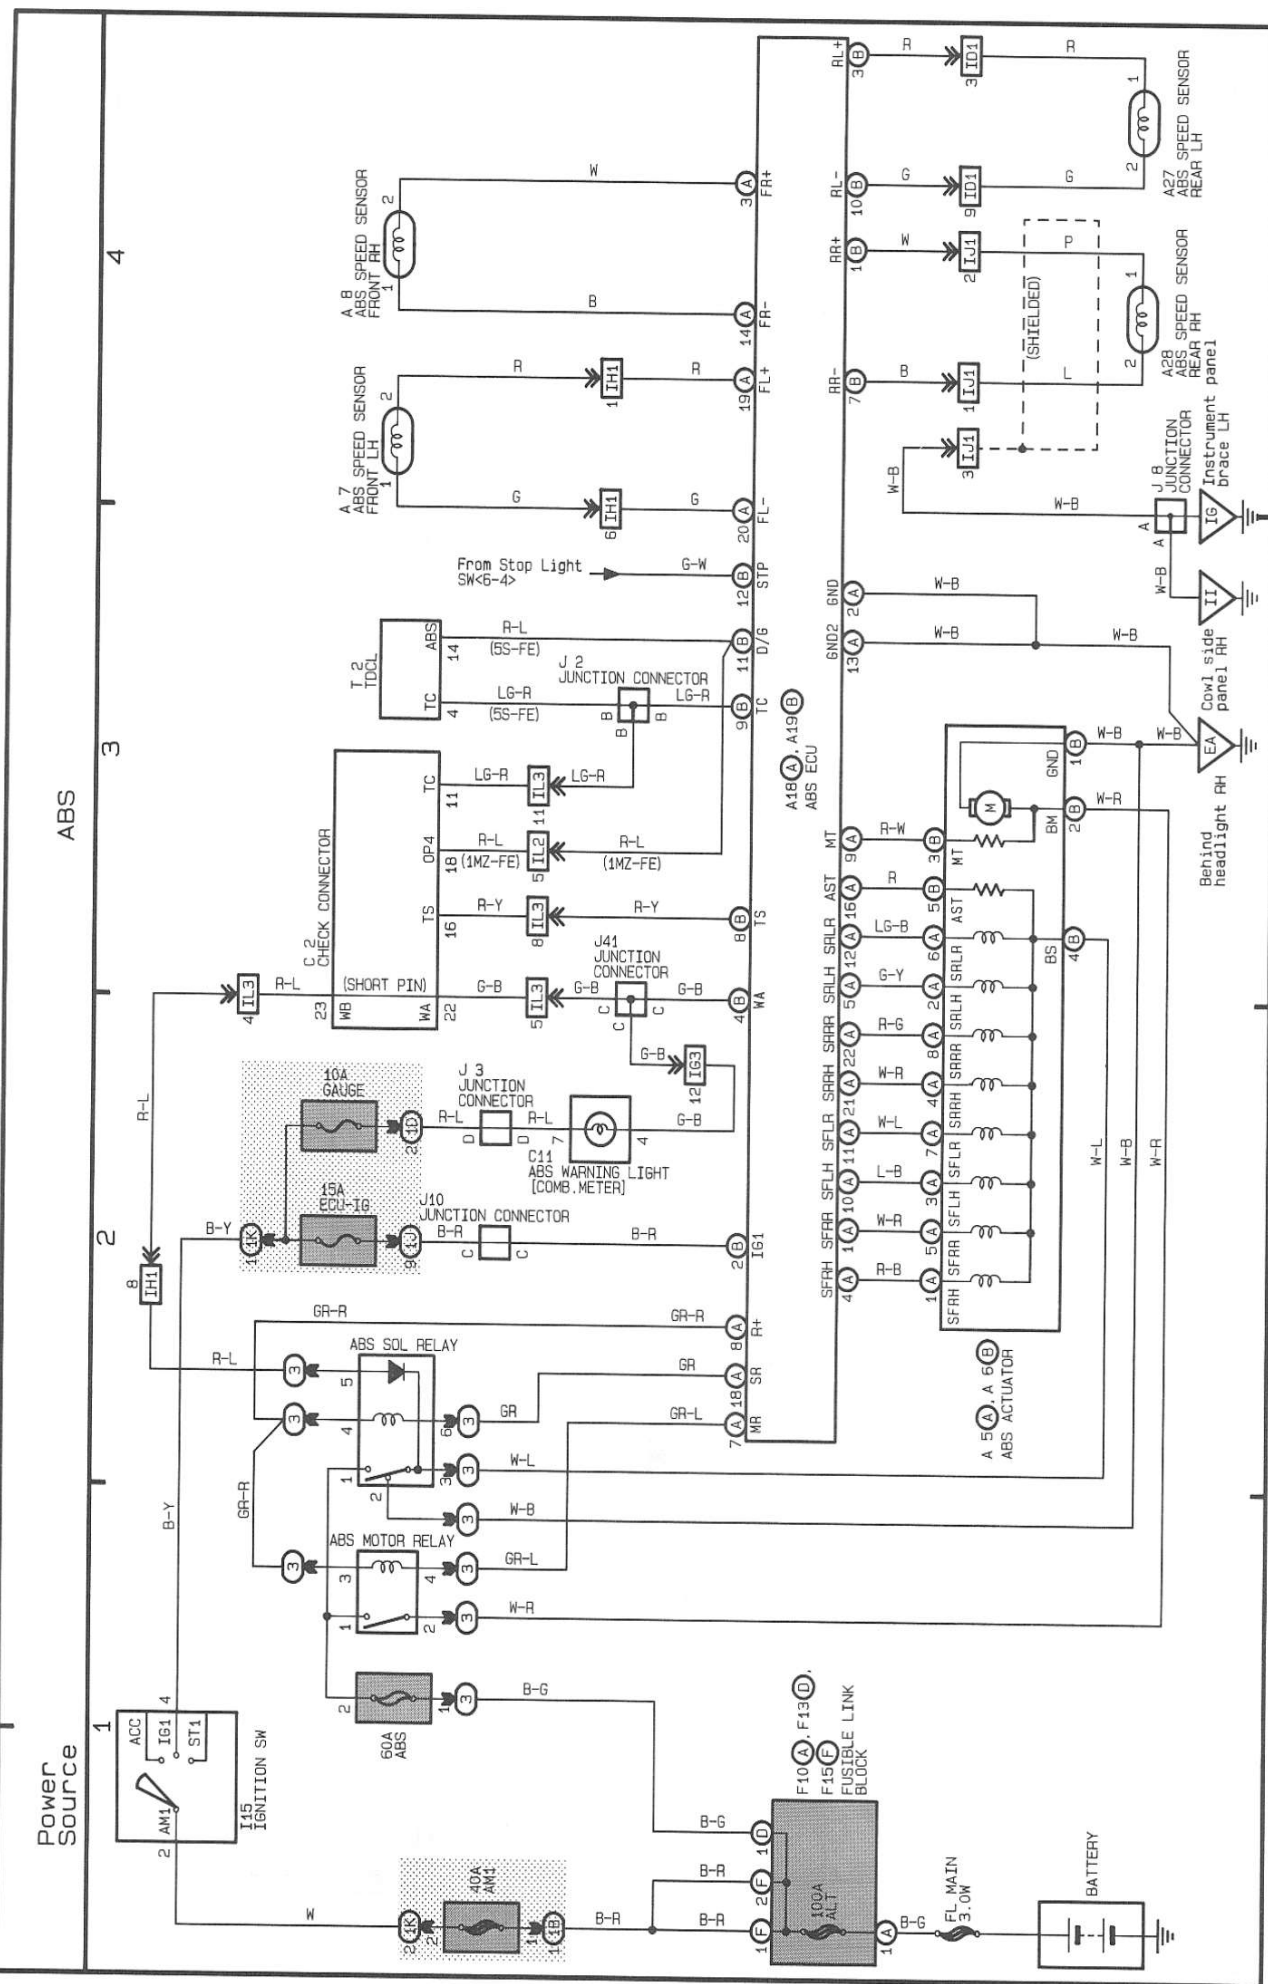


19 CAMRY (LHD)


Power Source

Cruise Control

* 1: 1M2-FE
* 2: 5S-FE

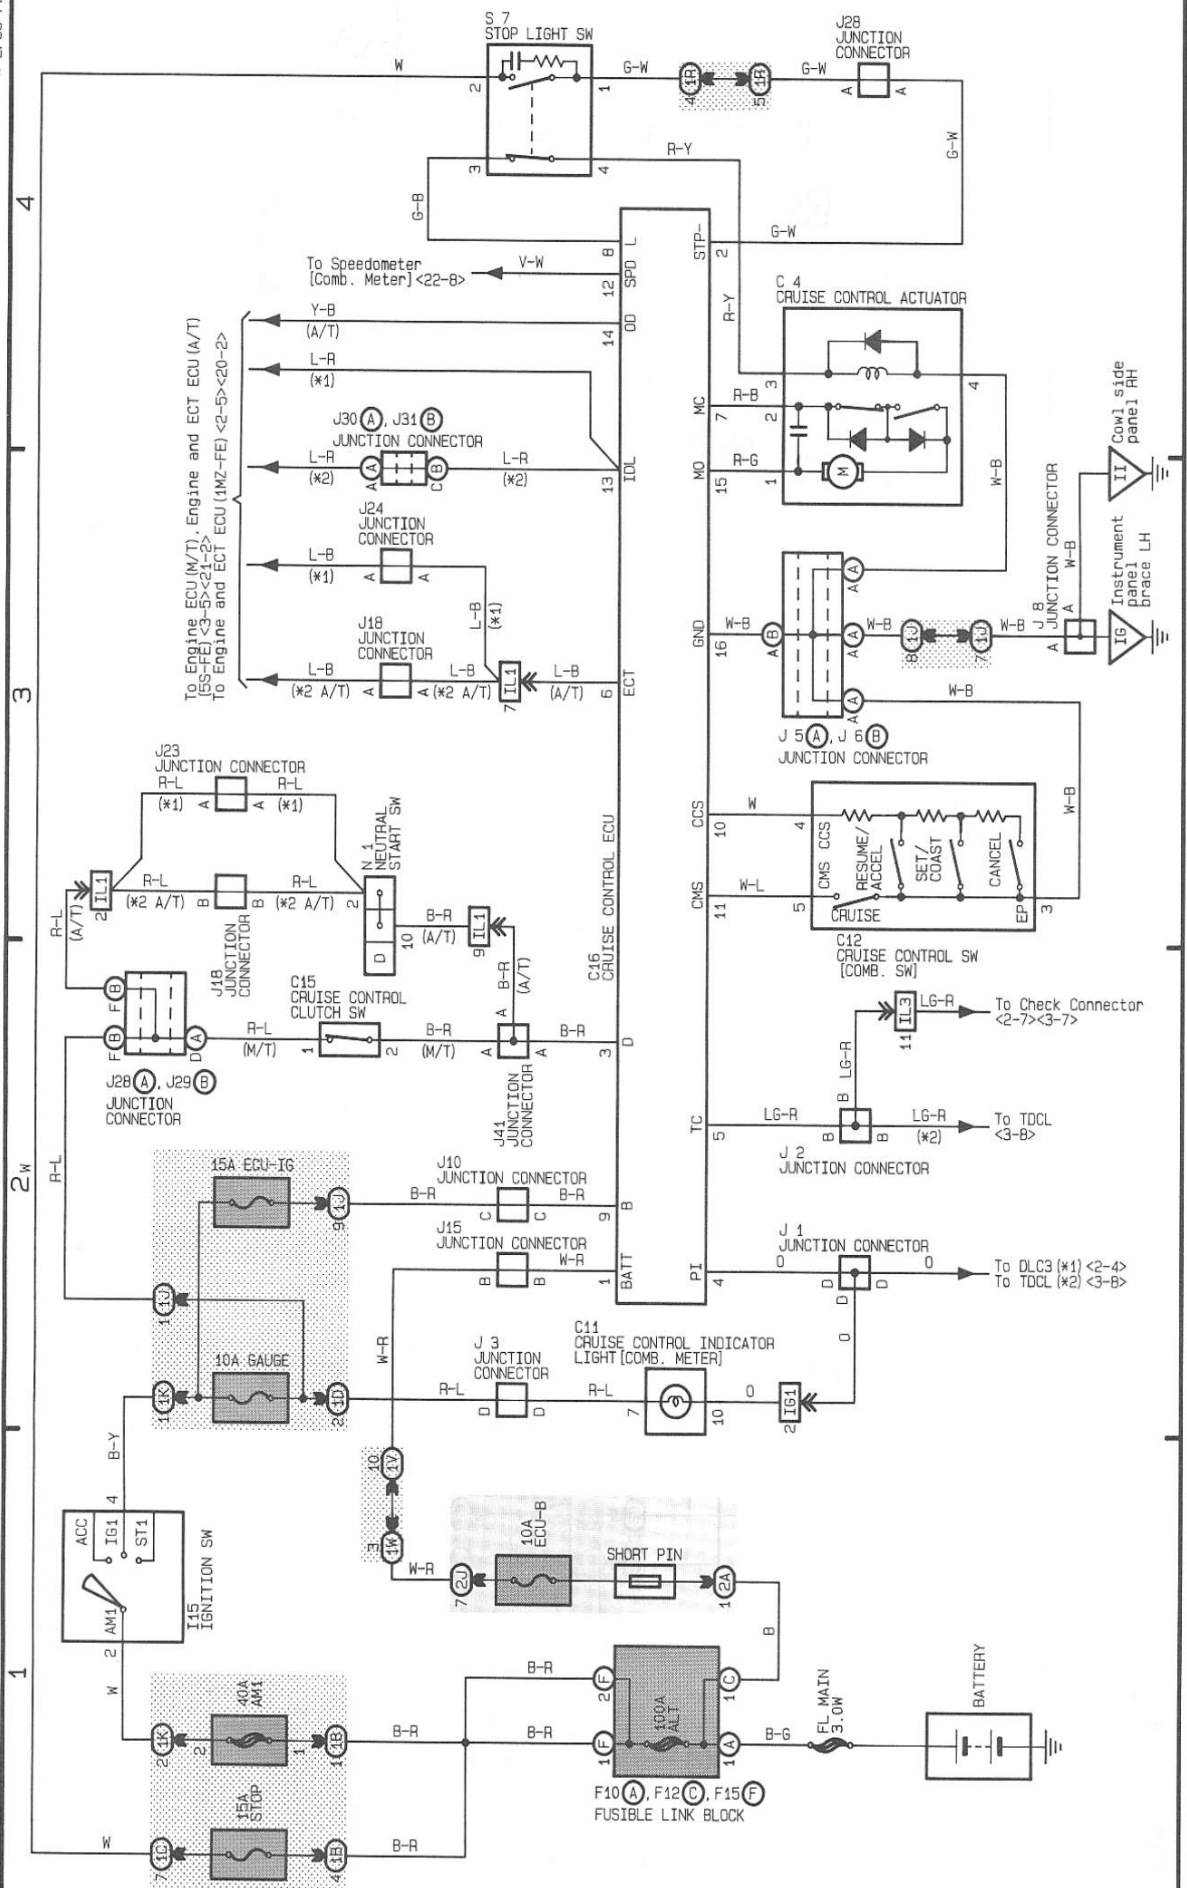


20 CAMRY (LHD)

 

Power Source

ECT and A/T Indicator (5S-FE)

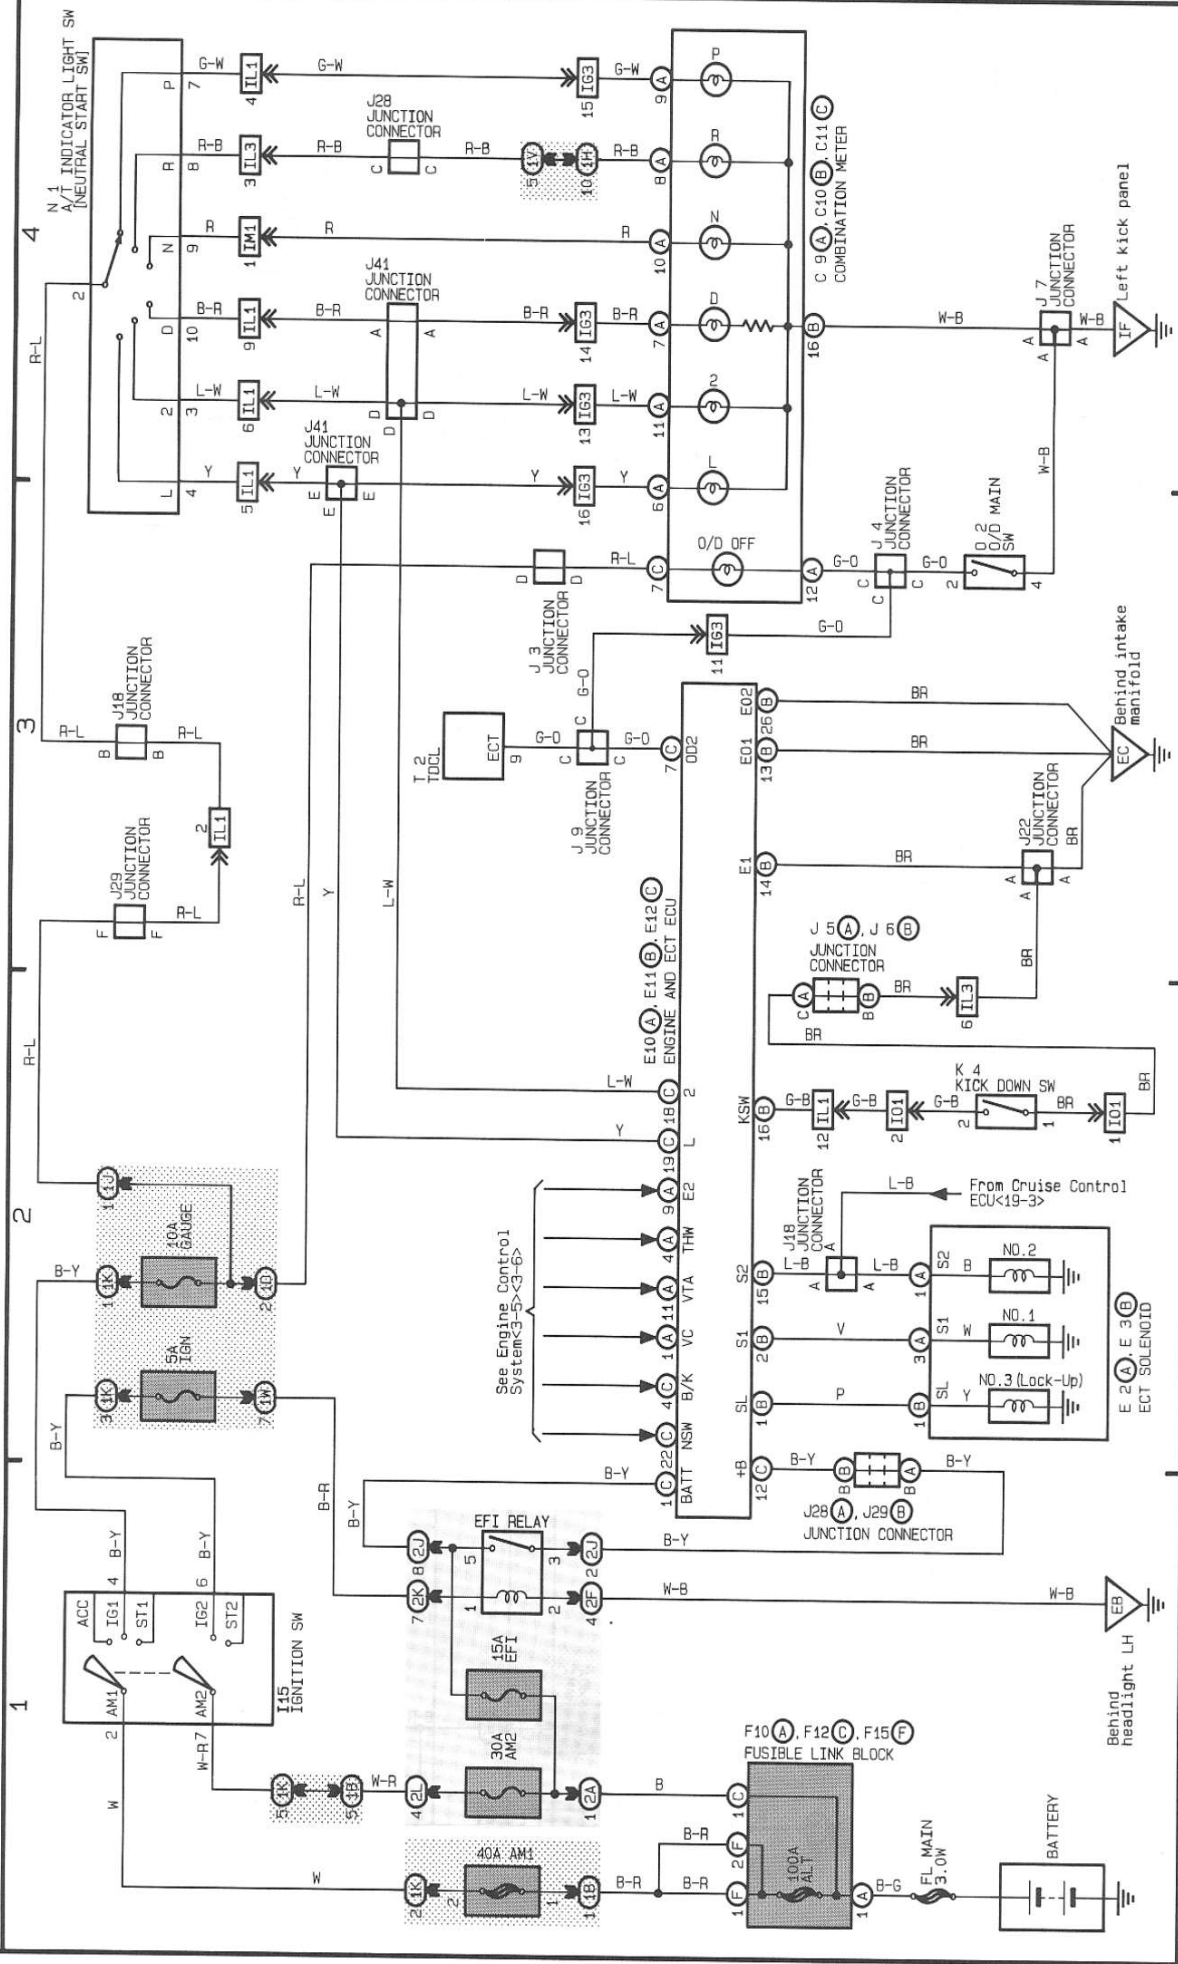

K OVERALL ELECTRICAL WIRING DIAGRAM

22 CAMRY (LHD)


(Cont. next page)

- * 1: w/ Daytime Running Light
- * 2: w/o Daytime Running Light
- * 3: IM2-EE
- * 4: 5S-FE


Combination Meter

Headlight Cleaner

Power Source

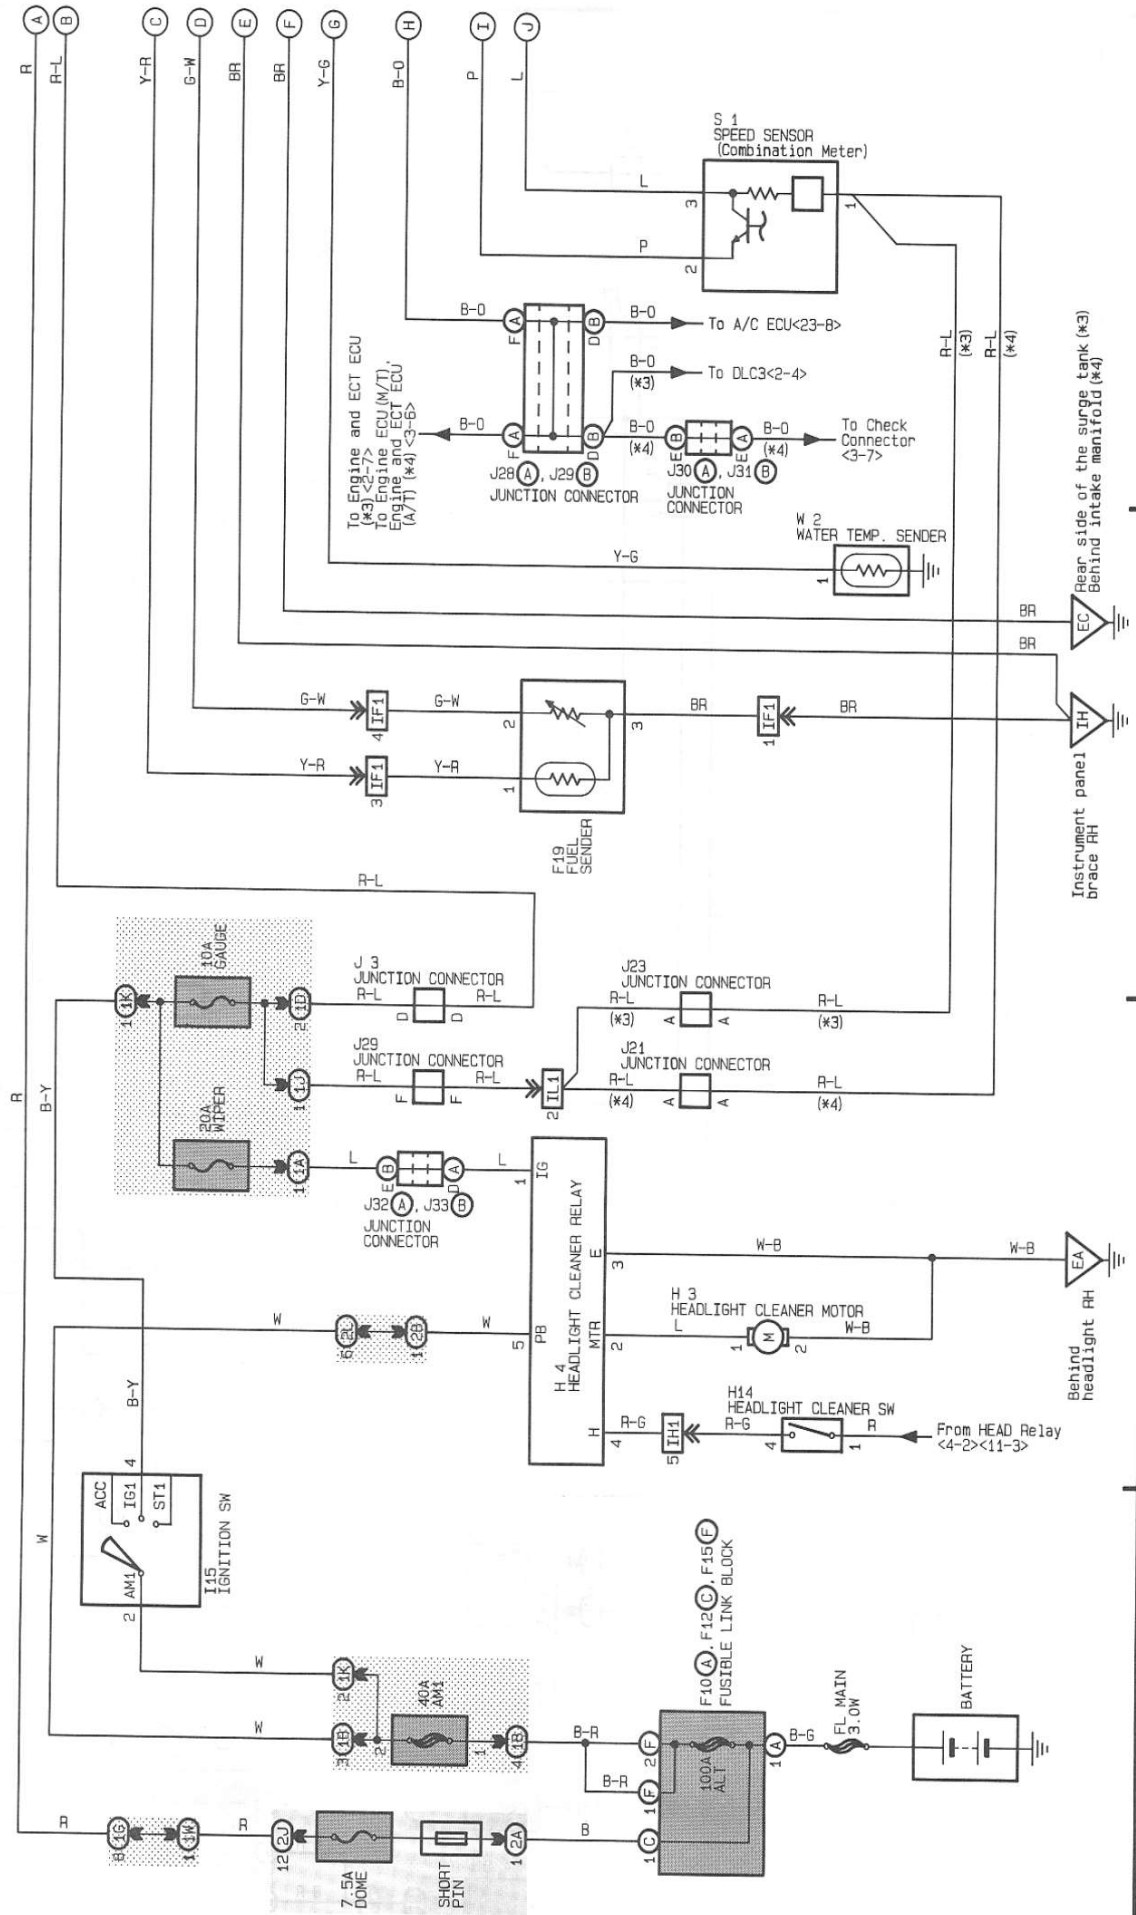


22 CAMRY (LHD) (Cont'd)

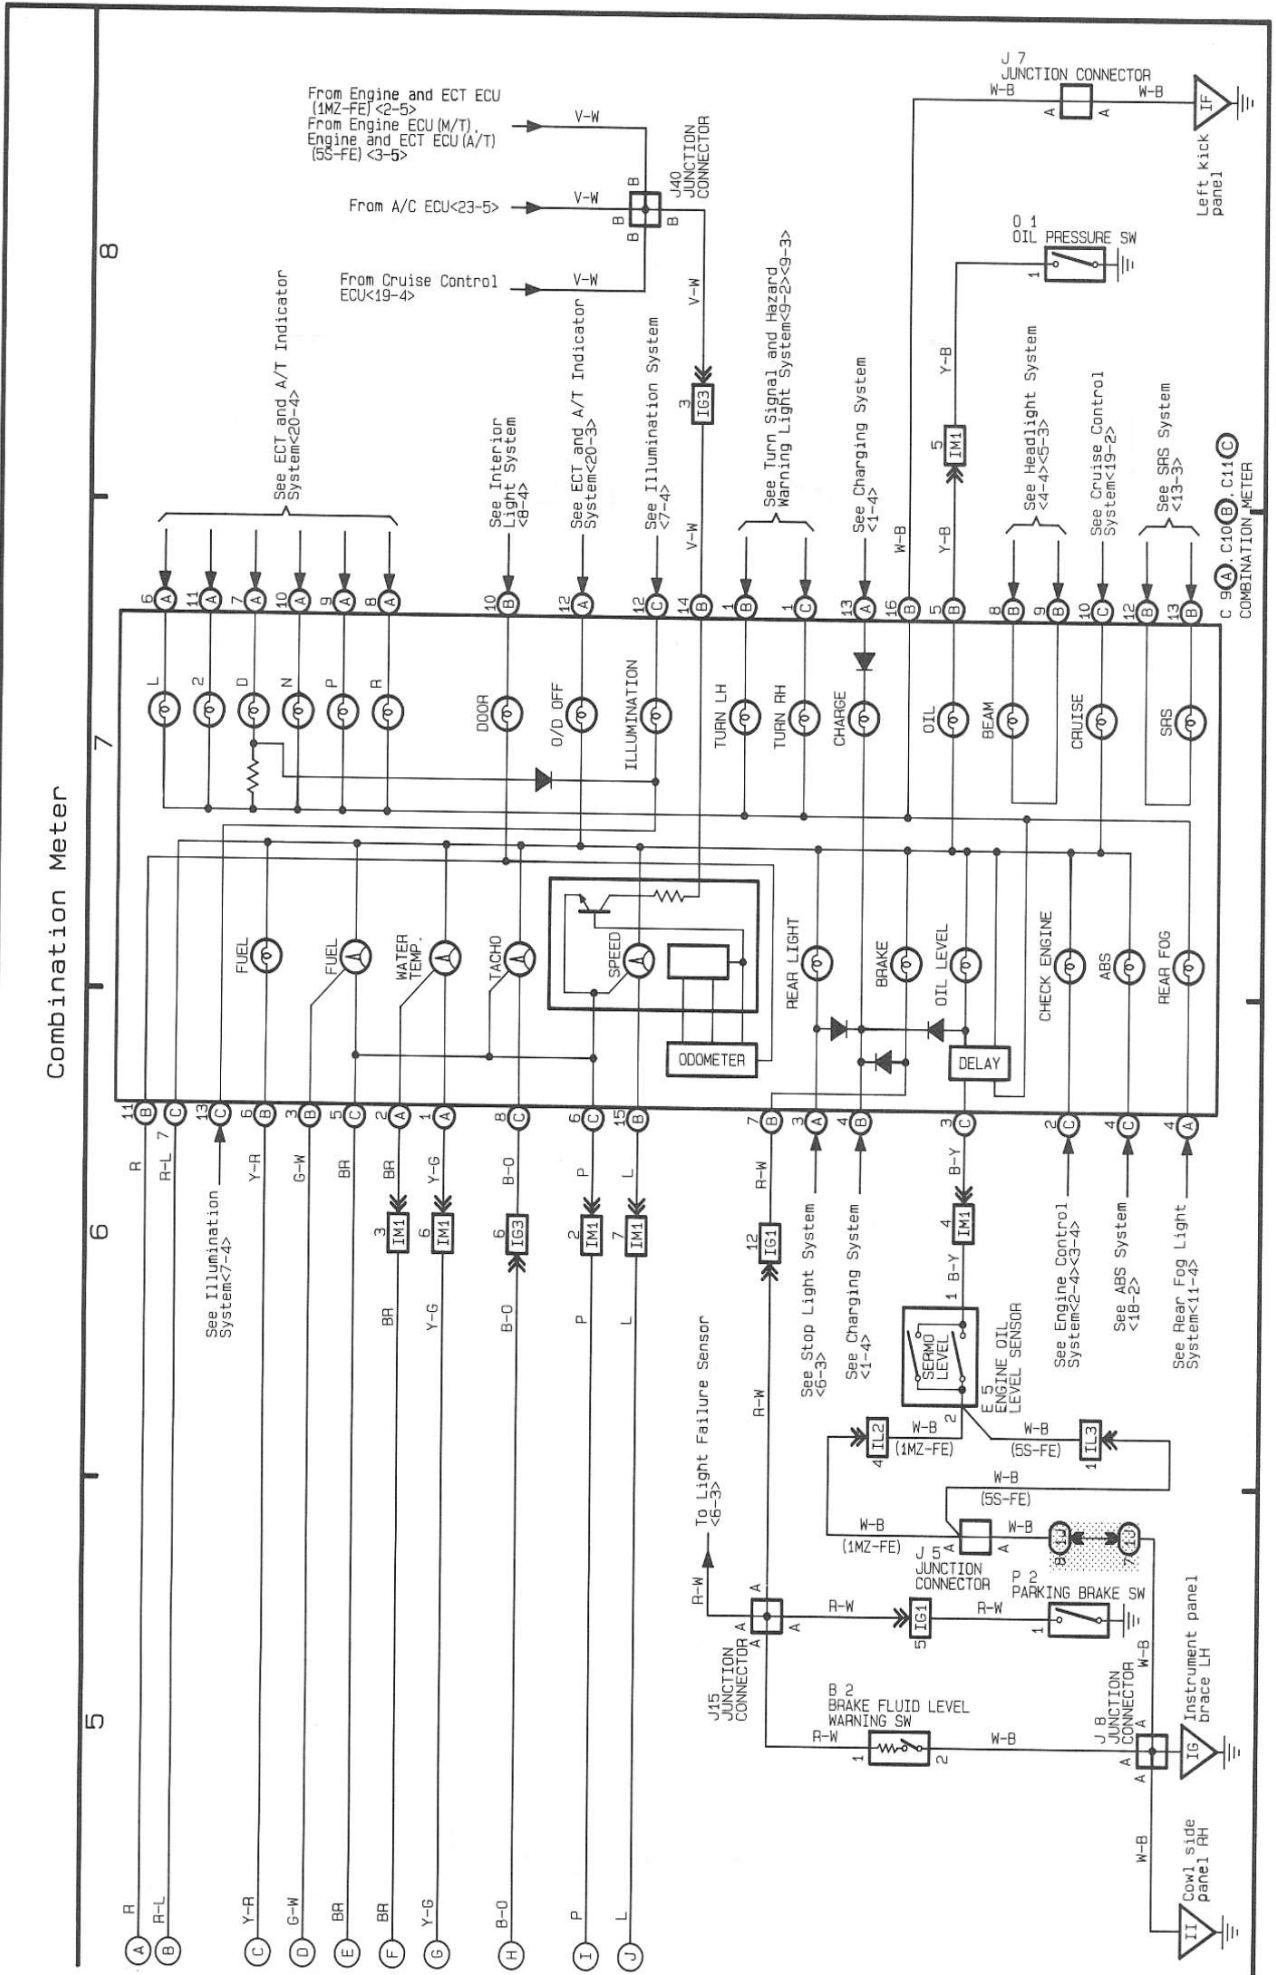


23 CAMRY (LHD)


(Cont. next page)

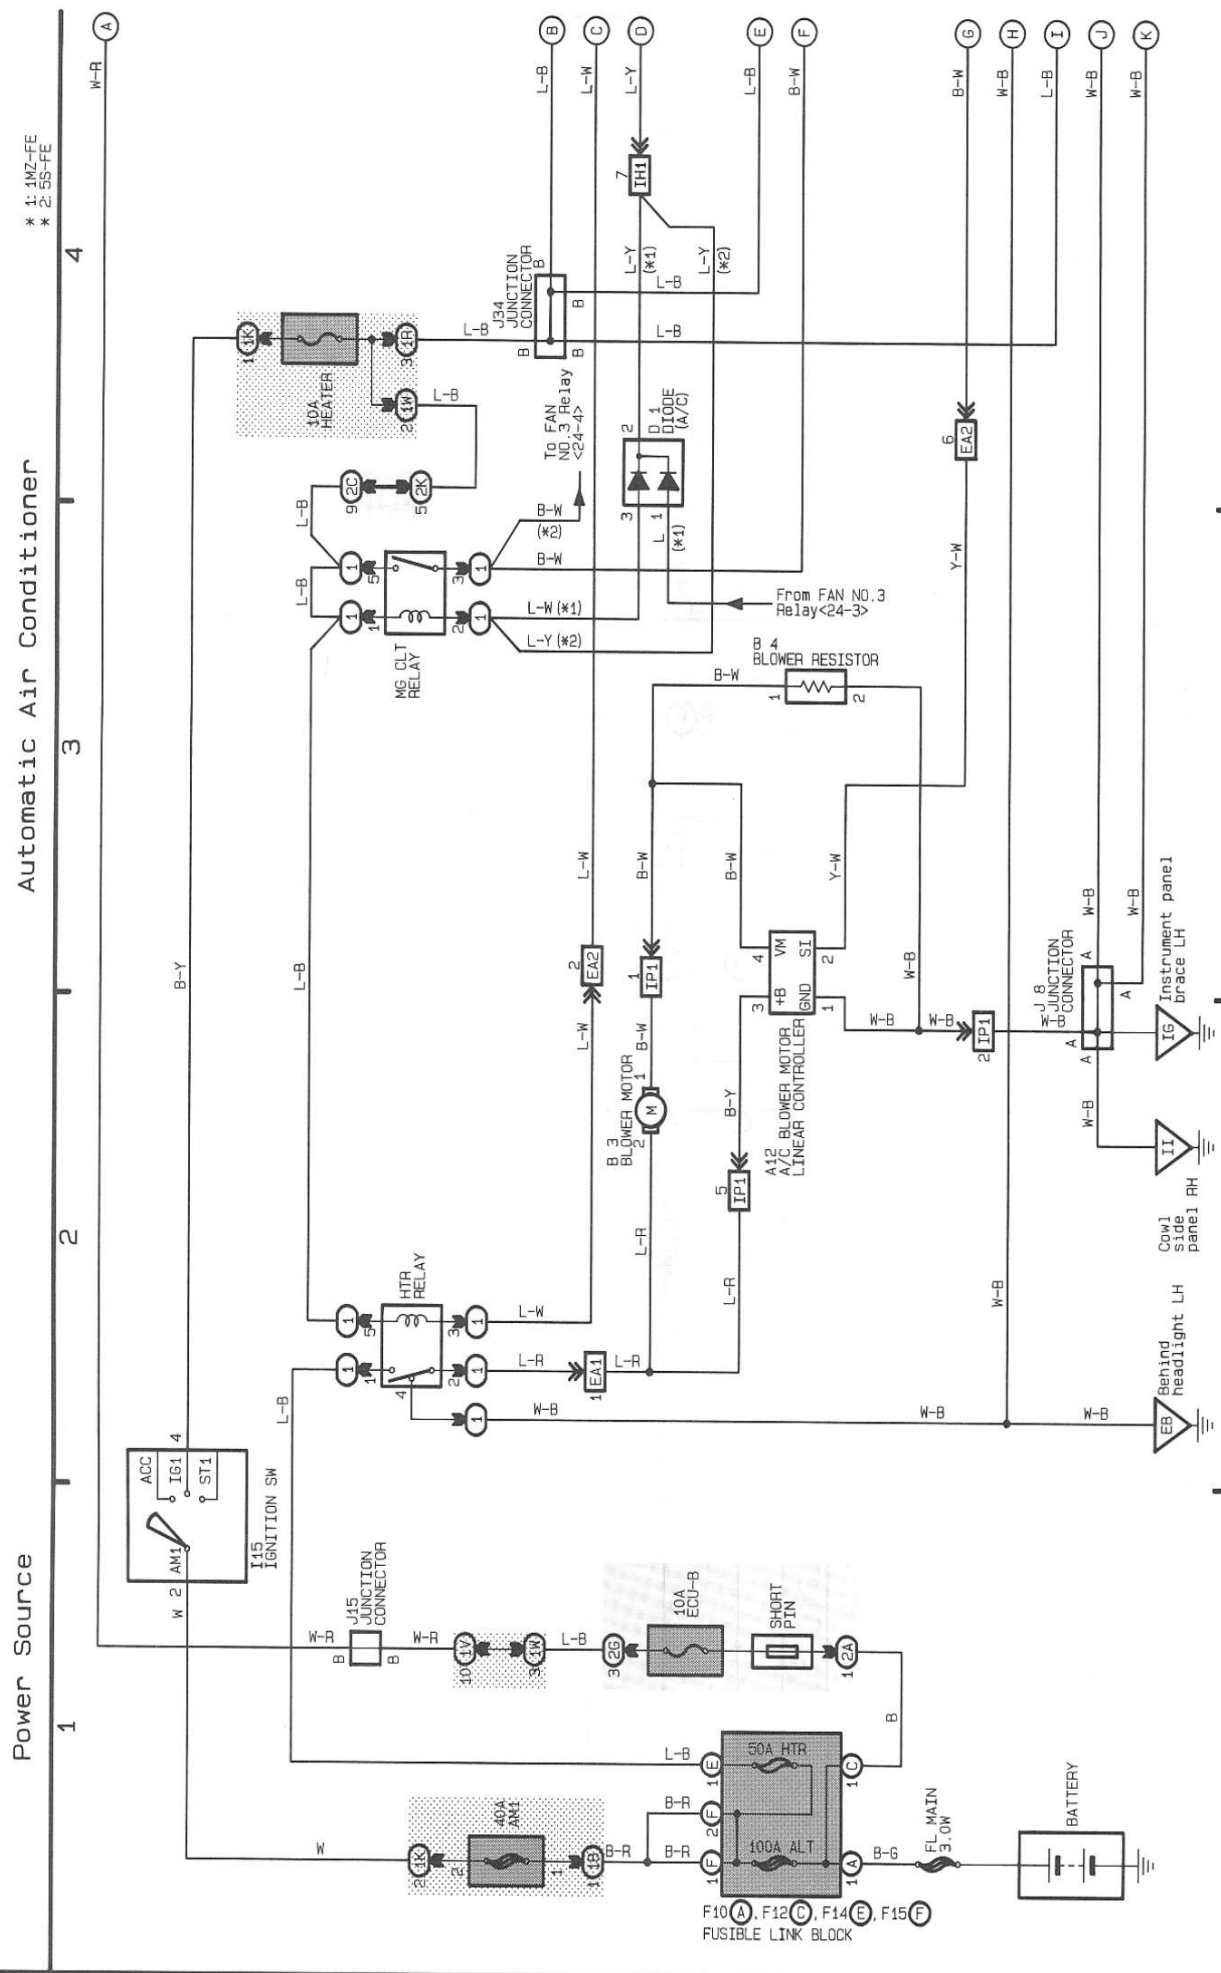

Automatic Air Conditioner

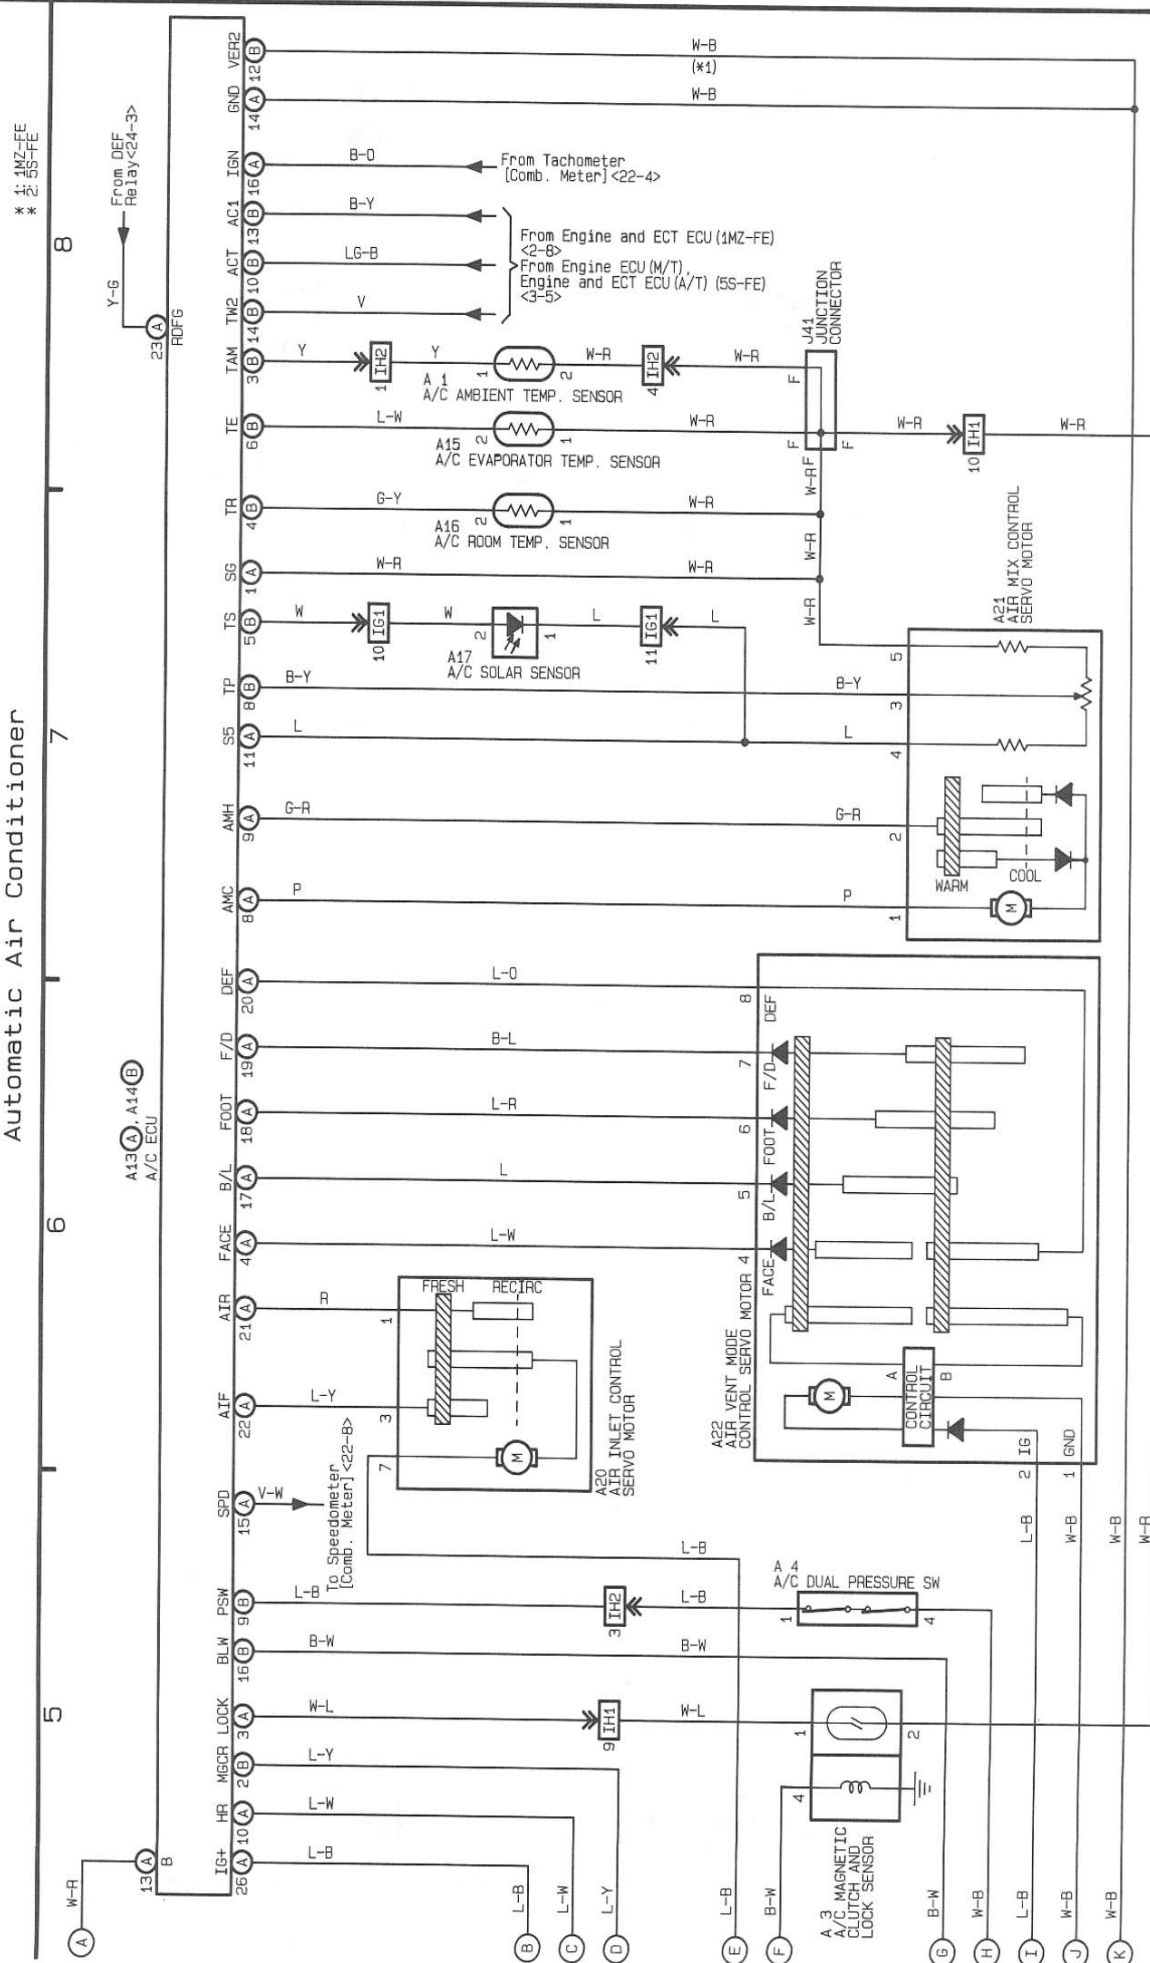

24 CAMRY (LHD)

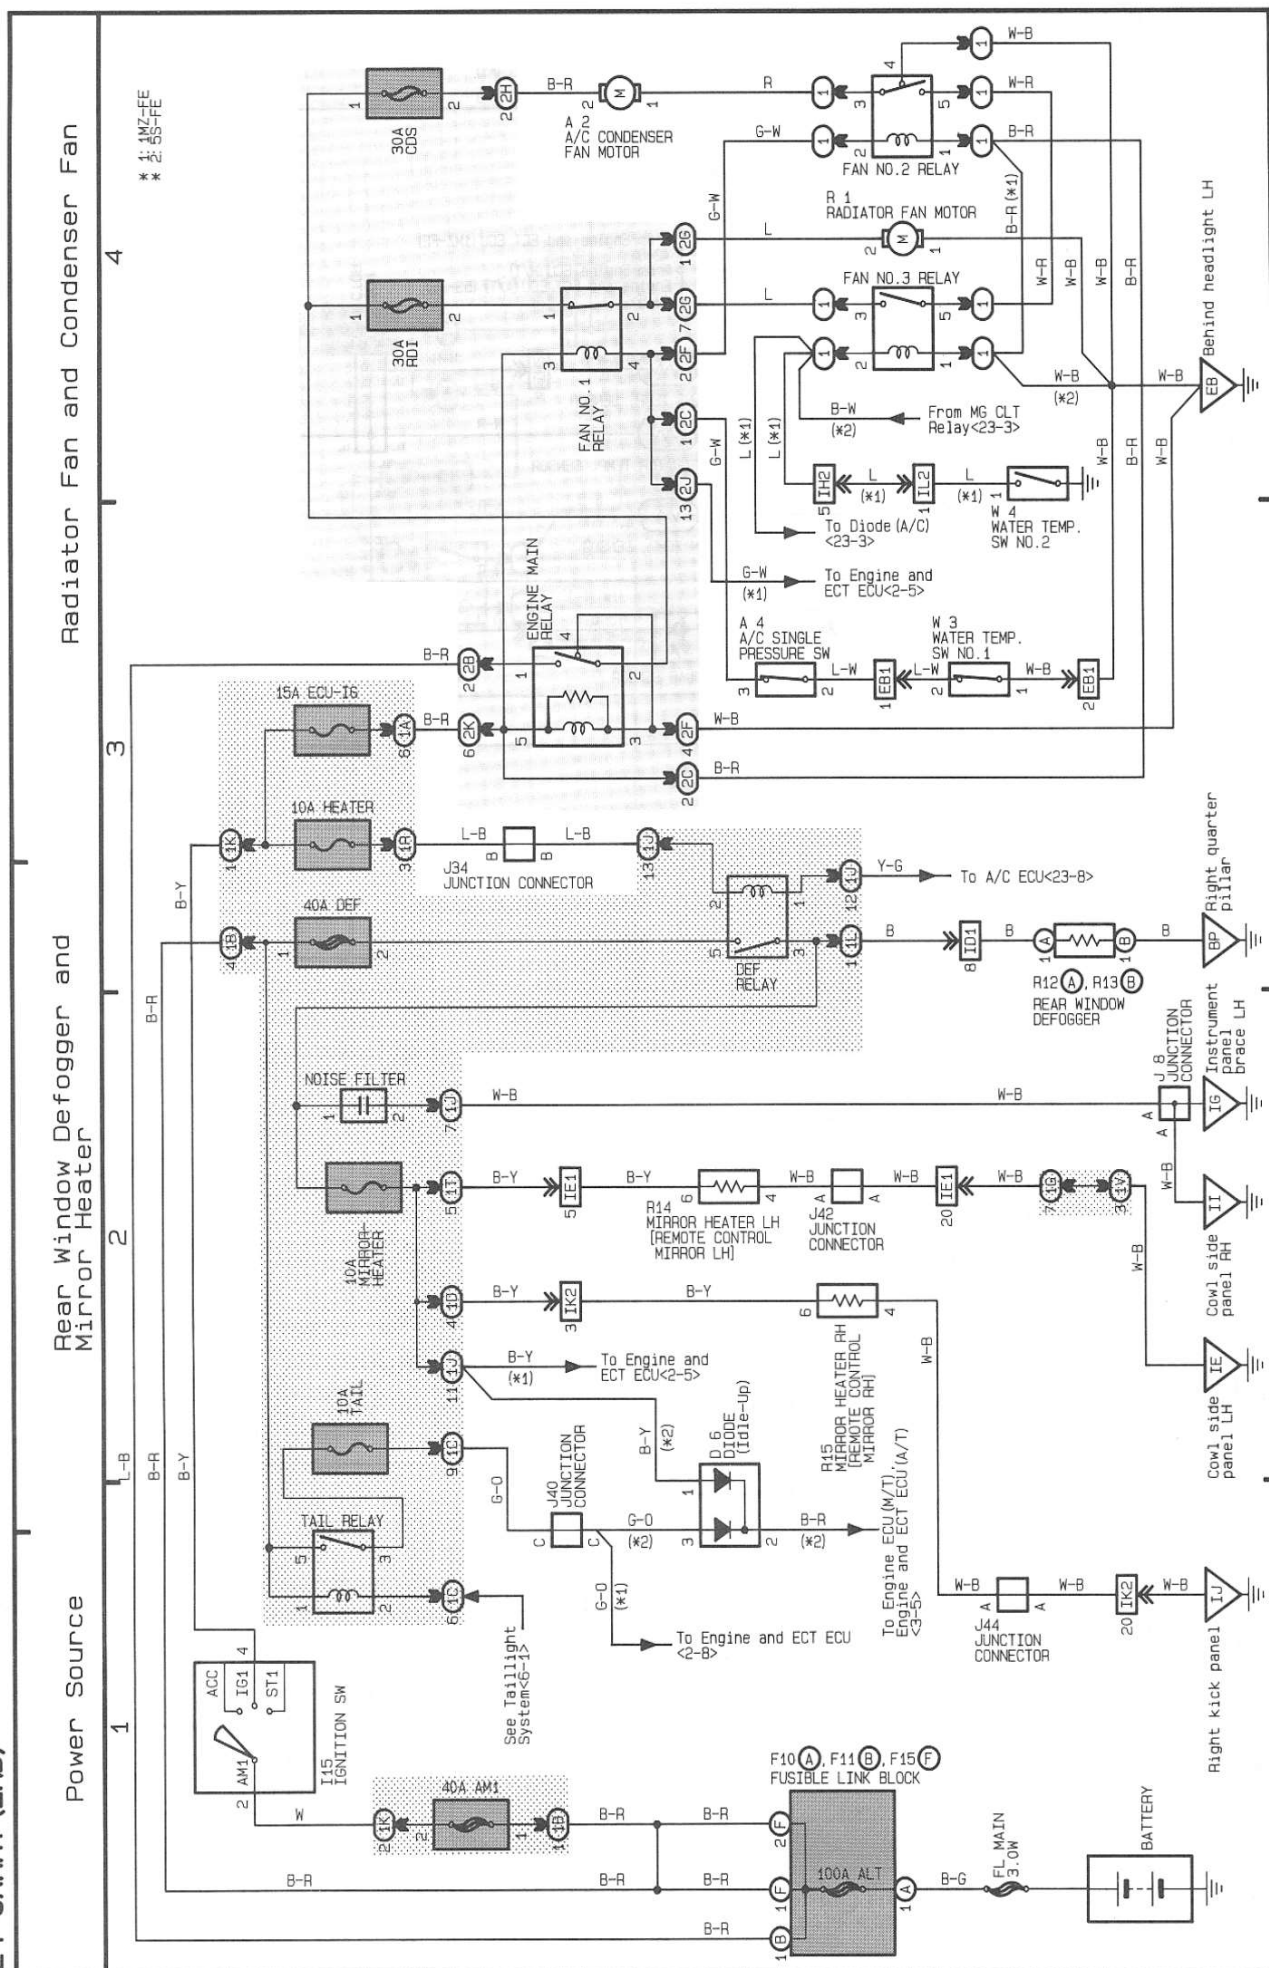



OVERSEAS SERVICE DIVISION
TOYOTA MOTOR CORPORATION

PRINTED IN JAPAN(S)