





F RELAY LOCATIONS

[Engine Compartment]

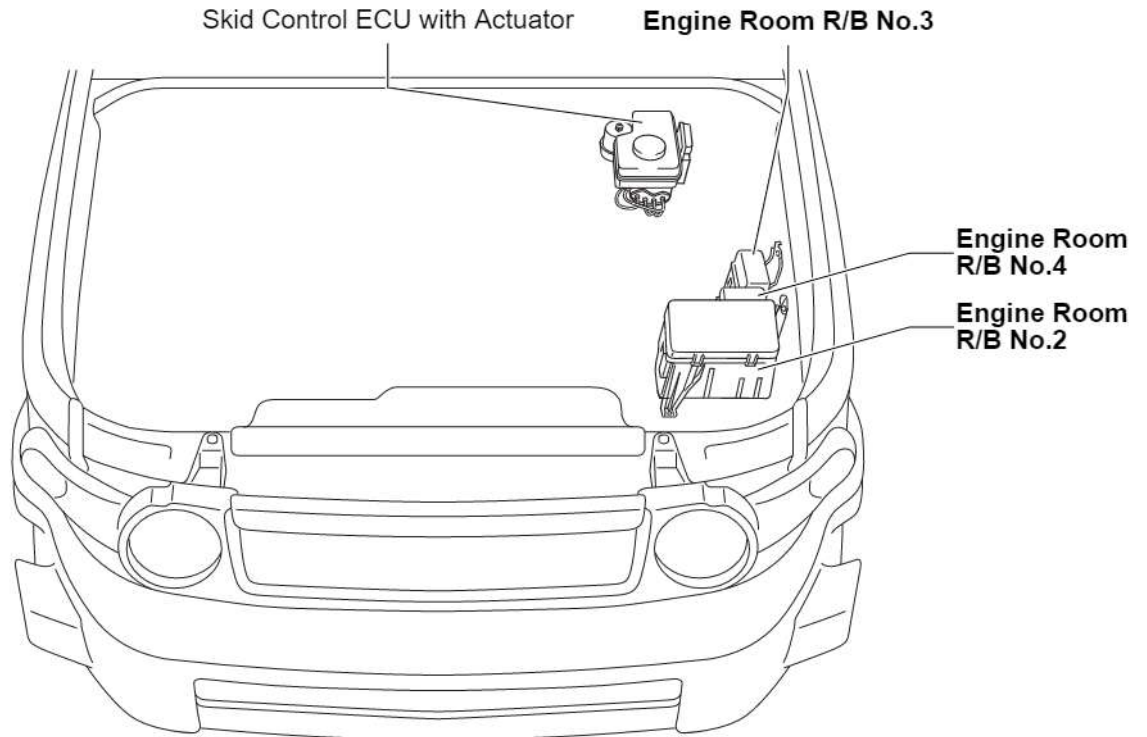

[Instrument Panel]

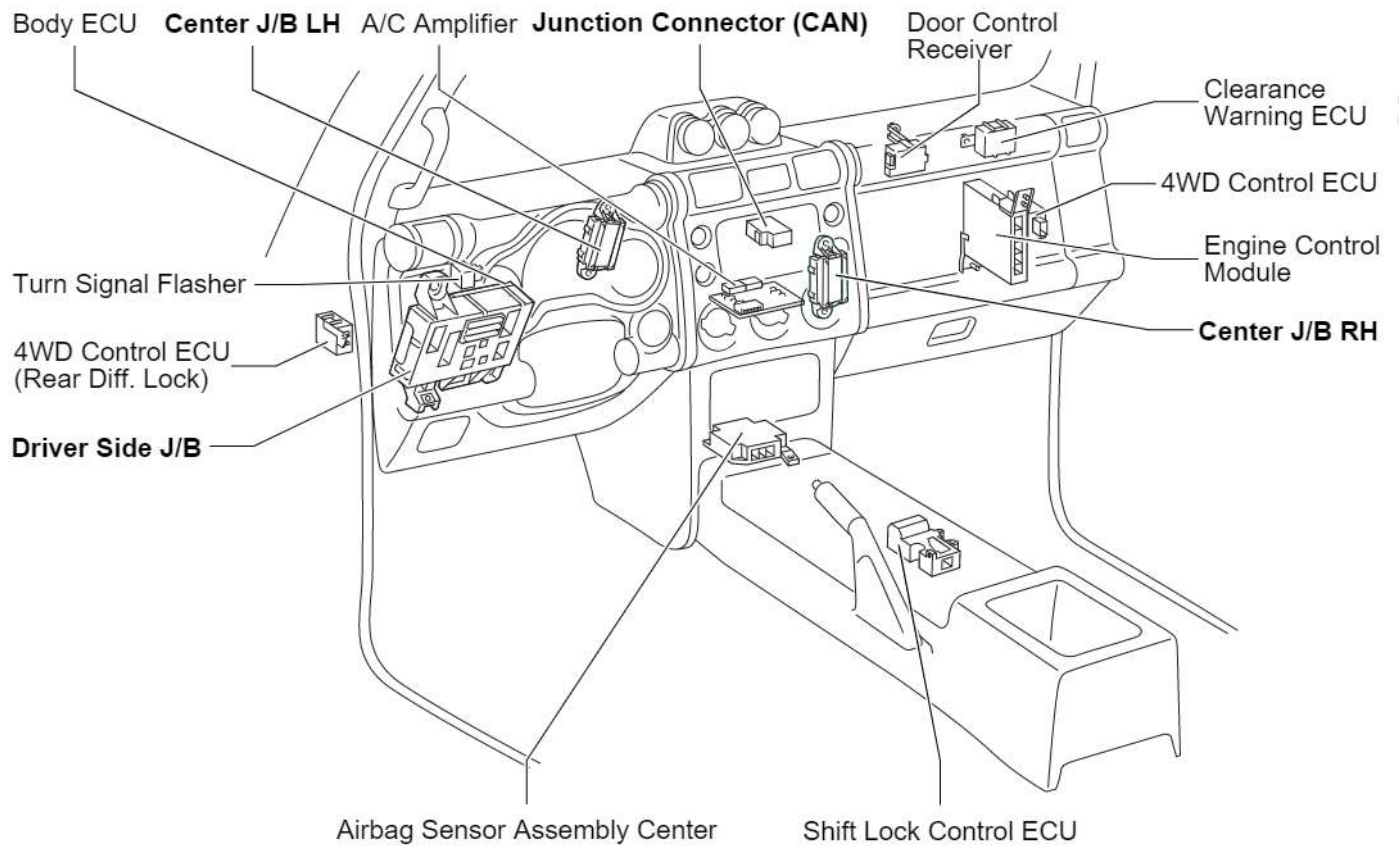


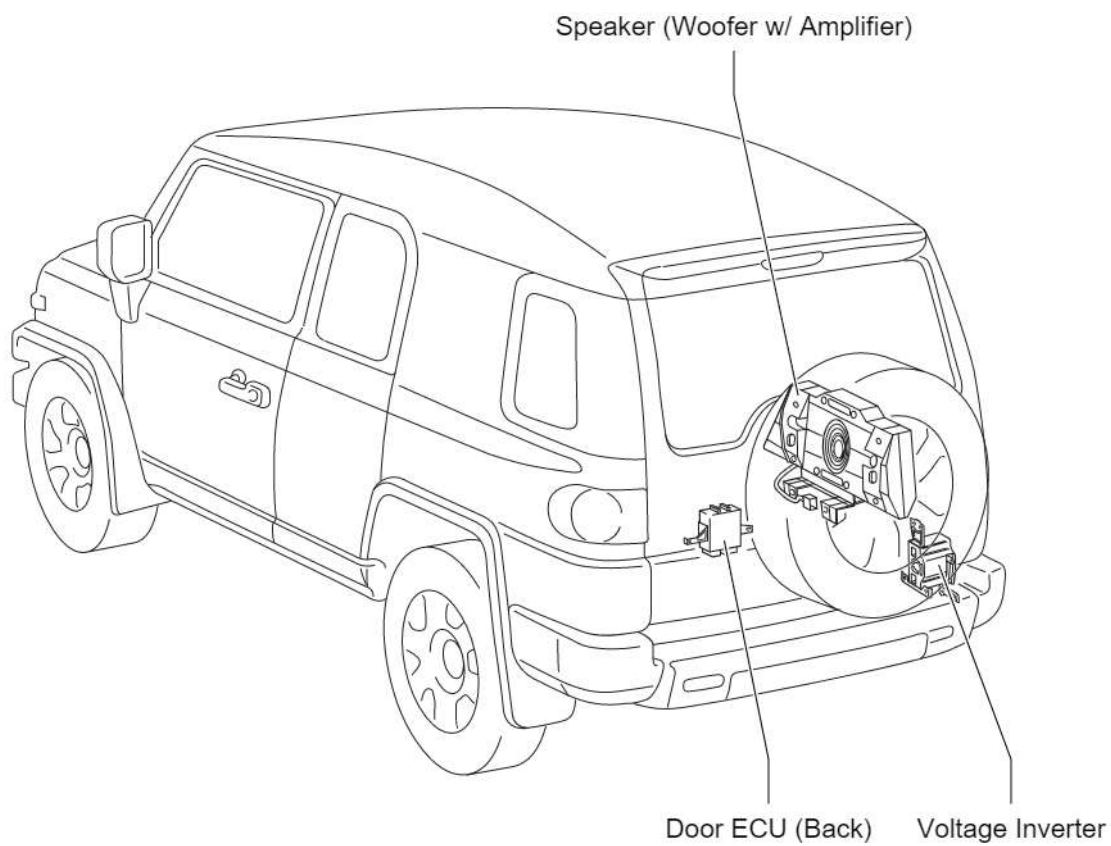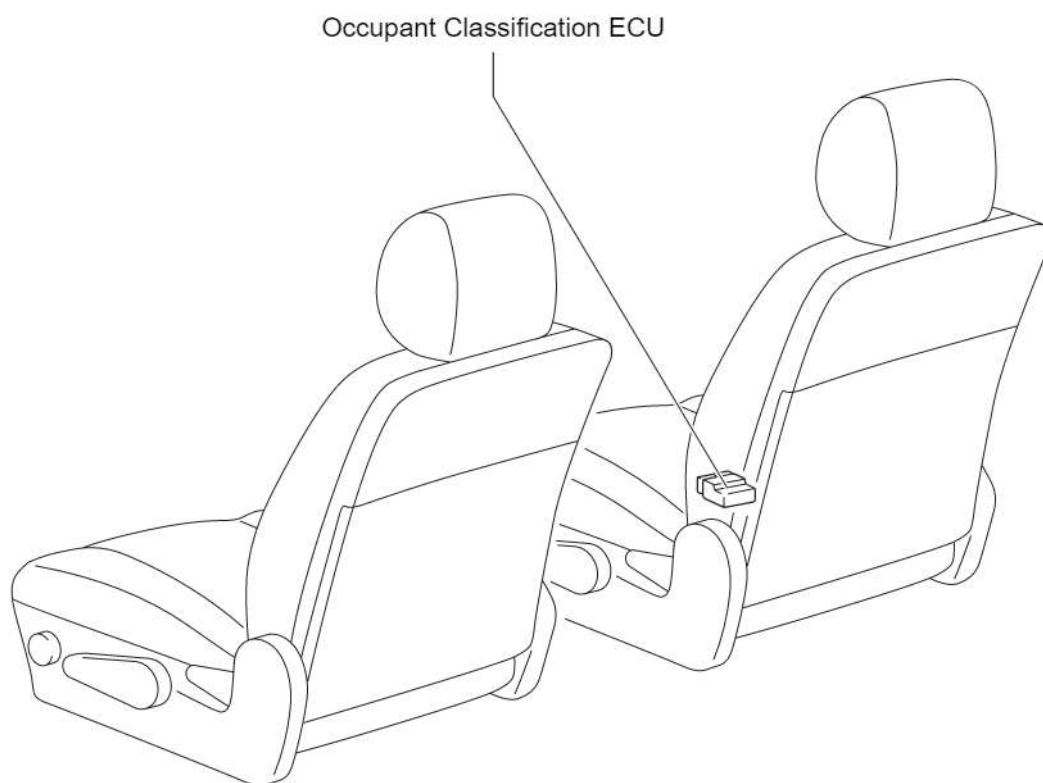[Body]**[Seat]**


F RELAY LOCATIONS

② : Engine Room R/B No.2 Engine Compartment Left (See Page 20)


- * 1: STA Relay
- * 2: MG CLT Relay
- * 3: AUX LP Relay
- * 4: HEATER Relay
- * 5: TOWING TAIL Relay
- * 6: A/F HEATER Relay
- * 7: EFI Relay
- * 8: DOME Relay
- * 9: C/OPN Relay
- * 10: RADIO NO.1
- * 11: HEAD(LO LH)
- * 12: HEAD(HI LH)

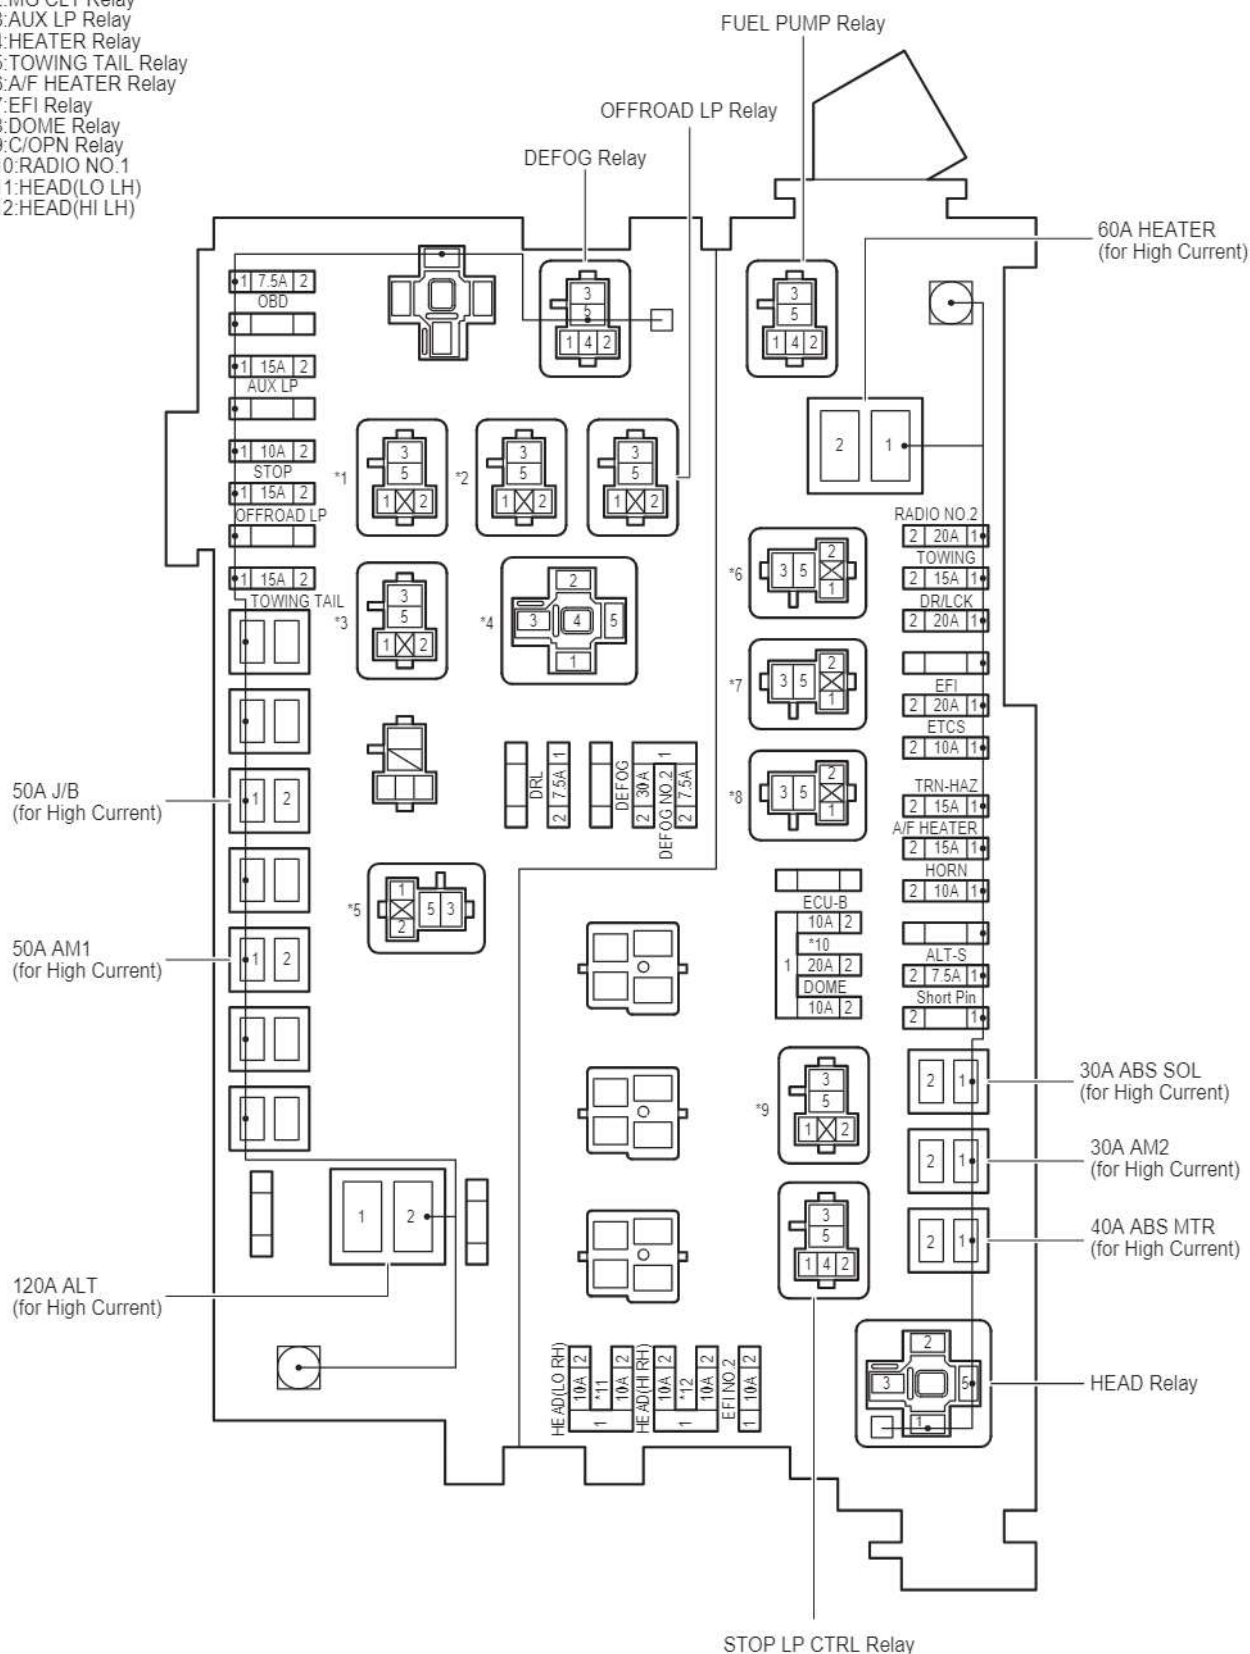

③ : Engine Room R/B No.3 Engine Compartment Left (See Page 20)

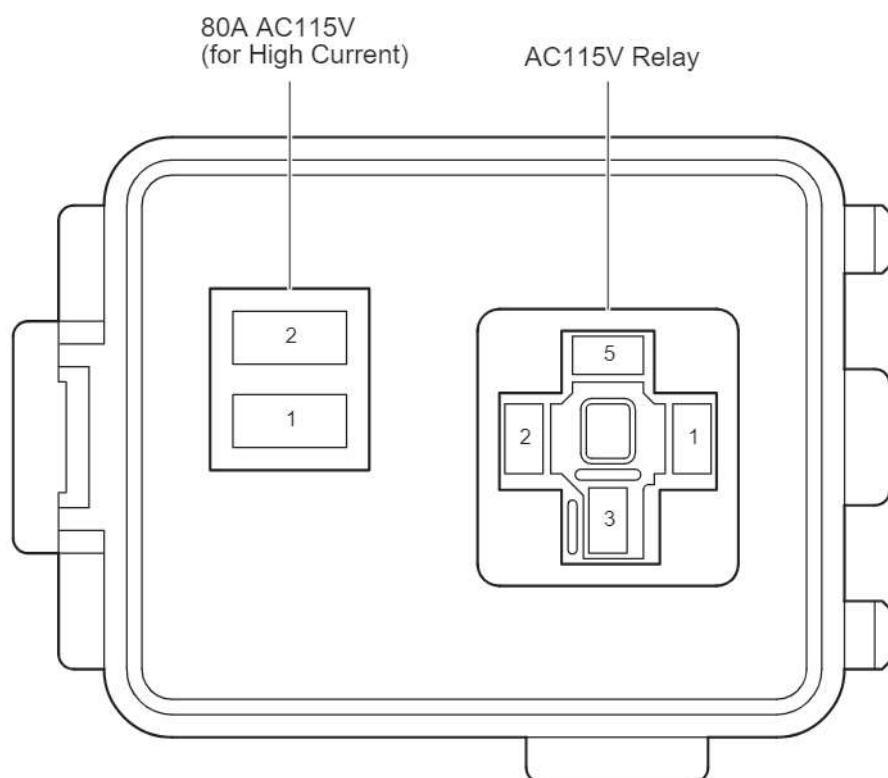


④ : Engine Room R/B No.4 Engine Compartment Left (See Page 20)

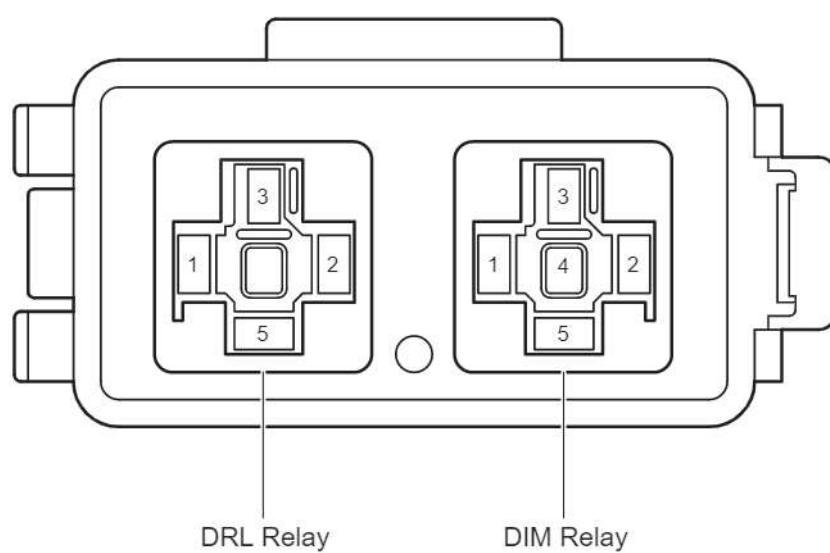


F RELAY LOCATIONS

○ : Driver Side J/B


Lower Finish Panel (See Page 20)

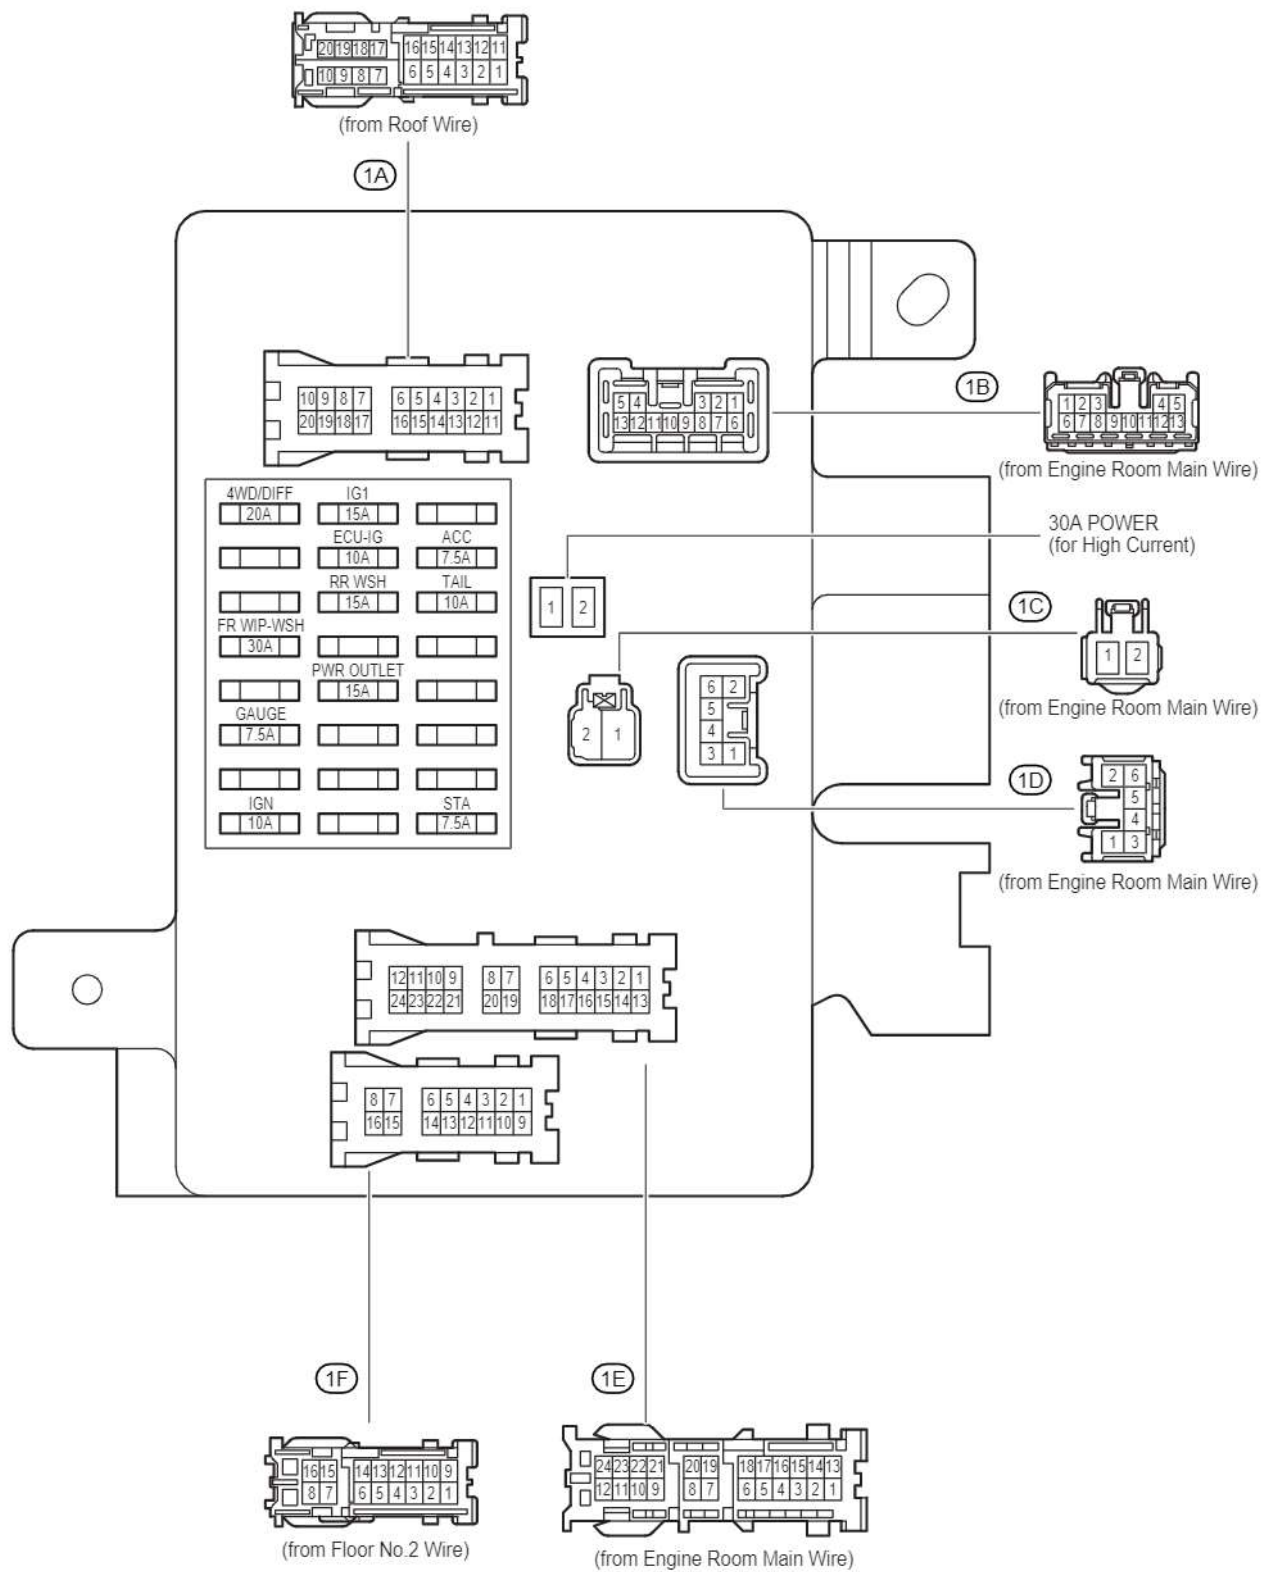

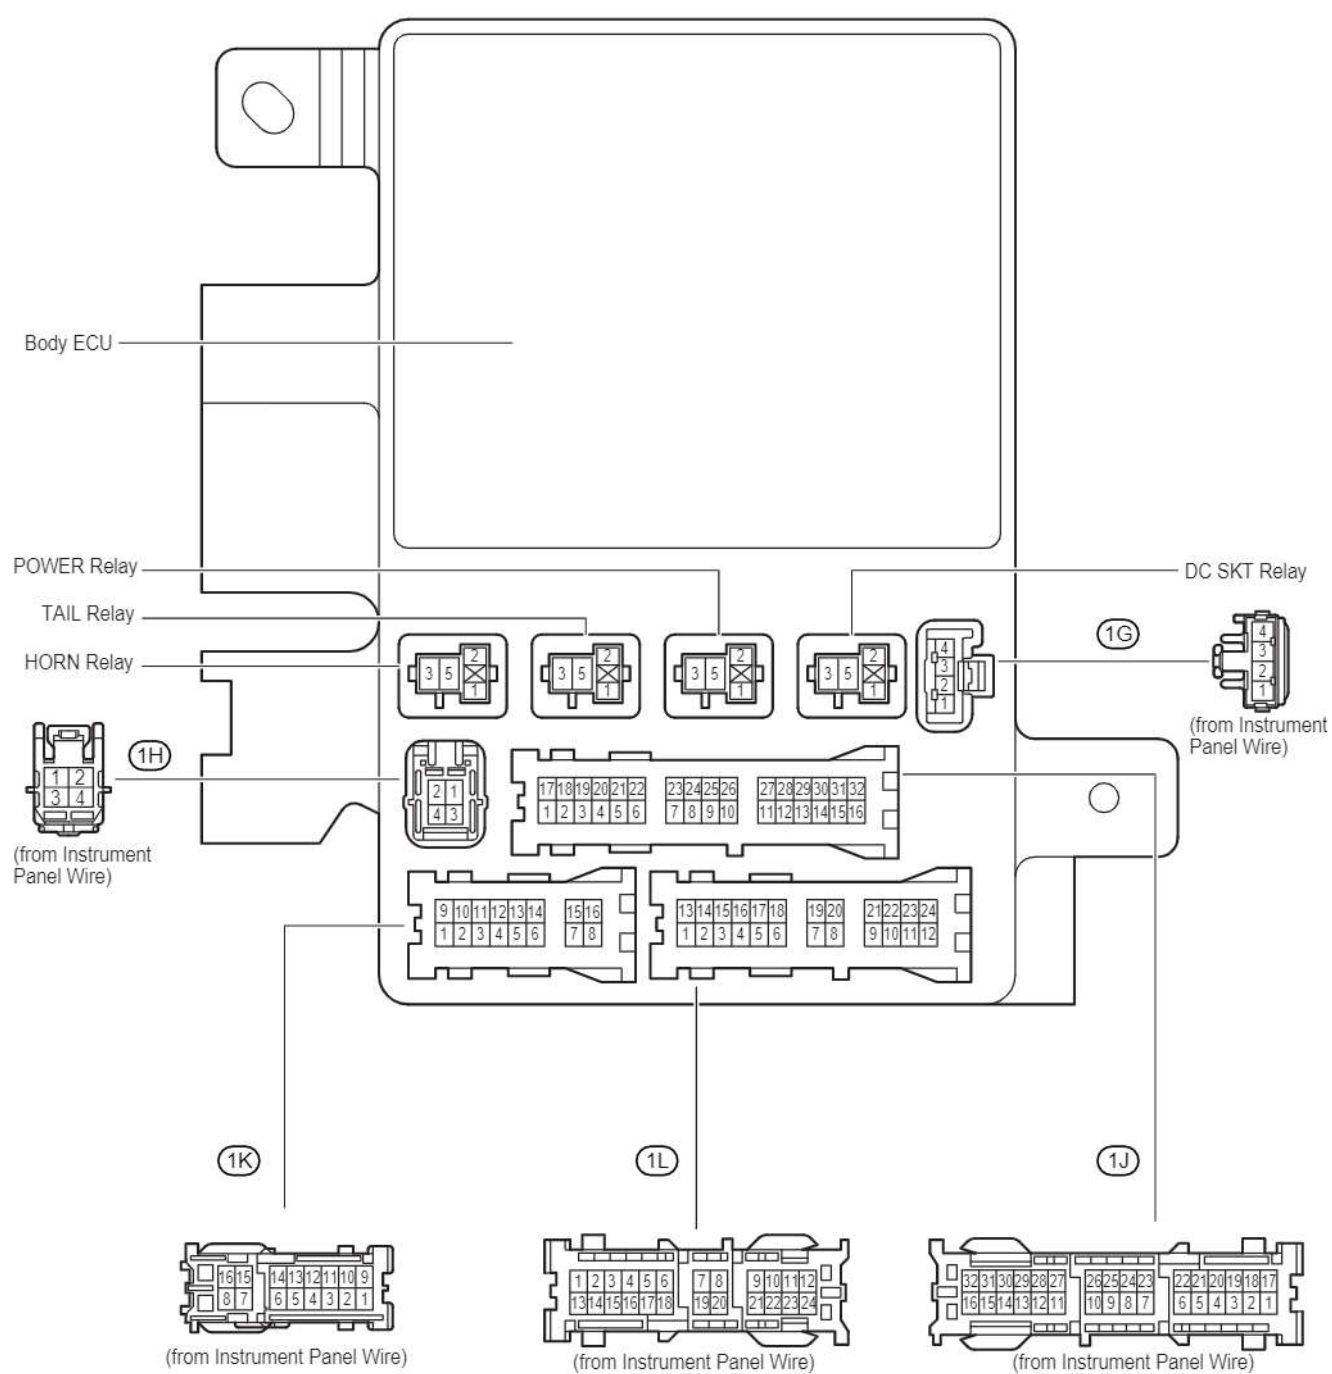


F RELAY LOCATIONS

[Driver Side J/B Inner Circuit]

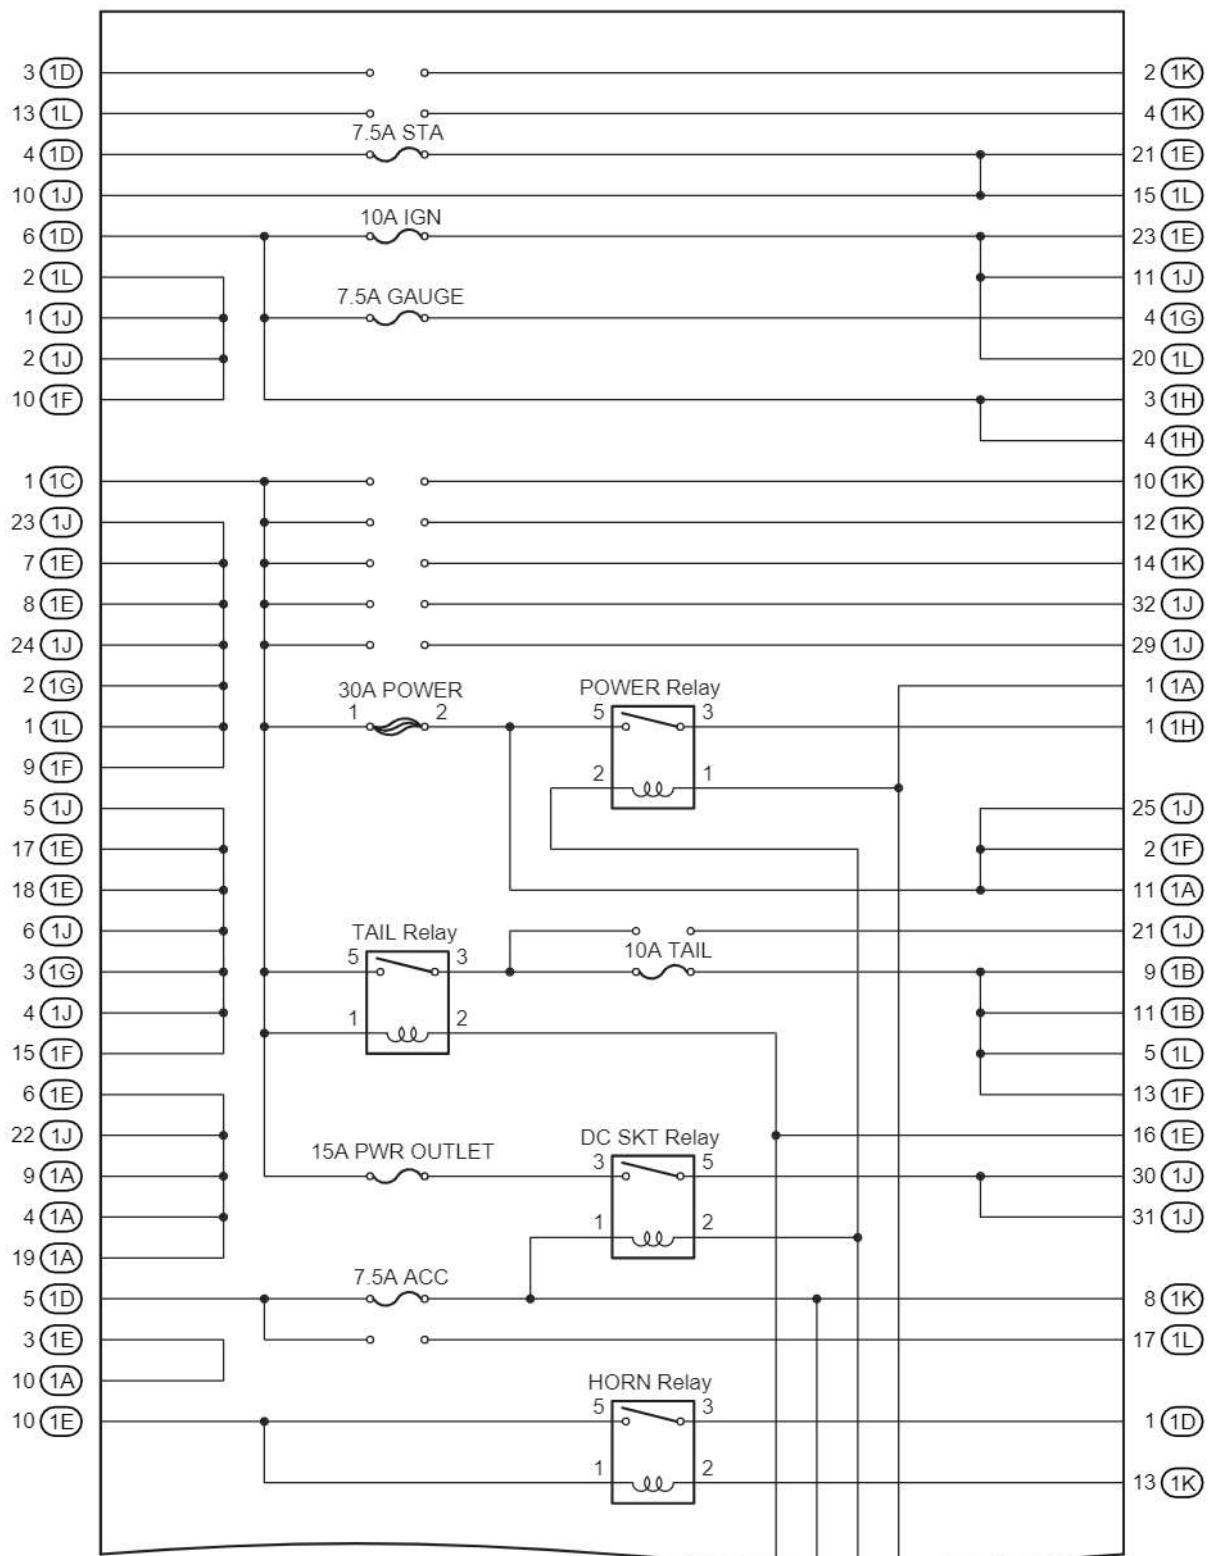


(Cont. Next Page)

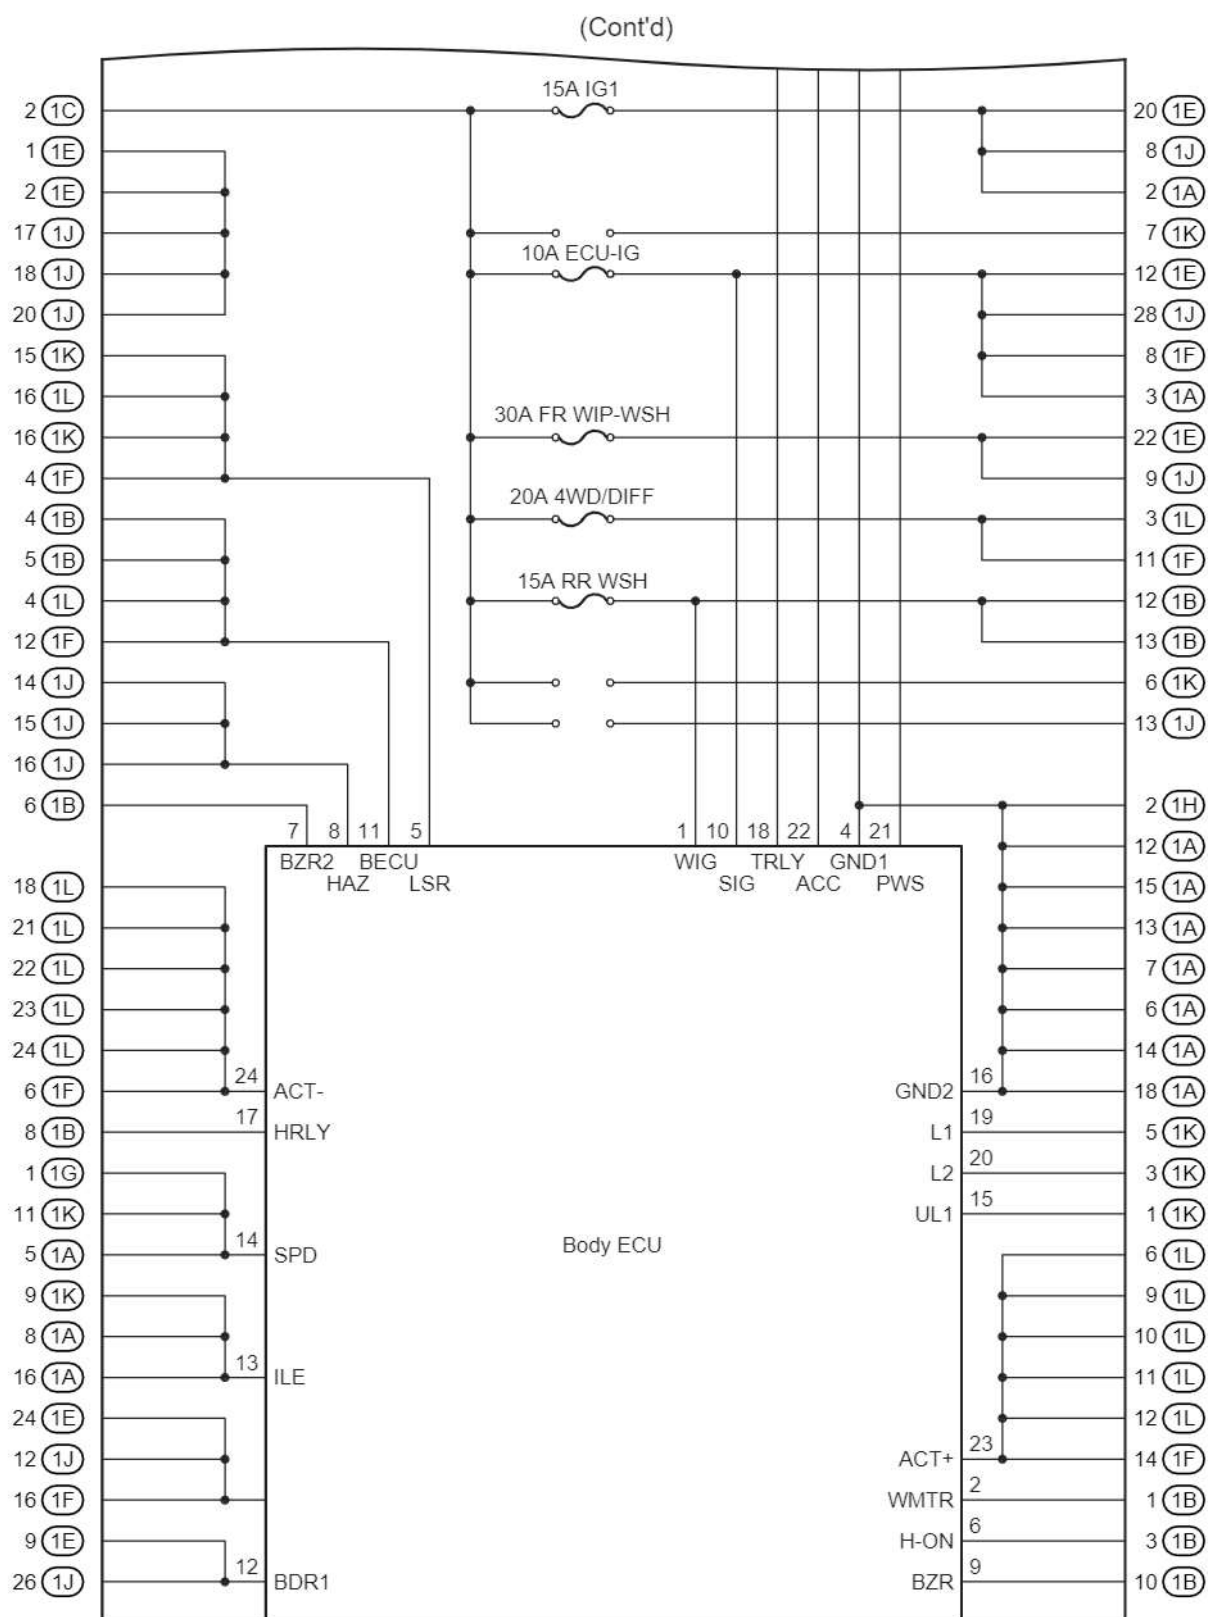


F RELAY LOCATIONS

 : Center J/B LH	Instrument Panel LH (See Page 20)
---	-----------------------------------

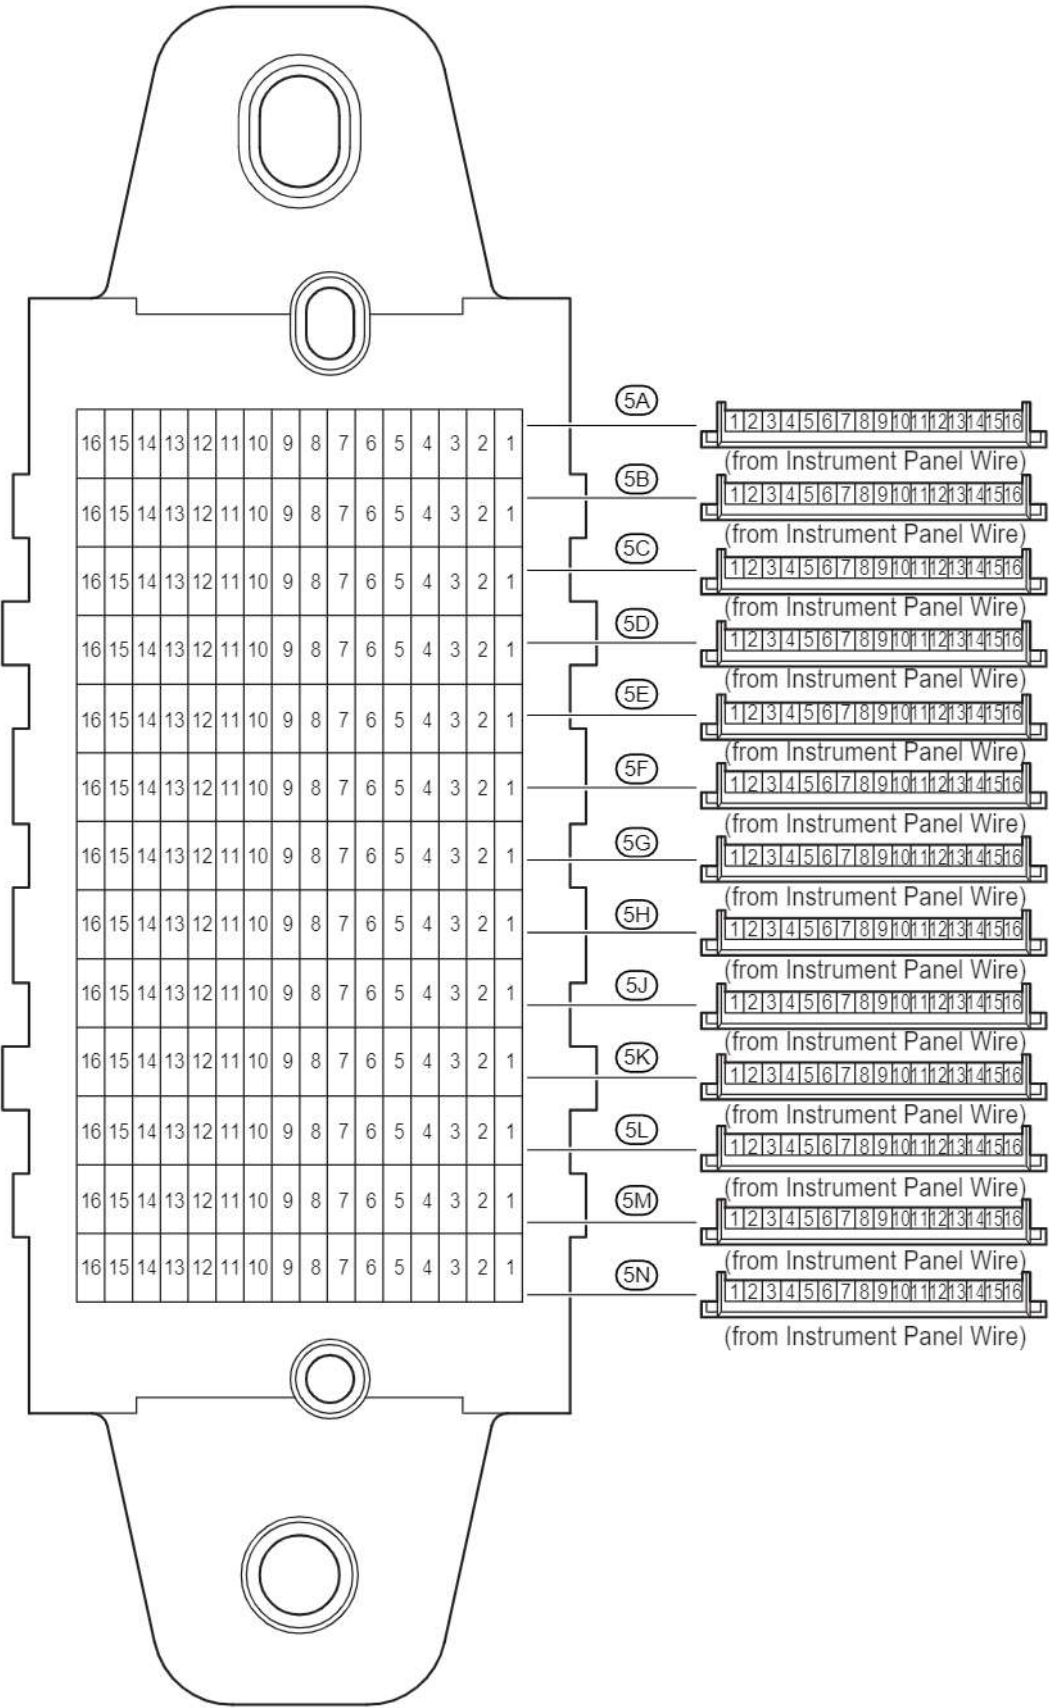


[Center J/B LH Inner Circuit]

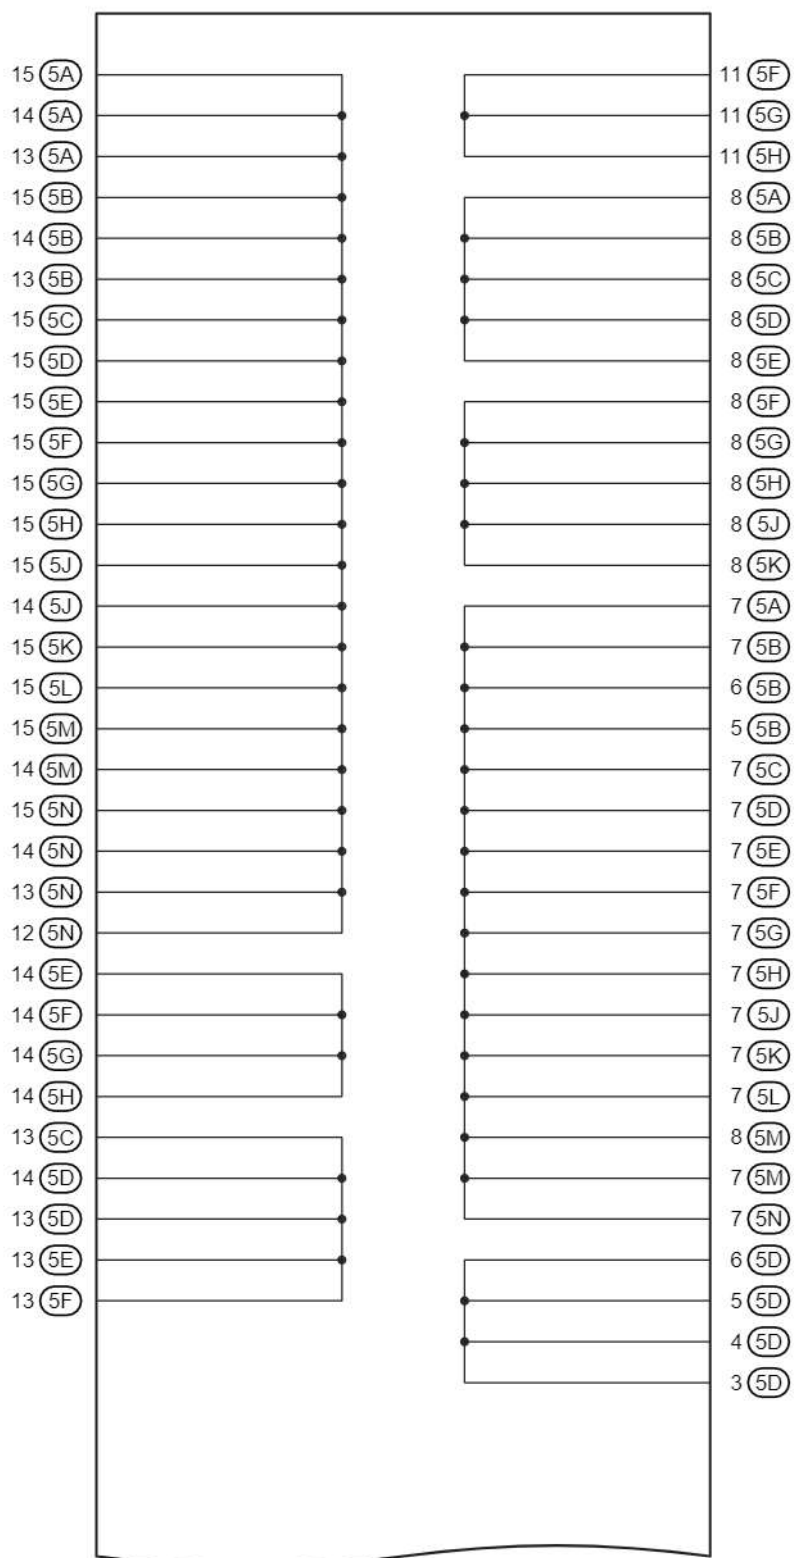


(Cont. Next Page)

F RELAY LOCATIONS

[Center J/B LH Inner Circuit]

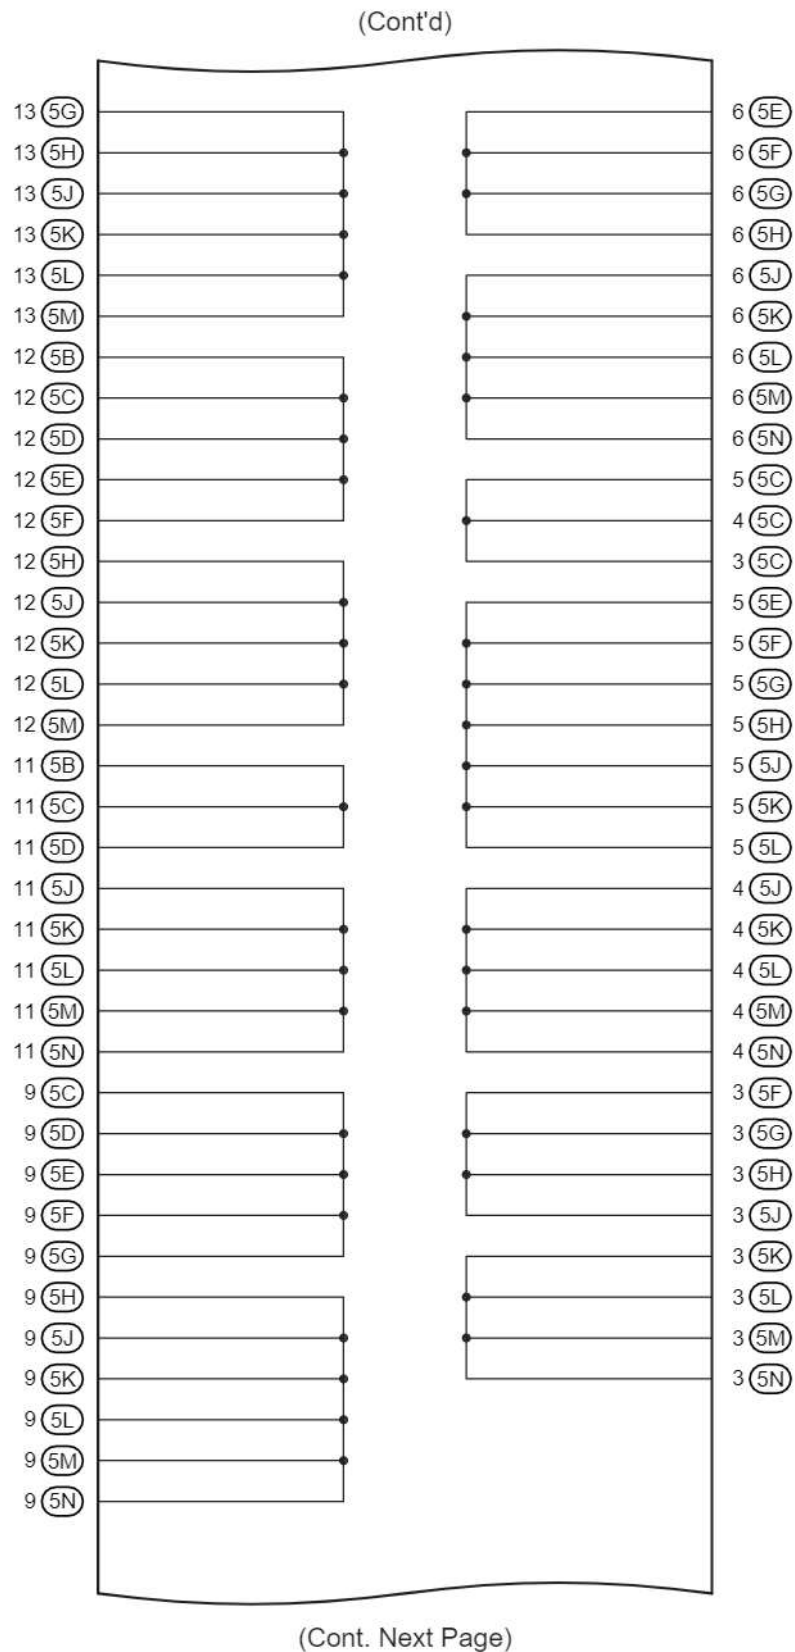


(Cont'd)

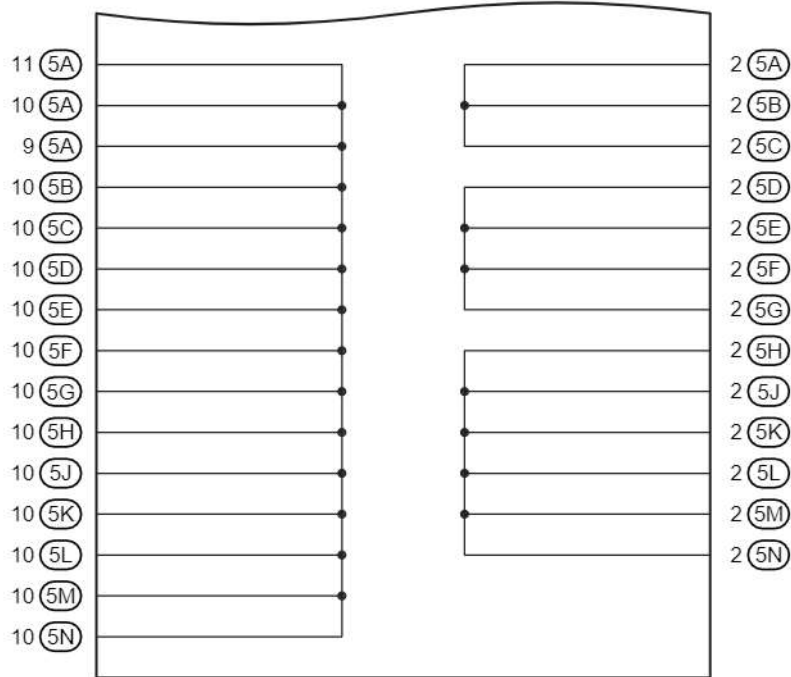


F RELAY LOCATIONS

○ : Center J/B RH

Instrument Panel RH (See Page 20)

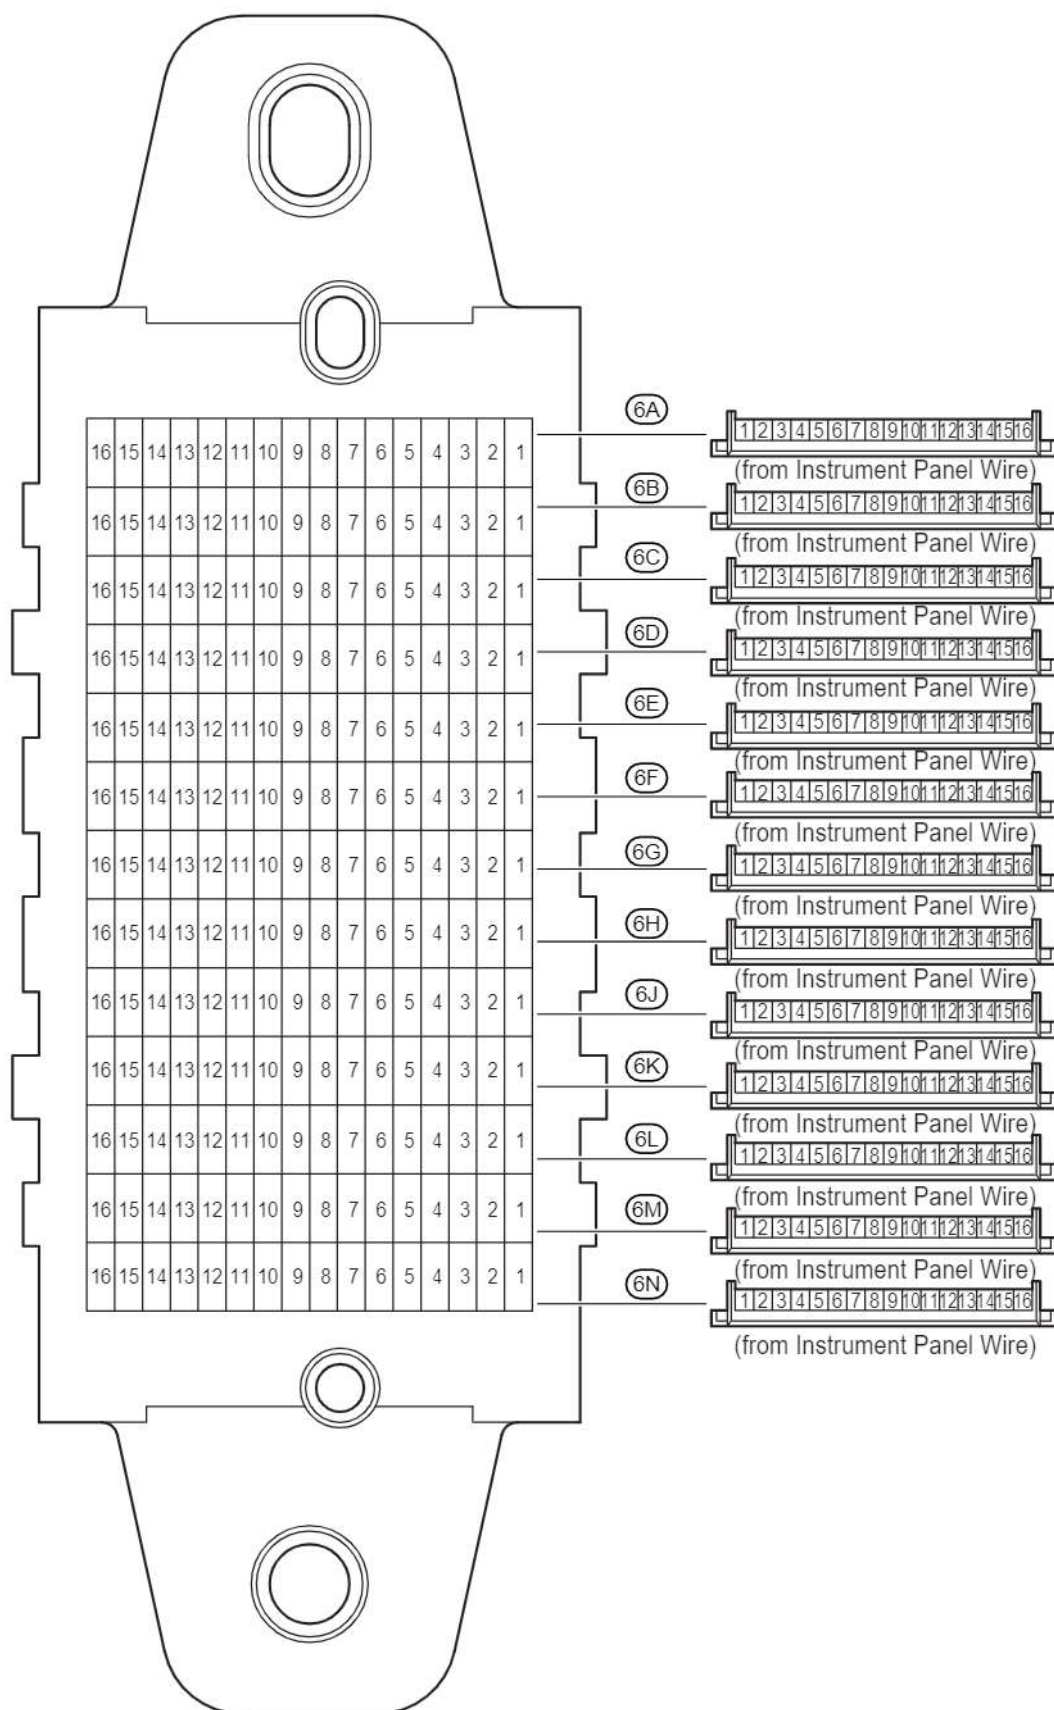


[Center J/B RH Inner Circuit]

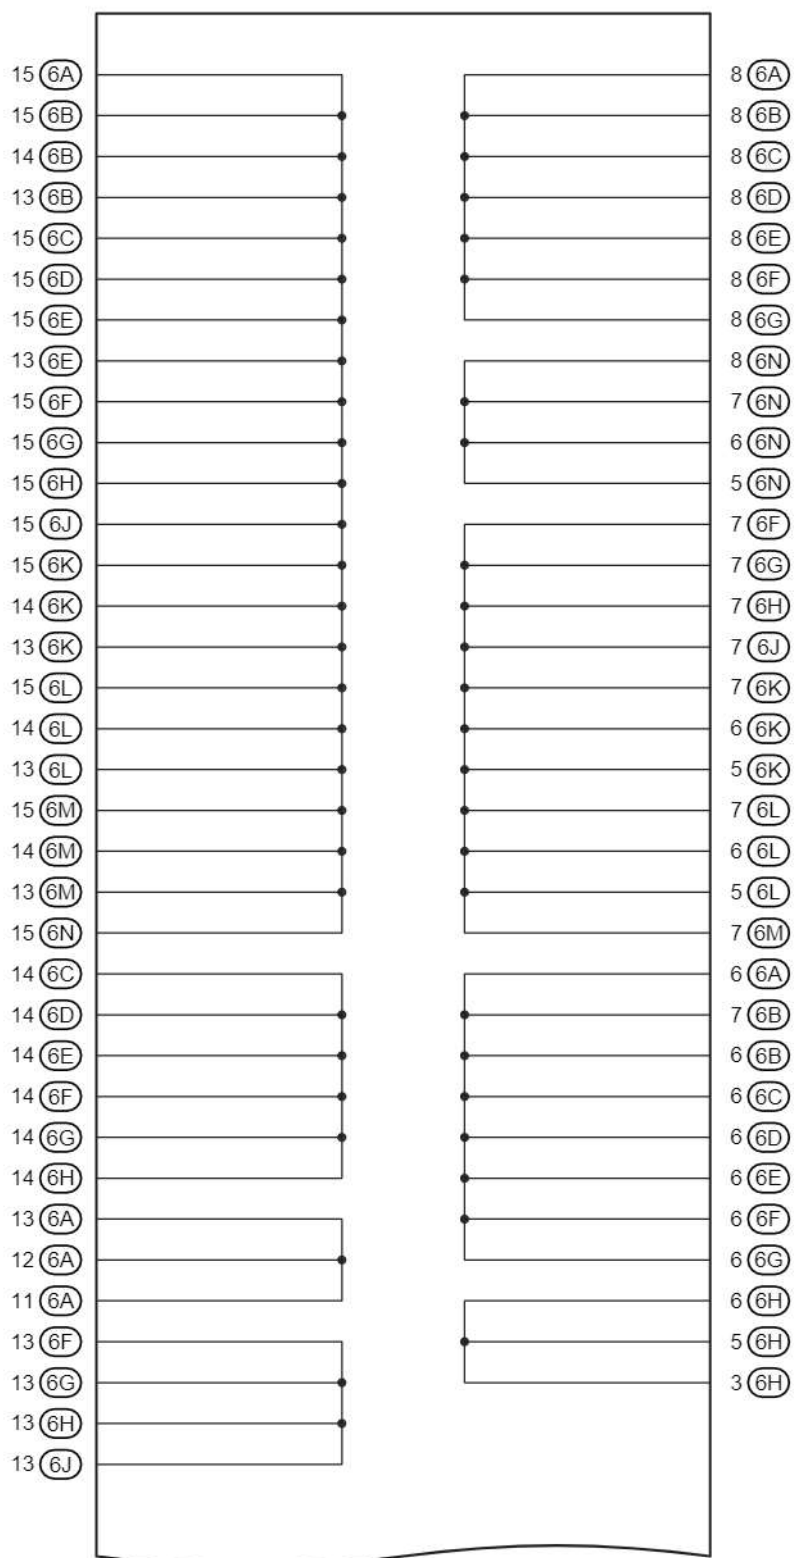


(Cont. Next Page)

F RELAY LOCATIONS

[Center J/B RH Inner Circuit]

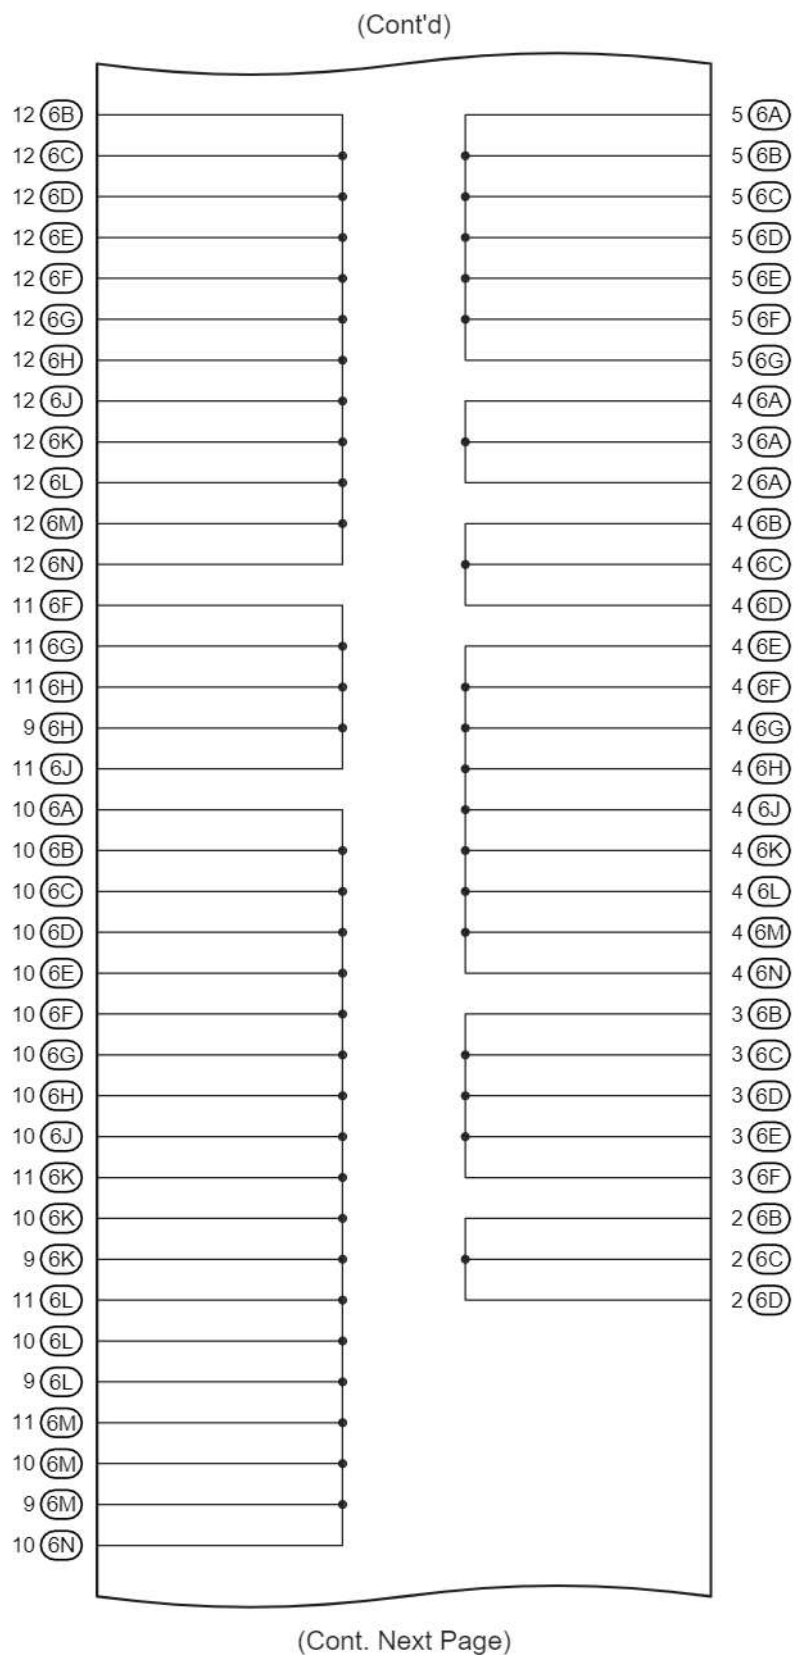

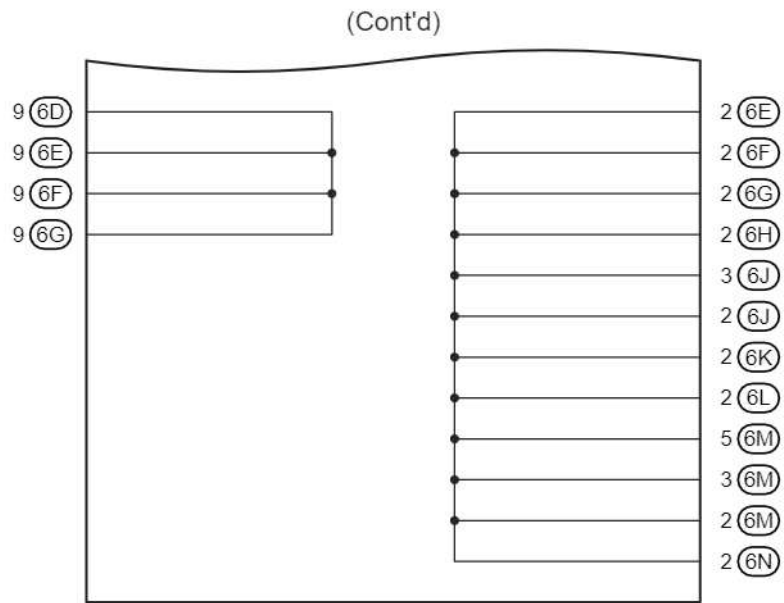


F RELAY LOCATIONS

Junction Connector

Instrument Panel Center (See Page 20)

(CAN)

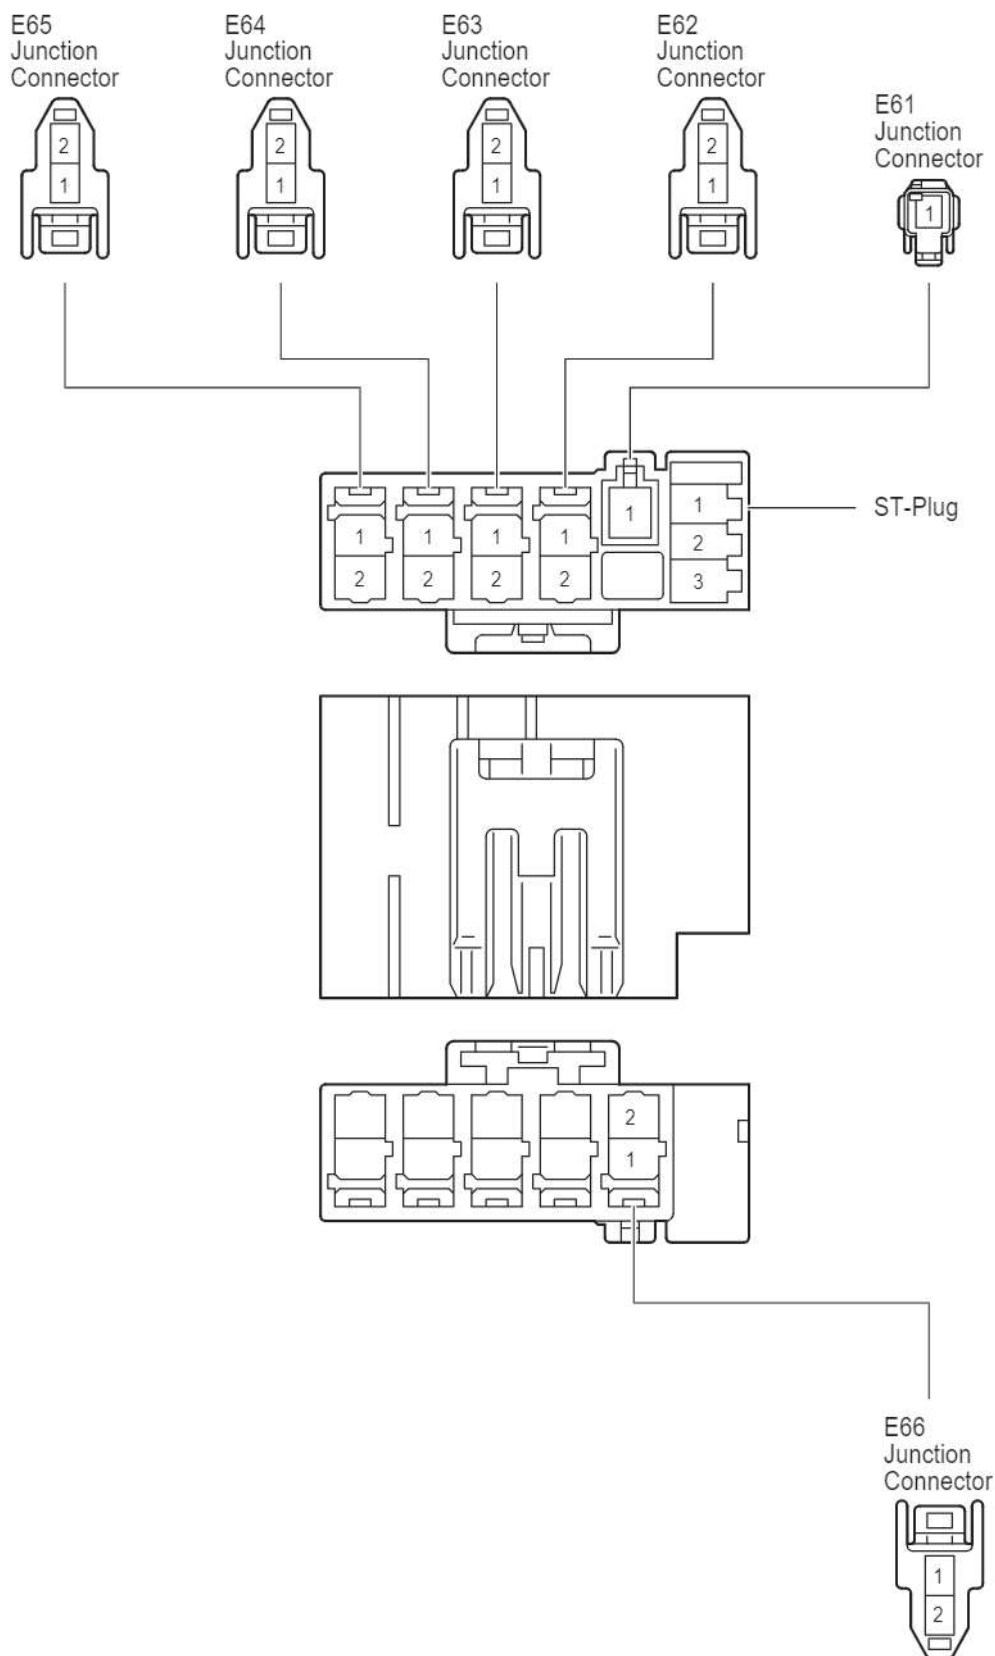

[Junction Connector Inner Circuit] (CAN)

