 


Chevrolet Malibu 2008 – 2012 fuse box diagram

Passenger Compartment Fuse Box

The instrument panel fuse block is located on the instrument panel near the floor on the passenger side of the vehicle.

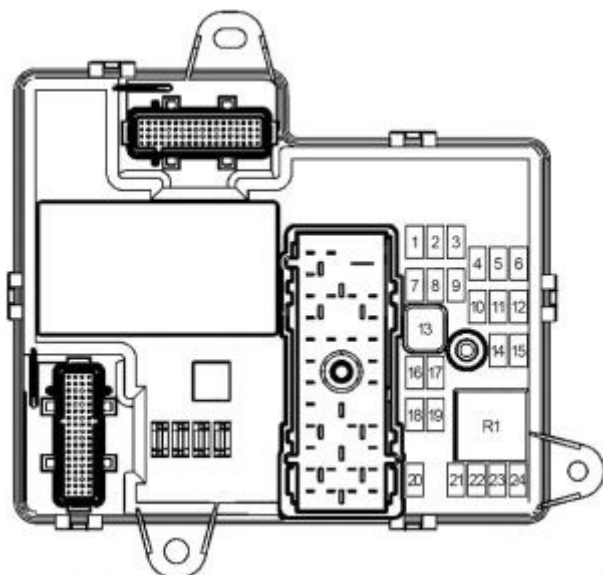


Chevrolet Malibu – fuse box diagram – passenger

compartment

No.	A	Protected Component
1	15	Body Control Module (Door Locks)
2	10	Body Control Module (Interior Lamps)
3	2	Steering Wheel Controls
4	10	'08: Adjustable Pedals Module, Adjustable Pedals Position Switch
5	10	Vehicle Communication Interface Module (VCIM (OnStar))
6	2	Outside Rearview Mirror Switch
7	10	Heated Seat Control Module (Driver/Passenger), Heated Seat Switch (Driver/Passenger), Inside Rearview Mirror, Sunroof Control Module
8	–	–
9	–	–
10	10	Windshield Wiper/Washer Switch
11	–	–
12	2	Power Steering Control Module
13	30	Power Windows
14	10	Inflatable Restraint Sensing and Diagnostic Module (SDM)
15	2	A/T Shift Lock Control Assembly, Cruise Control On/Off Switch, Passenger Airbag Status Indicator
16	–	–
17	10	Heating Ventilation Air Conditioning (HVAC) Control Module
18	–	–

19	20	Heating Ventilation Air Conditioning (HVAC) Blower Switch
20	10	Inflatable Restraint Sensing and Diagnostic Module (SDM)
21	10	Audio System
22	2	Ignition Switch
23	10	Data Link Connector (DLC), Heating Ventilation Air Conditioning (HVAC) Control Module
24	10	Instrument Panel Cluster, Theft Deterrent Control Module
Relay		
R1	Blower Motor	
Relay (Non-Serviceable)		
R2	Power Door Lock (Lock)	
R3	Power Door Lock (Unlock)	
R4	Driver Door Lock Actuator (Unlock)	
R5	Interior Lamps	
No.	Relay	
R1	Accessory (Power Window, Sunroof, Heated Seat, Windshield Wiper/Washer Switch)	
R2	Run (Heating Ventilation Air Conditioning (HVAC))	

 Engine Compartment Fuse Box

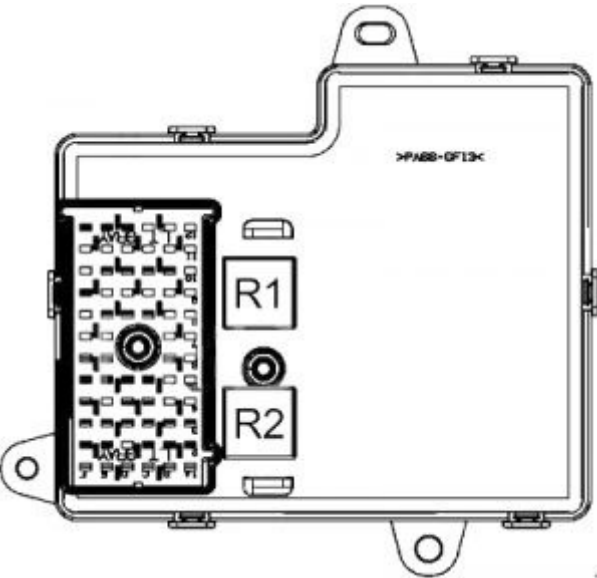

Chevrolet Malibu – fuse box diagram – engine

compartment

No.	A	Protected Component

1	10	Air Conditioning Compressor Clutch Relay
2	15	Engine Control Module (ECM)
3	10	3.5L (LZ4, LZE): Engine Control Module (ECM)
	10	2.4L (LAT): Generator Battery Disconnect Control Module, Starter Generator Control Module (SGCM)
4	10	1-2 Shift Solenoid Valve, 2-3 Shift Solenoid Valve, 4-3 Shift Solenoid Valve, Torque Converter Clutch Pulse Width Modulation (TCC PWM) Solenoid Valve, Transmission Control Module (TCM)
5	10	3.6L (LY7): Mass Air Flow (MAF)/Intake Air Temperature (IAT) Sensor
	20	2.4L (LAT): Starter Generator Control Module (SGCM) Coolant Pump, Heater Coolant Pump
6	10	Evaporative Emission (EVAP) Canister Purge Solenoid Valve, Heated Oxygen (HO2S) Sensors, Mass Air Flow (MAF)/Intake Air Temperature (IAT) Sensor (2.4L (LAT, LE5, LE9))
7	10	Left Headlamp (Low Beam)
8	15	Horn Relay
9	10	Right Headlamp (Low Beam)

10	15	Front Fog Lamp Relay
11	10	Left Headlamp (High Beam)
12	10	Right Headlamp (High Beam)
13	10	2.4L (LAT, LE5, LE9), 3.6L (LY7): Engine Control Module (ECM), Telematic Vehicle Localization and Immobilization Control Module
14	25	Wiper 1 Relay, Wiper 2 Relay, Windshield Wiper Motor Assembly
15	10	ABS (Electronic Brake Control Module (EBCM))
16	10	2.4L (LAT, LE5, LE9), 3.6L (LY7): Engine Control Module (ECM), Telematic Vehicle Localization and Immobilization Control Module
17	30	Cooling Fan Relay No.1
18	30	Cooling Fan Relay No.2
	40	3.6L (LY7 – 2012): Cooling Fan Relay No.2
19	30	Blower Motor Control Module, Blower Motor Relay, "RUN" Relay
20	30	Body Control Module (BCM), Fuse (Passenger Compartment): "20", "21", "22", "23", "24"


21	30	Fuse (Passenger Compartment): "12", "14", "15"
22	60	Fuse (Luggage Compartment): "10", "13", "14", "16", "17", "20", "23"
23	60	Fuse (Luggage Compartment): "1", "2", "5", "6", "22", "25"
24	60	ABS (Electronic Brake Control Module (EBCM))
25	50	Body Control Module, Fuse (Passenger Compartment): "1", "2", "5", "6", Accessory Relay
26	30	Starter Relay
41	80	2.4L (LE5, LE9, LAT): Power Steering Control Module
42	10	Transmission Control Module
43	15	3.6L (LY7): Fuel injectors (ODD), Ignition Coil/Modules (ODD)
	15	2.4L (LE5 or LE9): Ignition Coils
	15	3.5L (LZ4, LZE): Ignition Control Module
44	15	3.6L (LY7): Fuel Injectors (EVEN), Ignition Coil Modules (EVEN)

	10	2.4L (LE5, LE9, LAT), 3.5L (LZ4, LZE): Fuel Injector
45	10	3.5L (LZ4, LZE), 3.6L (LY7): Heated Oxygen Sensor (HO2S) Bank 1 Sensor 2, Heated Oxygen Sensor (HO2S) Bank 2 Sensor 2
46	15	Daytime Running Light Relay
47	10	Stop Lamp Relay
50	20	Power Window
51	10	2.4L (LAT): Starter Generator Control Module (SGCM)
	10	3.5L (LZ4, LZE): Engine Control Module (ECM)
52	10	Secondary Air Injection (AIR) Pump Relay
	20	Transmission Auxiliary Fluid Pump Control Module
54	5	Body Control Module (Regulated Voltage Control)
	15	2.4L (LAT): Body Control Module (Regulated Voltage Control)
55	30	DC/AC Inverter

56	30	ABS (Electronic Brake Control Module (EBCM))
57	20	–
Relay		
28	Cooling Fan (No.1 (Left))	
29	Cooling Fan	
30	Cooling Fan (No.2 (Right))	
31	Starter Motor	
32	Run/Crank (Ignition)	
33	Engine Control Module (ECM)	
34	Air Conditioning Compressor Clutch	
35	Headlamp (High Beam)	
36	Front Fog Lamp	

37	Horn
38	Headlamp (Low Beam)
39	Wiper (No.1)
40	Wiper (No.2 – Windshield Wiper Motor)
48	Daytime Running Light
49	Stop Lamp
53	Secondary Air Injection (AIR) Pump
	Transmission Auxiliary Fluid Pump Control Module
Diode	
27	Wiper 1 Relay, Wiper 2 Relay

 Luggage Compartment Fuse Box

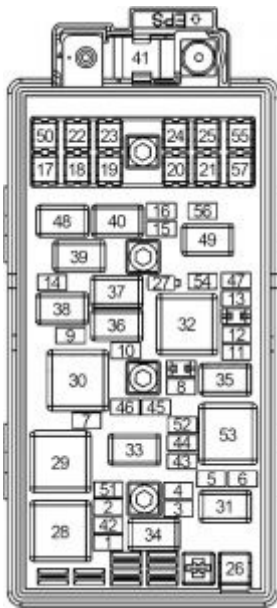

Chevrolet Malibu – fuse box diagram – luggage compartment

No.	A	Protected Component
1	30	Passenger Seat Controls
2	30	Driver Seat Controls
3	–	–
4	–	–
5	10	Evaporative Emission (EVAP) Canister Vent Solenoid Valve
6	10	Park Lamps Relay (Body Control Module (BCM), License Lamps, Park/Turn Signal Lamps, Tail Lamps, Tail/Stop and Turn Signal Lamps), Instrument Panel Dimming
7	–	–
8	–	–
9	25	Sunroof Control Module, Sunroof Shade Module
10	15	Sunroof Control Module
11	–	–
12	–	–
13	25	Audio Amplifier
14	15	Heated Seat Controls
15	–	–
16	7.5	Digital Radio Receiver, Garage Door Opener Transmitter, Remote Control Door Lock Receiver (RCDLR)
17	10	Back-Up Lamps Relay
18	–	–
19	–	–
20	20	Cigar Lighter, Auxiliary Power Outlet (Console or Front)
21	–	–
22	10	Trunk Release Relay
23	30	Rear Window Defogger

24	10	Heated Mirrors
25	15	Fuel Pump Relay
Relay		
26	Rear Window Defogger, Heated Mirrors	
27	Park Lamps (Back-Up Lamps, Body Control Module (BCM), Garage Door Opener Transmitter, HVAC Control Module, License Lamps, Park/Turn Signal Lamps, Tail Lamps, Tail/Stop and Turn Signal Lamps)	
28	—	
29	—	
30	—	
31	—	
32	—	
33	Back-Up Lamps, Inside Rearview Mirror	
34	—	
35	—	
36	Trunk Release	
37	Fuel Pump	
Diode		
38	Trunk Release	