

General Information

Chassis and Paint Codes

'96 Models	1-2
'97 Models	1-3
'98 Models	1-4
'99 Models	1-5
'00 Models	1-6
'01 Models	1-7
'02 Models	1-2a
'03 Models	1-2b
'04 Models	1-2c
Revised Component Terms	1-4a
Parts Marking ('03-'04 Models)	1-5b
Identification Number Locations	1-8
Warning/Caution Label Locations	1-9

Under-hood Emissions Control Label

'97 Models	1-13
'98 Models	1-14
'99 Models	1-15
'00 Models	1-16
'01-'02 Models	1-17
'03 Models	1-4b
'04 Models	1-4c

Lift and Support Points

Lift and Safety Stands	1-18
Floor Jack	1-19
Towing	1-20

Service Precautions

Handling of Special Nuts and Bolts	1-21
--	----------------------