

## Engine Electrical

Special Tools ..... 4-2

### Starting System

|                                     |      |
|-------------------------------------|------|
| Component Location Index .....      | 4-3  |
| Starter Test .....                  | 4-5  |
| Starter                             |      |
| Replacement .....                   | 4-6  |
| Overhaul .....                      | 4-8  |
| Starter Solenoid Test .....         | 4-9  |
| Field Winding Test .....            | 4-9  |
| Armature Inspection and Test .....  | 4-10 |
| Starter Brush Holder Test .....     | 4-12 |
| Starter Brush Inspection .....      | 4-12 |
| Planetary Gear Inspection .....     | 4-13 |
| Overrunning Clutch Inspection ..... | 4-13 |
| Overrunning Clutch Removal .....    | 4-14 |
| Starter Reassembly .....            | 4-14 |
| Performance Test .....              | 4-15 |

### Ignition System

|                                          |      |
|------------------------------------------|------|
| Component Location Index .....           | 4-16 |
| Ignition Timing Inspection .....         | 4-18 |
| Idle Speed Check .....                   | 4-19 |
| Noise Condenser Capacity Test .....      | 4-19 |
| Ignition Control Module Input Test ..... | 4-20 |
| Ignition Coil                            |      |
| Test .....                               | 4-21 |
| Spark Plug Inspection .....              | 4-22 |
| Charging System                          |      |
| Component Location Index .....           | 4-23 |
| Troubleshooting .....                    | 4-25 |
| Alternator                               |      |
| Replacement .....                        | 4-29 |
| Overhaul .....                           | 4-30 |
| Rectifier Test .....                     | 4-31 |

|                                      |      |
|--------------------------------------|------|
| Brush Inspection .....               | 4-31 |
| Rotor Slip Ring Test .....           | 4-32 |
| Stator Test .....                    | 4-32 |
| Belt Inspection and Adjustment ..... | 4-33 |

### Cruise Control

|                                        |      |
|----------------------------------------|------|
| Component Location Index .....         | 4-35 |
| Control Unit Input Test .....          | 4-37 |
| Set/Resume/Cancel Switch Test/         |      |
| Replacement .....                      | 4-39 |
| Main Switch Test .....                 | 4-41 |
| Brake Pedal Position Switch Test ..... | 4-41 |
| Actuator Solenoid Test .....           | 4-42 |
| Actuator Test .....                    | 4-43 |
| Actuator Cable                         |      |
| Replacement .....                      | 4-44 |
| Adjustment .....                       | 4-45 |