

Automatic Transmission

Special Tools	14-2	Road Test	14-104	Regulator Valve Body		Clutch	
Description		Stall Speed Test	14-107	Disassembly/Inspection/		Component Location	
General Operation	14-3	Fluid Level		Reassembly	14-142	Index	14-161
Clutches	14-6	Checking/Changing	14-108	Accumulator Body		Disassembly	14-164
Power Flow	14-8	Pressure Testing	14-109	Disassembly/Inspection/		Reassembly	14-166
Electronic Control System ..	14-19	Lower Valve Body Assembly		Reassembly	14-143	Secondary Driven Gear Shaft	
Hydraulic Control	14-24	Removal/Installation	14-112	ATF Pump Body		Components	14-170
Hydraulic Flow	14-28	Disassembly/		Disassembly/Inspection/		Oil Seal Replacement	14-170
Lock-up System	14-38	Reassembly	14-113	Reassembly	14-144	Tapered Roller Bearing	
Park Mechanism	14-45	Throttle Valve Body/ A/T Clutch		ATF Pump		Replacement	14-171
Electrical System		Pressure Control Solenoid Valve		Inspection	14-145	Tapered Roller Bearing Outer Race	
PCM Terminal Voltage/		Test	14-114	Reverse Accumulator/1st Hold		Replacement	14-172
Measuring Conditions		Replacement	14-114	Accumulator		Tapered Roller Bearing Preload	
A/T Control System	14-48	Shift Solenoid Valves A and B		Disassembly/Inspection/		Adjustment	14-174
Component Locations	14-51	Test	14-115	Reassembly	14-146	Oil Seals	
Troubleshooting Procedures ..	14-52	Replacement	14-115	Accumulator Piston		Removal	14-176
Symptom-to-component Chart		Transmission		Removal	14-147	Installation	14-176
'96-03 Models	14-56	Transmission		Rear Cover/Clutch Feed Pipes		Torque Converter Housing Bearings	
'04 Model	14-2c	Removal	14-116	Disassembly/Inspection/		Mainshaft Bearing/Oil Seal	
Torque Converter Clutch		Reassembly	14-182	Reassembly	14-148	Replacement	14-177
(Lock-up Control)		Installation	14-189	Rear Cover/Reverse Idler Gear		Countershaft Bearing	
Solenoid Valves A and B		Cooler Flushing	14-195	Disassembly/Inspection/		Replacement	14-178
Test	14-86	Component Location Index		Reassembly	14-149	Transmission Housing Mainshaft	
Replacement	14-87	Transmission Housing/		Mainshaft		Bearing	
Shift Solenoid Valves		Lower Valve Body	14-120	Disassembly/Inspection/		Replacement	14-178
A and B	14-88	Rear Cover	14-122	Reassembly	14-150	Park Mechanism	
A/T Clutch Pressure Control Solenoid		Transmission Housing	14-124	Mainshaft 3rd Gear		Disassembly/Inspection/	
Valve		Torque Converter Housing/		Removal	14-151	Reassembly	14-179
Test	14-89	Valve Body	14-126	Inspection	14-151	Transmission Range Switch	
Mainshaft/Countershaft Speed Sensors		Transmission Housing/Lower Valve		Sub-assembly	14-154	(A/T Gear Position Switch)	
Replacement	14-90	Body Assembly Removal ..	14-128	Countershaft		Removal	14-180
Transmission Range Switch		Rear Cover Removal	14-130	Disassembly/Inspection/		Installation	14-180
(A/T Gear Position Switch)		Transmission Housing		Reassembly	14-155	Torque Converter/Drive Plate/	
Test	14-92	Removal	14-132	Inspection	14-156	Ring Gear	14-188
Replacement	14-93	Torque Converter Housing/		Sub-assembly	14-158	ATF Cooler Hose	
A/T Gear Position Indicator		Valve Body Removal	14-134	Countershaft 2nd Gear Assembly		Connection	14-196
Indicator Input Test	14-96	Valve Body Repair	14-136	Ball Bearing		Shift Lever	
Interlock System		Valve Assembly	14-137	Replacement	14-158	Removal/Installation	14-197
Key Interlock Solenoid		Valve Caps Description	14-138	2nd Gear One-way Clutch		Disassembly	14-198
Test	14-97	Secondary Valve Body		Disassembly/Inspection/		Link Adjustment	14-199
Shift Lock Solenoid Test ...	14-97	Disassembly/Inspection/		Reassembly	14-159	Shift Cable	
Shift Lock Solenoid		Reassembly	14-139	1st Gear One-way Clutch		Replacement	14-201
Replacement	14-98	Main Valve Body		Disassembly/Inspection/			
Park Pin Switch Test/		Disassembly/Inspection/		Reassembly	14-160		
Replacement	14-99	Reassembly	14-140				
Hydraulic System							
Symptom-to-component							
Chart	14-100						