

Steering

*: Read [SRS precautions](#) before working in this area

Special Tools	17-2	Linkage and Gearbox	17-14	Power Steering Hoses, Lines	
* Component Locations Index	17-3	Pump Belt	17-15	Fluid Leakage Inspection	17-23
Troubleshooting		Rack Guide Adjustment	17-16	Replacement	17-23
General Troubleshooting	17-4	Fluid Replacement	17-16	Power Steering Pump	
Noise and Vibration	17-8	Pump Pressure Check	17-17	Removal/Installation	17-24
Fluid Leaks	17-10	Steering Wheel		Disassembly	17-25
Inspection and Adjustment		*Removal	17-18	Inspection	17-26
Steering Operation	17-12	Installation	17-18	Reassembly	17-28
Power Assist Check Parked	17-12	Disassembly/Reassembly	17-19	Power Steering Gearbox	
Power Assist Check at Road		Steering Column		Removal	17-30
Speed	17-13	*Removal/Installation	17-20	Disassembly	17-32
Power Steering Speed Sensor		Inspection	17-21	Reassembly	17-40
Replacement	17-13	Steering Lock Replacement	17-22	Installation	17-51
				Ball Joint Boot Replacement	17-53