

Brakes

Conventional Brake

Special Tools	19-2
Component Location Index	19-3
Inspection and Adjustment	
Rubber Parts/Brake	
Booster	19-4
Brake Pedal	19-5
Parking Brake Pedal	19-6
Bleeding	19-8
Brake System Indicator	19-9
Front Brake Pads	
Inspection/Replacement	19-10

Front Brake Disc	
Disc Runout Inspection	19-12
Disc Thickness and Parallelism	
Inspection	19-12
Front Brake Caliper	
Disassembly/Reassembly ...	19-13
Master Cylinder/Brake Booster	
Removal/Installation	19-14
Master Cylinder	
Inspection	19-15
Pushrod Clearance	
Adjustment	19-15
Brake Booster Inspection ...	19-16

Rear Brake Pads	
Inspection/Replacement	19-17
Rear Brake Disc	
Disc Runout Inspection	19-19
Disc Thickness and Parallelism	
Inspection	19-19
Rear Brake Caliper	
Disassembly/Reassembly ...	19-20
Parking Brake	
Inspection	19-22
Parking Brake Shoes	
Replacement	19-24

Lining Surface Break-in	
'96-'02 Models	19-27
'03-'04 Models	19-2b
Brake Hoses/Lines	
Inspection/Torque	
Specifications	19-28
Hose Replacement	19-29
Parking Brake Cable	
Inspection and	
Replacement	19-30

ABS (Anti-lock Brake System) ('96-'97 models)

Special Tools	19-32
Component Location Index	19-33
ABS Control Unit Terminal	
Arrangement	19-36
Troubleshooting Precautions ...	19-38
Diagnostic Trouble Code (DTC)	
DTC Indication	19-40
Symptom-to-System Chart ..	19-42

ABS Function Test	19-95
Modulator Unit	
Relieving System	
Pressure	19-97
High Pressure Brake Fluid	
Replacement/Bleeding ..	19-98
Modulator Function Check ..	19-99

Removal	19-99
Installation	19-100
Wire Harness Replacement .	19-100
Pump Motor Replacement ..	19-101
Reservoir Replacement	19-101
Accumulator Replacement and	
Disposal	19-102

ABS Control Unit	
Removal/Installation	19-102
Pulsers/Wheel Sensors	
Inspection	19-103
Wheel Sensor	
Replacement	19-103

ABS (Anti-lock Brake System) ('98-'99 models)

Special Tools	19-105
Component Location Index	19-106
Anti-lock Brake System	
Features/Construction	19-107
ABS Control Unit Terminal	
Arrangement	19-114

Troubleshooting Precautions ...	19-117
Diagnostic Trouble Code (DTC)	
DTC Indication	19-119
DTC Erasure	19-120
Troubleshooting Index	19-121

Modulator Unit	
Removal/Installation	19-143
ABS Control Unit	
Removal/Installation	19-144

Pulsers/Wheel Sensors	
Inspection	19-144
Wheel Sensor	
Replacement	19-145

TCS (Traction Control System) ('96-'99 models)

Special Tools	19-148
Component Locations	19-149
System Description	
Outline	19-150
Construction and	
Function	19-151

TCS Control Unit Terminal	
Arrangement	19-156
Troubleshooting Precautions ...	19-158
Diagnostic Trouble Code (DTC)	
Indication	19-159

DTC Erasure	19-160
Troubleshooting Index	19-161
Steering Angle Sensor	
Replacement	19-191
System Check	19-191

TCS Control Valve Assembly	
Replacement	19-192
TCS Switch Test	19-193
TCS Control Unit	
Replacement	19-193

VSA (Vehicle Stability Assist System) ('00-'04 Models)

Special Tools	
'00-'01 models	19-196
'02-'04 models	19-2a
Component Locations	19-197
VSA Control Unit Terminal	
Arrangement	19-200
VSA Converter Unit Terminal	
Arrangement	19-202
Troubleshooting Precautions ...	19-204
Diagnostic Trouble Code (DTC)	
Indication	19-206

DTC Clearing	19-207
DTC Chart	19-208
Steering Angle Sensor	
Replacement	19-267
Neutral Position Check and	
Memorizing	
'00-'01 models	19-268
'02-'04 models	19-7a

VSA Modulator-Control Unit	
Removal/Installation	
'00-'01 models	19-269
'02-'04 models	19-9a
Precharge Pump Motor	
Removal/Installation	19-270
Precharge Brake Line Bleeding	
'00-'01 models	19-271
'02-'04 model	19-10a

TCS Control Valve Assembly	
Replacement	19-272
VSA Off Switch Test	19-273
VSA Converter Unit	
Removal/Installation	19-273
Yaw Rate/Lateral Acceleration Sensor	
Removal/Installation	19-274
Pulsers/Wheel Sensors	
Inspection	19-274
Wheel Sensor	
Replacement	19-275