


Power Windows


Descriptions

The driver's window will stop and automatically open if you pinch your hand or something during auto-up operation. The system is composed of the power window master switch, the power window control unit and the driver's window motor.

The power window motor incorporates a pulser which generates pulses during the motor's operation and sends the pulses to the power window control unit. As soon as the power window control unit detects no pulses from the pulser, the control unit makes the power window motor stop and reverse.

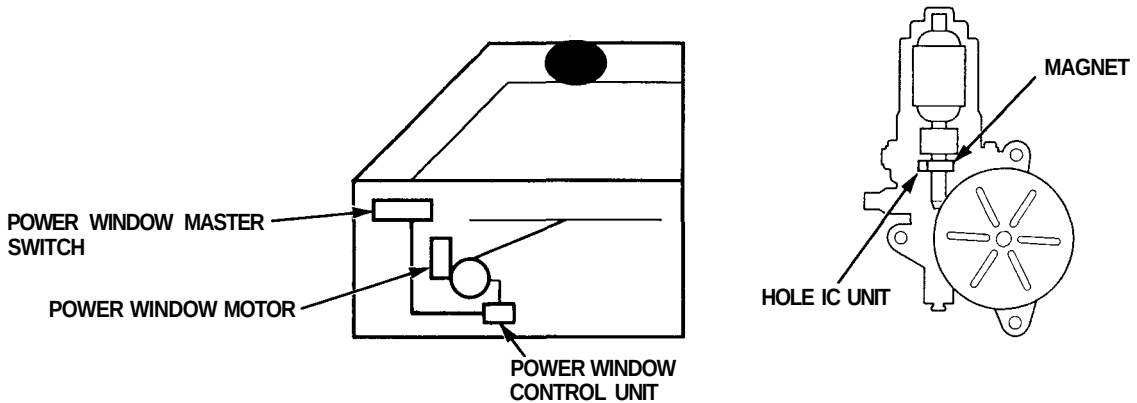

Sensor

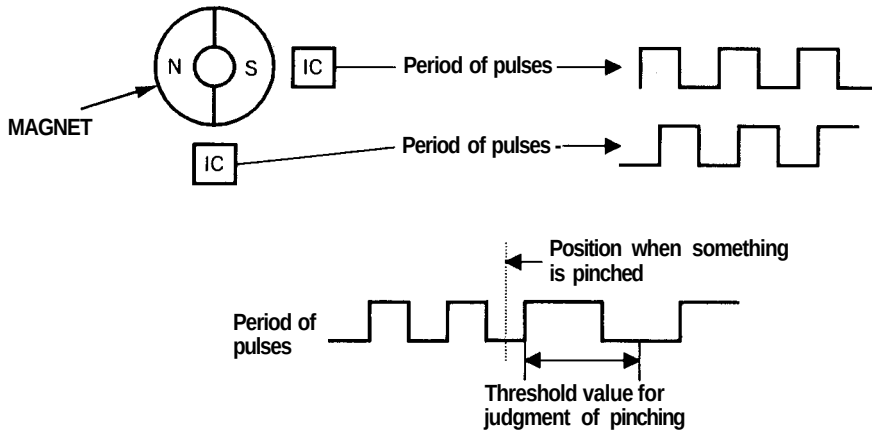

Resetting the power window unit

Resetting the power window control unit is required after performing the following procedures:

- disconnecting the battery.
- removing No. 41 (20 A) fuse.
- disconnecting the connector from the power window control unit.
- removing the window regulator, glass or glass run channel.

1. Make sure the glass is installed properly.
2. Turn the ignition switch OFF.
3. Remove the No. 41 (20 A) fuse in the under-hood fuse/relay box.
4. Turn the ignition switch ON (II) on for 2 seconds, then turn it OFF. Reinstall the NO. 41 (20 A) fuse in the under-hood fuse/relay box.
5. Turn the ignition switch ON (II).
6. Make sure the driver's window does not work in AUTO with the ignition switch ON (II).
7. Move the driver's window all the way down by using the driver's switch.
8. Move the driver's window all the way up by using the driver's switch when the window reaches the top, hold the driver's window switch in the up position for 2 seconds.

* If the window does not work in AUTO, reset the power window master switch according to the above procedures again.