


Audio System

Audio Amplifier Terminals

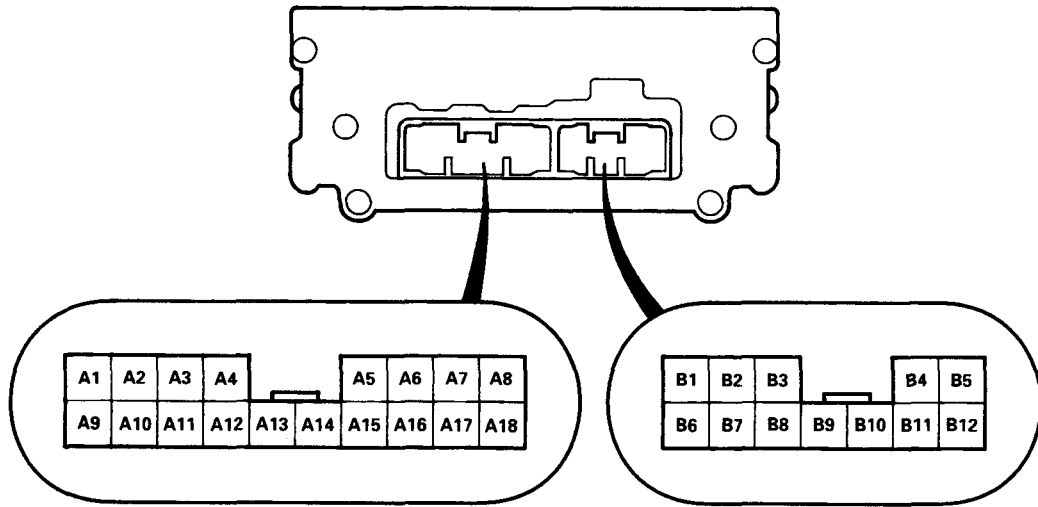

Cavity Wire Connects to

Cavity	Wire	Connects to
A1	BRN/WHT	Right rear door speaker ⊖
A2	RED/YEL	Right rear door speaker ⊕
A3	GRY/BLU	Left rear door speaker ⊕
A4	YEL/BLU	Left rear door speaker ⊖
A5	BLU/BLK	Left rear speaker ⊖
A6	BLU/YEL	Right rear speaker ⊖
A7	PNK	Right rear speaker ⊕
A8	GRY/RED	Left tweeter/left twiddler ⊖
A9	WHT	Input (Left front ⊕)
A10	BLK	Input (Left front ⊖)
A11	BRN	Input (Right front ⊖)
A12	BLU	Input (Right front ⊕)
A13	GRN	Input (Left rear ⊖)
A14	RED	Input (Right rear ⊖)
A15	ORN	Input (Left rear ⊕)
A16	YEL	Input (Right rear ⊕)
A17	BLU/WHT	Left rear speaker ⊕
A18	BLU/BLK	Left tweeter/left twiddler ⊕

Cavity Wire Connects to

Cavity	Wire	Connects to
B1	BRN	Front passenger's door speaker ⊖
B2	GRN/YEL	Right tweeter/right twiddler ⊕
B3	LT GRN	Driver's door speaker ⊕
B4	BLK/RED	Driver's door speaker ⊖
B5	WHT/BLU	Constant power
B6	RED	Front passenger's door speaker ⊕
B7	GRY/RED	Right tweeter/right twiddler ⊖
B8	BLK	Ground (G603)
B9	BLK	Ground (G603)
B10	BLK	Ground (speaker)
B11	YEL/BLU	Power (with radio switch ON)
B12	WHT/BLU	Constant power